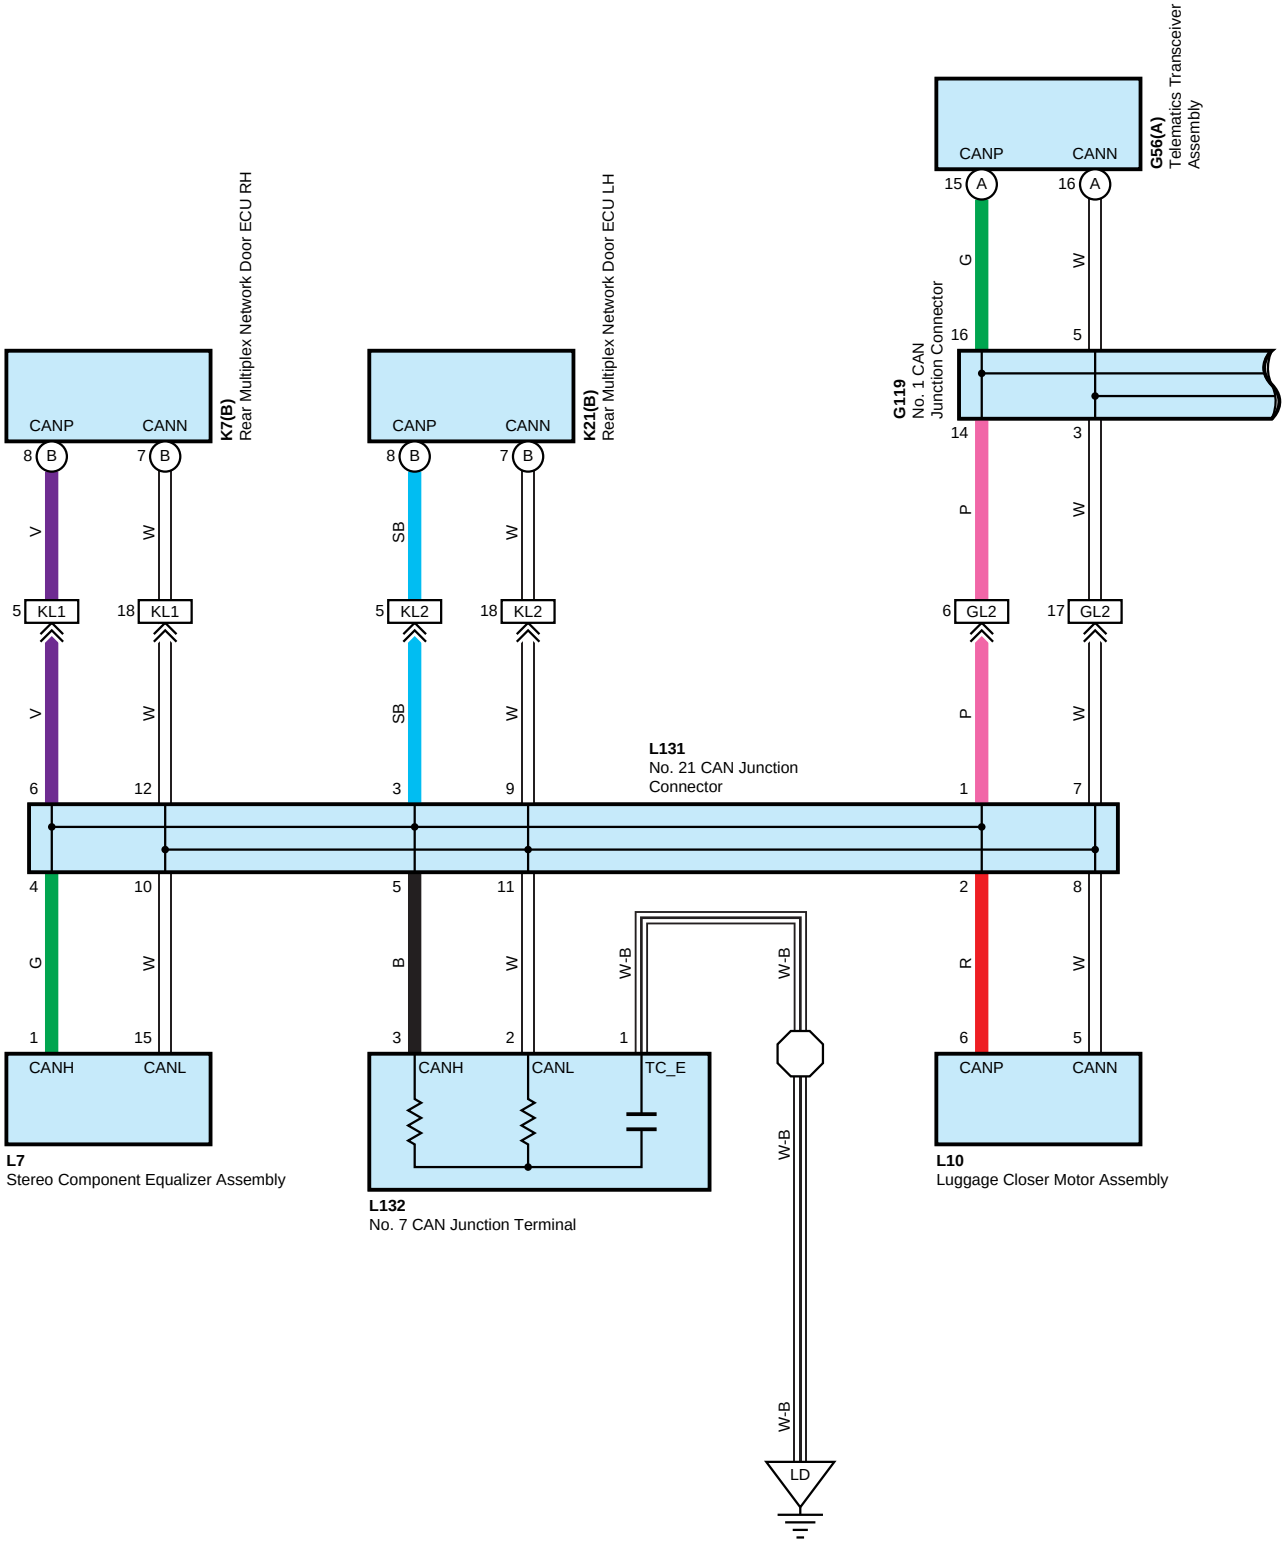
G56(A)
Telematics Transceiver Assembly
CANP
CANN
15 A
16 A
G
W
G119
No. 1 CAN Junction Connector
16
5
14
3
K7(B)
Rear Multiplex Network Door ECU RH
K21(B)
Rear Multiplex Network Door ECU LH
8 B
7 B
V
SB
P
5 KL1
18 KL1
5 KL2
18 KL2
6 GL2
17 GL2
L131
No. 21 CAN Junction Connector
6
12
3
9
1
7
4
10
5
11
2
8
1
15
3
2
1
6
5
R
B
W-B
CANH
CANL
TC_E
LD
L7
Stereo Component Equalizer Assembly
L132
No. 7 CAN Junction Terminal
L10
Luggage Closer Motor Assembly

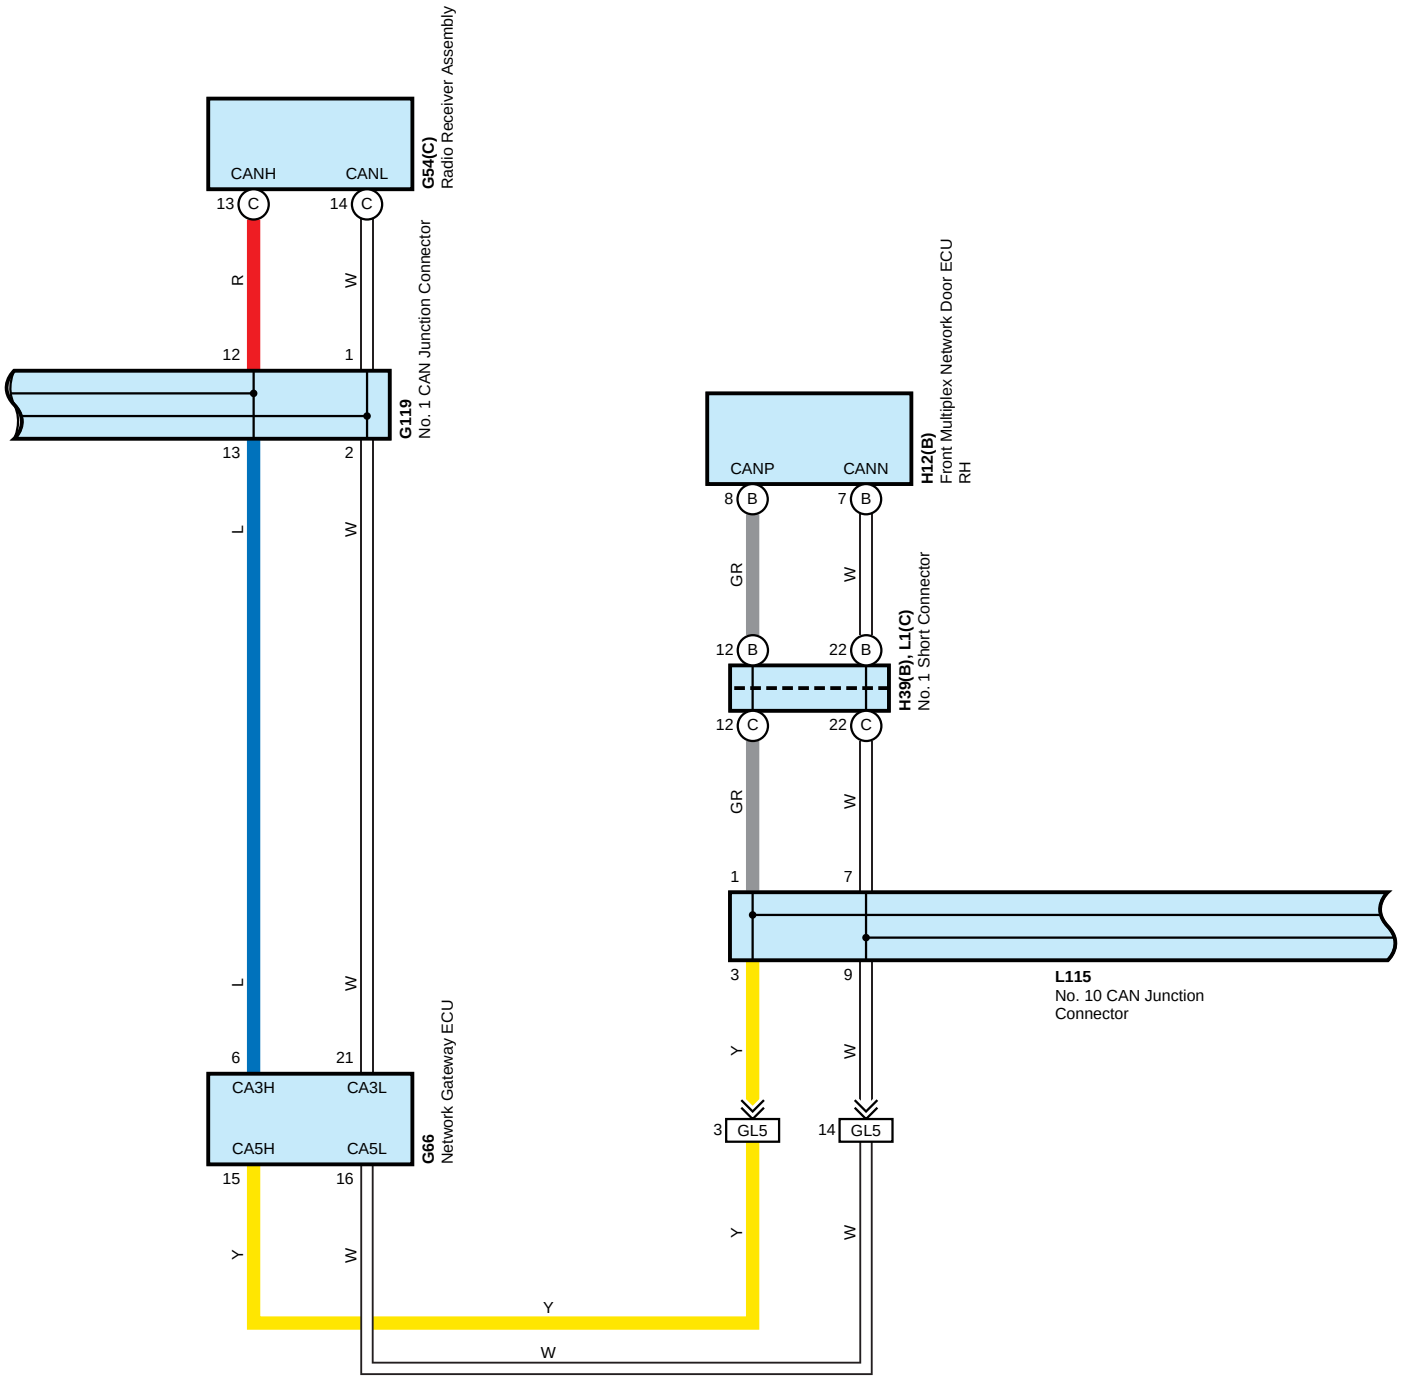
G54(C)
Radio Receiver Assembly
CANH
CANL
13 C
14 C
R
W
12
1
G119
No. 1 CAN Junction Connector
13
2
L
W
L
W
6
21
CA3H
CA3L
CA5H
CA5L
G66
Network Gateway ECU
15
16
Y
W
Y
W
H12(B)
Front Multiplex Network Door ECU
RH
CANP
CANN
8 B
7 B
GR
W
12 B
22 B
H39(B), L1(C)
No. 1 Short Connector
12 C
22 C
GR
W
1
7
3
9
L115
No. 10 CAN Junction
Connector
Y
W
3 GL5
14 GL5
Y
W
Y
W

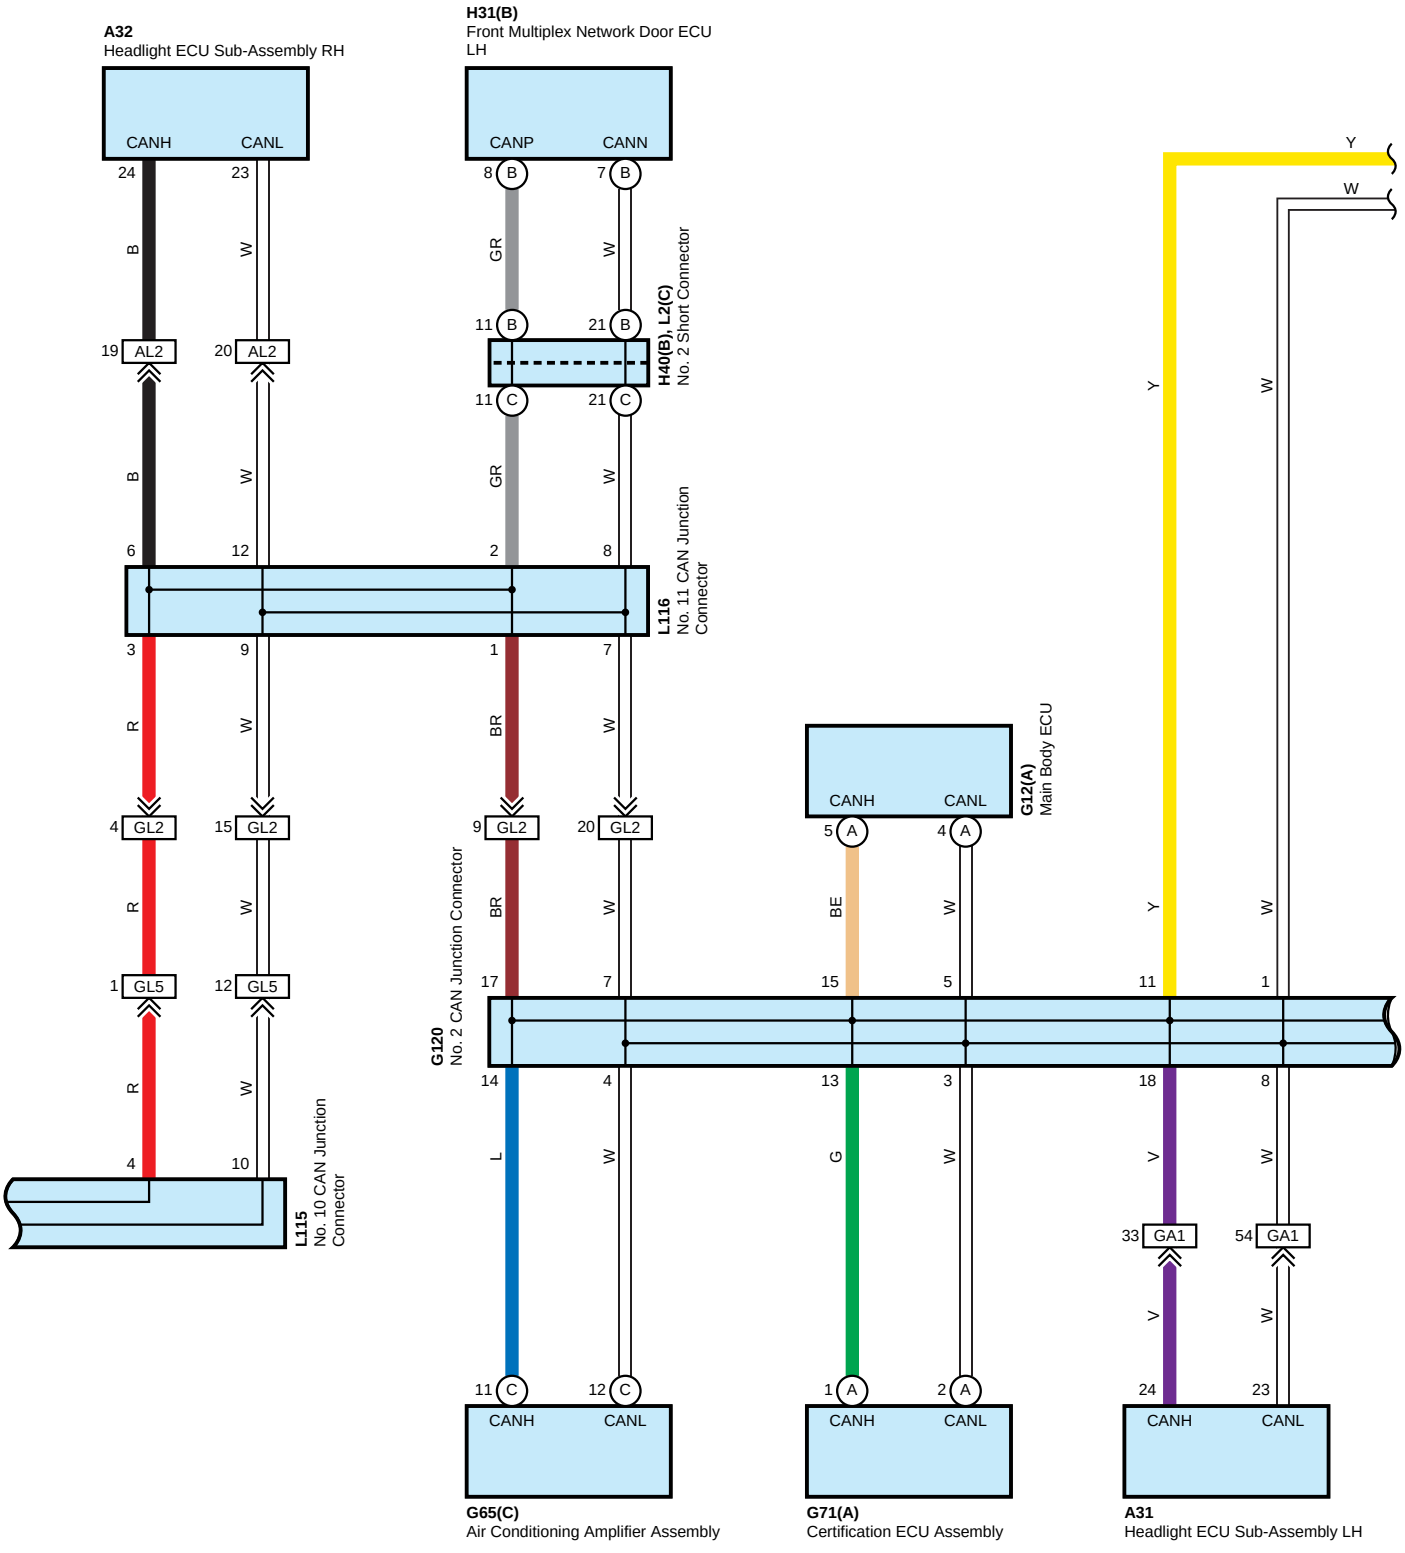
A32
Headlight ECU Sub-Assembly RH
CANH
CANL
H31(B)
Front Multiplex Network Door ECU LH
CANP
CANN
H40(B), L2(C)
No. 2 Short Connector
L116
No. 11 CAN Junction Connector
G12(A)
Main Body ECU
G120
No. 2 CAN Junction Connector
L115
No. 10 CAN Junction Connector
G65(C)
Air Conditioning Amplifier Assembly
G71(A)
Certification ECU Assembly
A31
Headlight ECU Sub-Assembly LH

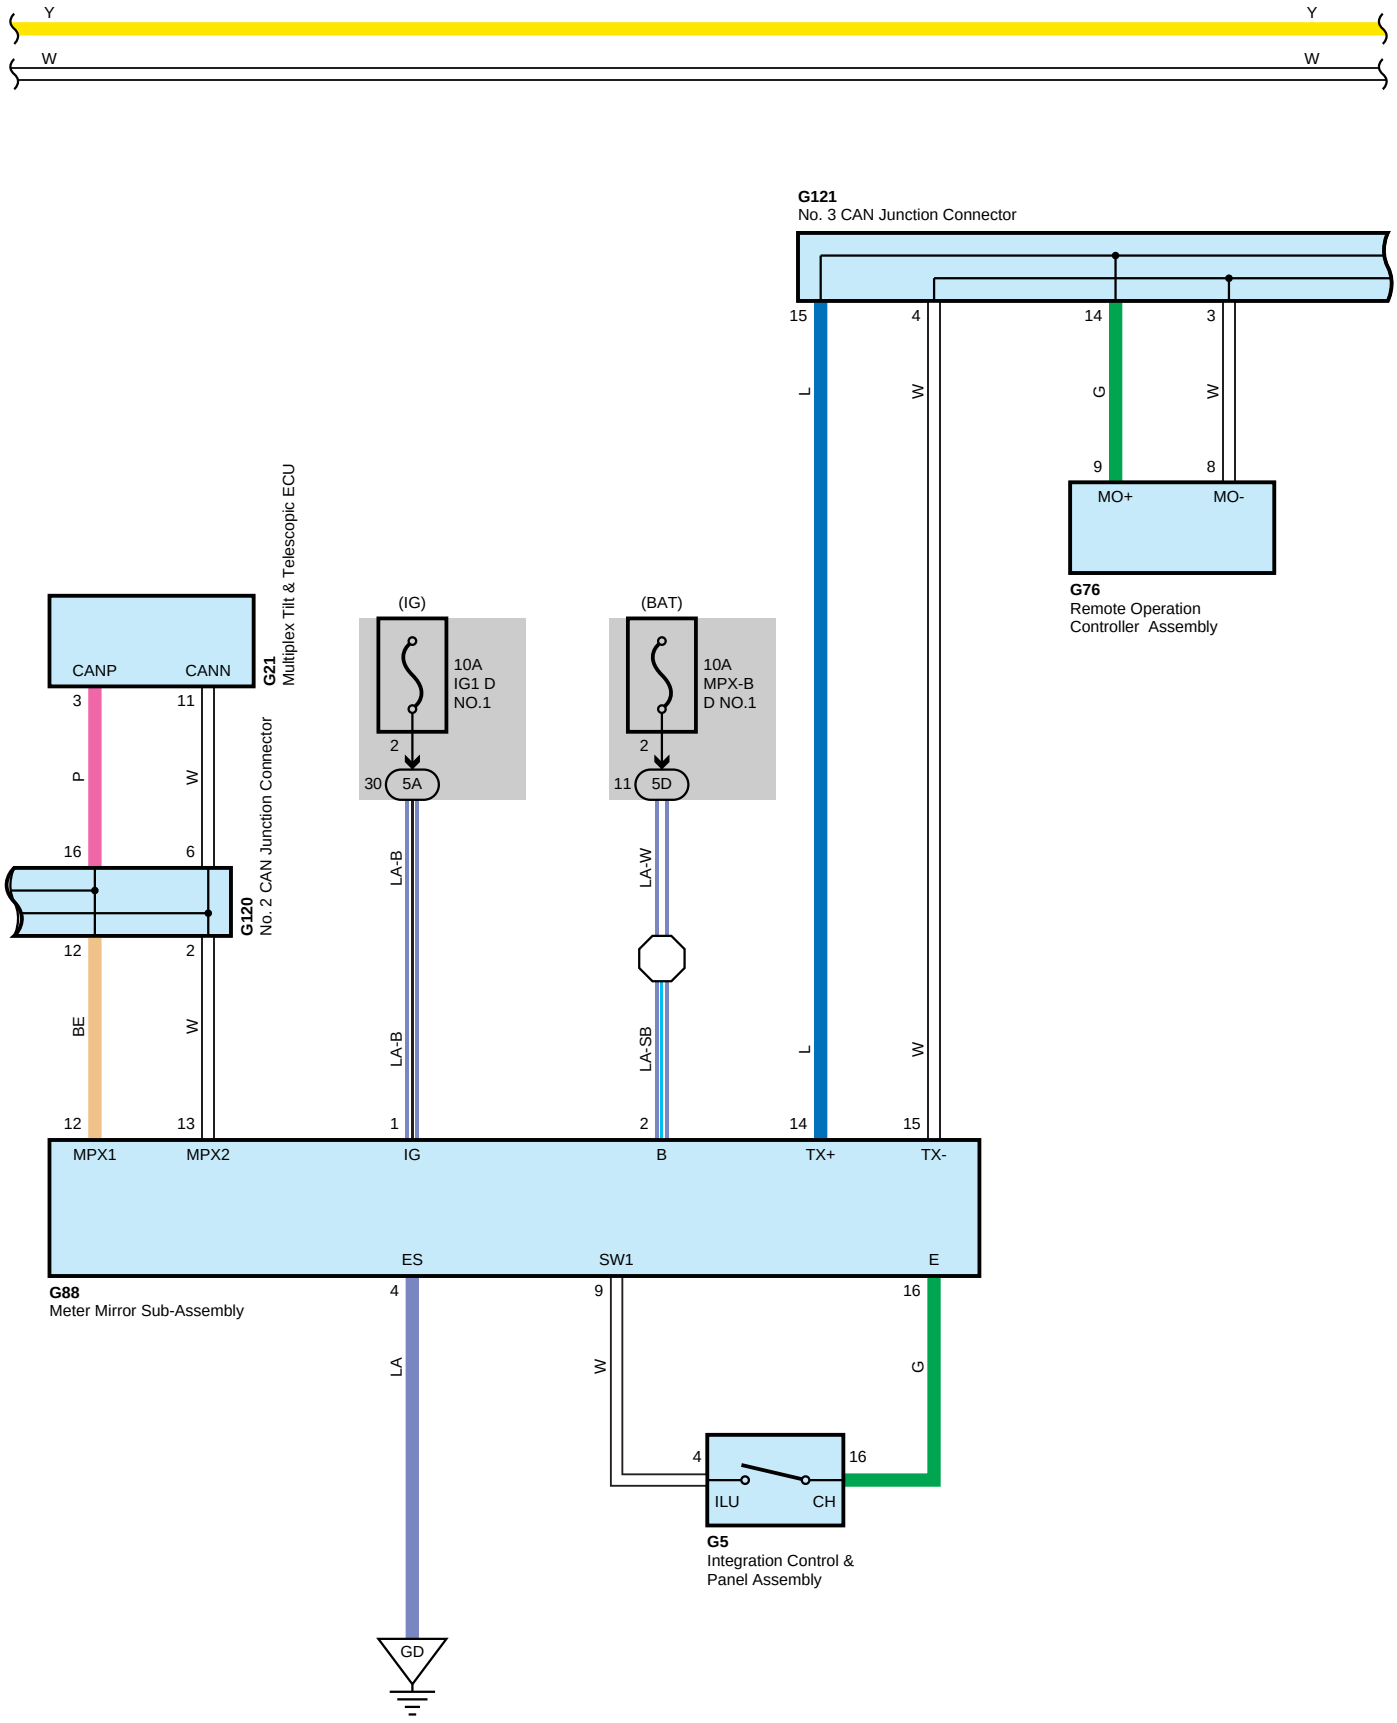
Y
Y
W
W
G121
No. 3 CAN Junction Connector
15
4
14
3
L
W
G
W
9
8
MO+
MO-
G76
Remote Operation
Controller Assembly
G21
Multiplex Tilt & Telescopic ECU
CANP
CANN
3
11
P
W
16
6
G120
No. 2 CAN Junction Connector
12
2
BE
W
12
13
(IG)
10A
IG1 D
NO.1
2
30
5A
LA-B
LA-B
1
(BAT)
10A
MPX-B
D NO.1
2
11
5D
LA-W
LA-SB
2
L
W
14
15
MPX1
MPX2
IG
B
TX+
TX-
ES
SW1
E
G88
Meter Mirror Sub-Assembly
4
9
16
LA
W
G
4
16
ILU
CH
G5
Integration Control &
Panel Assembly
GD

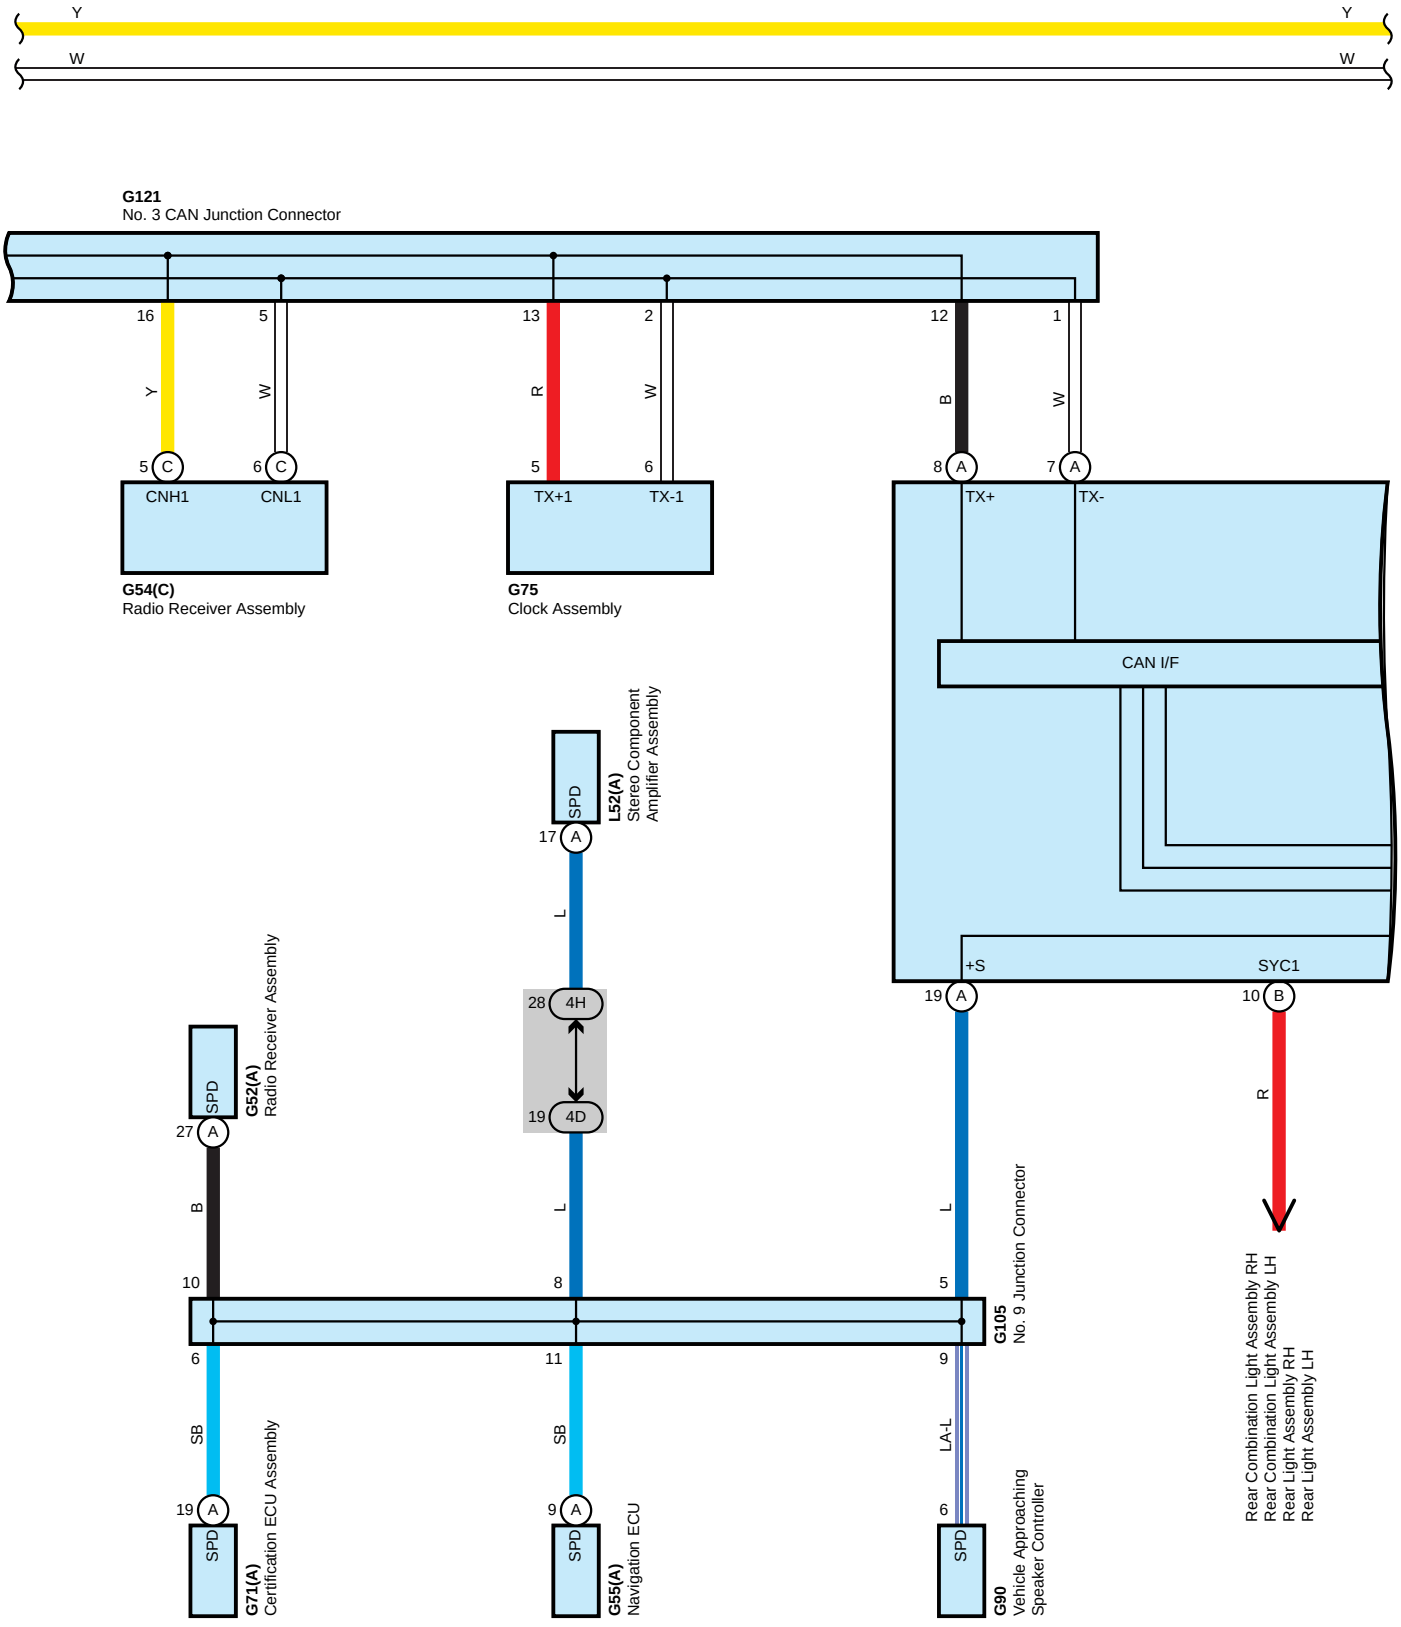
Y
Y
W
W
G121
No. 3 CAN Junction Connector
16
5
13
2
12
1
Y
W
R
W
B
W
5 C
6 C
5
6
8 A
7 A
CNH1
CNL1
TX+1
TX-1
TX+
TX-
G54(C)
Radio Receiver Assembly
G75
Clock Assembly
CAN I/F
SPD
L52(A)
Stereo Component
Amplifier Assembly
17 A
L
+S
SYC1
19 A
10 B
28 4H
19 4D
SPD
G52(A)
Radio Receiver Assembly
27 A
R
B
L
L
10
8
5
G105
No. 9 Junction Connector
6
11
9
SB
SB
LA-L
19 A
9 A
6
SPD
SPD
SPD
G71(A)
Certification ECU Assembly
G55(A)
Navigation ECU
G90
Vehicle Approaching
Speaker Controller
Rear Combination Light Assembly RH
Rear Combination Light Assembly LH
Rear Light Assembly RH
Rear Light Assembly LH

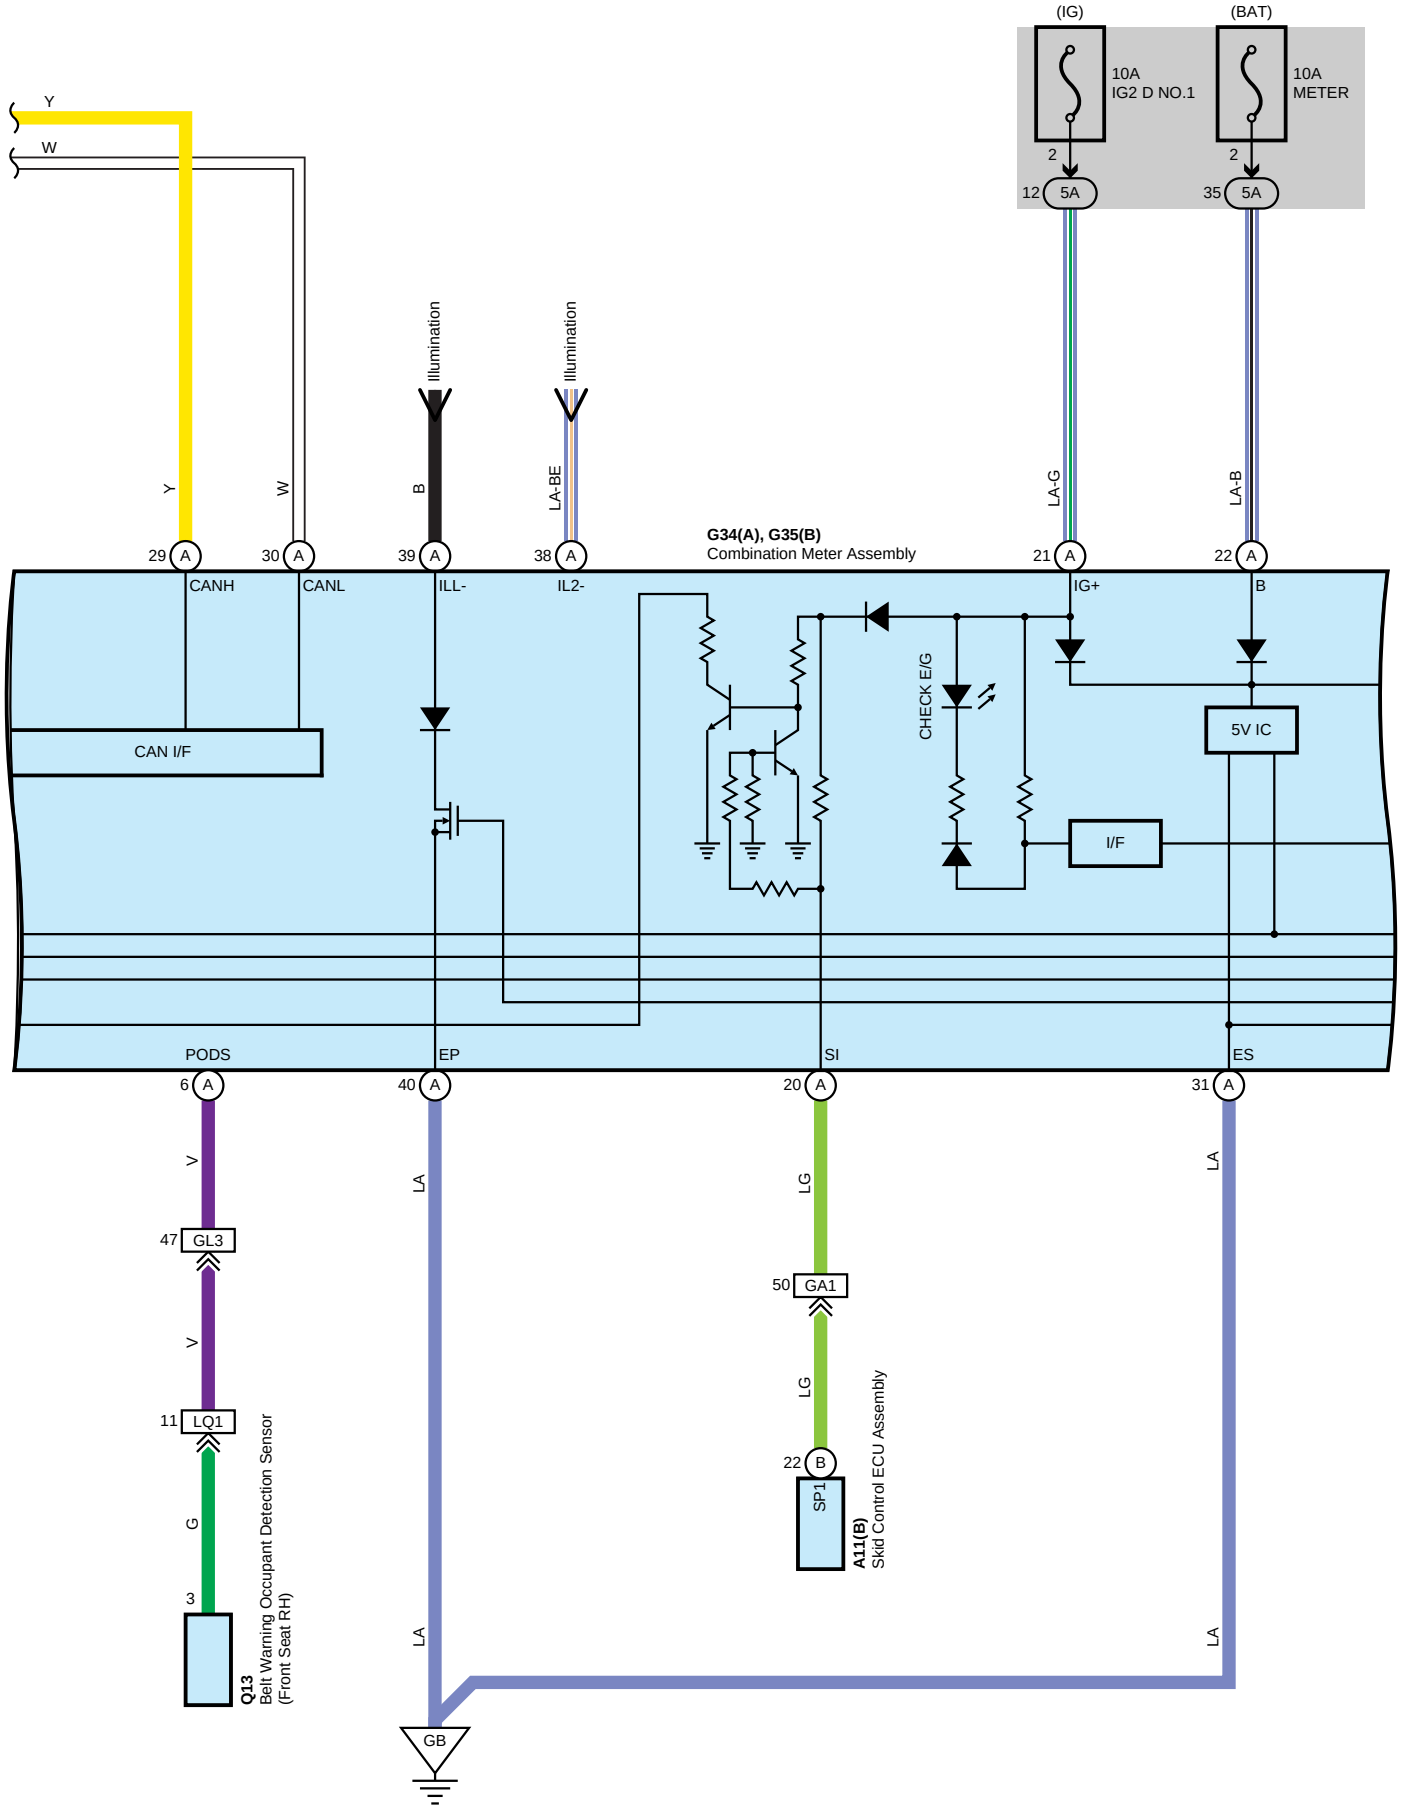
(IG)
(BAT)
10A
IG2 D NO.1
10A
METER
2
2
12
5A
35
5A
Y
W
Illumination
Illumination
Y
W
B
LA-BE
LA-G
LA-B
G34(A), G35(B)
Combination Meter Assembly
29
30
39
38
21
22
CANH
CANL
ILL-
IL2-
IG+
B
CAN I/F
CHECK E/G
5V IC
I/F
PODS
EP
SI
ES
6
40
20
31
V
LA
LG
LA
47
GL3
50
GA1
V
LG
11
LQ1
22
B
SP1
A11(B)
Skid Control ECU Assembly
G
3
Q13
Belt Warning Occupant Detection Sensor
(Front Seat RH)
LA
LA
GB

*1 : 2WD
*2 : AWD

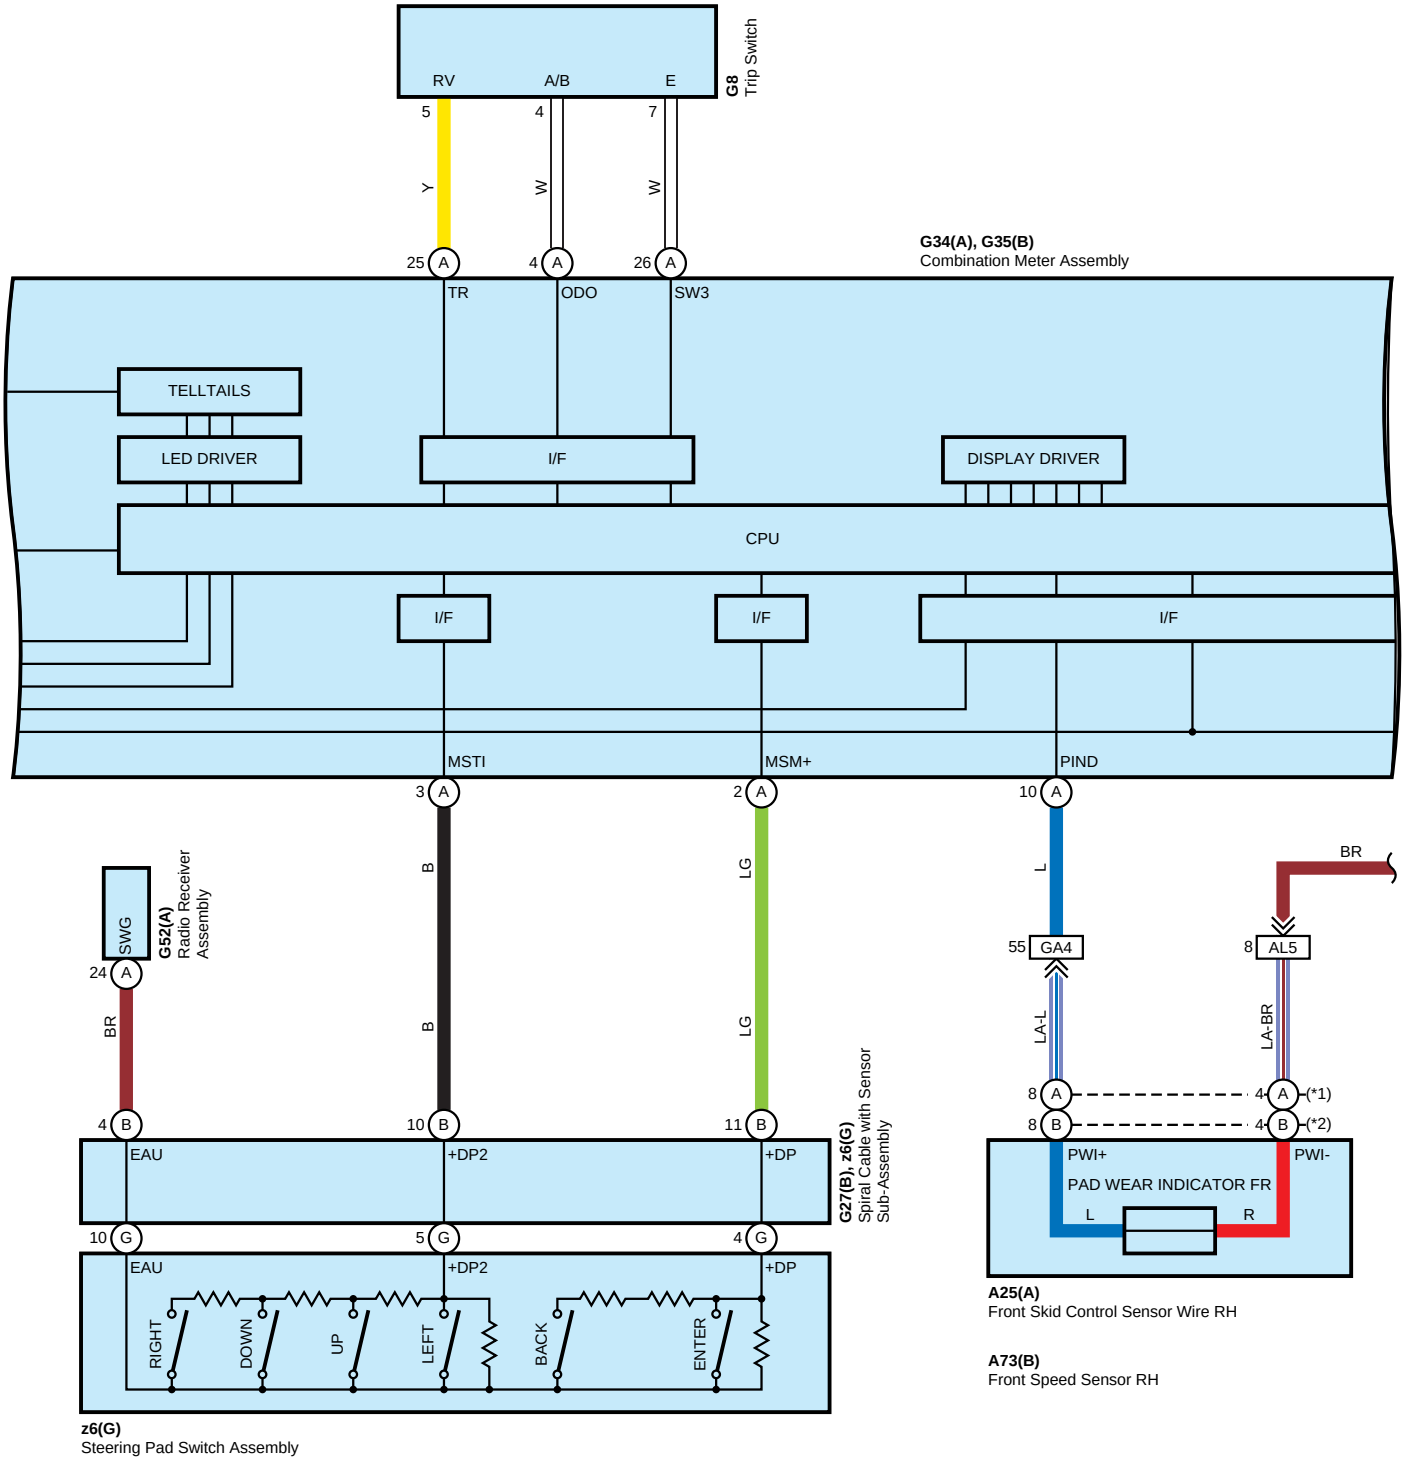
G8
Trip Switch
RV
A/B
E
5
4
7
Y
W
W
25 A
4 A
26 A
G34(A), G35(B)
Combination Meter Assembly
TR
ODO
SW3
TELLTAILS
LED DRIVER
I/F
DISPLAY DRIVER
CPU
I/F
I/F
I/F
MSTI
MSM+
PIND
3 A
2 A
10 A
B
LG
L
BR
G52(A)
Radio Receiver
Assembly
SWG
24 A
BR
B
LG
55 GA4
8 AL5
LA-L
LA-BR
8 A
8 B
4 A
4 B
(*1)
(*2)
4 B
10 B
11 B
EAU
+DP2
+DP
PWI+
PWI-
PAD WEAR INDICATOR FR
L
R
G27(B), z6(G)
Spiral Cable with Sensor
Sub-Assembly
10 G
5 G
4 G
EAU
+DP2
+DP
RIGHT
DOWN
UP
LEFT
BACK
ENTER
A25(A)
Front Skid Control Sensor Wire RH
A73(B)
Front Speed Sensor RH
z6(G)
Steering Pad Switch Assembly

*1 : 2WD
*2 : AWD

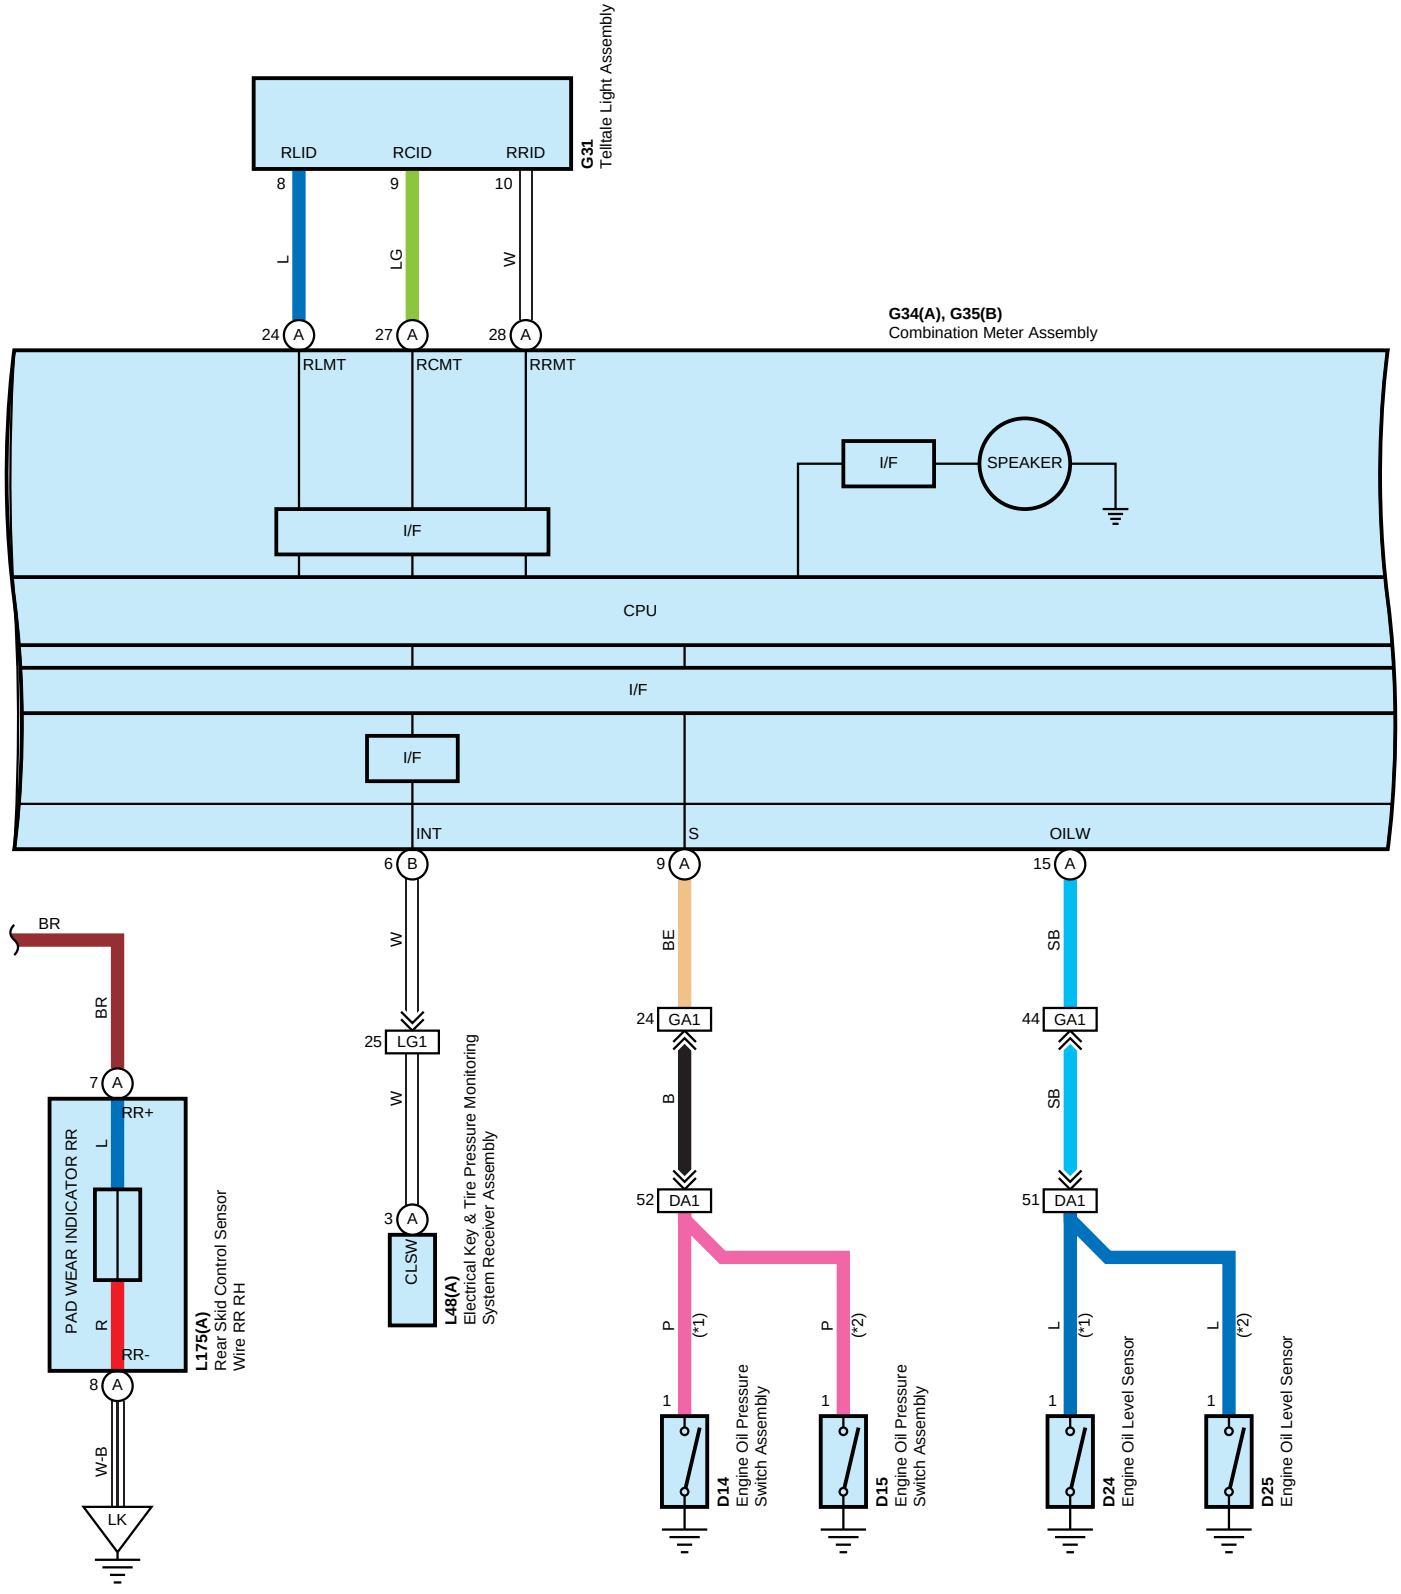
G31
Telltale Light Assembly
RLID
RCID
RRID
8
9
10
L
LG
W
24 A
27 A
28 A
G34(A), G35(B)
Combination Meter Assembly
RLMT
RCMT
RRMT
I/F
SPEAKER
I/F
CPU
I/F
I/F
INT
S
OILW
6 B
9 A
15 A
BR
BR
W
BE
SB
7 A
RR+
L
R
RR-
8 A
PAD WEAR INDICATOR RR
L175(A)
Rear Skid Control Sensor
Wire RR RH
W-B
LK
25 LG1
W
3 A
CLSW
L48(A)
Electrical Key & Tire Pressure Monitoring
System Receiver Assembly
24 GA1
B
52 DA1
P
(*1)
P
(*2)
1
D14
Engine Oil Pressure
Switch Assembly
D15
Engine Oil Pressure
Switch Assembly
44 GA1
SB
51 DA1
L
(*1)
L
(*2)
D24
Engine Oil Level Sensor
D25
Engine Oil Level Sensor

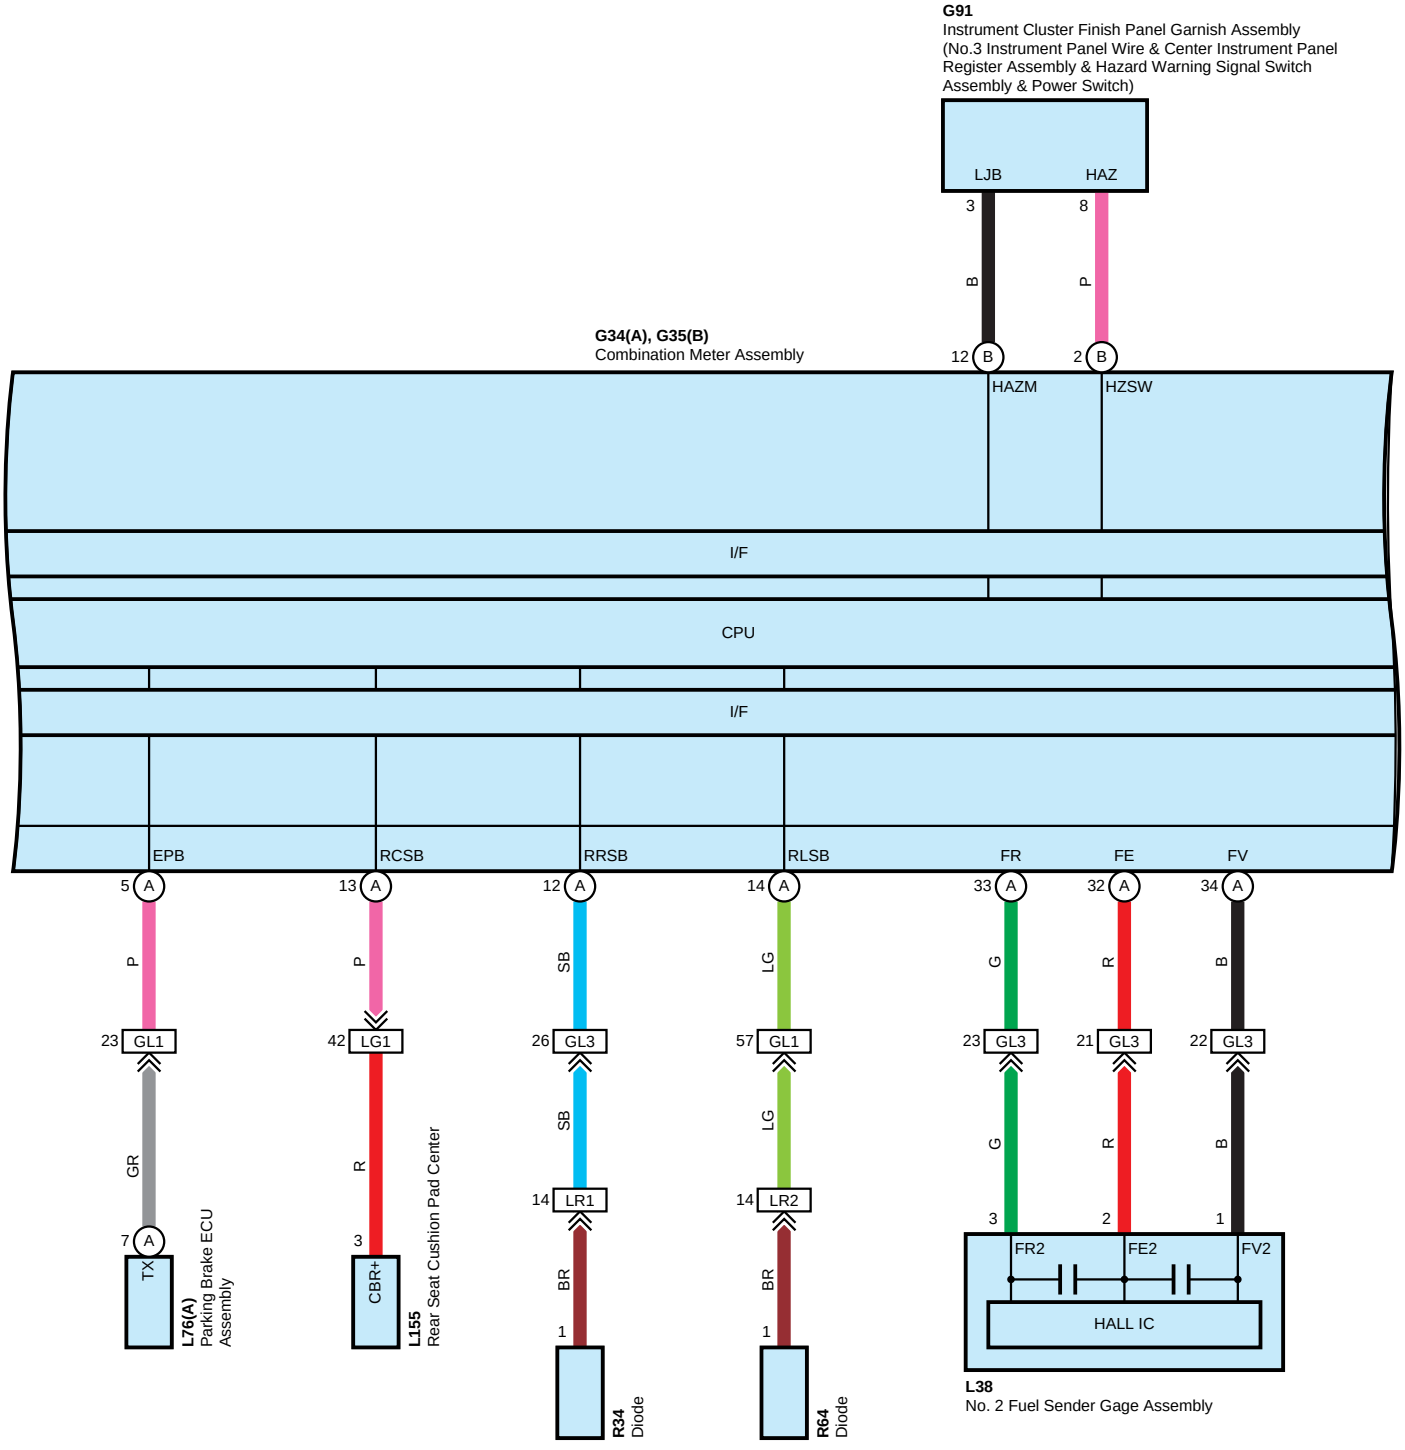
G91
Instrument Cluster Finish Panel Garnish Assembly
(No.3 Instrument Panel Wire & Center Instrument Panel Register Assembly & Hazard Warning Signal Switch Assembly & Power Switch)
LJB
HAZ
3
8
B
P
G34(A), G35(B)
Combination Meter Assembly
12 B
2 B
HAZM
HZSW
I/F
CPU
I/F
EPB
RCSB
RRSB
RLSB
FR
FE
FV
5 A
13 A
12 A
14 A
33 A
32 A
34 A
P
P
SB
LG
G
R
B
23 GL1
42 LG1
26 GL3
57 GL1
23 GL3
21 GL3
22 GL3
GR
R
SB
LG
G
R
B
7 A
3
14 LR1
14 LR2
3
2
1
TX
CBR+
BR
BR
FR2
FE2
FV2
HALL IC
L76(A)
Parking Brake ECU Assembly
L155
Rear Seat Cushion Pad Center
1
1
R34
Diode
R64
Diode
L38
No. 2 Fuel Sender Gage Assembly

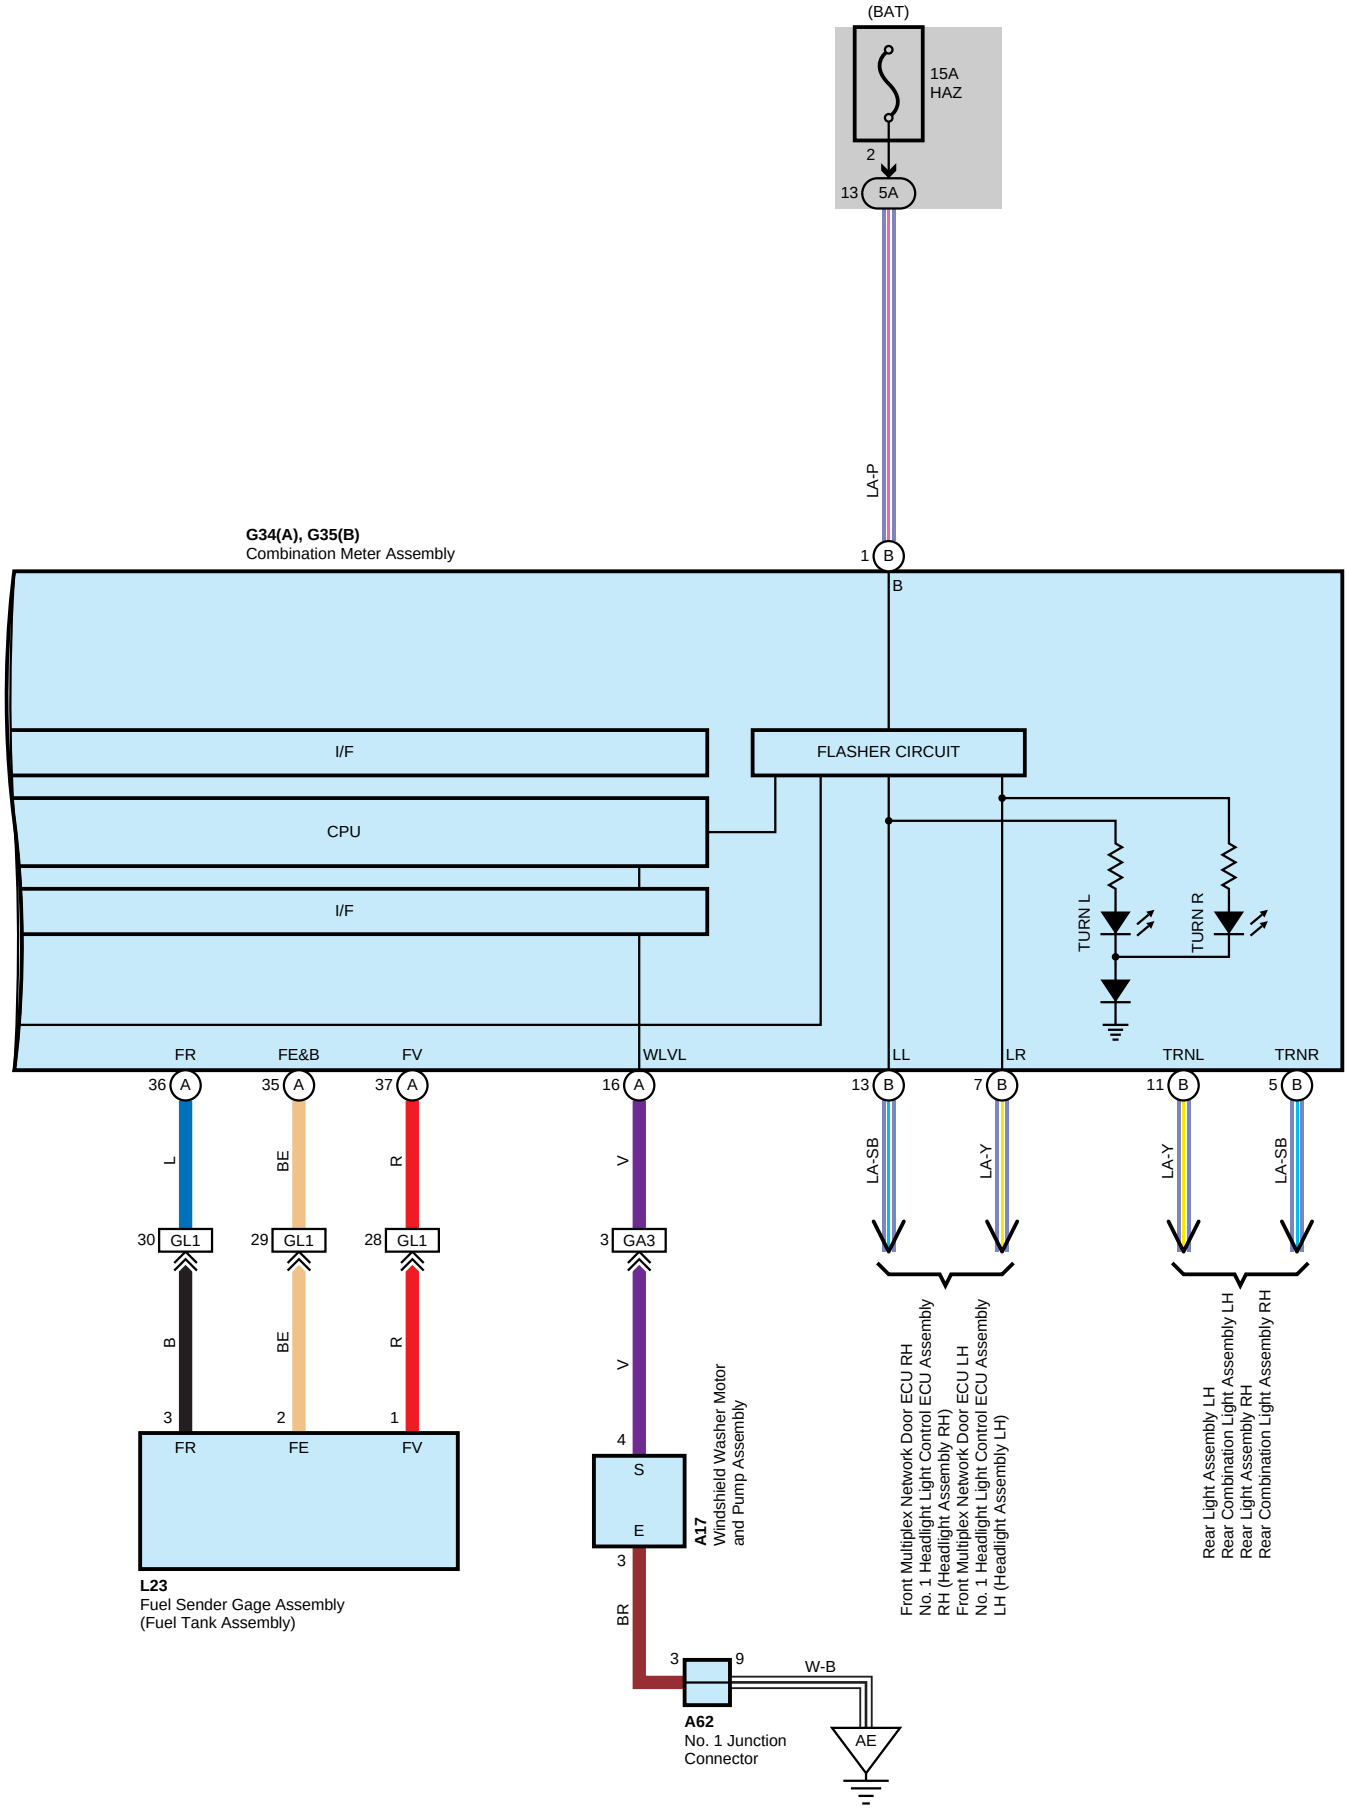
(BAT)
15A
HAZ
2
13
5A
LA-P
G34(A), G35(B)
Combination Meter Assembly
1
B
B
I/F
FLASHER CIRCUIT
CPU
I/F
TURN L
TURN R
FR
FE&B
FV
WLVL
LL
LR
TRNL
TRNR
36
35
37
16
13
7
11
5
A
B
L
BE
R
V
LA-SB
LA-Y
LA-Y
LA-SB
30
29
28
3
GL1
GL1
GL1
GA3
B
BE
R
V
3
2
1
4
FR
FE
FV
S
E
3
BR
L23
Fuel Sender Gage Assembly
(Fuel Tank Assembly)
A17
Windshield Washer Motor
and Pump Assembly
Front Multiplex Network Door ECU RH
No. 1 Headlight Light Control ECU Assembly
RH (Headlight Assembly RH)
Front Multiplex Network Door ECU LH
No. 1 Headlight Light Control ECU Assembly
LH (Headlight Assembly LH)
Rear Light Assembly LH
Rear Combination Light Assembly LH
Rear Light Assembly RH
Rear Combination Light Assembly RH
3
9
W-B
A62
No. 1 Junction
Connector
AE

A11
Black

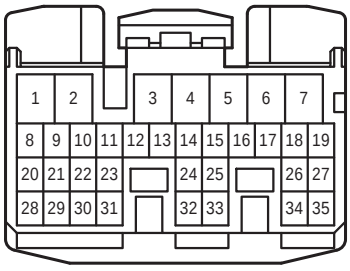

90980-12528

A17
Gray

90980-11027

A25
Gray

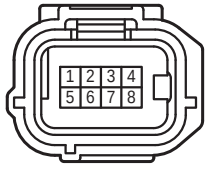

90980-12520

A31
Gray

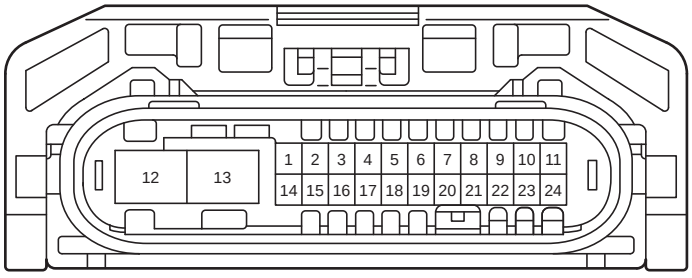

90980-12A92

A32
Gray

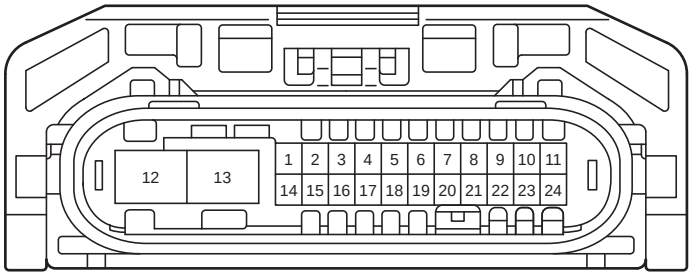

90980-12A92

A62
Black

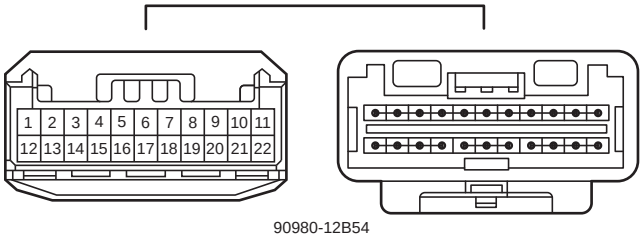

90980-12B54

A73
Gray

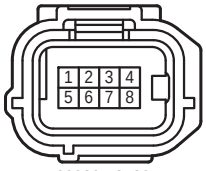

90980-12520

D14
Black

90980-11363

D15
Black

90980-11363

D24
Black

90980-12C20

D25
Black

90980-12C20

G5
Blue

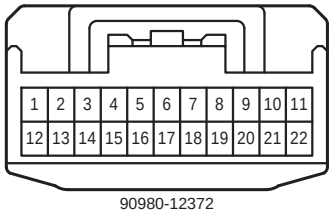

90980-12372

G8
White

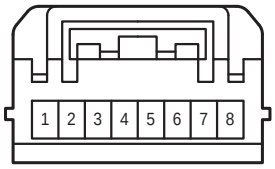

90980-12550

G12
Black

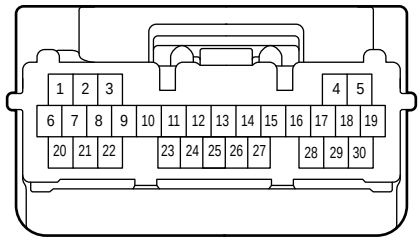

90980-12C62

G21
Black

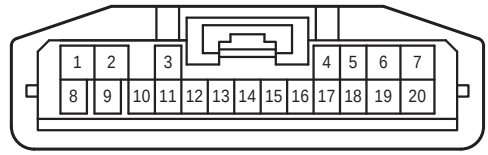

90980-12976

G27
Black

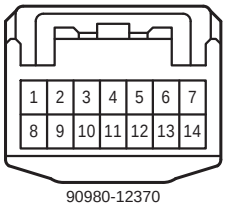

90980-12370

G31
Black

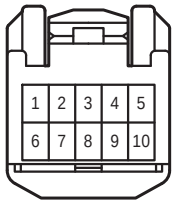

90980-12361

G34
Black

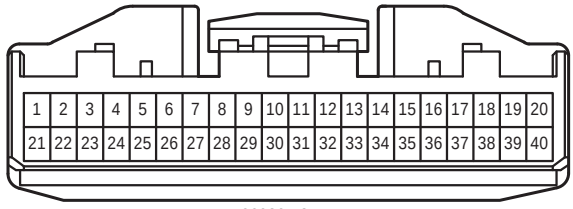

90980-12557

G35
Black

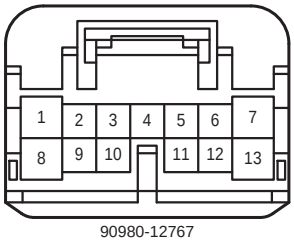

90980-12767

G52
White

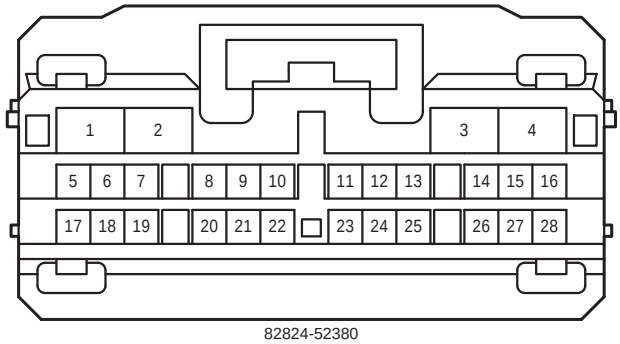

82824-52380

G54
White

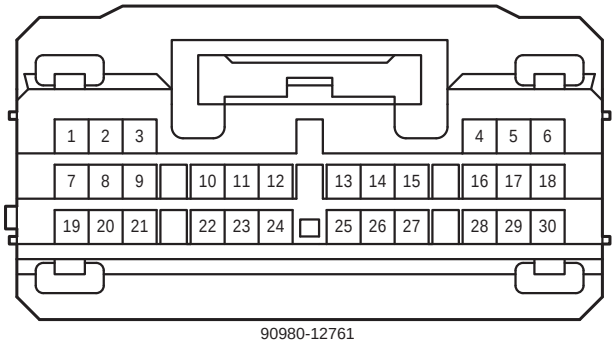

90980-12761

G55
Black

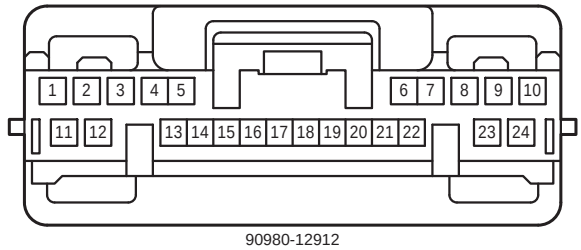

90980-12912

G56
White

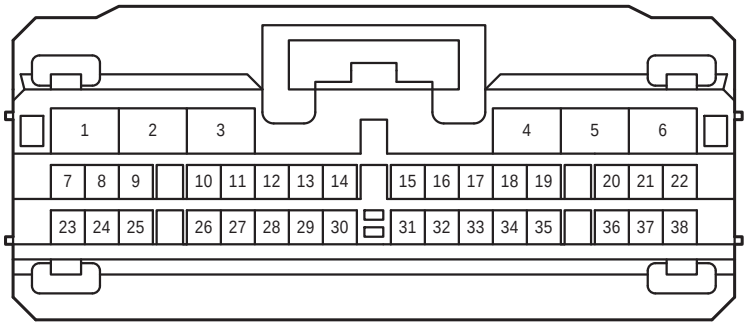

90980-12817

G65
White

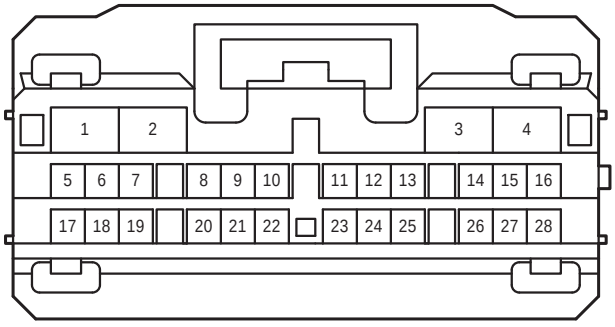

90980-12760

G66
Black

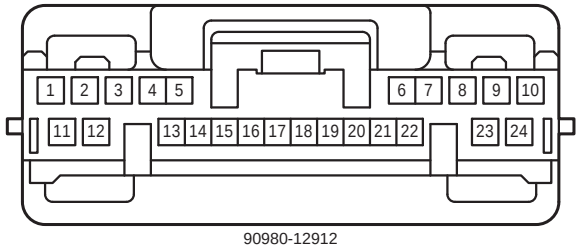

90980-12912

G71
White

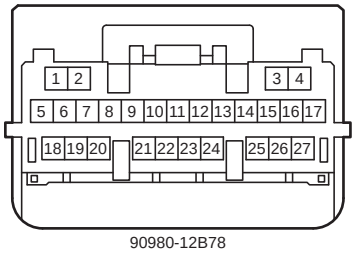

90980-12B78

G75
White

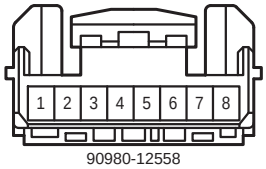

90980-12558

G76
Black

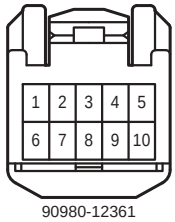

90980-12361

G88
White

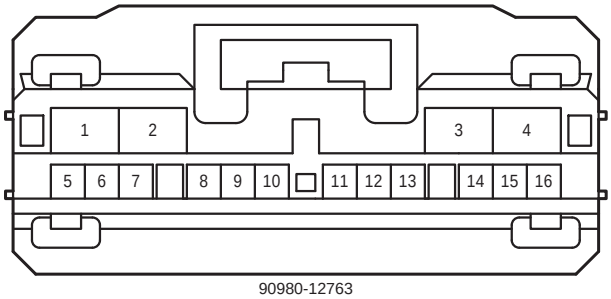

90980-12763

G90
White

90980-12552

G91
White

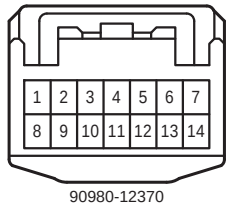

90980-12370

G105
Blue

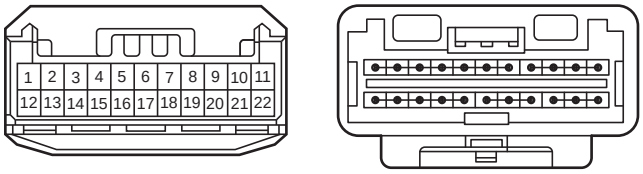

90980-12B54

G119
Blue

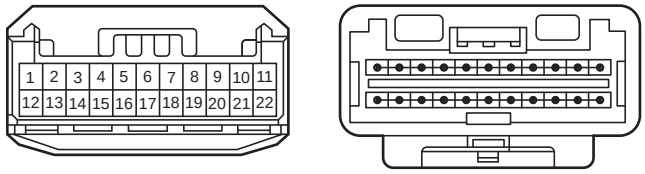

90980-12B54

G120
White

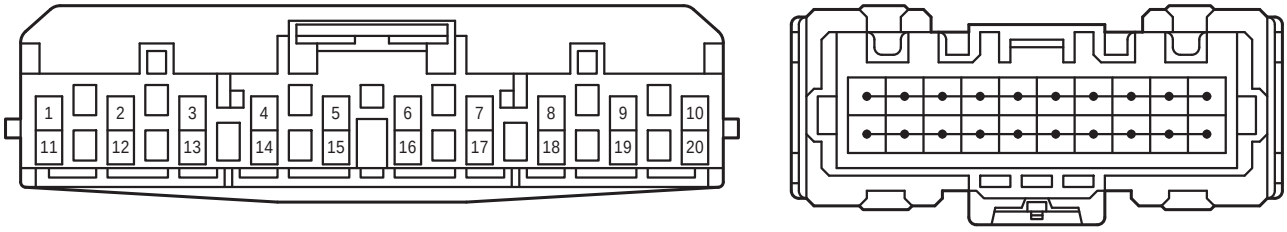

90980-12A58

G121
White

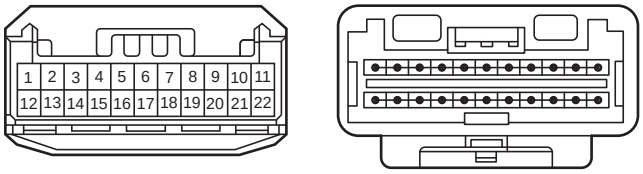

90980-12B54

H12
White

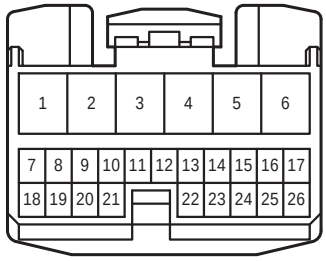

90980-12561

H31
White

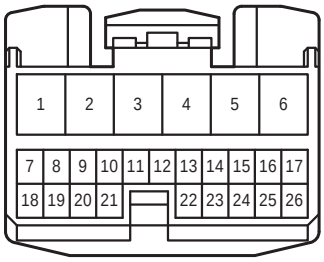

90980-12561

H39
White

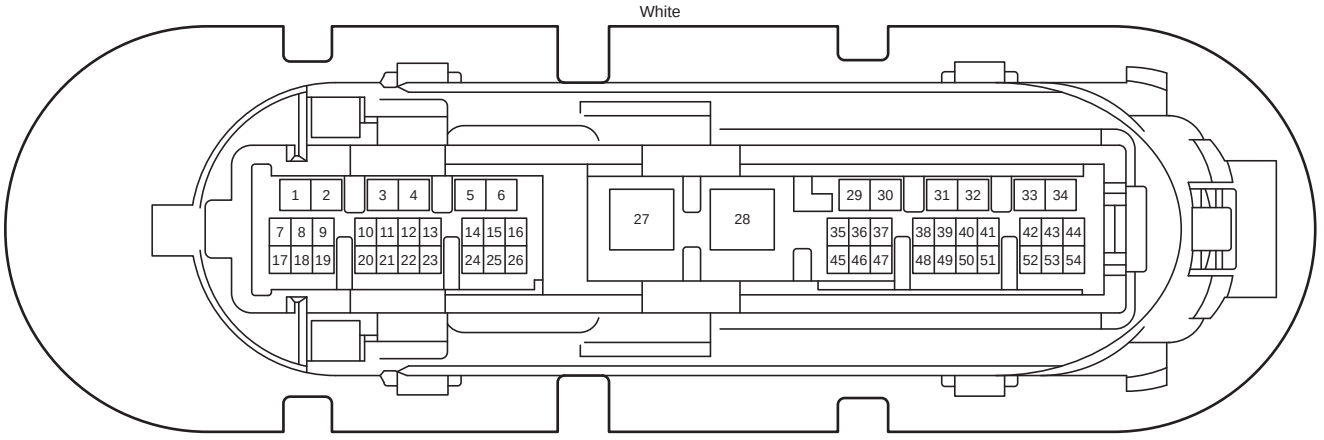

90980-12D88

H40
White

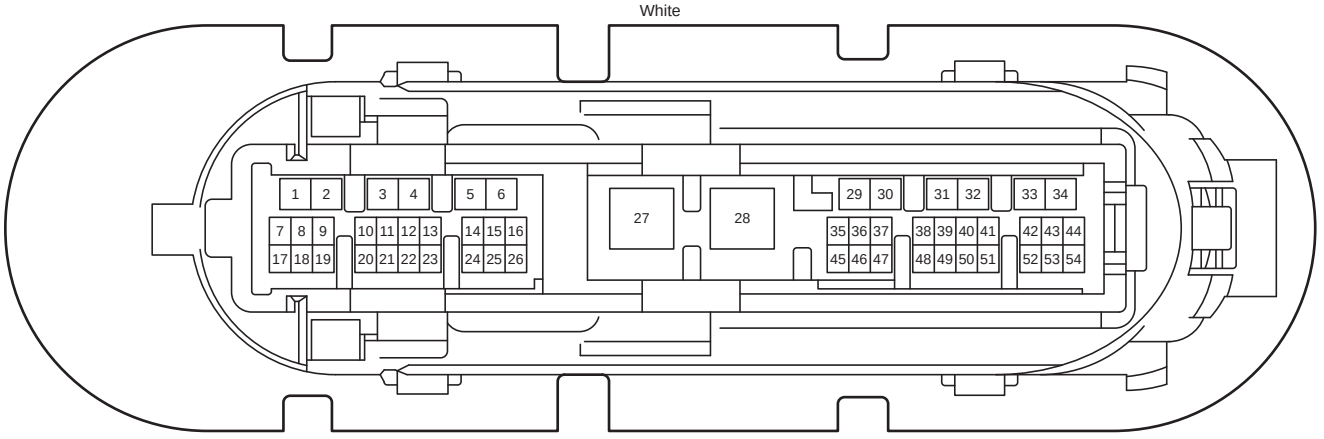

90980-12D88

K7
White

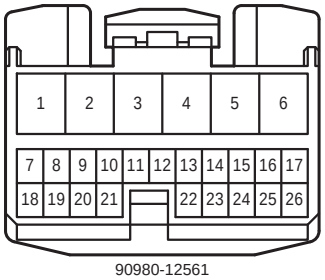

90980-12561

K21
White

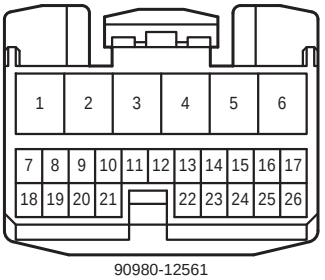

90980-12561

L1
Yellow

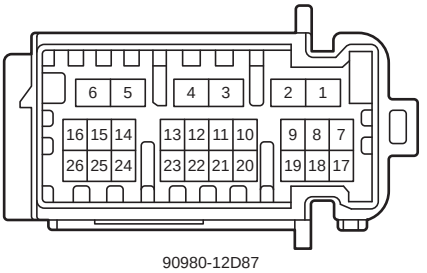

90980-12D87

L2
Yellow

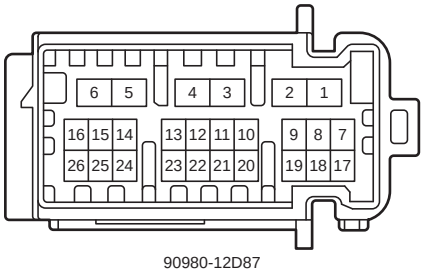

90980-12D87

L7
White

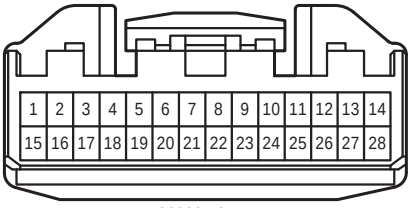

90980-12555

L10
White

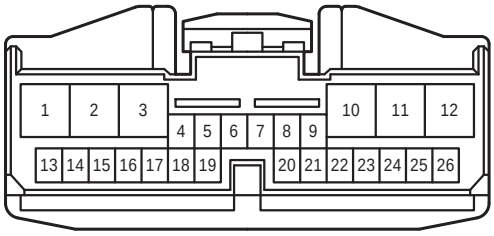

90980-12444

L23
White

90980-11077

L38
Gray

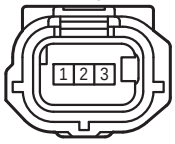

90980-12353

L48
White

90980-12552

L52
White

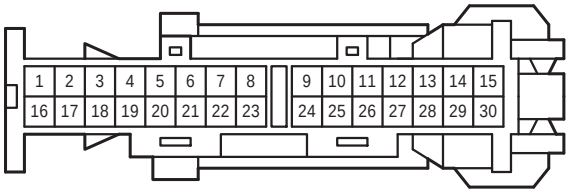

90980-12979

L76
White

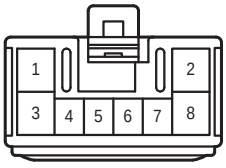

90980-11362

L115
White

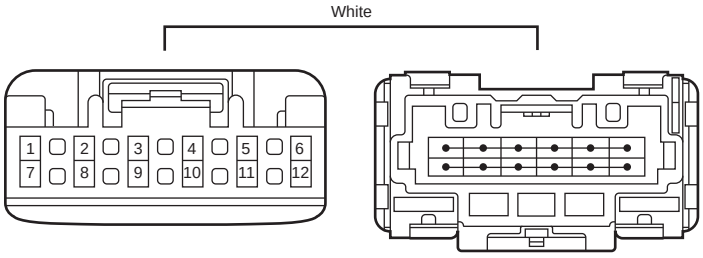

90980-12C68

L116
White

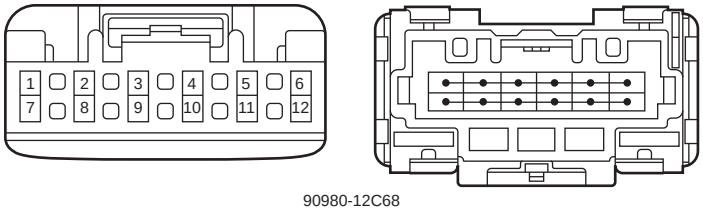

90980-12C68

L131
White

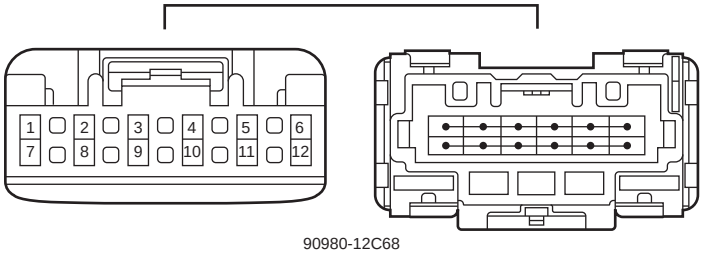

90980-12C68

L132
White

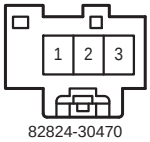

82824-30470

L155
White

90980-11987

L175
White

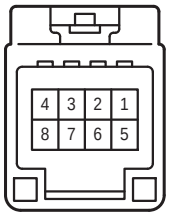

90980-12248

Q13
White

90980-11987

R34
Black

90980-10962

R64
Black

90980-10962

z6
Black

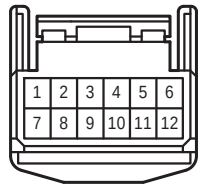

90980-12559

4D
White

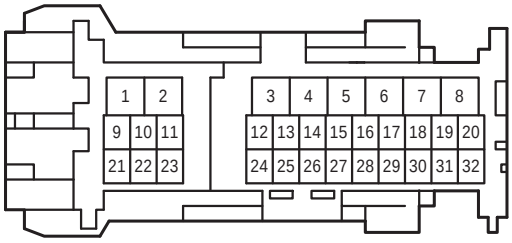

90980-12A48

4H
White

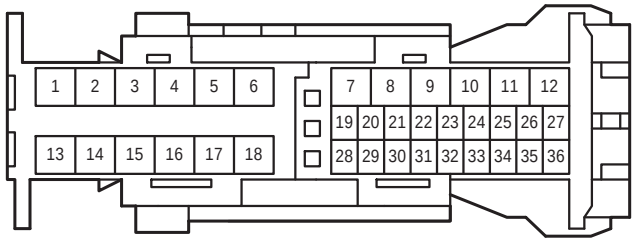

90980-12944

5A
White

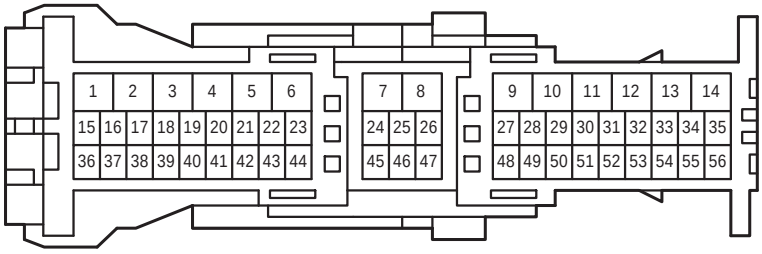

90980-12943

5D
White

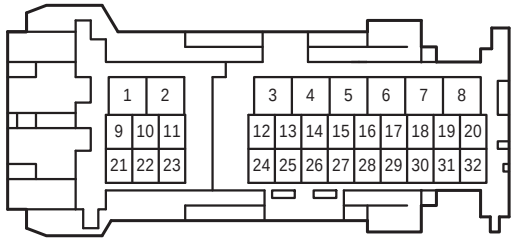

90980-12A48

AL2
White

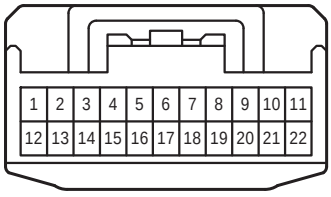

90980-12372

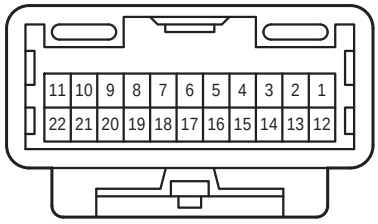

90980-12371

AL5
White

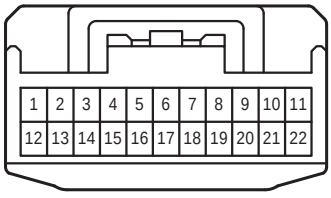

90980-12372

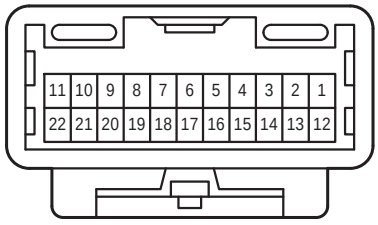

90980-12371

DA1
White

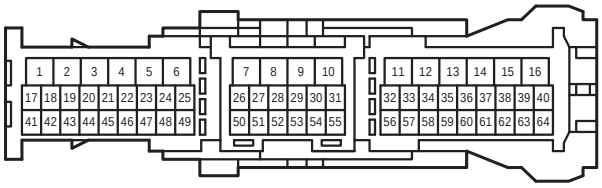

90980-12774

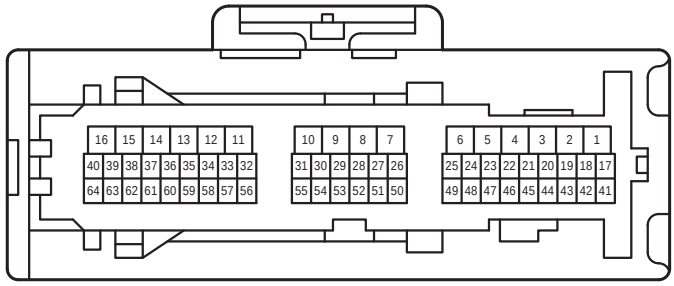

90980-12798

GA1
White

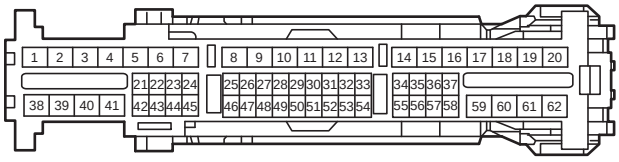

90980-12B22

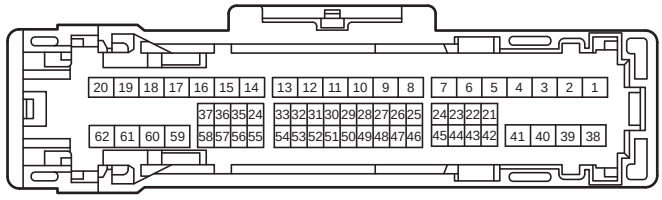

90980-12B21

GA3
White

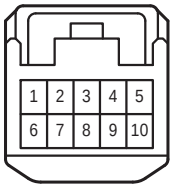

90980-12368

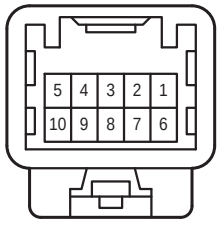

90980-12367

GA4
White

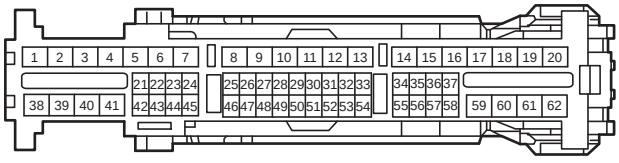

90980-12B22

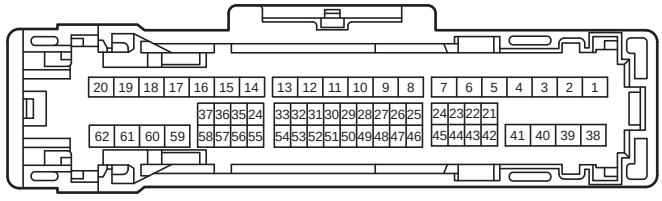

90980-12B21

GL1
Gray

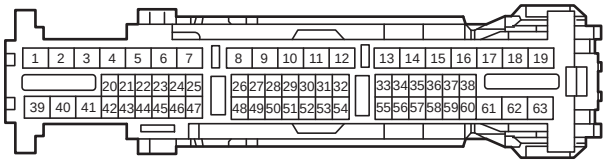

90980-12B20

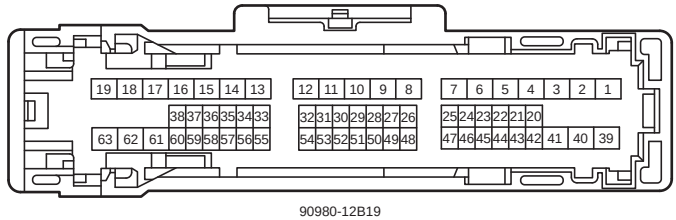

90980-12B19

GL2
White

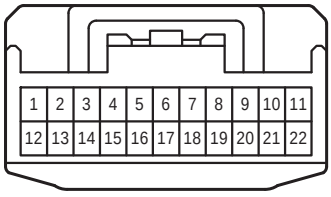

90980-12372

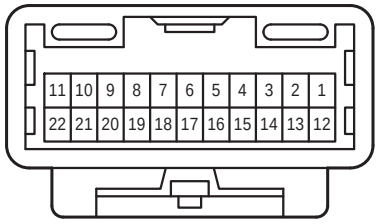

90980-12371

GL3
Gray

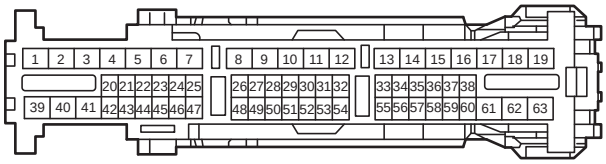

90980-12B20

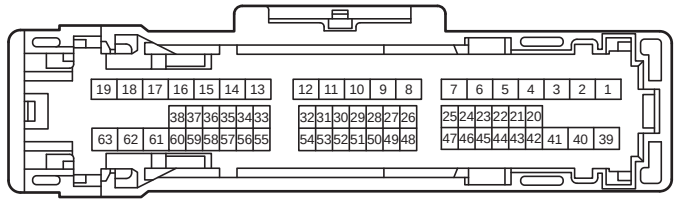

90980-12B19

GL5
White

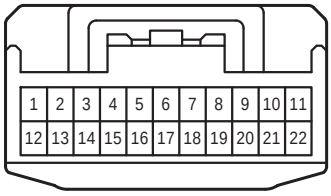

90980-12372

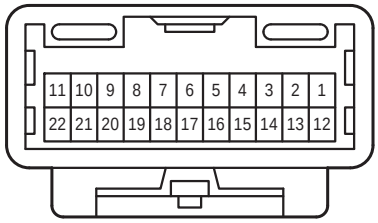

90980-12371

KL1
White

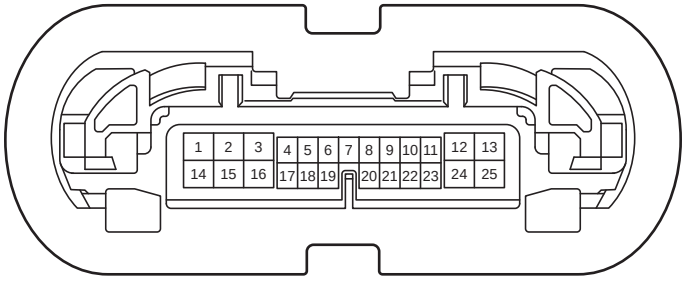

90980-12D82

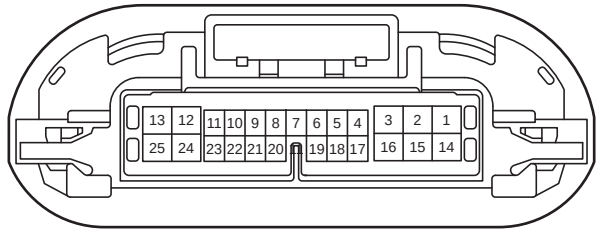

90980-12D81

KL2
White

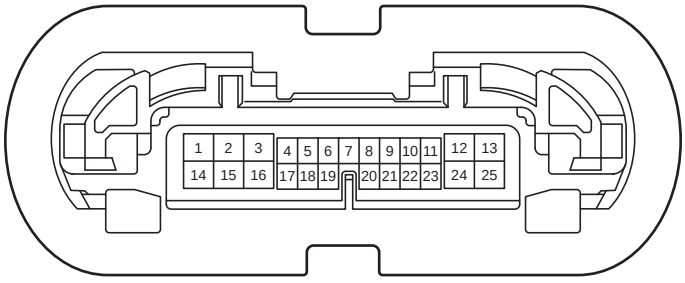

90980-12D82

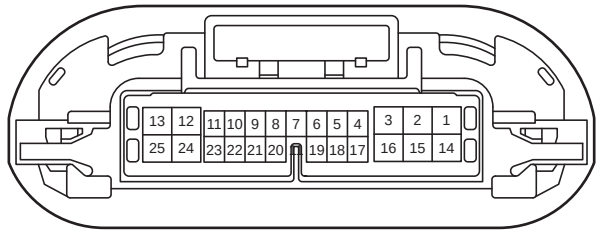

90980-12D81

LG1
White

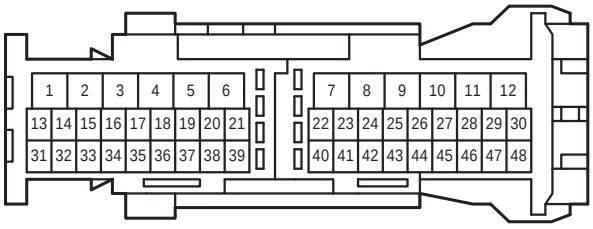

90980-12779

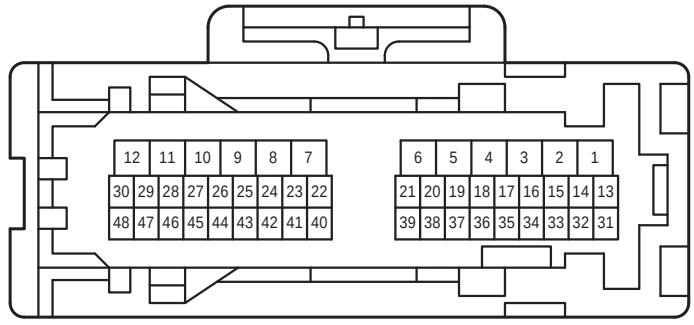

90980-12799

LQ1
White

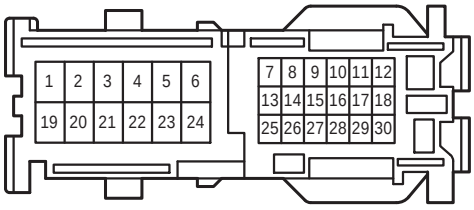

90980-12503

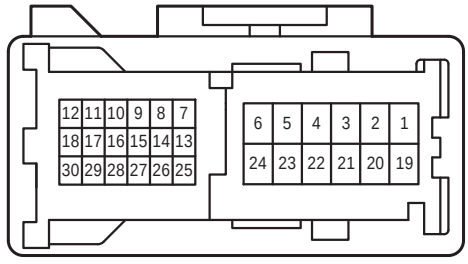

90980-12516

LR1
White

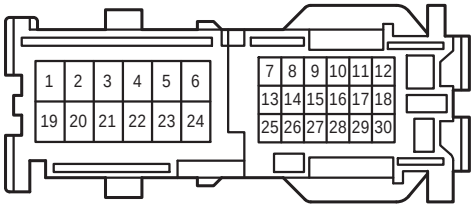

90980-12503

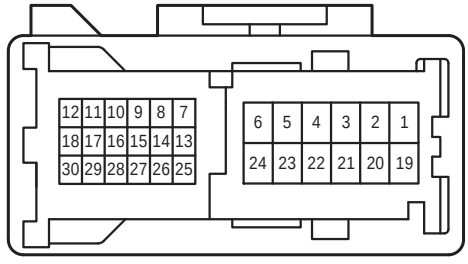

90980-12516

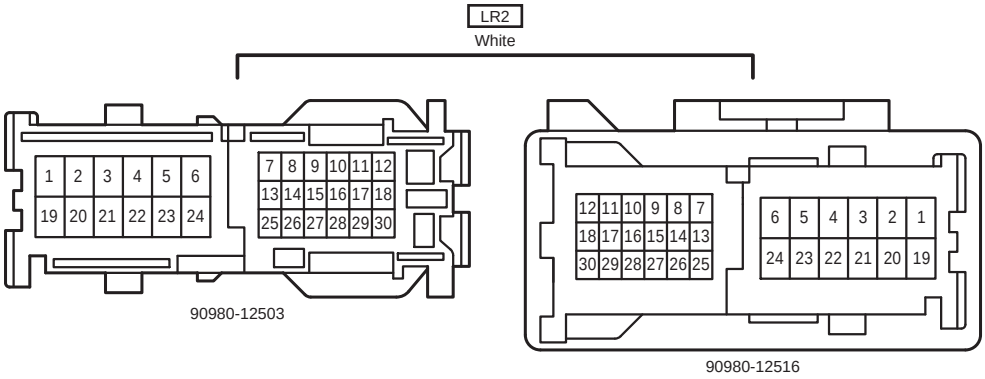
LR2
White
1 2 3 4 5 6
19 20 21 22 23 24
7 8 9 10 11 12
13 14 15 16 17 18
25 26 27 28 29 30
90980-12503
12 11 10 9 8 7
18 17 16 15 14 13
30 29 28 27 26 25
6 5 4 3 2 1
24 23 22 21 20 19
90980-12516