Climate Control Seat (Rear Passenger's Seat) (Left Side), Power Seat (Rear Passenger's Seat) (Left Side), Seat Heater (Rear Passenger's Seat) (Left Side), Vibration Seat (Rear Passenger's Seat) (Left Side)

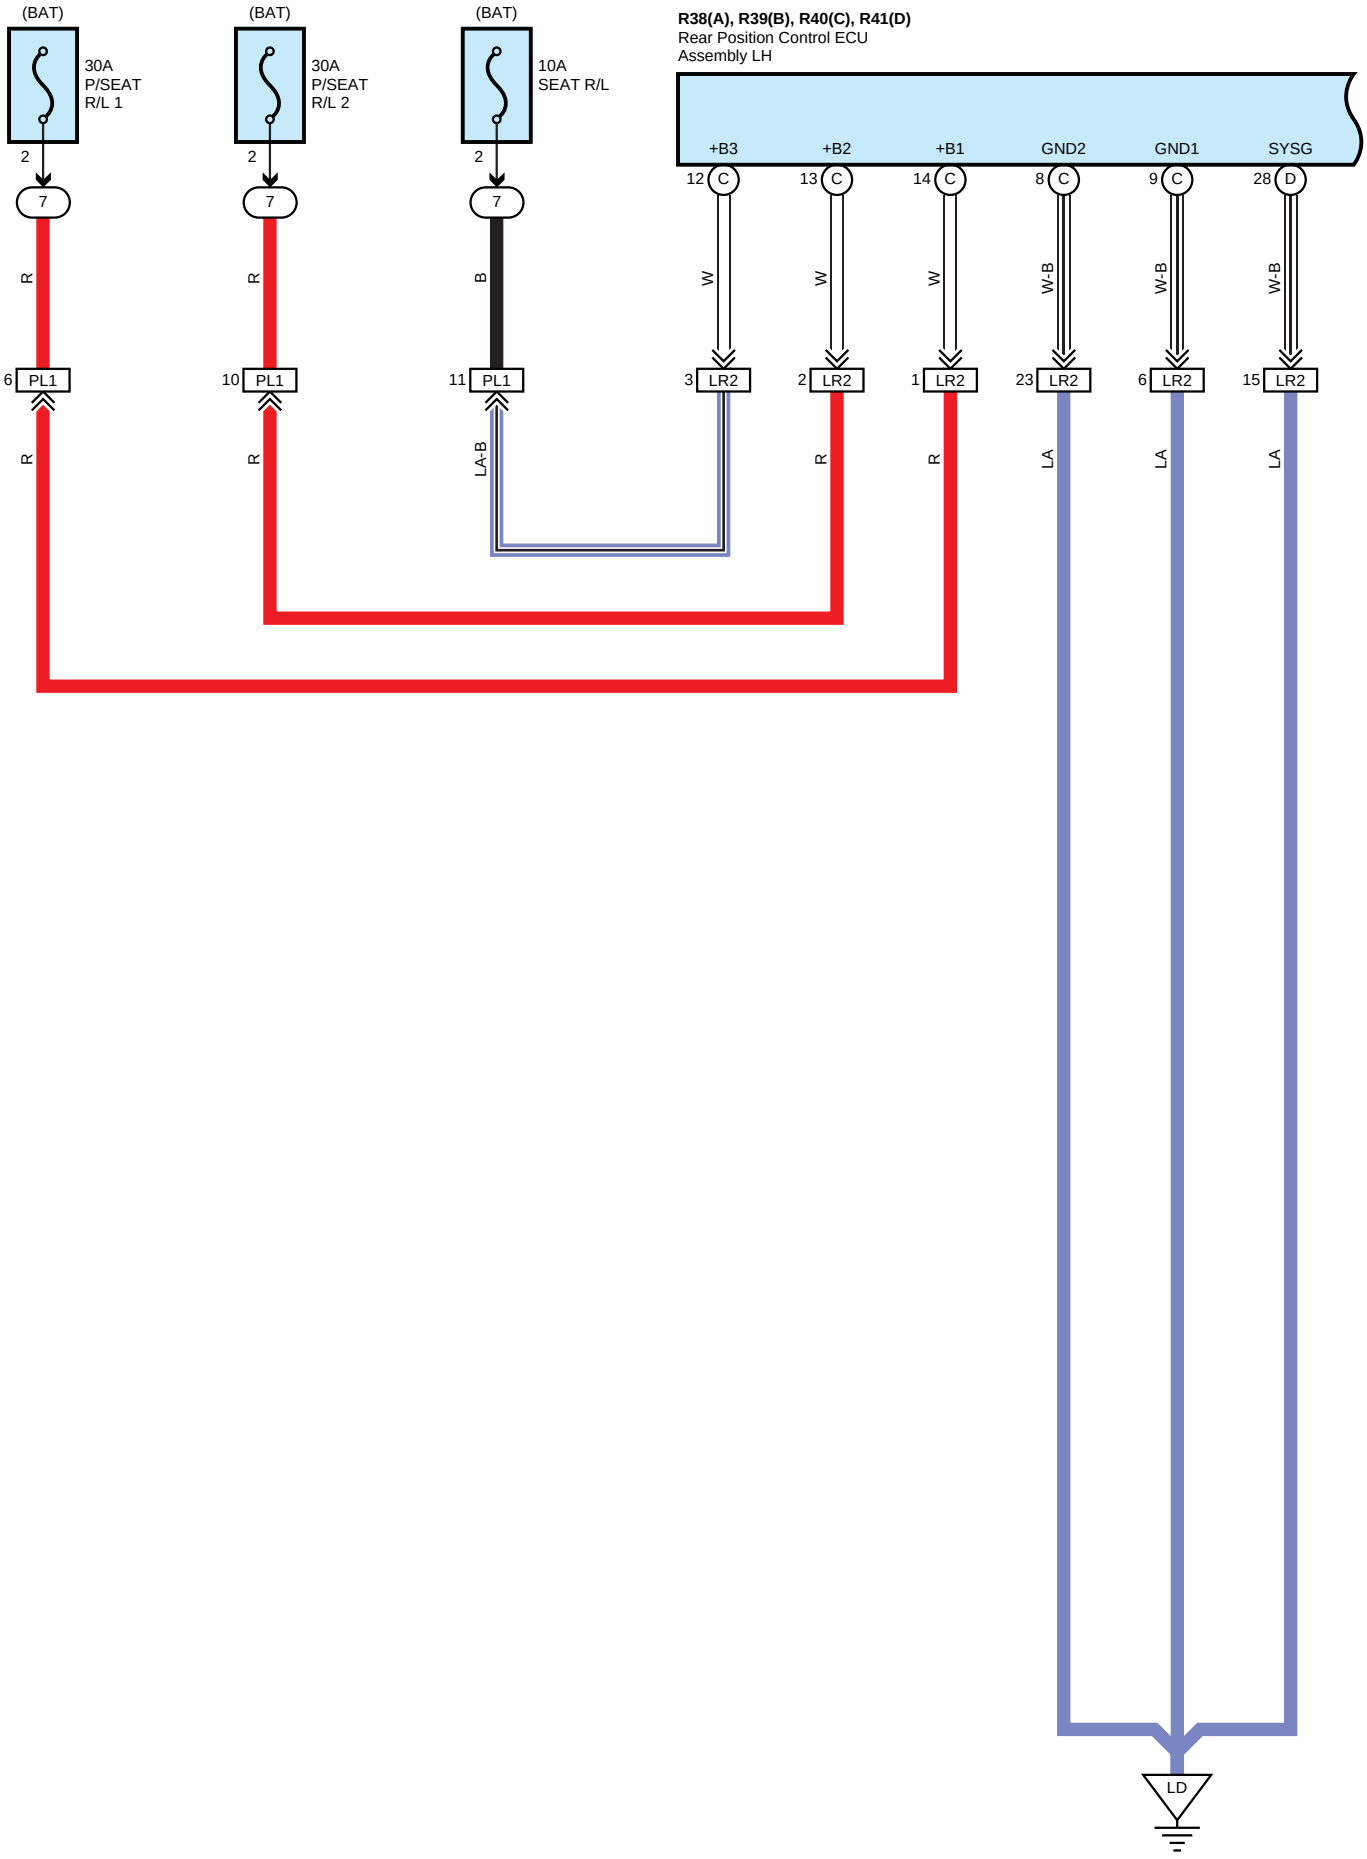

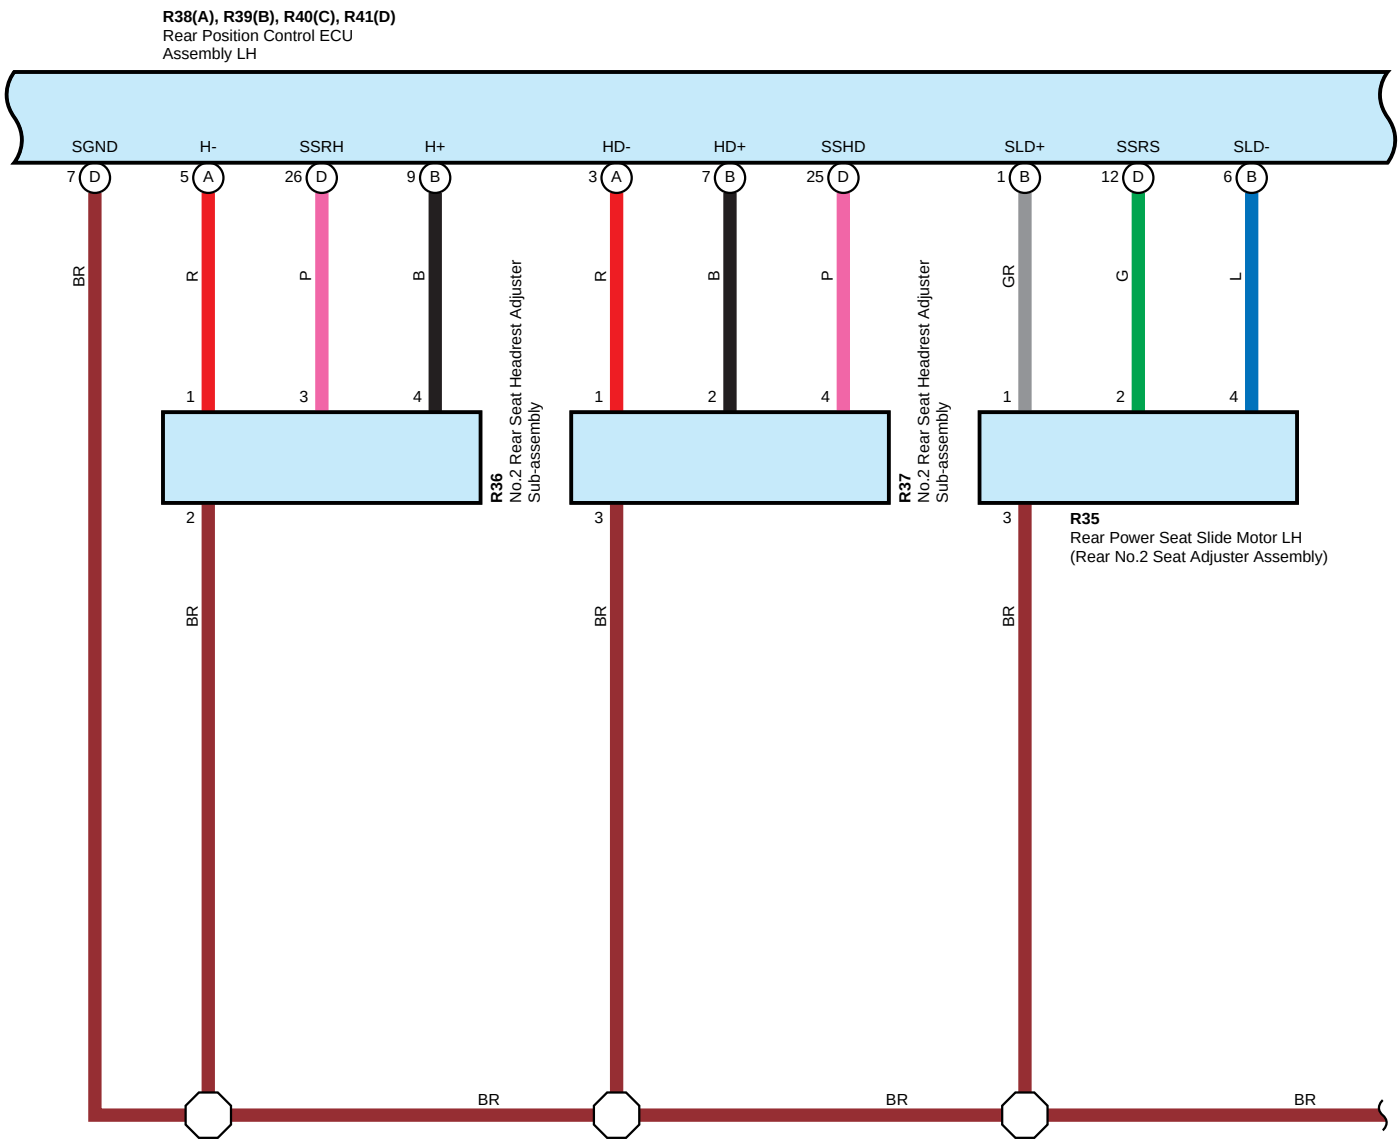
R38(A), R39(B), R40(C), R41(D)
Rear Position Control ECU
Assembly LH
SGND
H-
SSRH
H+
HD-
HD+
SSHD
SLD+
SSRS
SLD-
7 D
5 A
26 D
9 B
3 A
7 B
25 D
1 B
12 D
6 B
BR
R
P
B
R
B
P
GR
G
L
1
3
4
1
2
4
1
2
4
R36
No.2 Rear Seat Headrest Adjuster
Sub-assembly
R37
No.2 Rear Seat Headrest Adjuster
Sub-assembly
2
3
3
R35
Rear Power Seat Slide Motor LH
(Rear No.2 Seat Adjuster Assembly)
BR
BR
BR
BR
BR
BR

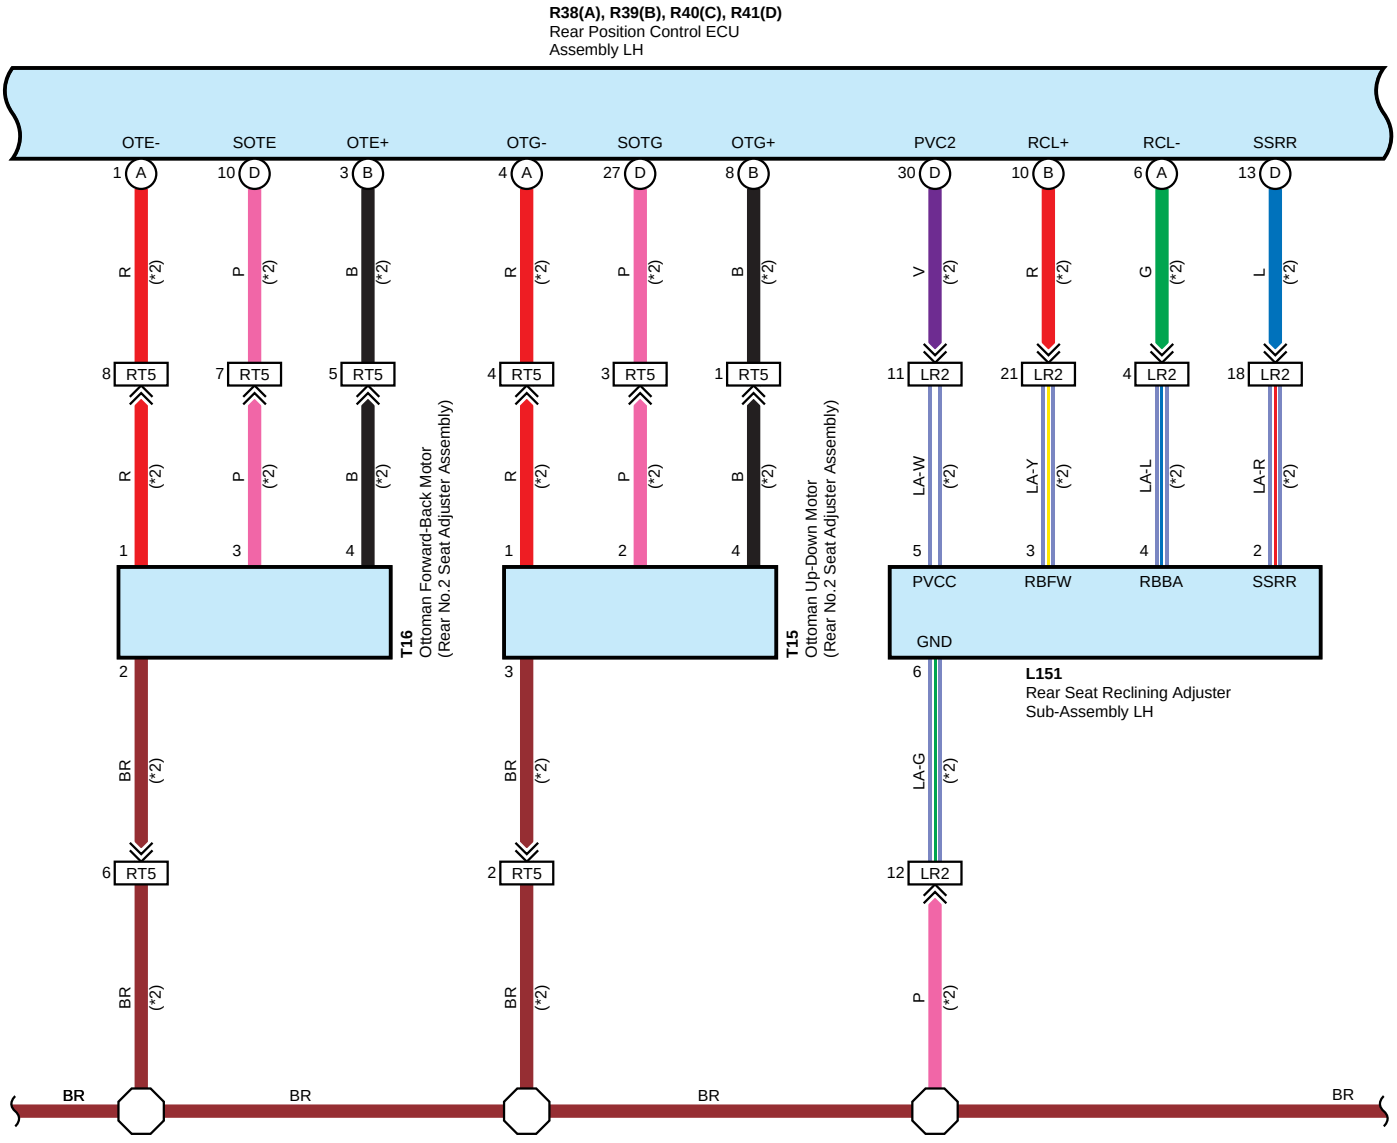
R38(A), R39(B), R40(C), R41(D)
Rear Position Control ECU
Assembly LH
OTE-
SOTE
OTE+
OTG-
SOTG
OTG+
PVC2
RCL+
RCL-
SSRR
T16
Ottoman Forward-Back Motor
(Rear No.2 Seat Adjuster Assembly)
T15
Ottoman Up-Down Motor
(Rear No.2 Seat Adjuster Assembly)
PVCC
RBFW
RBBA
SSRR
GND
L151
Rear Seat Reclining Adjuster
Sub-Assembly LH
RT5
LR2
(*2)
BR

*2 : RHD

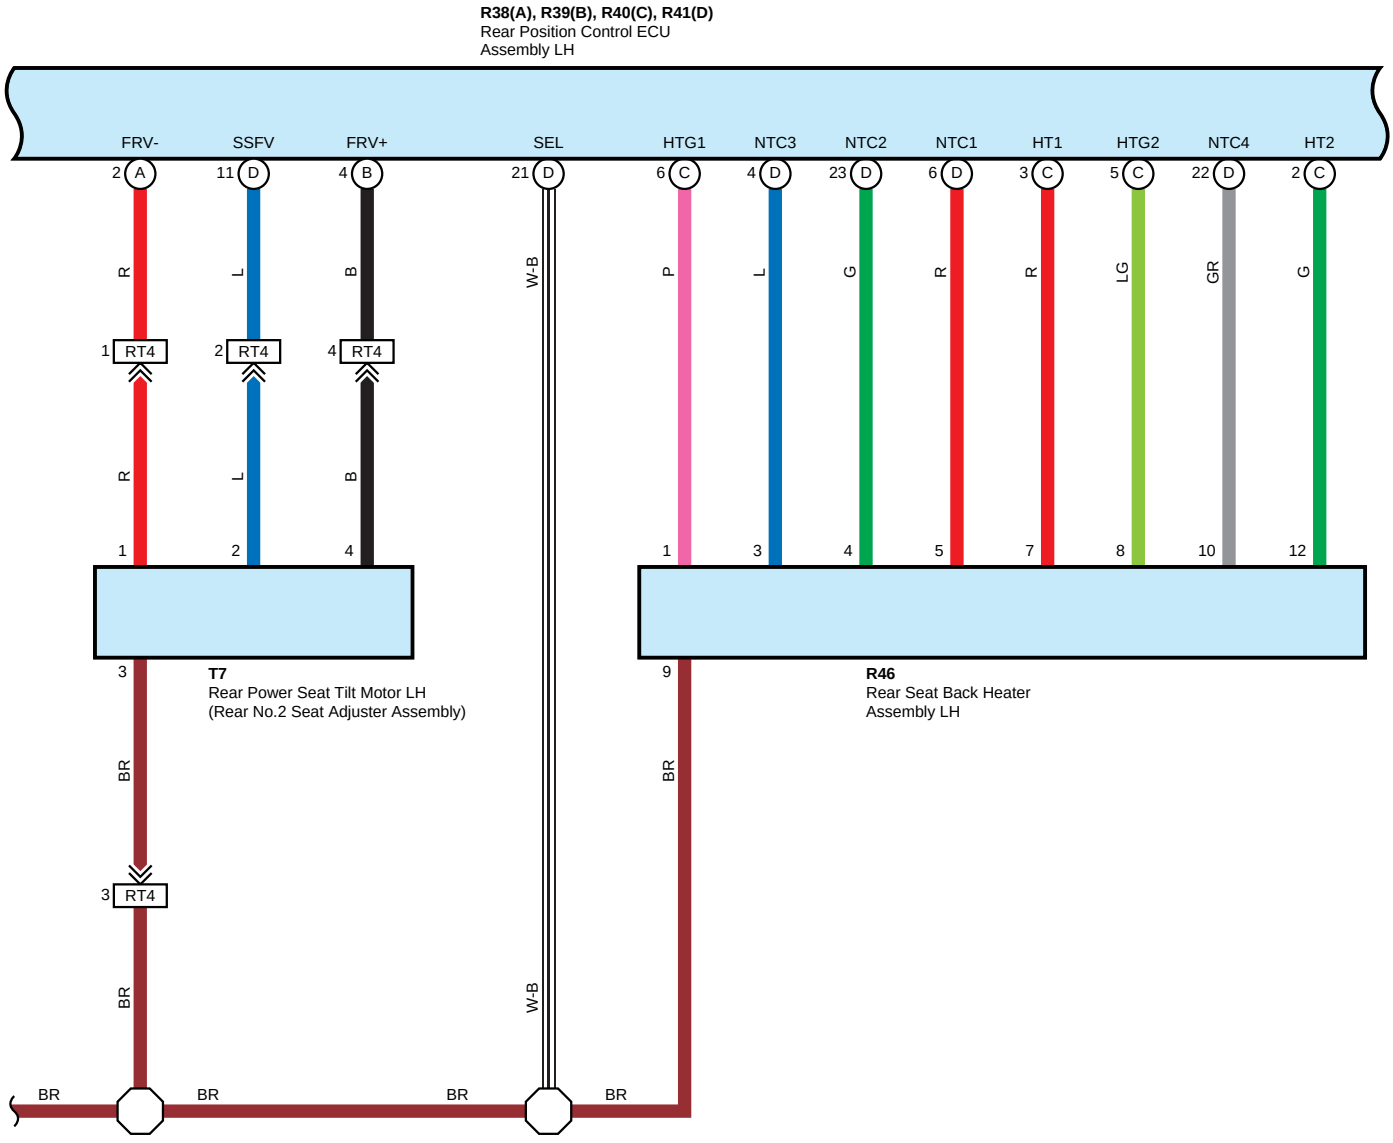
R38(A), R39(B), R40(C), R41(D)
Rear Position Control ECU
Assembly LH
FRV-
SSFV
FRV+
SEL
HTG1
NTC3
NTC2
NTC1
HT1
HTG2
NTC4
HT2
2 A
11 D
4 B
21 D
6 C
4 D
23 D
6 D
3 C
5 C
22 D
2 C
R
L
B
W-B
P
L
G
R
R
LG
GR
G
1 RT4
2 RT4
4 RT4
R
L
B
1
2
4
1
3
4
5
7
8
10
12
T7
Rear Power Seat Tilt Motor LH
(Rear No.2 Seat Adjuster Assembly)
R46
Rear Seat Back Heater
Assembly LH
3
9
BR
BR
3 RT4
BR
W-B
BR
BR
BR
BR

*3 : w/ Vibration Seat System
*4 : w/o Vibration Seat System
*8 : w/o Diode

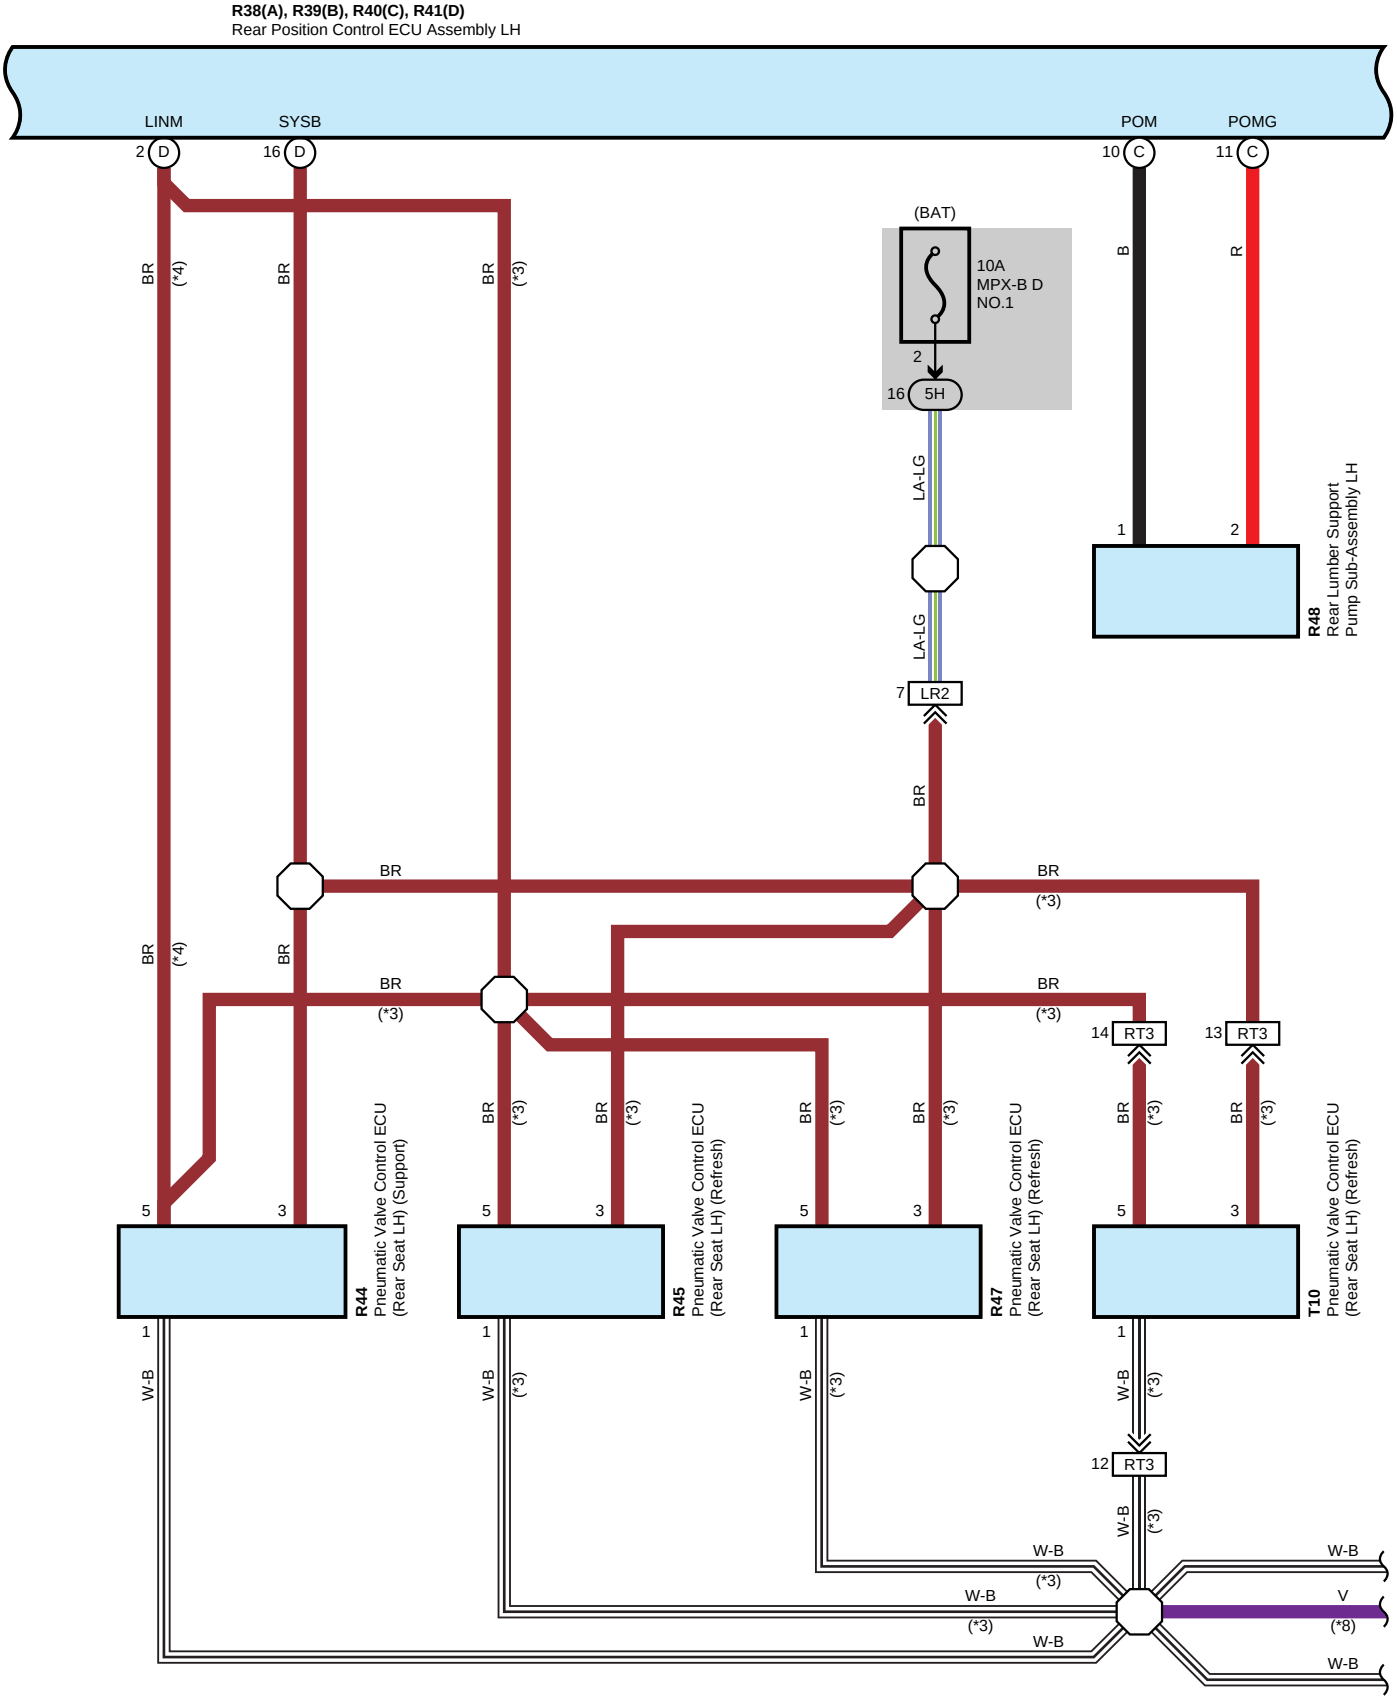

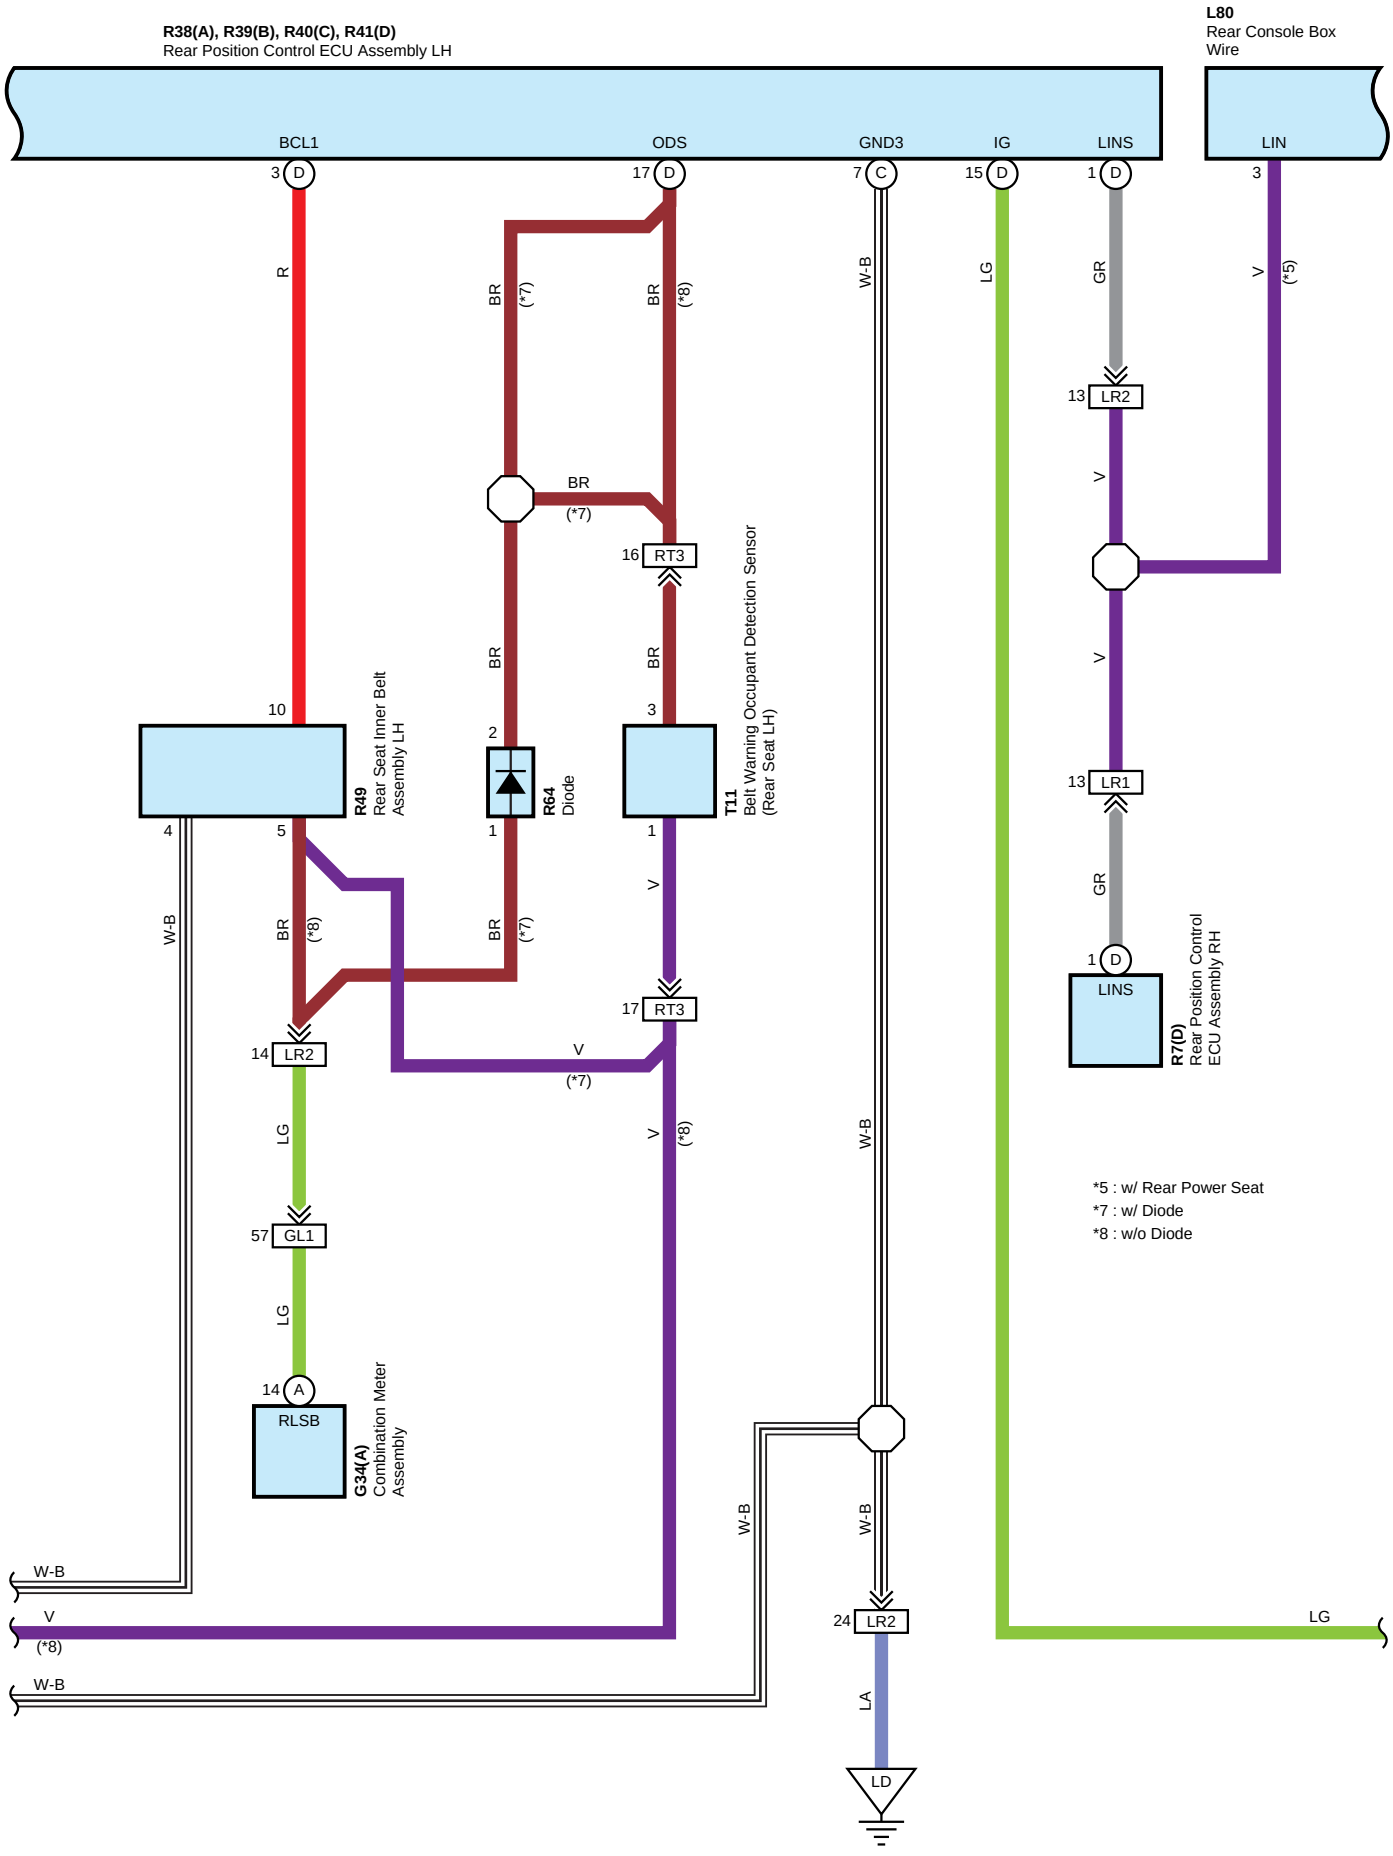
R38(A), R39(B), R40(C), R41(D)
Rear Position Control ECU Assembly LH
L80
Rear Console Box Wire
BCL1
ODS
GND3
IG
LINS
LIN
R49
Rear Seat Inner Belt Assembly LH
R64
Diode
T11
Belt Warning Occupant Detection Sensor (Rear Seat LH)
R7(D)
Rear Position Control ECU Assembly RH
G34(A)
Combination Meter Assembly
RLSB
GL1
LR2
RT3
LR1
LD
*5 : w/ Rear Power Seat
*7 : w/ Diode
*8 : w/o Diode

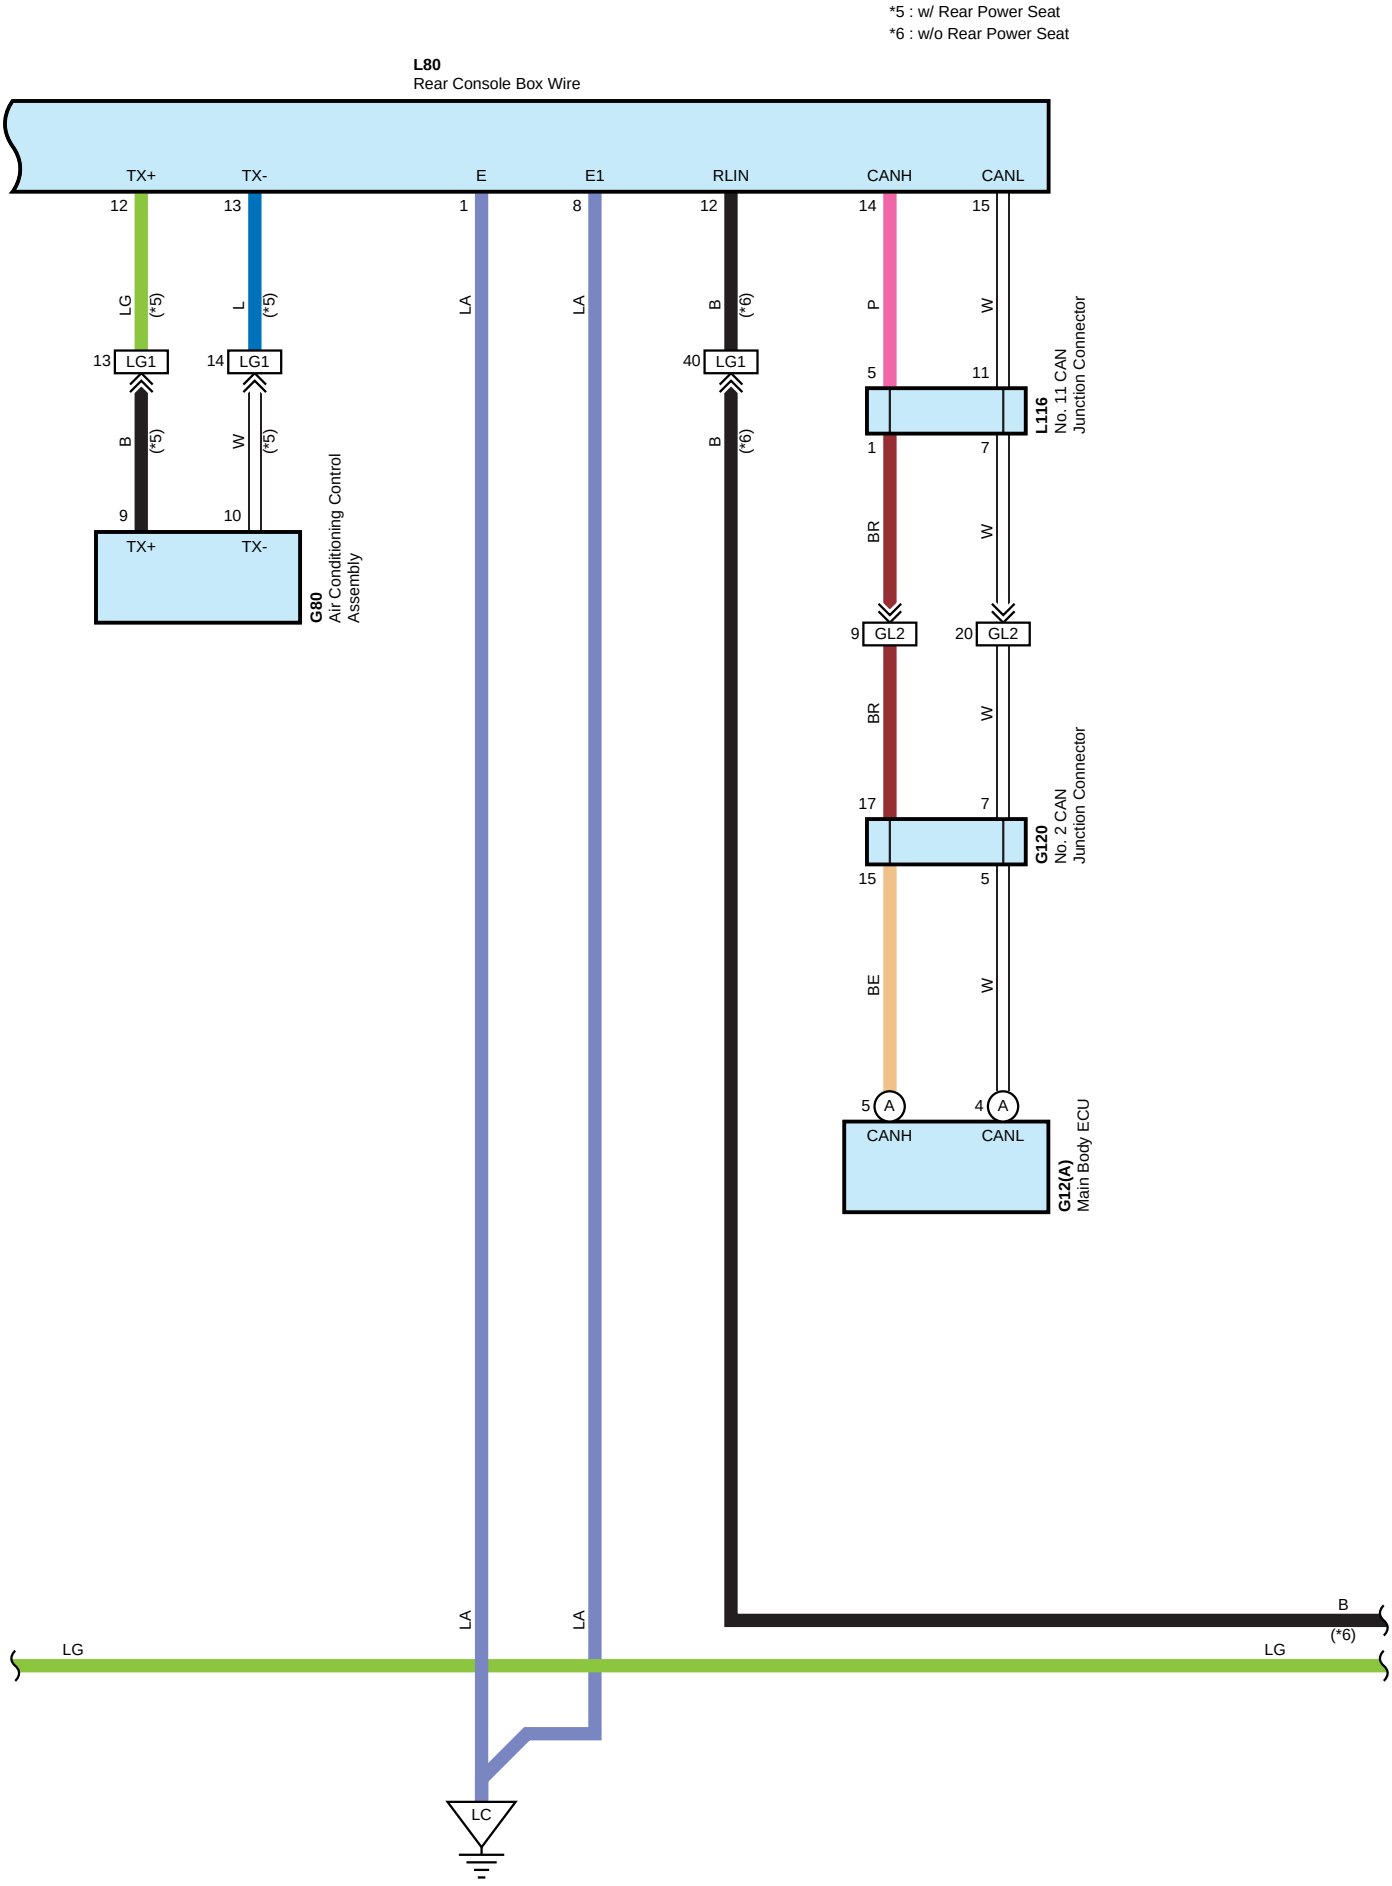
*5 : w/ Rear Power Seat
*6 : w/o Rear Power Seat
L80
Rear Console Box Wire
TX+
TX-
E
E1
RLIN
CANH
CANL
12
13
1
8
12
14
15
LG
(*5)
L
(*5)
LA
LA
B
(*6)
P
W
13
LG1
14
LG1
40
LG1
5
11
L116
No. 11 CAN
Junction Connector
B
(*5)
W
(*5)
B
(*6)
1
7
9
10
TX+
TX-
G80
Air Conditioning Control
Assembly
BR
W
9
GL2
20
GL2
BR
W
17
7
G120
No. 2 CAN
Junction Connector
15
5
BE
W
5
A
4
A
CANH
CANL
G12(A)
Main Body ECU
LA
LA
B
(*6)
LG
LG
LC

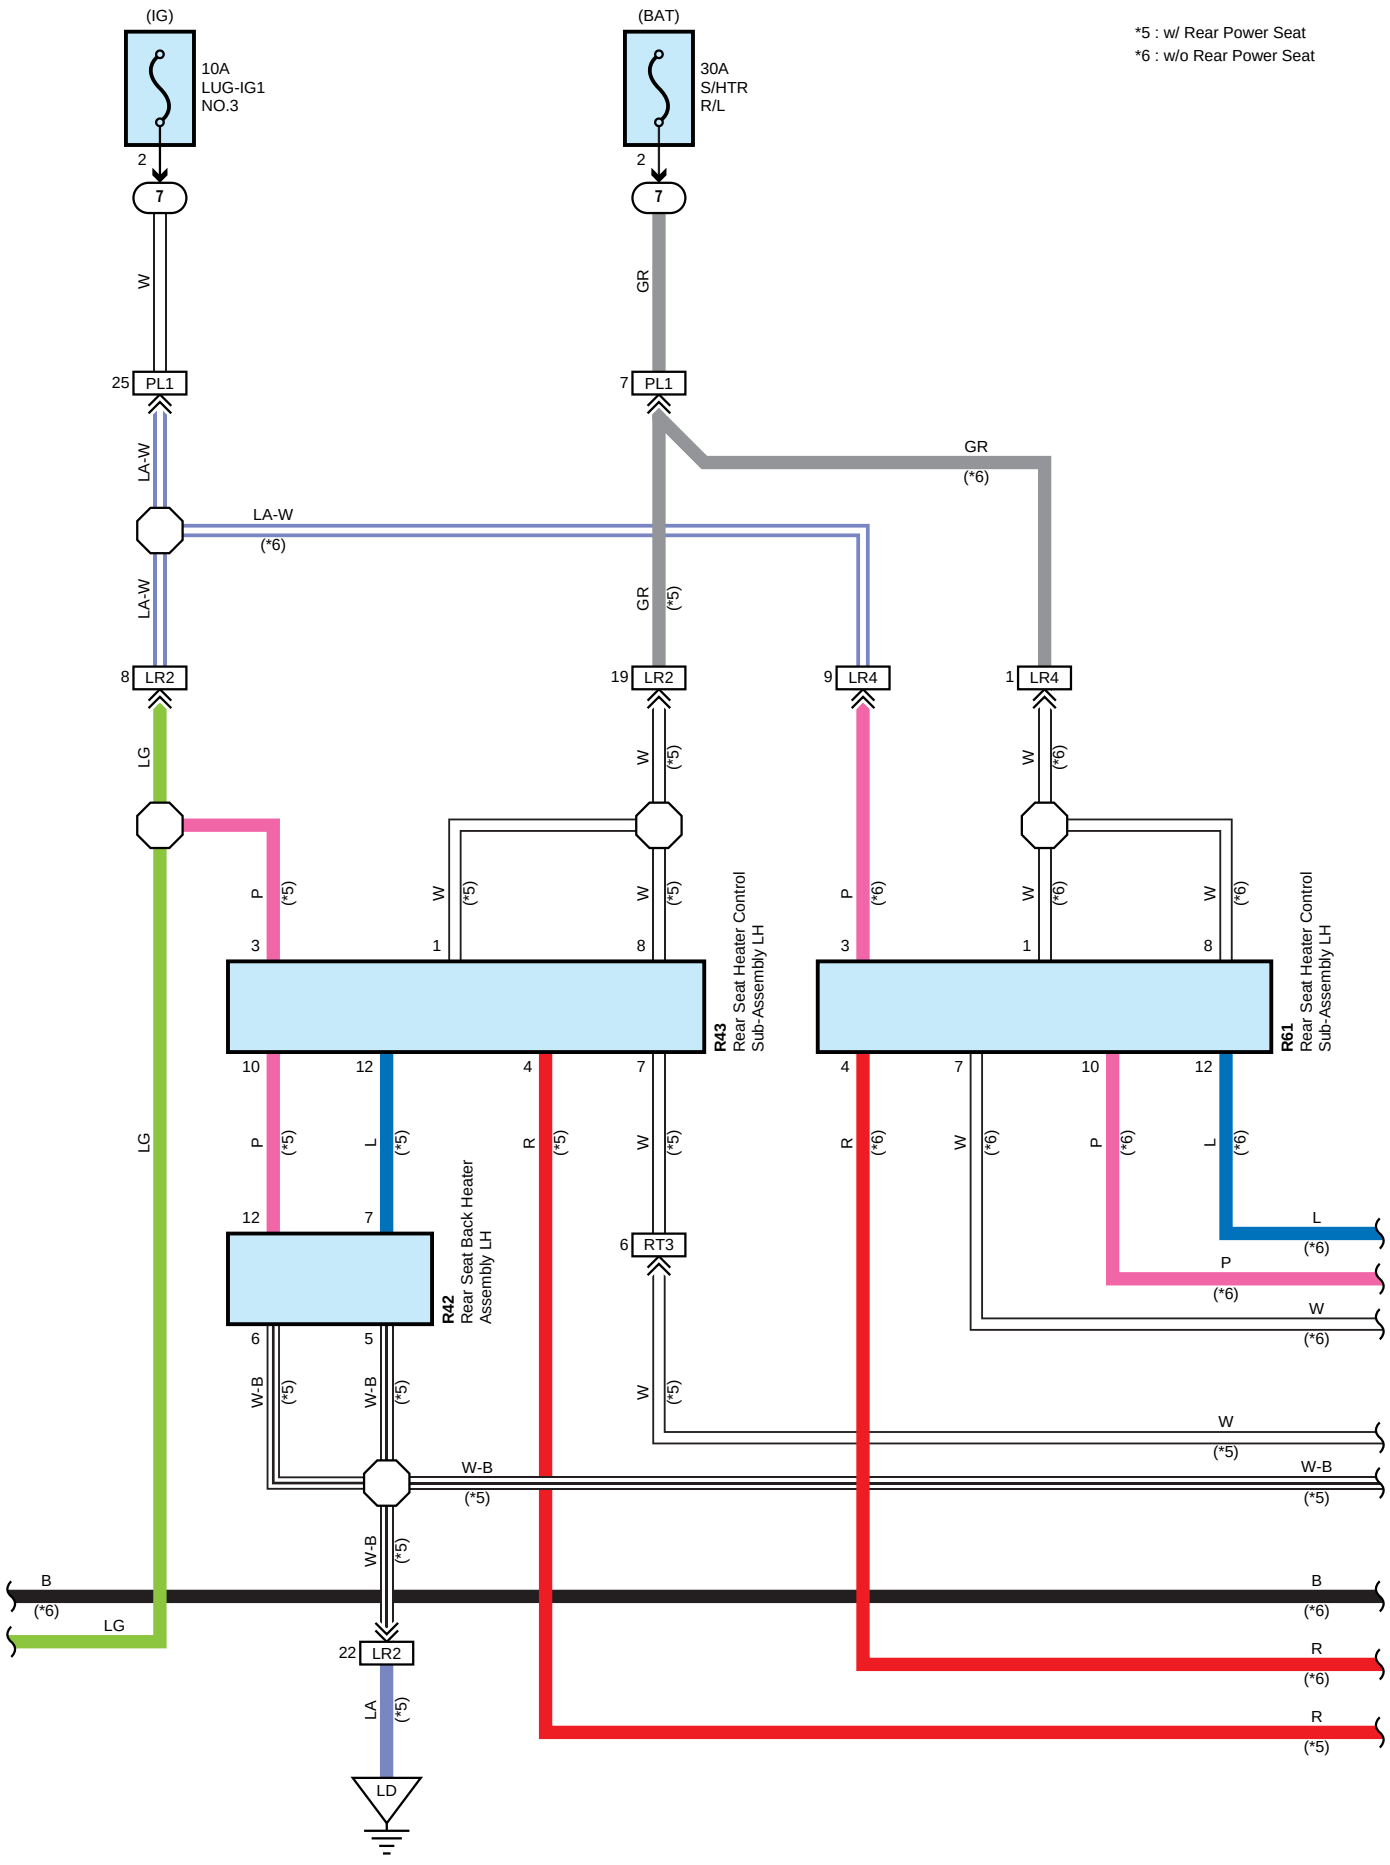
(IG)
10A
LUG-IG1
NO.3
(BAT)
30A
S/HTR
R/L
*5 : w/ Rear Power Seat
*6 : w/o Rear Power Seat
PL1
LR2
LR4
RT3
LD
R43
Rear Seat Heater Control
Sub-Assembly LH
R61
Rear Seat Heater Control
Sub-Assembly LH
R42
Rear Seat Back Heater
Assembly LH

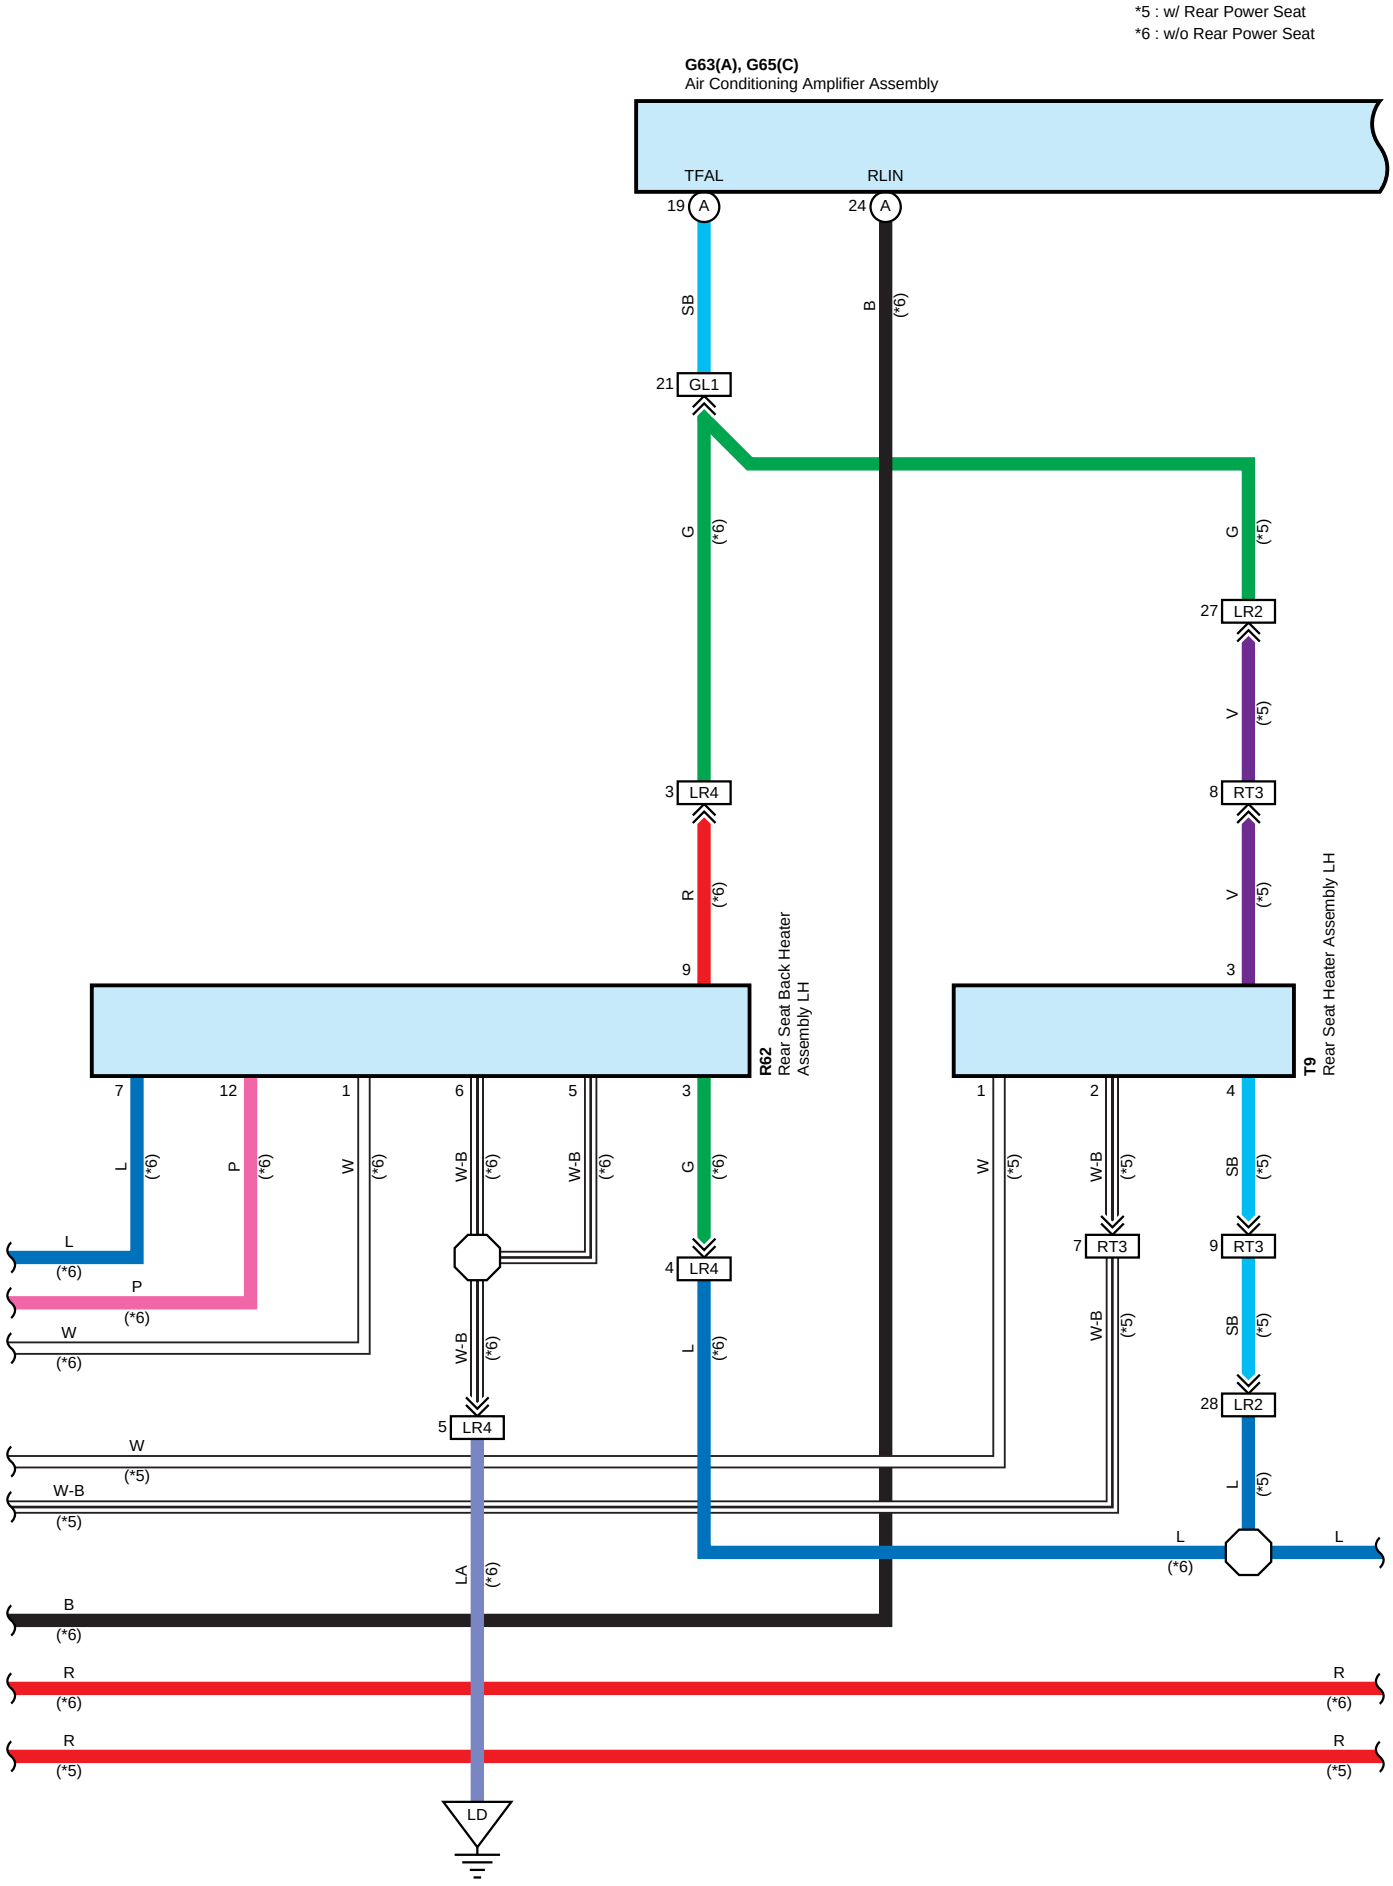
*5 : w/ Rear Power Seat
*6 : w/o Rear Power Seat
G63(A), G65(C)
Air Conditioning Amplifier Assembly
TFAL
RLIN
19 A
24 A
SB
B (*6)
21 GL1
G (*6)
G (*5)
27 LR2
V (*5)
3 LR4
8 RT3
R (*6)
V (*5)
9
3
R62
Rear Seat Back Heater Assembly LH
T9
Rear Seat Heater Assembly LH
7
12
1
6
5
3
1
2
4
L (*6)
P (*6)
W (*6)
W-B (*6)
W-B (*6)
G (*6)
W (*5)
W-B (*5)
SB (*5)
L (*6)
P (*6)
W (*6)
4 LR4
7 RT3
9 RT3
W-B (*6)
L (*6)
W-B (*5)
SB (*5)
5 LR4
28 LR2
W (*5)
W-B (*5)
L (*5)
L (*6)
L
LA (*6)
B (*6)
R (*6)
R (*6)
R (*5)
R (*5)
LD

*5 : w/ Rear Power Seat
*6 : w/o Rear Power Seat

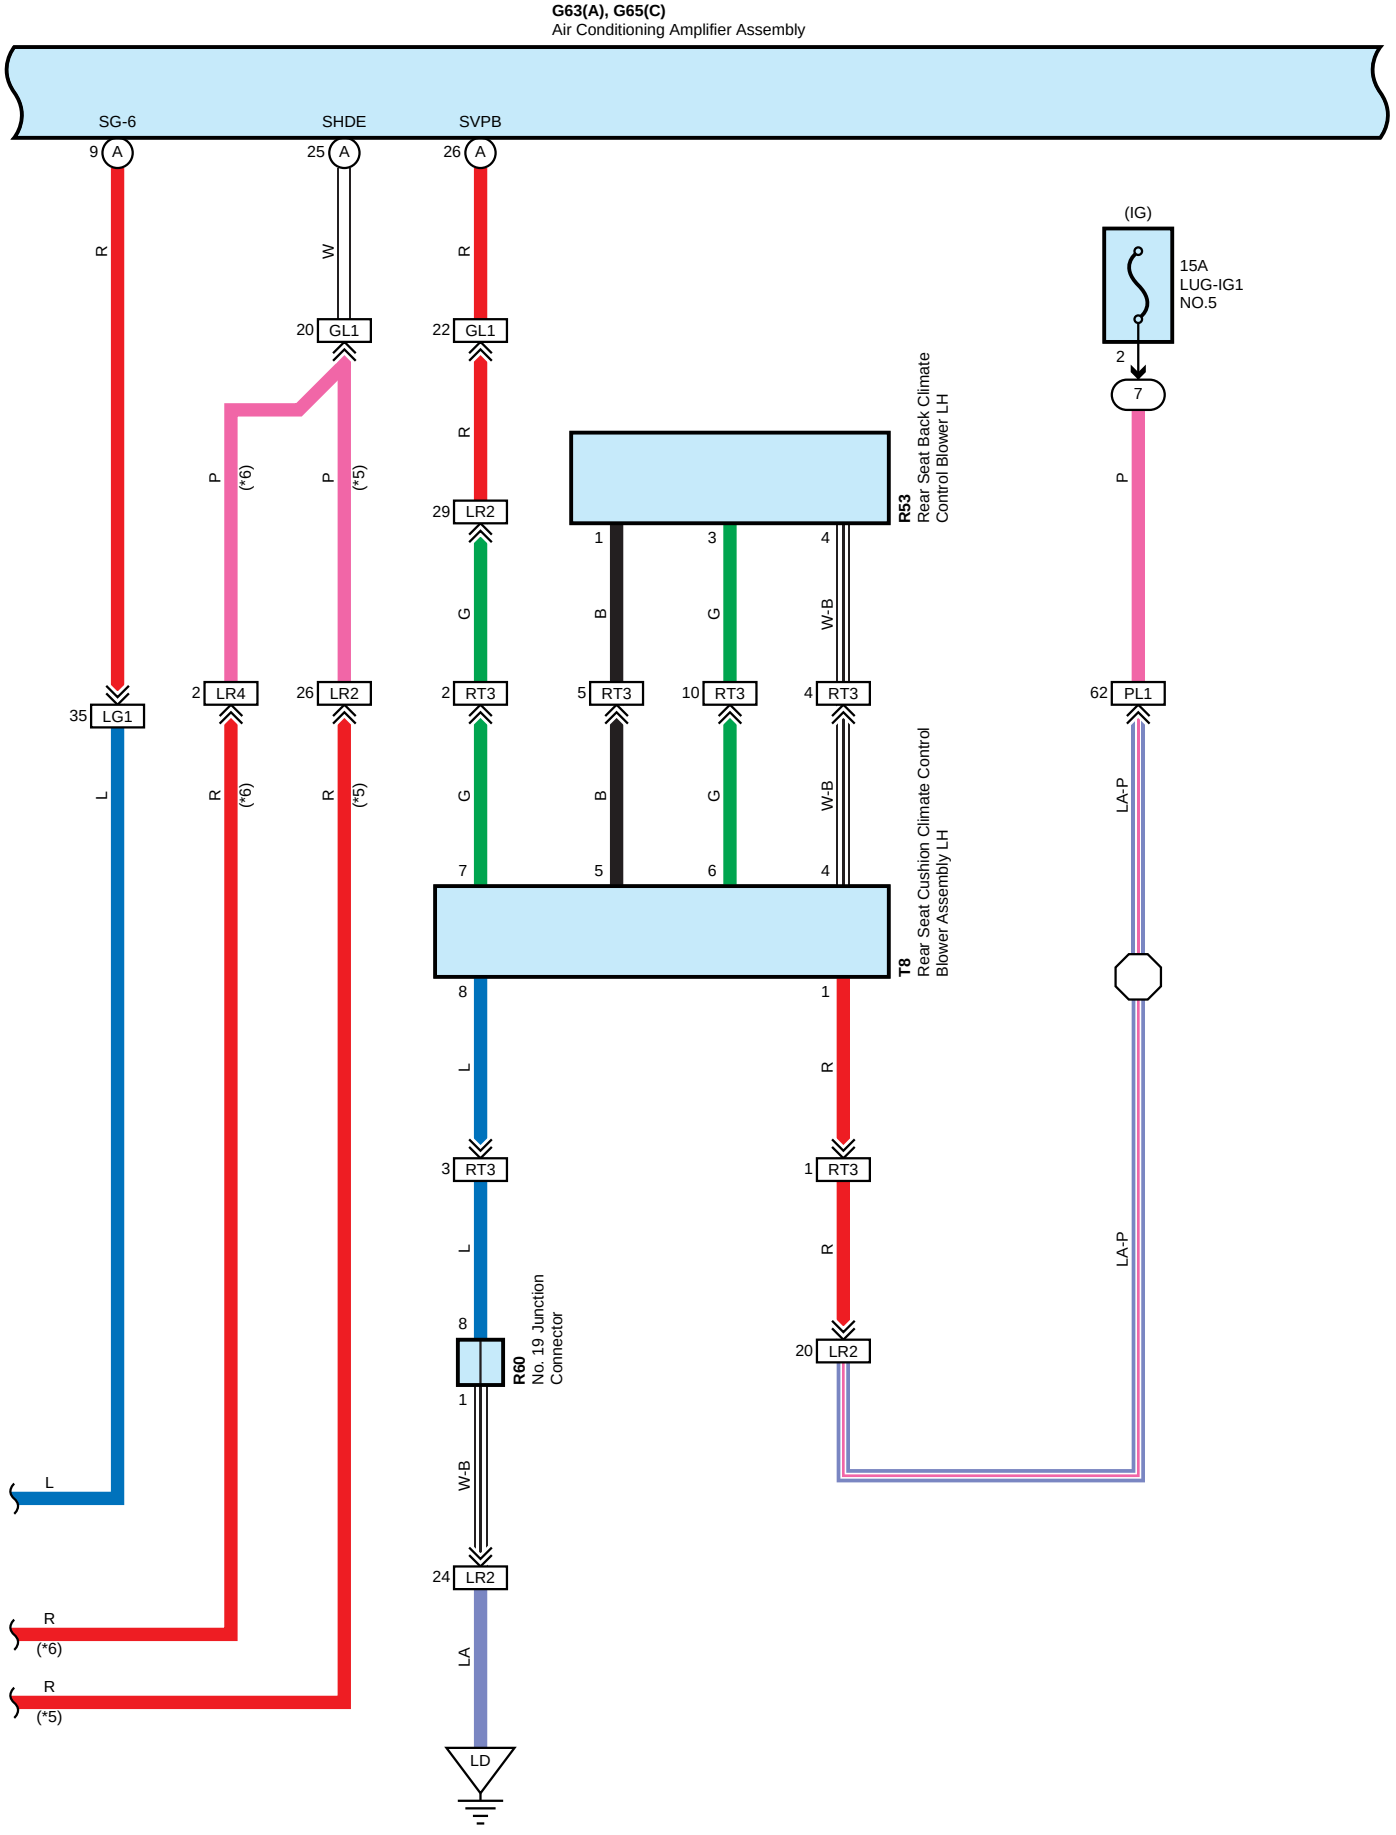

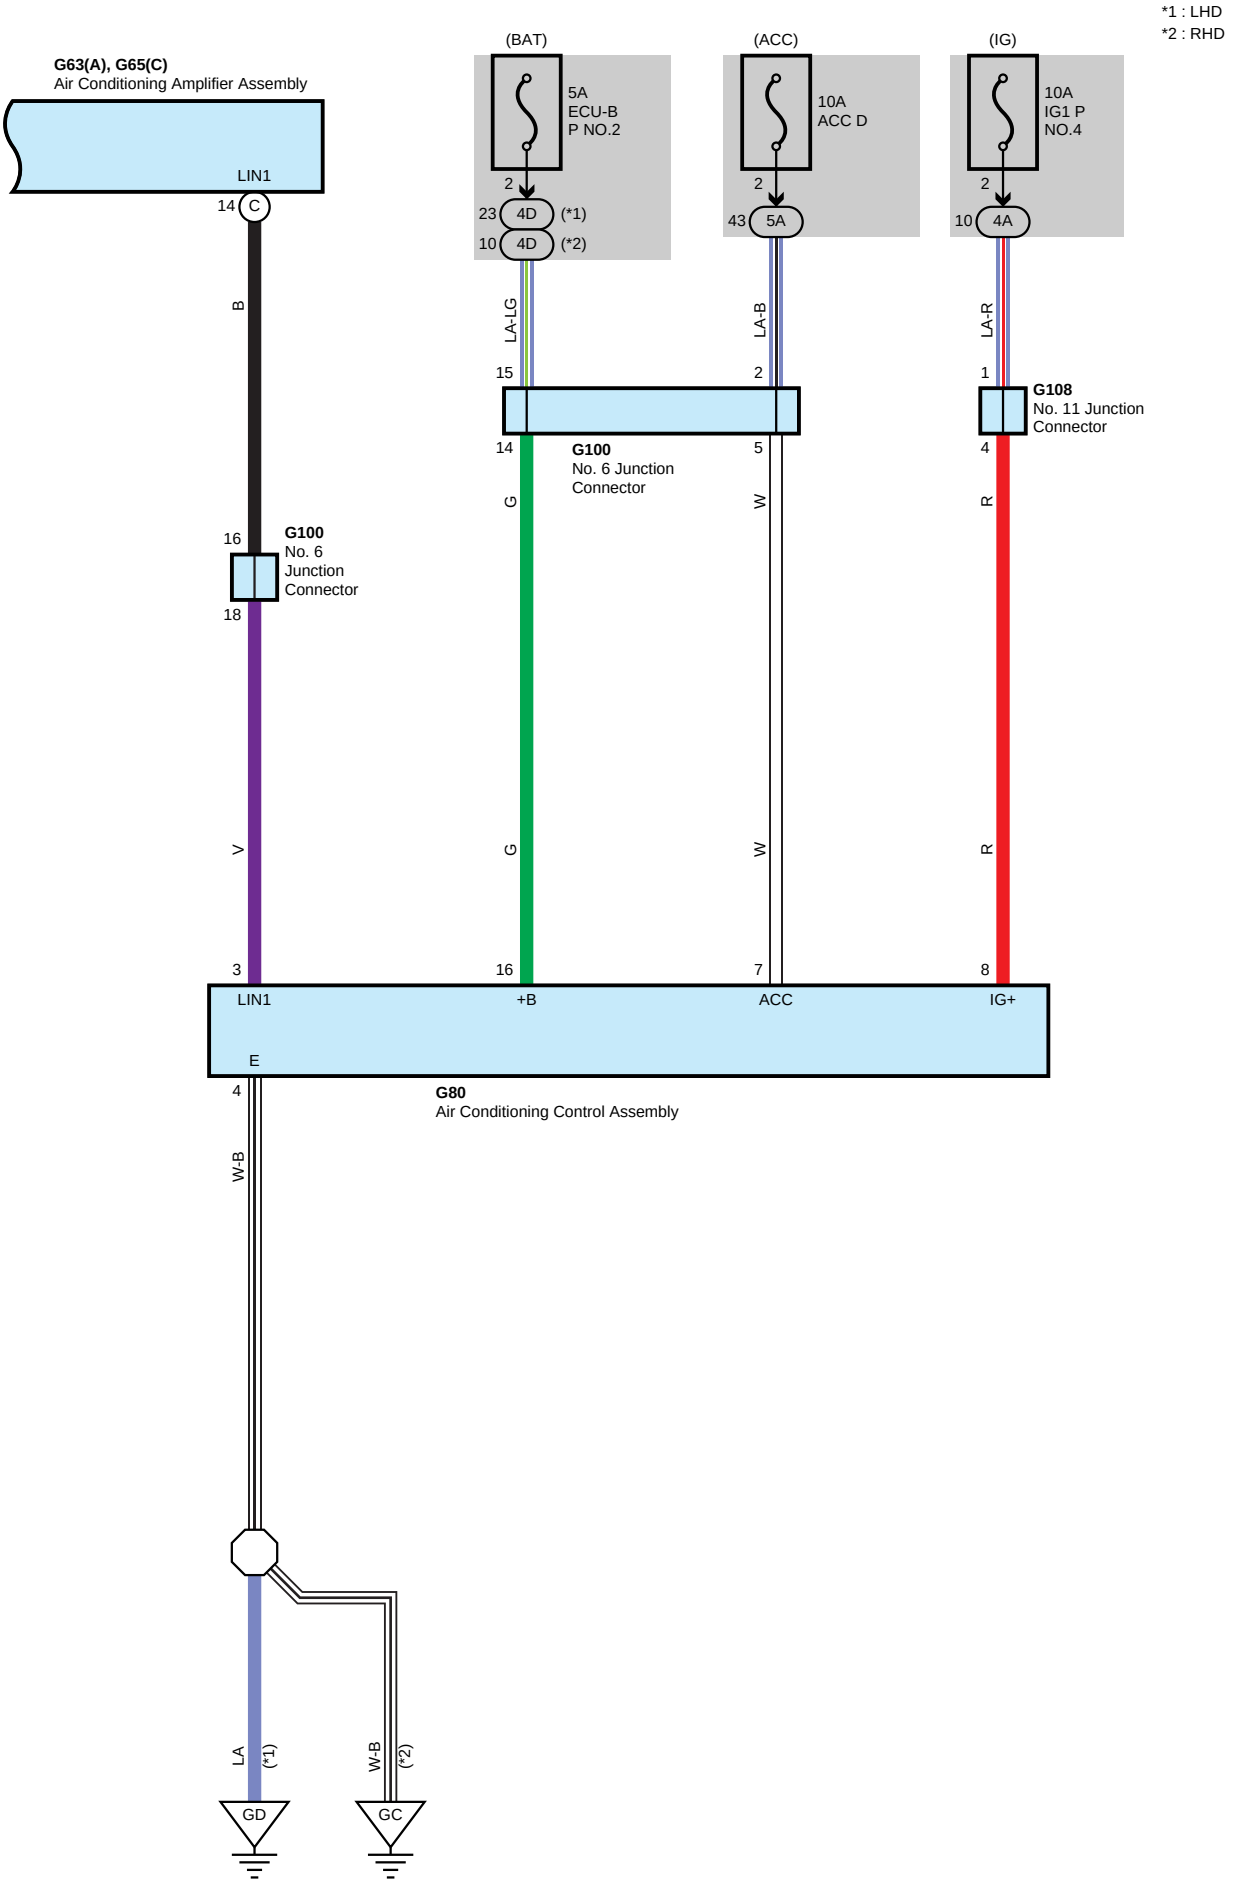
*1 : LHD
*2 : RHD
G63(A), G65(C)
Air Conditioning Amplifier Assembly
LIN1
14
C
B
16
G100
No. 6
Junction
Connector
18
V
3
LIN1
(BAT)
5A
ECU-B
P NO.2
2
23
4D
(*1)
10
4D
(*2)
LA-LG
15
14
G100
No. 6 Junction
Connector
G
16
+B
(ACC)
10A
ACC D
2
43
5A
LA-B
2
5
W
7
ACC
(IG)
10A
IG1 P
NO.4
2
10
4A
LA-R
1
G108
No. 11 Junction
Connector
4
R
8
IG+
E
4
G80
Air Conditioning Control Assembly
W-B
LA
(*1)
W-B
(*2)
GD
GC

G12
Black

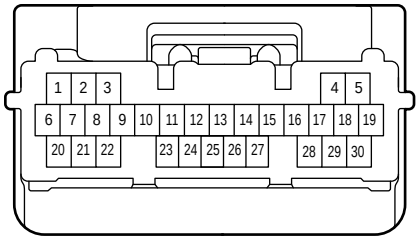

90980-12C62

G34
Black

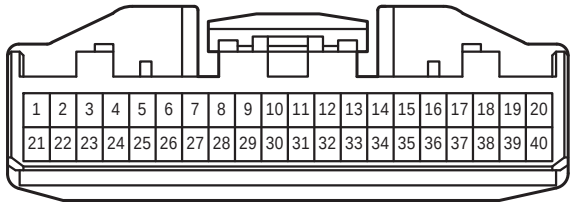

90980-12557

G63
White

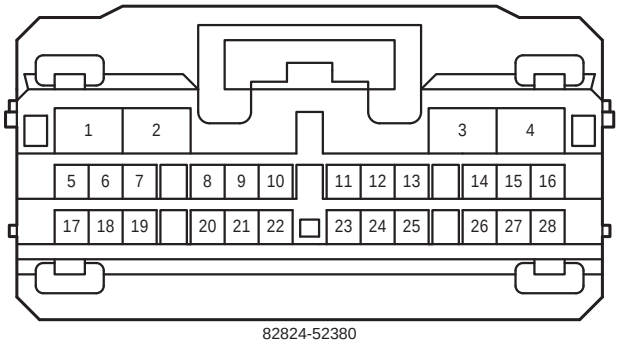

82824-52380

G65
White

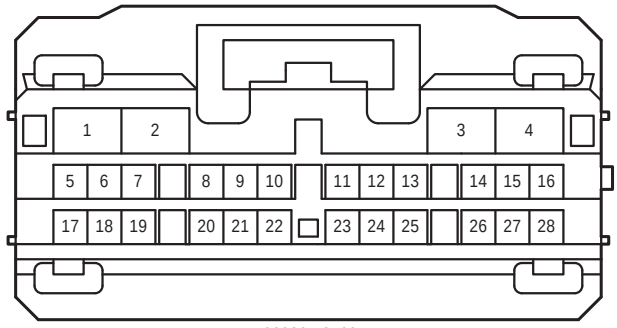

90980-12760

G80
White

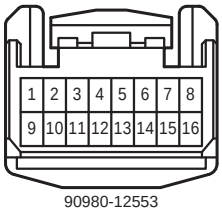

90980-12553

G100
Black

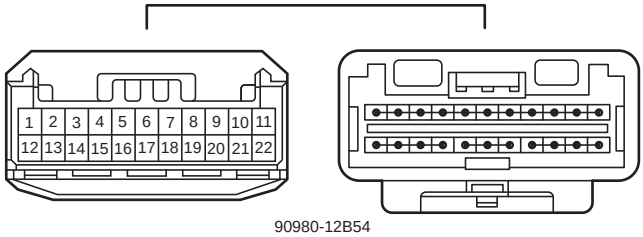

90980-12B54

G108
Black

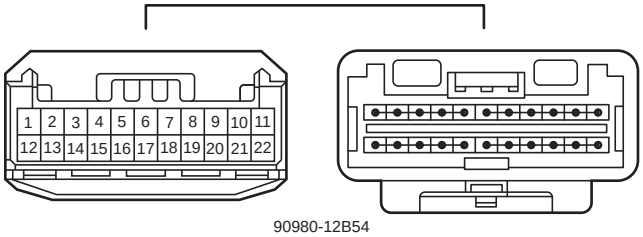

90980-12B54

G120
White

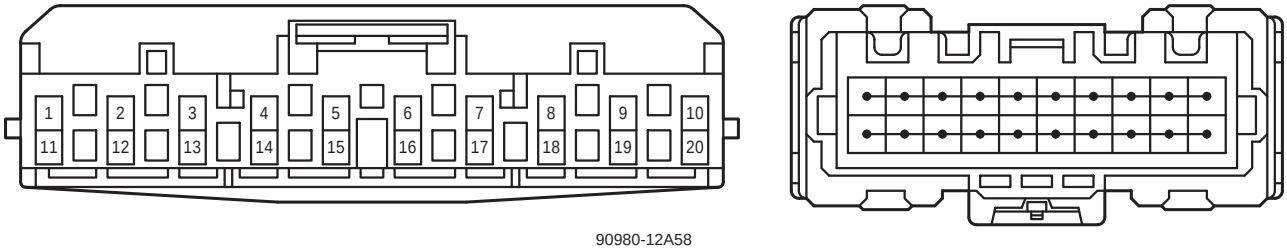

90980-12A58

L80
White

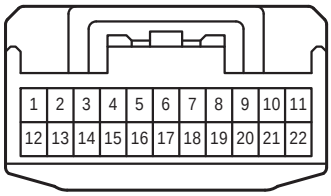

90980-12372

L116
White

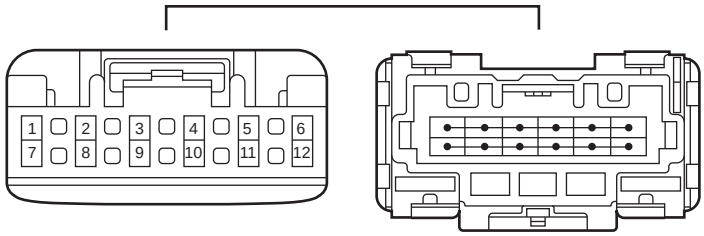

90980-12C68

L151
Black

90980-10797

R7
White

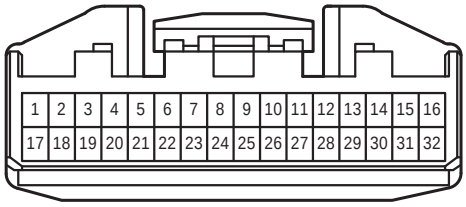

90980-12556

R35
Black

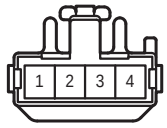

90980-12335

R36
White

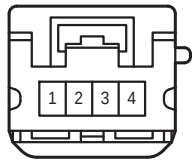

90980-12733

R37
White



R38
White

90980-10996

R39
White

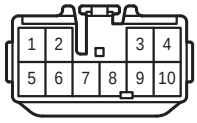

90980-10997

R40
White



90980-10807

R41
White

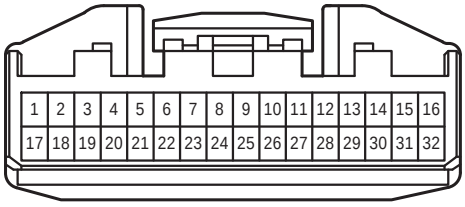

90980-12556

R42
White

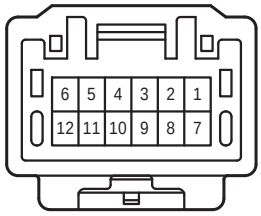

90980-12736

R43
White

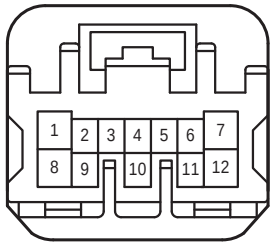

90980-12812

R44
Blue

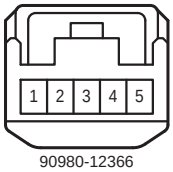

90980-12366

R45
Blue

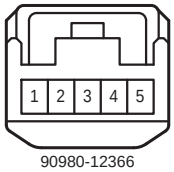

90980-12366

R46
White

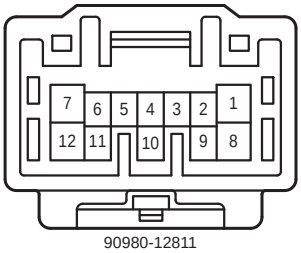

90980-12811

R47
Blue

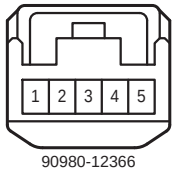

90980-12366

R48
White

90980-11736

R49
White

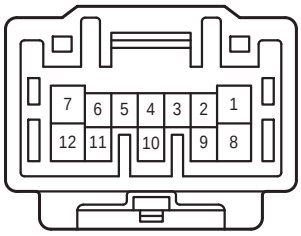

90980-12811

R53
White

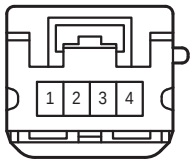

90980-12733

R61
White

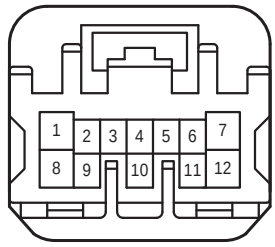

90980-12812

R62
White

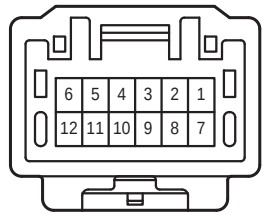

90980-12736

R64
Black

90980-10962

T7
White

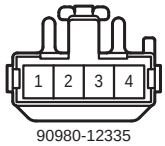

90980-12335

T8
White

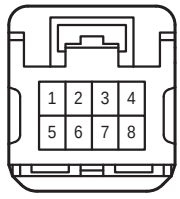

90980-12735

T9
White

90980-11765

T10
Blue

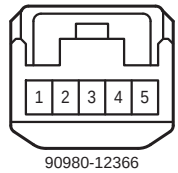

90980-12366

T11
White

90980-11987

T15
White

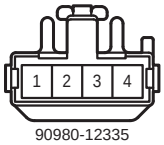

90980-12335

T16
White

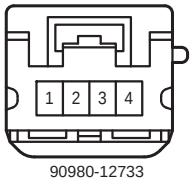

90980-12733

4A
White

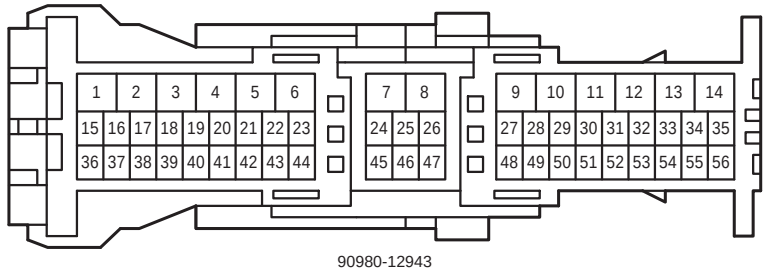

90980-12943

4D
White

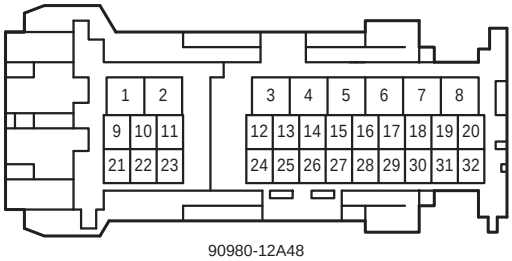

90980-12A48

5A
White

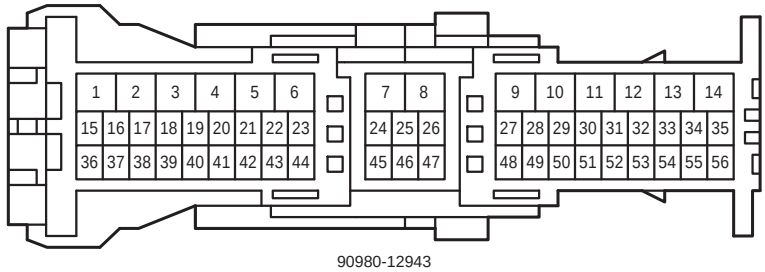

90980-12943

5H
White

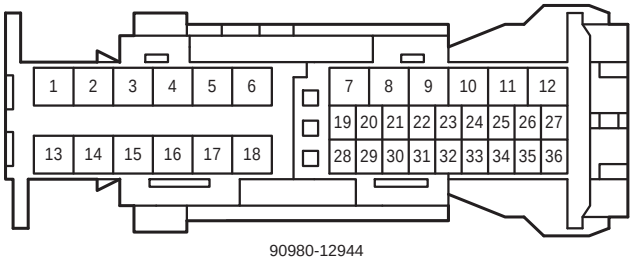

90980-12944

GL1
Gray

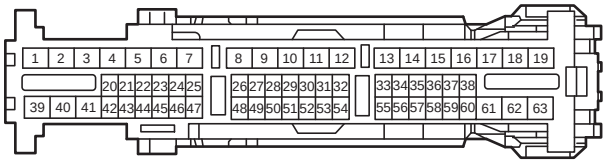

90980-12B20

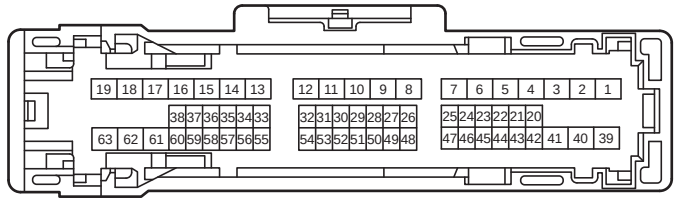

90980-12B19

GL2
White

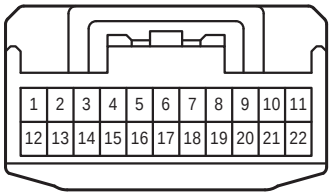

90980-12372

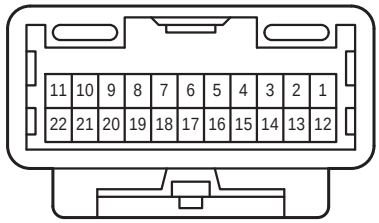

90980-12371

LG1
White

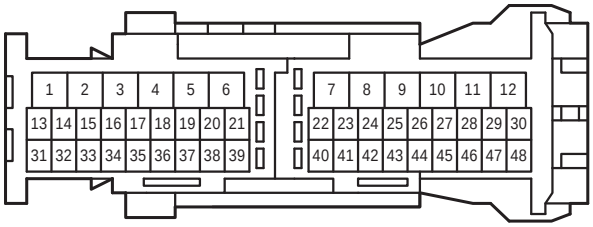

90980-12779

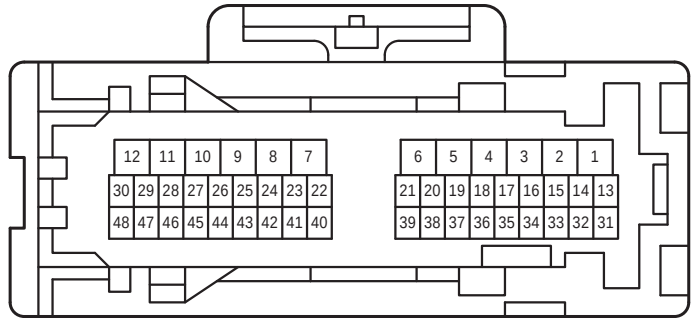

90980-12799

LR1
White

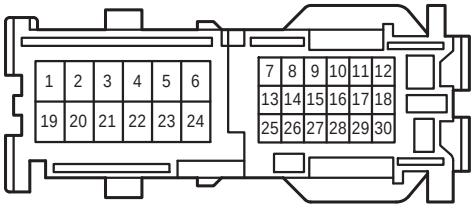

90980-12503

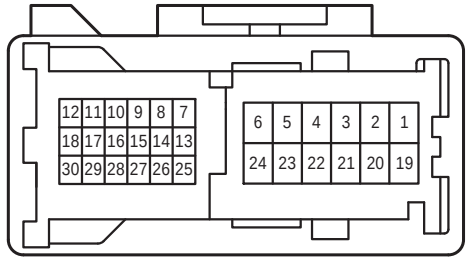

90980-12516

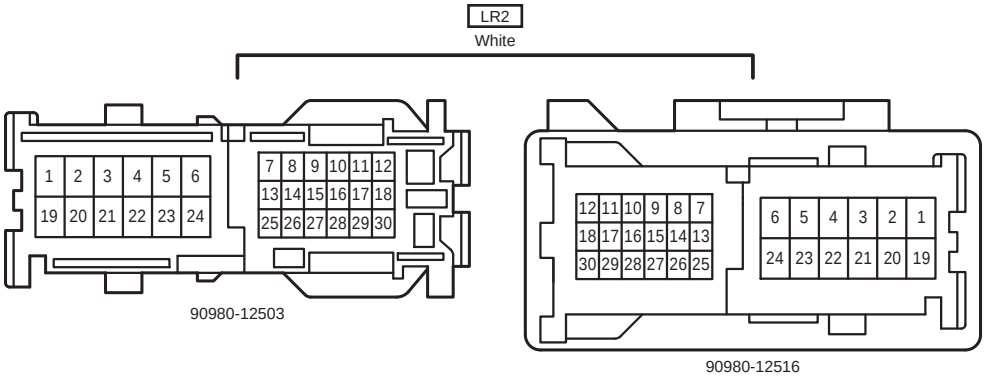
LR2
White
90980-12503
90980-12516

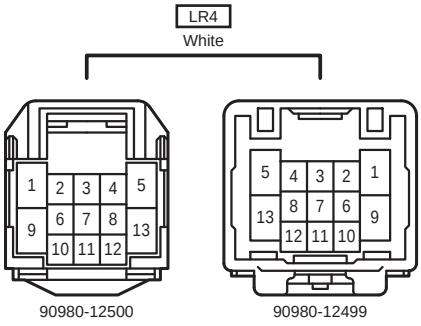
LR4
White
90980-12500
90980-12499

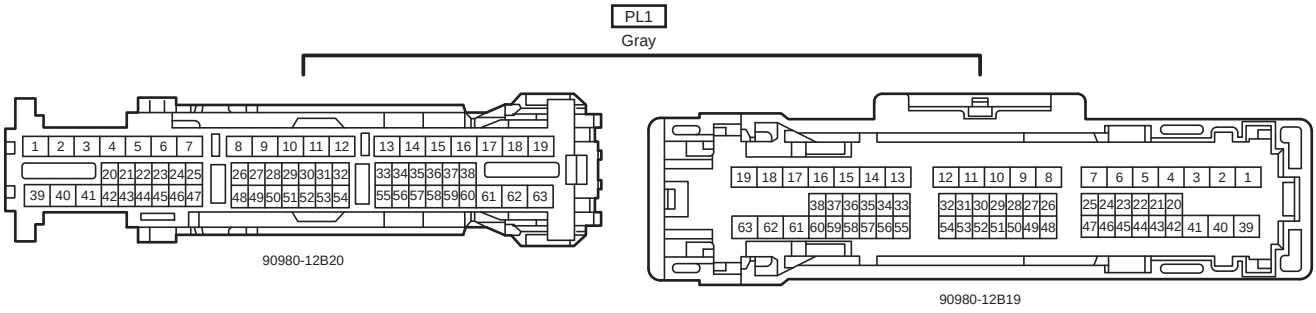
PL1
Gray
90980-12B20
90980-12B19

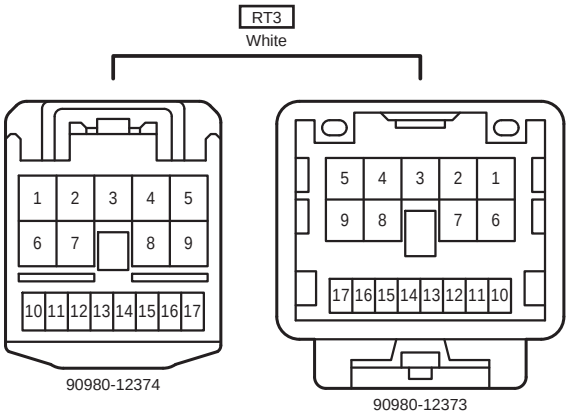
RT3
White
90980-12374
90980-12373

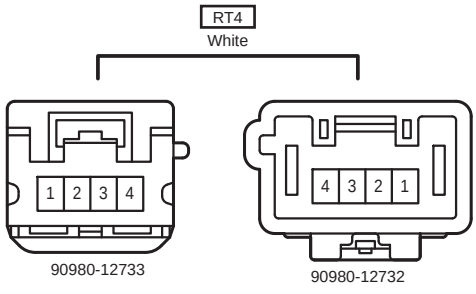
RT4
White
90980-12733
90980-12732

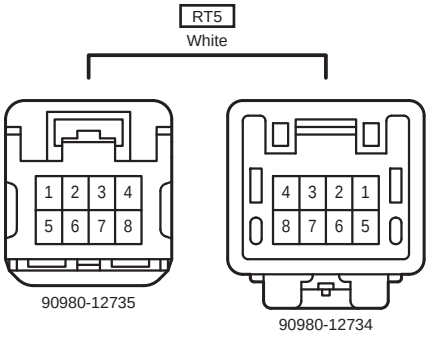
RT5
White
1 2 3 4
5 6 7 8
90980-12735
4 3 2 1
8 7 6 5
90980-12734