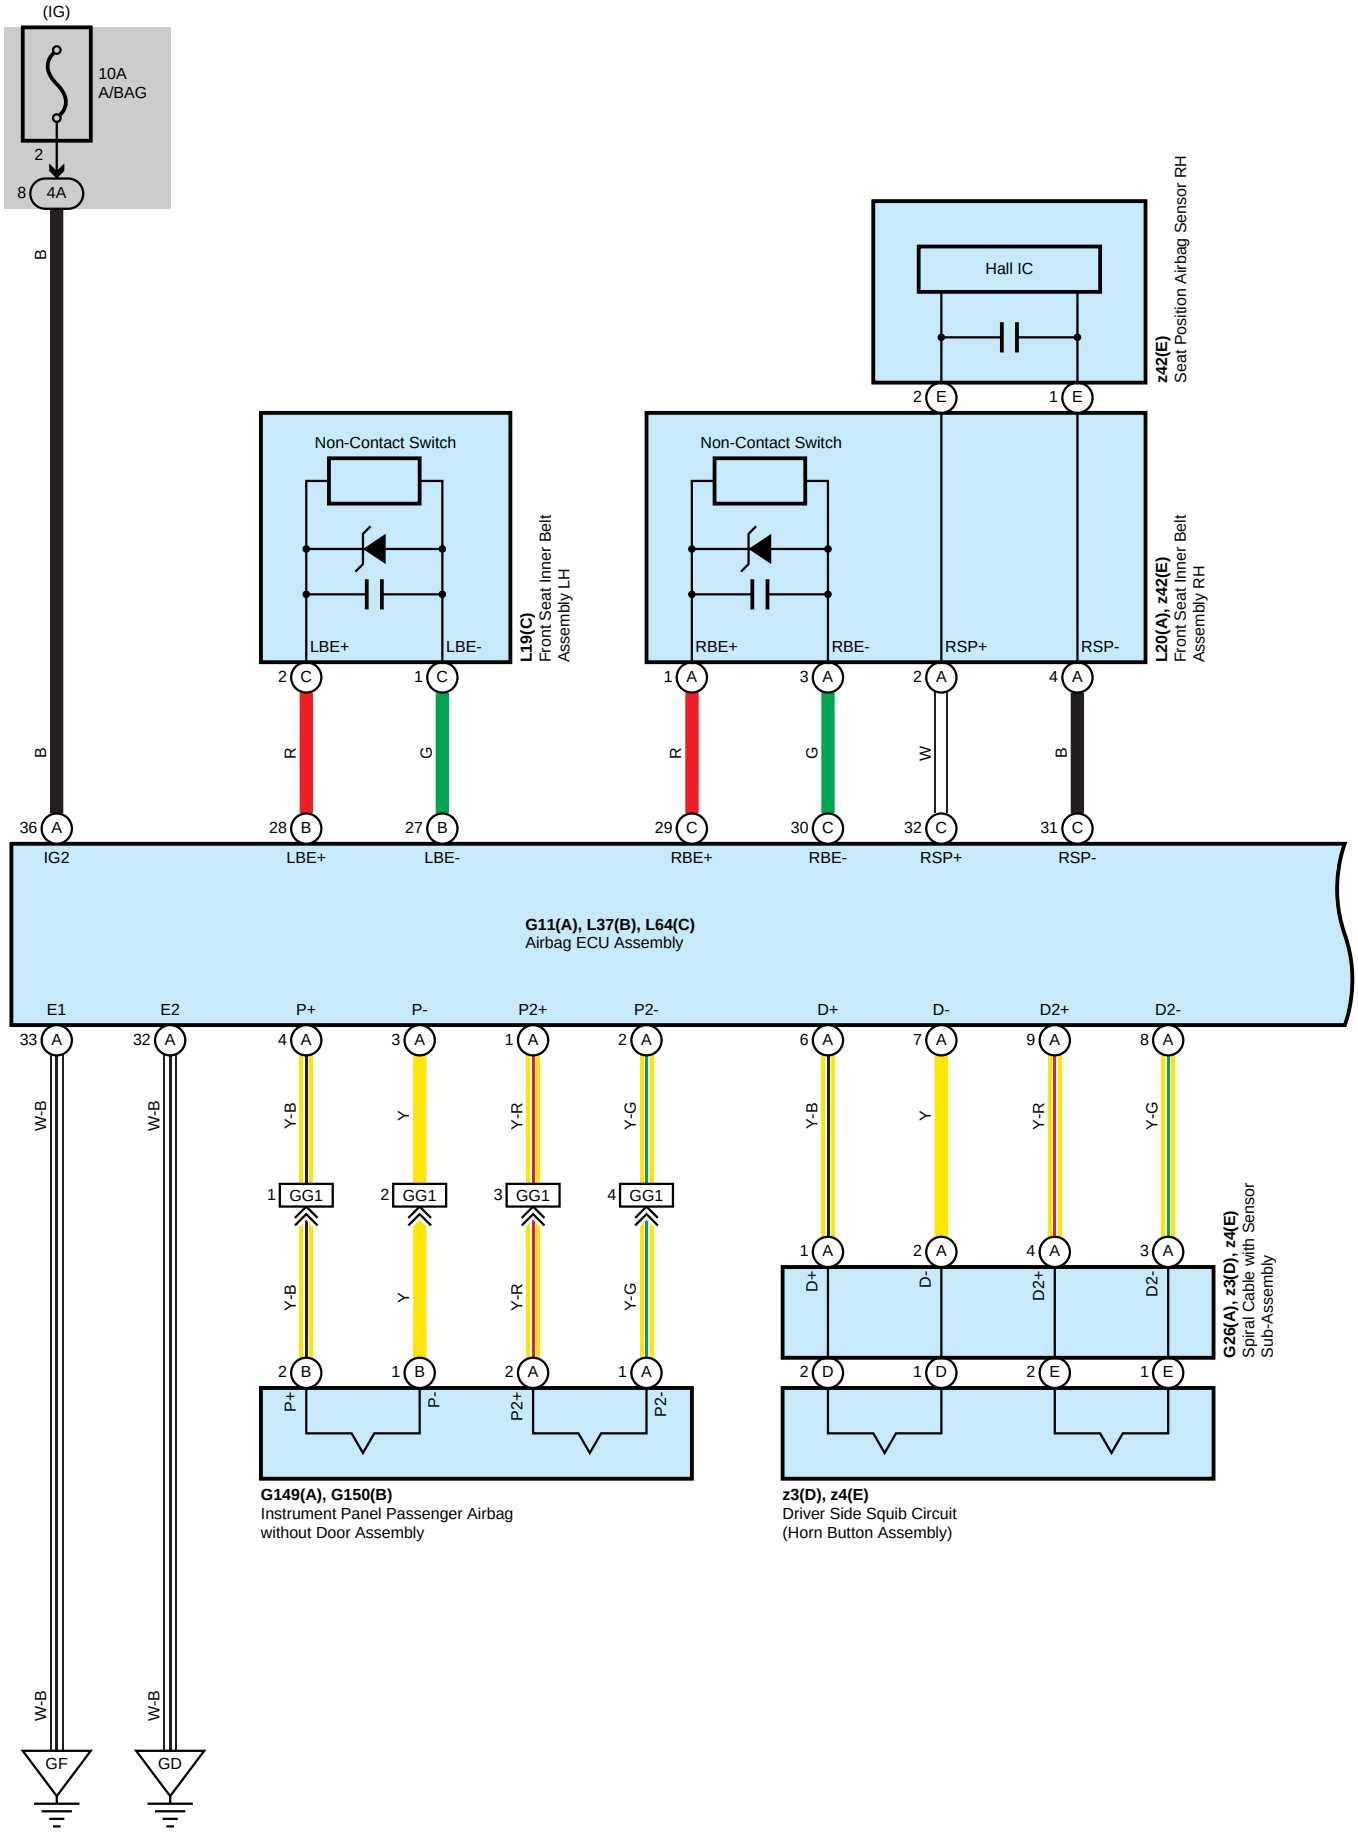
(IG)
10A
A/BAG
2
8
4A
B
B
36
A
IG2
Hall IC
z42(E)
Seat Position Airbag Sensor RH
2 E
1 E
Non-Contact Switch
LBE+
LBE-
L19(C)
Front Seat Inner Belt
Assembly LH
2 C
1 C
R
G
28 B
27 B
LBE+
LBE-
Non-Contact Switch
RBE+
RBE-
RSP+
RSP-
L20(A), z42(E)
Front Seat Inner Belt
Assembly RH
1 A
3 A
2 A
4 A
R
G
W
B
29 C
30 C
32 C
31 C
RBE+
RBE-
RSP+
RSP-
G11(A), L37(B), L64(C)
Airbag ECU Assembly
E1
E2
P+
P-
P2+
P2-
D+
D-
D2+
D2-
33 A
32 A
4 A
3 A
1 A
2 A
6 A
7 A
9 A
8 A
W-B
W-B
Y-B
Y
Y-R
Y-G
1 GG1
2 GG1
3 GG1
4 GG1
Y-B
Y
Y-R
Y-G
1 A
2 A
4 A
3 A
D+
D-
D2+
D2-
G26(A), z3(D), z4(E)
Spiral Cable with Sensor
Sub-Assembly
2 B
1 B
2 A
1 A
P+
P-
P2+
P2-
2 D
1 D
2 E
1 E
G149(A), G150(B)
Instrument Panel Passenger Airbag
without Door Assembly
z3(D), z4(E)
Driver Side Squib Circuit
(Horn Button Assembly)
W-B
W-B
GF
GD

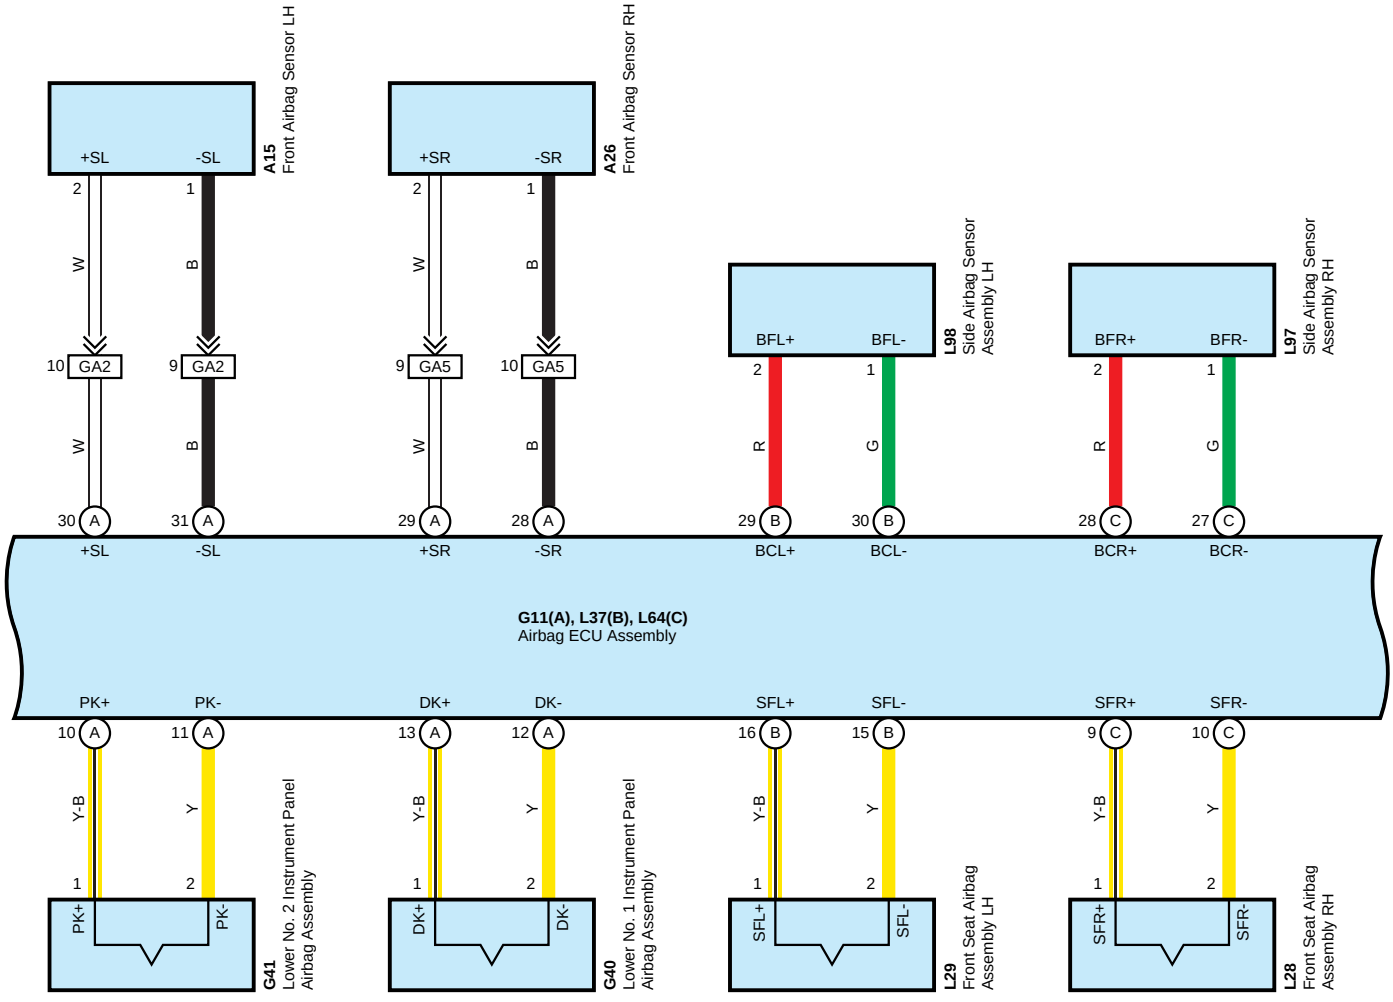
A15
Front Airbag Sensor LH
+SL
-SL
A26
Front Airbag Sensor RH
+SR
-SR
L98
Side Airbag Sensor Assembly LH
BFL+
BFL-
L97
Side Airbag Sensor Assembly RH
BFR+
BFR-
GA2
GA5
W
B
R
G
BCL+
BCL-
BCR+
BCR-
G11(A), L37(B), L64(C)
Airbag ECU Assembly
PK+
PK-
DK+
DK-
SFL+
SFL-
SFR+
SFR-
Y-B
Y
G41
Lower No. 2 Instrument Panel Airbag Assembly
G40
Lower No. 1 Instrument Panel Airbag Assembly
L29
Front Seat Airbag Assembly LH
L28
Front Seat Airbag Assembly RH

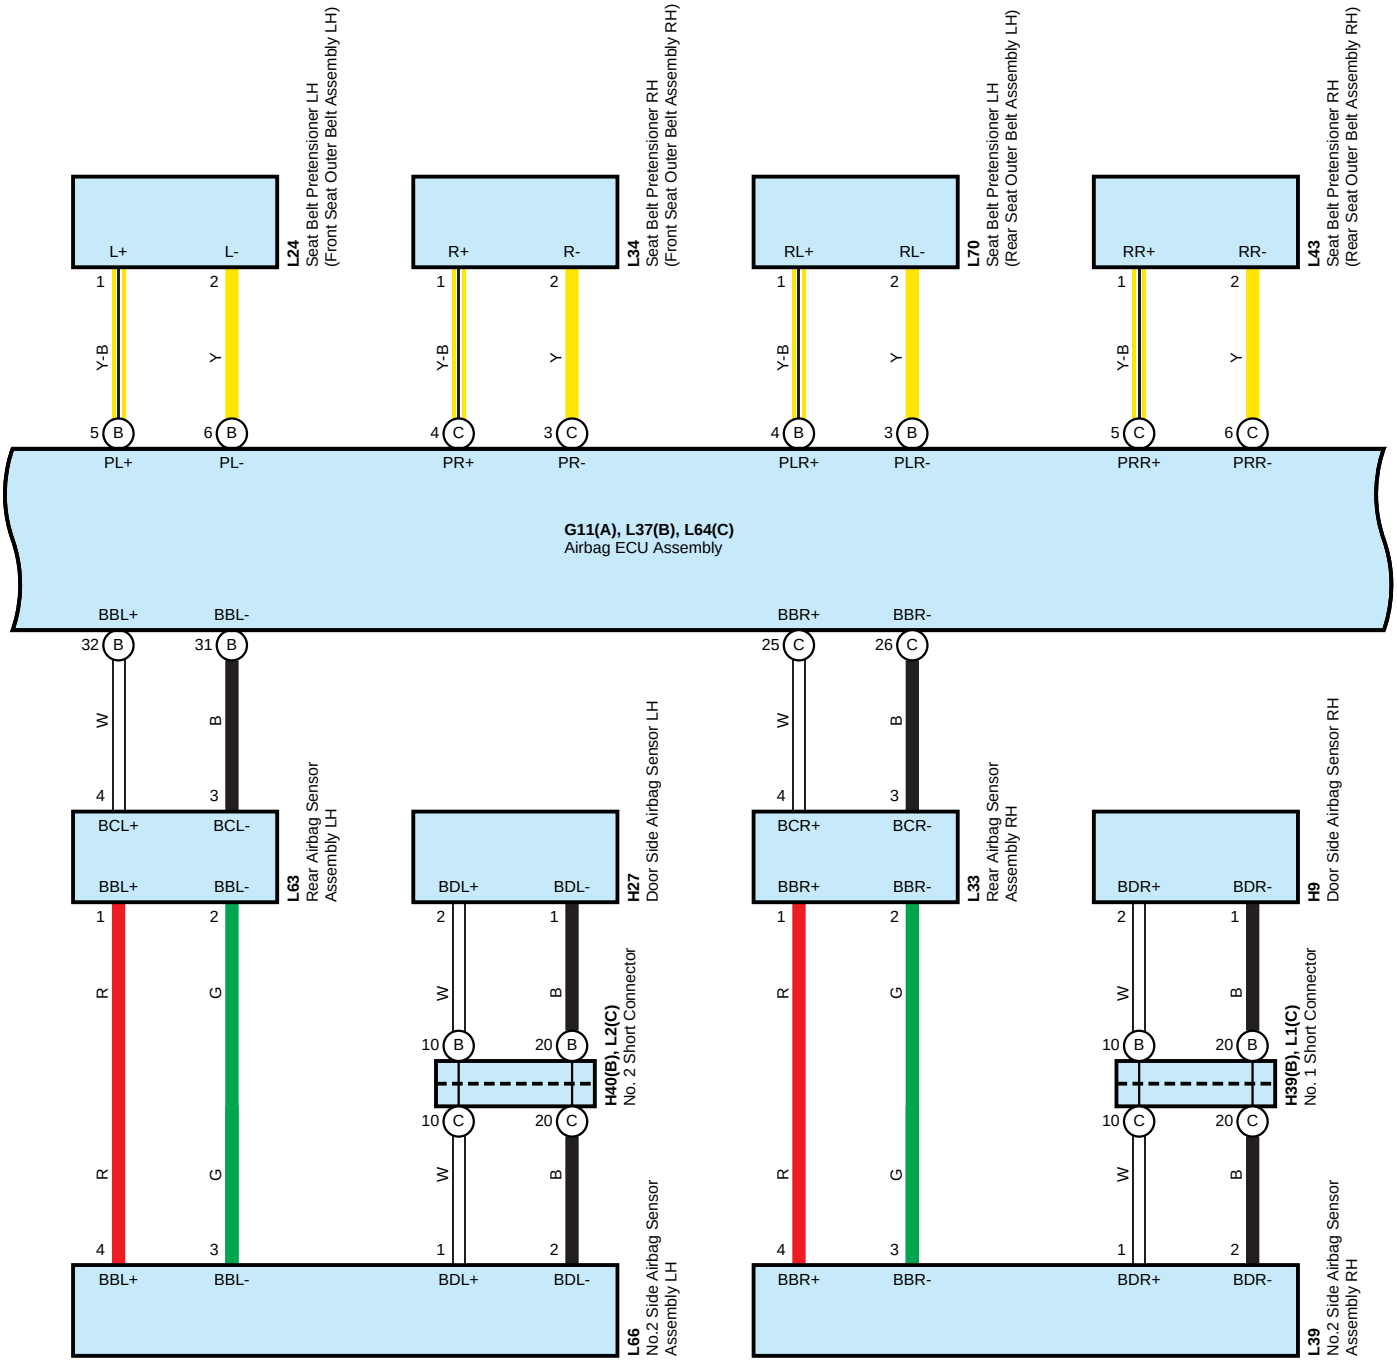
L24
Seat Belt Pretensioner LH
(Front Seat Outer Belt Assembly LH)
L+
L-
L34
Seat Belt Pretensioner RH
(Front Seat Outer Belt Assembly RH)
R+
R-
L70
Seat Belt Pretensioner LH
(Rear Seat Outer Belt Assembly LH)
RL+
RL-
L43
Seat Belt Pretensioner RH
(Rear Seat Outer Belt Assembly RH)
RR+
RR-
Y-B
Y
PL+
PL-
PR+
PR-
PLR+
PLR-
PRR+
PRR-
G11(A), L37(B), L64(C)
Airbag ECU Assembly
BBL+
BBL-
BBR+
BBR-
W
B
BCL+
BCL-
L63
Rear Airbag Sensor
Assembly LH
BCR+
BCR-
L33
Rear Airbag Sensor
Assembly RH
BDL+
BDL-
H27
Door Side Airbag Sensor LH
BDR+
BDR-
H9
Door Side Airbag Sensor RH
R
G
H40(B), L2(C)
No. 2 Short Connector
H39(B), L1(C)
No. 1 Short Connector
L66
No.2 Side Airbag Sensor
Assembly LH
L39
No.2 Side Airbag Sensor
Assembly RH

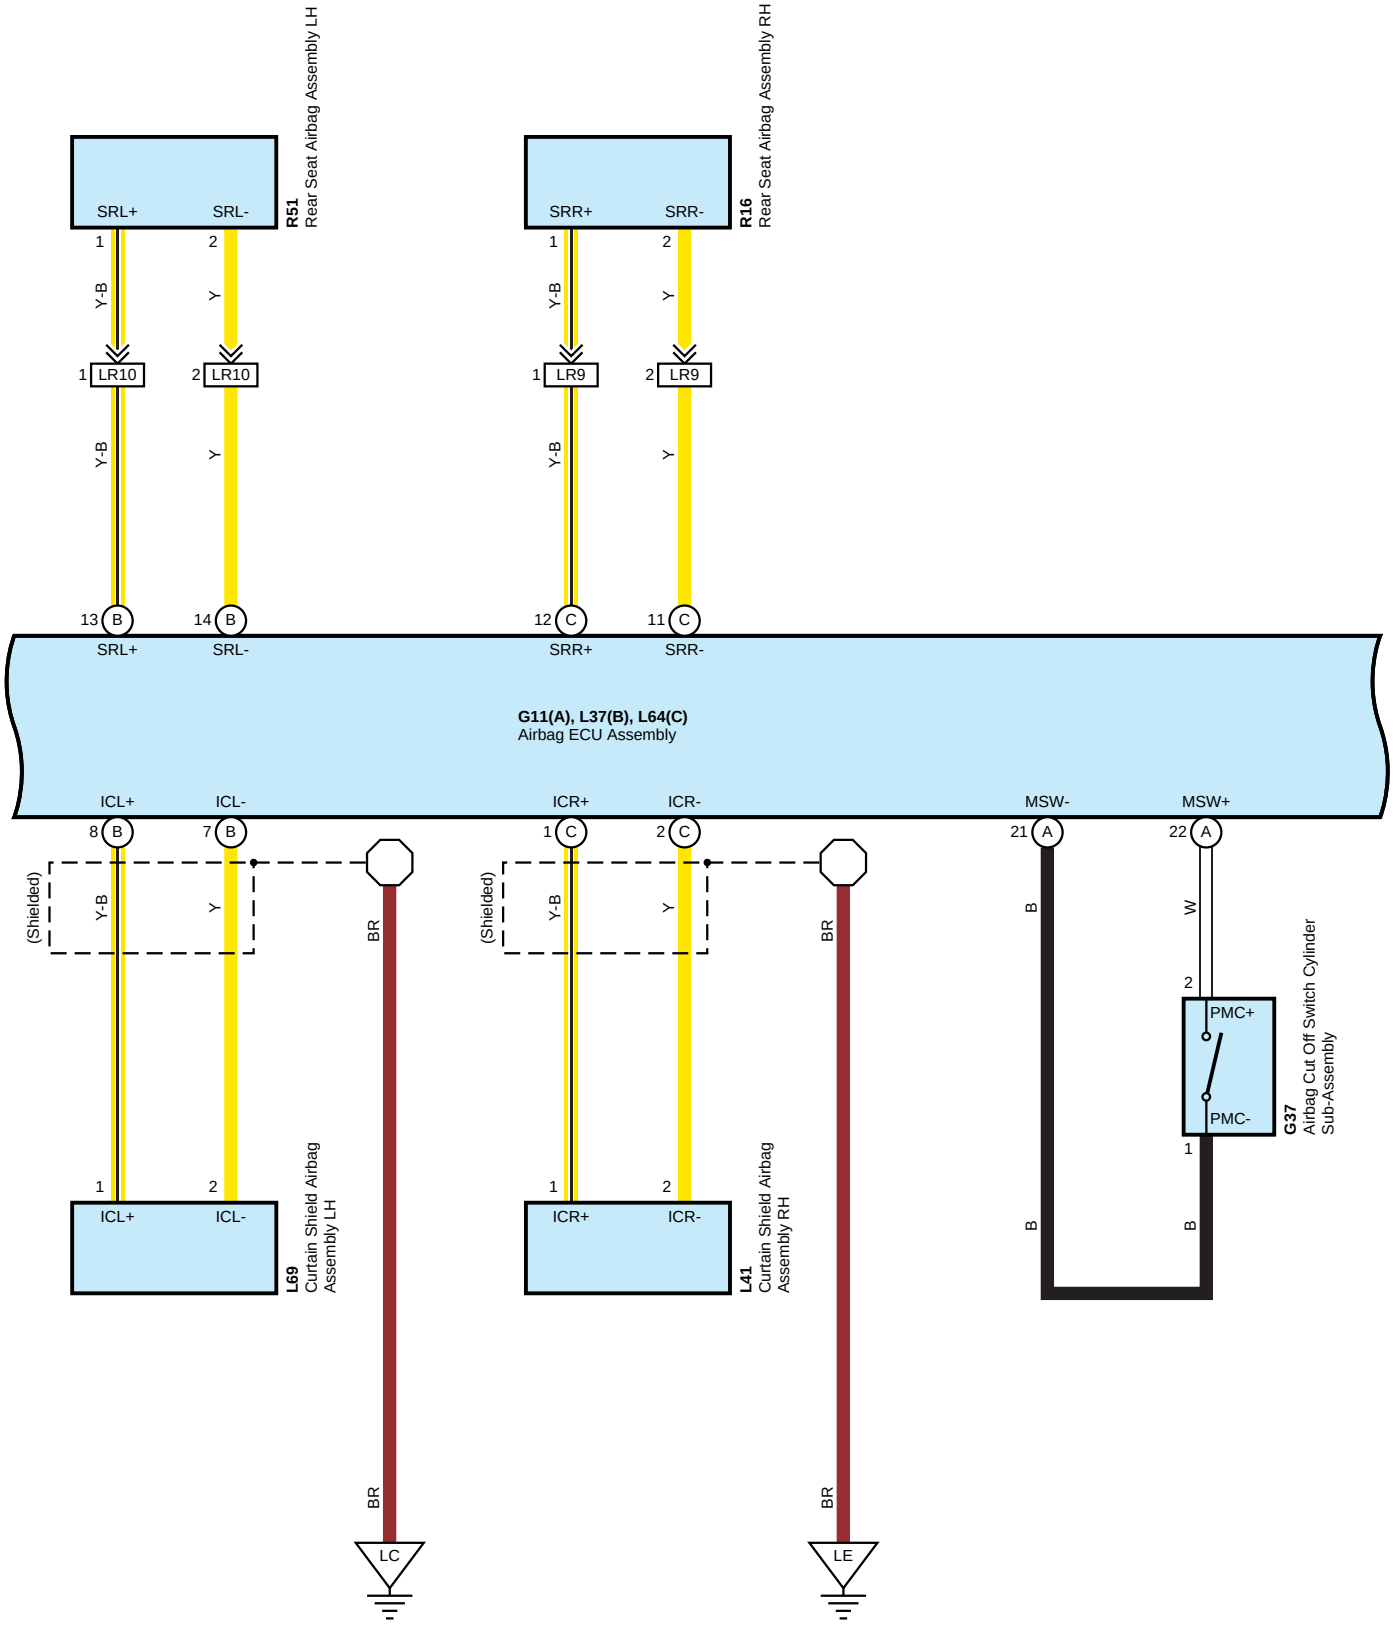
R51
Rear Seat Airbag Assembly LH
SRL+
SRL-
R16
Rear Seat Airbag Assembly RH
SRR+
SRR-
Y-B
Y
LR10
LR9
G11(A), L37(B), L64(C)
Airbag ECU Assembly
ICL+
ICL-
ICR+
ICR-
MSW-
MSW+
(Shielded)
BR
LC
LE
L69
Curtain Shield Airbag Assembly LH
L41
Curtain Shield Airbag Assembly RH
B
W
PMC+
PMC-
G37
Airbag Cut Off Switch Cylinder Sub-Assembly

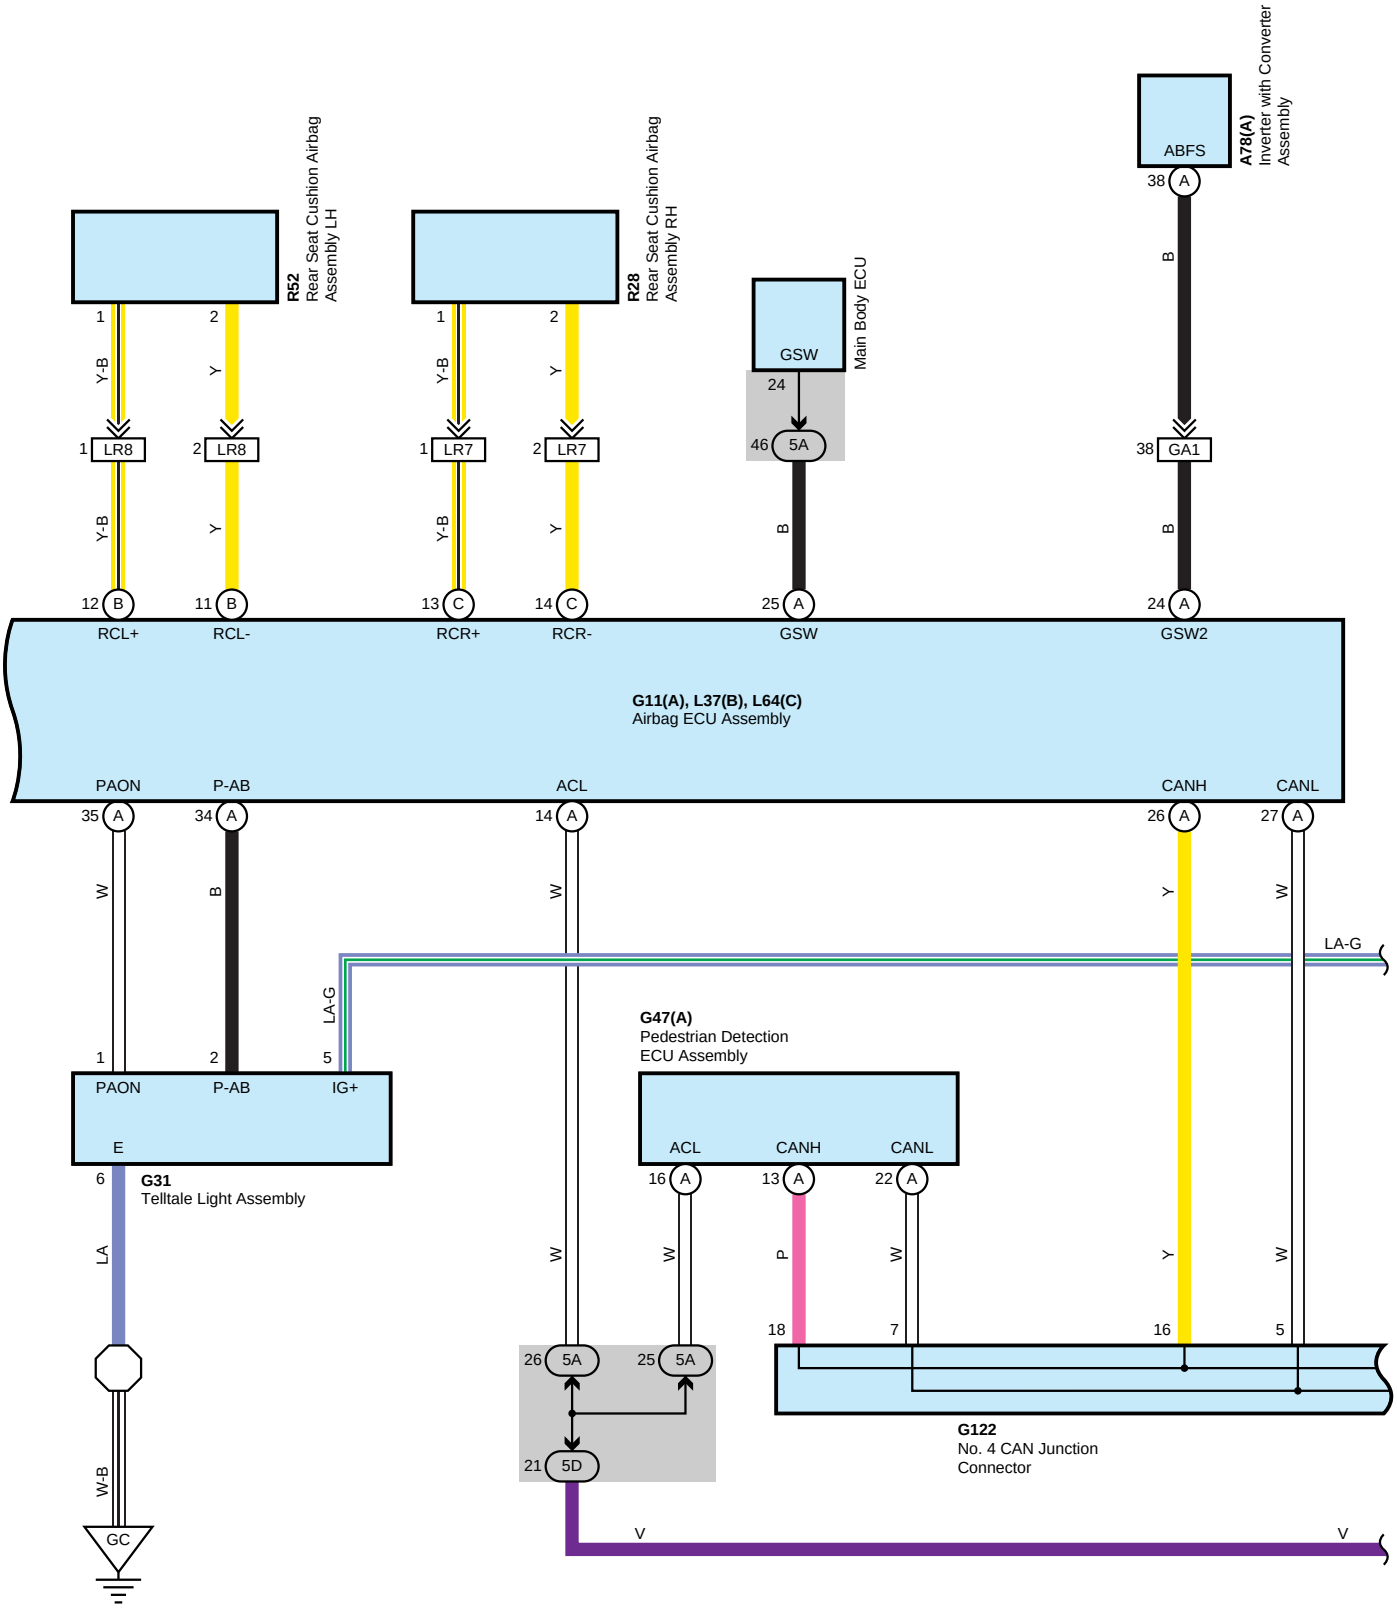
R52
Rear Seat Cushion Airbag Assembly LH
R28
Rear Seat Cushion Airbag Assembly RH
GSW
Main Body ECU
ABFS
A78(A)
Inverter with Converter Assembly
1 Y-B
2 Y
1 LR8
2 LR8
1 LR7
2 LR7
46 5A
38 A
38 GA1
B
12 B
11 B
13 C
14 C
25 A
24 A
RCL+
RCL-
RCR+
RCR-
GSW
GSW2
G11(A), L37(B), L64(C)
Airbag ECU Assembly
PAON
P-AB
ACL
CANH
CANL
35 A
34 A
14 A
26 A
27 A
W
Y
LA-G
G47(A)
Pedestrian Detection ECU Assembly
IG+
E
6
G31
Telltale Light Assembly
LA
W-B
GC
16 A
13 A
22 A
P
18
7
16
5
26 5A
25 5A
21 5D
G122
No. 4 CAN Junction Connector
V

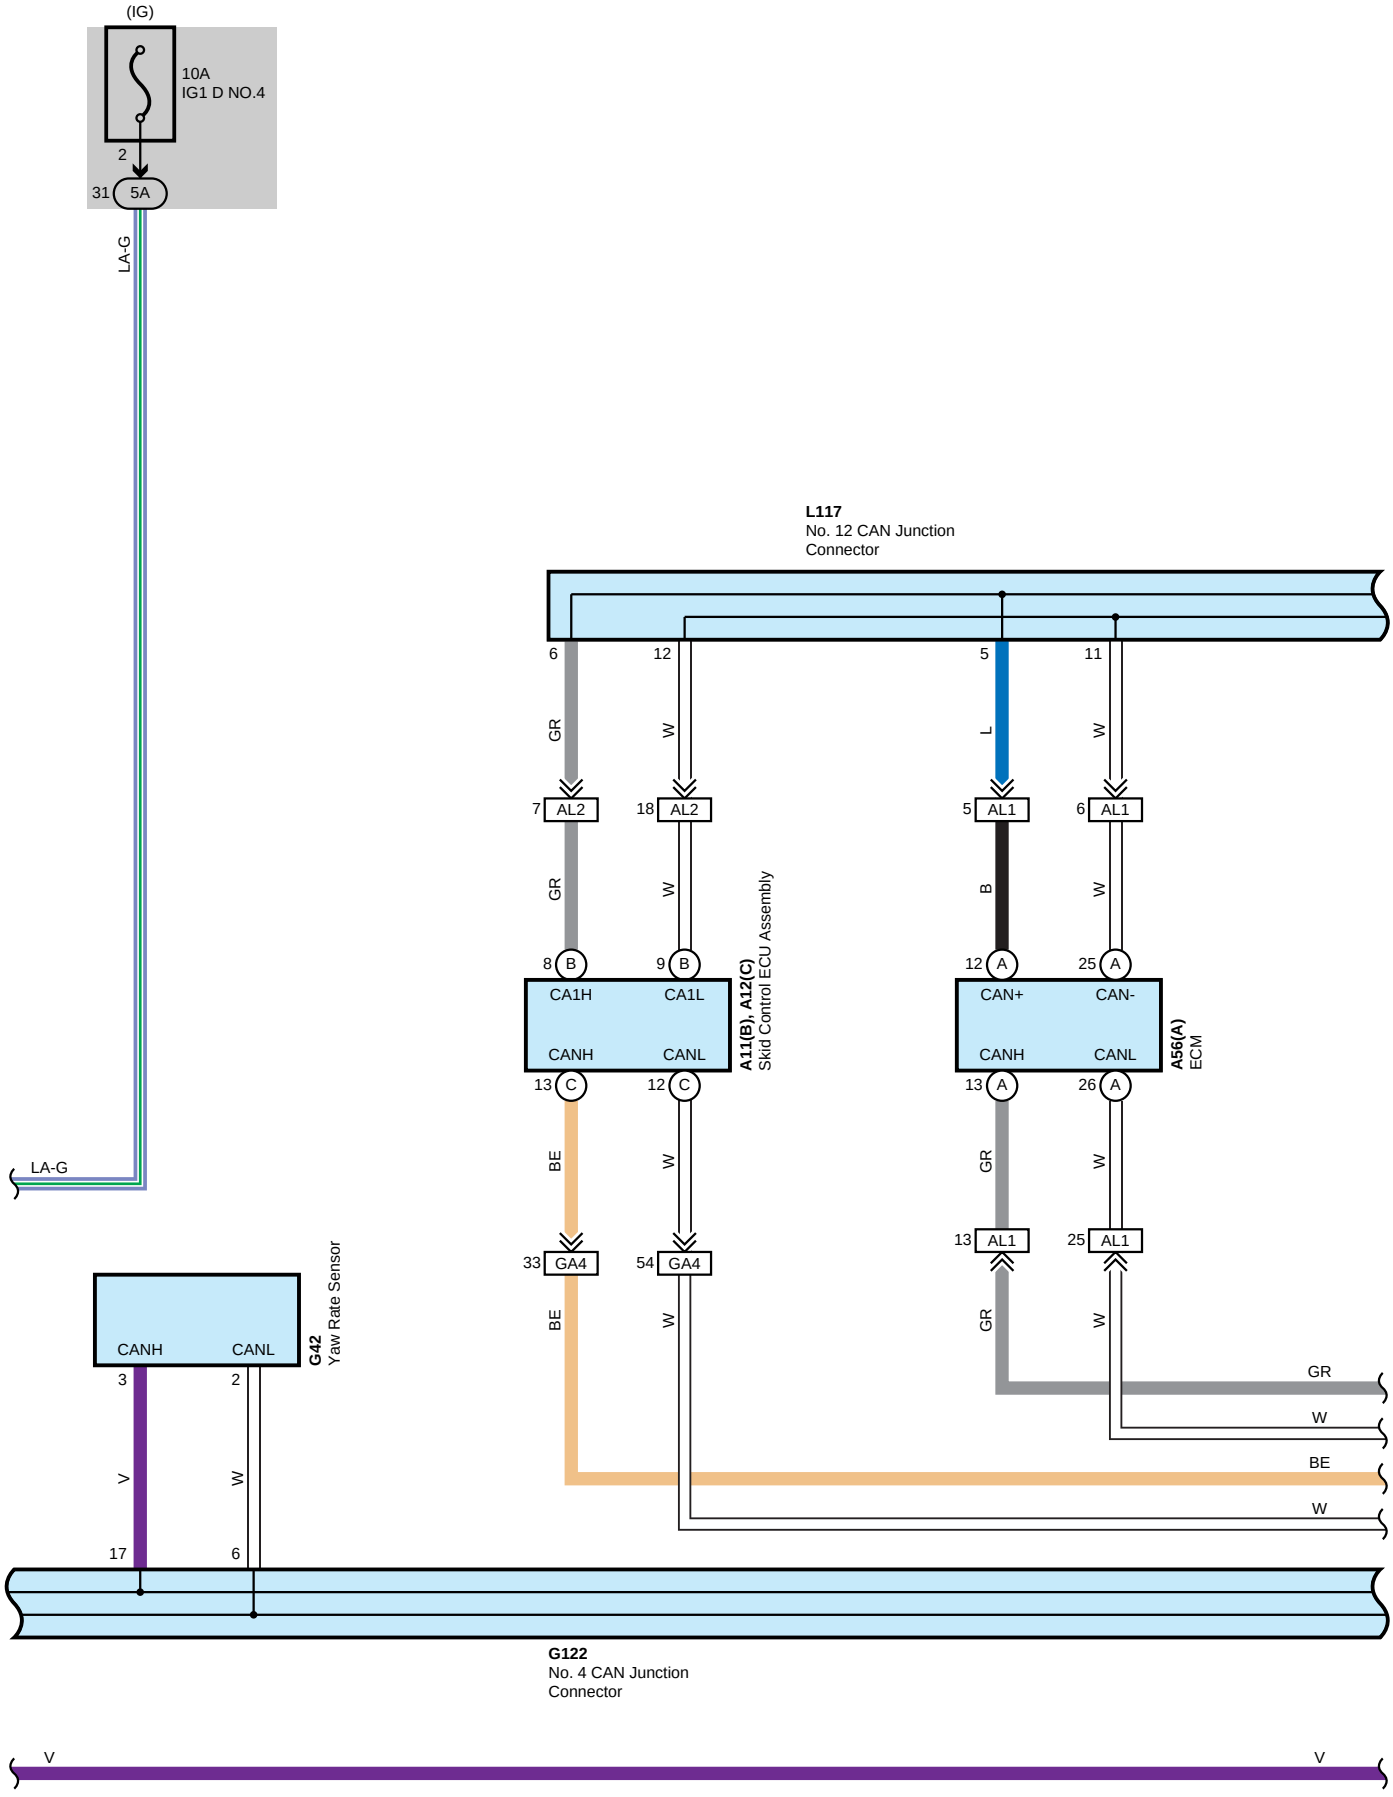
(IG)
10A
IG1 D NO.4
2
31
5A
LA-G
LA-G
L117
No. 12 CAN Junction
Connector
6
12
5
11
GR
W
L
W
7
AL2
18
AL2
5
AL1
6
AL1
GR
W
B
W
8
B
9
B
CA1H
CA1L
CANH
CANL
A11(B), A12(C)
Skid Control ECU Assembly
12
A
25
A
CAN+
CAN-
CANH
CANL
A56(A)
ECM
13
C
12
C
13
A
26
A
BE
W
GR
W
33
GA4
54
GA4
13
AL1
25
AL1
BE
W
GR
W
CANH
CANL
G42
Yaw Rate Sensor
3
2
V
W
17
6
GR
W
BE
W
G122
No. 4 CAN Junction
Connector
V
V

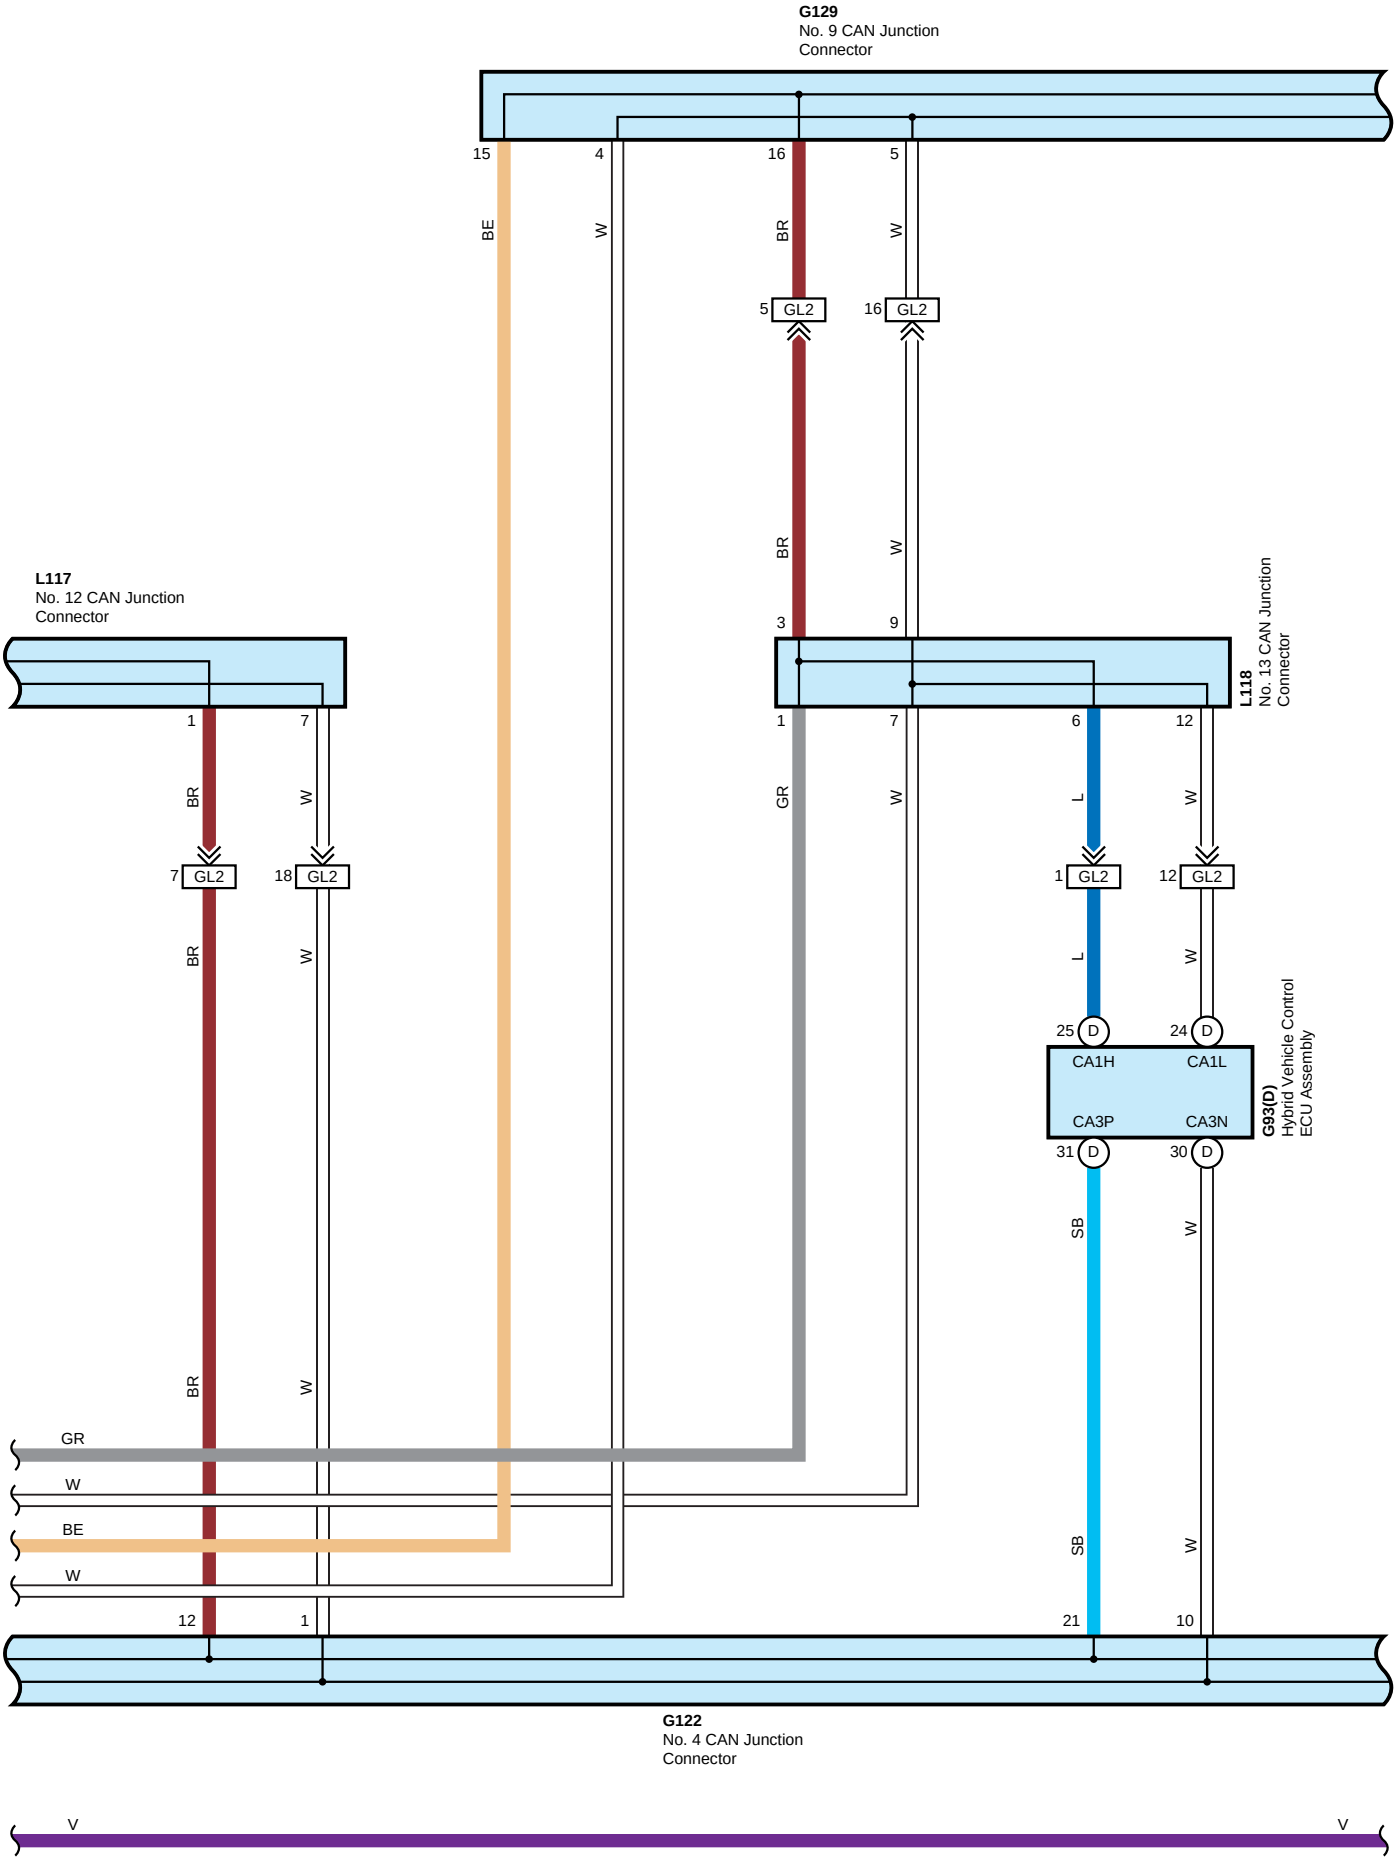
G129
No. 9 CAN Junction Connector
15
4
16
5
BE
W
BR
W
5 GL2
16 GL2
BR
W
L117
No. 12 CAN Junction Connector
3
9
L118
No. 13 CAN Junction Connector
1
7
1
7
6
12
BR
W
GR
W
L
W
7 GL2
18 GL2
1 GL2
12 GL2
BR
W
L
W
25 D
24 D
CA1H
CA1L
CA3P
CA3N
G93(D)
Hybrid Vehicle Control ECU Assembly
31 D
30 D
SB
W
BR
W
GR
W
BE
W
SB
W
12
1
21
10
G122
No. 4 CAN Junction Connector
V
V

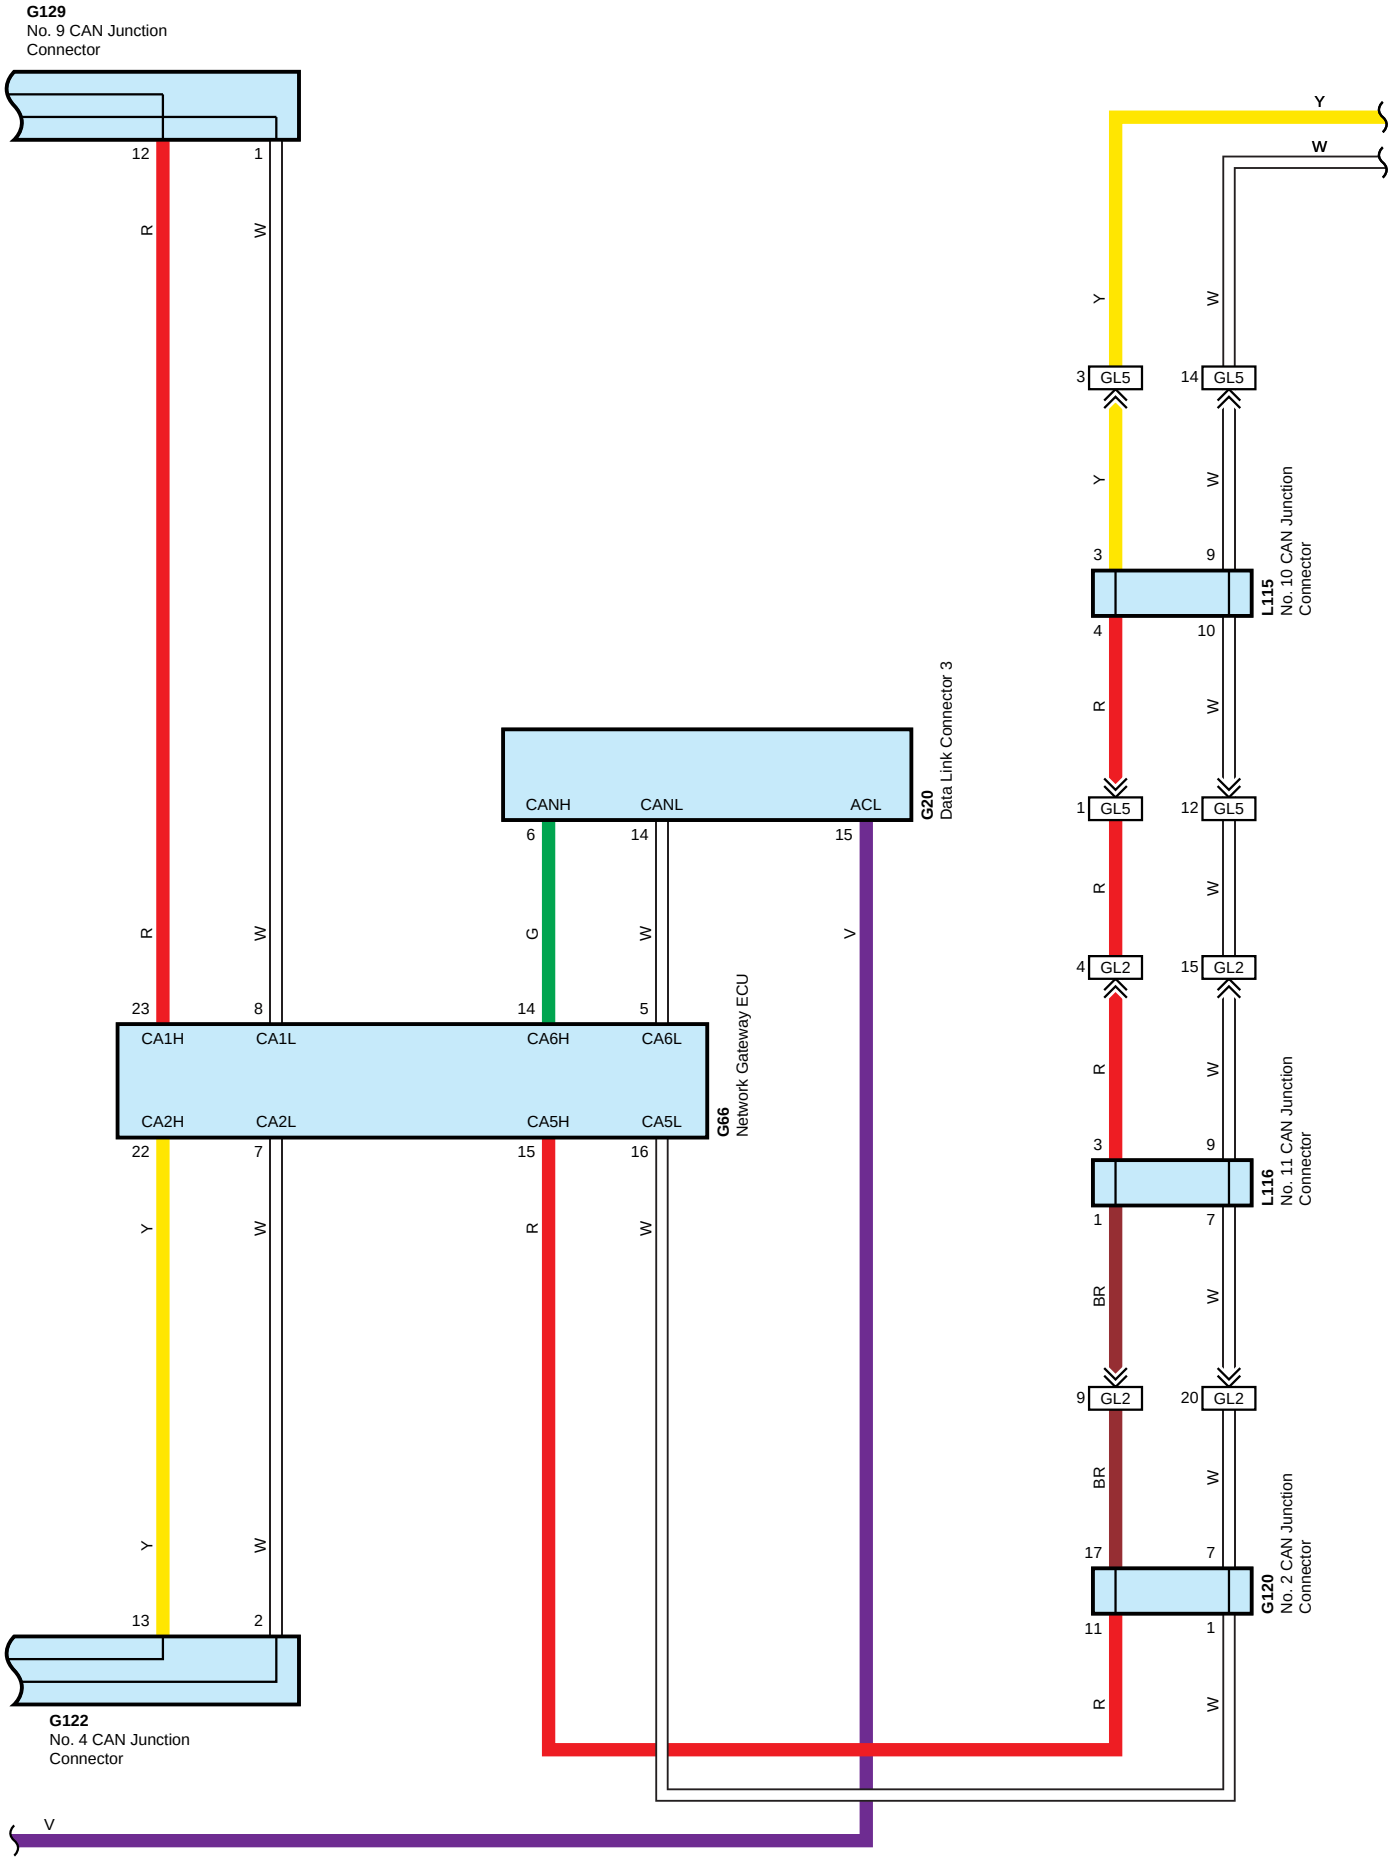
G129
No. 9 CAN Junction
Connector
12
1
R
W
Y
W
3
GL5
14
GL5
Y
W
3
9
L115
No. 10 CAN Junction
Connector
4
10
R
W
CANH
CANL
ACL
G20
Data Link Connector 3
6
14
15
1
GL5
12
GL5
R
W
G
W
V
4
GL2
15
GL2
23
8
14
5
CA1H
CA1L
CA6H
CA6L
CA2H
CA2L
CA5H
CA5L
G66
Network Gateway ECU
22
7
15
16
3
9
L116
No. 11 CAN Junction
Connector
1
7
Y
W
R
W
BR
W
9
GL2
20
GL2
BR
W
17
7
G120
No. 2 CAN Junction
Connector
11
1
13
2
G122
No. 4 CAN Junction
Connector
V

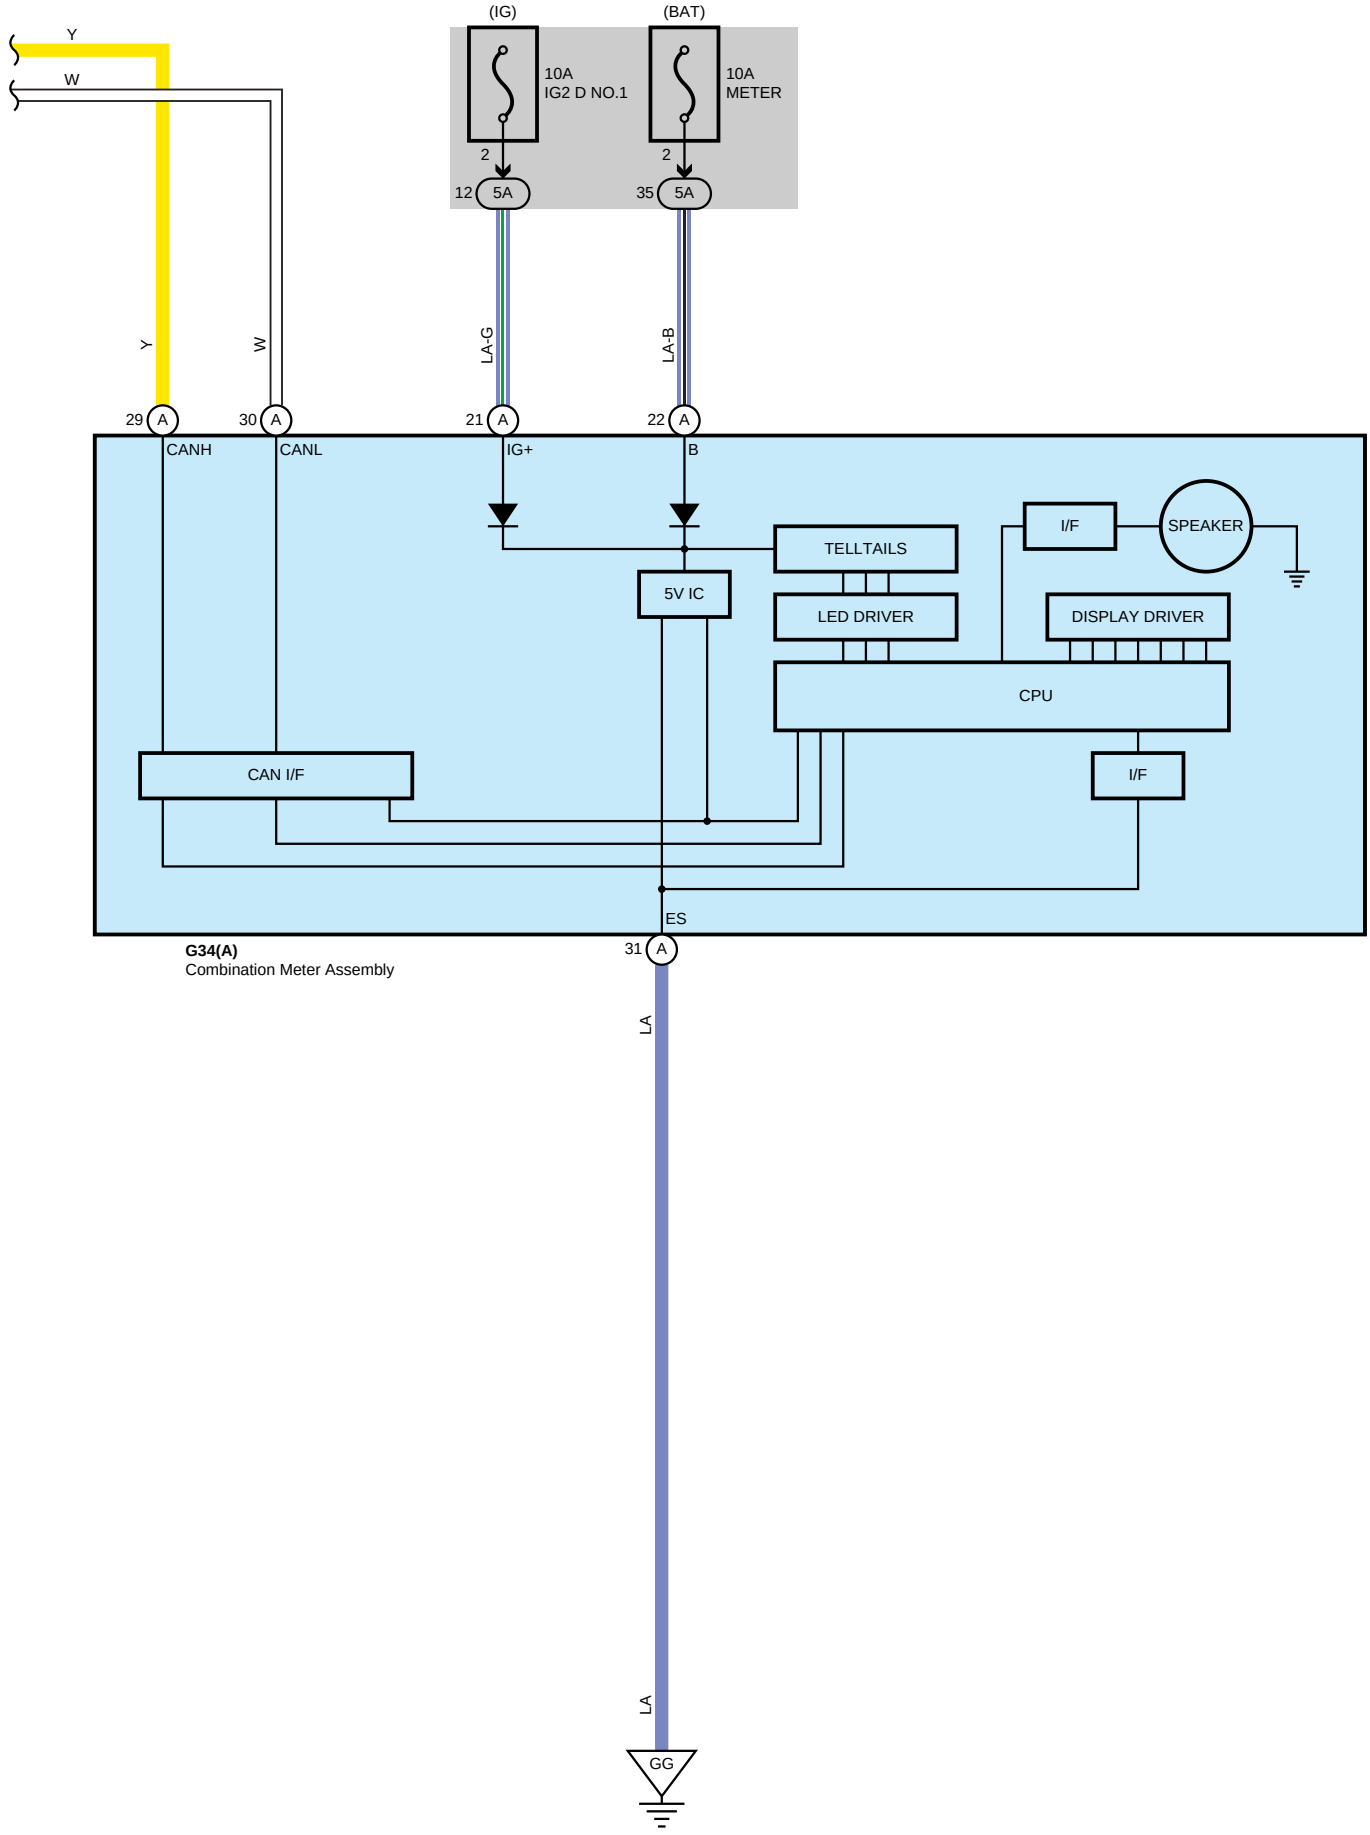


**G34(A)**
Combination Meter Assembly

A11
Black

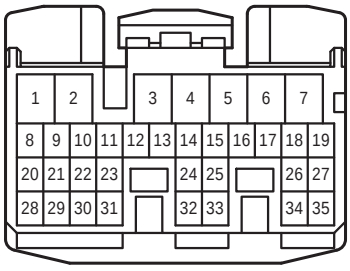


90980-12528

A12
Black

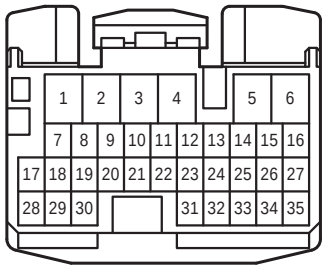


90980-12529

A15
Yellow

90980-12490

A26
Yellow

90980-12490

A56
Black

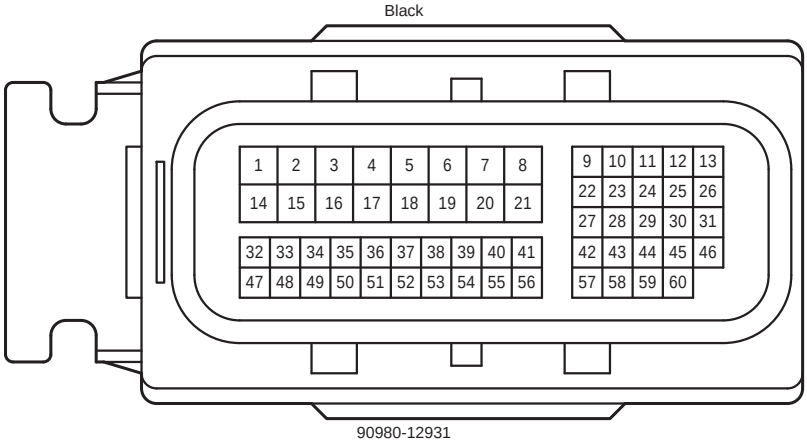


90980-12931

A78
Black

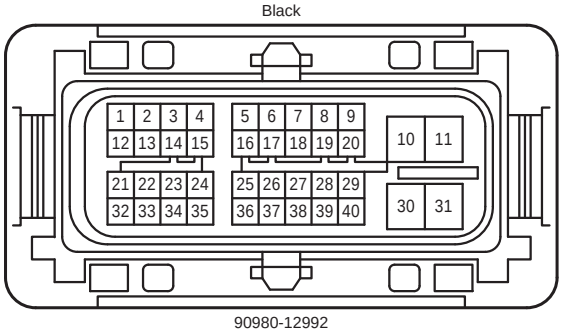


90980-12992

G11
Yellow

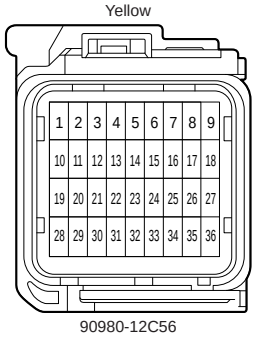


90980-12C56

G20
White

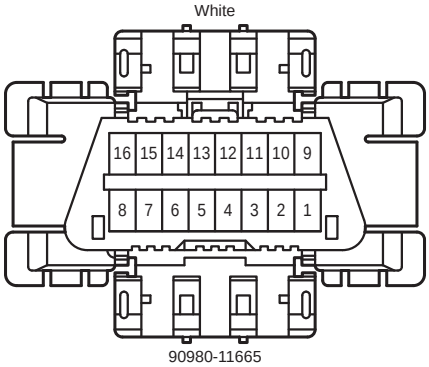


90980-11665

G26
Yellow

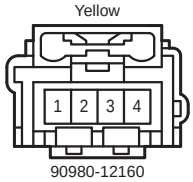


90980-12160

G31
Black

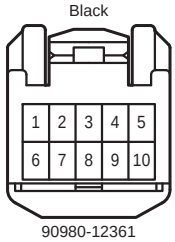


90980-12361

G34
Black

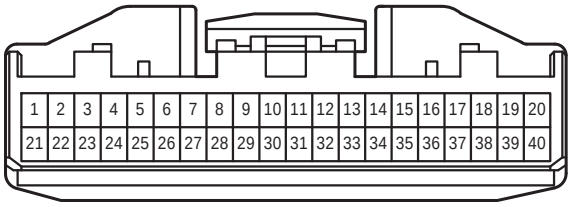


90980-12557

G37
Black

90980-12063

G40
Black




90980-12452

G41
Black




90980-12452

G42
Black

90980-12303

G47
Yellow

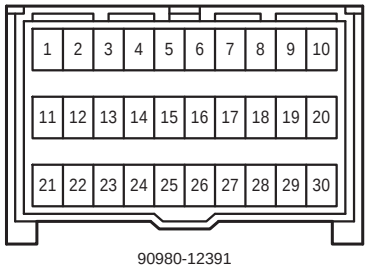


90980-12391

G66
Black

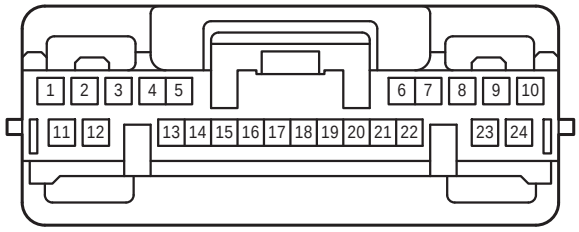


90980-12912

G93
Gray

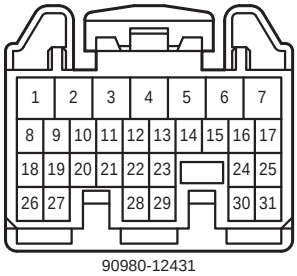


90980-12431

G112
White

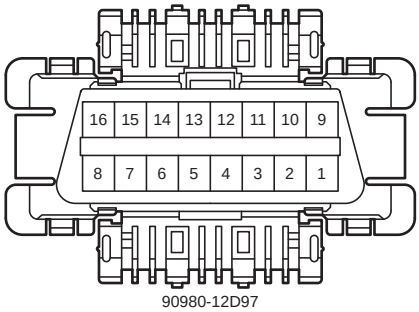


90980-12D97

G120
White

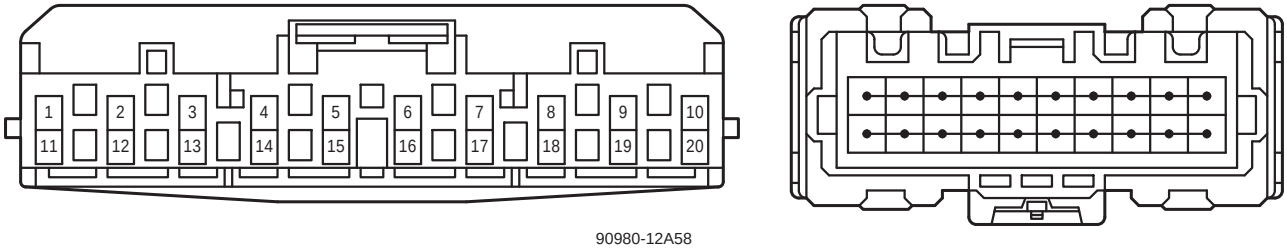


90980-12A58

G122
White

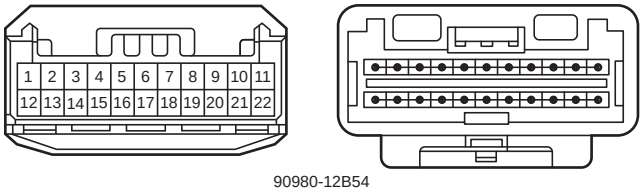


90980-12B54

G129
White

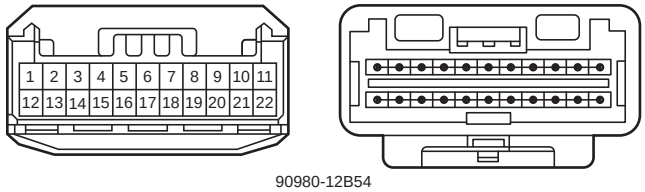


90980-12B54

G149
Black




90980-12219

G150
Orange




90980-12224

H9
Yellow

90980-12490

H27
Yellow

90980-12490

H39
White

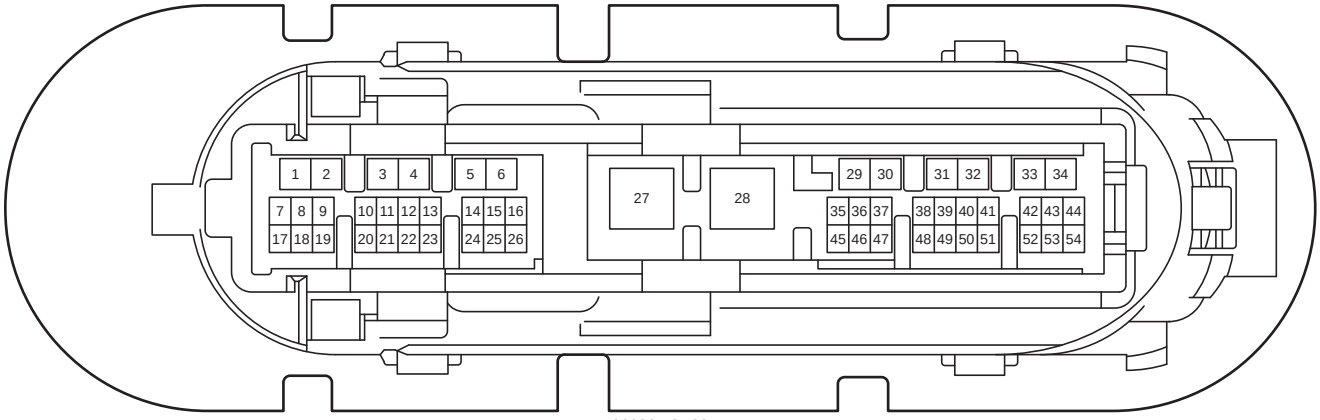


90980-12D88

H40
White

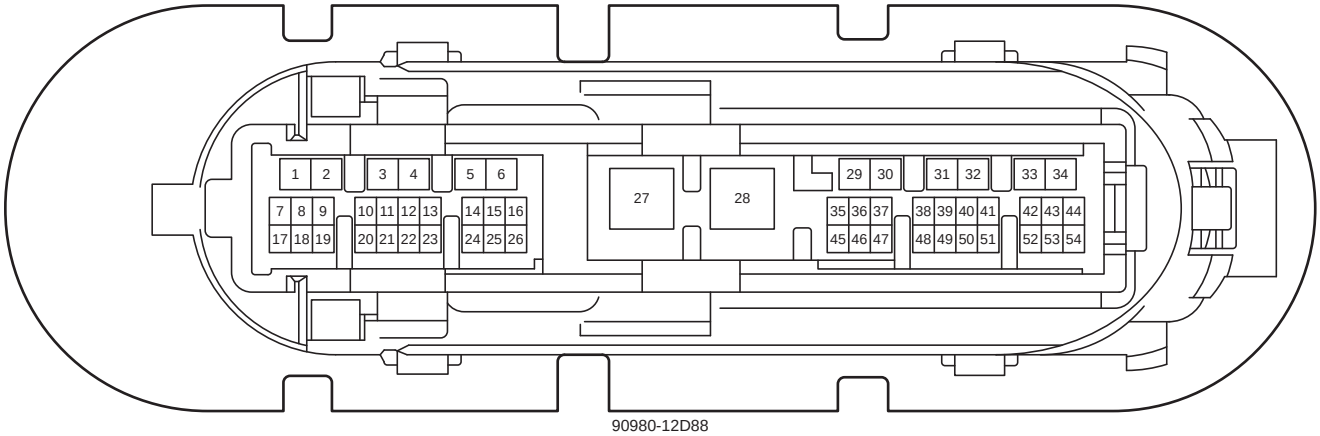


90980-12D88

L1
Yellow

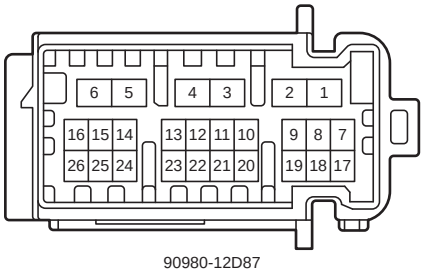


90980-12D87

L2
Yellow

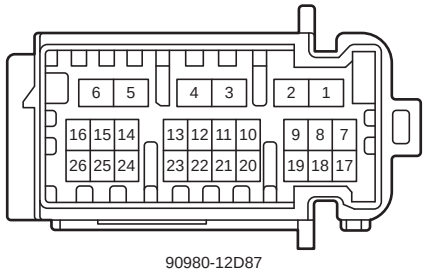


90980-12D87

L19
White

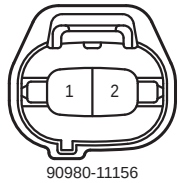


90980-11156

L20
Gray

90980-10942

L24
Black




90980-12452

L28
Yellow

90980-12698

L29
Yellow

90980-12698

L33
Yellow

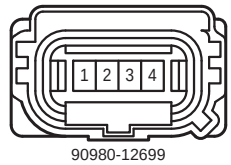


90980-12699

L34
Black




90980-12452

L37
Yellow

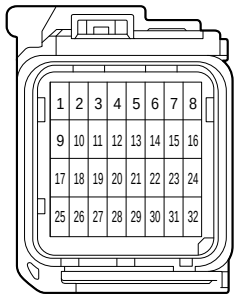


90980-12C54

L39
Yellow

90980-12699

L41
Black

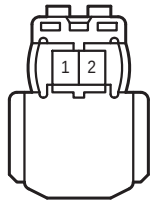


90980-12575

L43
Black




90980-12452

L63
Yellow

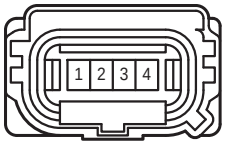


90980-12699

L64
Yellow

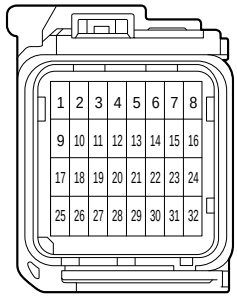


90980-12C55

L66
Yellow

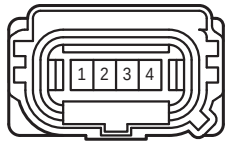


90980-12699

L69
Black

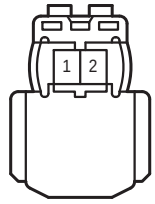


90980-12575

L70
Black




90980-12452

L97
Yellow

90980-12490

L98
Yellow

90980-12490

L115
White

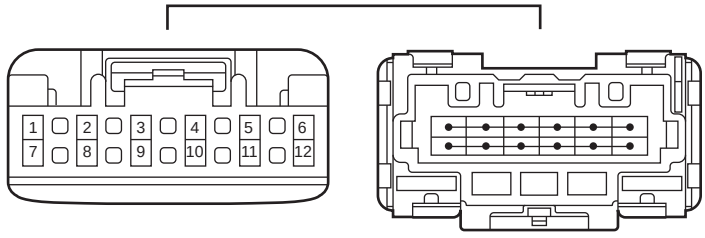


90980-12C68

L116
White

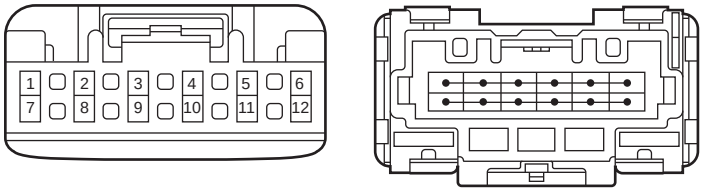


90980-12C68

L117
White

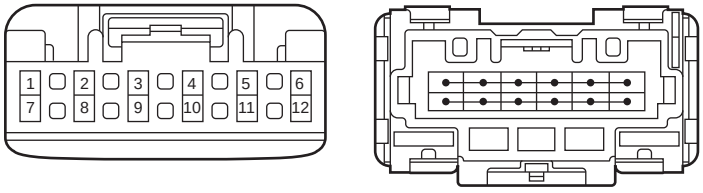


90980-12C68

L118
White

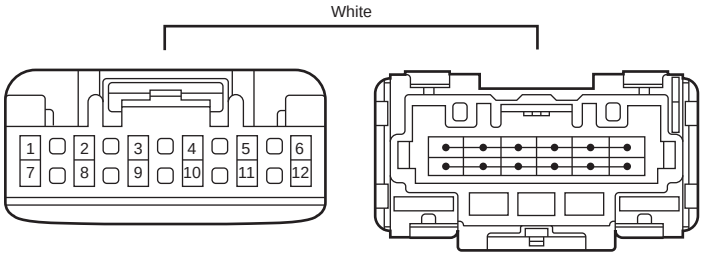


90980-12C68

R16
Yellow

90980-12698

R28
Yellow

90980-11864

R51
Yellow

90980-12698

R52
Yellow

90980-11864

z3
Green

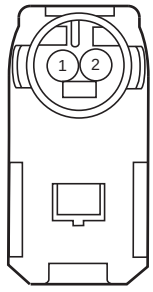


82824-47B80

z4
Black




82824-11090

z42
Black

90980-12416

4A
White

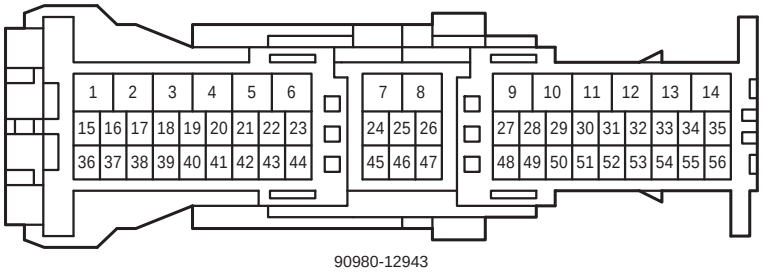


90980-12943

5A
White

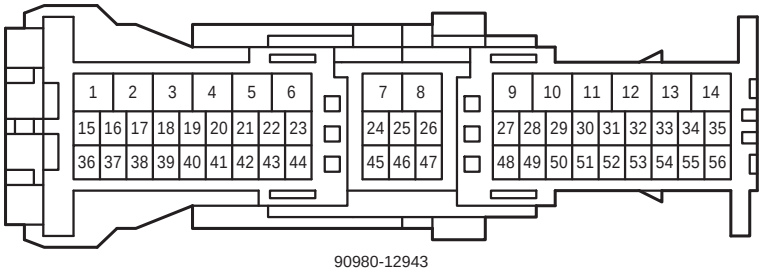


90980-12943

5D
White

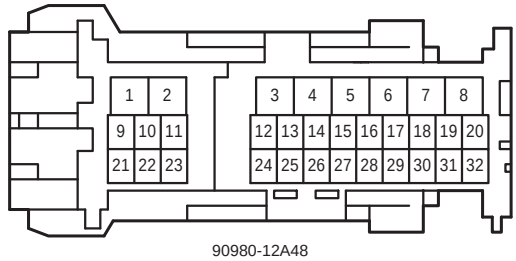


90980-12A48

AL1
White

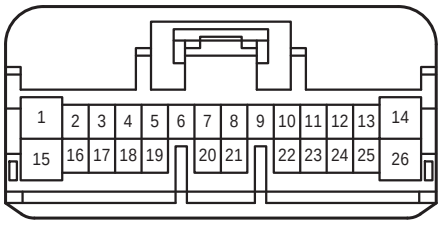


90980-12771

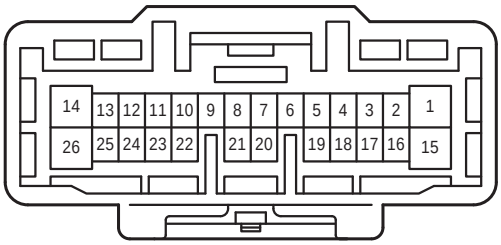


90980-12770

AL2
White

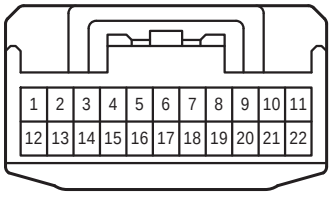


90980-12372

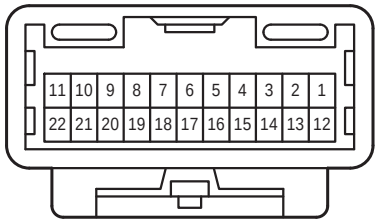


90980-12371

GA1
White

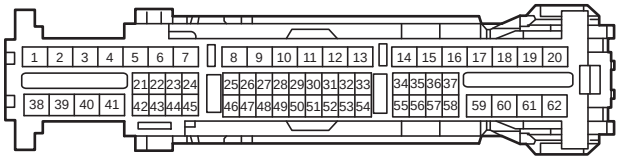


90980-12B22

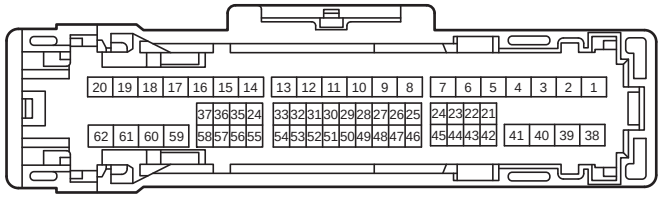


90980-12B21

GA2
Yellow

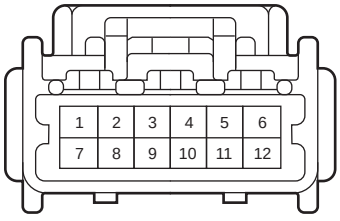


90980-12D21

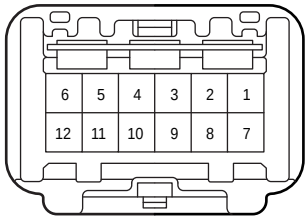


90980-12D20

GA4
White

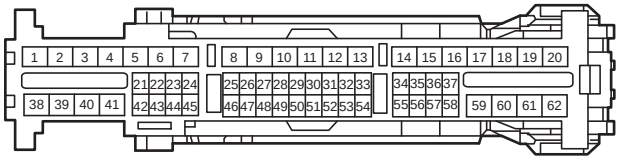


90980-12B22

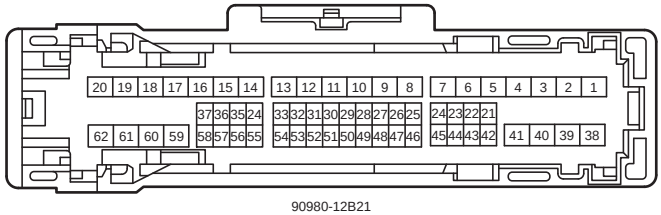


90980-12B21

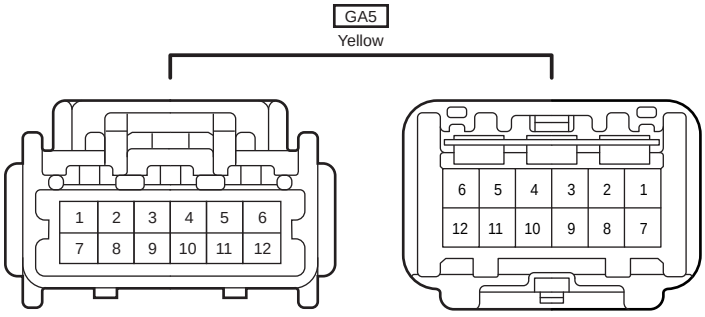


90980-12D21

90980-12D20

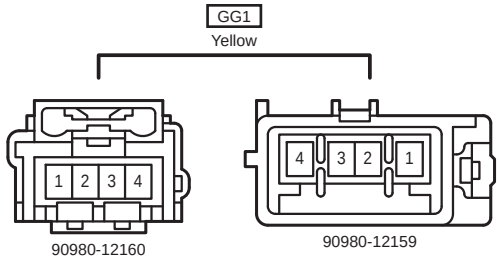


90980-12160

90980-12159

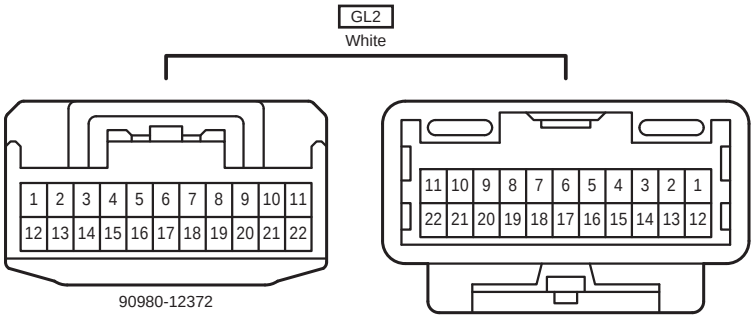


90980-12372

90980-12371

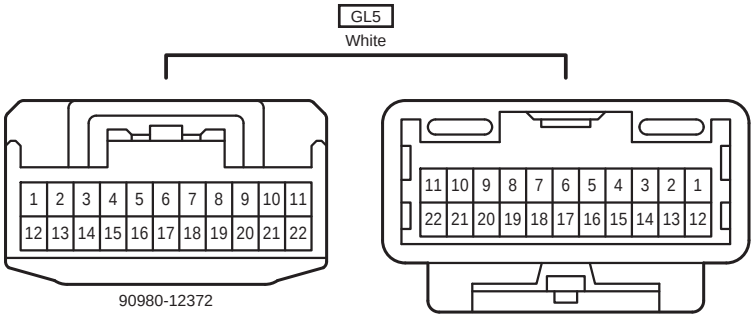


90980-12372

90980-12371

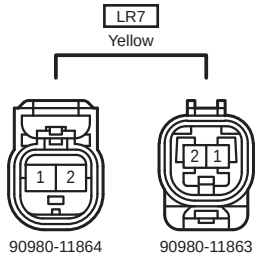


90980-11864

90980-11863

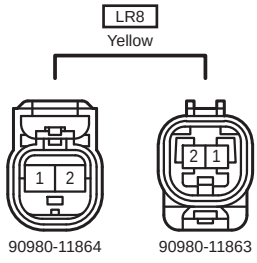


90980-11864

90980-11863

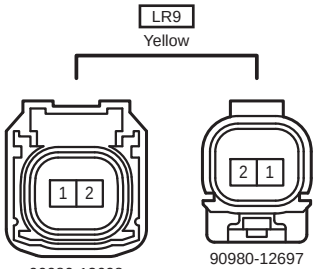


90980-12698

90980-12697

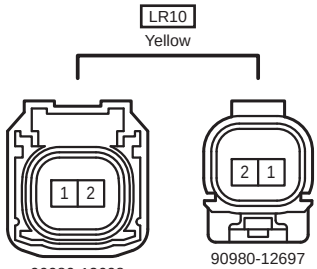


90980-12698

90980-12697