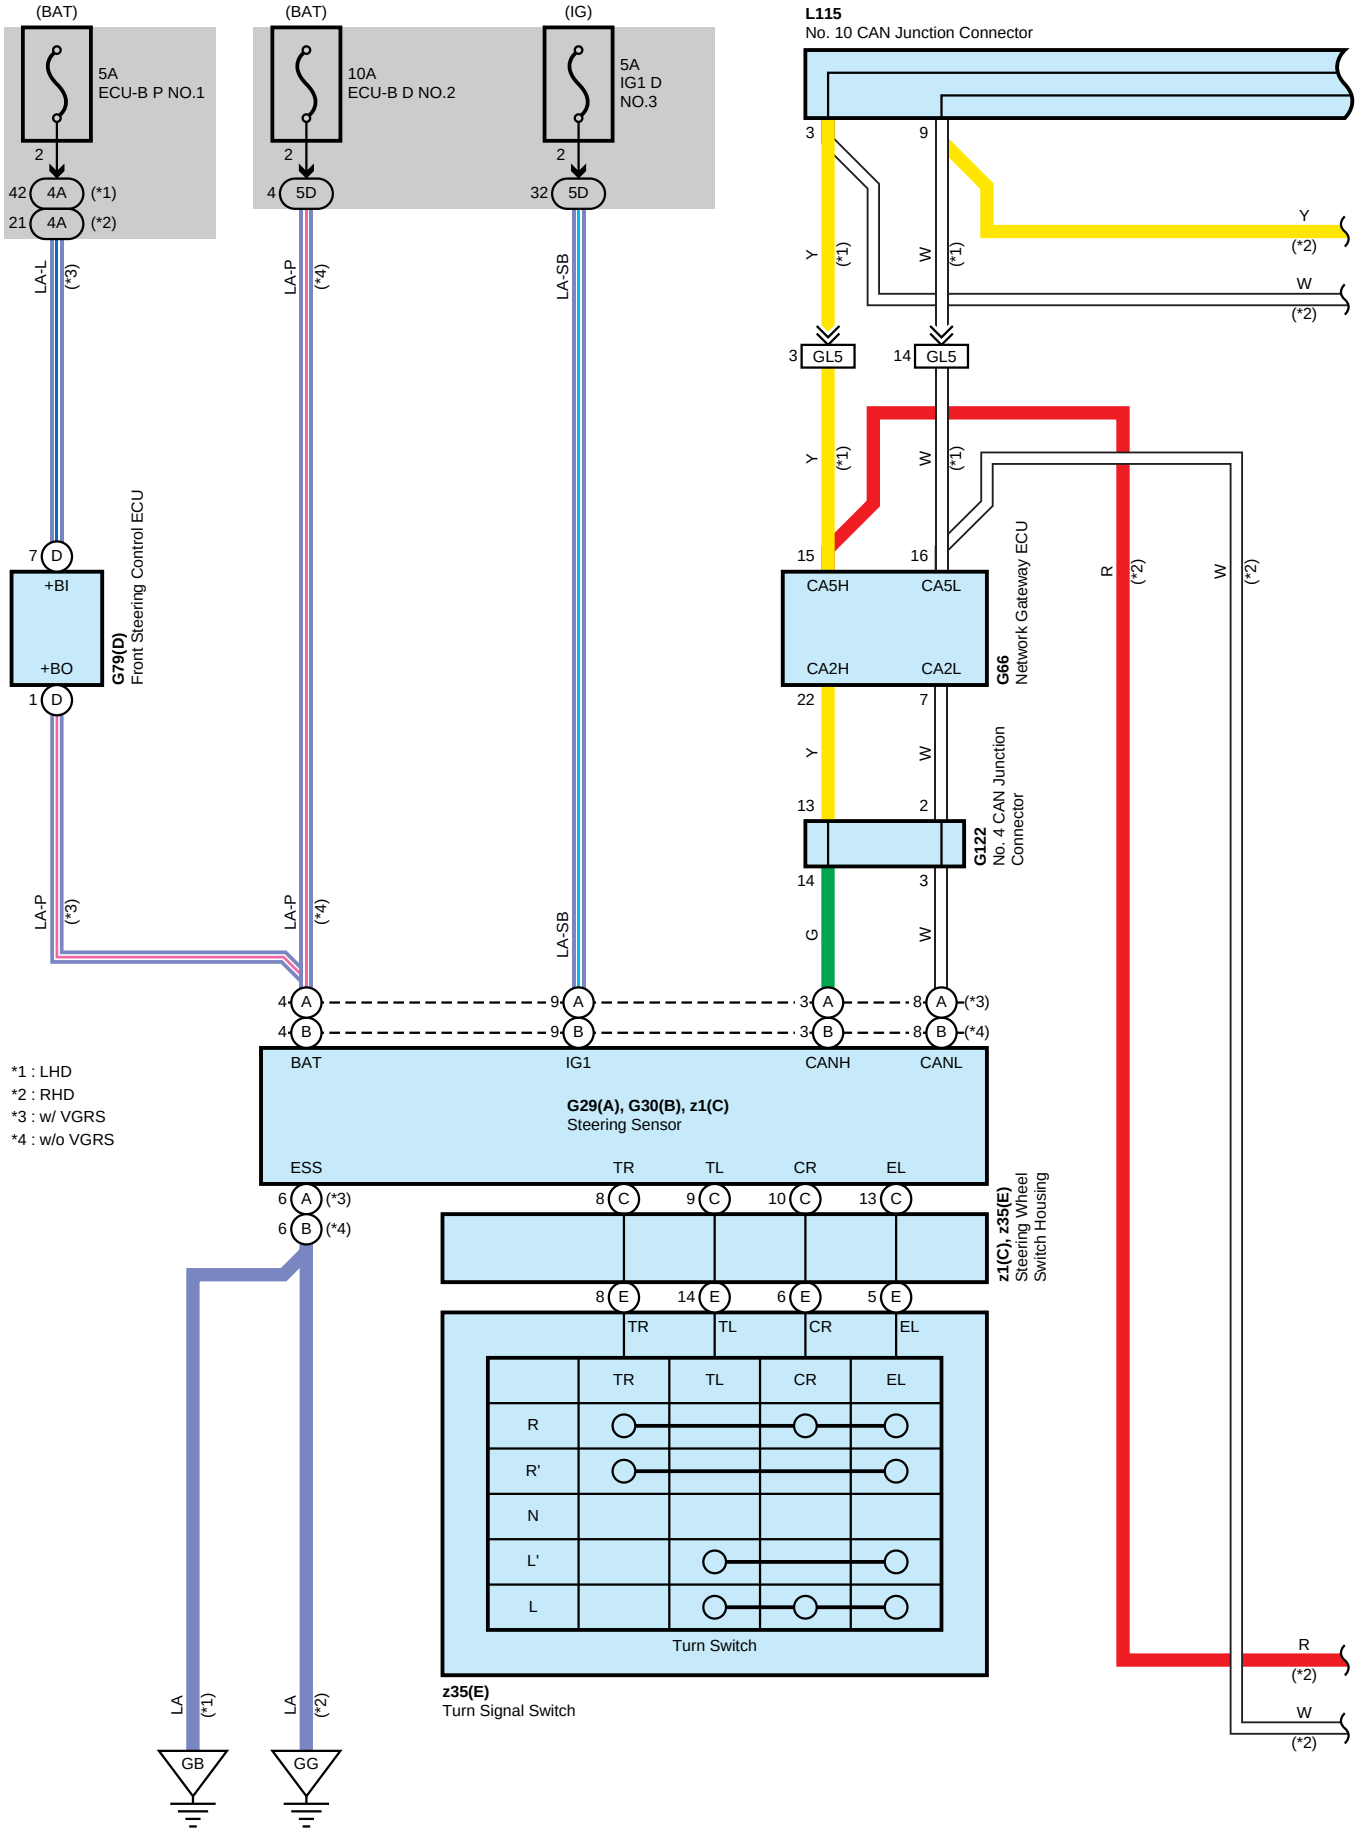
(BAT)
5A
ECU-B P NO.1
(BAT)
10A
ECU-B D NO.2
(IG)
5A
IG1 D
NO.3
L115
No. 10 CAN Junction Connector
G79(D)
Front Steering Control ECU
+BI
+BO
G66
Network Gateway ECU
CA5H
CA5L
CA2H
CA2L
G122
No. 4 CAN Junction Connector
BAT
IG1
CANH
CANL
G29(A), G30(B), z1(C)
Steering Sensor
ESS
TR
TL
CR
EL
z1(C), z35(E)
Steering Wheel
Switch Housing
z35(E)
Turn Signal Switch
Turn Switch
R
R'
N
L'
L
GB
GG
*1 : LHD
*2 : RHD
*3 : w/ VGRS
*4 : w/o VGRS

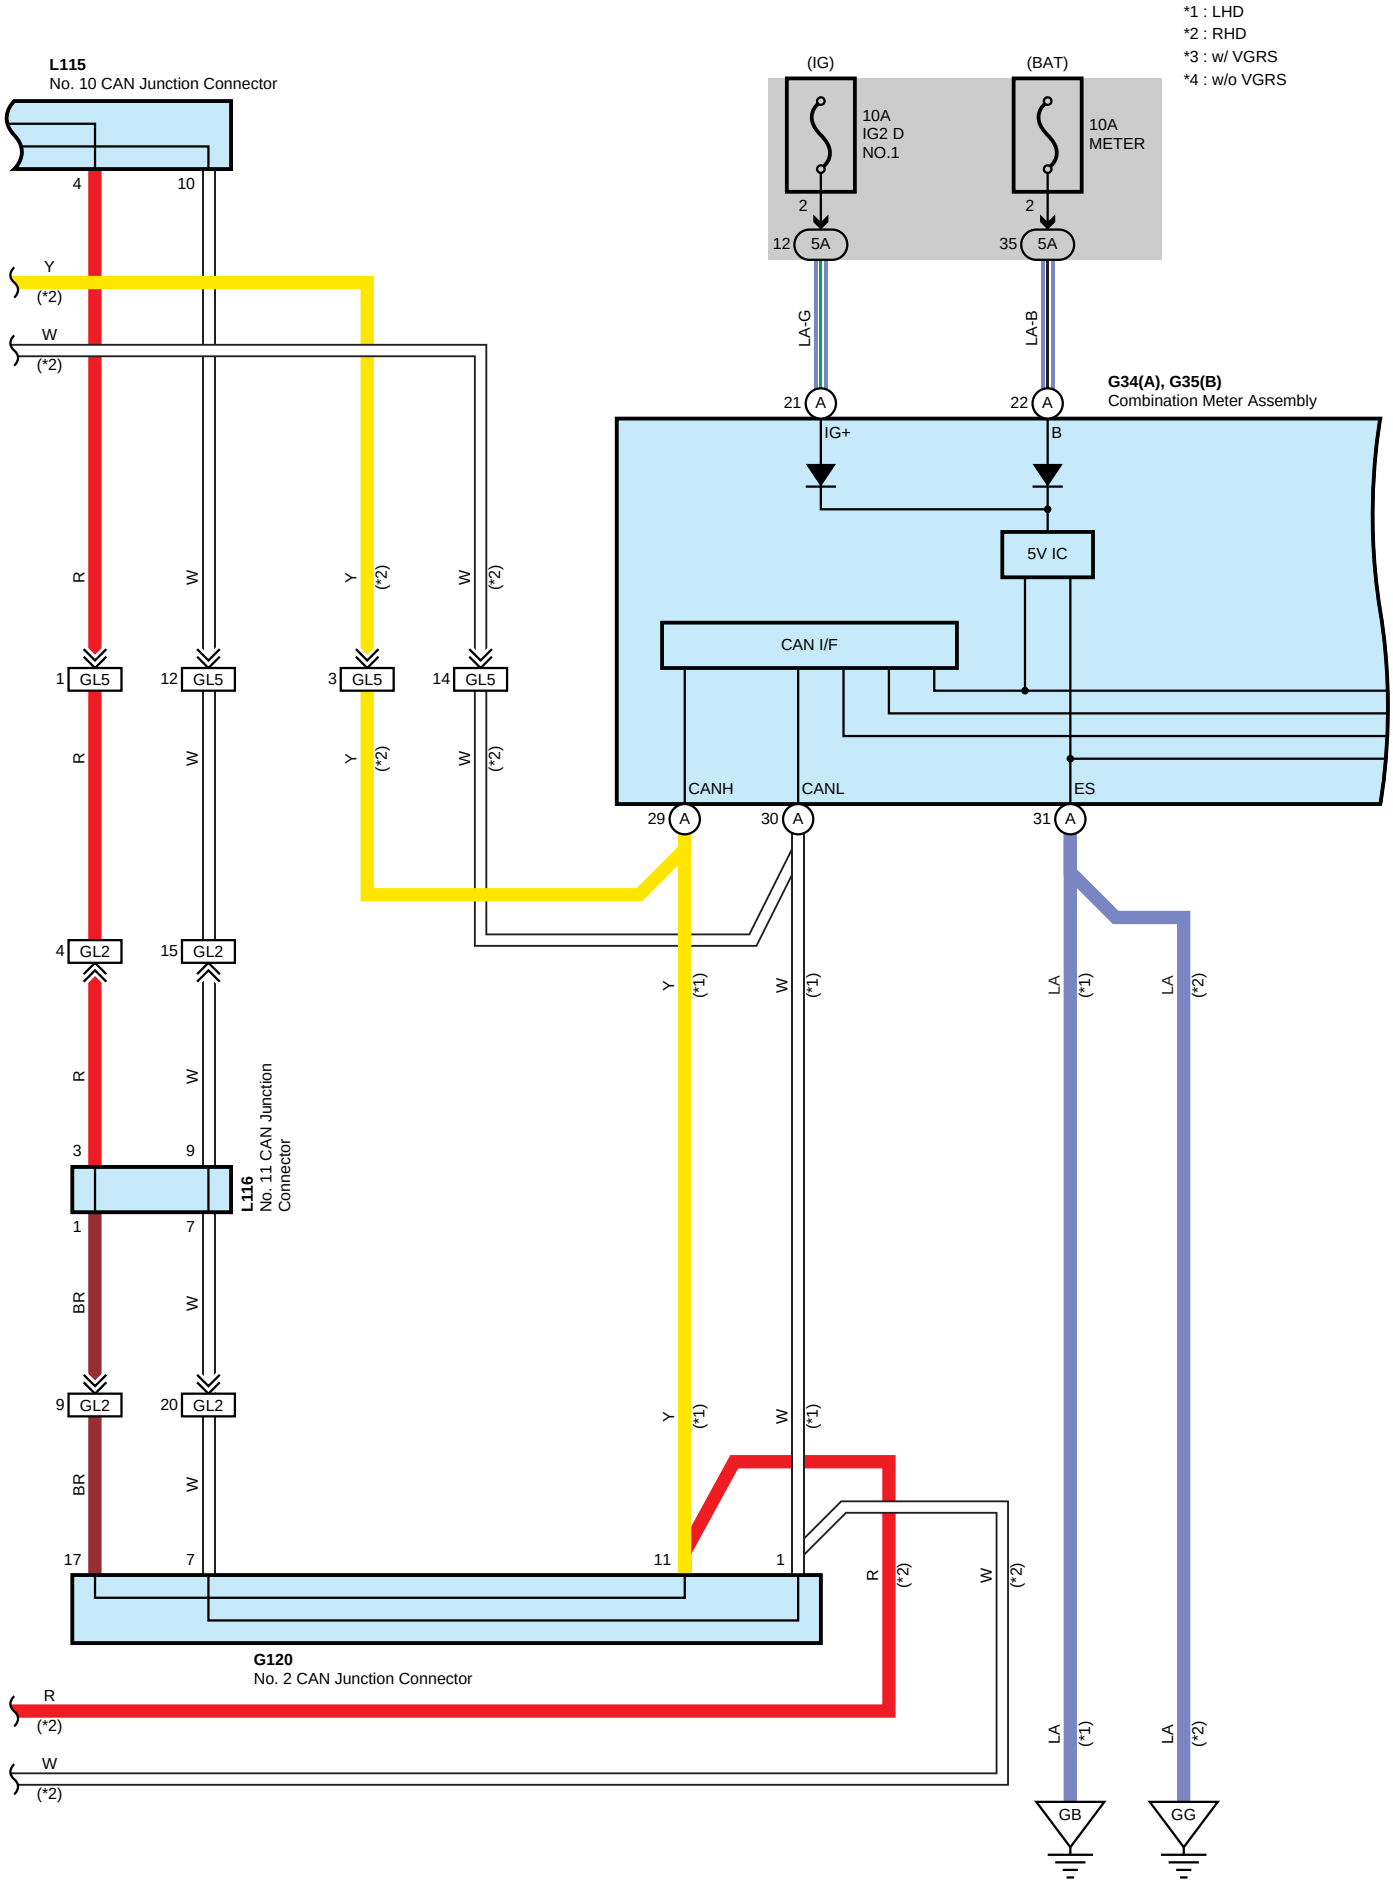
*1 : LHD
*2 : RHD
*3 : w/ VGRS
*4 : w/o VGRS
L115
No. 10 CAN Junction Connector
(IG)
(BAT)
10A
IG2 D
NO.1
10A
METER
5A
5A
LA-G
LA-B
G34(A), G35(B)
Combination Meter Assembly
IG+
B
5V IC
CAN I/F
CANH
CANL
ES
GL5
GL2
L116
No. 11 CAN Junction
Connector
G120
No. 2 CAN Junction Connector
GB
GG

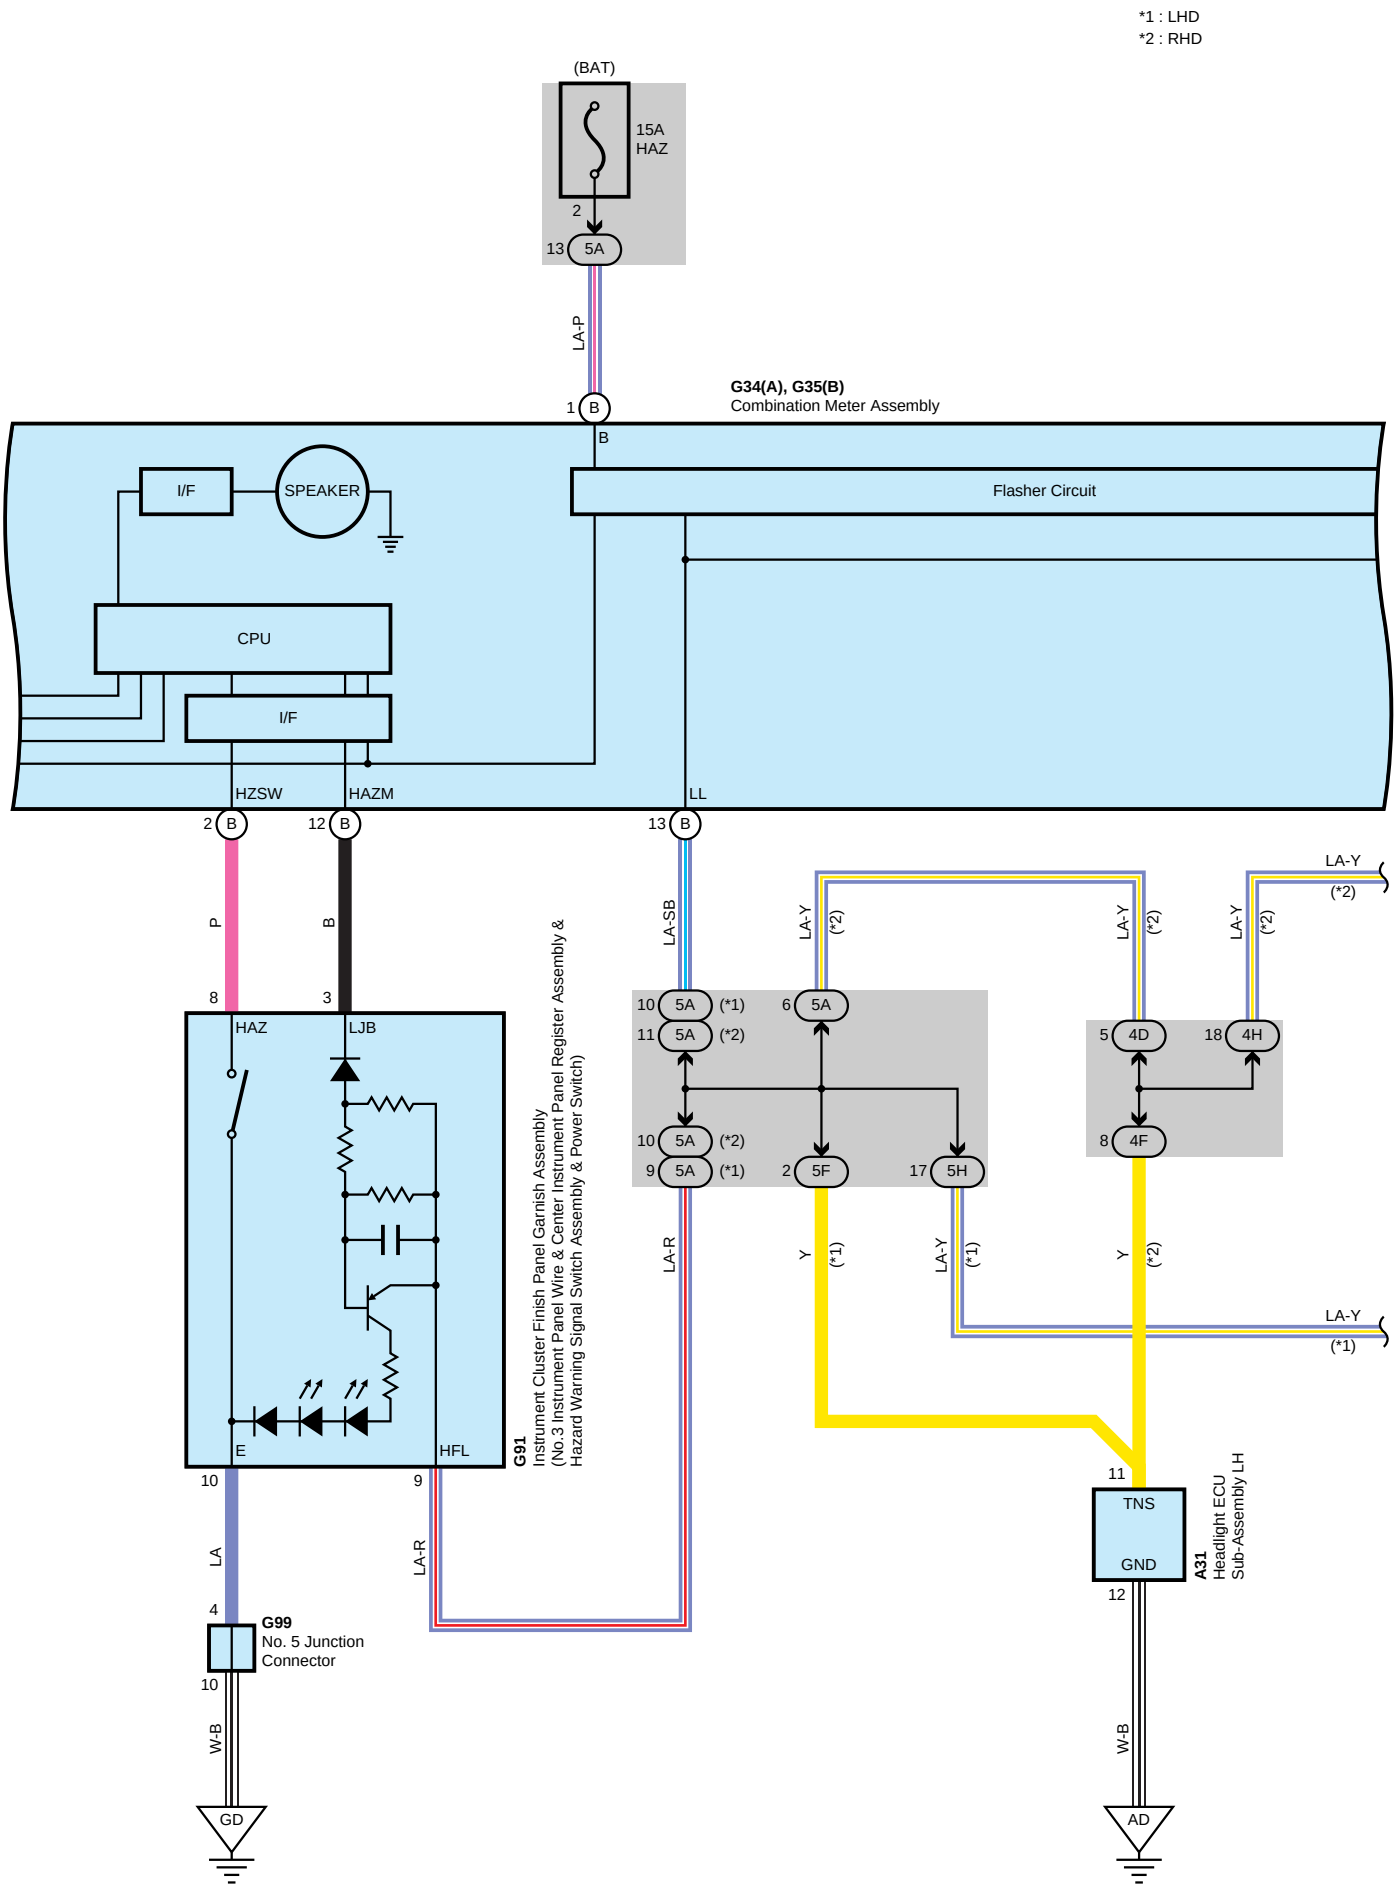
*1 : LHD
*2 : RHD
(BAT)
15A
HAZ
2
13
5A
LA-P
1
B
G34(A), G35(B)
Combination Meter Assembly
B
I/F
SPEAKER
Flasher Circuit
CPU
I/F
HZSW
HAZM
LL
2
B
12
B
13
B
P
B
LA-SB
LA-Y
(*2)
LA-Y
(*2)
LA-Y
(*2)
LA-Y
(*2)
8
3
HAZ
LJB
10
5A
(*1)
11
5A
(*2)
6
5A
5
4D
18
4H
10
5A
(*2)
9
5A
(*1)
2
5F
17
5H
8
4F
LA-R
Y
(*1)
LA-Y
(*1)
Y
(*2)
LA-Y
(*1)
E
HFL
G91
Instrument Cluster Finish Panel Garnish Assembly
(No.3 Instrument Panel Wire & Center Instrument Panel Register Assembly &
Hazard Warning Signal Switch Assembly & Power Switch)
10
9
11
TNS
GND
A31
Headlight ECU
Sub-Assembly LH
12
LA
LA-R
4
G99
No. 5 Junction
Connector
10
W-B
W-B
GD
AD

*1 : LHD
*2 : RHD

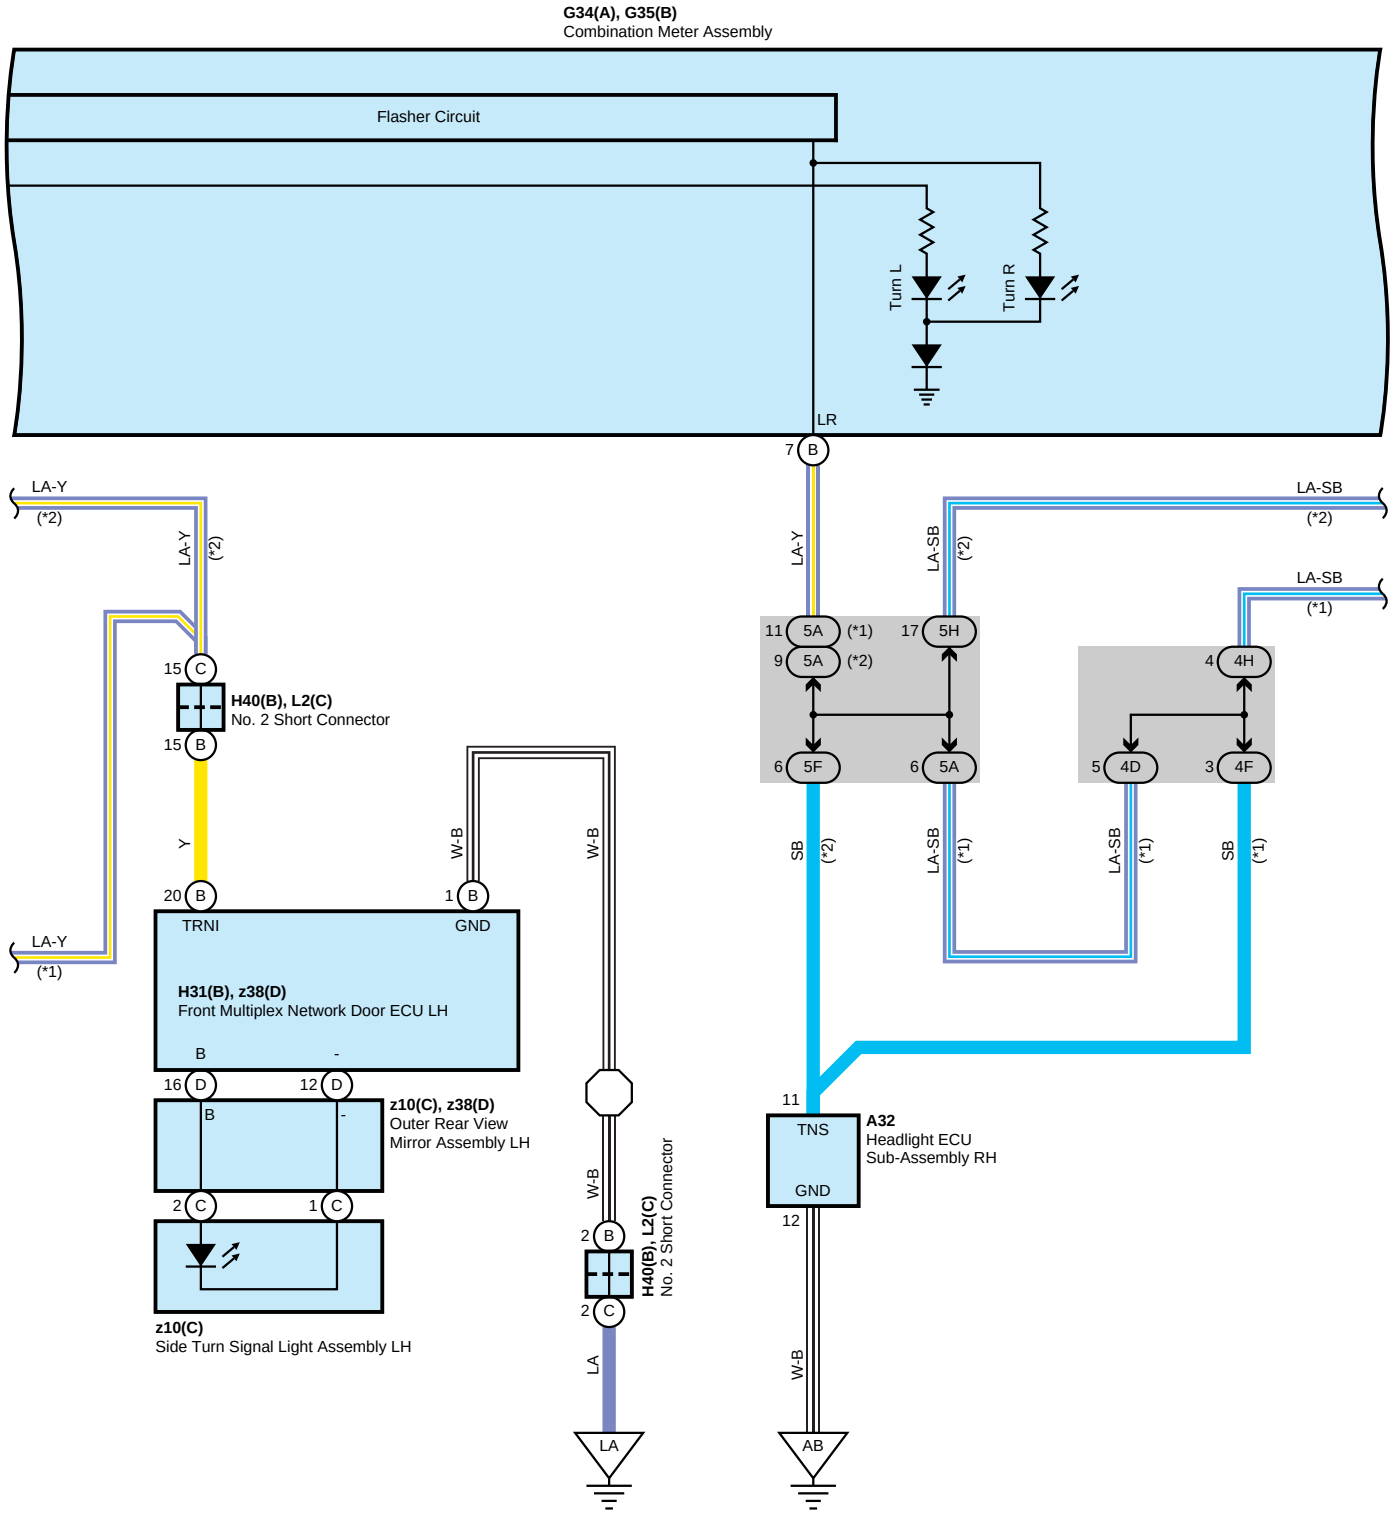
G34(A), G35(B)
Combination Meter Assembly
Flasher Circuit
Turn L
Turn R
LR
7 B
LA-Y
(*2)
LA-SB
(*2)
LA-SB
(*1)
11 5A (*1)
9 5A (*2)
17 5H
4 4H
6 5F
6 5A
5 4D
3 4F
15 C
H40(B), L2(C)
No. 2 Short Connector
15 B
Y
W-B
20 B
1 B
TRNI
GND
H31(B), z38(D)
Front Multiplex Network Door ECU LH
B
-
16 D
12 D
z10(C), z38(D)
Outer Rear View
Mirror Assembly LH
2 C
1 C
z10(C)
Side Turn Signal Light Assembly LH
2 B
2 C
H40(B), L2(C)
No. 2 Short Connector
LA
11
TNS
GND
12
A32
Headlight ECU
Sub-Assembly RH
AB

*1 : LHD
*2 : RHD

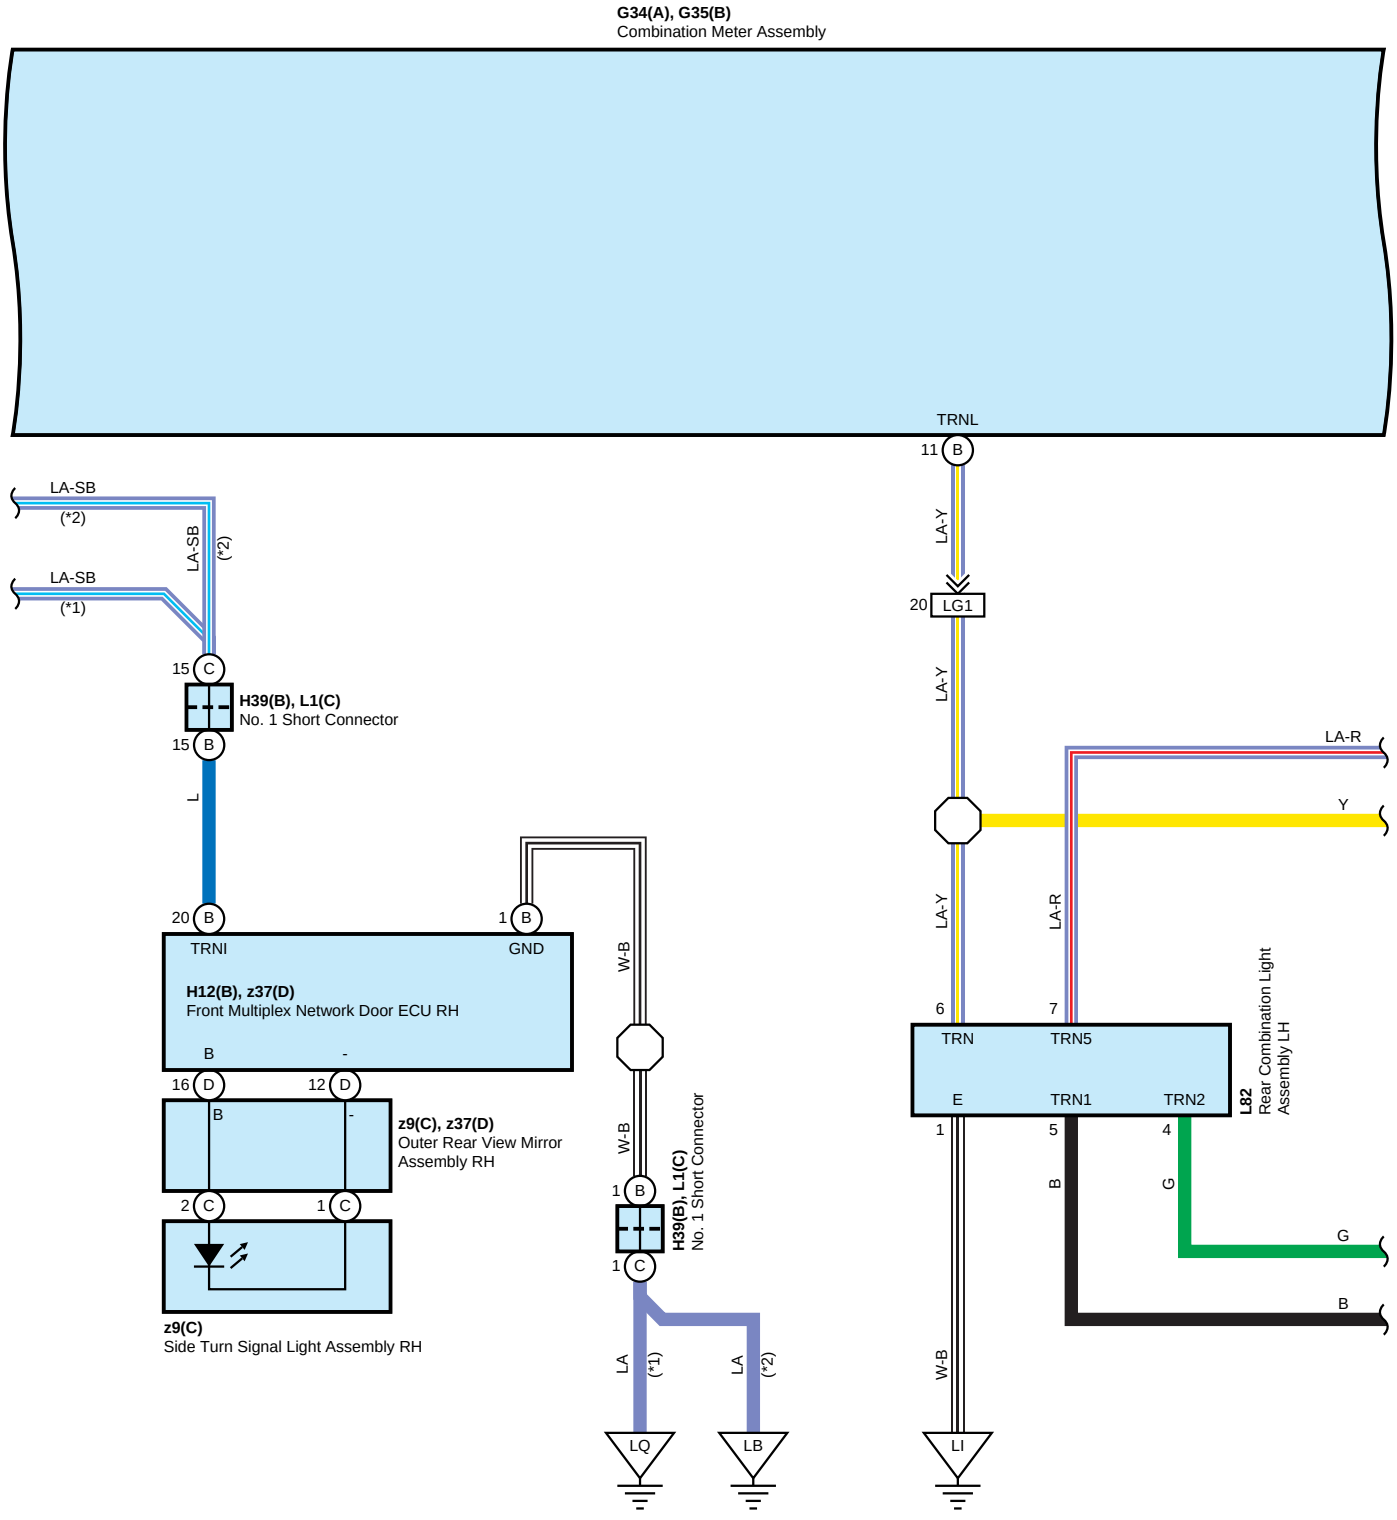
G34(A), G35(B)
Combination Meter Assembly
TRNL
11 B
LA-Y
20 LG1
LA-Y
LA-SB
(*2)
LA-SB
(*2)
LA-SB
(*1)
15 C
H39(B), L1(C)
No. 1 Short Connector
15 B
L
LA-R
Y
20 B
1 B
TRNI
GND
W-B
H12(B), z37(D)
Front Multiplex Network Door ECU RH
B
-
LA-Y
LA-R
6
7
TRN
TRN5
E
TRN1
TRN2
L82
Rear Combination Light
Assembly LH
16 D
12 D
B
-
z9(C), z37(D)
Outer Rear View Mirror
Assembly RH
2 C
1 C
W-B
1 B
H39(B), L1(C)
No. 1 Short Connector
1 C
1
5
4
B
G
G
B
z9(C)
Side Turn Signal Light Assembly RH
LA
(*1)
LA
(*2)
W-B
LQ
LB
LI

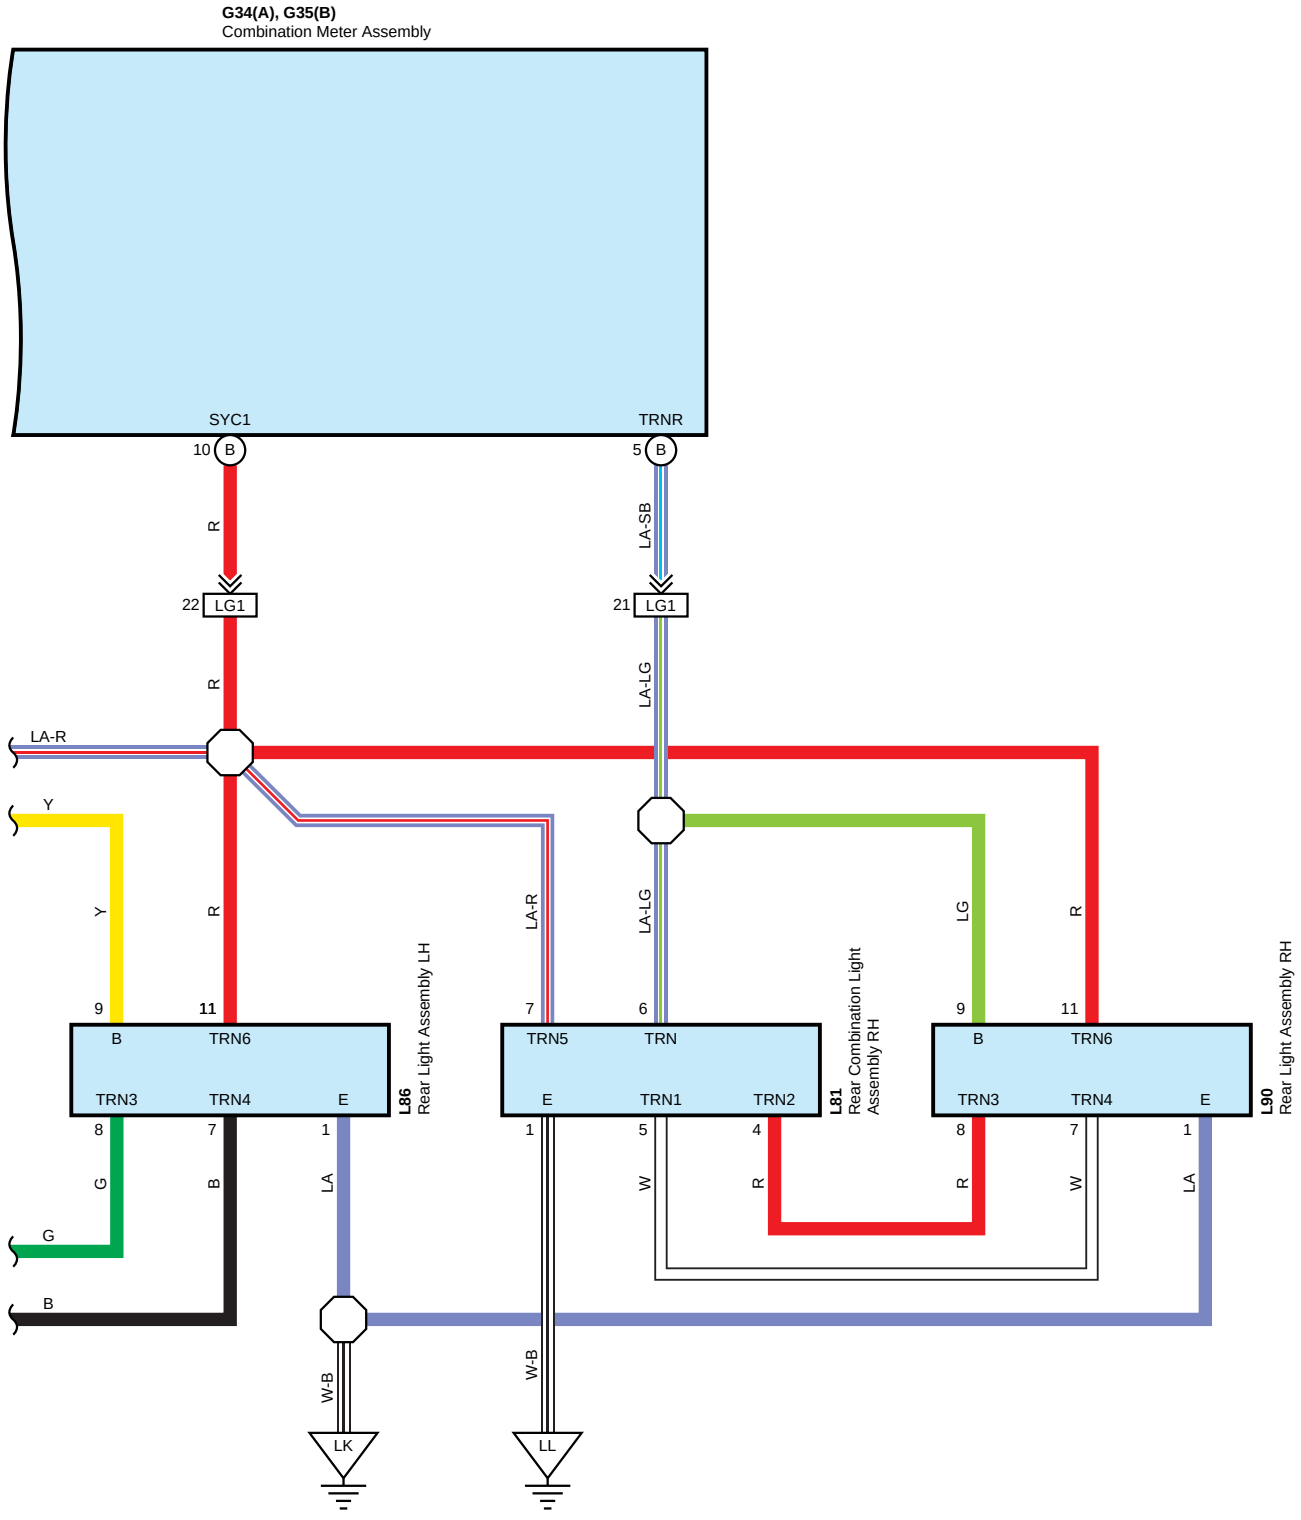
G34(A), G35(B)
Combination Meter Assembly
SYC1
TRNR
10 B
5 B
R
LA-SB
22 LG1
21 LG1
R
LA-LG
LA-R
Y
Y
R
LA-R
LA-LG
LG
R
9
11
7
6
9
11
B
TRN6
TRN5
TRN
B
TRN6
TRN3
TRN4
E
E
TRN1
TRN2
TRN3
TRN4
E
L86
Rear Light Assembly LH
L81
Rear Combination Light Assembly RH
L90
Rear Light Assembly RH
8
7
1
1
5
4
8
7
1
G
B
LA
W
R
R
W
LA
G
B
W-B
W-B
LK
LL

A31
Gray

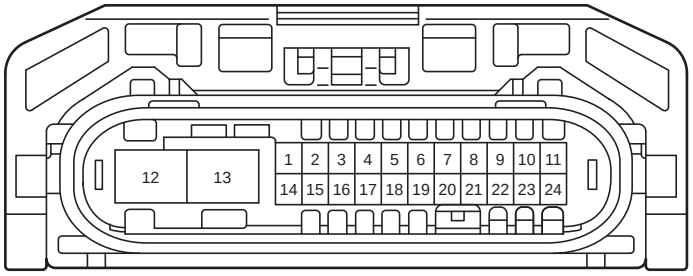

90980-12A92

A32
Gray

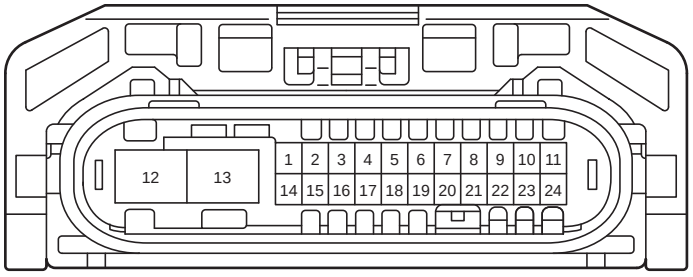

90980-12A92

G29
Black

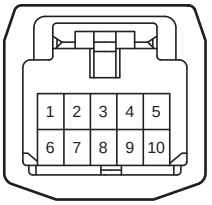

82824-78040

G30
White

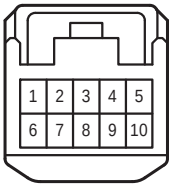

90980-12368

G34
Black

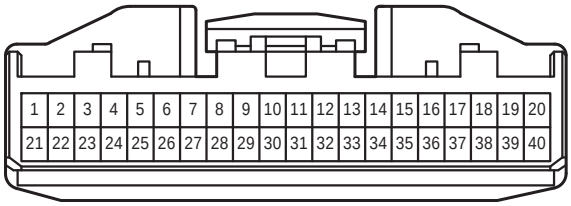

90980-12557

G35
Black

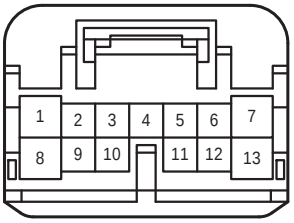

90980-12767

G66
Black

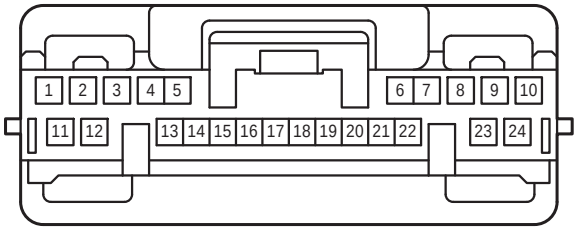

90980-12912

G79
White

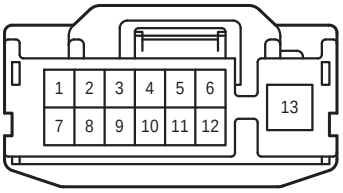

82824-30580

G91
White

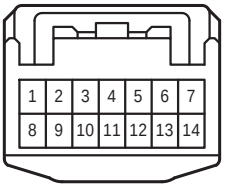

90980-12370

G99
White

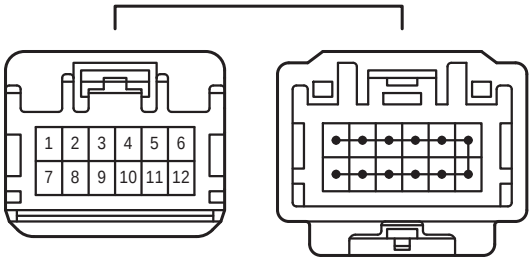

90980-12737

G120
White

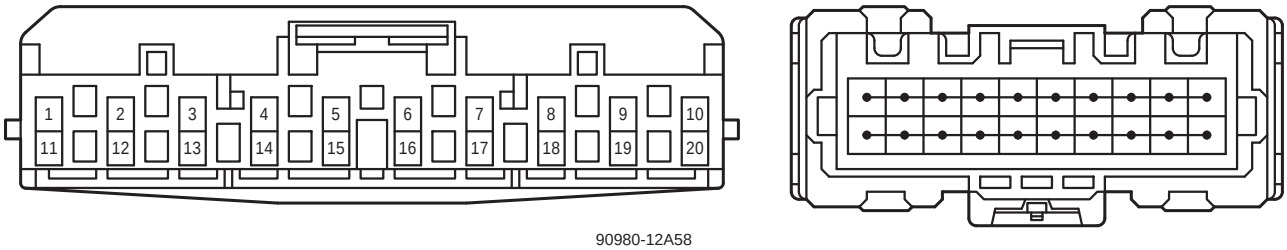

90980-12A58

G122
White

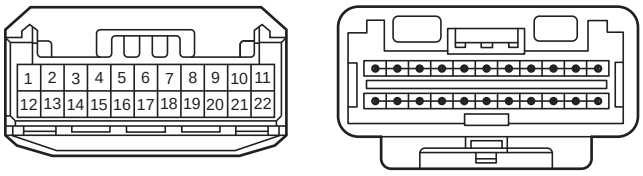

90980-12B54

H12
White

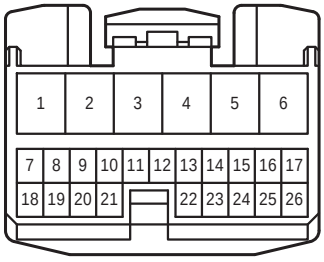

90980-12561

H31
White

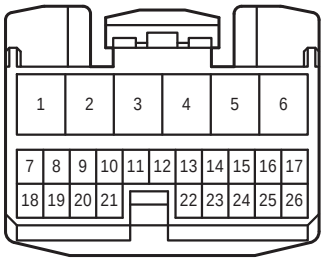

90980-12561

H39
White

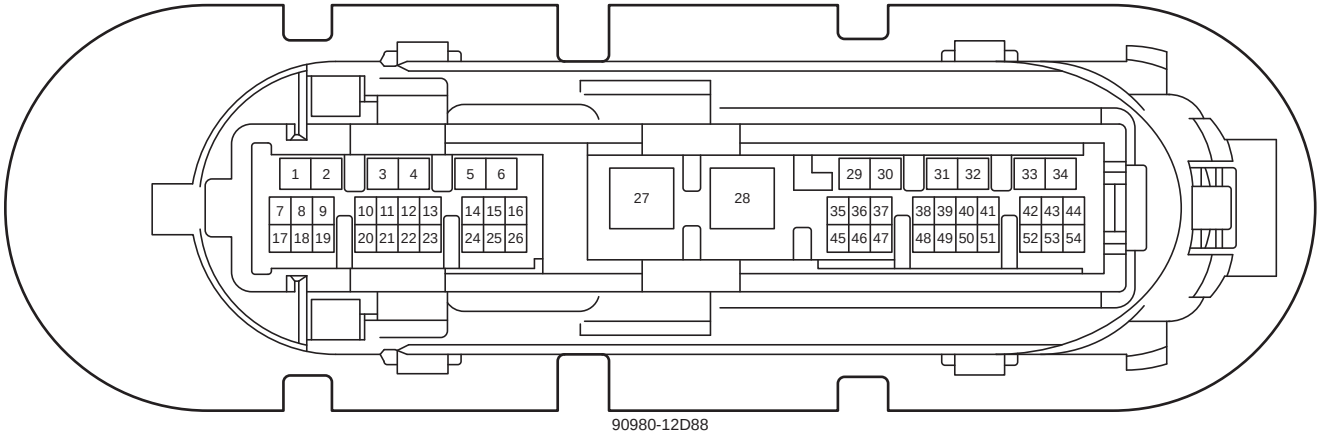

90980-12D88

H40
White

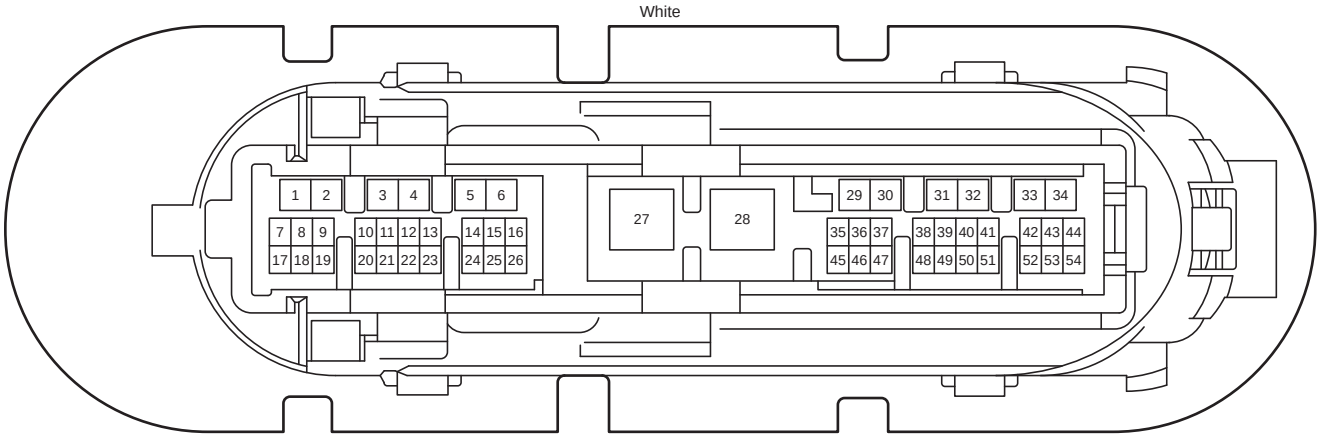

90980-12D88

L1
Yellow

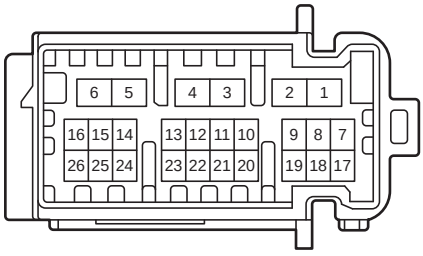

90980-12D87

L2
Yellow

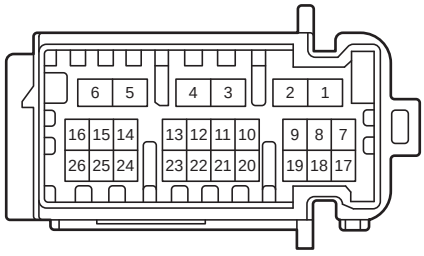

90980-12D87

L81
White

90980-10798

L82
White

90980-10798

L86
White

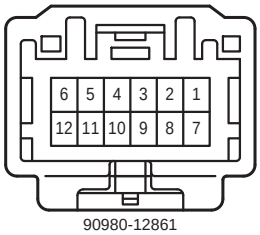

90980-12861

L90
White

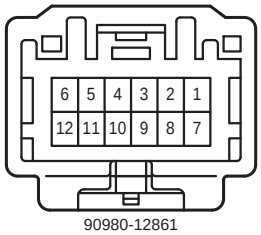

90980-12861

L115
White

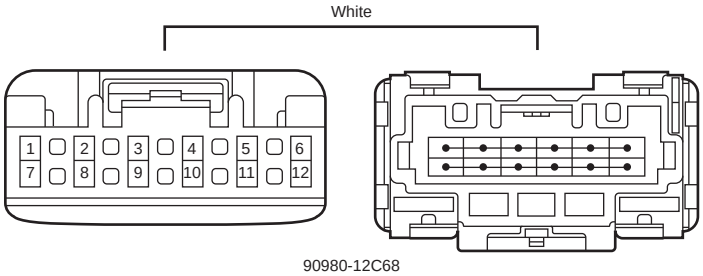

90980-12C68

L116
White

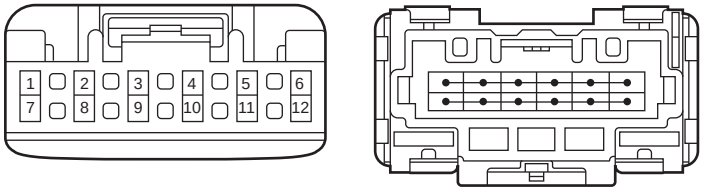

90980-12C68

z1
White

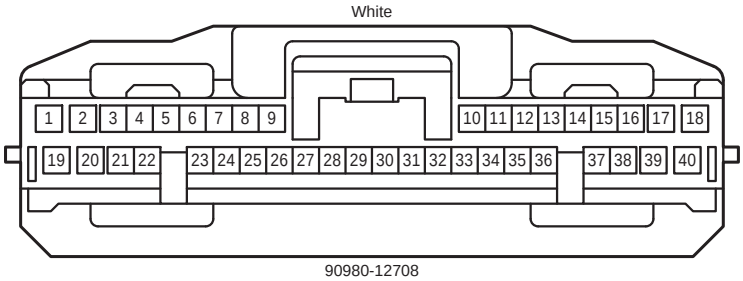

90980-12708

z9
White

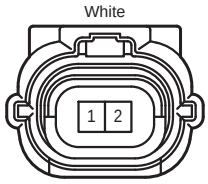

82824-76060

z10
White

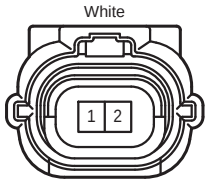

82824-76060

z35
White

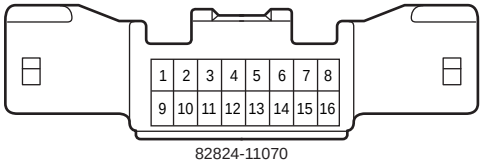

82824-11070

z37
White

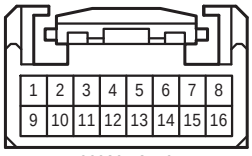

90980-12156

z38
White

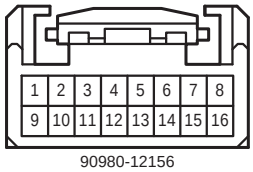

90980-12156

4A
White

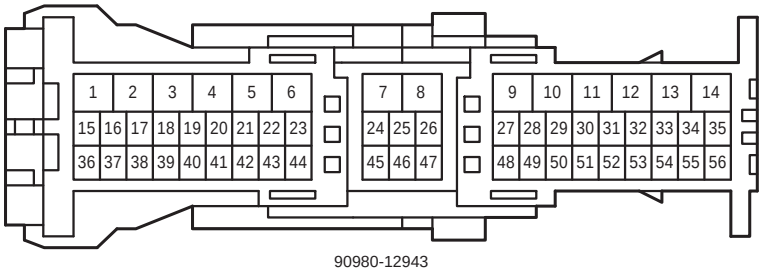

90980-12943

4D
White

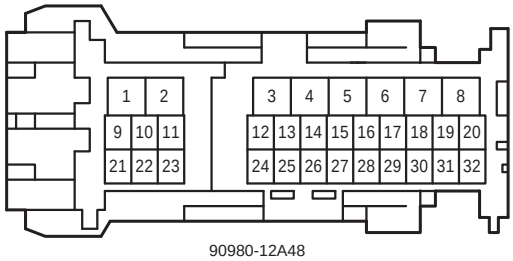

90980-12A48

4F
White

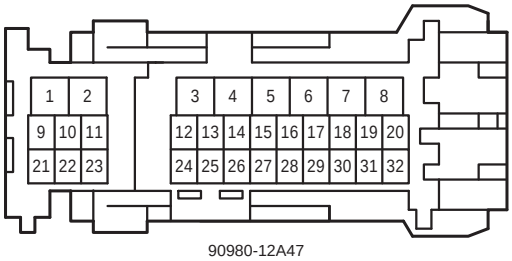

90980-12A47

4H
White

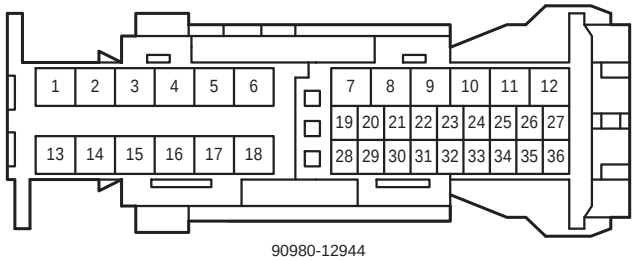

90980-12944

5A
White

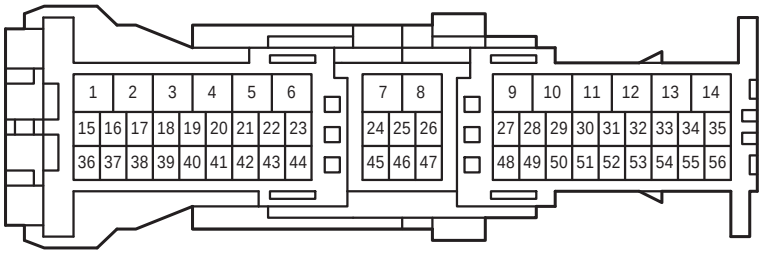

90980-12943

5D
White

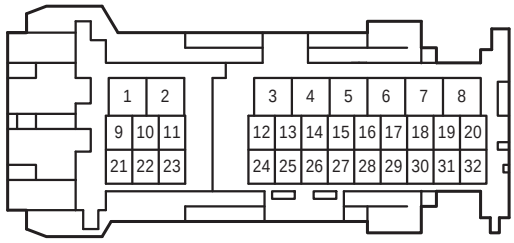

90980-12A48

5F
White

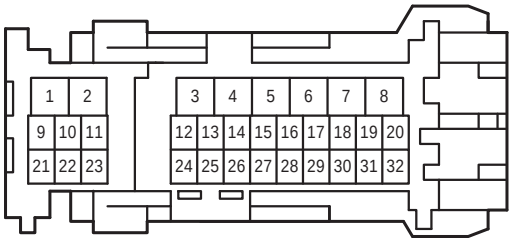

90980-12A47

5H
White

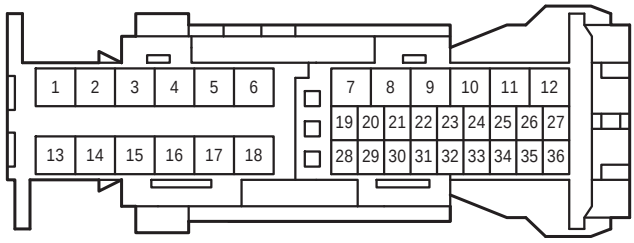

90980-12944

GL2
White

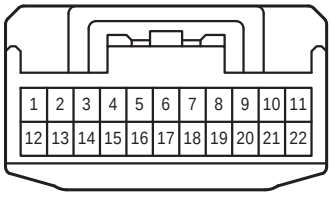

90980-12372

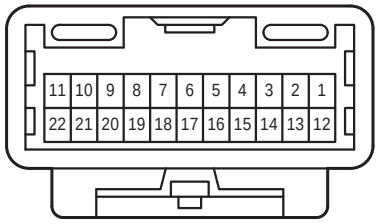

90980-12371

GL5
White

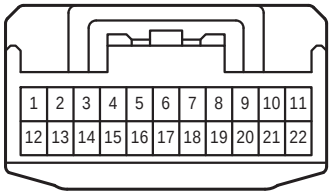

90980-12372

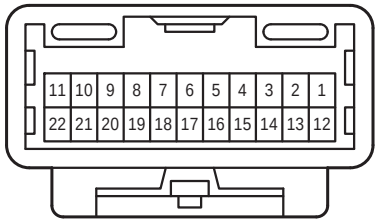

90980-12371

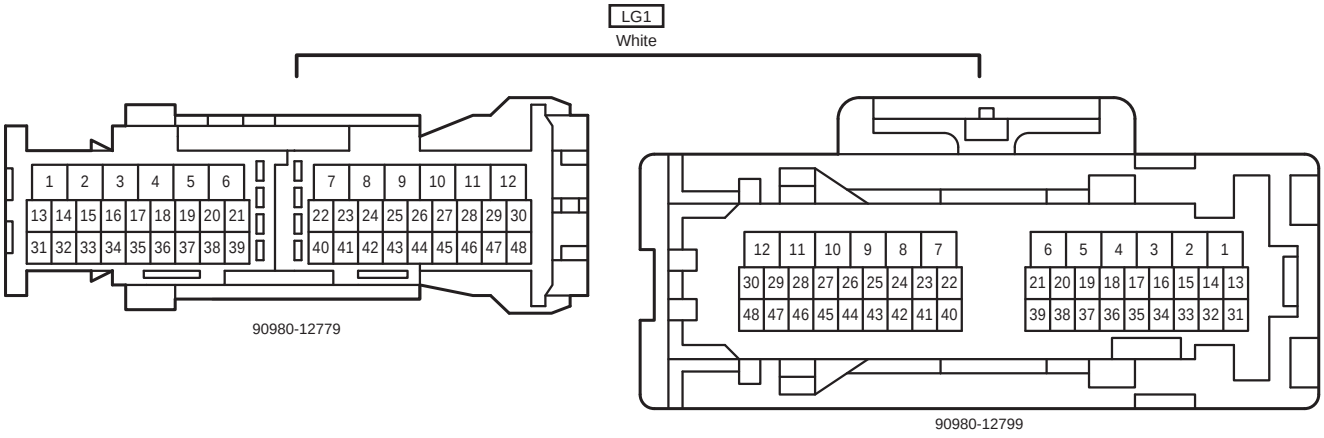
LG1
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48
90980-12779
12 11 10 9 8 7 6 5 4 3 2 1
30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13
48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31
90980-12799