7 LS 430 (LHD)

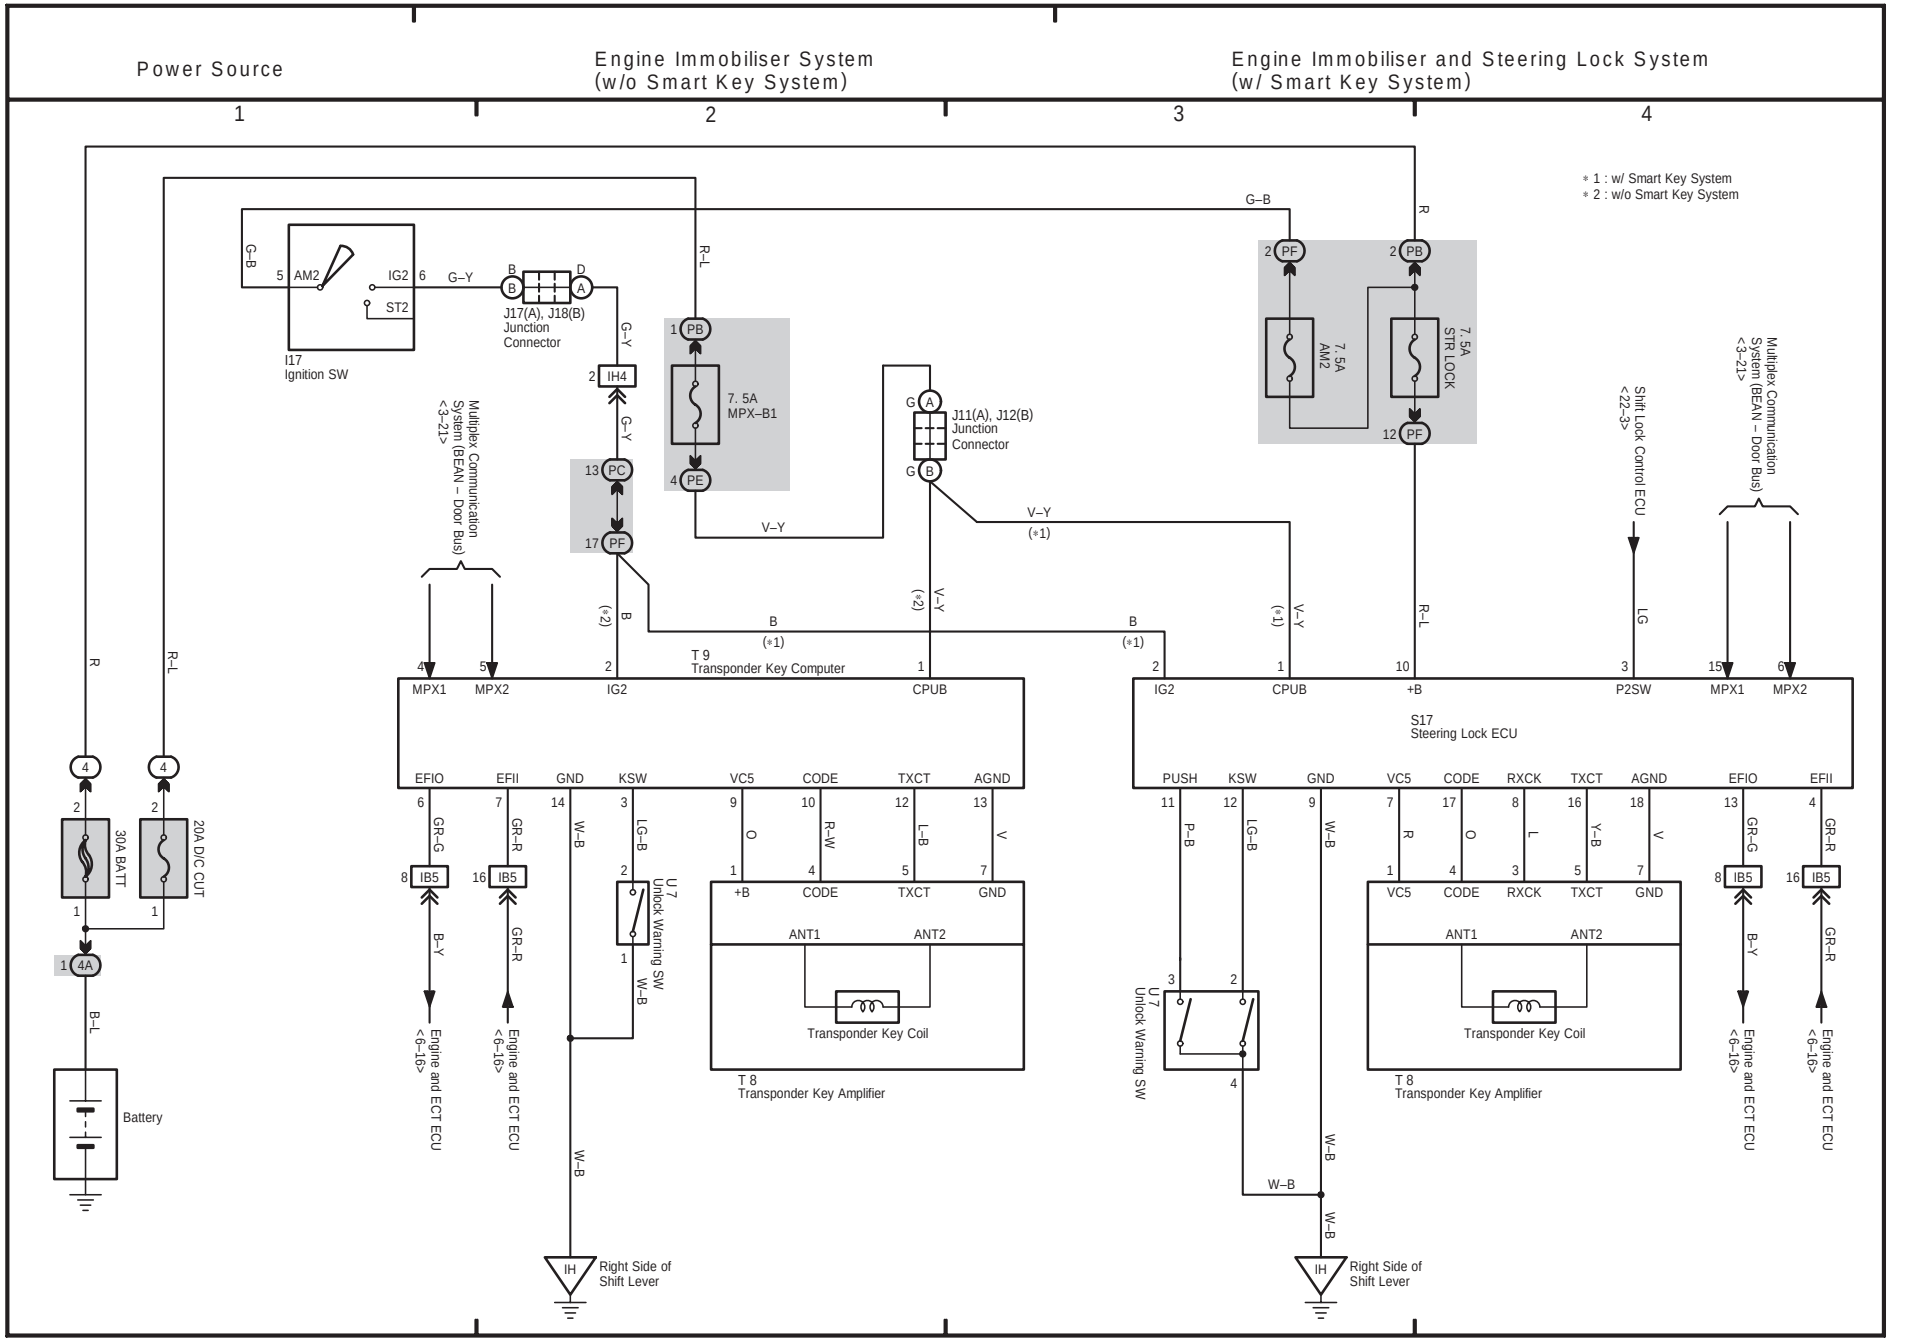
Power Source
Engine Immobiliser System (w/o Smart Key System)
Engine Immobiliser and Steering Lock System (w/ Smart Key System)
1
2
3
4
* 1 : w/ Smart Key System
* 2 : w/o Smart Key System
I17 Ignition SW
AM2
IG2
ST2
J17(A), J18(B) Junction Connector
IH4
7. 5A MPX–B1
J11(A), J12(B) Junction Connector
7. 5A AM2
7. 5A STR LOCK
Multiplex Communication System (BEAN – Door Bus) <3–21>
Shift Lock Control ECU <22–3>
T 9 Transponder Key Computer
MPX1
MPX2
IG2
CPUB
EFIO
EFII
GND
KSW
VC5
CODE
TXCT
AGND
+B
ANT1
ANT2
Transponder Key Coil
T 8 Transponder Key Amplifier
U 7 Unlock Warning SW
IB5
Engine and ECT ECU <6–16>
Right Side of Shift Lever
S17 Steering Lock ECU
PUSH
RXCK
P2SW
30A BATT
20A D/C CUT
4A
Battery