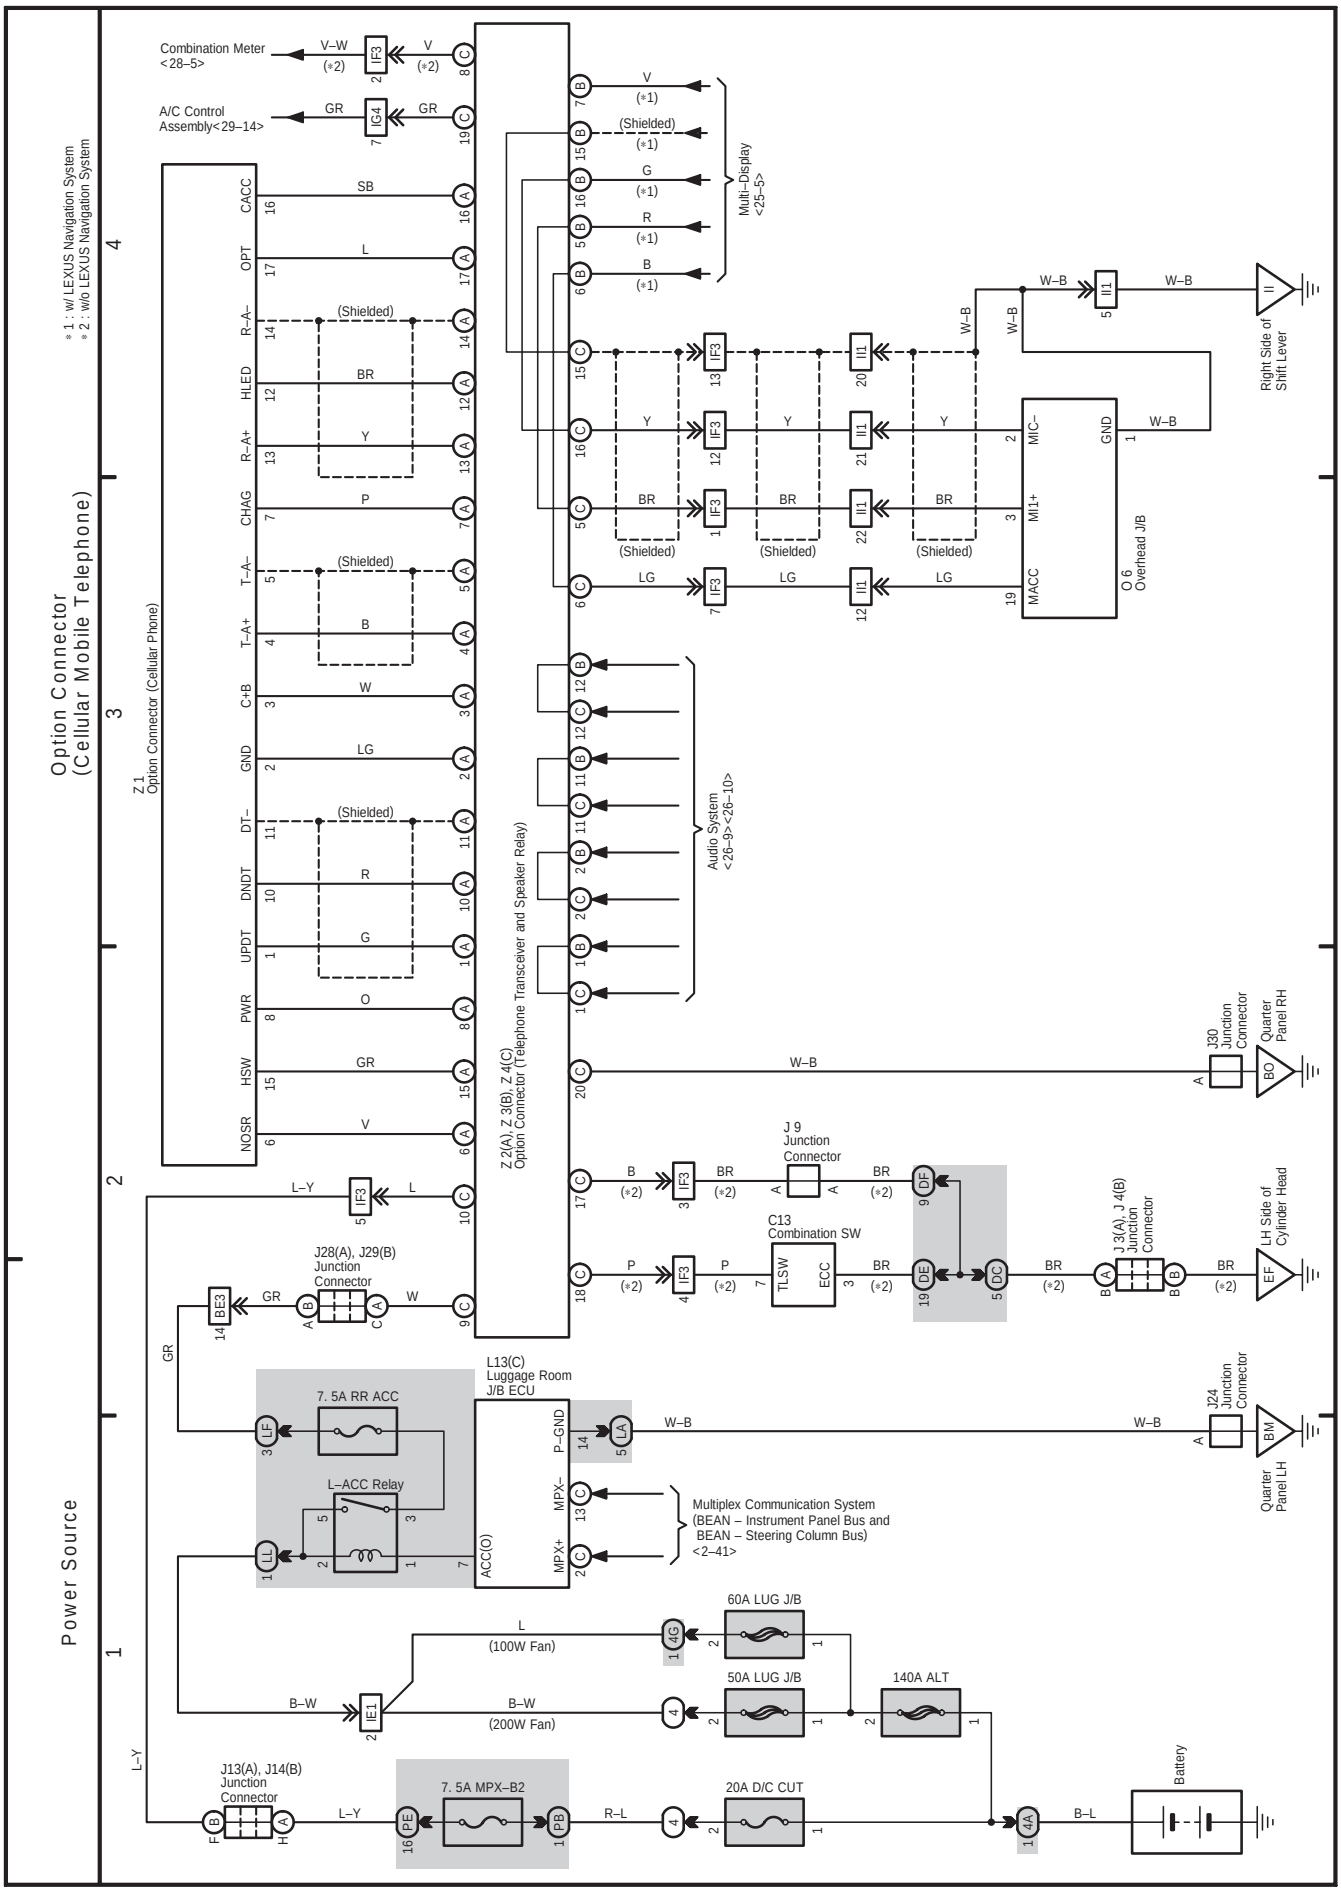
Power Source
Option Connector (Cellular Mobile Telephone)
* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System
Combination Meter <28–5>
A/C Control Assembly<29–14>
Z1 Option Connector (Cellular Phone)
Z 2(A), Z 3(B), Z 4(C) Option Connector (Telephone Transceiver and Speaker Relay)
Multi–Display <25–5>
Audio System <26–9><26–10>
O 6 Overhead J/B
Right Side of Shift Lever
J30 Junction Connector
Quarter Panel RH
J 9 Junction Connector
C13 Combination SW
J 3(A), J 4(B) Junction Connector
LH Side of Cylinder Head
J28(A), J29(B) Junction Connector
L13(C) Luggage Room J/B ECU
7. 5A RR ACC
L–ACC Relay
J24 Junction Connector
Quarter Panel LH
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–41>
60A LUG J/B
50A LUG J/B
140A ALT
Battery
J13(A), J14(B) Junction Connector
7. 5A MPX–B2
20A D/C CUT