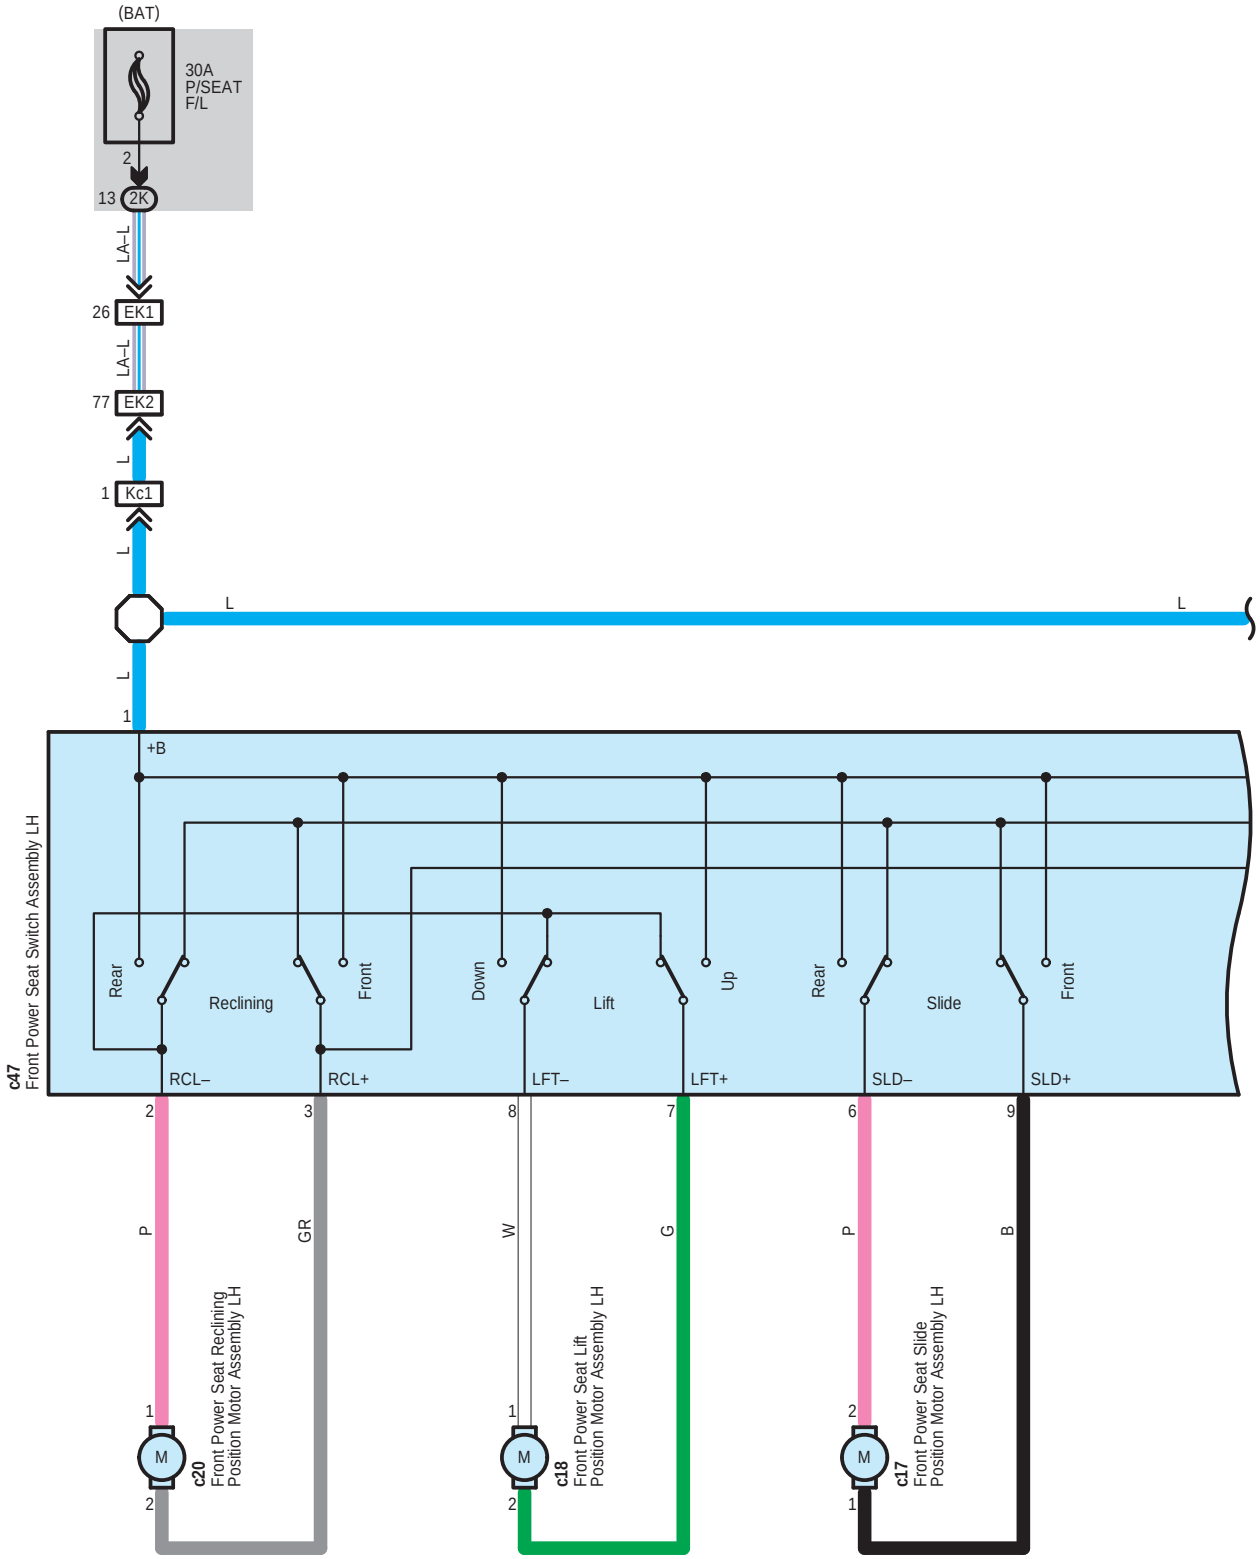
(BAT)
30A
P/SEAT
F/L
2
13
2K
LA–L
26
EK1
LA–L
77
EK2
L
1
Kc1
L
L
L
L
1
+B
c47
Front Power Seat Switch Assembly LH
Rear
Reclining
Front
Down
Lift
Up
Rear
Slide
Front
RCL–
RCL+
LFT–
LFT+
SLD–
SLD+
2
3
8
7
6
9
P
GR
W
G
P
B
1
M
2
c20
Front Power Seat Reclining
Position Motor Assembly LH
1
M
2
c18
Front Power Seat Lift
Position Motor Assembly LH
2
M
1
c17
Front Power Seat Slide
Position Motor Assembly LH

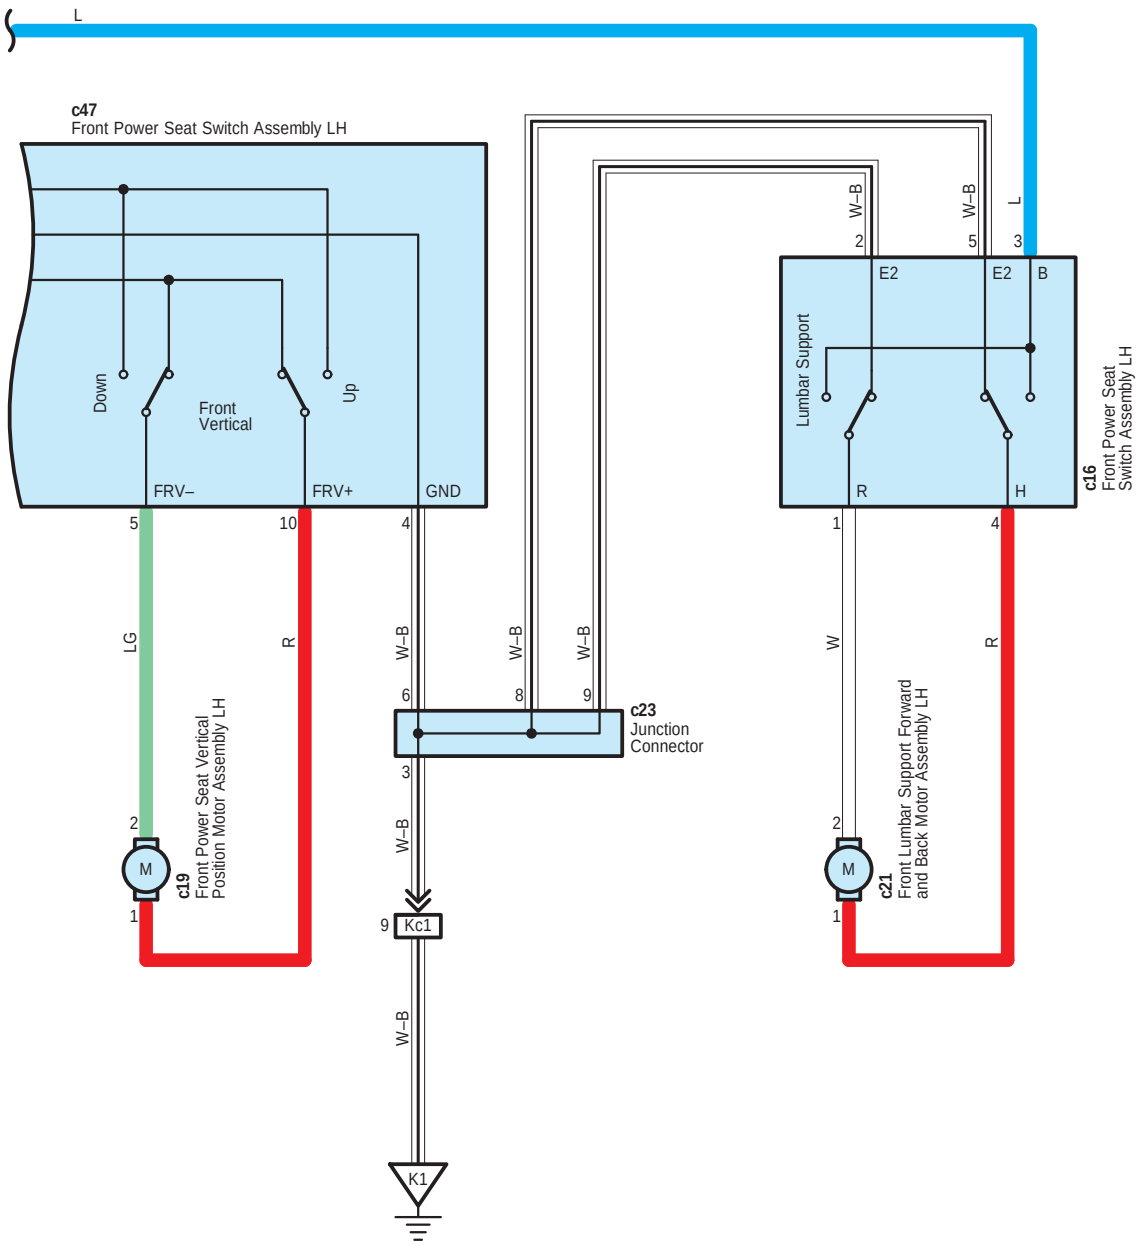
L
c47
Front Power Seat Switch Assembly LH
Down
Front
Vertical
Up
FRV–
FRV+
GND
5
10
4
LG
R
W–B
W–B
W–B
W–B
6
8
9
c23
Junction
Connector
3
W–B
9
Kc1
W–B
K1
2
M
1
c19
Front Power Seat Vertical
Position Motor Assembly LH
W–B
W–B
L
2
5
3
E2
E2
B
Lumbar Support
R
H
c16
Front Power Seat
Switch Assembly LH
1
4
W
R
2
M
1
c21
Front Lumbar Support Forward
and Back Motor Assembly LH

Power Seat <RHD Front Passenger's Seat , From Sep. 2015 Production>

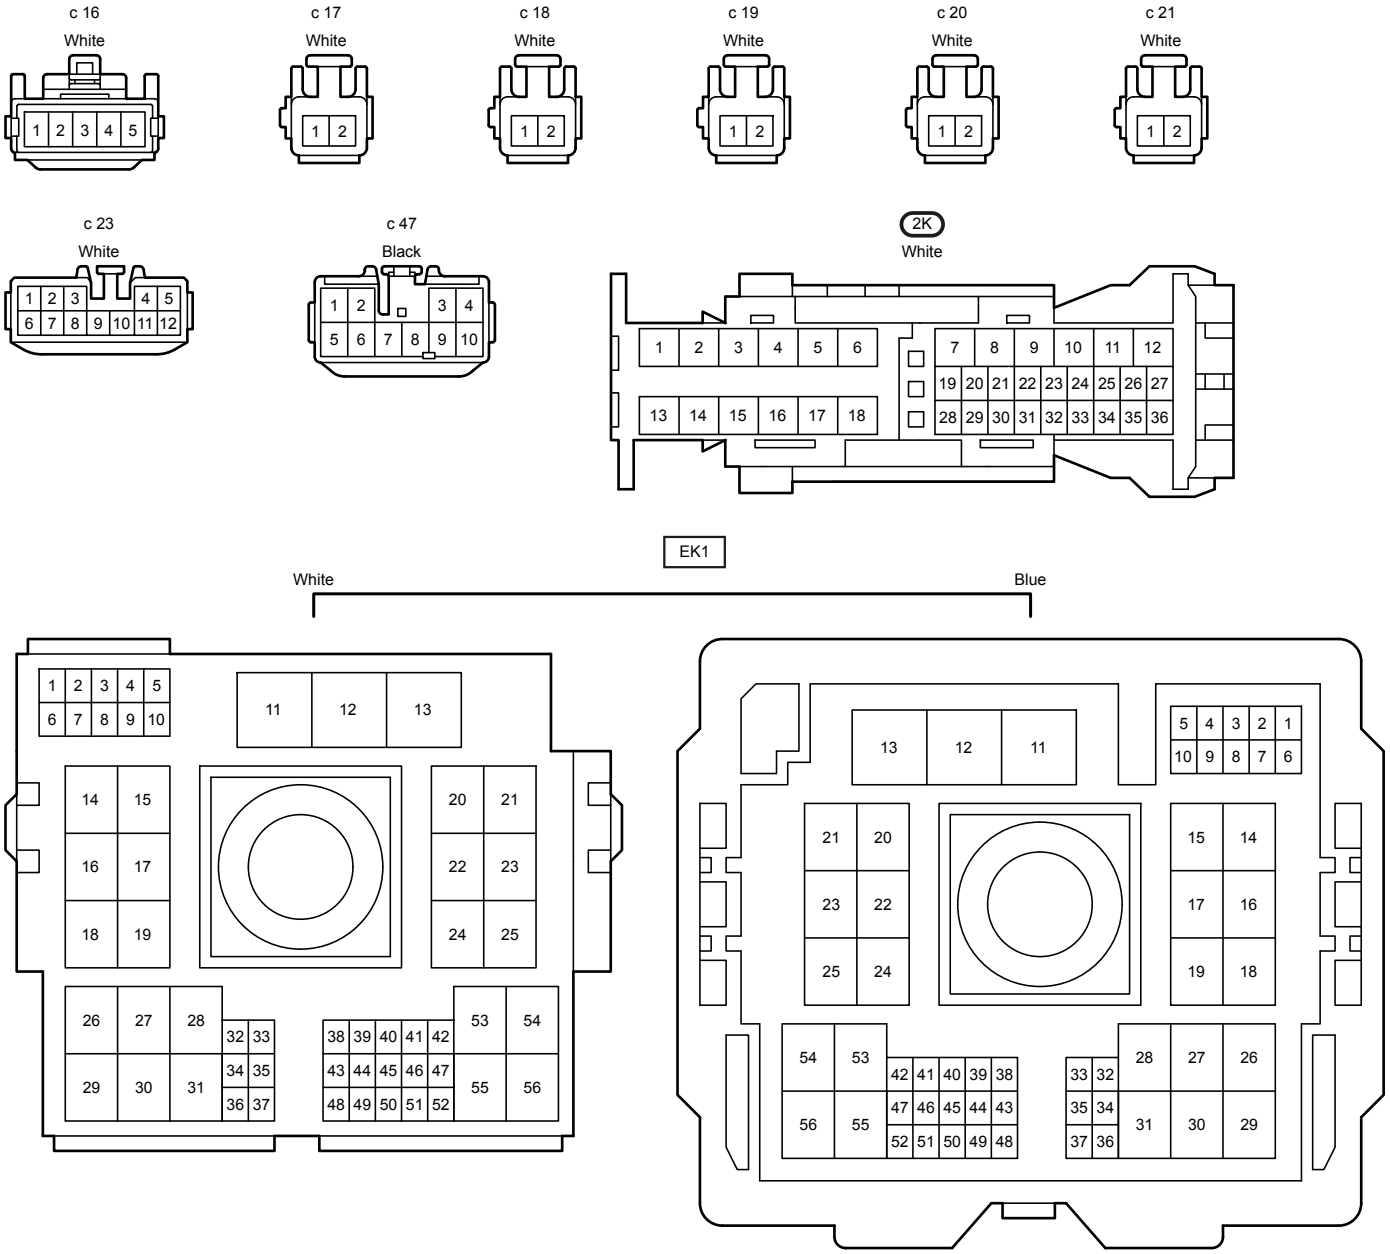

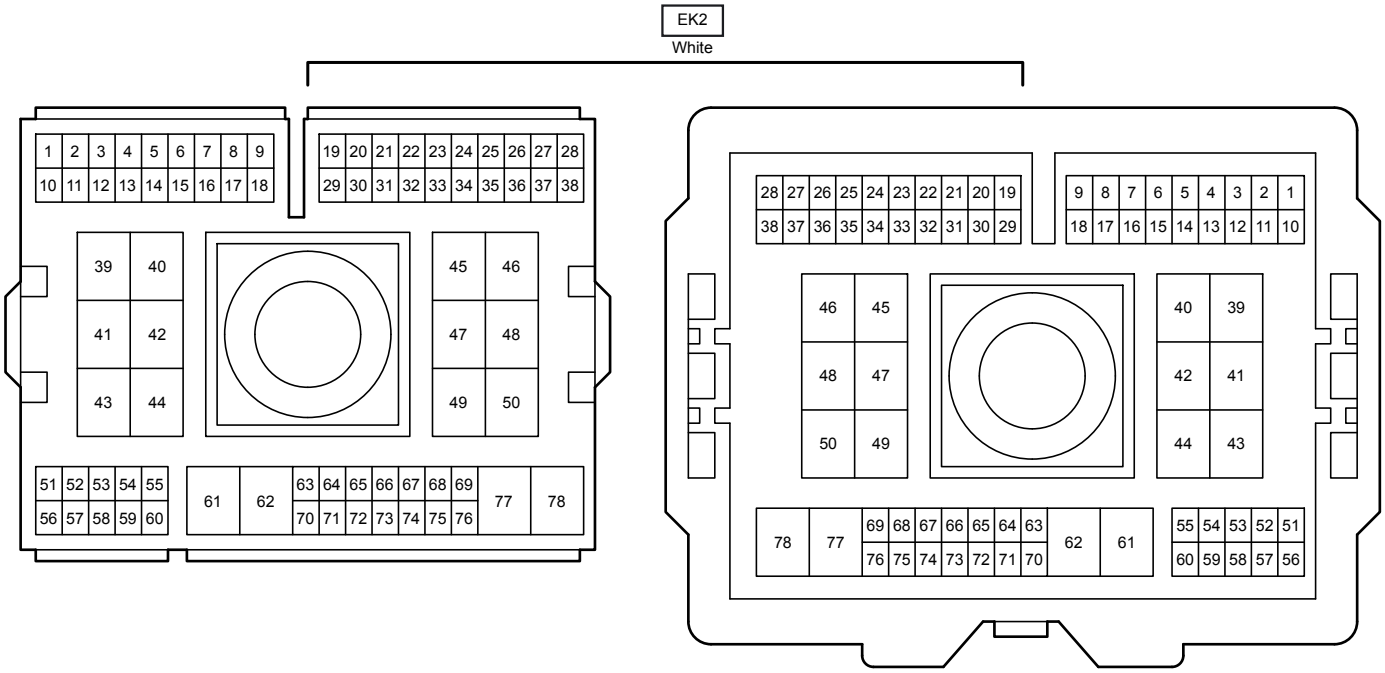
EK2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
19 20 21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40
41 42
43 44
45 46
47 48
49 50
51 52 53 54 55
56 57 58 59 60
61 62
63 64 65 66 67 68 69
70 71 72 73 74 75 76
77 78
28 27 26 25 24 23 22 21 20 19
38 37 36 35 34 33 32 31 30 29
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
46 45
48 47
50 49
40 39
42 41
44 43
78 77
69 68 67 66 65 64 63
76 75 74 73 72 71 70
62 61
55 54 53 52 51
60 59 58 57 56

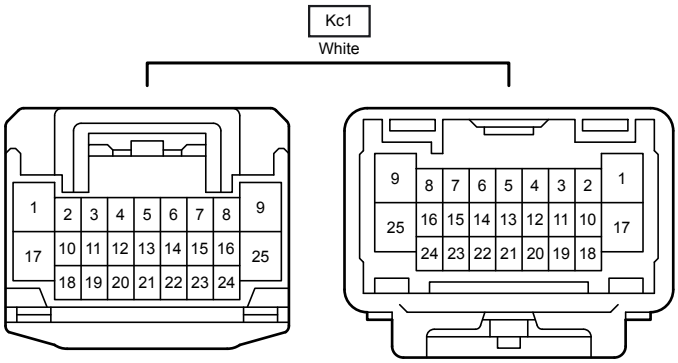
Kc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18