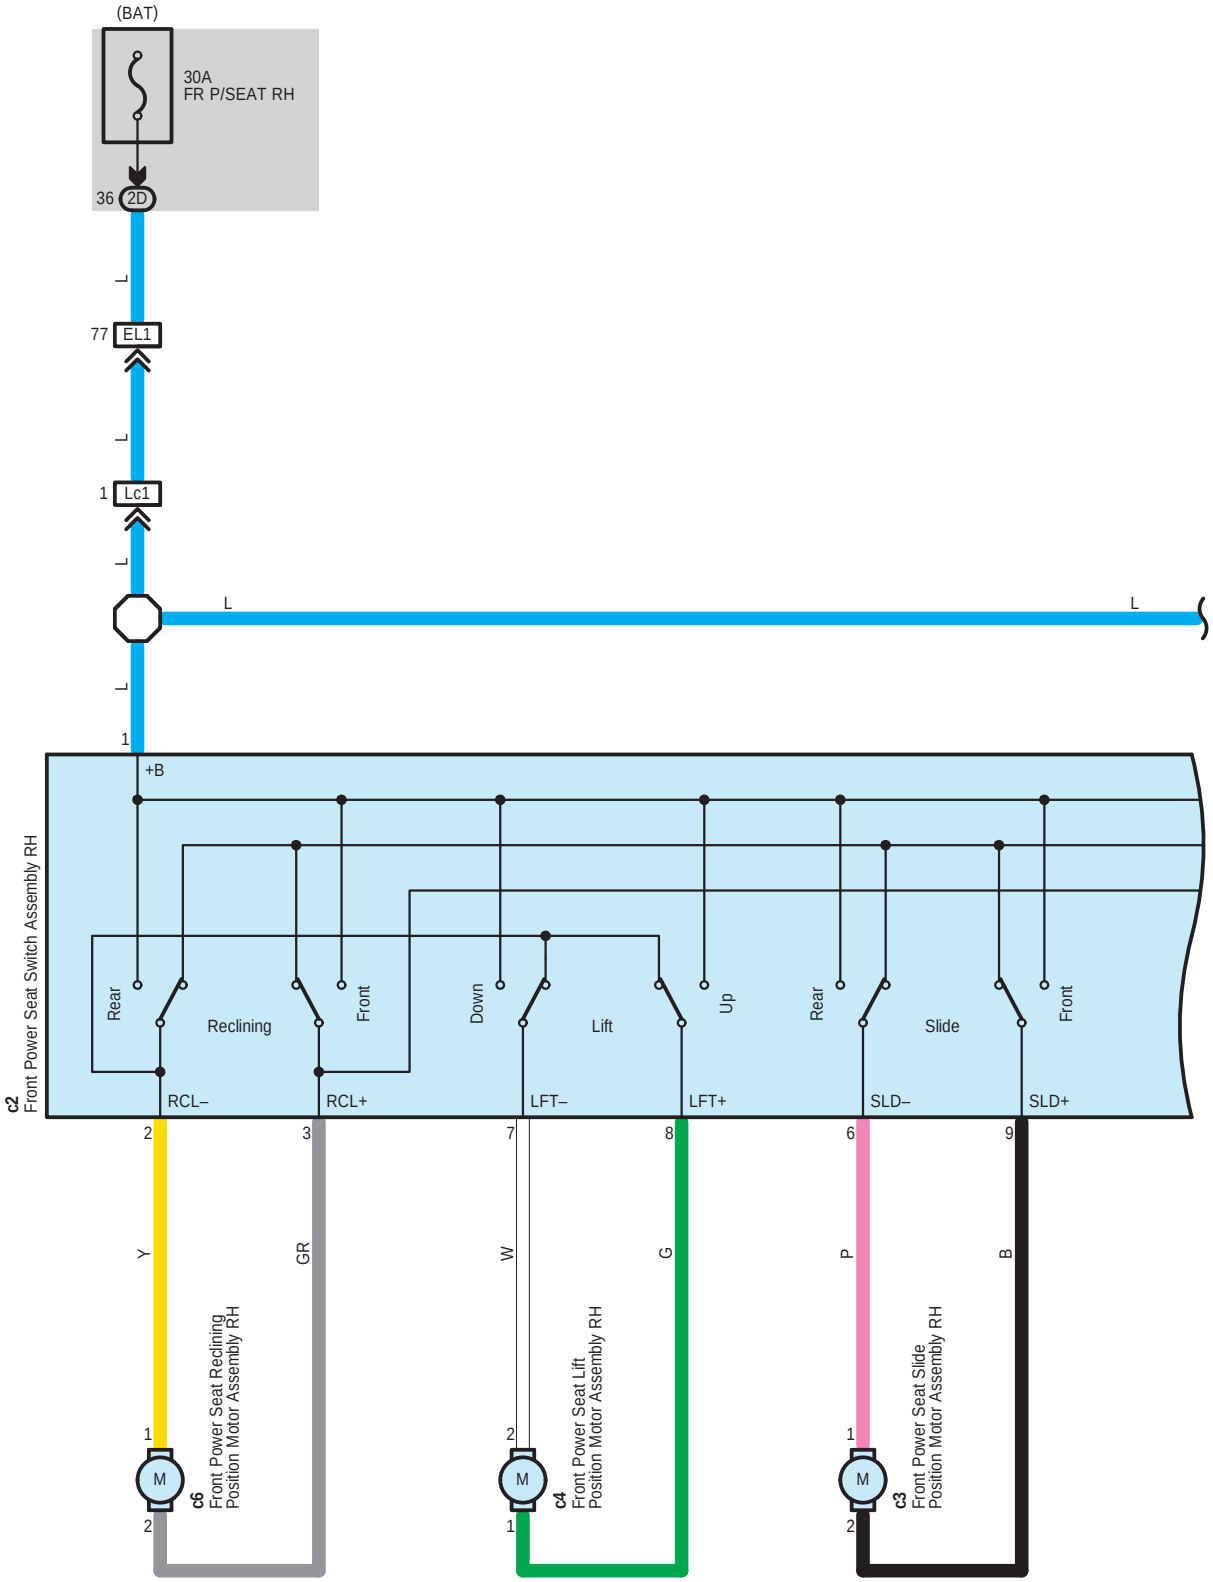
(BAT)
30A
FR P/SEAT RH
36
2D
L
77
EL1
L
1
Lc1
L
L
L
L
1
+B
c2
Front Power Seat Switch Assembly RH
Rear
Reclining
Front
Down
Lift
Up
Rear
Slide
Front
RCL–
RCL+
LFT–
LFT+
SLD–
SLD+
2
3
7
8
6
9
Y
GR
W
G
P
B
1
2
M
c6
Front Power Seat Reclining
Position Motor Assembly RH
c4
Front Power Seat Lift
Position Motor Assembly RH
c3
Front Power Seat Slide
Position Motor Assembly RH

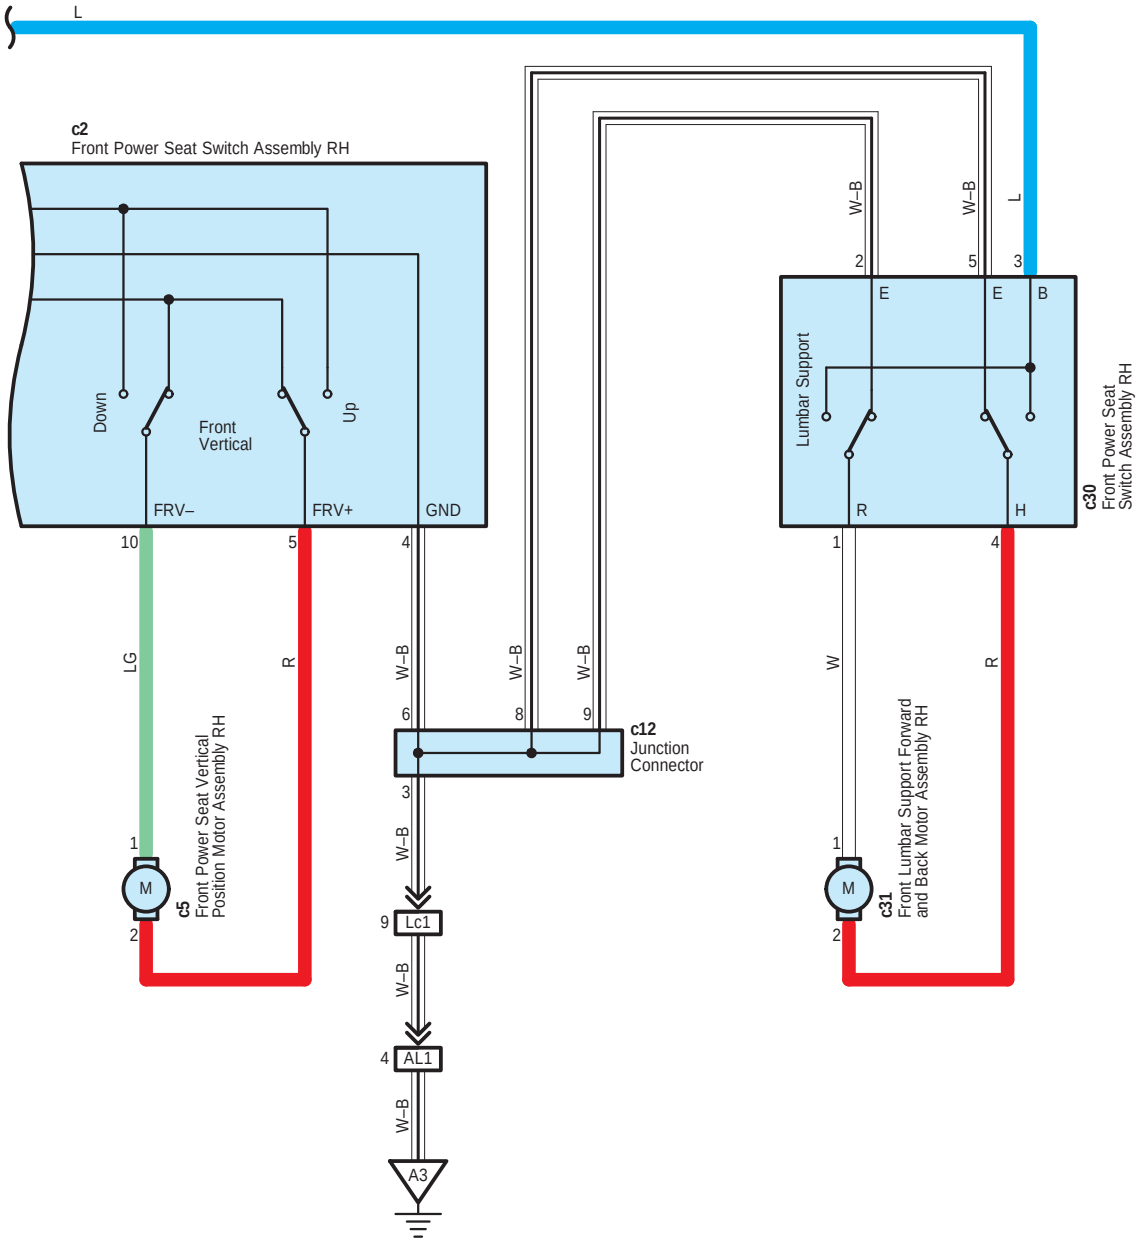
L
c2
Front Power Seat Switch Assembly RH
Down
Front
Vertical
Up
FRV–
FRV+
GND
10
5
4
LG
R
W–B
W–B
W–B
6
8
9
c12
Junction
Connector
3
W–B
1
M
2
c5
Front Power Seat Vertical
Position Motor Assembly RH
9
Lc1
W–B
4
AL1
W–B
A3
W–B
W–B
L
2
5
3
E
E
B
Lumbar Support
R
H
c30
Front Power Seat
Switch Assembly RH
1
4
W
R
1
M
2
c31
Front Lumbar Support Forward
and Back Motor Assembly RH

Power Seat <LHD Front Passenger's Seat, Before Sep. 2015 Production>

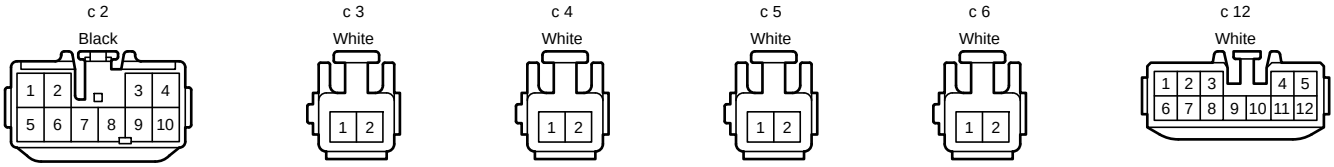

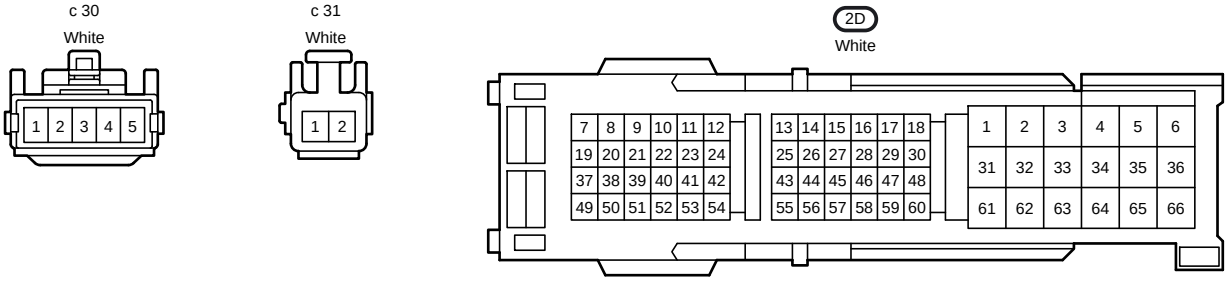

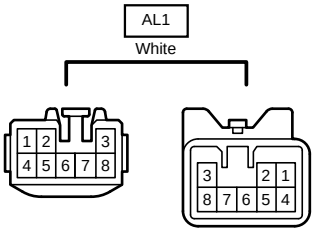

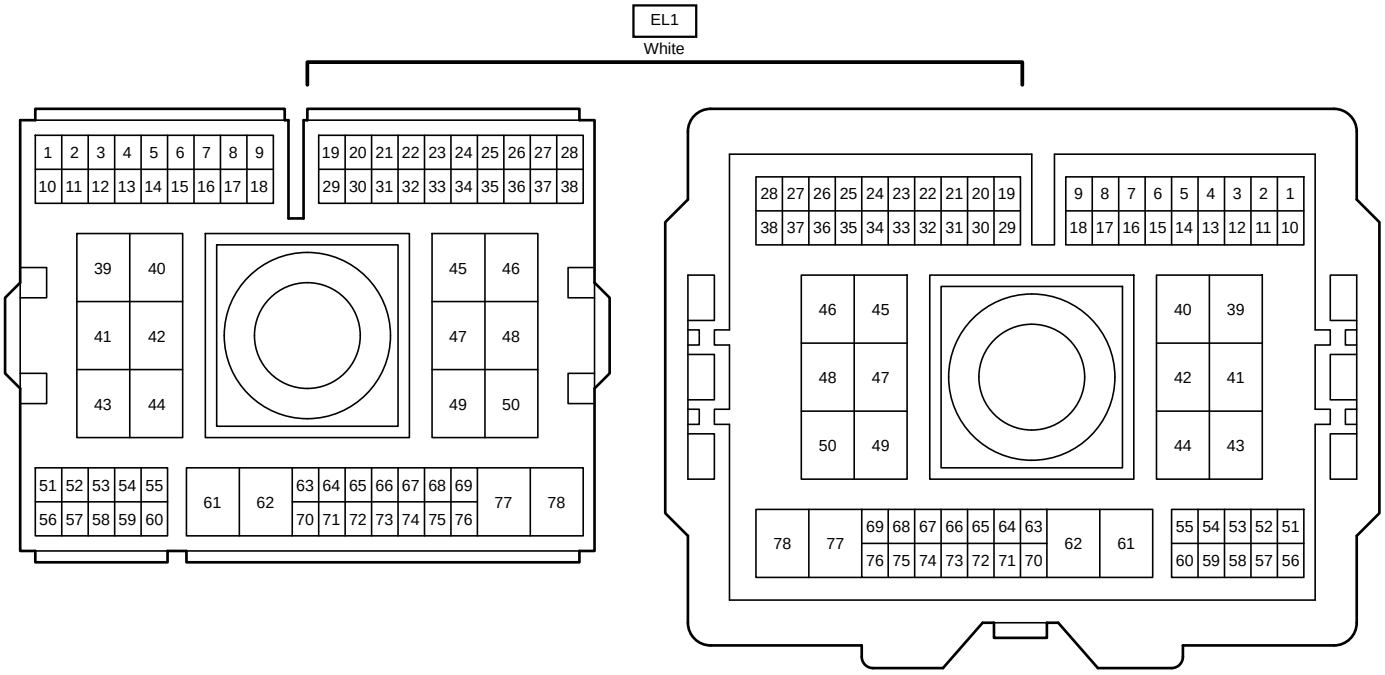

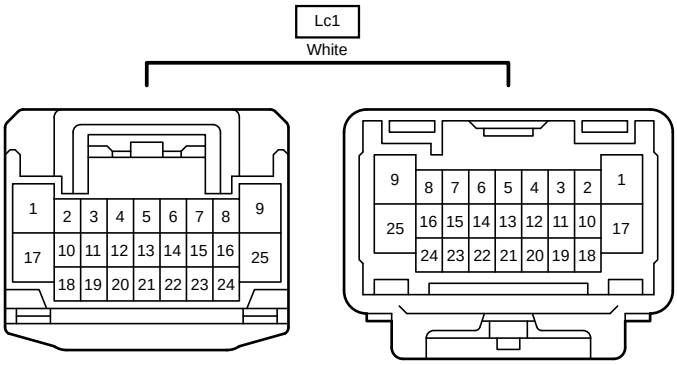
Lc1
White
1
2
3
4
5
6
7
8
9
17
10
11
12
13
14
15
16
25
18
19
20
21
22
23
24
9
8
7
6
5
4
3
2
1
25
16
15
14
13
12
11
10
17
24
23
22
21
20
19
18