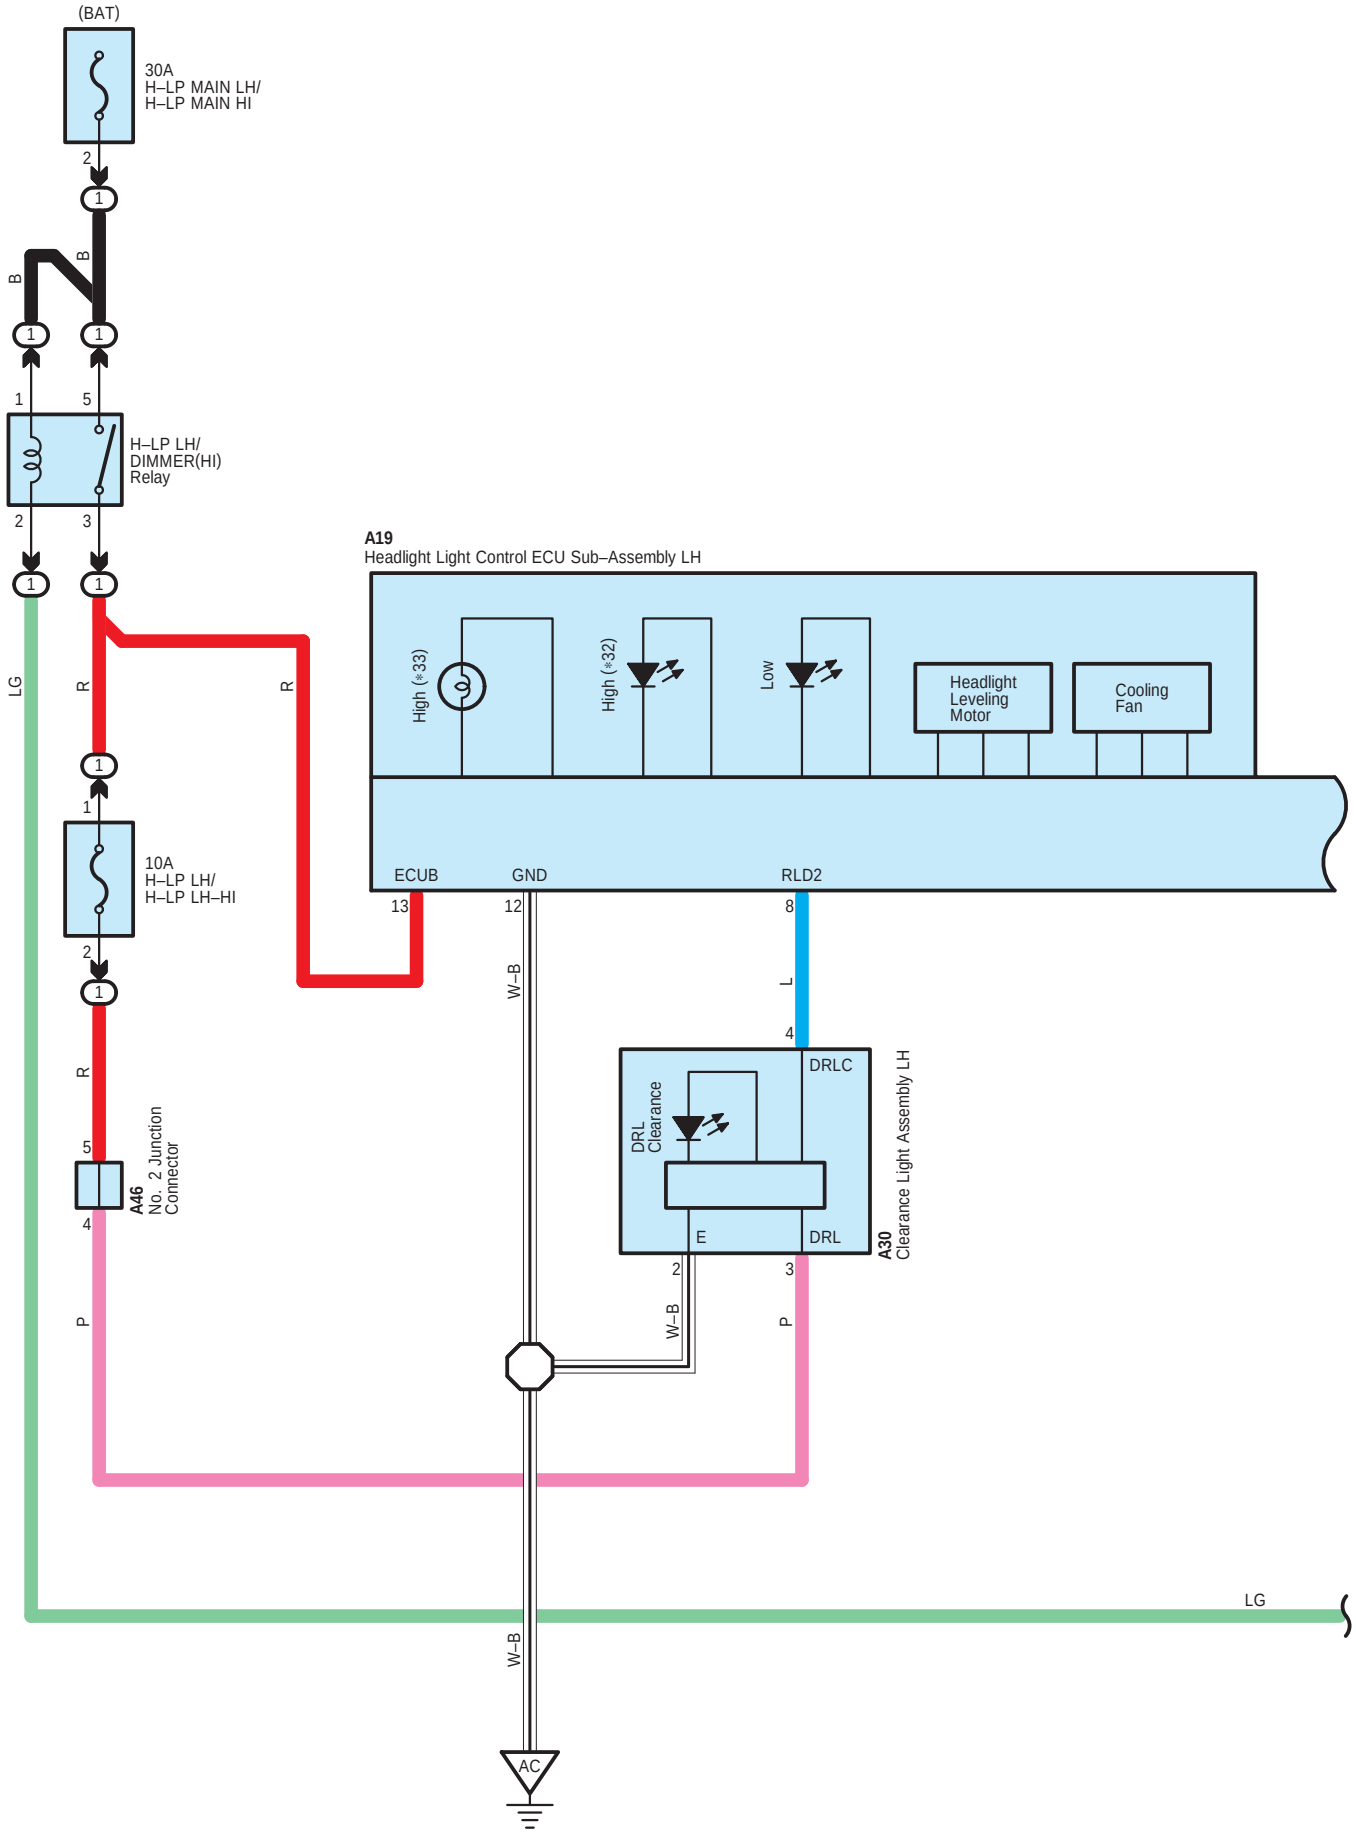
(BAT)
30A
H–LP MAIN LH/
H–LP MAIN HI
H–LP LH/
DIMMER(HI)
Relay
A19
Headlight Light Control ECU Sub–Assembly LH
High (*33)
High (*32)
Low
Headlight
Leveling
Motor
Cooling
Fan
ECUB
GND
RLD2
10A
H–LP LH/
H–LP LH–HI
A46
No. 2 Junction
Connector
DRLC
DRL
Clearance
E
DRL
A30
Clearance Light Assembly LH
LG
W–B
AC

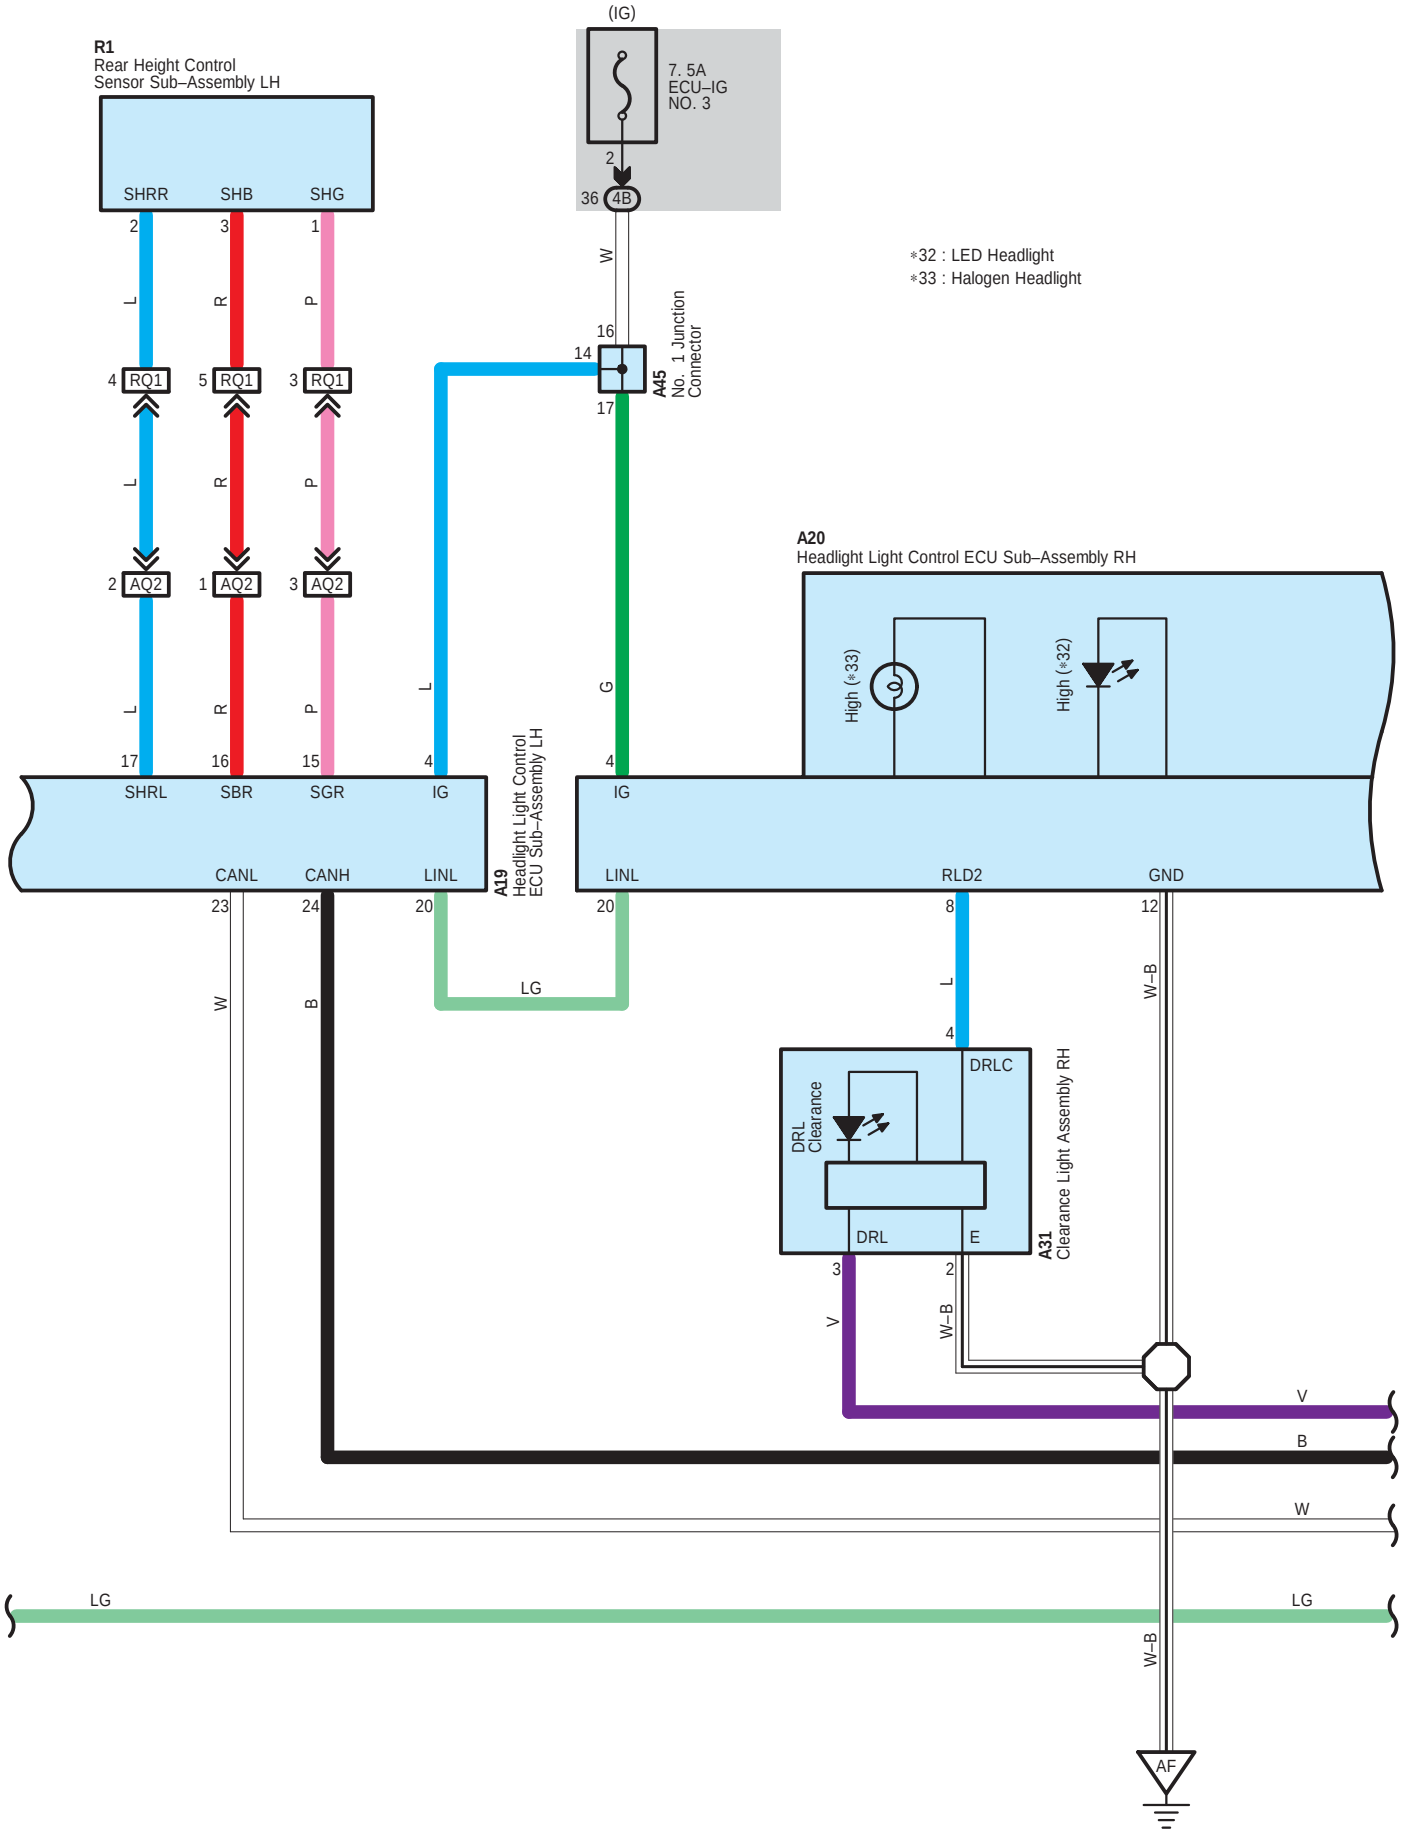
R1
Rear Height Control
Sensor Sub–Assembly LH
SHRR
SHB
SHG
(IG)
7. 5A
ECU–IG
NO. 3
36
4B
W
16
14
17
A45
No. 1 Junction
Connector
∗32 : LED Headlight
∗33 : Halogen Headlight
RQ1
AQ2
A20
Headlight Light Control ECU Sub–Assembly RH
High (∗33)
High (∗32)
SHRL
SBR
SGR
IG
G
A19
Headlight Light Control
ECU Sub–Assembly LH
CANL
CANH
LINL
RLD2
GND
LG
DRLC
DRL
Clearance
DRL
E
A31
Clearance Light Assembly RH
V
B
W–B
AF

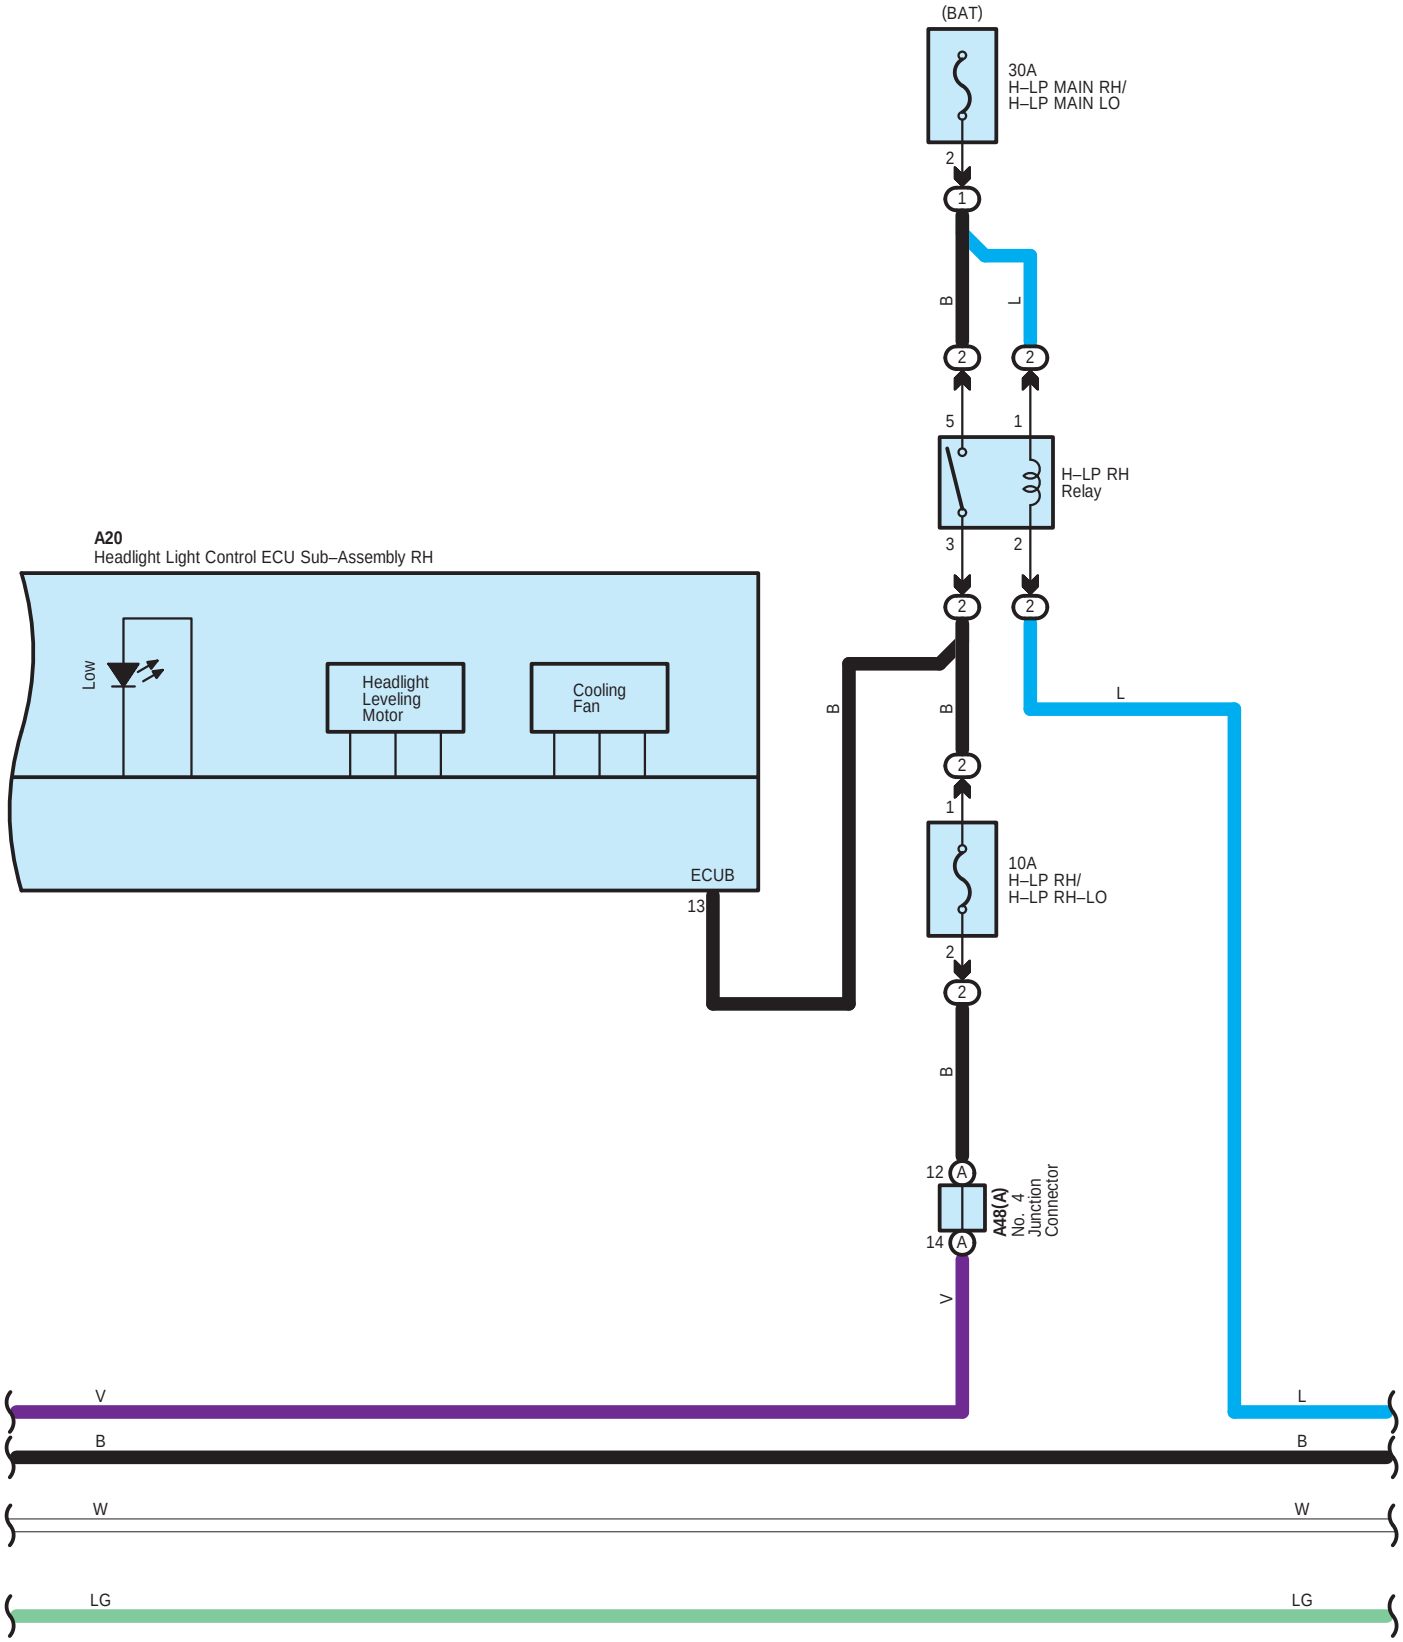
(BAT)
30A
H–LP MAIN RH/
H–LP MAIN LO
2
1
B
L
2
2
5
1
H–LP RH
Relay
3
2
2
2
A20
Headlight Light Control ECU Sub–Assembly RH
Low
Headlight
Leveling
Motor
Cooling
Fan
B
B
L
2
1
10A
H–LP RH/
H–LP RH–LO
ECUB
13
2
2
B
12
A
A48(A)
No. 4
Junction
Connector
14
A
V
V
L
B
B
W
W
LG
LG

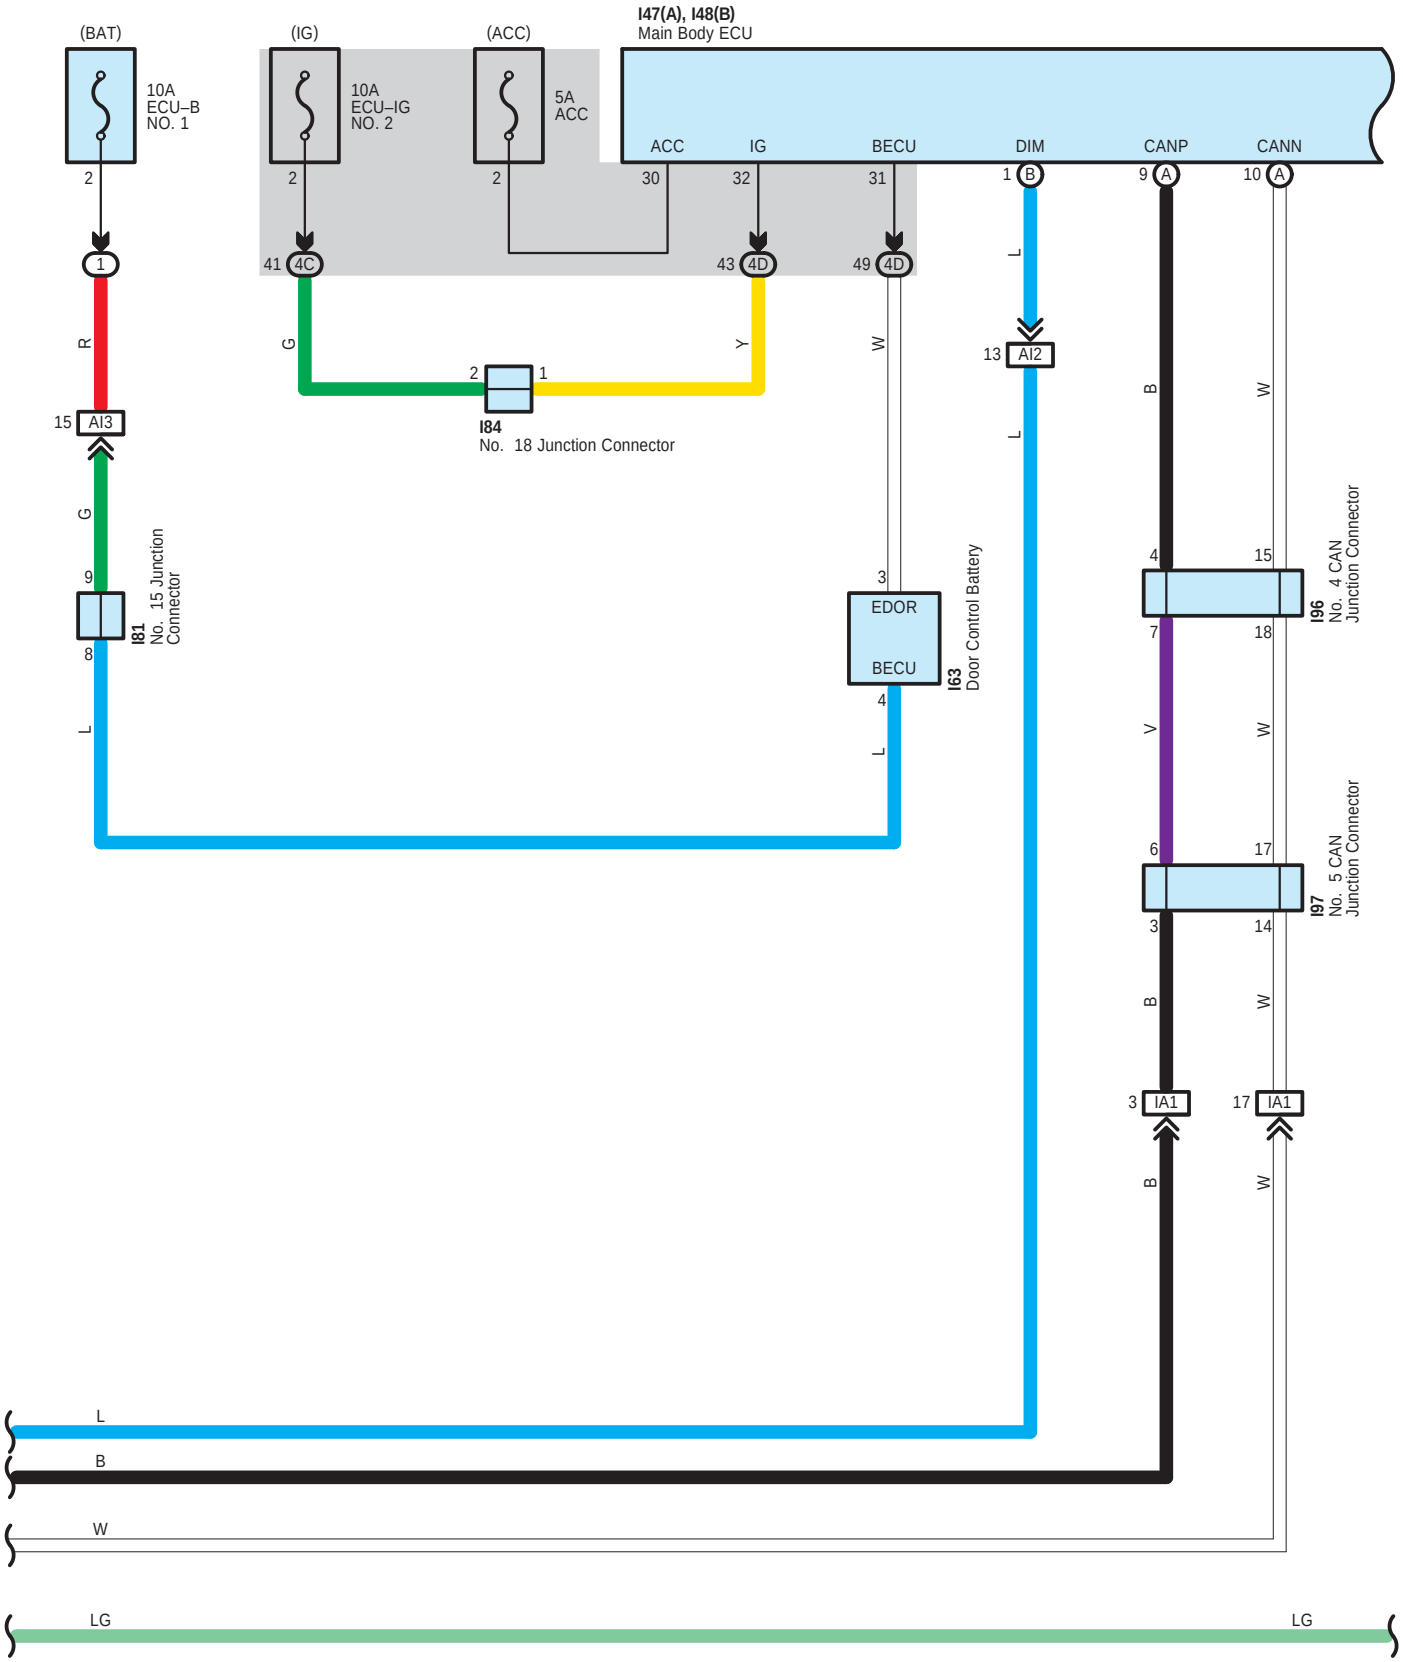
(BAT)
10A
ECU–B
NO. 1
(IG)
10A
ECU–IG
NO. 2
(ACC)
5A
ACC
I47(A), I48(B)
Main Body ECU
ACC
IG
BECU
DIM
CANP
CANN
AI3
AI2
I84
No. 18 Junction Connector
I81
No. 15 Junction
Connector
EDOR
BECU
I63
Door Control Battery
I96
No. 4 CAN
Junction Connector
I97
No. 5 CAN
Junction Connector
IA1
IA1
L
B
W
LG
LG

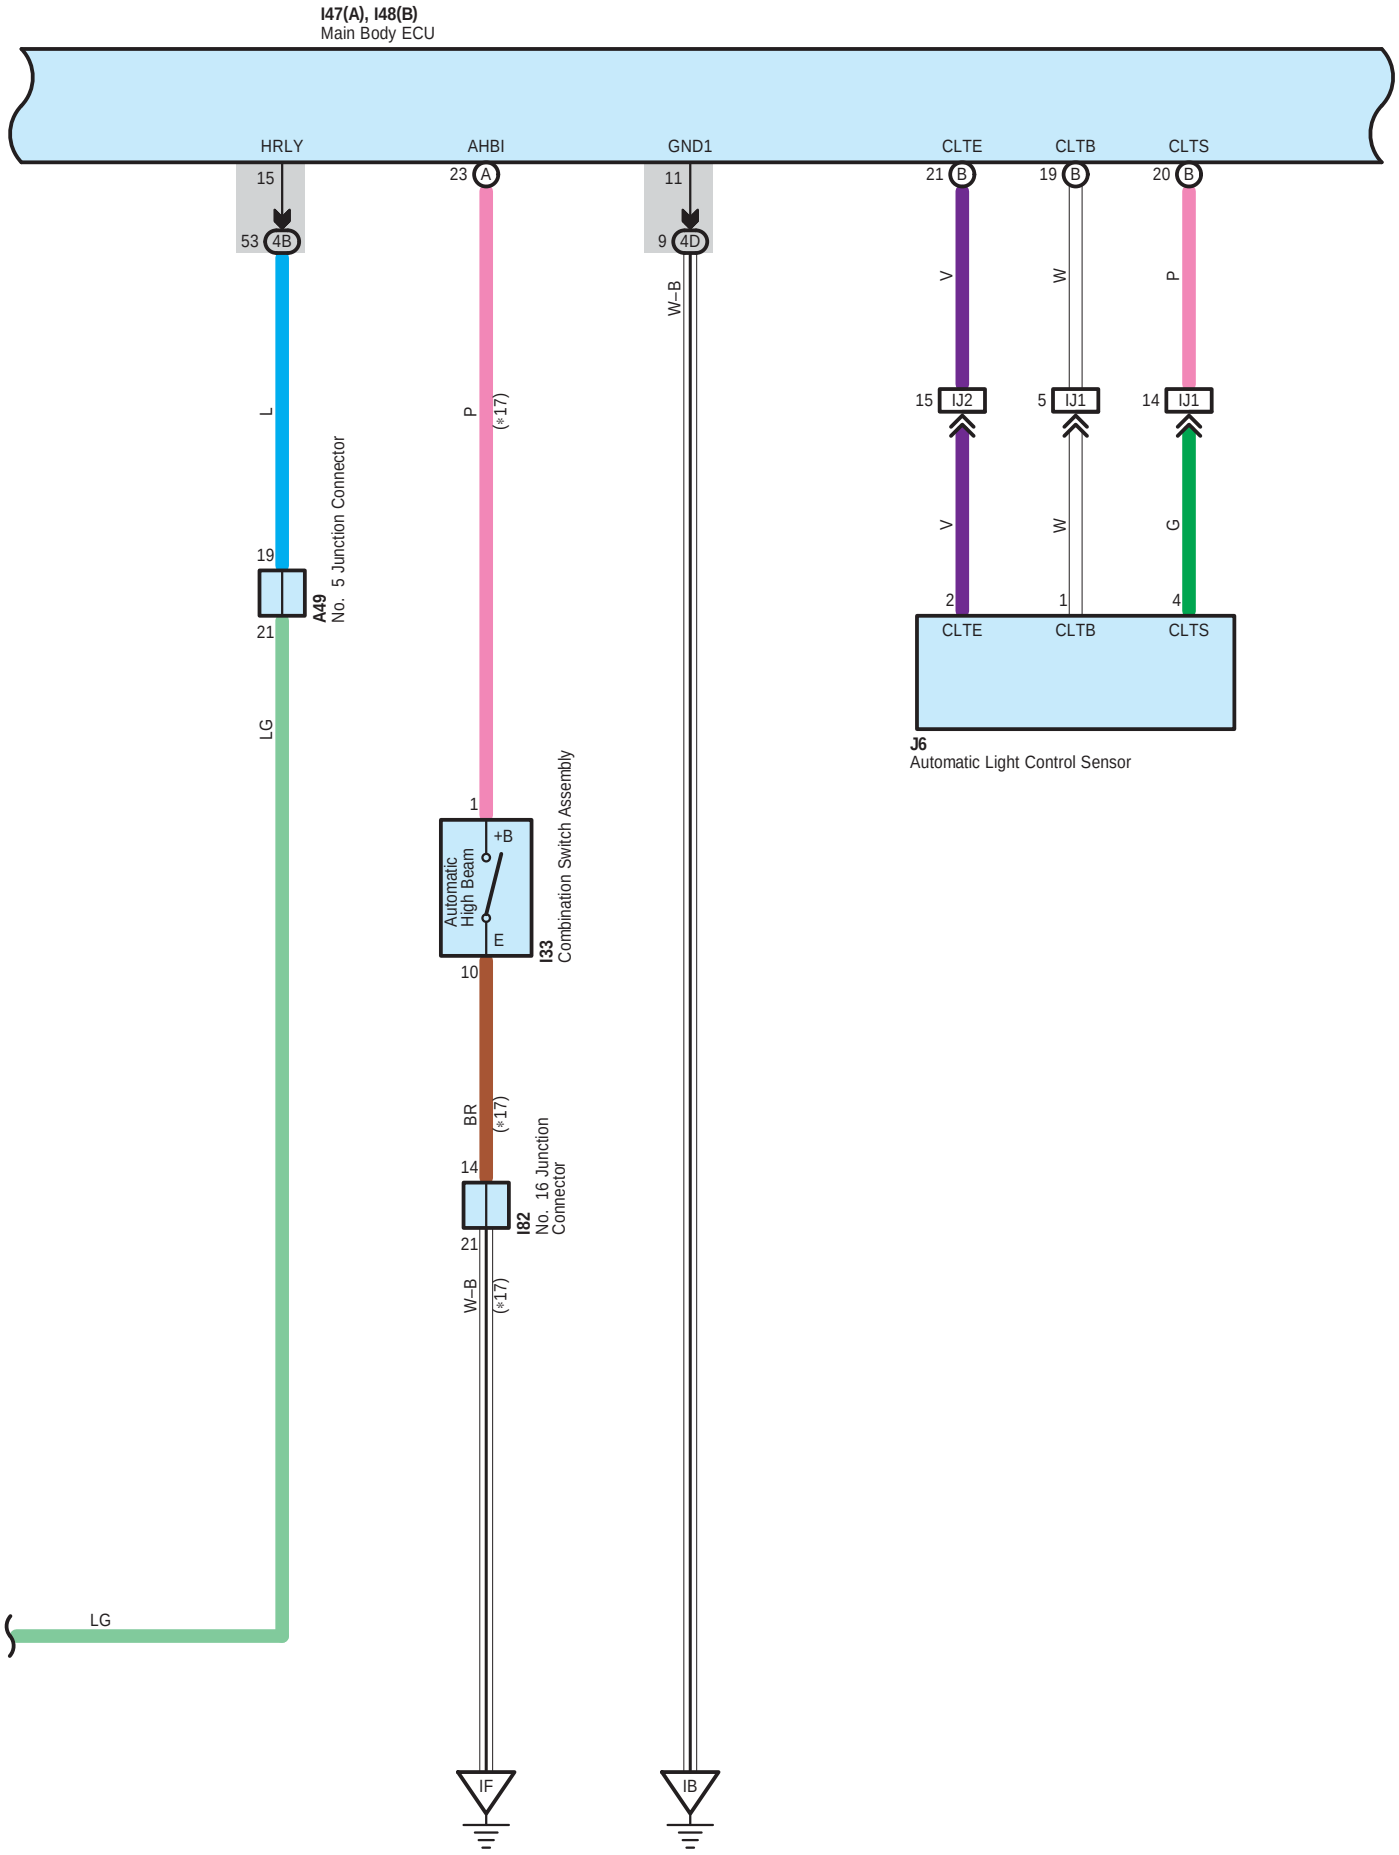
I47(A), I48(B)
Main Body ECU
HRLY
AHBI
GND1
CLTE
CLTB
CLTS
15
53 4B
23 A
11
9 4D
21 B
19 B
20 B
L
P (*17)
W–B
V
W
P
15 IJ2
5 IJ1
14 IJ1
V
W
G
2
1
4
CLTE
CLTB
CLTS
J6
Automatic Light Control Sensor
19
21
A49
No. 5 Junction Connector
LG
1
+B
Automatic High Beam
E
I33
Combination Switch Assembly
10
BR (*17)
14
21
I82
No. 16 Junction Connector
W–B (*17)
LG
IF
IB

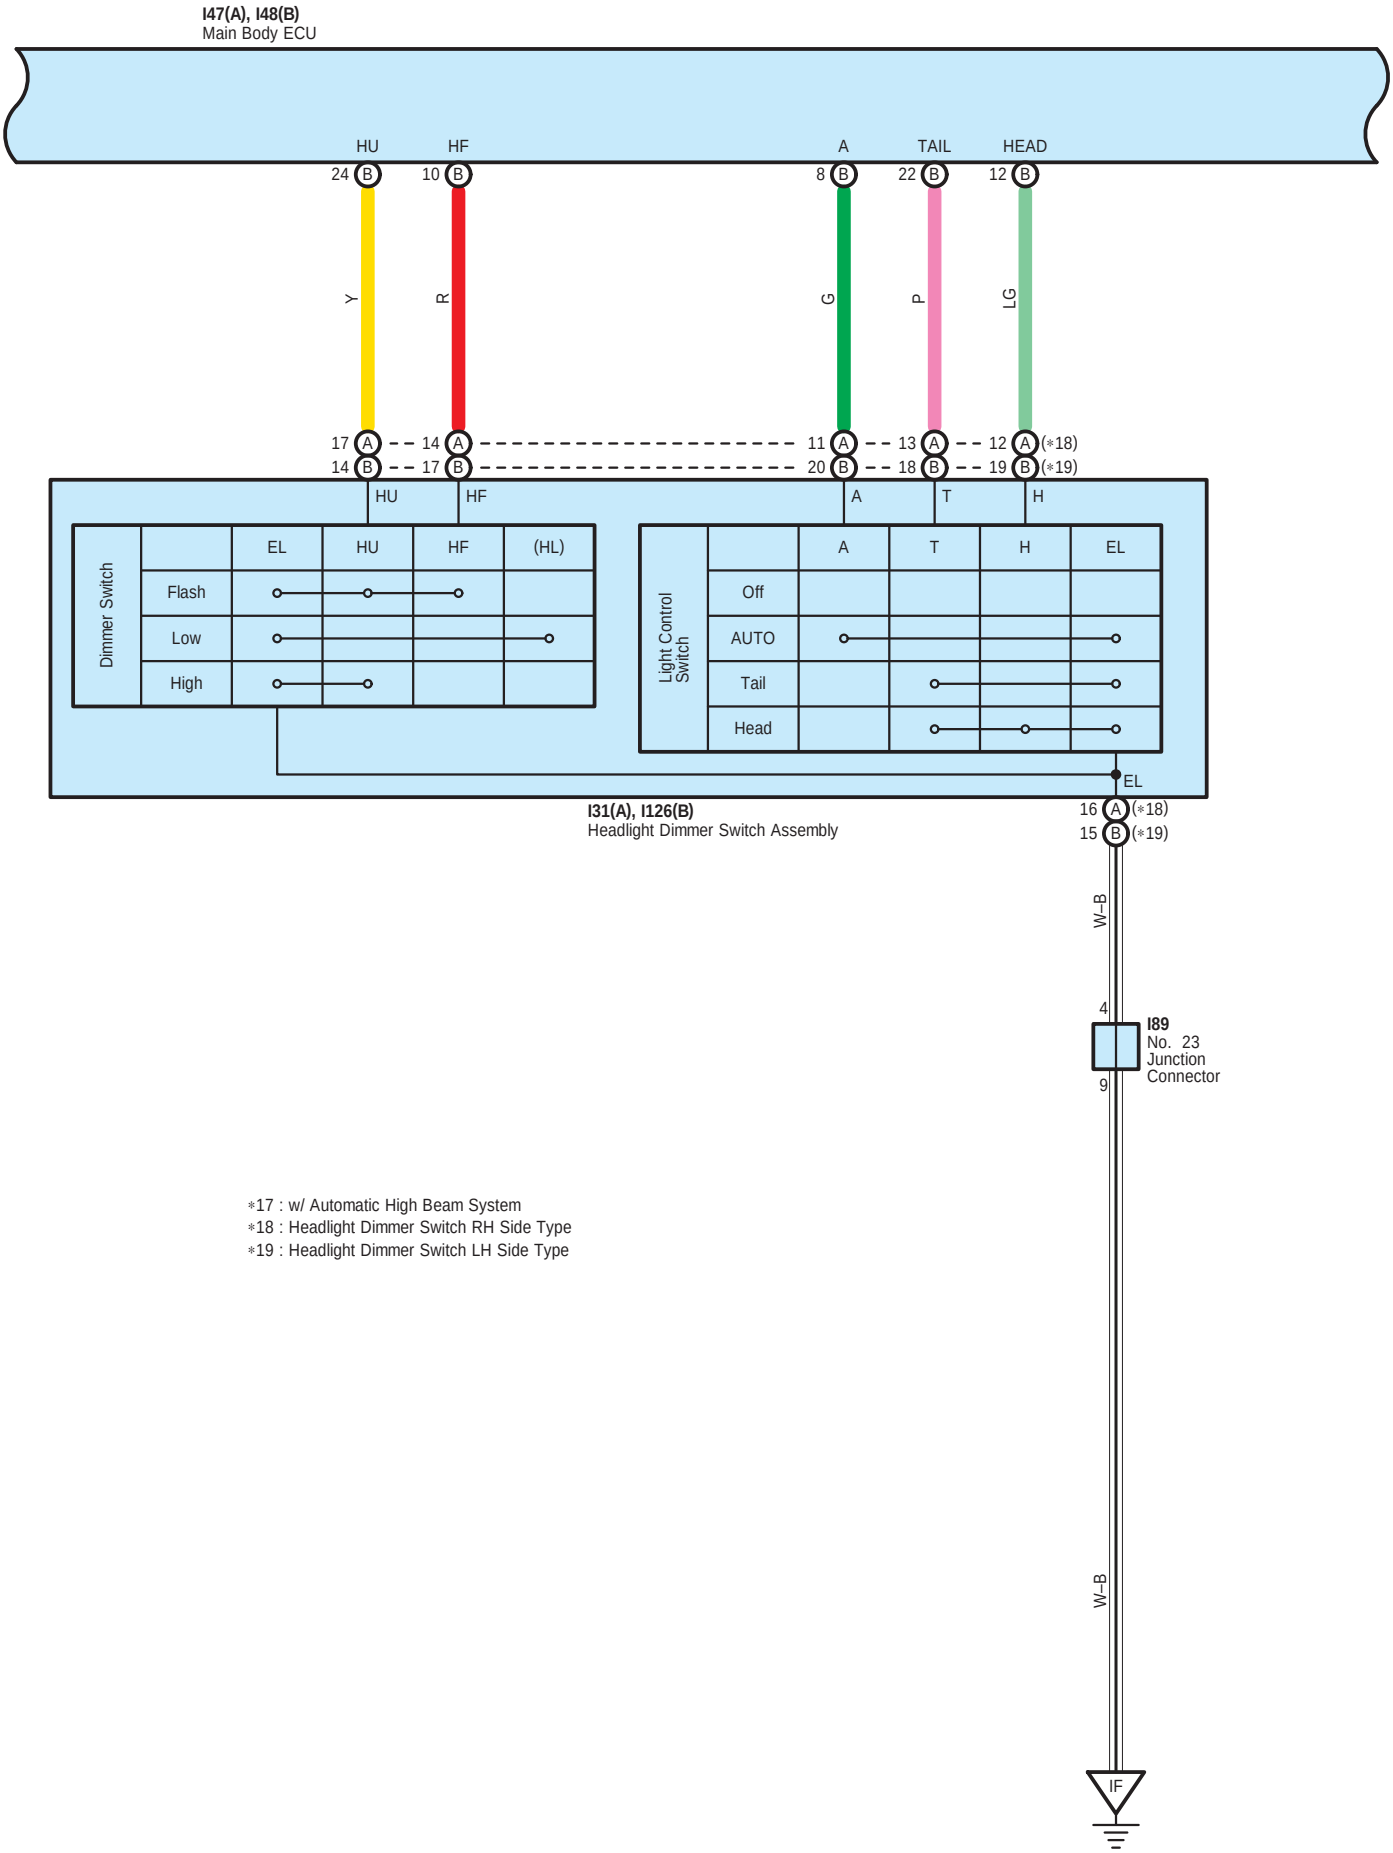

*17 : w/ Automatic High Beam System
*18 : Headlight Dimmer Switch RH Side Type
*19 : Headlight Dimmer Switch LH Side Type

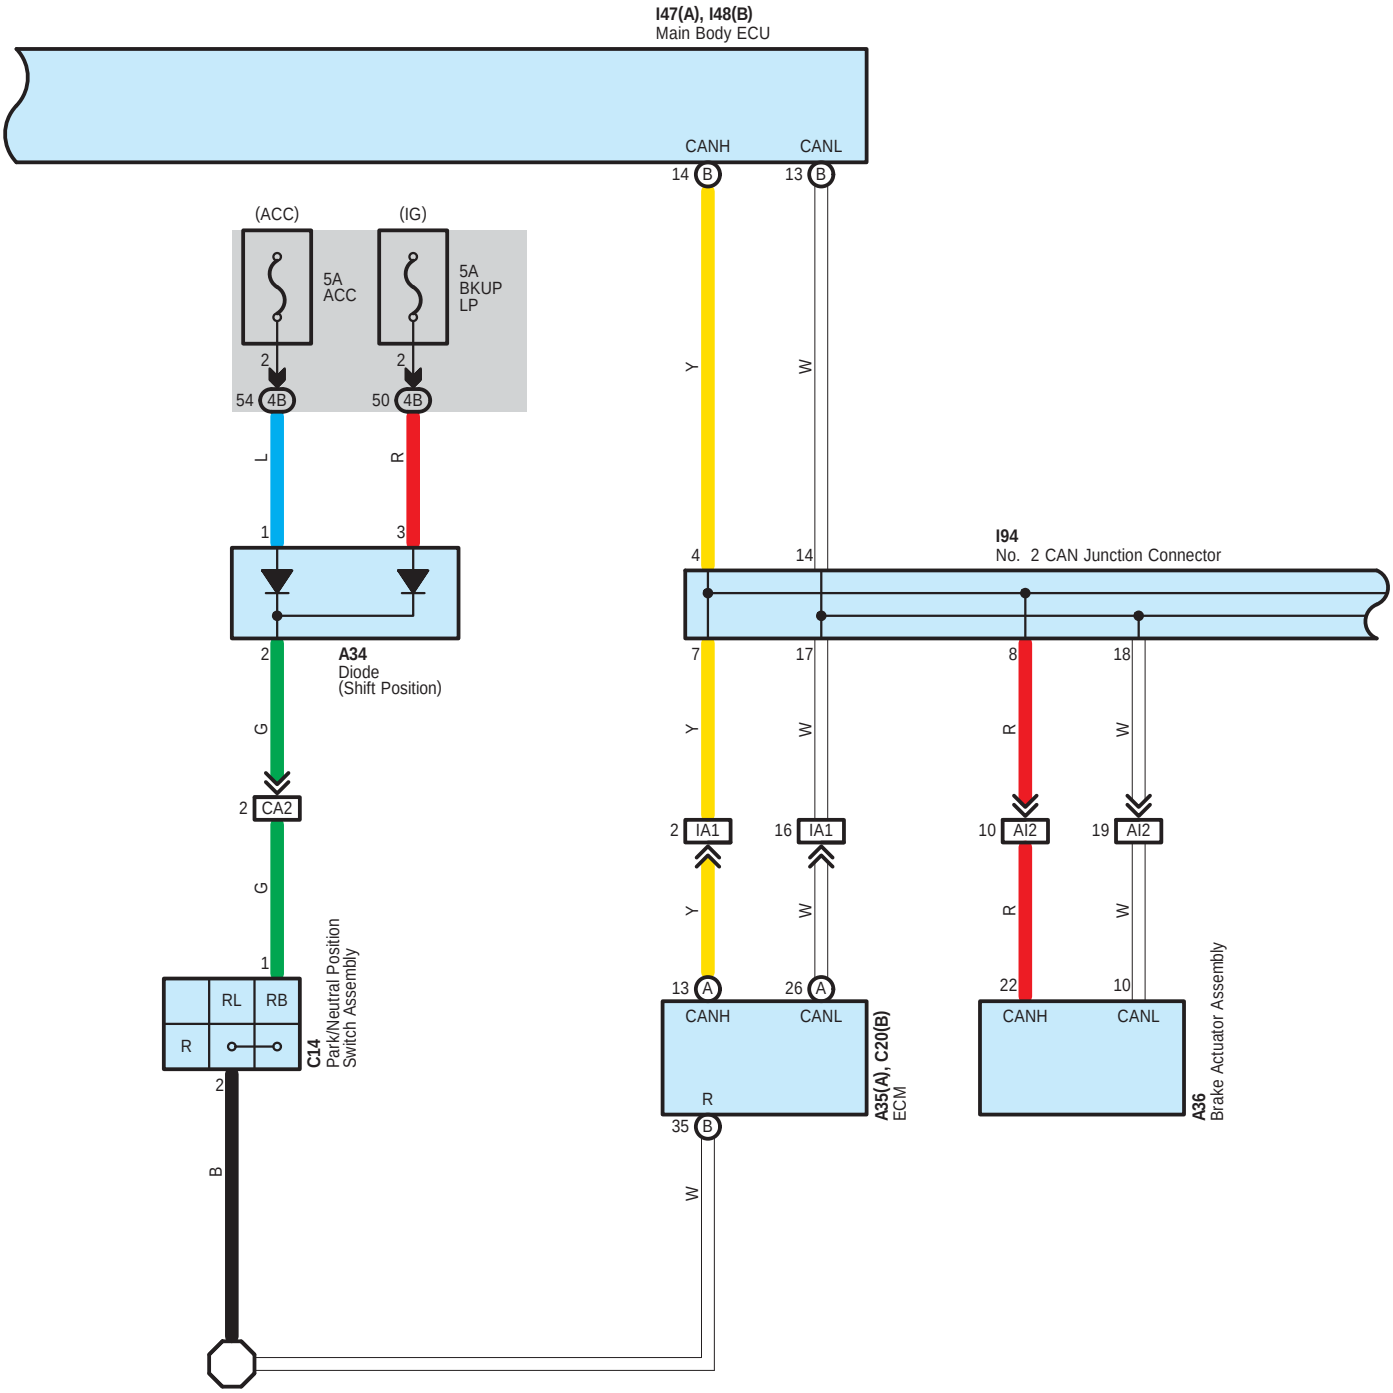
I47(A), I48(B)
Main Body ECU
CANH
CANL
14 B
13 B
(ACC)
(IG)
5A
ACC
5A
BKUP
LP
2
2
54 4B
50 4B
L
R
Y
W
1
3
I94
No. 2 CAN Junction Connector
4
14
2
A34
Diode
(Shift Position)
7
17
8
18
G
Y
W
R
W
2 CA2
2 IA1
16 IA1
10 AI2
19 AI2
G
Y
W
R
W
1
RL
RB
R
C14
Park/Neutral Position
Switch Assembly
13 A
26 A
22
10
CANH
CANL
CANH
CANL
A35(A), C20(B)
ECM
A36
Brake Actuator Assembly
R
35 B
2
B
W

∗17 : w/ Automatic High Beam System

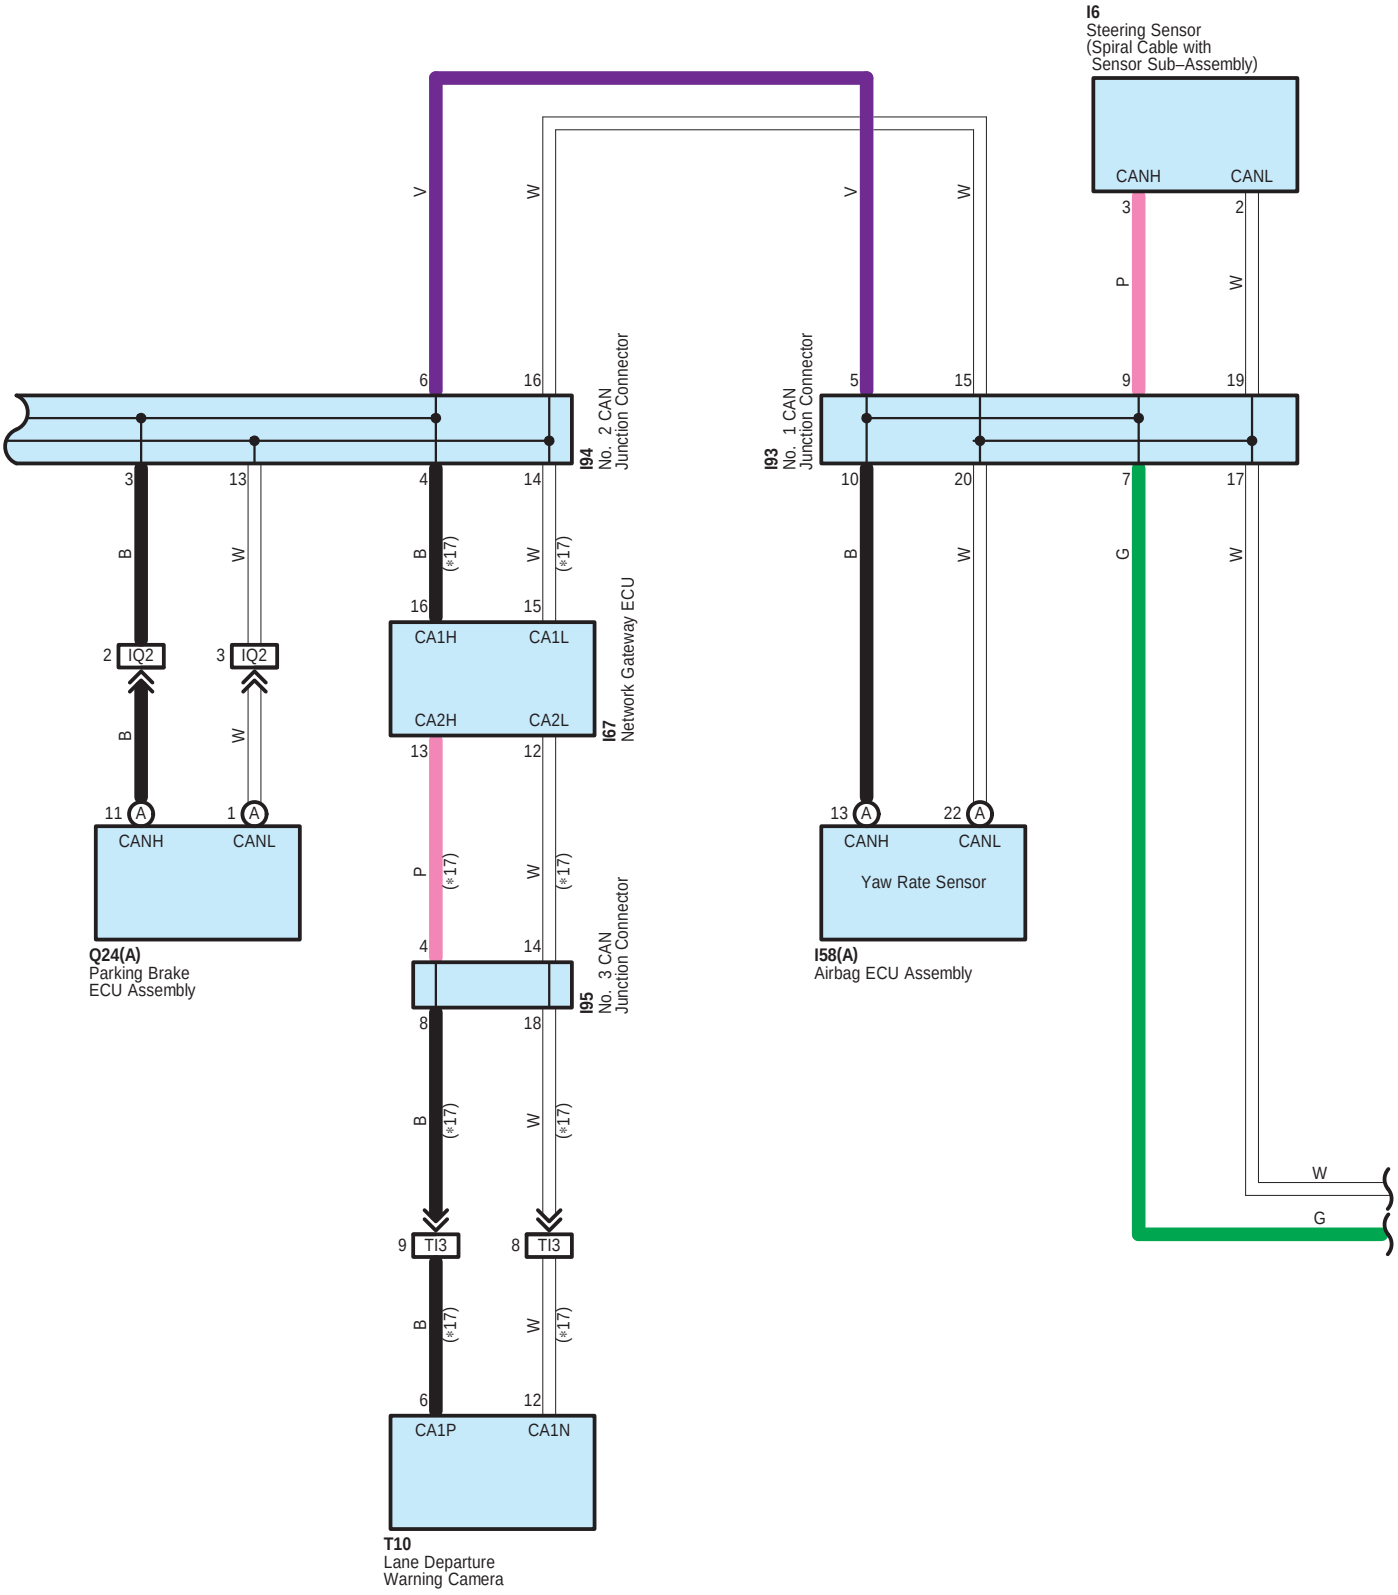

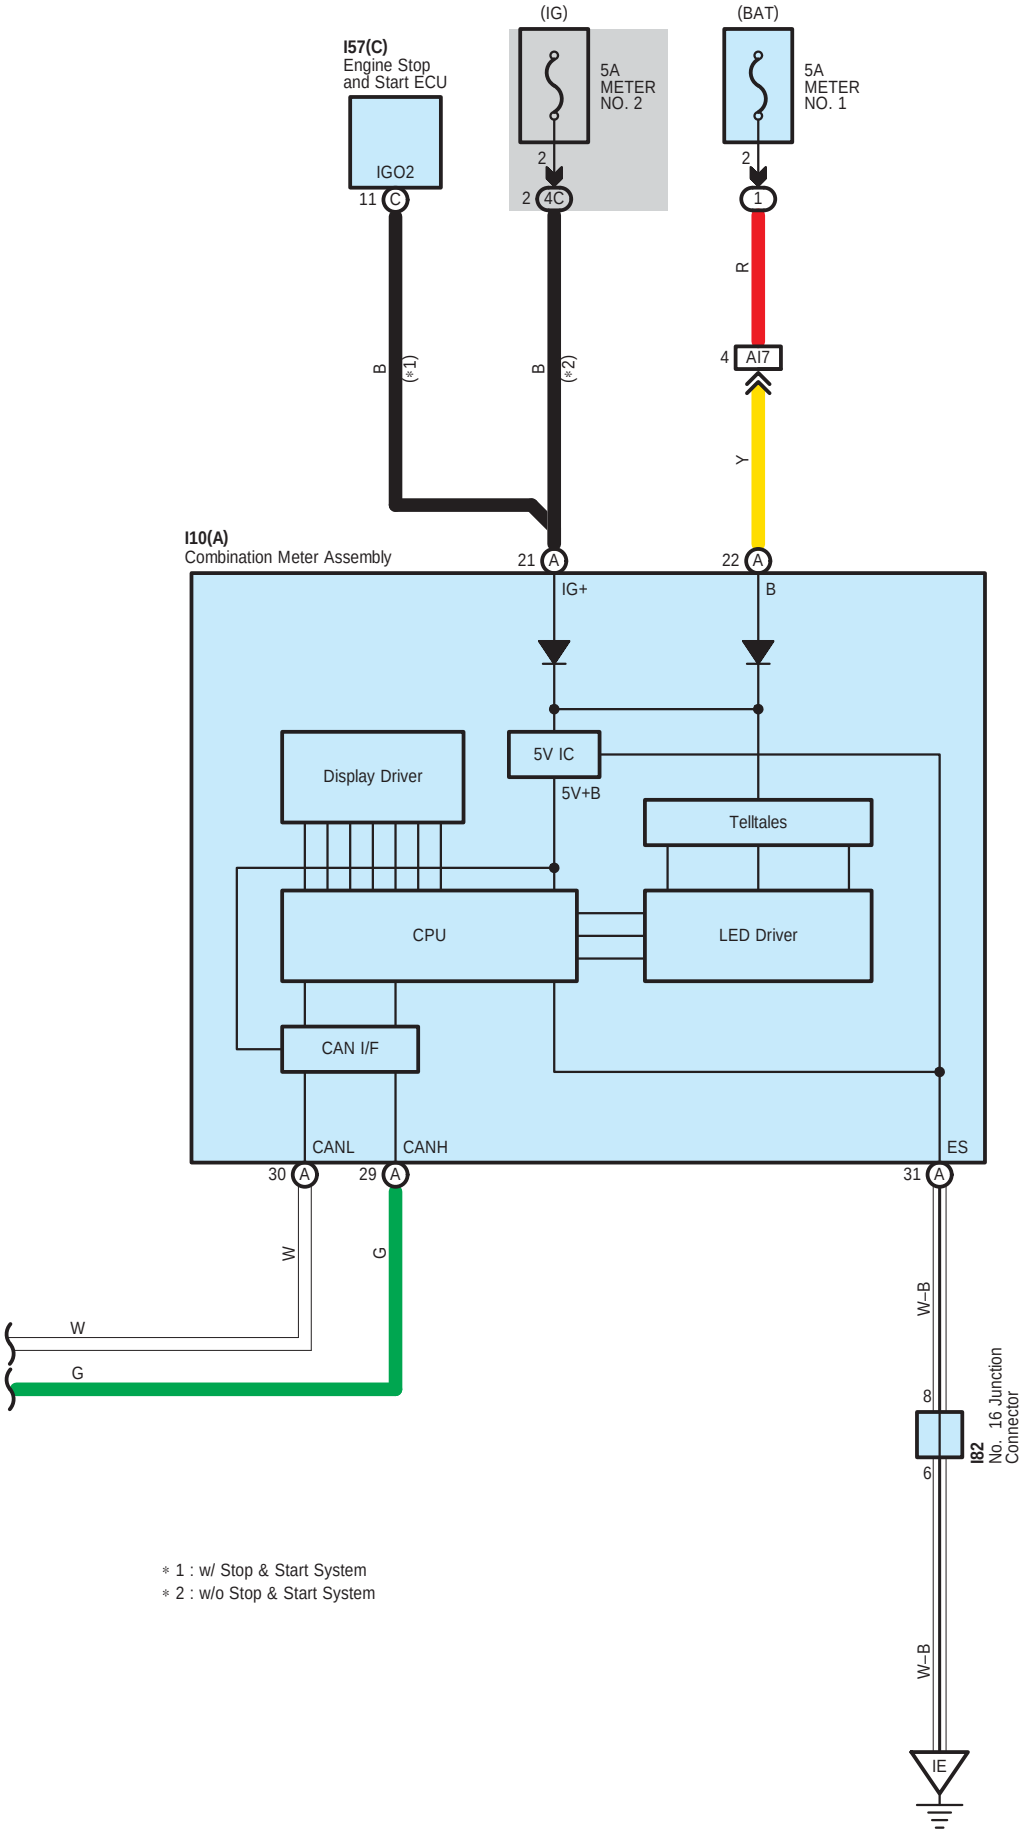

* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System

A19
Gray

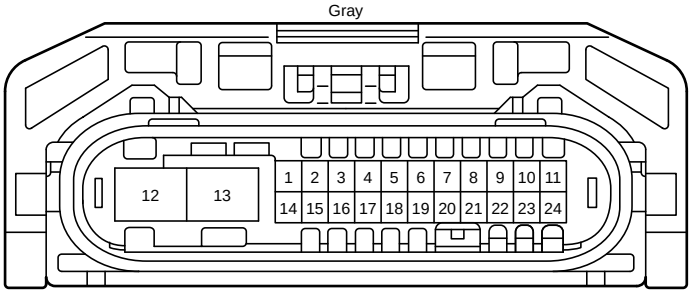

90980-12A92

A20
Gray

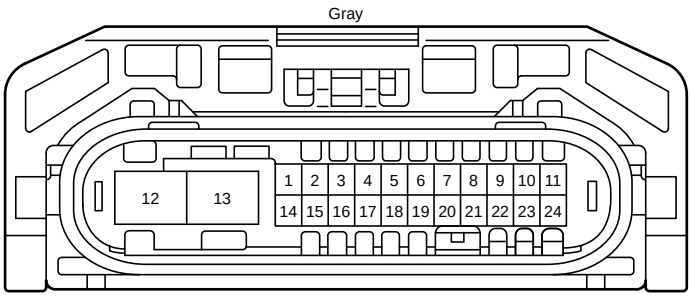

90980-12A92

A30
Black

90980-11292

A31
Black

90980-11292

A34
Gray

90980-11071

A35
Black

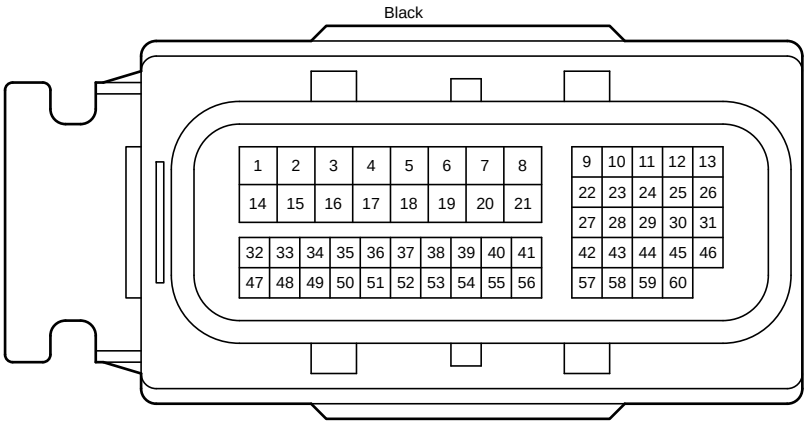

90980-12931

A36
Black

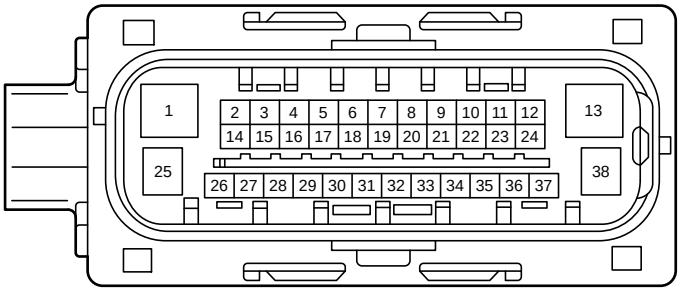

90980-12A95

A45
White

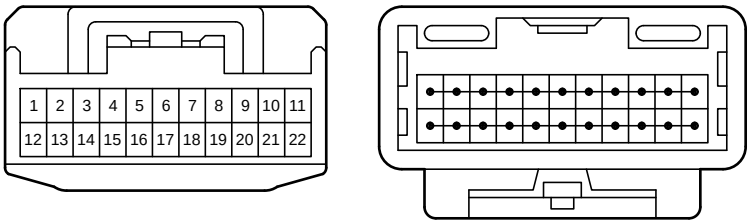

90980-12372

A46
White

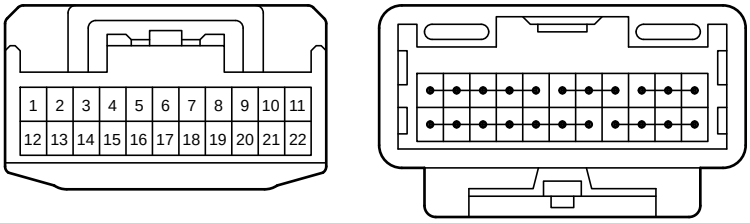

90980-12372

A48
Blue

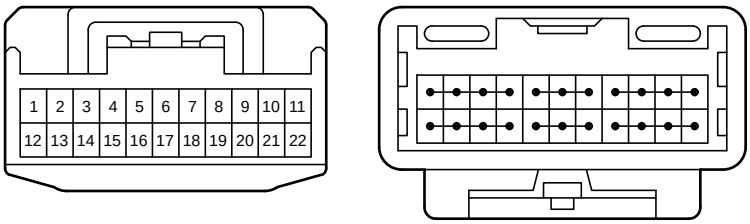

90980-12372

A49
White

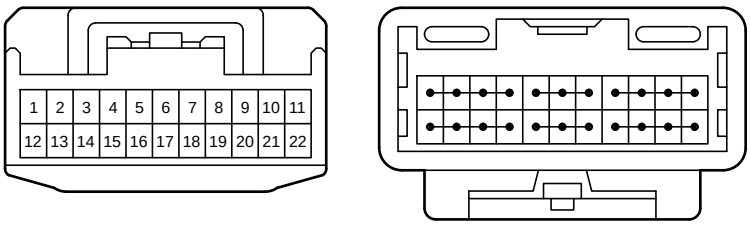

90980-12372

C14
Black

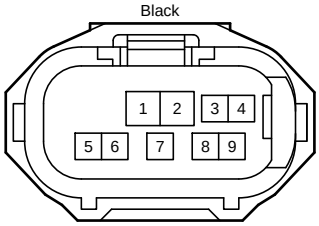

90980-12A23

C20
Black

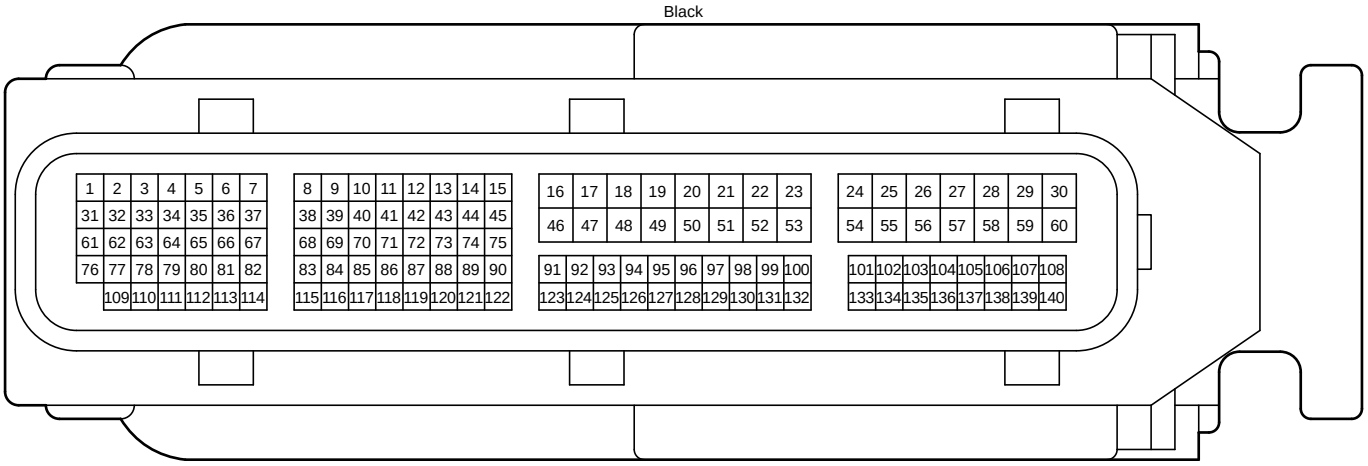

90980-12836

I6
Black

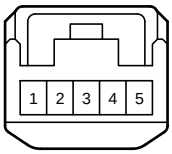

90980-12366

I10
Black

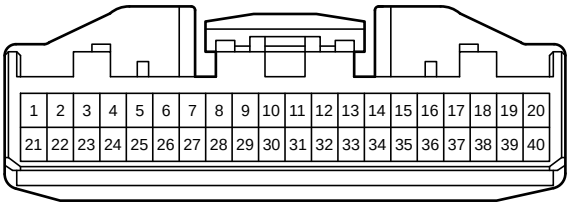

90980-12557

I31
White

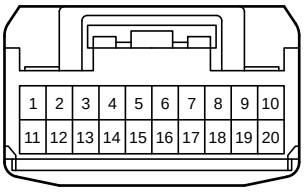

90980-12460

I33
White

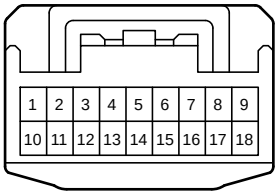

90980-12412

I47
White

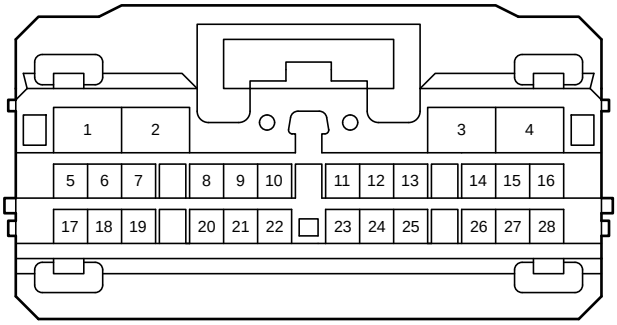

90980-12908

I48
White

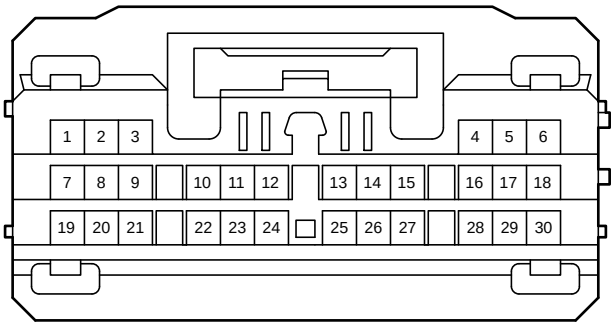

90980-12909

I57
Black

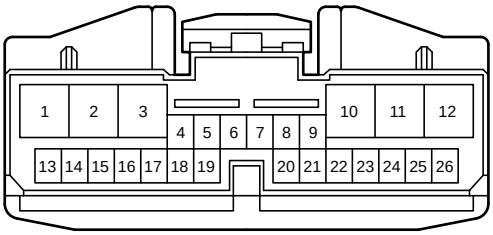

82824-12510

I58

Yellow

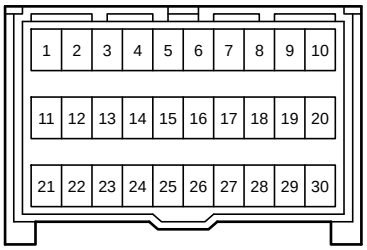

90980-12391

I63

Gray

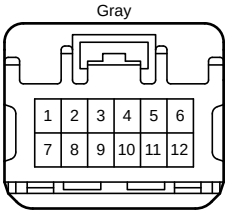

90980-12737

I67

White

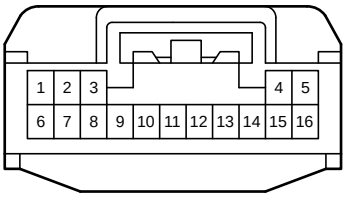

90980-12423

I81

Gray

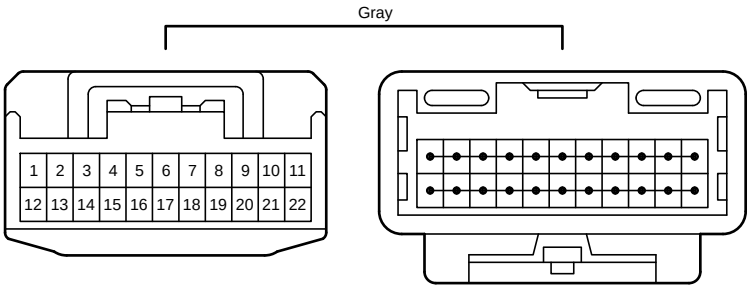

90980-12372

I82

Blue

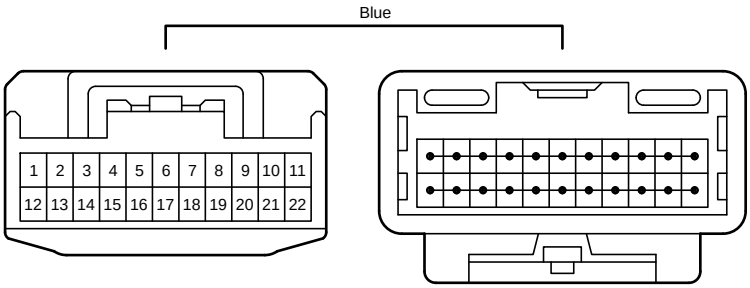

90980-12372
(LHD)

I82

White

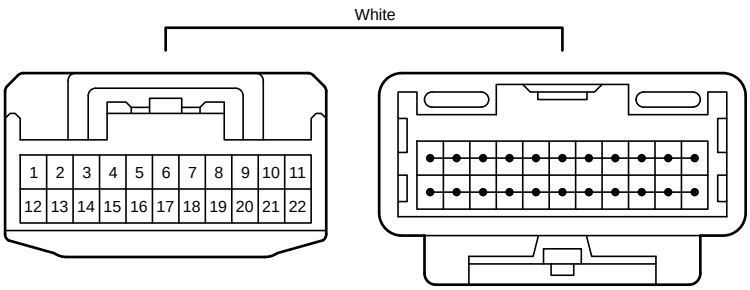

90980-12372
(RHD)

I84
Black

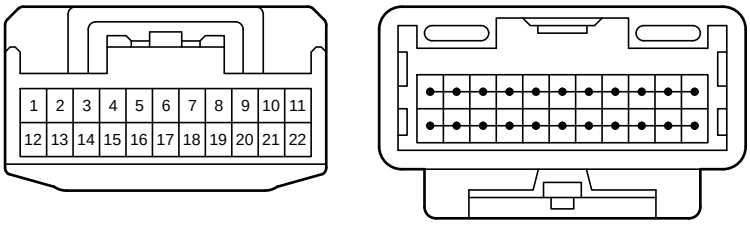

90980-12372
(LHD)

I84
Gray

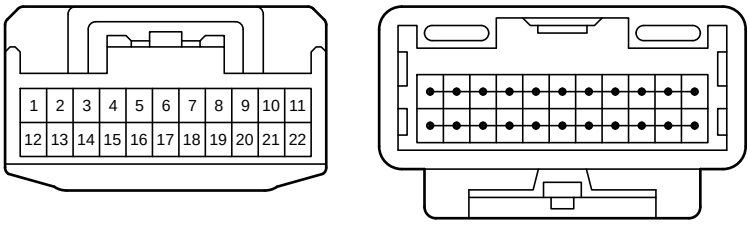

90980-12372
(RHD)

I89
White

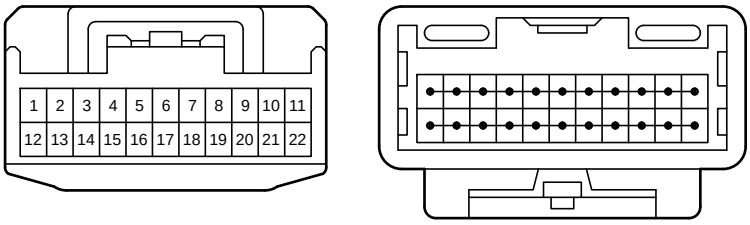

90980-12372

I93
White

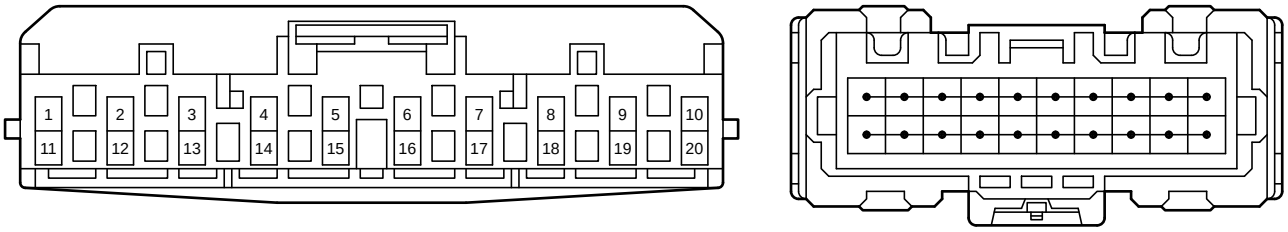

90980-12A58

I94

White

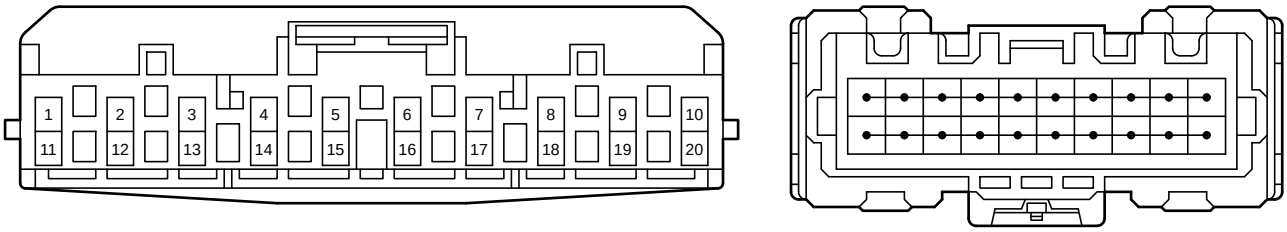

90980-12A58

I95

White

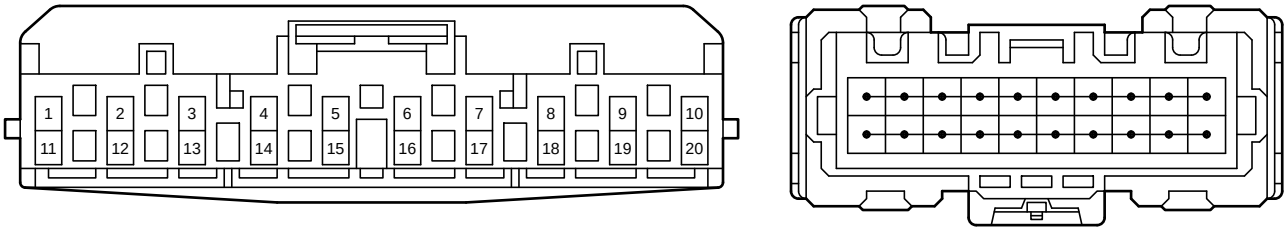

90980-12A58

I96

White

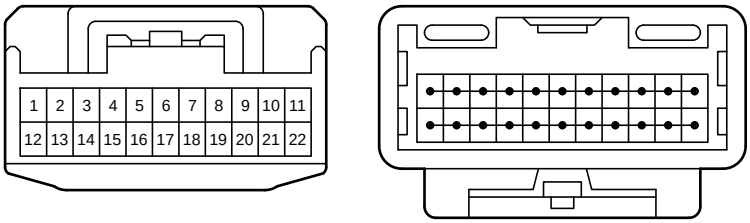

90980-12372

I97

White

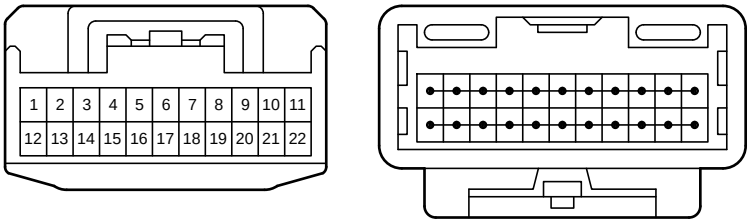

90980-12372
(w/ Clearance Warning ECU w/o Rear No.1 Clearance Warning Sonar Buzzer)

I97
Gray

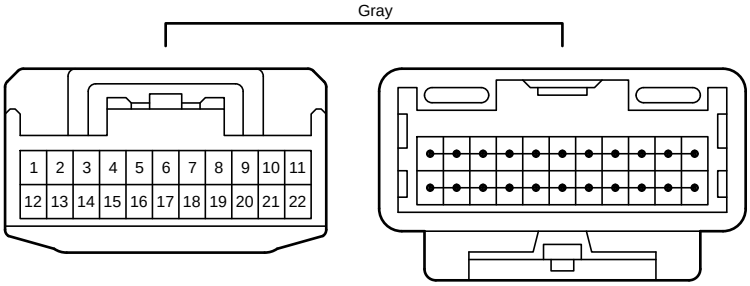

90980-12372
(w/ Clearance Warning ECU w/ Rear No.1 Clearance Warning Sonar Buzzer)

I126
Black

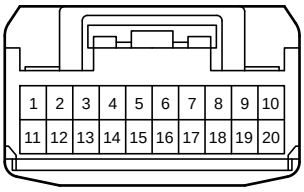

90980-12460

J6
White

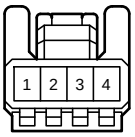

82824-50130

Q24
White

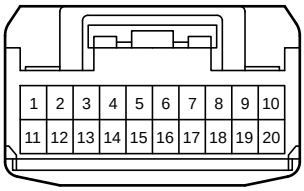

90980-12460

R1
Black

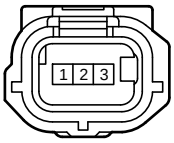

90980-12353

T10
Black

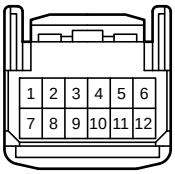

90980-12552

4B
White

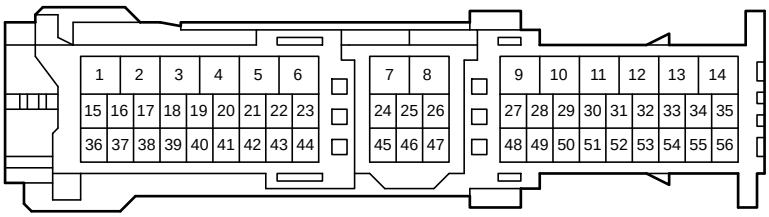

90980-12A15

4C
White

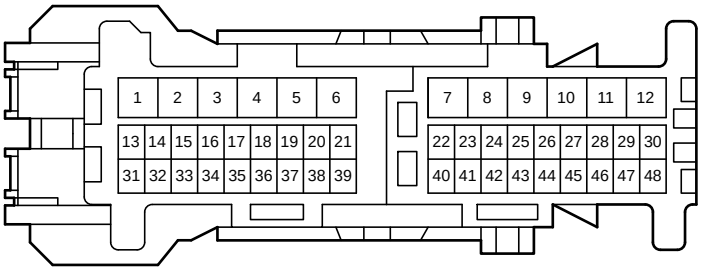

90980-12887

4D
White

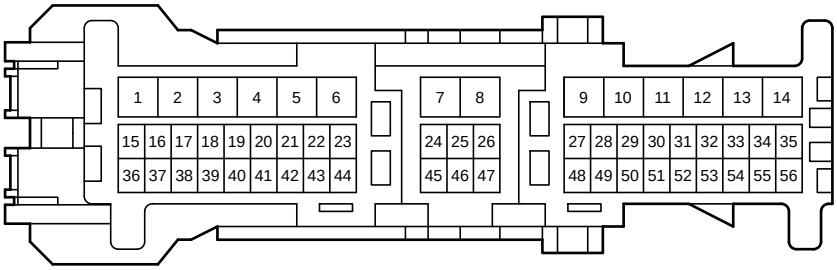

90980-12890

AI2
Black

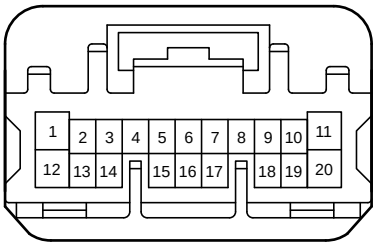

90980-12741

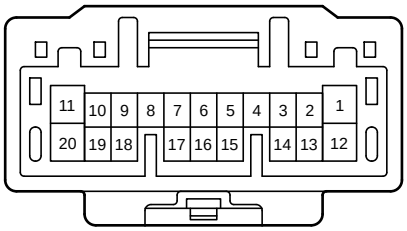

90980-12740

(LHD)

AI2
Blue

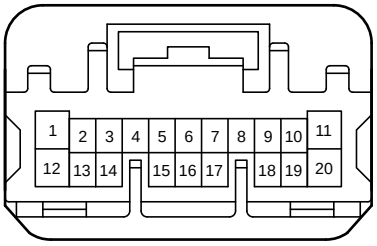

90980-12741

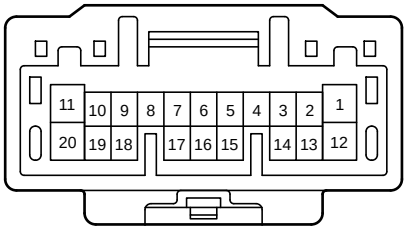

90980-12740

(RHD)

AI3
White

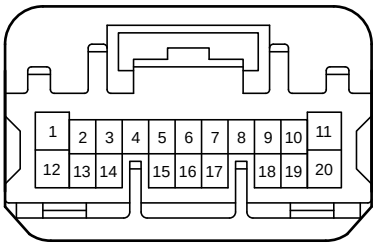

90980-12741

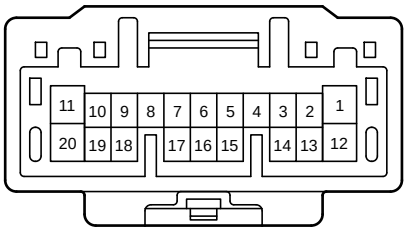

90980-12740

(LHD)

AI3
Blue

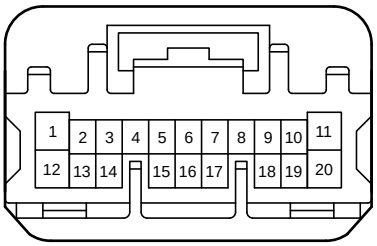

90980-12741

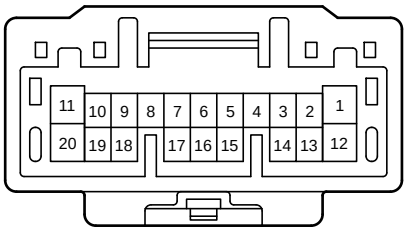

90980-12740

(RHD)

AI7
Gray

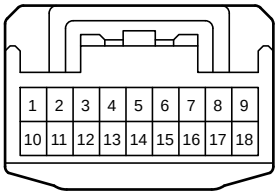

90980-12412

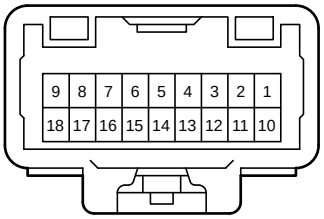

90980-12411

AQ2
Black

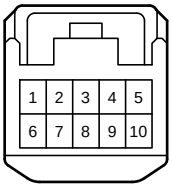

90980-12368

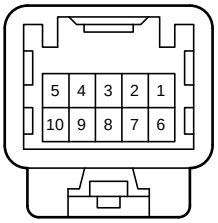

90980-12367

CA2
White

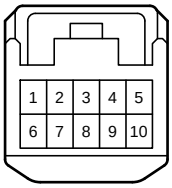

90980-12368

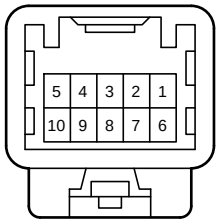

90980-12367

IA1
White

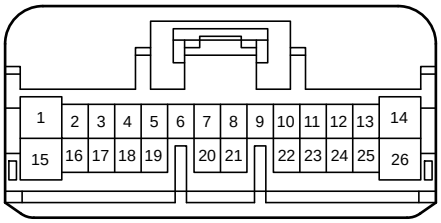

90980-12771

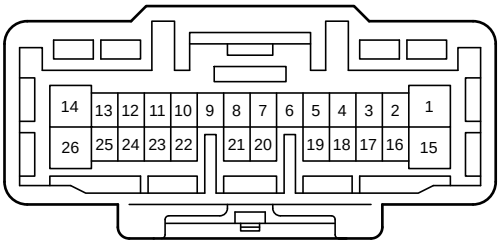

90980-12770

IJ1
Gray

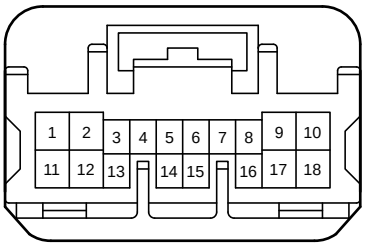

90980-12739

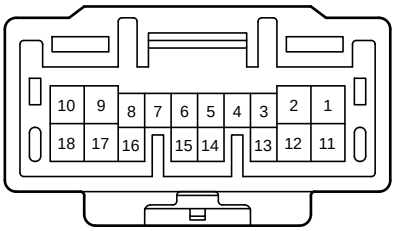

90980-12738

IJ2
White

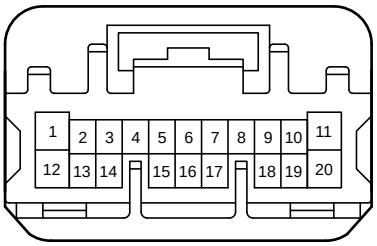

90980-12741

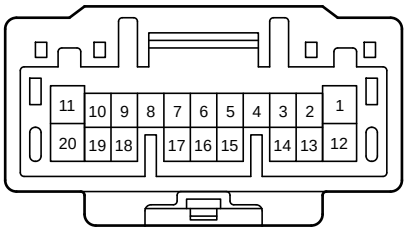

90980-12740

IQ2
Blue

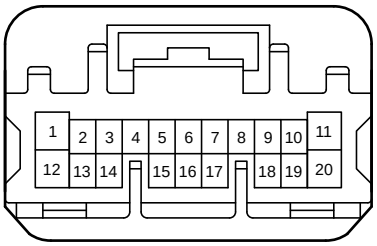

90980-12741

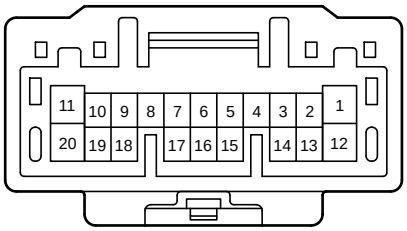

90980-12740

RQ1
White

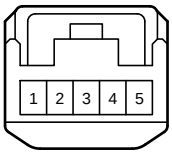

90980-12366

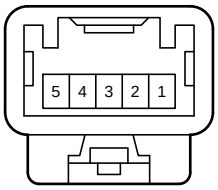

90980-12365

TI3
Gray

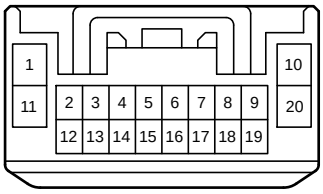

90980-12378

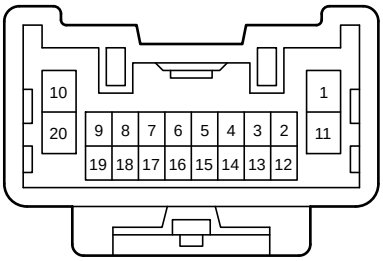

90980-12377