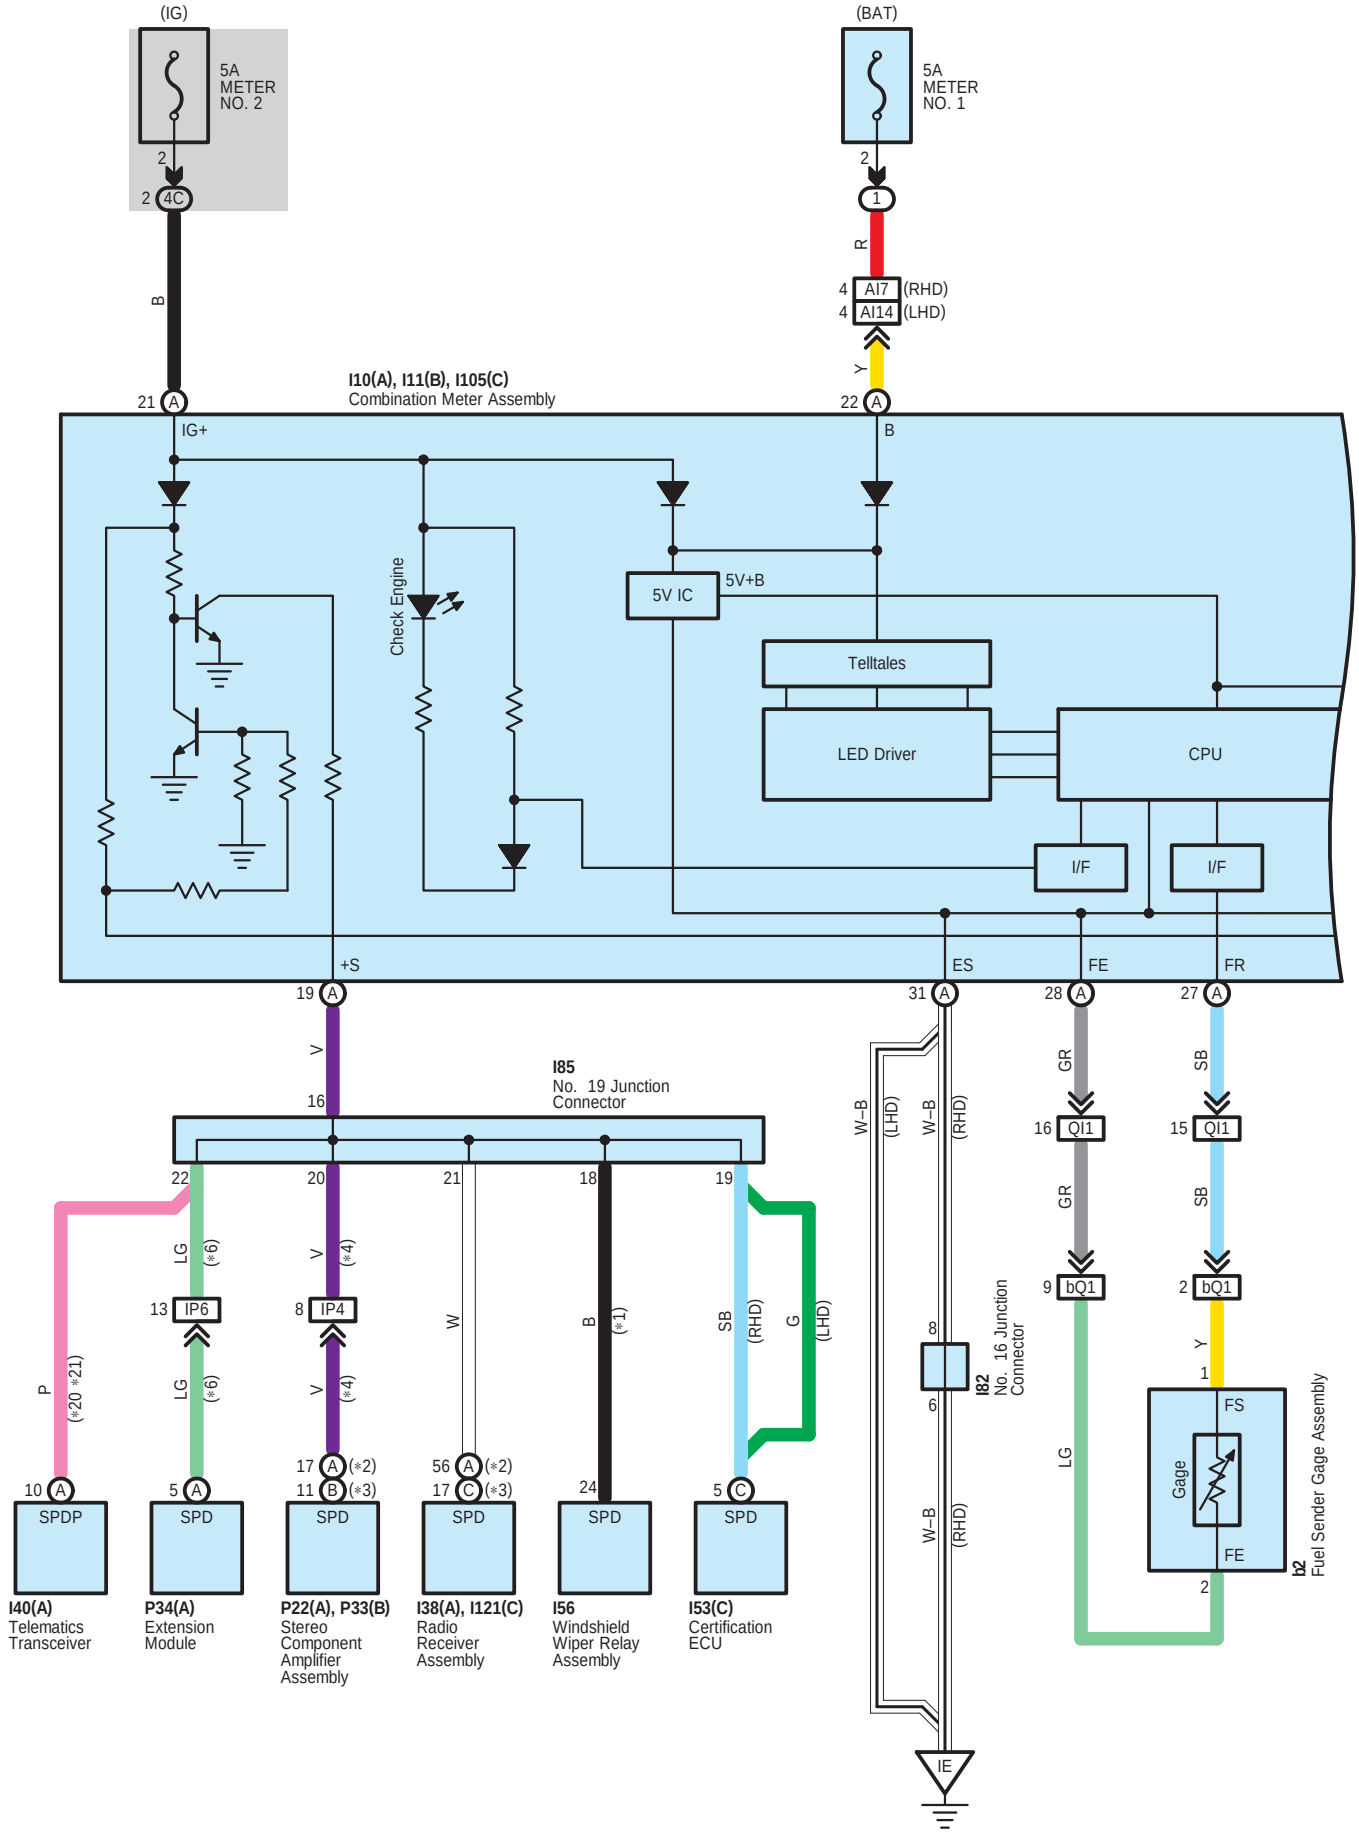
(IG)
5A
METER
NO. 2
(BAT)
5A
METER
NO. 1
I10(A), I11(B), I105(C)
Combination Meter Assembly
IG+
B
Check Engine
5V IC
5V+B
Telltales
LED Driver
CPU
I/F
I/F
+S
ES
FE
FR
I85
No. 19 Junction
Connector
I82
No. 16 Junction
Connector
SPDP
SPD
SPD
SPD
SPD
SPD
SPD
I40(A)
Telematics
Transceiver
P34(A)
Extension
Module
P22(A), P33(B)
Stereo
Component
Amplifier
Assembly
I38(A), I121(C)
Radio
Receiver
Assembly
I56
Windshield
Wiper Relay
Assembly
I53(C)
Certification
ECU
b2
Fuel Sender Gage Assembly
Gage
IE

∗ 1 : w/ Auto Wiper System
∗ 2 : w/ LEXUS Navigation System
∗ 3 : w/ LEXUS Display Audio
∗ 4 : w/ Stereo Component Amplifier Assembly
∗ 6 : Korea
∗20 : Russia, Kazakhstan, Belarus
∗21 : w/ Telematics System

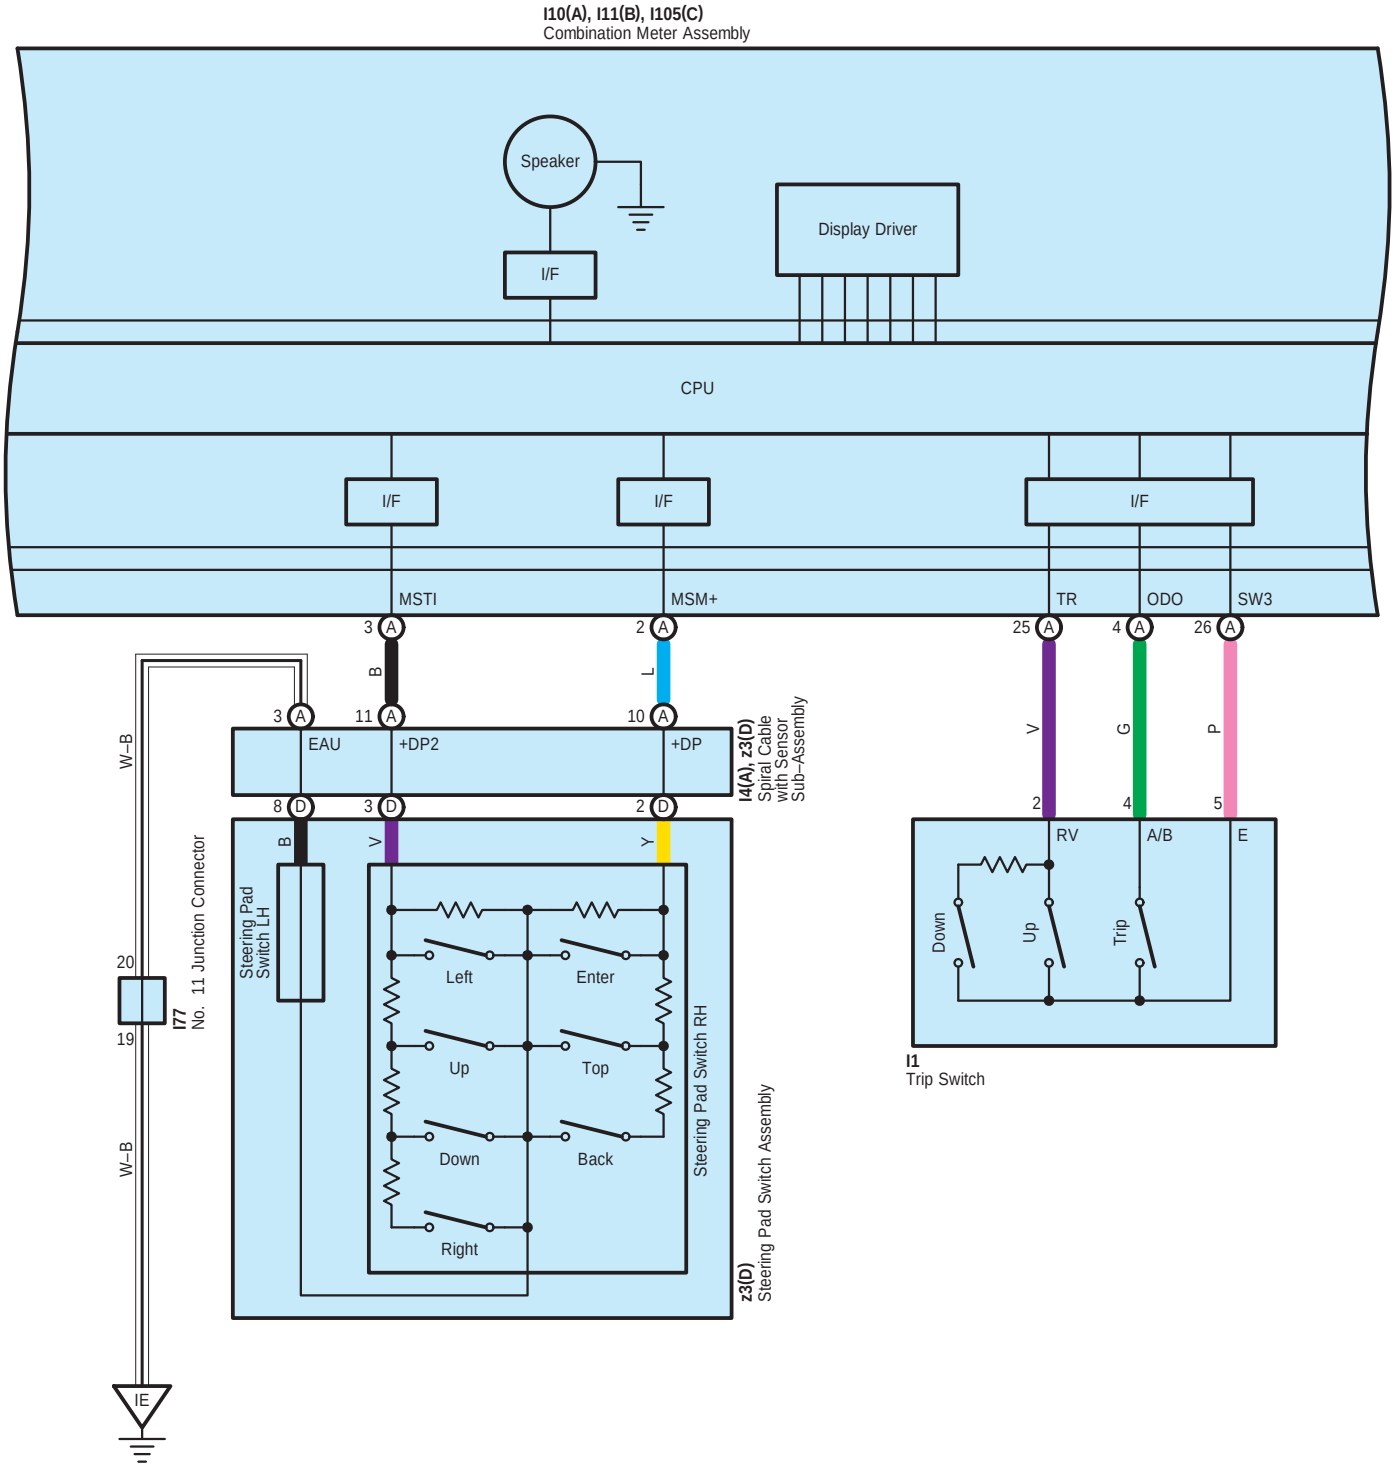

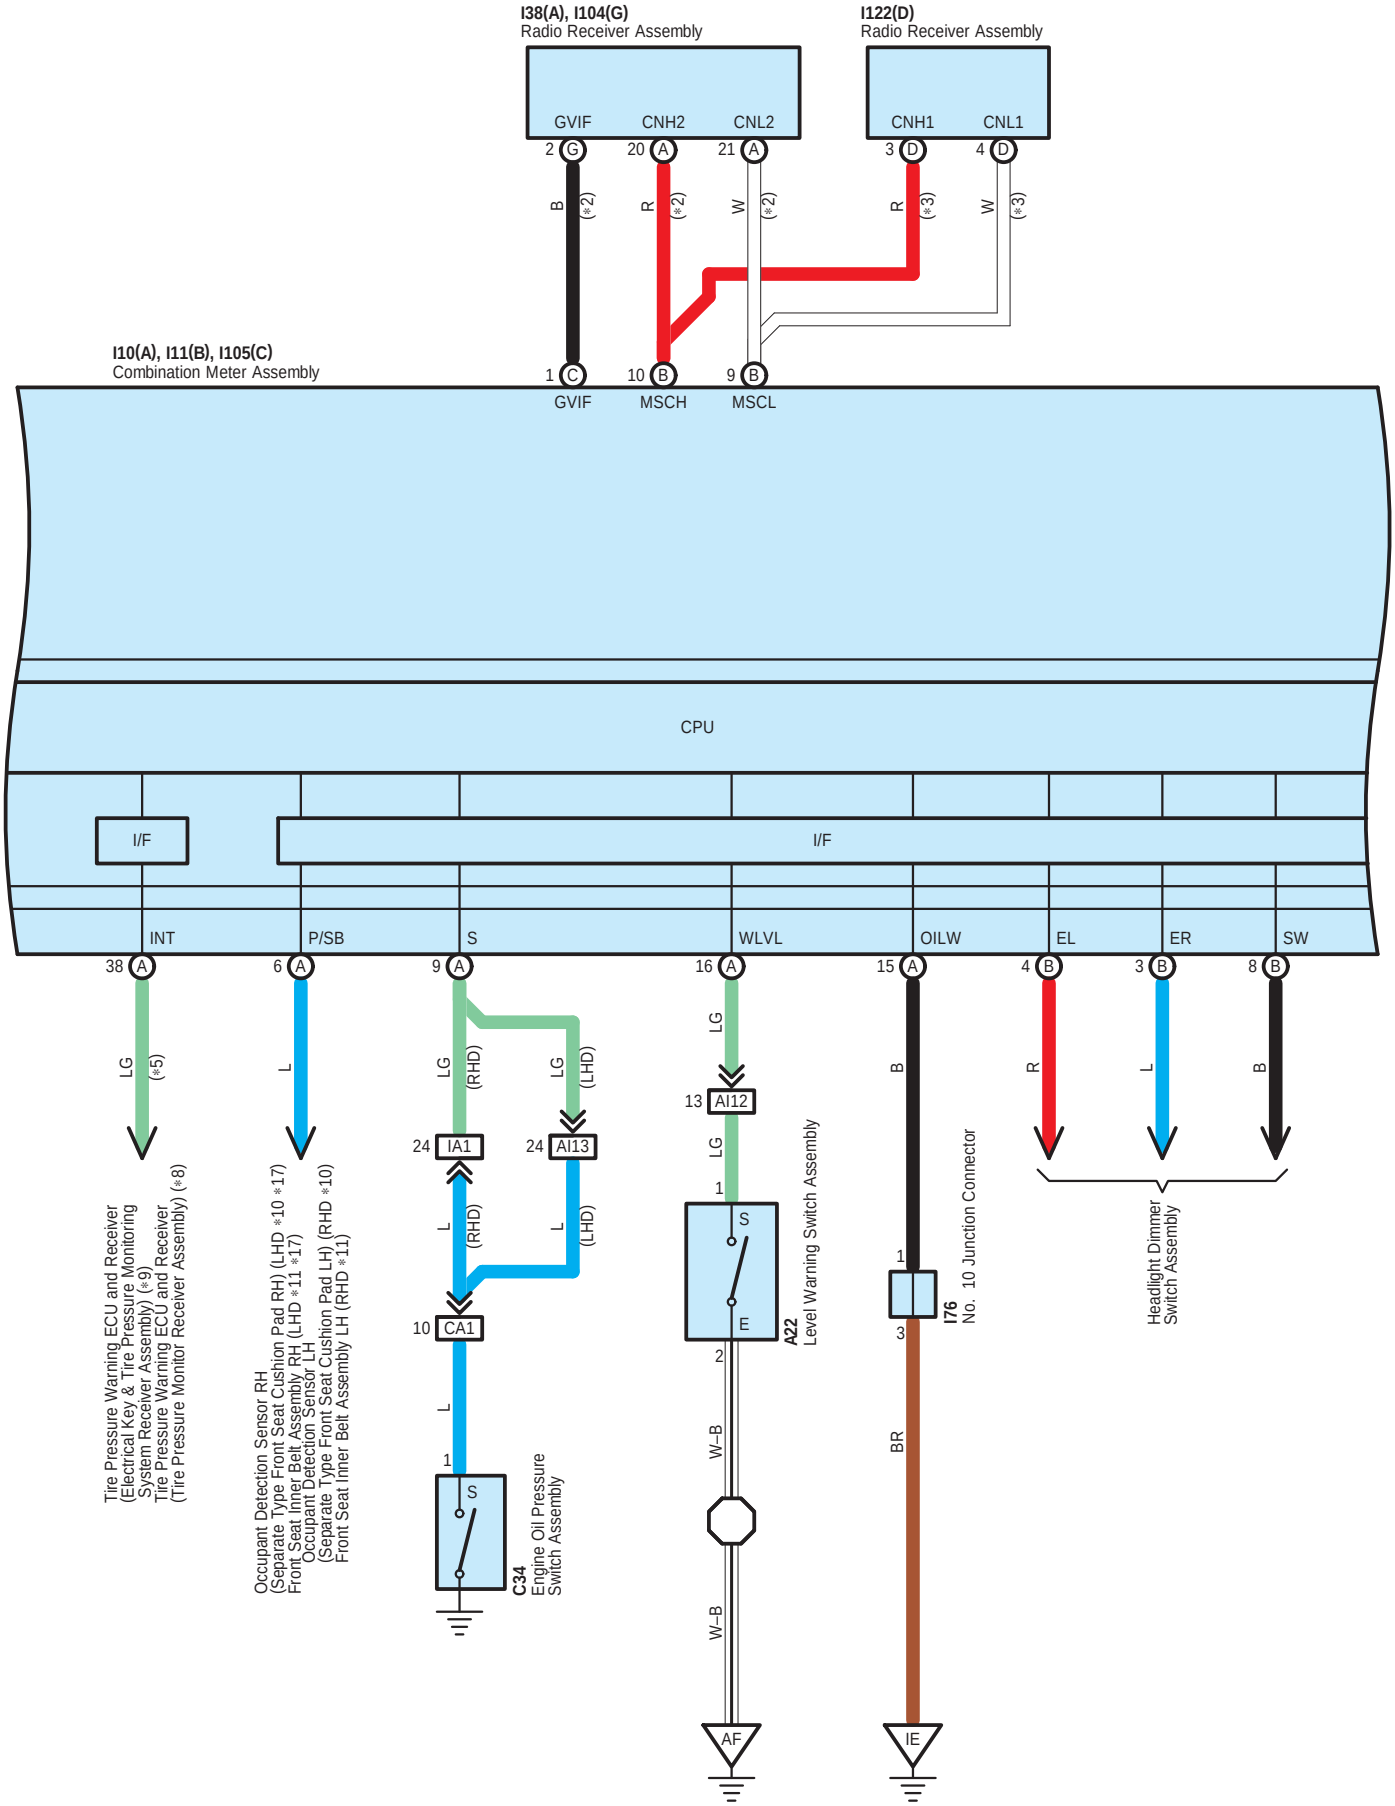
I38(A), I104(G)
Radio Receiver Assembly
GVIF
CNH2
CNL2
I122(D)
Radio Receiver Assembly
CNH1
CNL1
I10(A), I11(B), I105(C)
Combination Meter Assembly
GVIF
MSCH
MSCL
CPU
I/F
I/F
INT
P/SB
S
WLVL
OILW
EL
ER
SW
Tire Pressure Warning ECU and Receiver (Electrical Key & Tire Pressure Monitoring System Receiver Assembly) (*9)
Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly) (*8)
Occupant Detection Sensor RH (Separate Type Front Seat Cushion Pad RH) (LHD *10 *17)
Front Seat Inner Belt Assembly RH (LHD *11 *17)
Occupant Detection Sensor LH (Separate Type Front Seat Cushion Pad LH) (RHD *10)
Front Seat Inner Belt Assembly LH (RHD *11)
C34
Engine Oil Pressure Switch Assembly
A22
Level Warning Switch Assembly
I76
No. 10 Junction Connector
Headlight Dimmer Switch Assembly
AI12
IA1
AI13
CA1
AF
IE

∗ 2 : w/ LEXUS Navigation System
∗ 3 : w/ LEXUS Display Audio
∗ 5 : w/ Tire Pressure Warning System
∗ 7 : w/ Rear Passenger' s Seat Belt Warning
∗ 8 : Australia
∗ 9 : Except Australia
∗10 : w/ Power Seat
∗11 : w/o Power Seat
∗17 : Except Korea

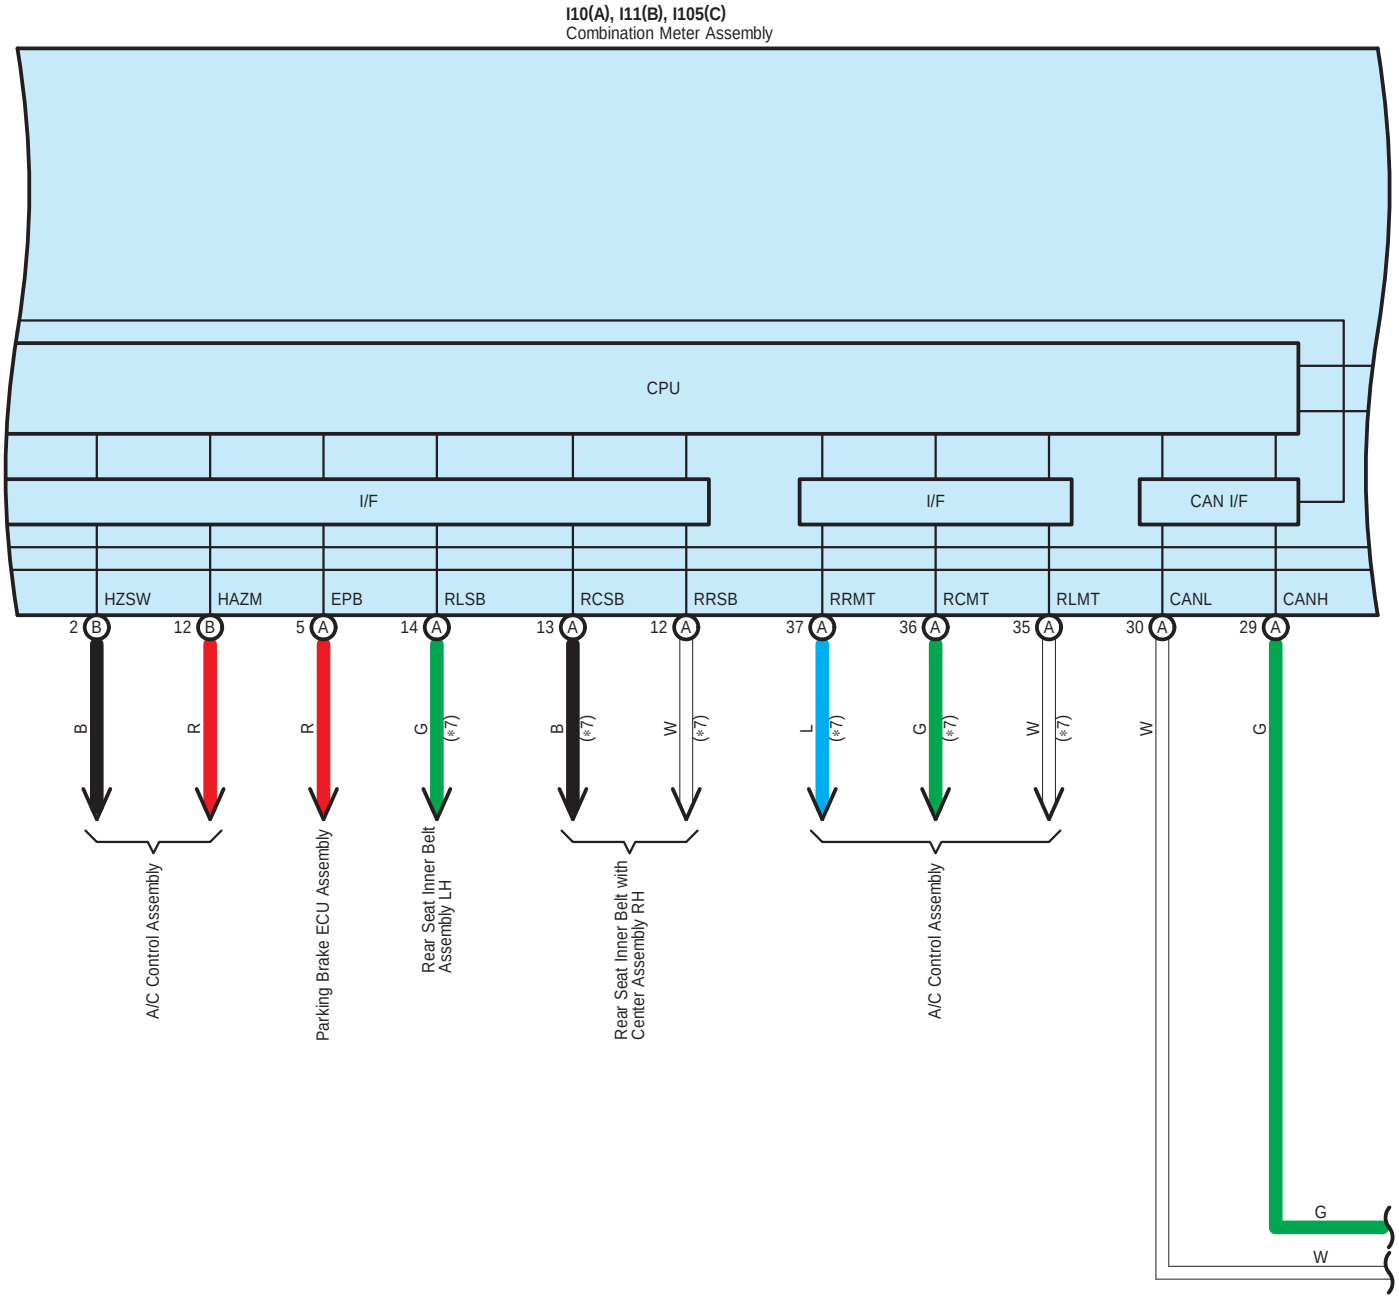

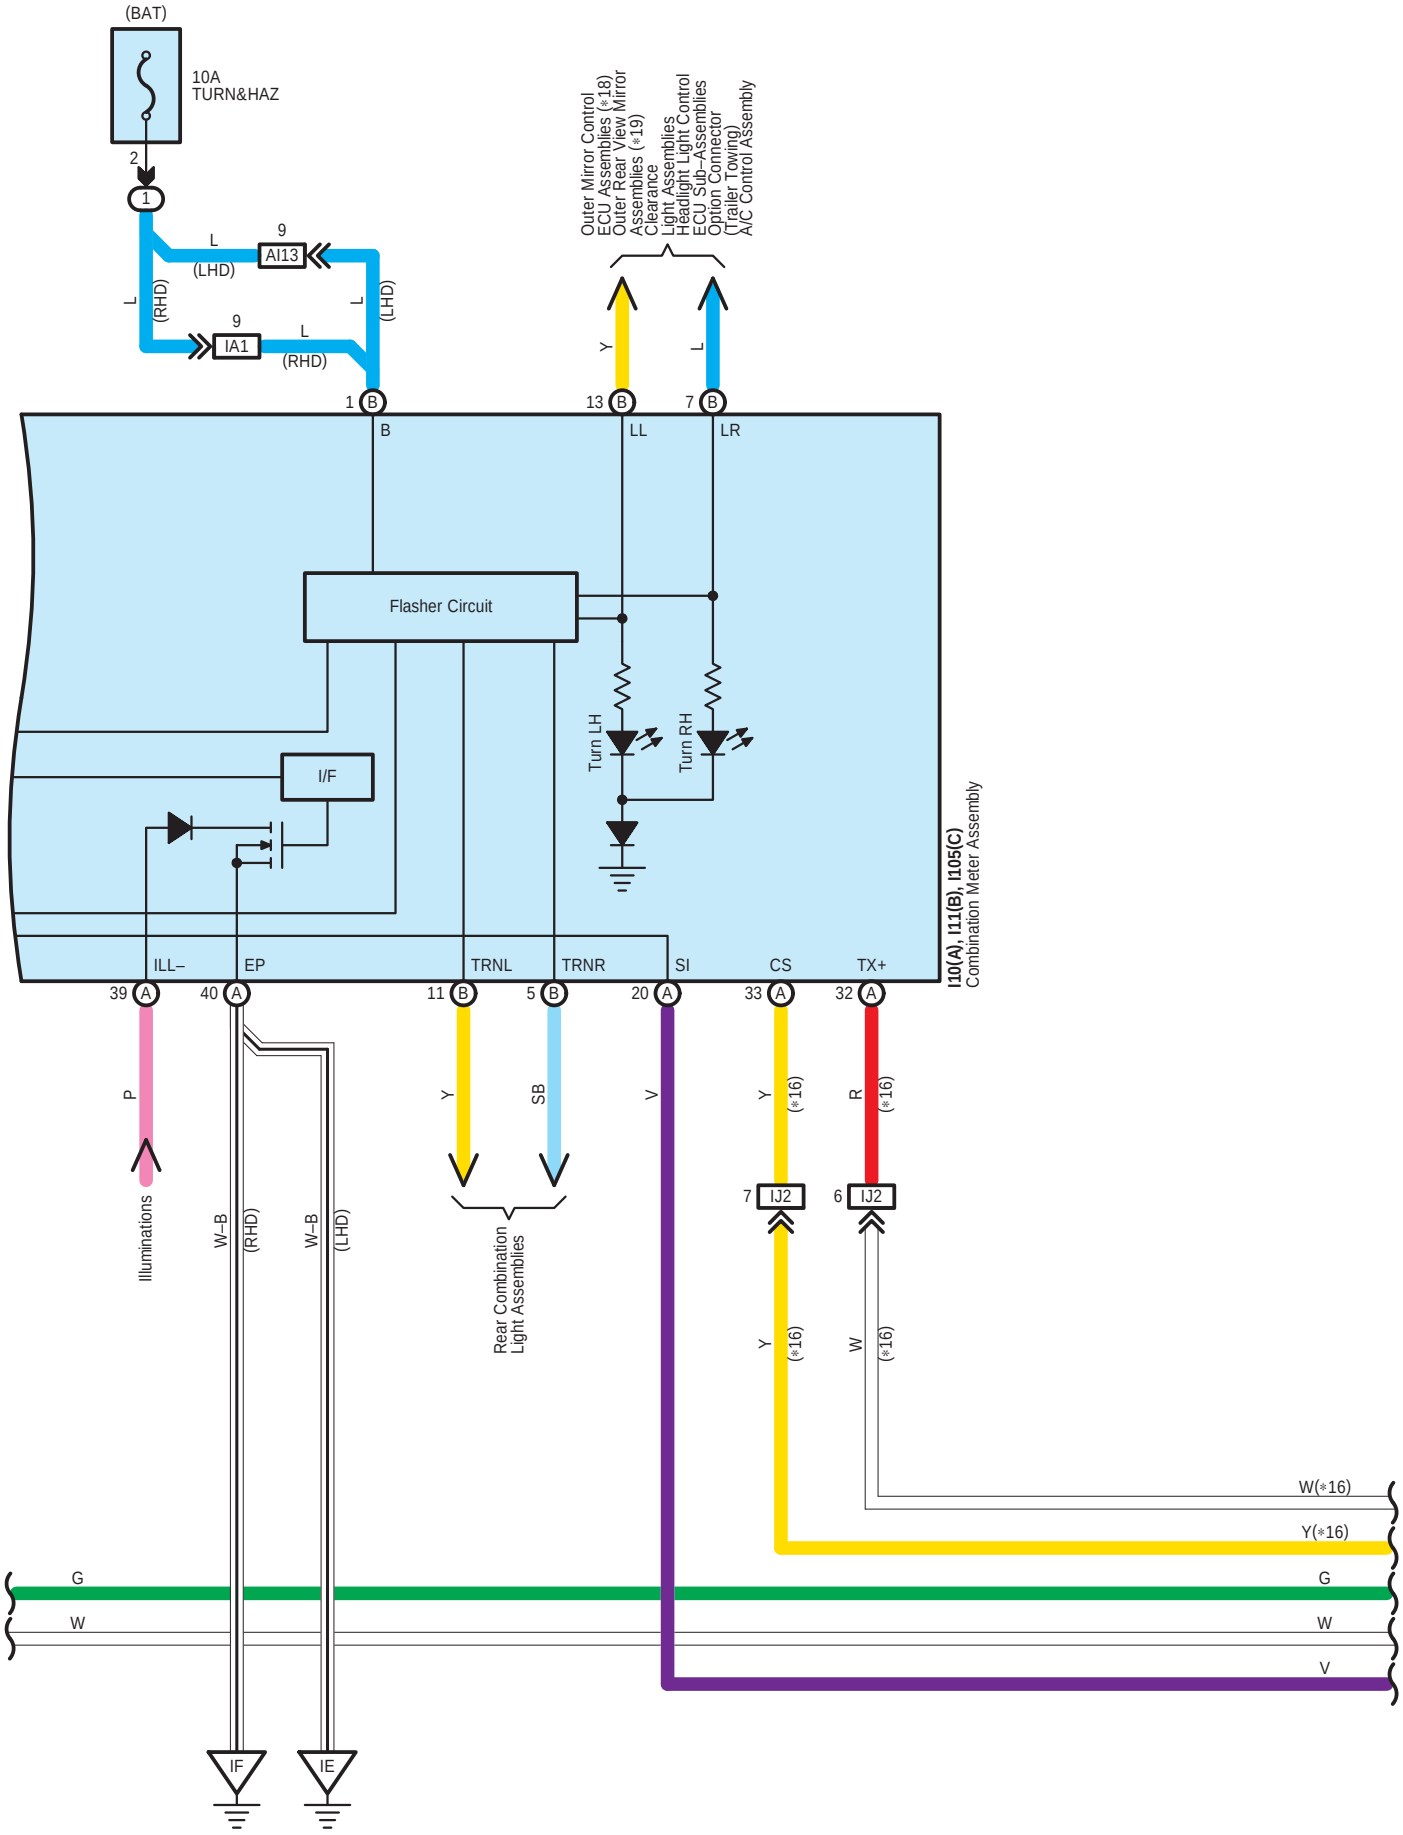
(BAT)
10A
TURN&HAZ
2
1
L
9
AI13
(LHD)
L
(RHD)
9
IA1
L
(RHD)
L
(LHD)
Outer Mirror Control
ECU Assemblies (*18)
Outer Rear View Mirror
Assemblies (*19)
Clearance
Light Assemblies
Headlight Light Control
ECU Sub-Assemblies
Option Connector
(Trailer Towing)
A/C Control Assembly
Y
L
1 B
13 B
7 B
B
LL
LR
Flasher Circuit
Turn LH
Turn RH
I/F
I10(A), I11(B), I105(C)
Combination Meter Assembly
ILL–
EP
TRNL
TRNR
SI
CS
TX+
39 A
40 A
11 B
5 B
20 A
33 A
32 A
P
Illuminations
W–B
(RHD)
W–B
(LHD)
Y
SB
Rear Combination
Light Assemblies
V
Y
(*16)
R
(*16)
7 IJ2
6 IJ2
Y
(*16)
W
(*16)
W(*16)
Y(*16)
G
W
G
W
V
IF
IE

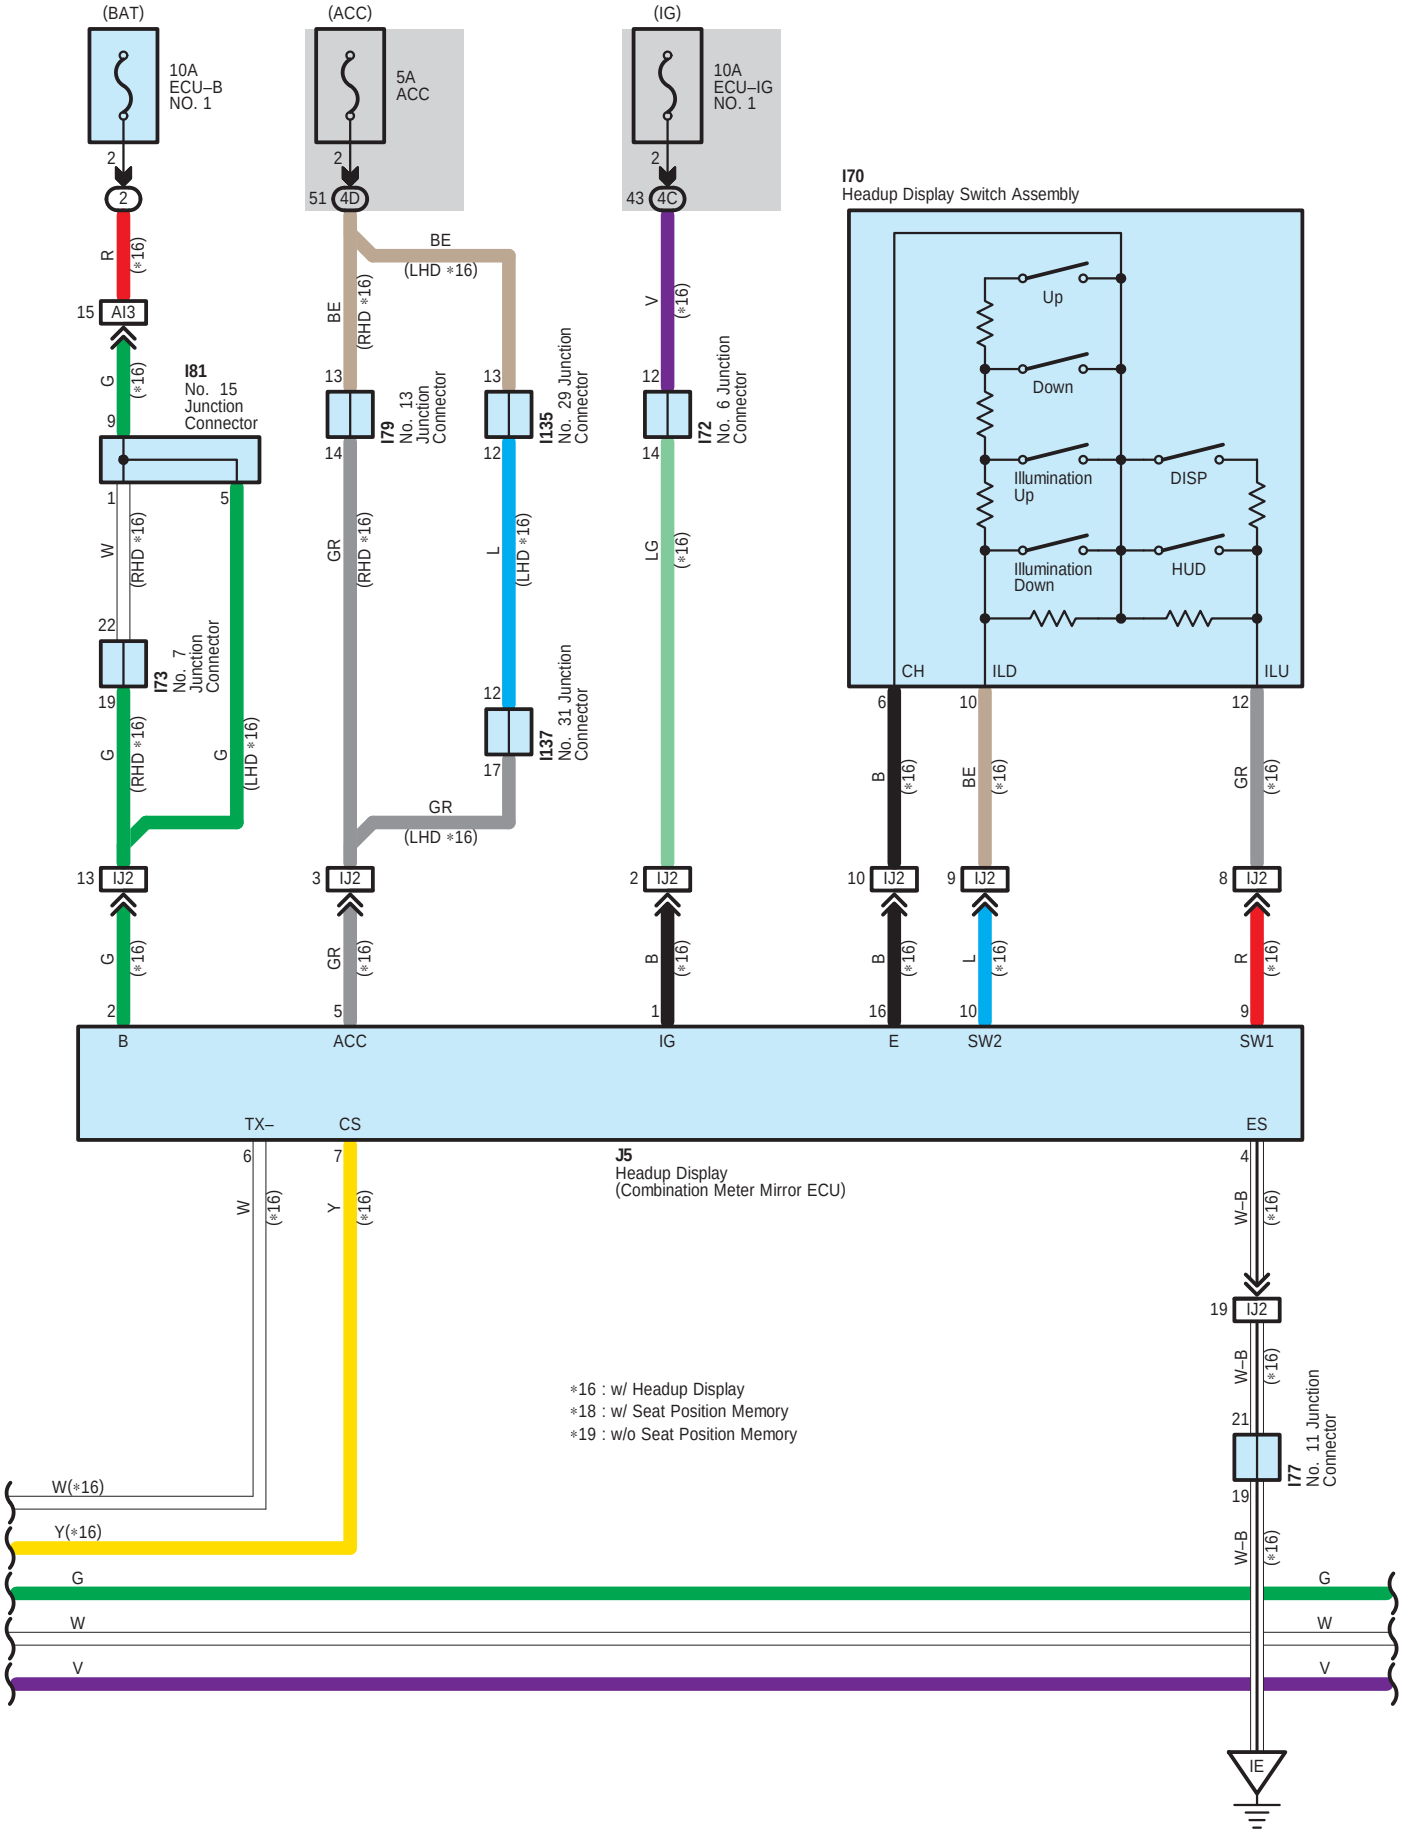
(BAT)
10A
ECU–B
NO. 1
(ACC)
5A
ACC
(IG)
10A
ECU–IG
NO. 1
I70
Headup Display Switch Assembly
Up
Down
Illumination Up
Illumination Down
DISP
HUD
CH
ILD
ILU
I81
No. 15 Junction Connector
I79
No. 13 Junction Connector
I135
No. 29 Junction Connector
I72
No. 6 Junction Connector
I73
No. 7 Junction Connector
I137
No. 31 Junction Connector
BE
(LHD ∗16)
BE
(RHD ∗16)
GR
(RHD ∗16)
GR
(LHD ∗16)
L
(LHD ∗16)
LG
(∗16)
V
(∗16)
R
(∗16)
G
(∗16)
W
(RHD ∗16)
G
(RHD ∗16)
G
(LHD ∗16)
B
(∗16)
BE
(∗16)
GR
(∗16)
R
(∗16)
L
(∗16)
B
(∗16)
GR
(∗16)
G
(∗16)
AI3
IJ2
B
ACC
IG
E
SW2
SW1
TX–
CS
ES
J5
Headup Display
(Combination Meter Mirror ECU)
W
(∗16)
Y
(∗16)
W–B
(∗16)
I77
No. 11 Junction Connector
∗16 : w/ Headup Display
∗18 : w/ Seat Position Memory
∗19 : w/o Seat Position Memory
W(∗16)
Y(∗16)
G
W
V
IE

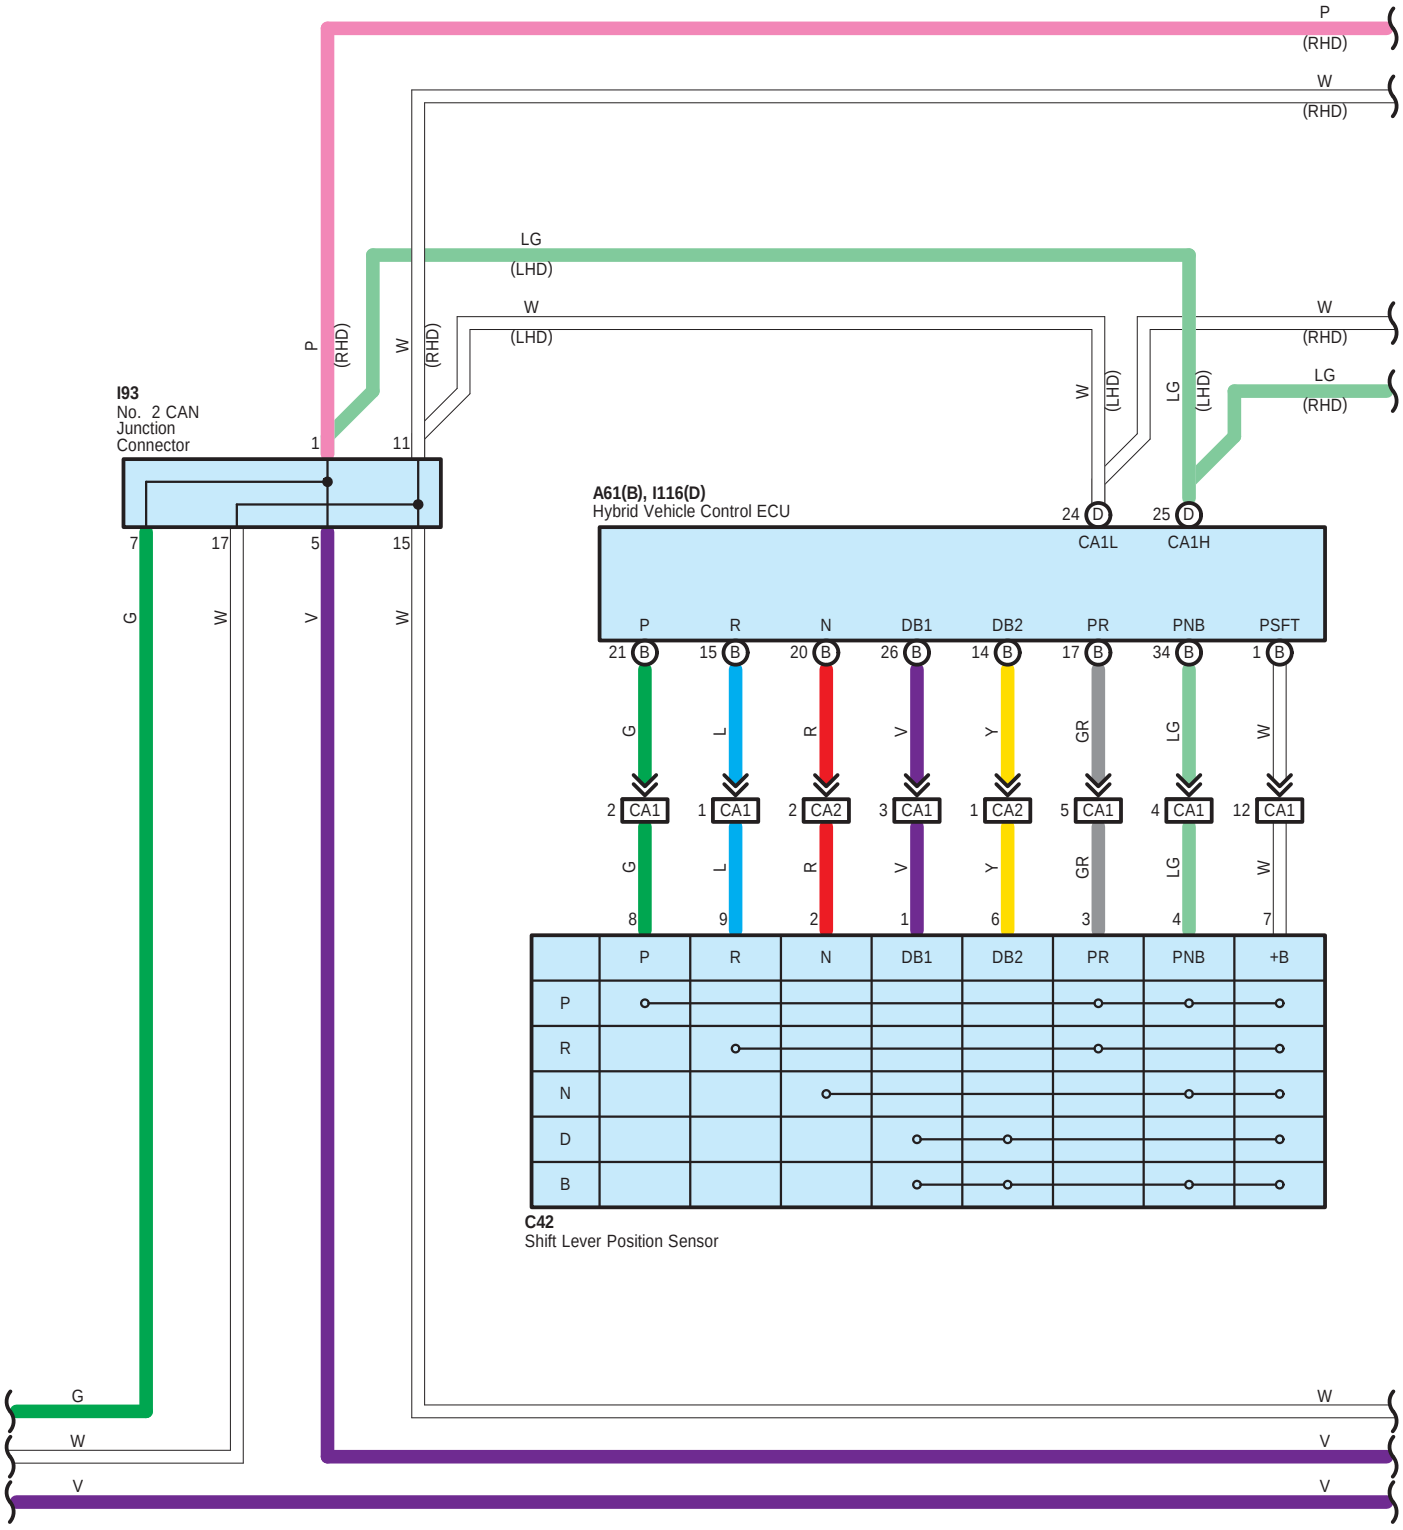
P
(RHD)
W
(RHD)
LG
(LHD)
W
(LHD)
W
(RHD)
LG
(RHD)
I93
No. 2 CAN
Junction
Connector
1
11
7
17
5
15
G
W
V
W
A61(B), I116(D)
Hybrid Vehicle Control ECU
24 D
CA1L
25 D
CA1H
P
R
N
DB1
DB2
PR
PNB
PSFT
21 B
15 B
20 B
26 B
14 B
17 B
34 B
1 B
2 CA1
1 CA1
2 CA2
3 CA1
1 CA2
5 CA1
4 CA1
12 CA1
8
9
2
1
6
3
4
7
+B
D
C42
Shift Lever Position Sensor

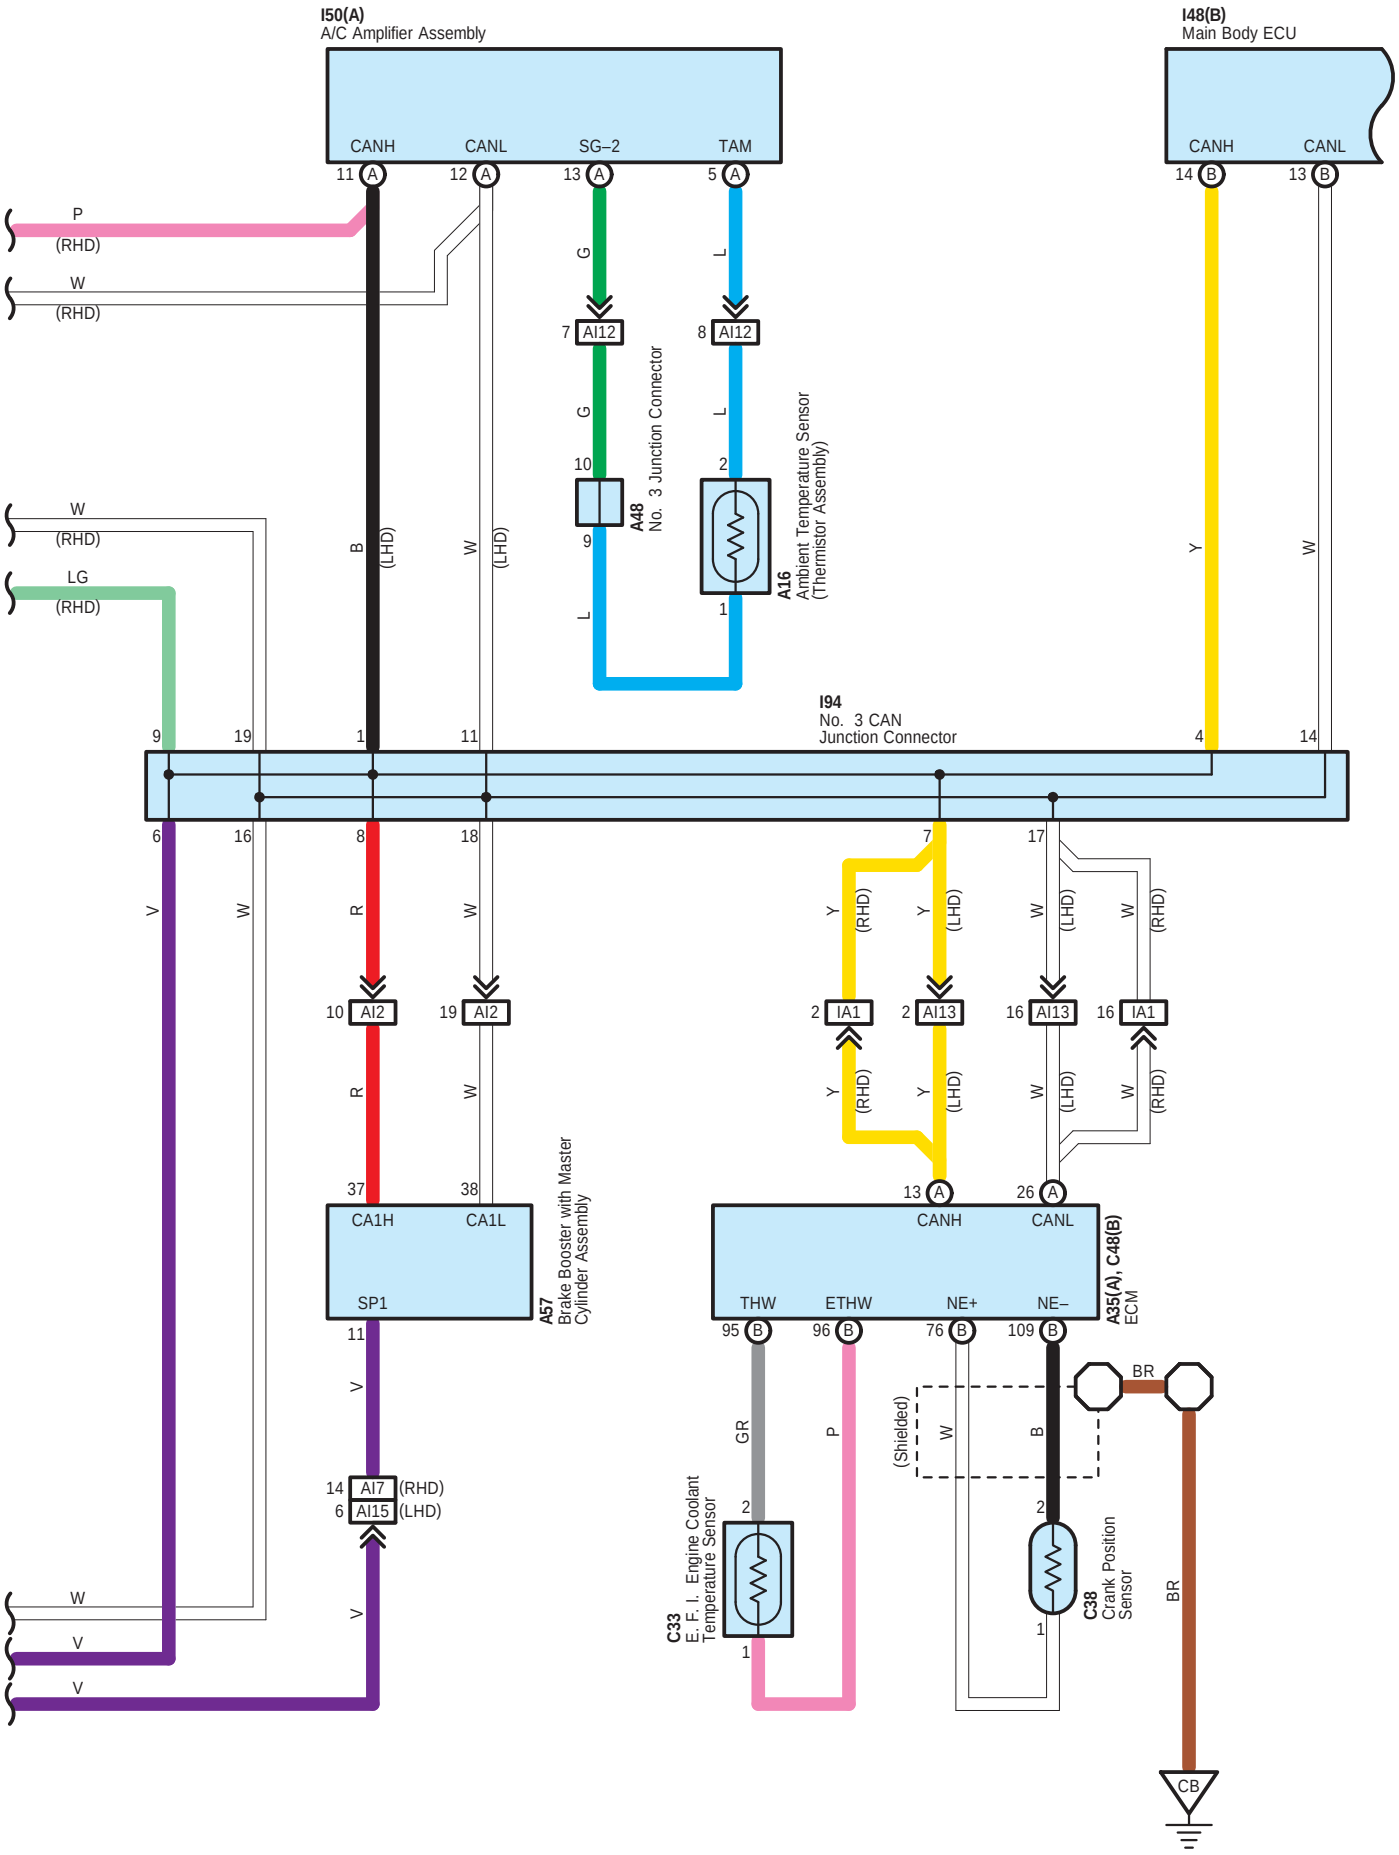
I50(A)
A/C Amplifier Assembly
CANH
CANL
SG–2
TAM
I48(B)
Main Body ECU
CANH
CANL
P
(RHD)
W
(RHD)
W
(RHD)
LG
(RHD)
AI12
AI12
A48
No. 3 Junction Connector
A16
Ambient Temperature Sensor
(Thermistor Assembly)
I94
No. 3 CAN
Junction Connector
AI2
AI2
IA1
AI13
AI13
IA1
CA1H
CA1L
SP1
A57
Brake Booster with Master
Cylinder Assembly
CANH
CANL
THW
ETHW
NE+
NE–
A35(A), C48(B)
ECM
AI7 (RHD)
AI15 (LHD)
(Shielded)
BR
C33
E. F. I. Engine Coolant
Temperature Sensor
C38
Crank Position
Sensor
CB

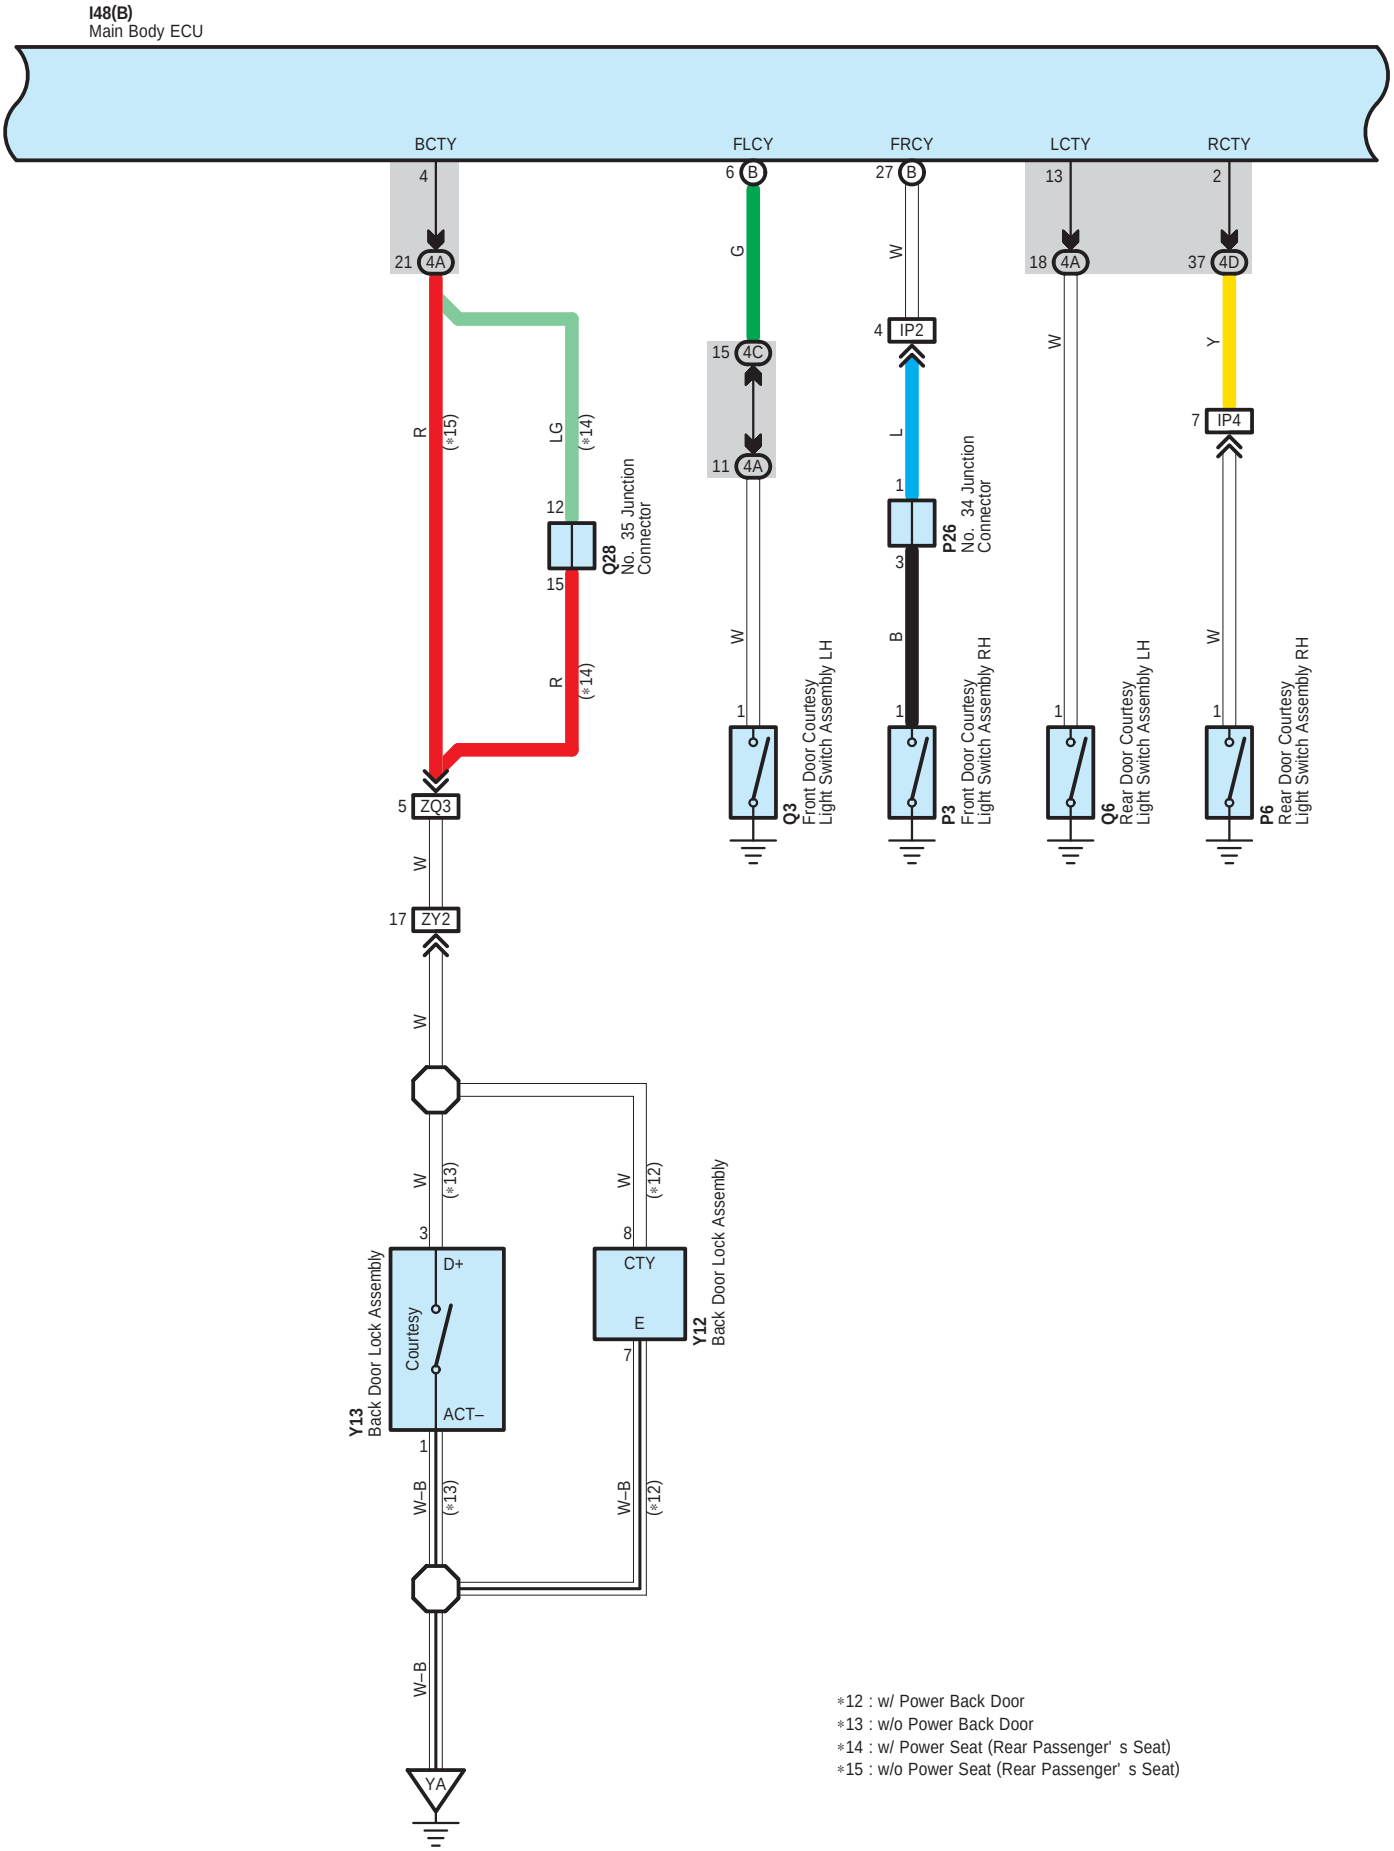

*12 : w/ Power Back Door
*13 : w/o Power Back Door
*14 : w/ Power Seat (Rear Passenger' s Seat)
*15 : w/o Power Seat (Rear Passenger' s Seat)

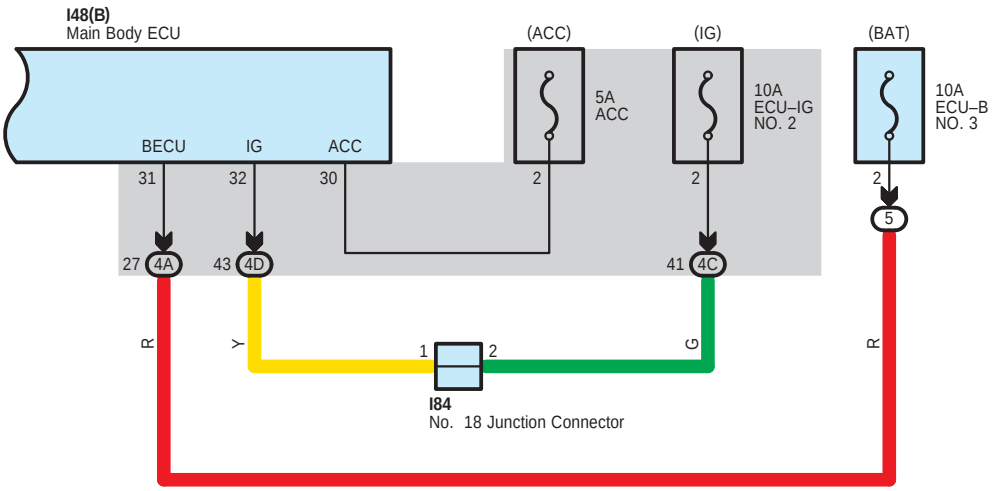
I48(B)
Main Body ECU
BECU
IG
ACC
31
32
30
27
4A
43
4D
(ACC)
5A
ACC
2
(IG)
10A
ECU–IG
NO. 2
2
41
4C
(BAT)
10A
ECU–B
NO. 3
2
5
R
Y
G
R
1
2
I84
No. 18 Junction Connector

A16
Black

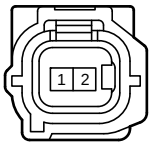

90980-12416

A22
Black

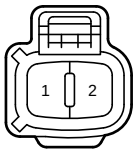

90980-11068

A35
Black

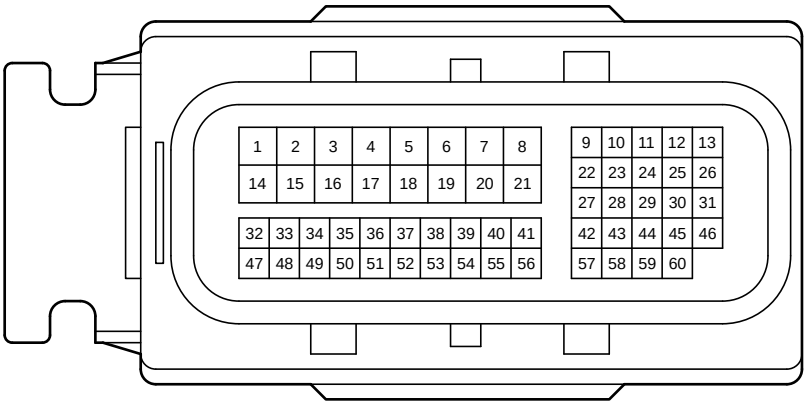

90980-12931

A48
Blue

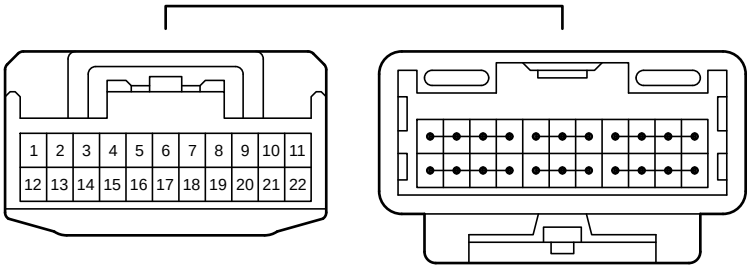

90980-12372

A57
Black

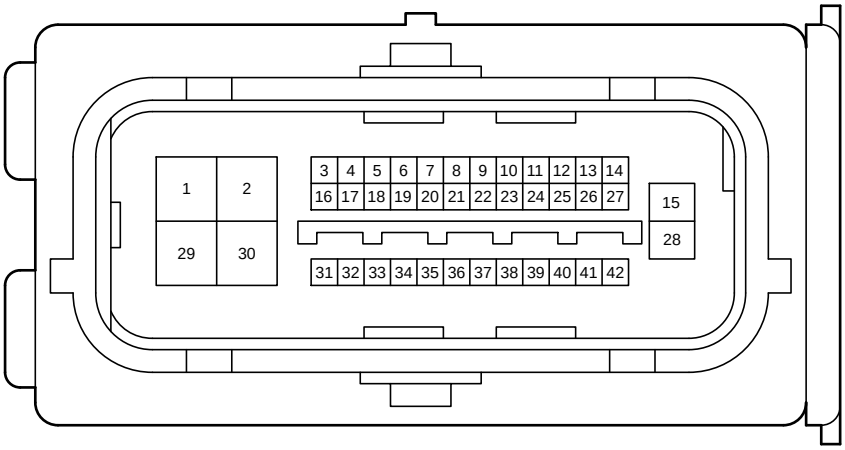

90980-12828

A61
Gray

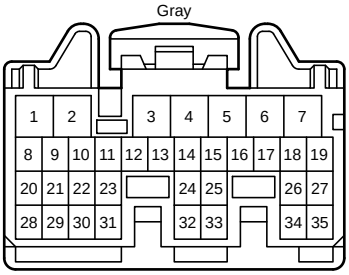

90980-12428

C33
Gray

90980-10735

C34
Gray

90980-11363

C38
Black

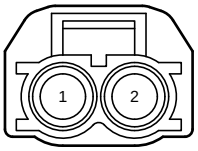

90980-12611

C42
Black

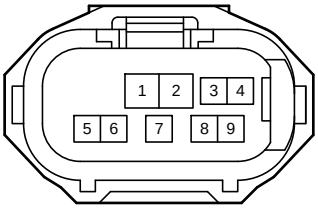

90980-12A23

C48
Black

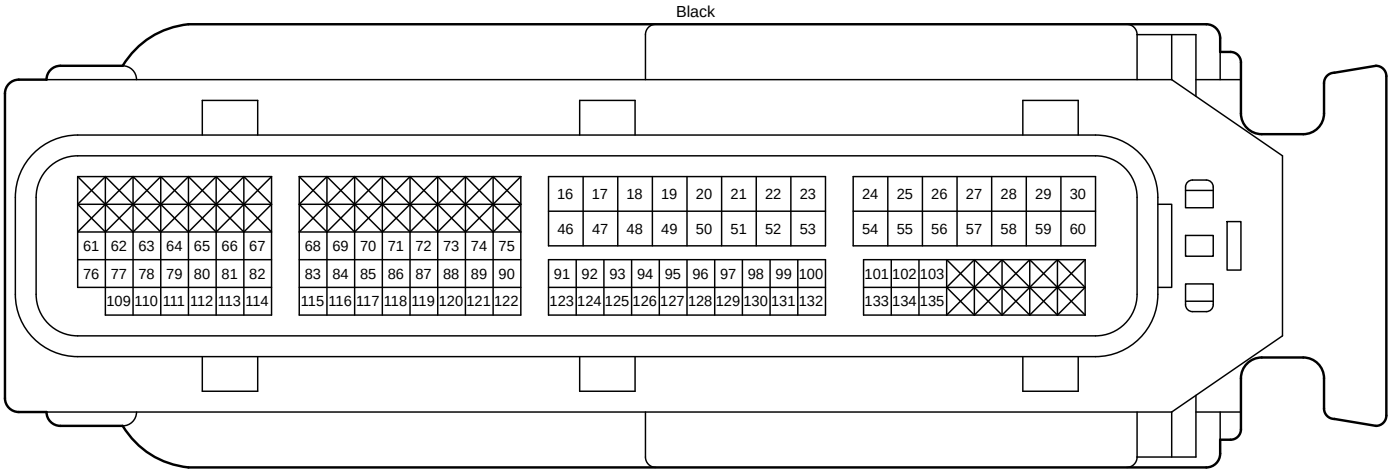

90980-12974

I1
White

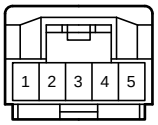

90980-11909

I4
Black

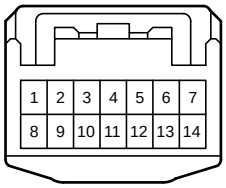

90980-12370

I10
Black

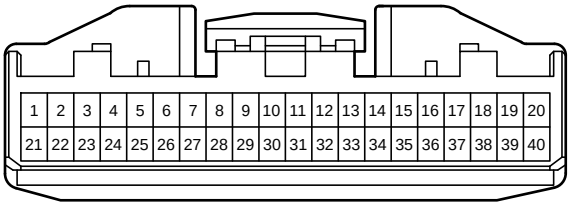

90980-12557

I11
Black

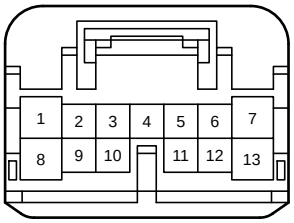

90980-12767

I38
White

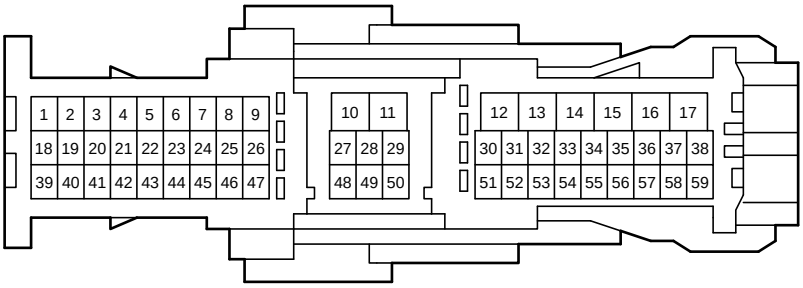

90980-12964

I40
White

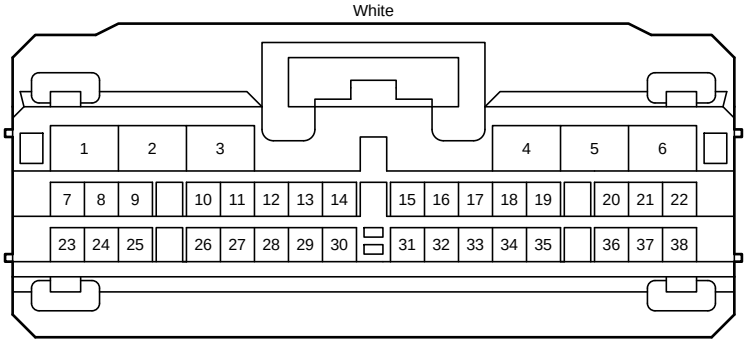

90980-12817

I48
White

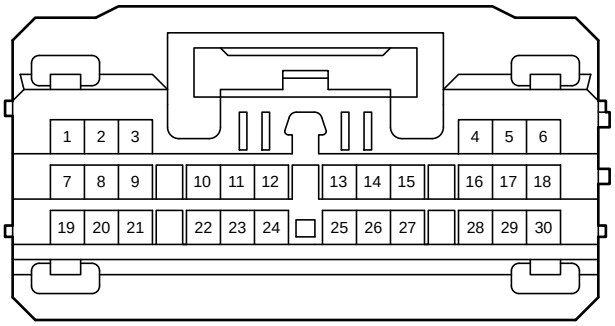

90980-12909

I50
White

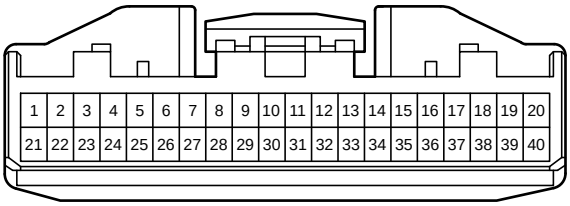

90980-12557

I53
Black

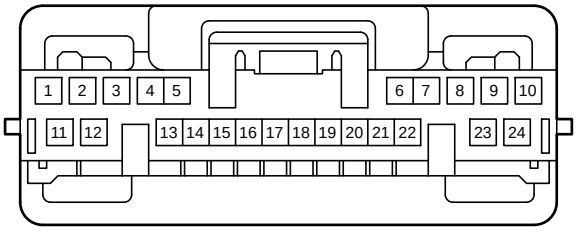

90980-12A42

I56
White

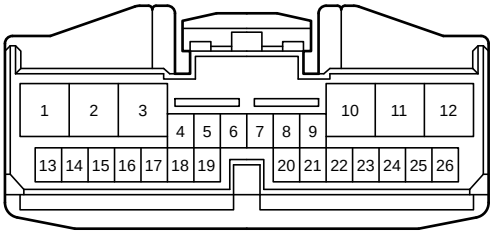

90980-12444

I70
Black

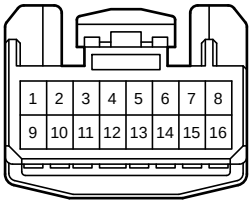

82824-33470

I72
Gray

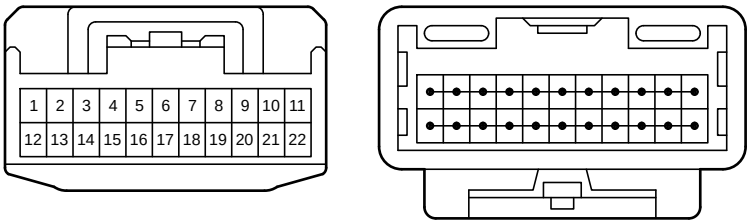

90980-12372

I73
White

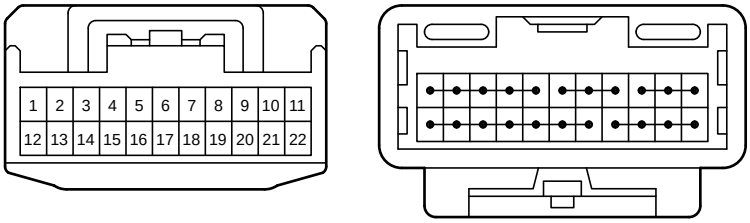

90980-12372

I76

Blue

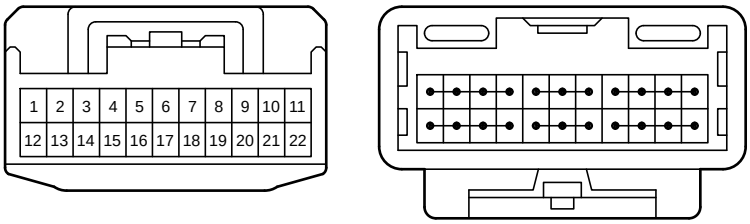

90980-12372

I77

Gray

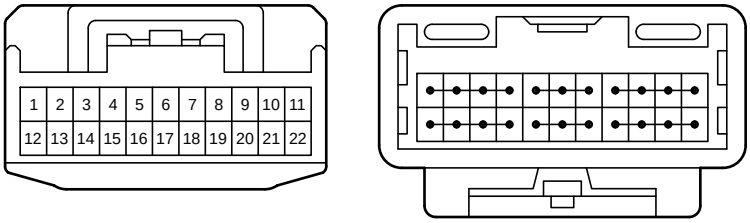

90980-12372

I79

Gray

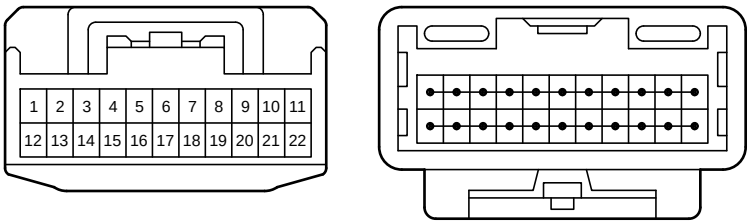

90980-12372

I81

Gray

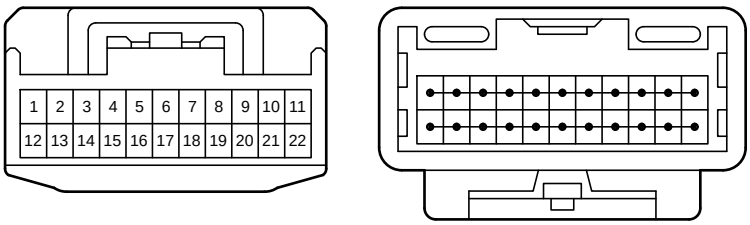

90980-12372

I82
Blue

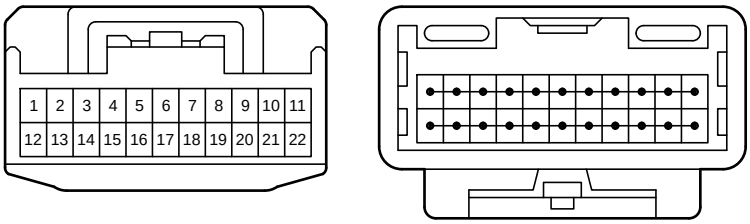

90980-12372
(LHD)

I82
White

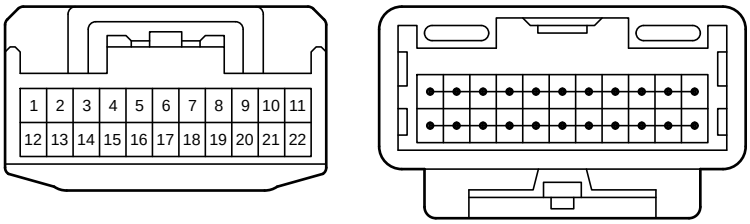

90980-12372
(RHD)

I84
Black

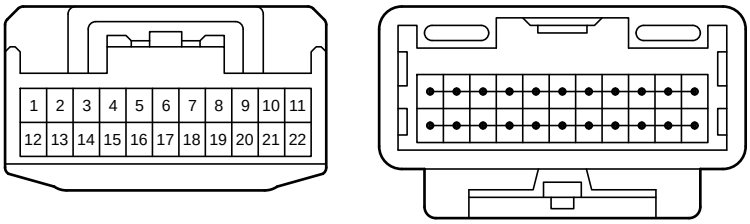

90980-12372
(LHD)

I84
Gray

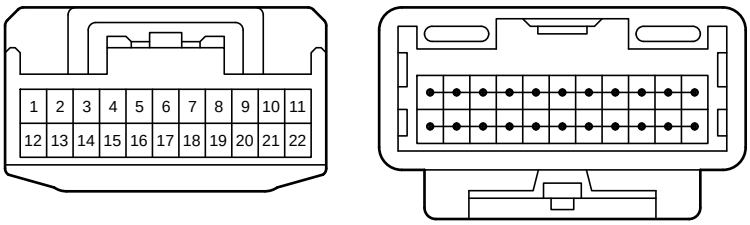

90980-12372
(RHD)

I85
White

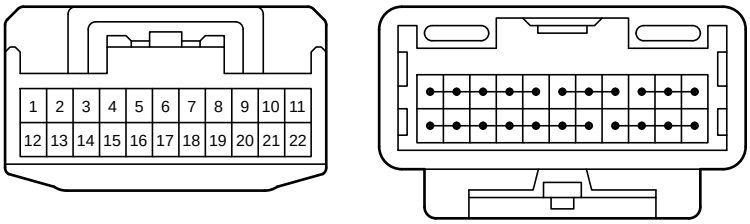

90980-12372
(LHD, RHD Before Sep. 2017 Production)

I85
Blue

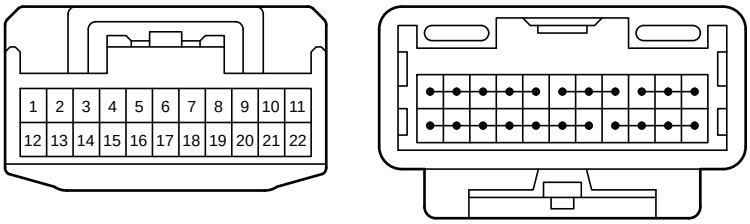

90980-12372
(RHD From Sep. 2017 Production)

I93
White

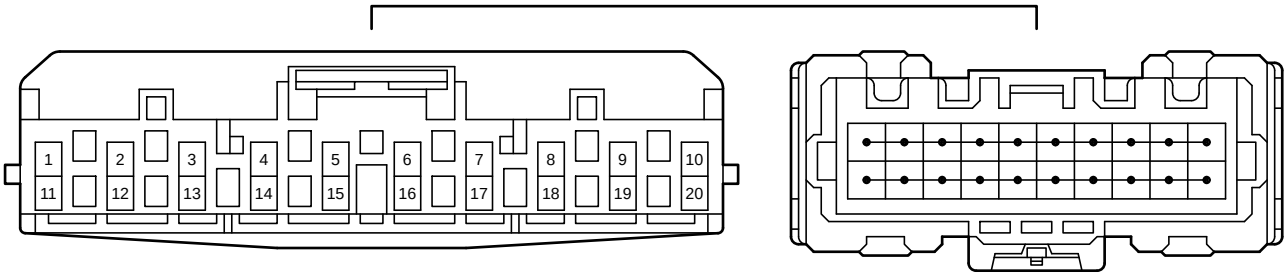

90980-12A58

I94
White

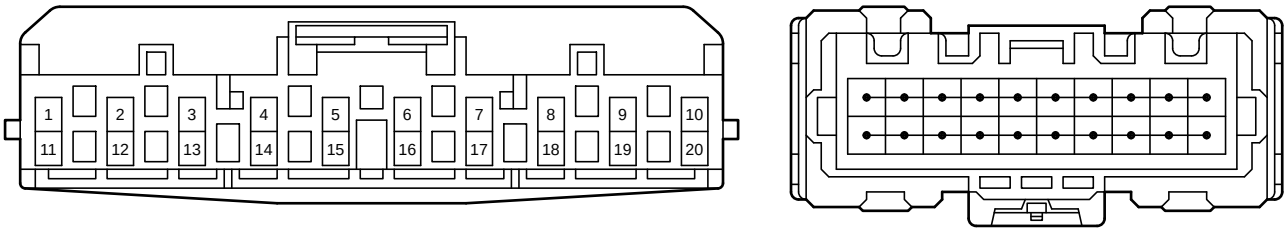

90980-12A58

I104
Green

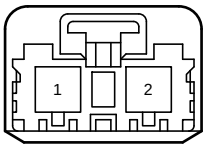

90980-12A73

I105
Blue

90980-12593

I116
Gray

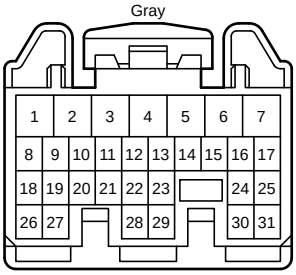

90980-12431

I121
White

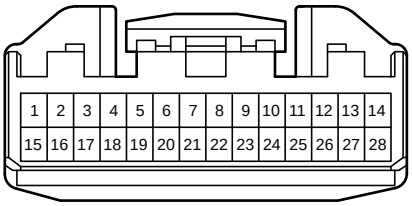

90980-12555

I122
White

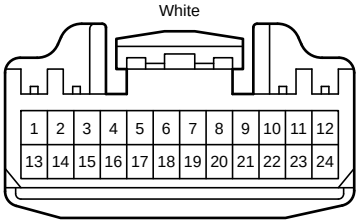

90980-12905

I135
Gray

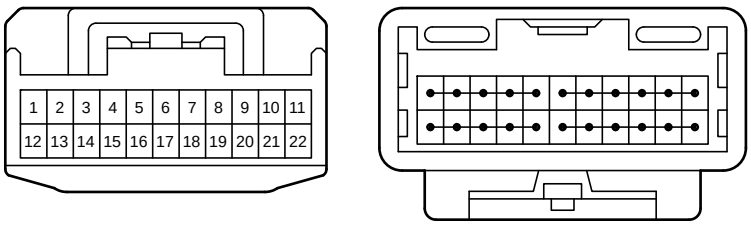

90980-12372

I137
White

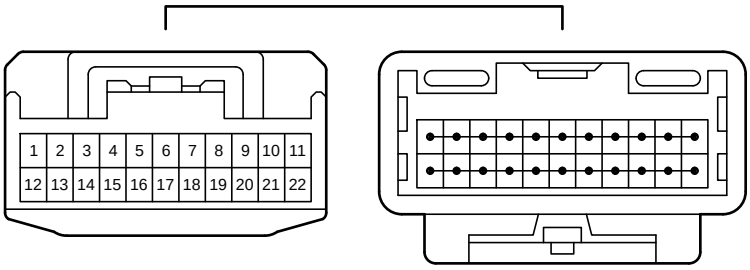

90980-12372

J5
White

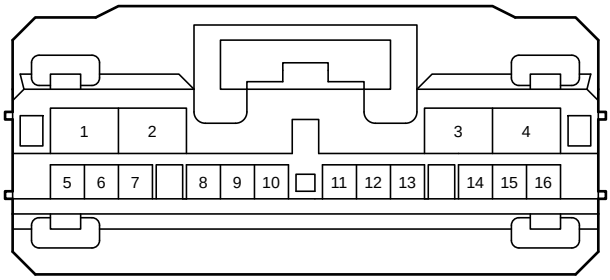

90980-12763

P3
Black

90980-10871

P6
Black

90980-10871

P22
White

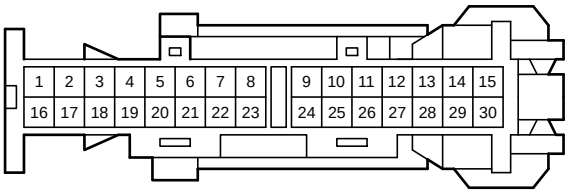

90980-12979

P26
White

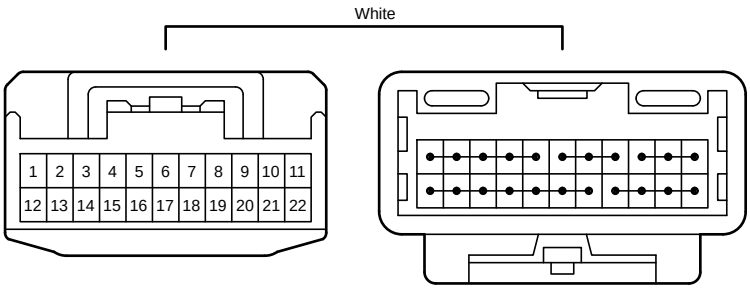

90980-12372

P33
White

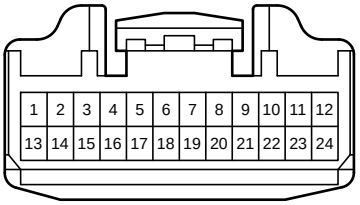

90980-12554

P34
Black

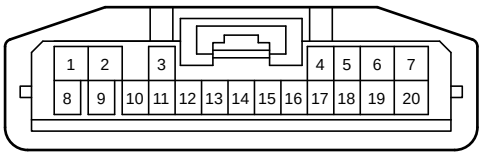

90980-12976

Q3
Black

90980-10871

Q6
Black

90980-10871

Q28
White

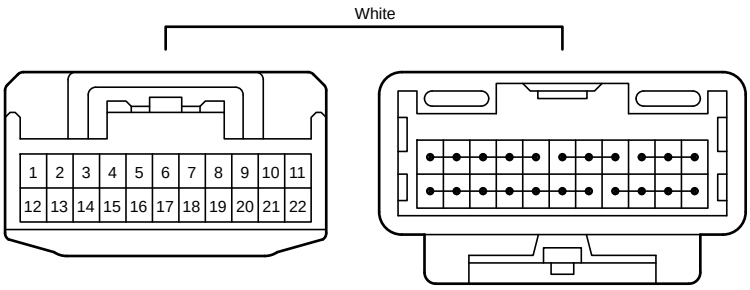

90980-12372

Y12
White



90980-10799

Y13
Black

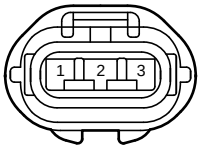

90980-11349

b2
White



90980-11140

z3
Black

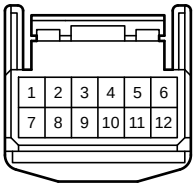

90980-12559

4A
White

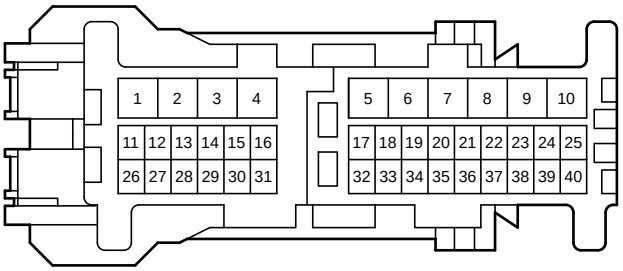

90980-12884

4C
White

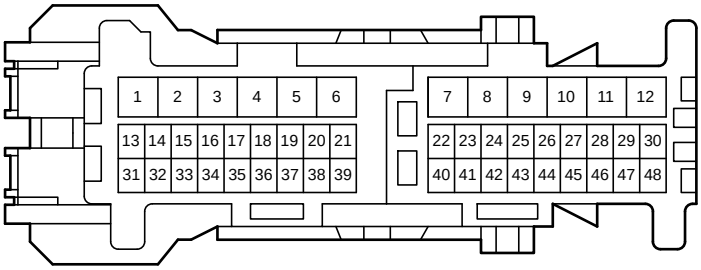

90980-12887

4D
White

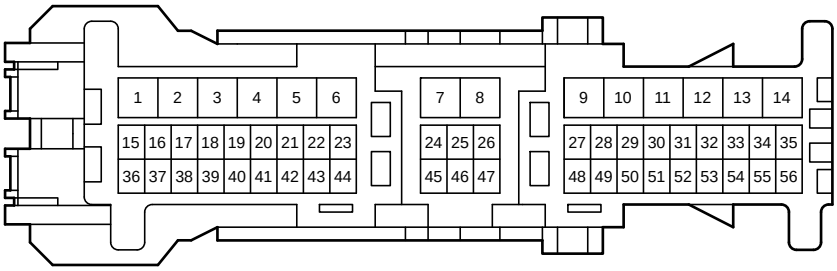

90980-12890

AI2
Black

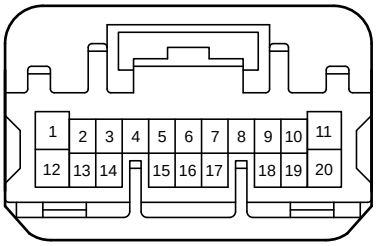

90980-12741

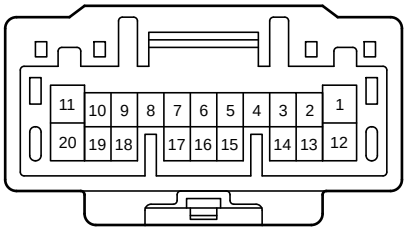

90980-12740

(LHD)

AI2
Blue

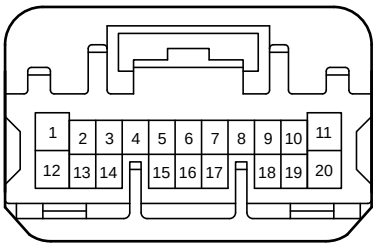

90980-12741

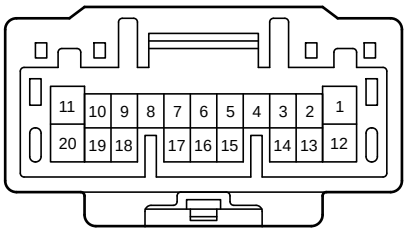

90980-12740

(RHD)

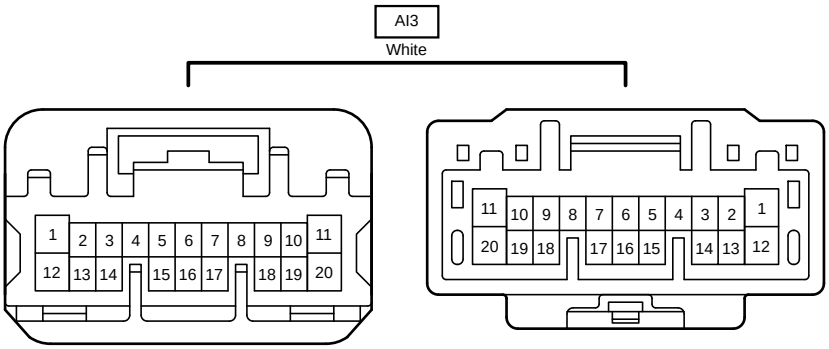

90980-12741

90980-12740

(LHD)

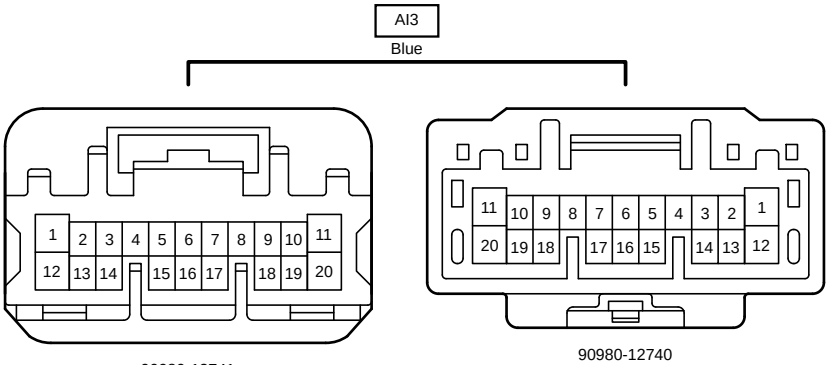

90980-12741

90980-12740

(RHD)

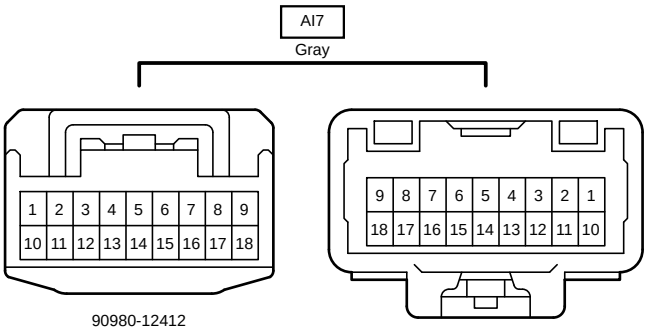

90980-12412

90980-12411

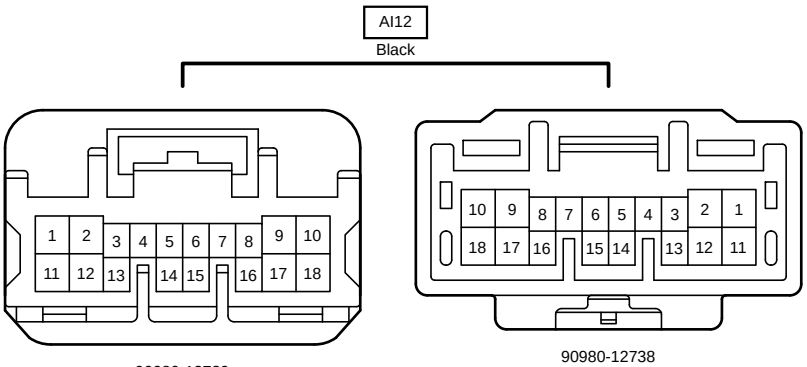

90980-12739

90980-12738

AI13
White

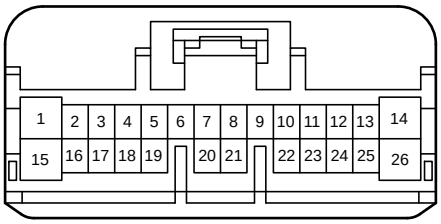

90980-12771

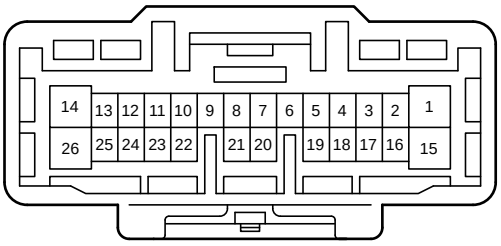

90980-12770

AI14
Gray

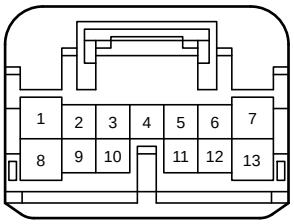

90980-12767

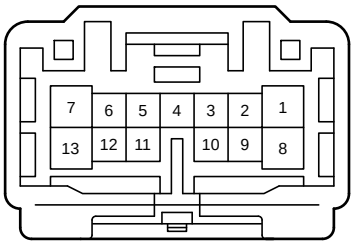

90980-12766

AI15
Blue

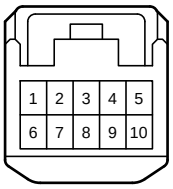

90980-12368

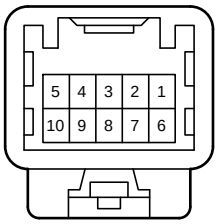

90980-12367

CA1
Blue

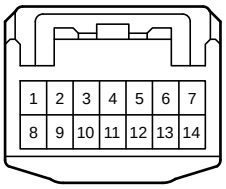

90980-12370

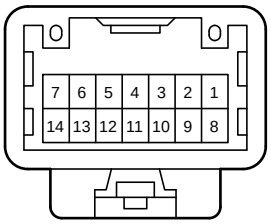

90980-12369

CA2
White

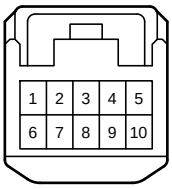

90980-12368

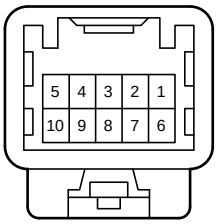

90980-12367

IA1
White

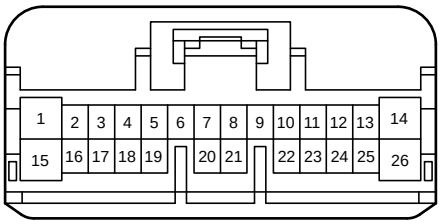

90980-12771

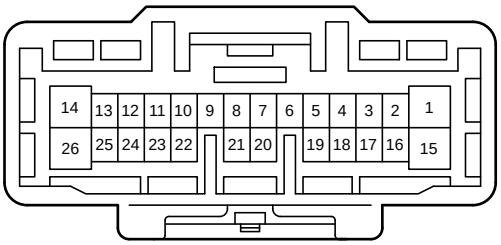

90980-12770

IJ2
White

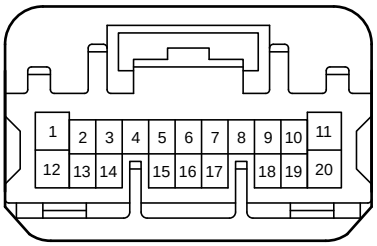

90980-12741

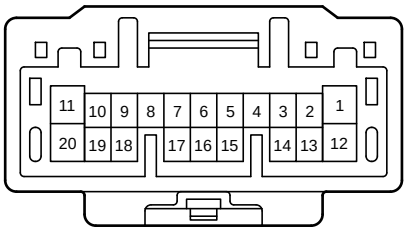

90980-12740

IP2
Blue

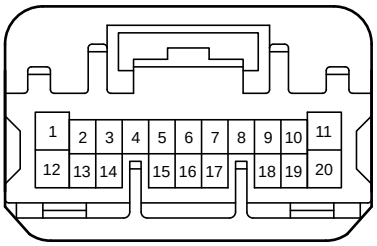

90980-12741

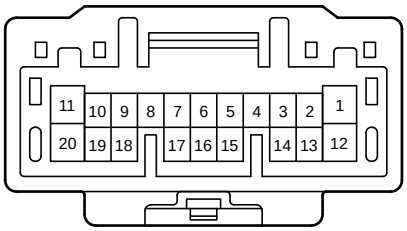

90980-12740

IP4
Gray

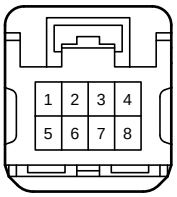

90980-12735

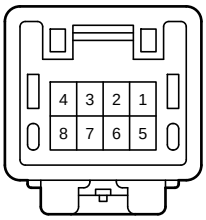

90980-12734

IP6
Gray

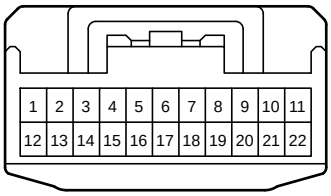

90980-12372

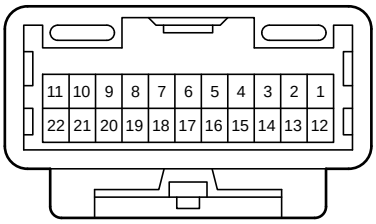

90980-12371

QI1
White

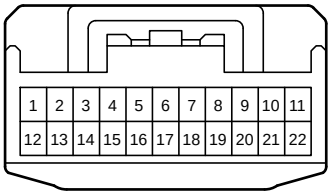

90980-12372

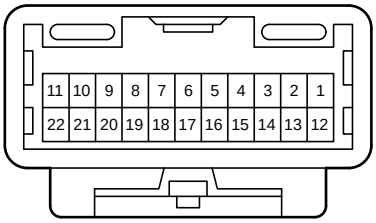

90980-12371

ZQ3
Gray

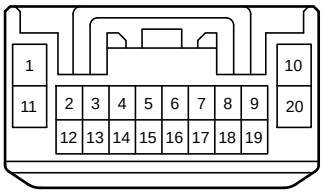

90980-12378

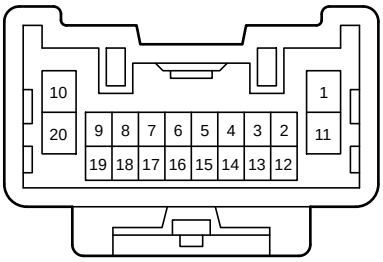

90980-12377

ZY2
Black

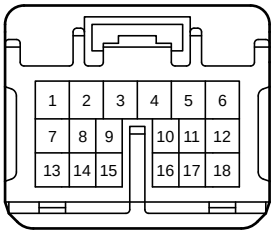

90980-12745

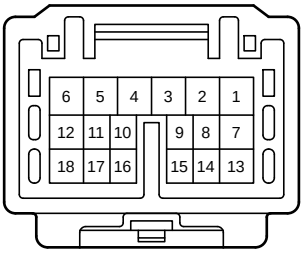

90980-12744

bQ1
White

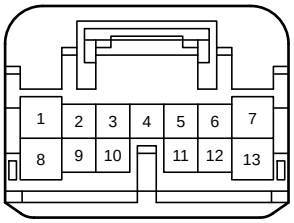

90980-12767

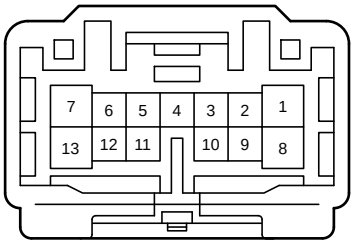

90980-12766