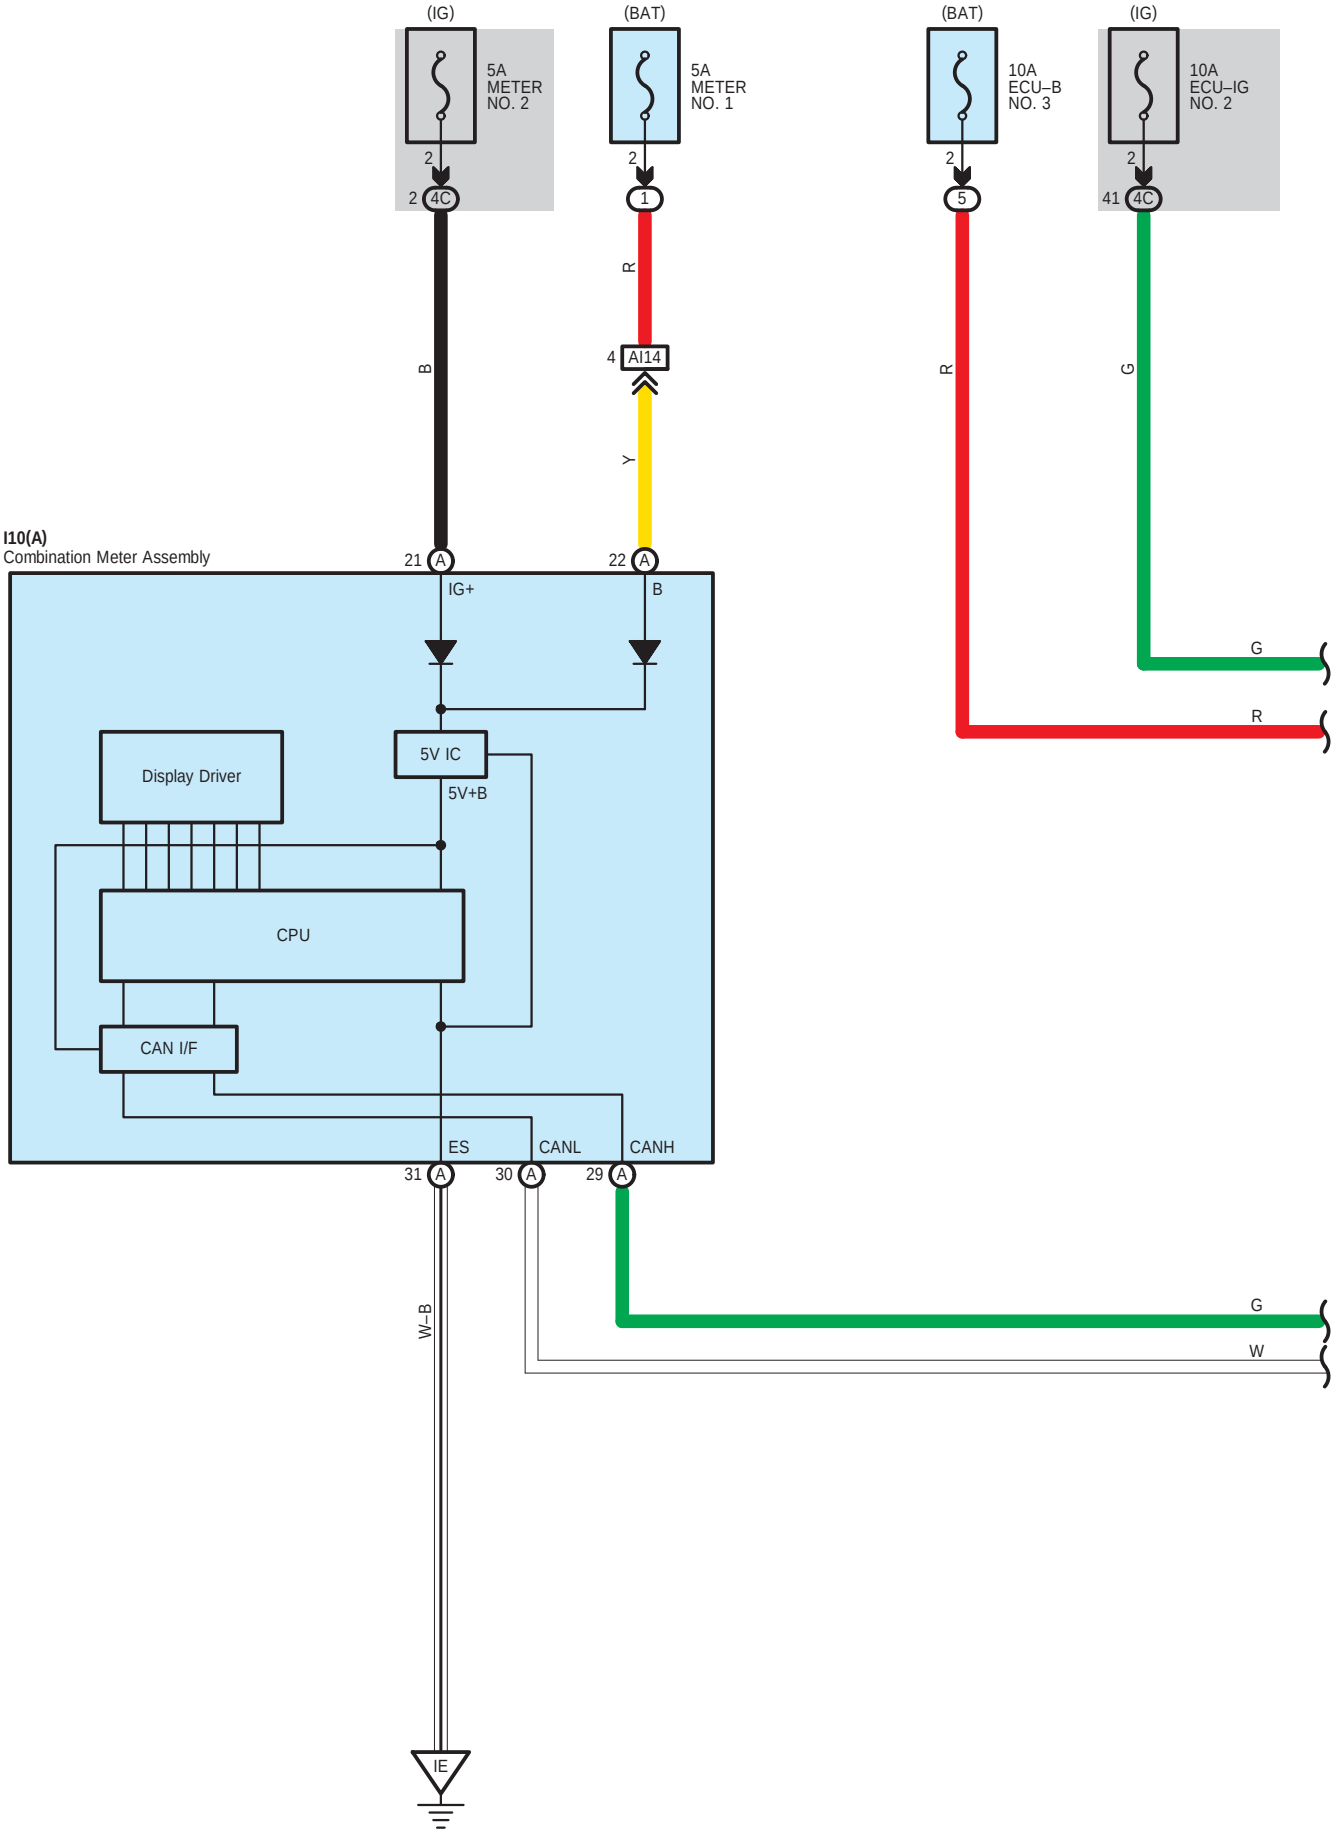
(IG)
5A
METER
NO. 2
2
2 4C
(BAT)
5A
METER
NO. 1
2
1
R
4 AI14
Y
(BAT)
10A
ECU–B
NO. 3
2
5
R
(IG)
10A
ECU–IG
NO. 2
2
41 4C
G
B
I10(A)
Combination Meter Assembly
21 A
22 A
IG+
B
G
R
Display Driver
5V IC
5V+B
CPU
CAN I/F
ES
CANL
CANH
31 A
30 A
29 A
G
W
W–B
IE

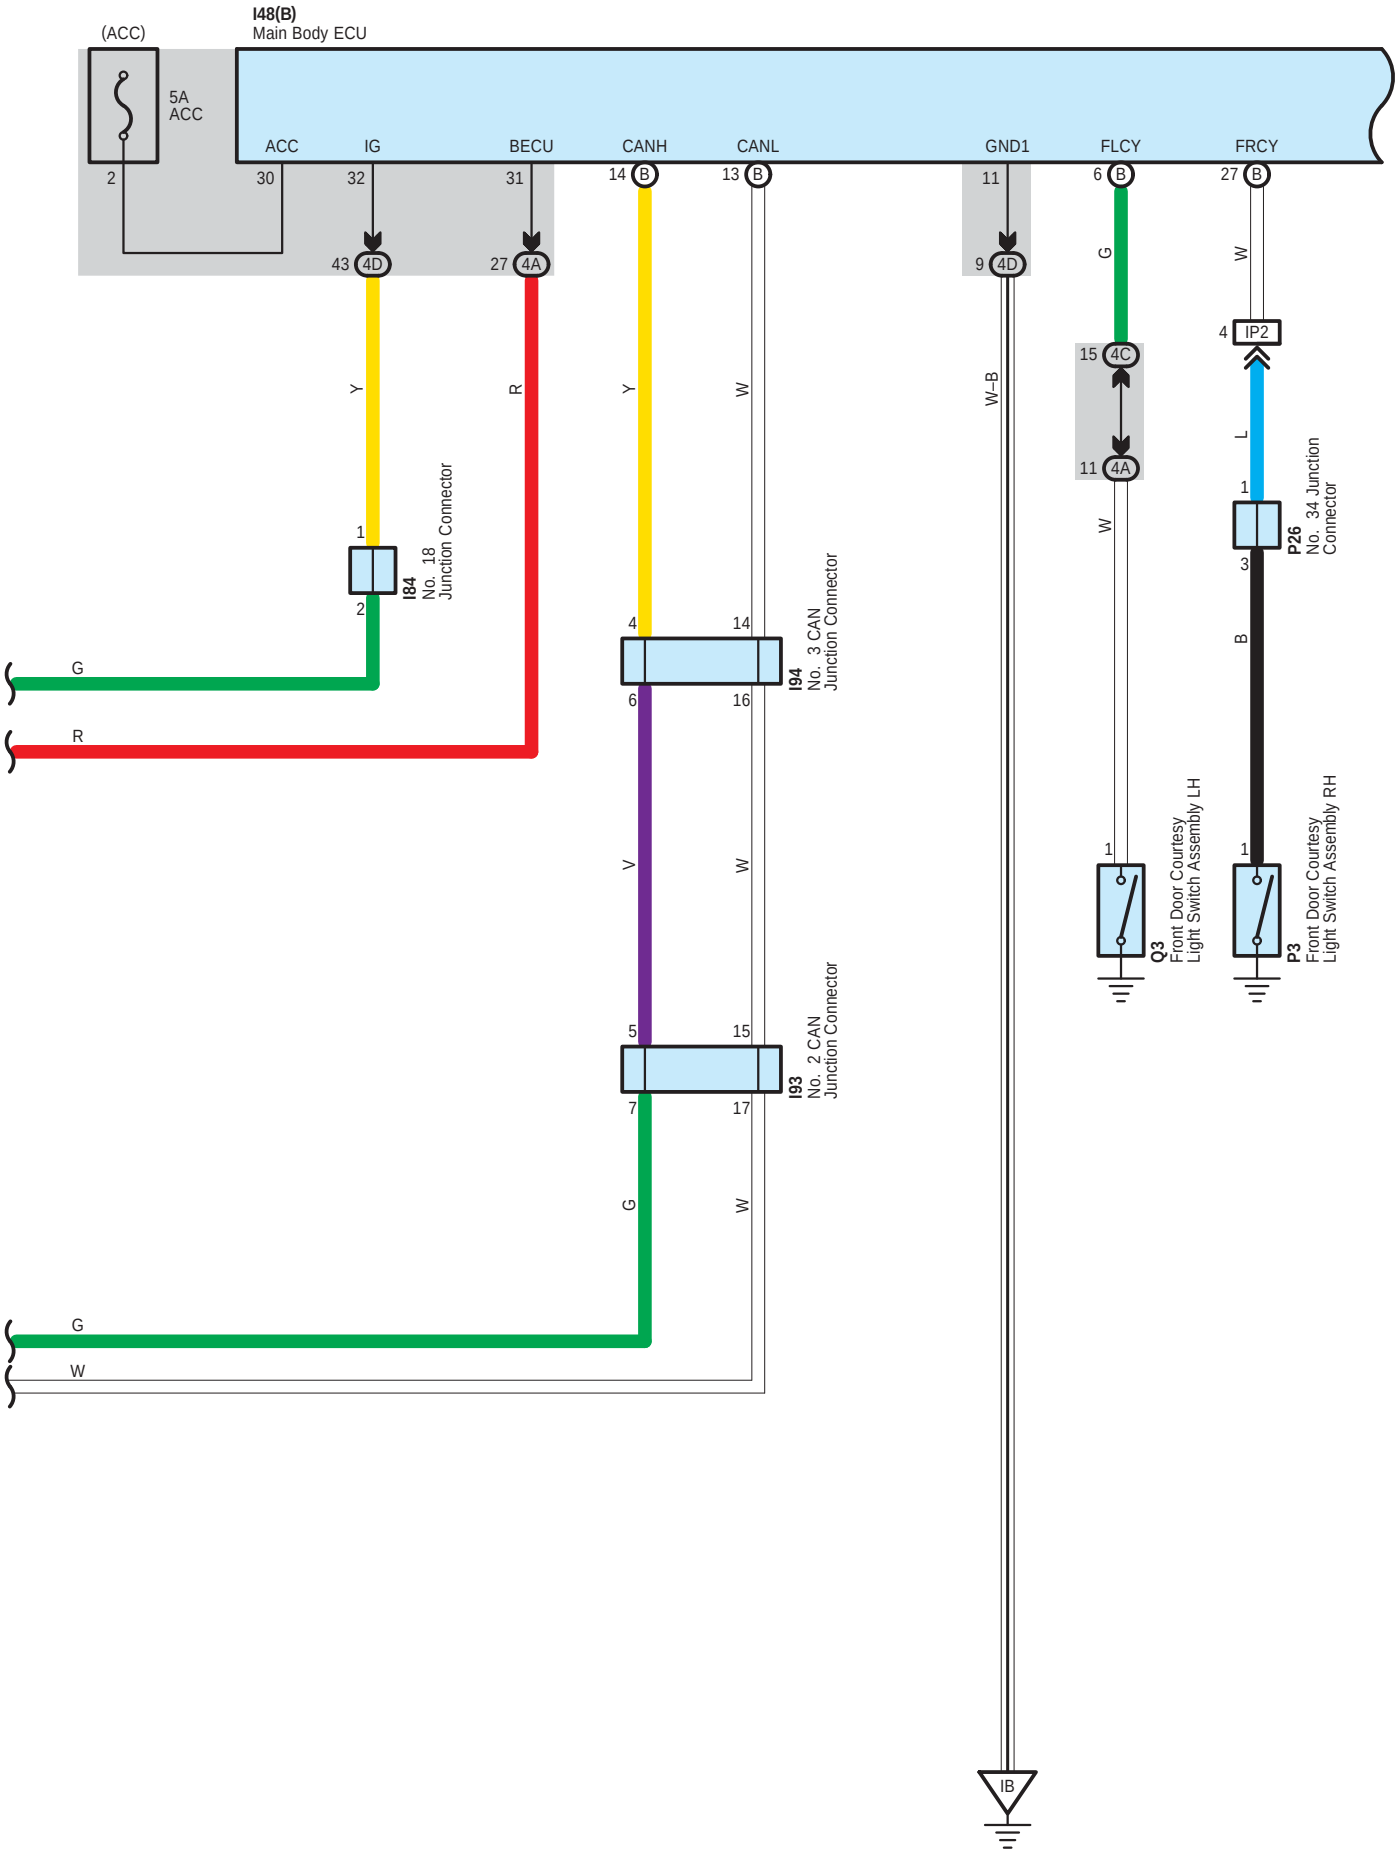
I48(B)
Main Body ECU
(ACC)
5A
ACC
ACC
IG
BECU
CANH
CANL
GND1
FLCY
FRCY
2
30
32
31
14
13
11
6
27
43
4D
27
4A
9
4D
15
4C
11
4A
4
IP2
Y
R
Y
W
W–B
G
W
L
B
1
2
I84
No. 18
Junction Connector
4
14
6
16
I94
No. 3 CAN
Junction Connector
V
W
5
15
7
17
I93
No. 2 CAN
Junction Connector
G
W
1
3
P26
No. 34 Junction
Connector
Q3
Front Door Courtesy
Light Switch Assembly LH
P3
Front Door Courtesy
Light Switch Assembly RH
IB

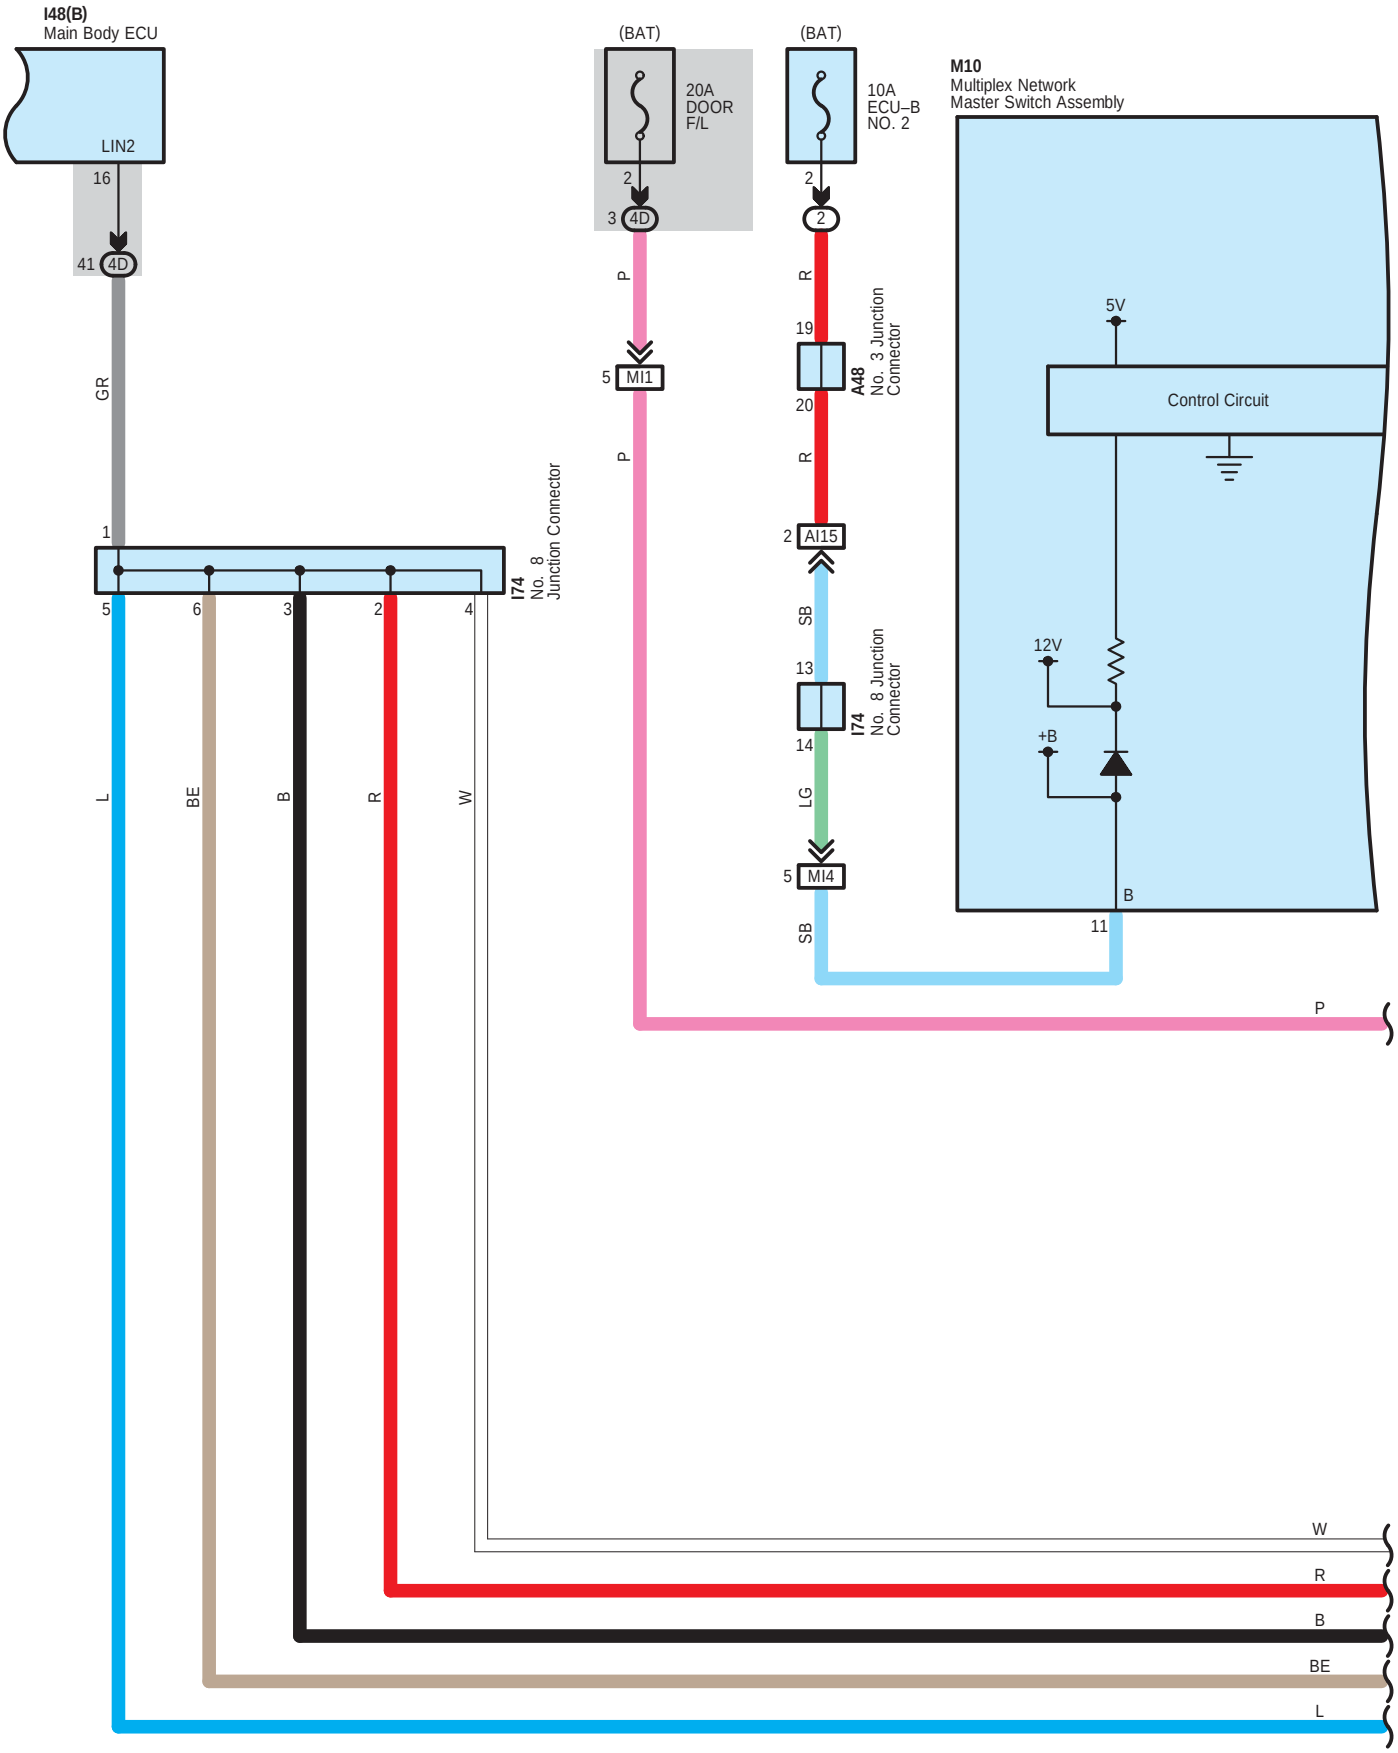
I48(B)
Main Body ECU
LIN2
16
41
4D
GR
1
I74
No. 8
Junction Connector
5
6
3
2
4
L
BE
B
R
W
(BAT)
20A
DOOR
F/L
2
3
4D
P
5
MI1
P
(BAT)
10A
ECU–B
NO. 2
2
2
R
19
A48
No. 3 Junction
Connector
20
R
2
AI15
SB
13
I74
No. 8 Junction
Connector
14
LG
5
MI4
SB
M10
Multiplex Network
Master Switch Assembly
5V
Control Circuit
12V
+B
B
11
P
W
R
B
BE
L

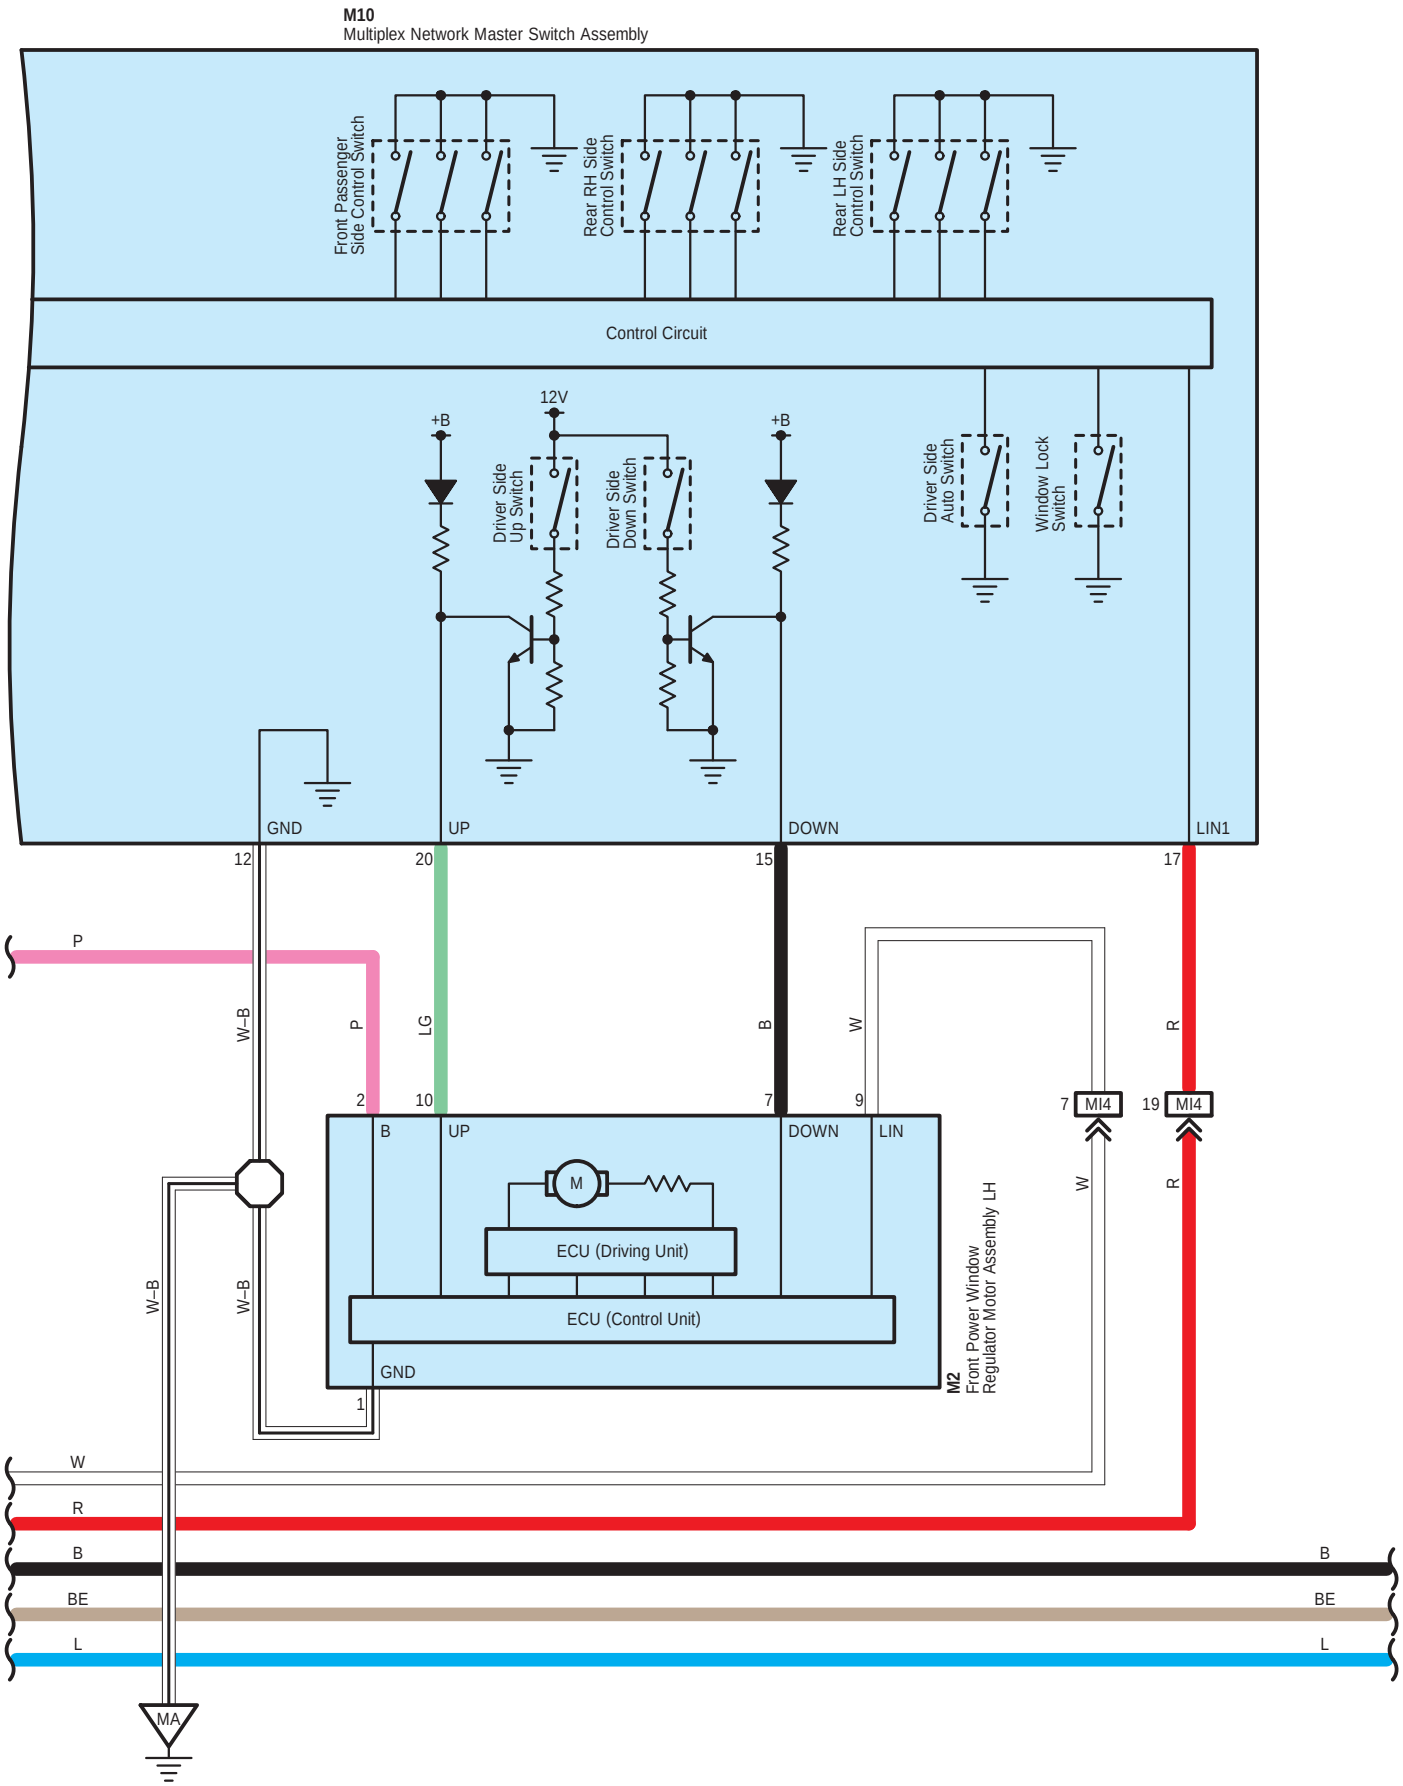
M10
Multiplex Network Master Switch Assembly
Front Passenger Side Control Switch
Rear RH Side Control Switch
Rear LH Side Control Switch
Control Circuit
12V
+B
+B
Driver Side Up Switch
Driver Side Down Switch
Driver Side Auto Switch
Window Lock Switch
GND
UP
DOWN
LIN1
12
20
15
17
P
W-B
P
LG
B
W
R
2
10
7
9
7
MI4
19
MI4
B
UP
DOWN
LIN
M
ECU (Driving Unit)
ECU (Control Unit)
GND
1
M2
Front Power Window Regulator Motor Assembly LH
W
R
W-B
W-B
W
R
W
R
B
B
BE
BE
L
L
MA

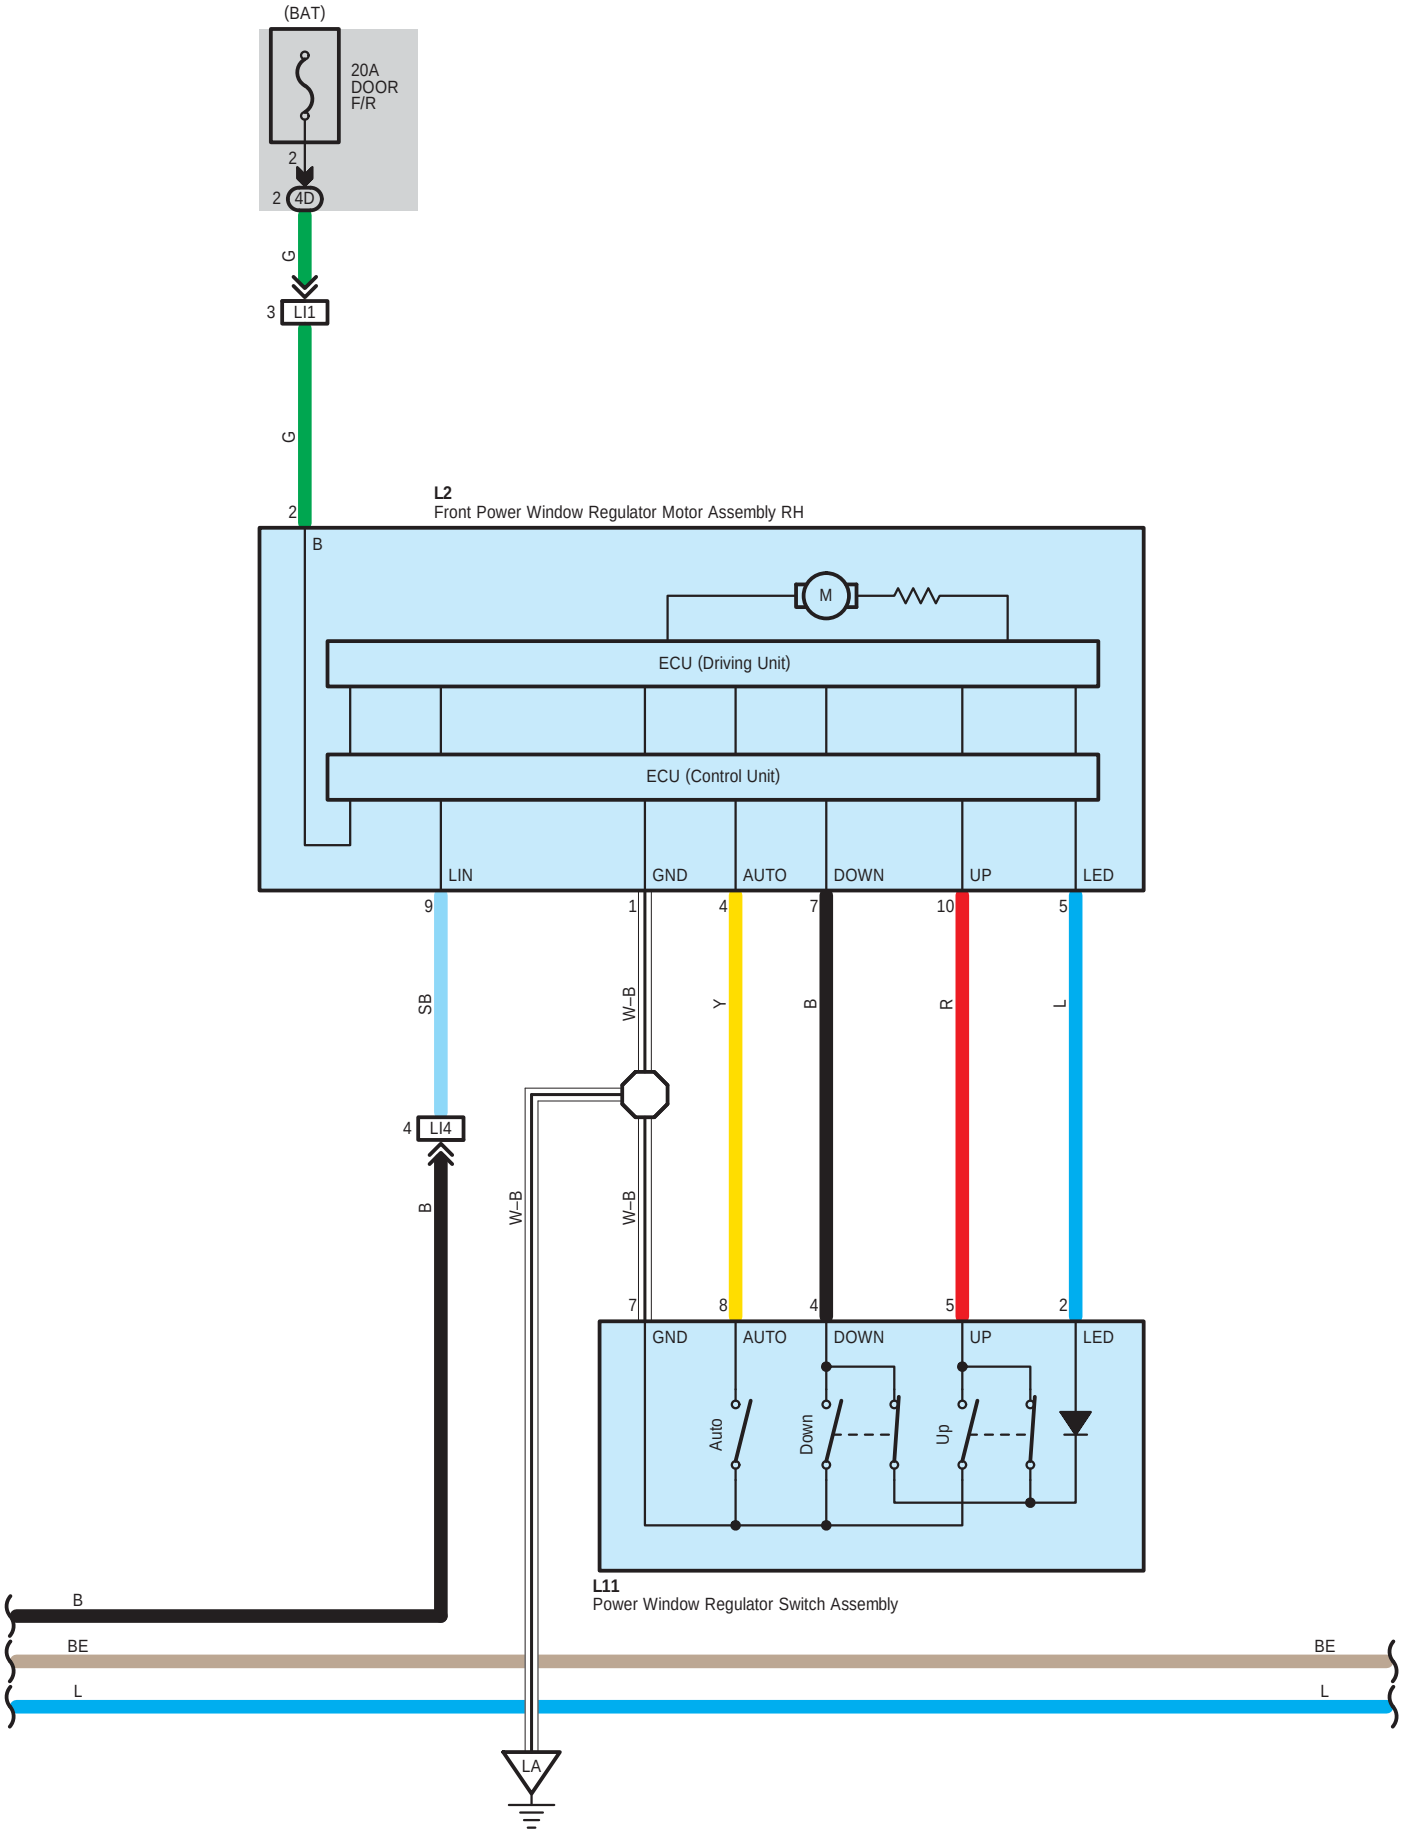
(BAT)
20A
DOOR
F/R
2
2 4D
G
3 LI1
G
2
L2
Front Power Window Regulator Motor Assembly RH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
SB
W–B
Y
B
R
L
4 LI4
B
W–B
W–B
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
L11
Power Window Regulator Switch Assembly
B
BE
L
BE
L
LA

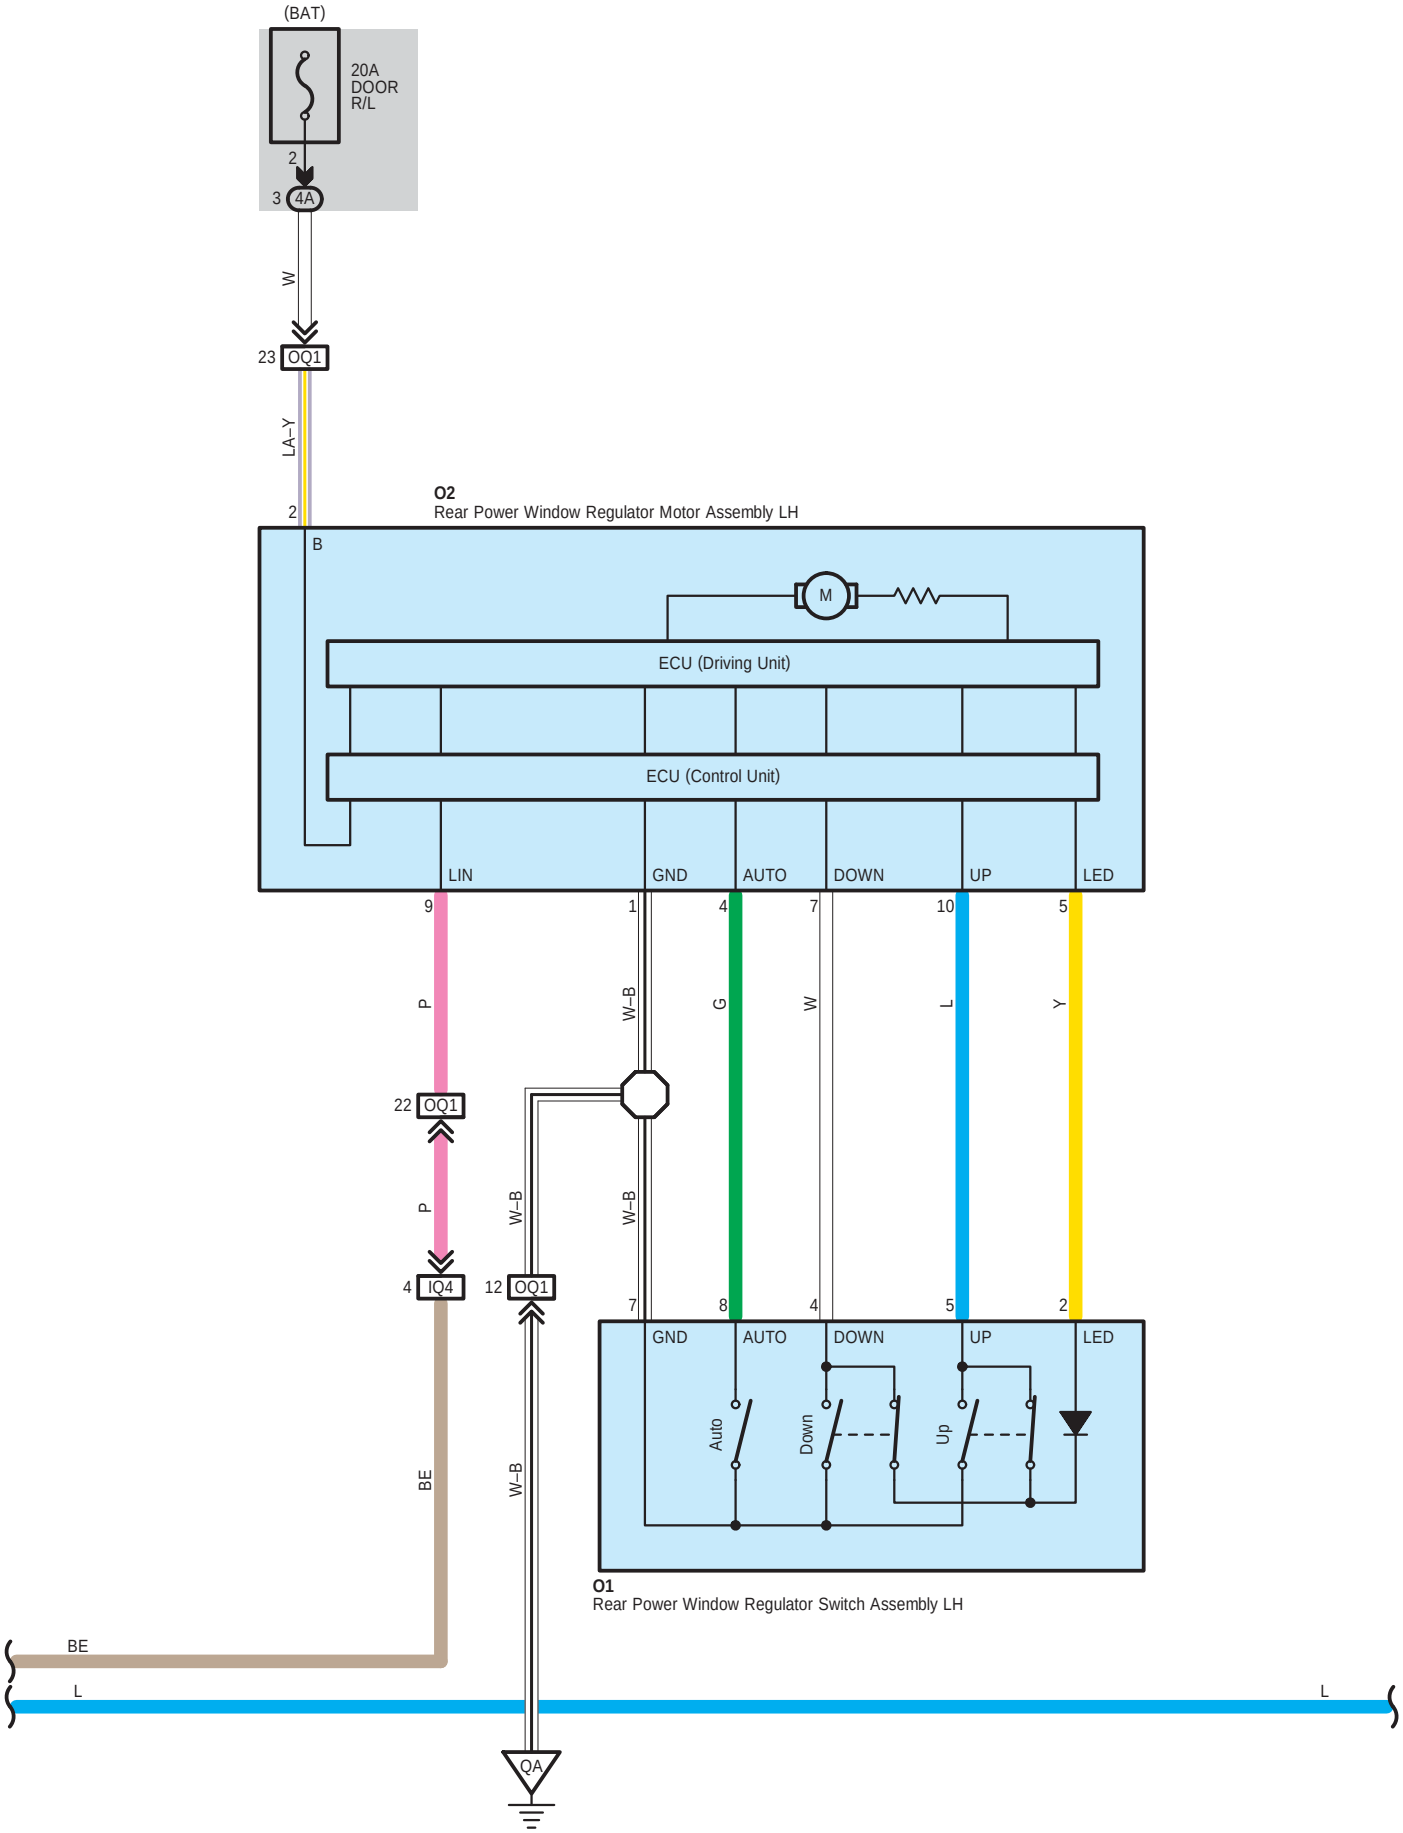
(BAT)
20A
DOOR
R/L
2
3
4A
W
23
OQ1
LA–Y
2
O2
Rear Power Window Regulator Motor Assembly LH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
P
W–B
G
W
L
Y
22
OQ1
P
W–B
W–B
4
IQ4
12
OQ1
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
BE
W–B
O1
Rear Power Window Regulator Switch Assembly LH
BE
L
L
QA

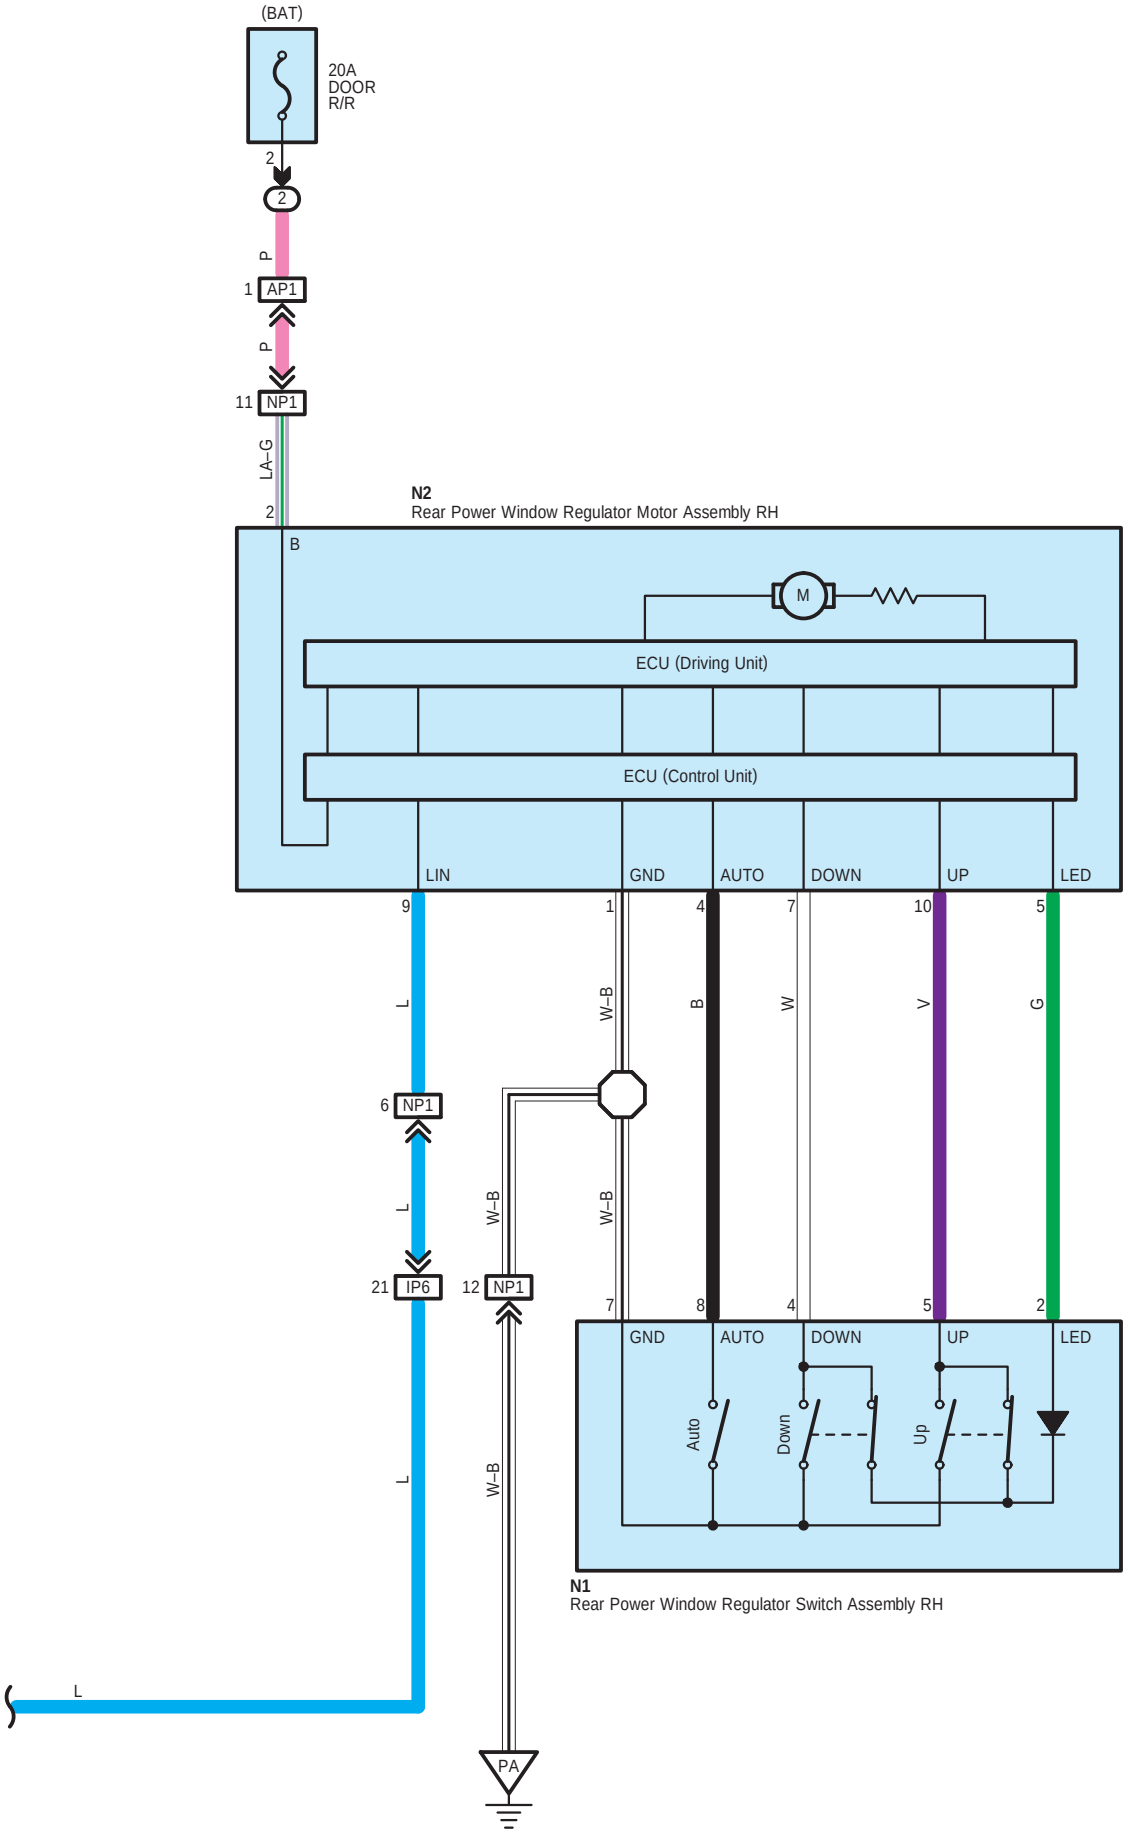
(BAT)
20A
DOOR
R/R
2
2
P
1 AP1
P
11 NP1
LA–G
2
N2
Rear Power Window Regulator Motor Assembly RH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
L
W–B
B
W
V
G
6 NP1
L
W–B
W–B
21 IP6
12 NP1
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
L
W–B
N1
Rear Power Window Regulator Switch Assembly RH
L
PA

A48
Blue

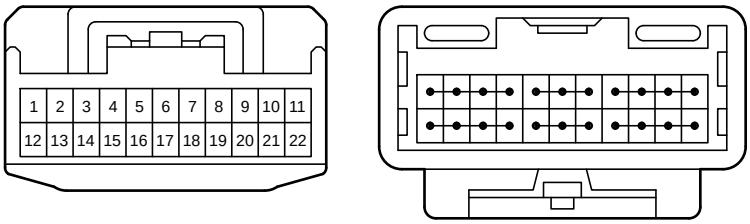

90980-12372

I10
Black

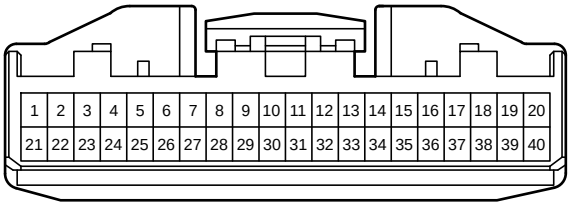

90980-12557

I48
White

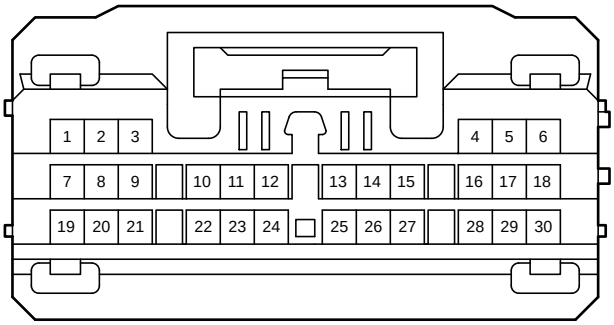

90980-12909

I74
Black

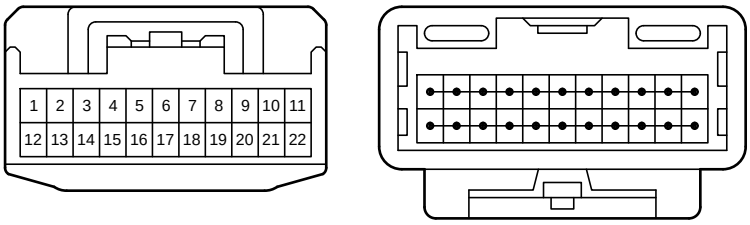

90980-12372
(LHD, RHD Before Sep. 2017 Production)

I74
White

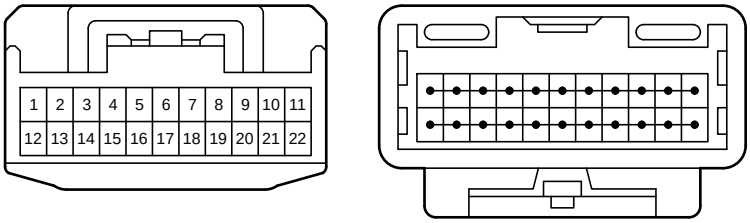

90980-12372
(RHD From Sep. 2017 Production)

I84
Black

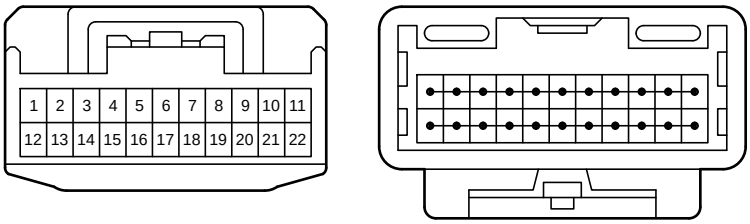

90980-12372
(LHD)

I84
Gray

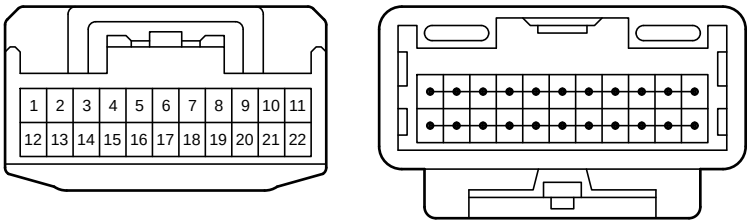

90980-12372
(RHD)

I93
White

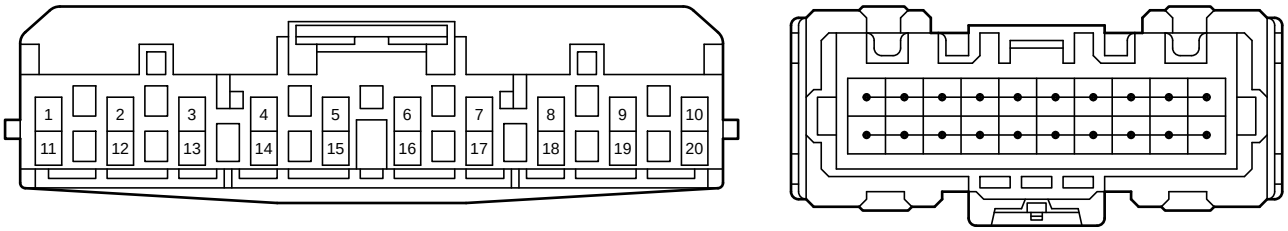

90980-12A58

I94
White

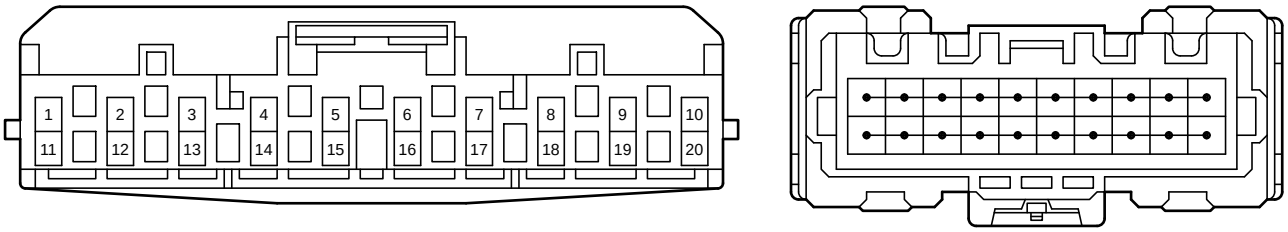

90980-12A58

L2
White

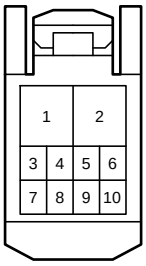

90980-12328

L11
Black

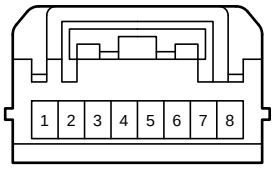

90980-12550

M2
White

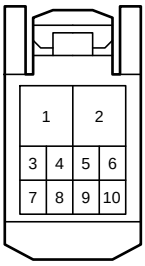

90980-12328

M10
White

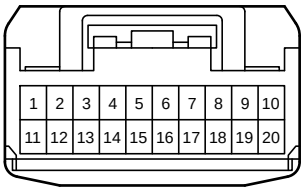

90980-12460

N1
Black

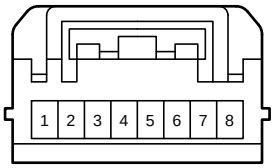

90980-12550

N2
White

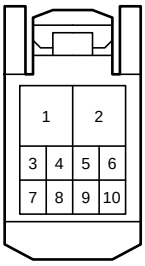

90980-12328

O1
Black

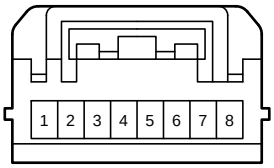

90980-12550

O2
White

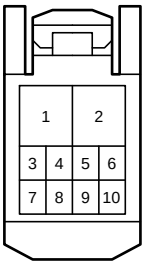

90980-12328

P3
Black

90980-10871

P26
White

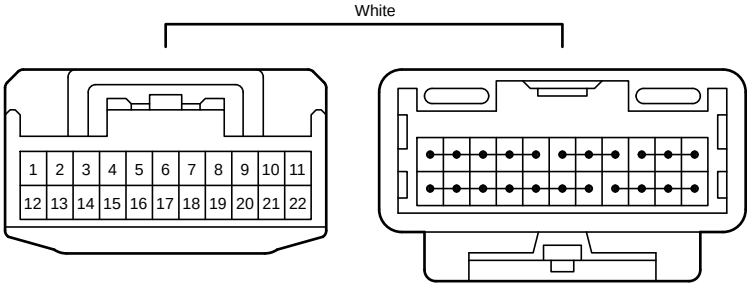

90980-12372

Q3
Black

90980-10871

4A
White

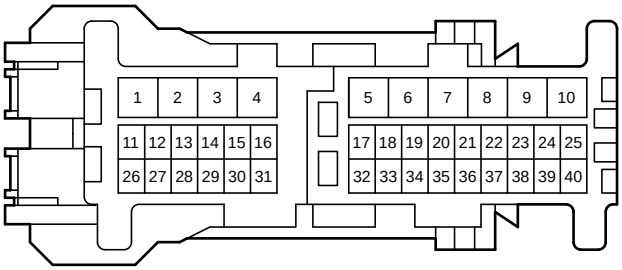

90980-12884

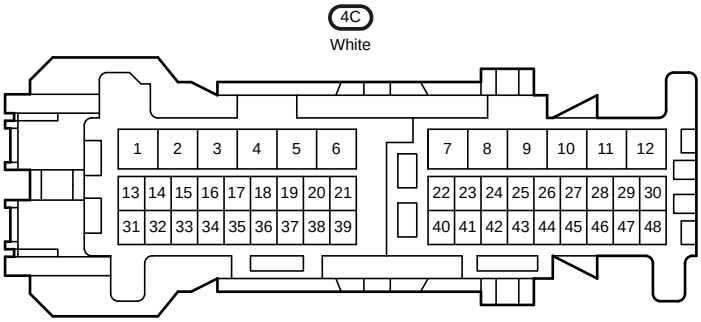

90980-12887

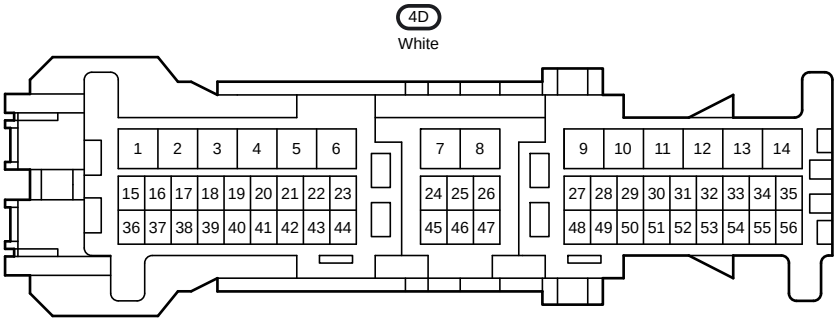

90980-12890

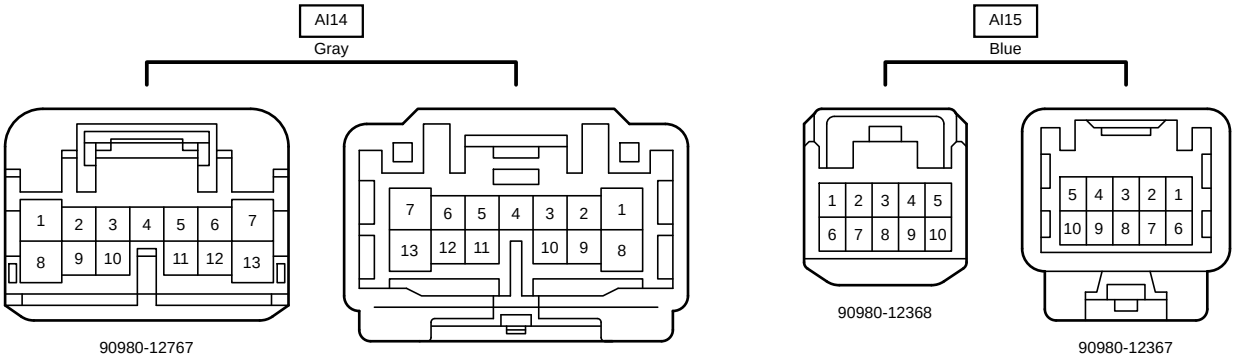

90980-12767

90980-12766

90980-12368

90980-12367

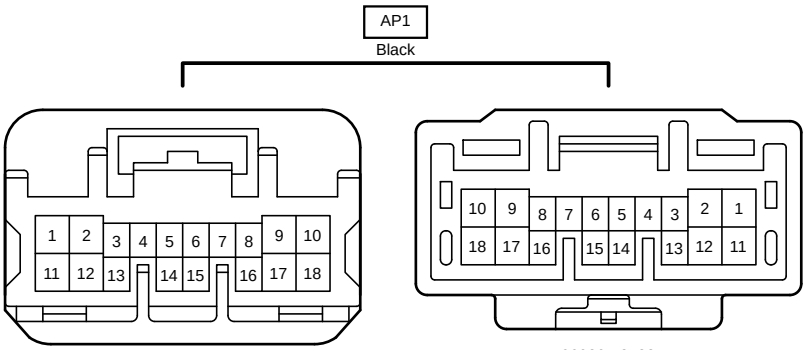

90980-12739

90980-12738

IP2
Blue

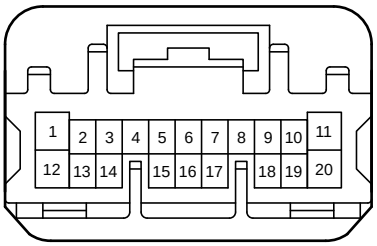

90980-12741

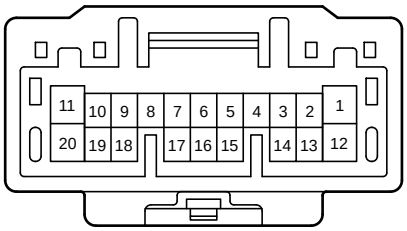

90980-12740

IP6
Gray

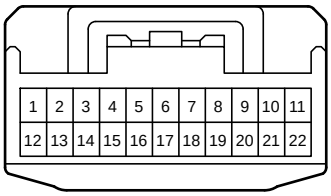

90980-12372

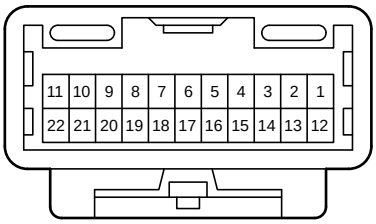

90980-12371

IQ4
Gray

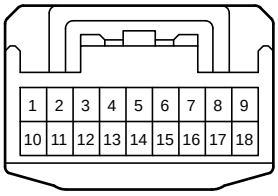

90980-12412

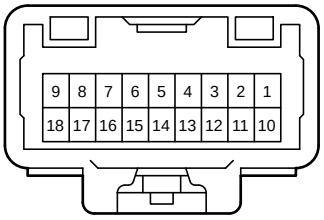

90980-12411

LI1
White

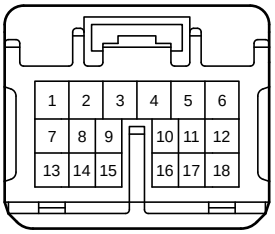

90980-12745

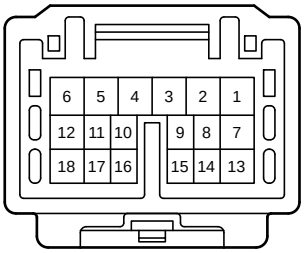

90980-12744

LI4
Black

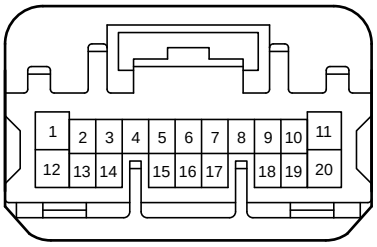

90980-12741

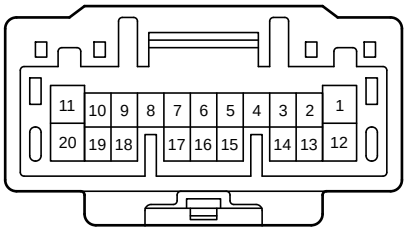

90980-12740

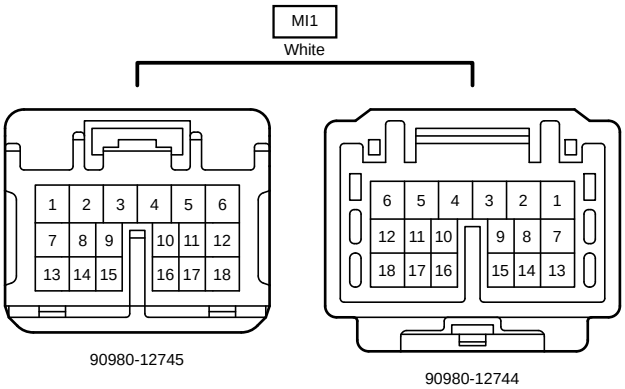
MI1
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13
90980-12745
90980-12744

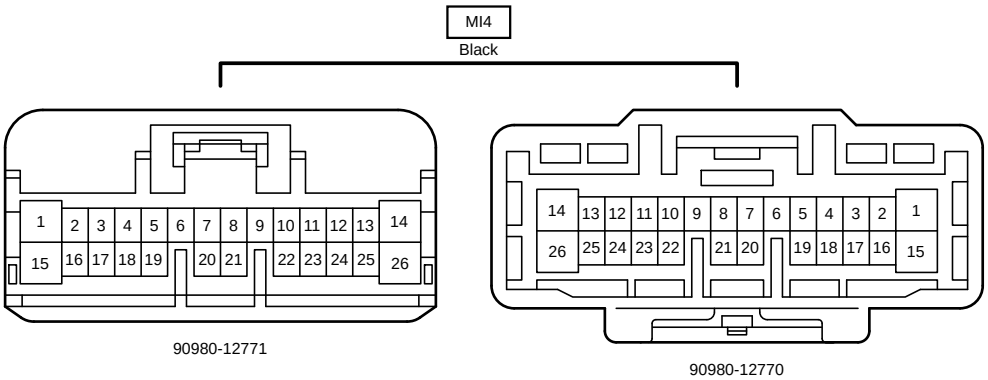
MI4
Black
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15
90980-12771
90980-12770

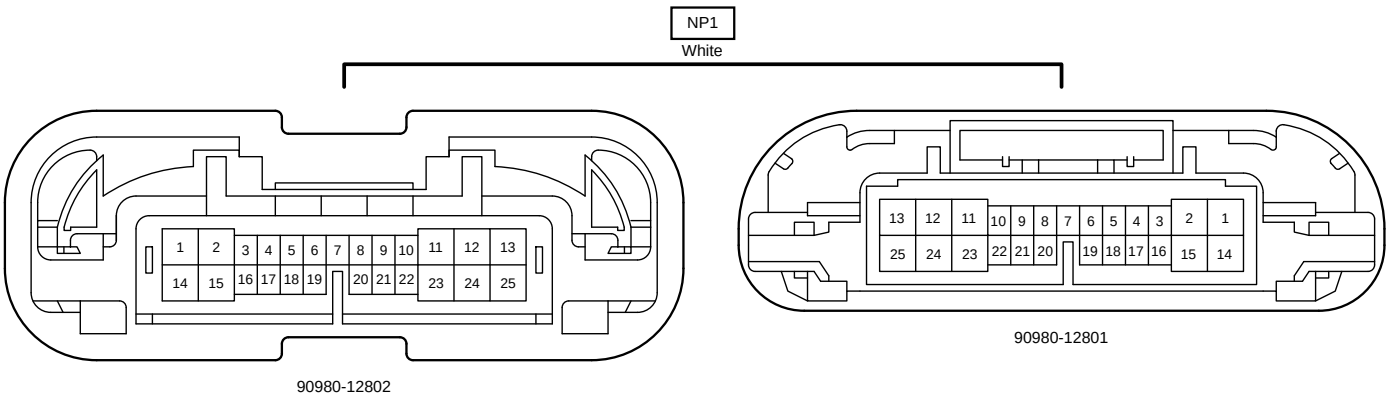
NP1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25
13 12 11 10 9 8 7 6 5 4 3 2 1
25 24 23 22 21 20 19 18 17 16 15 14
90980-12801
90980-12802

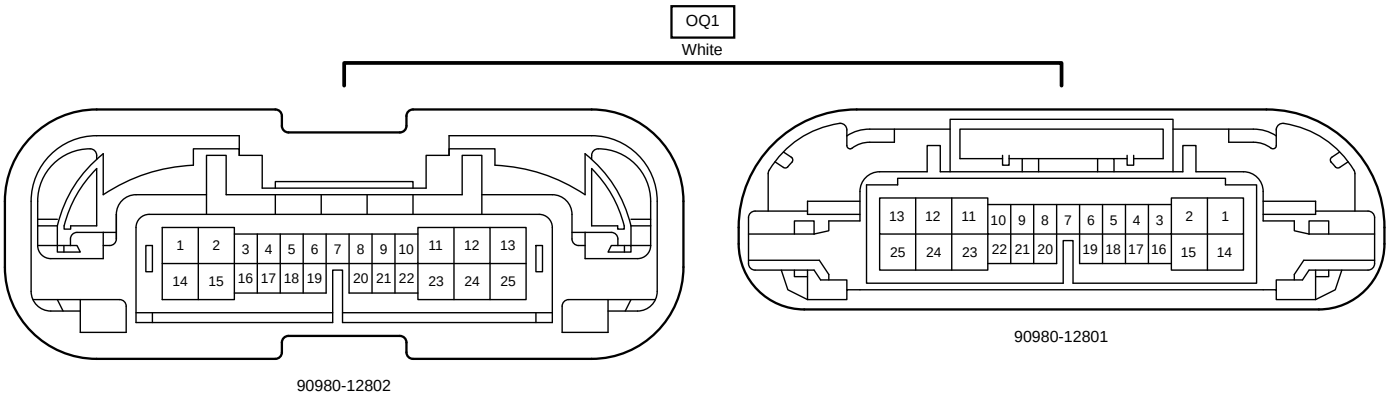
OQ1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25
13 12 11 10 9 8 7 6 5 4 3 2 1
25 24 23 22 21 20 19 18 17 16 15 14
90980-12801
90980-12802