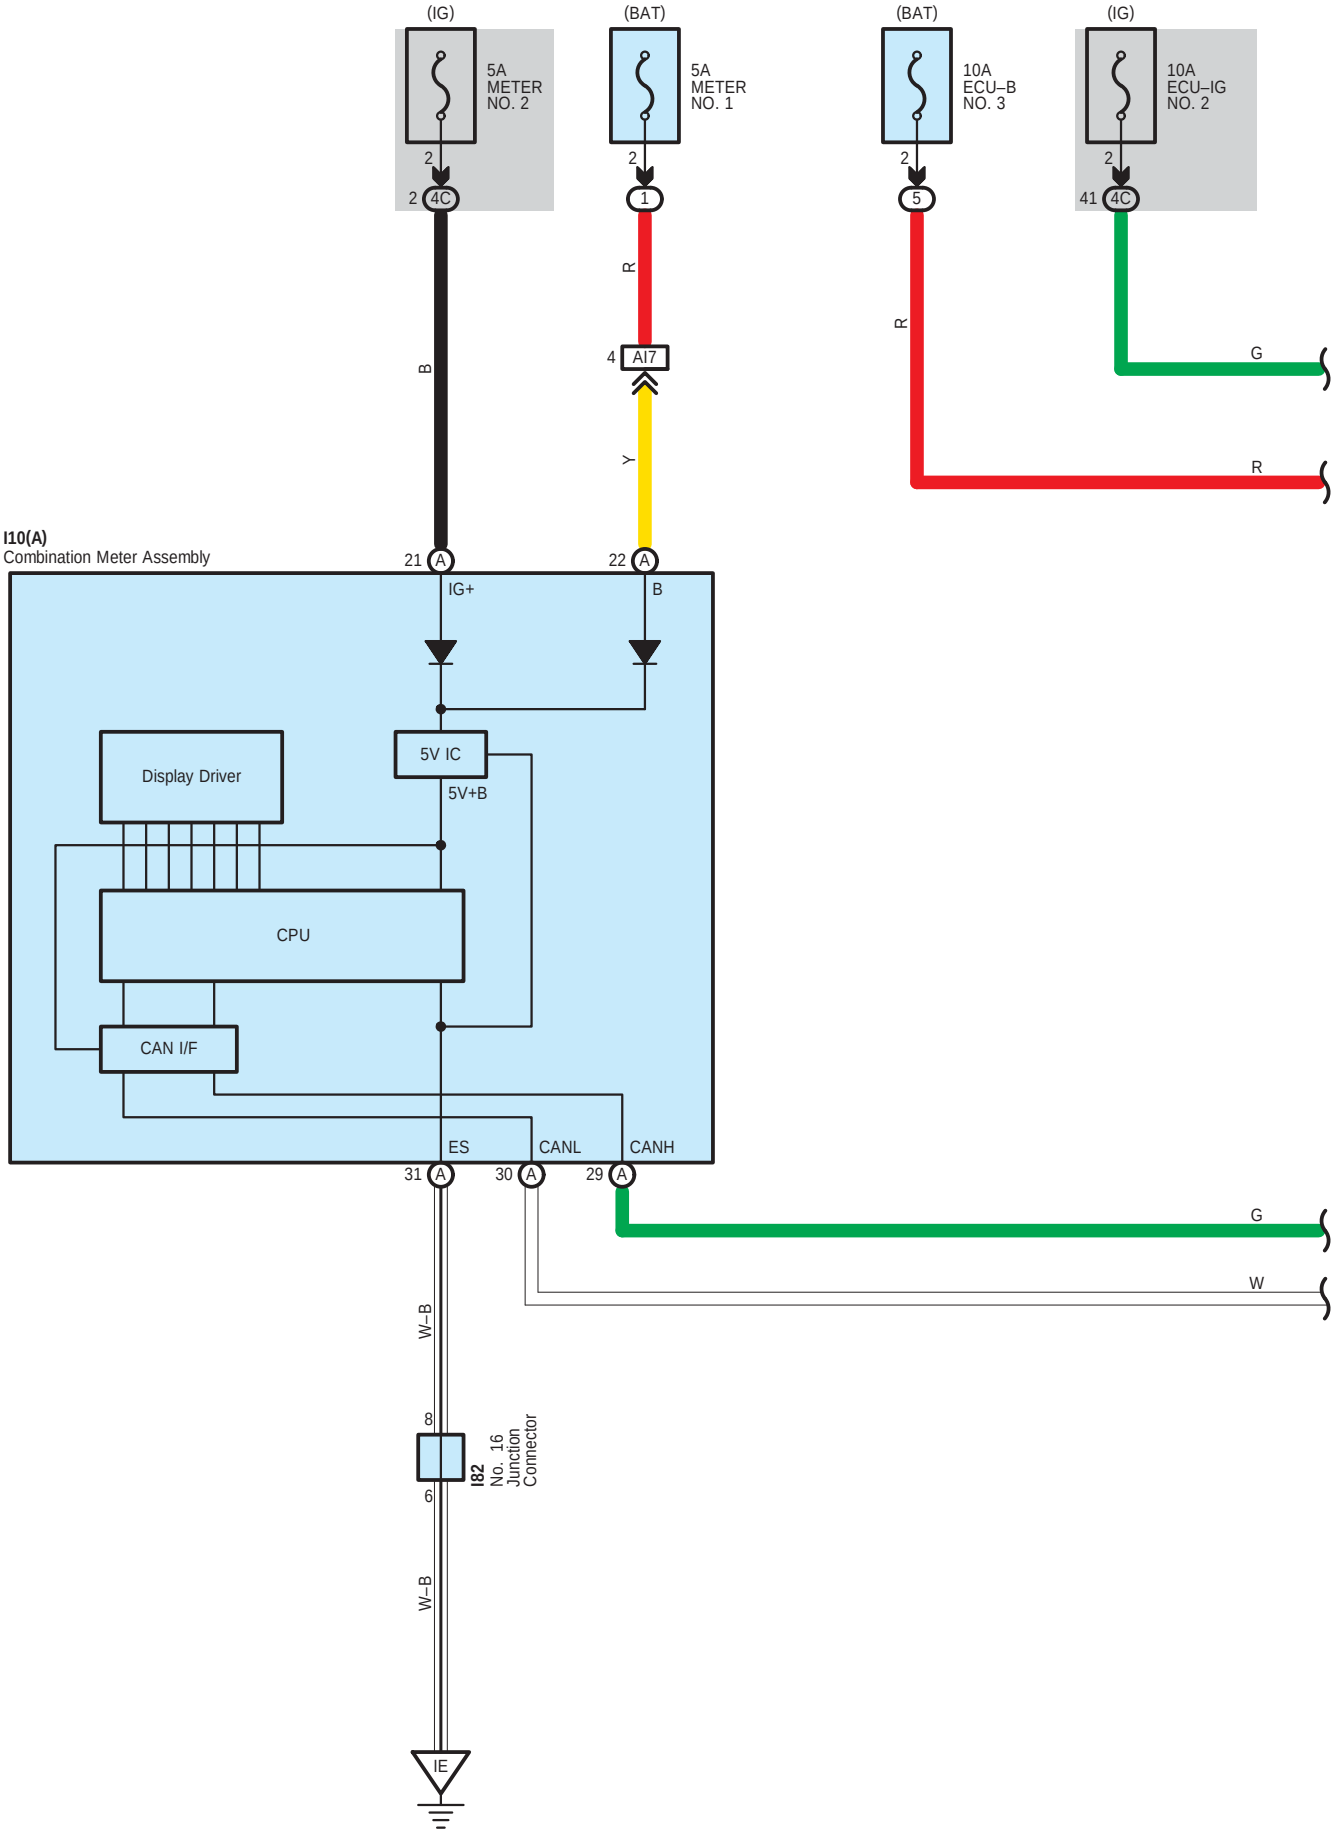
(IG)
5A
METER
NO. 2
2
2 4C
(BAT)
5A
METER
NO. 1
2
1
R
4 AI7
Y
(BAT)
10A
ECU–B
NO. 3
2
5
R
(IG)
10A
ECU–IG
NO. 2
2
41 4C
G
R
B
I10(A)
Combination Meter Assembly
21 A
22 A
IG+
B
5V IC
5V+B
Display Driver
CPU
CAN I/F
ES
CANL
CANH
31 A
30 A
29 A
G
W
W–B
8
I82
No. 16
Junction
Connector
6
W–B
IE

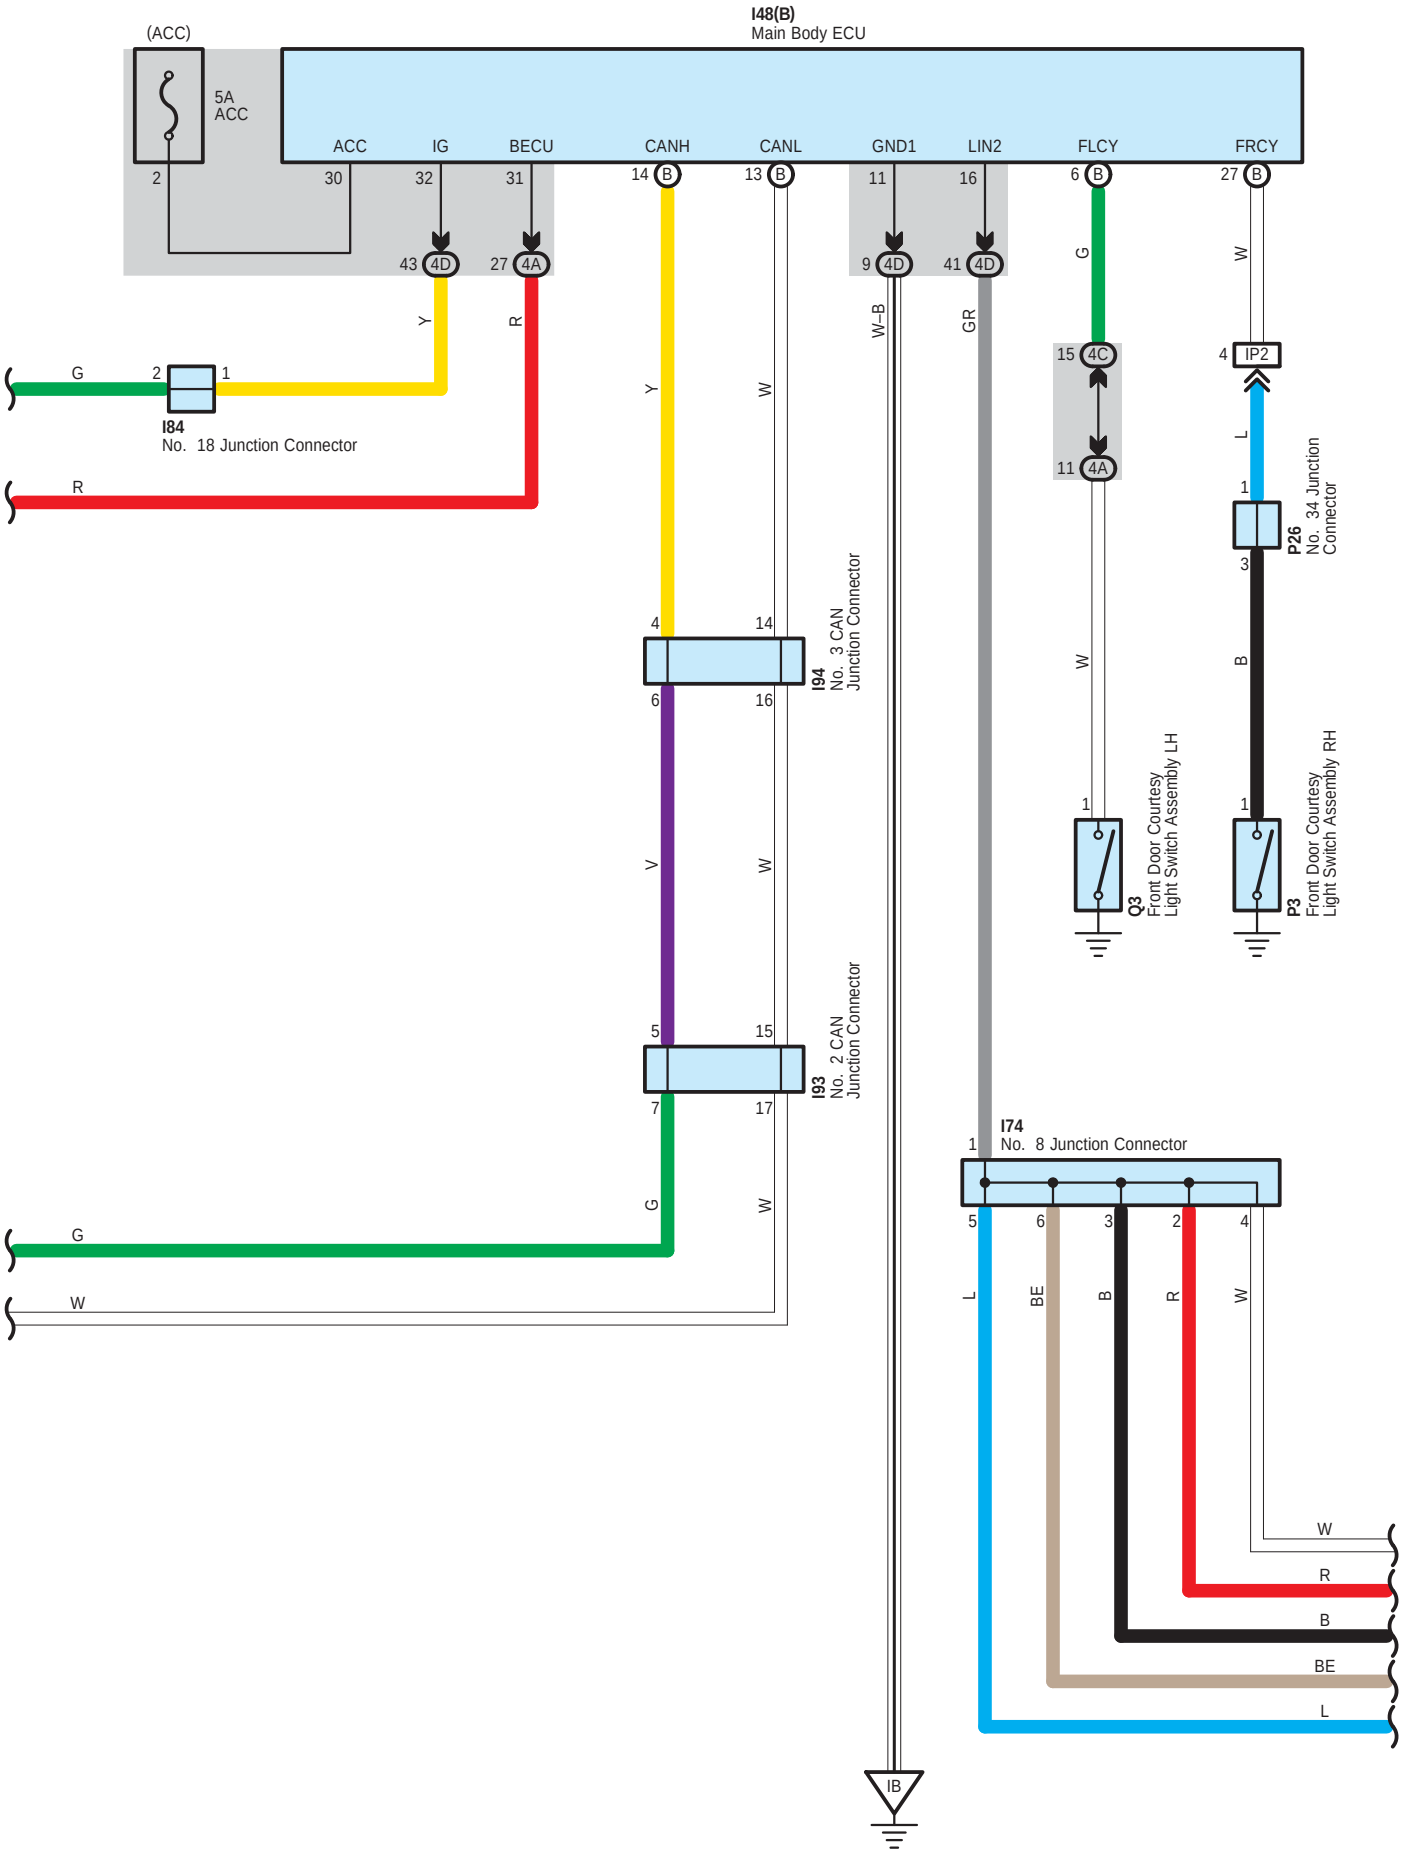
I48(B)
Main Body ECU
(ACC)
5A
ACC
ACC
IG
BECU
CANH
CANL
GND1
LIN2
FLCY
FRCY
I84
No. 18 Junction Connector
I94
No. 3 CAN
Junction Connector
I93
No. 2 CAN
Junction Connector
I74
No. 8 Junction Connector
Q3
Front Door Courtesy
Light Switch Assembly LH
P26
No. 34 Junction
Connector
P3
Front Door Courtesy
Light Switch Assembly RH
IP2
IB

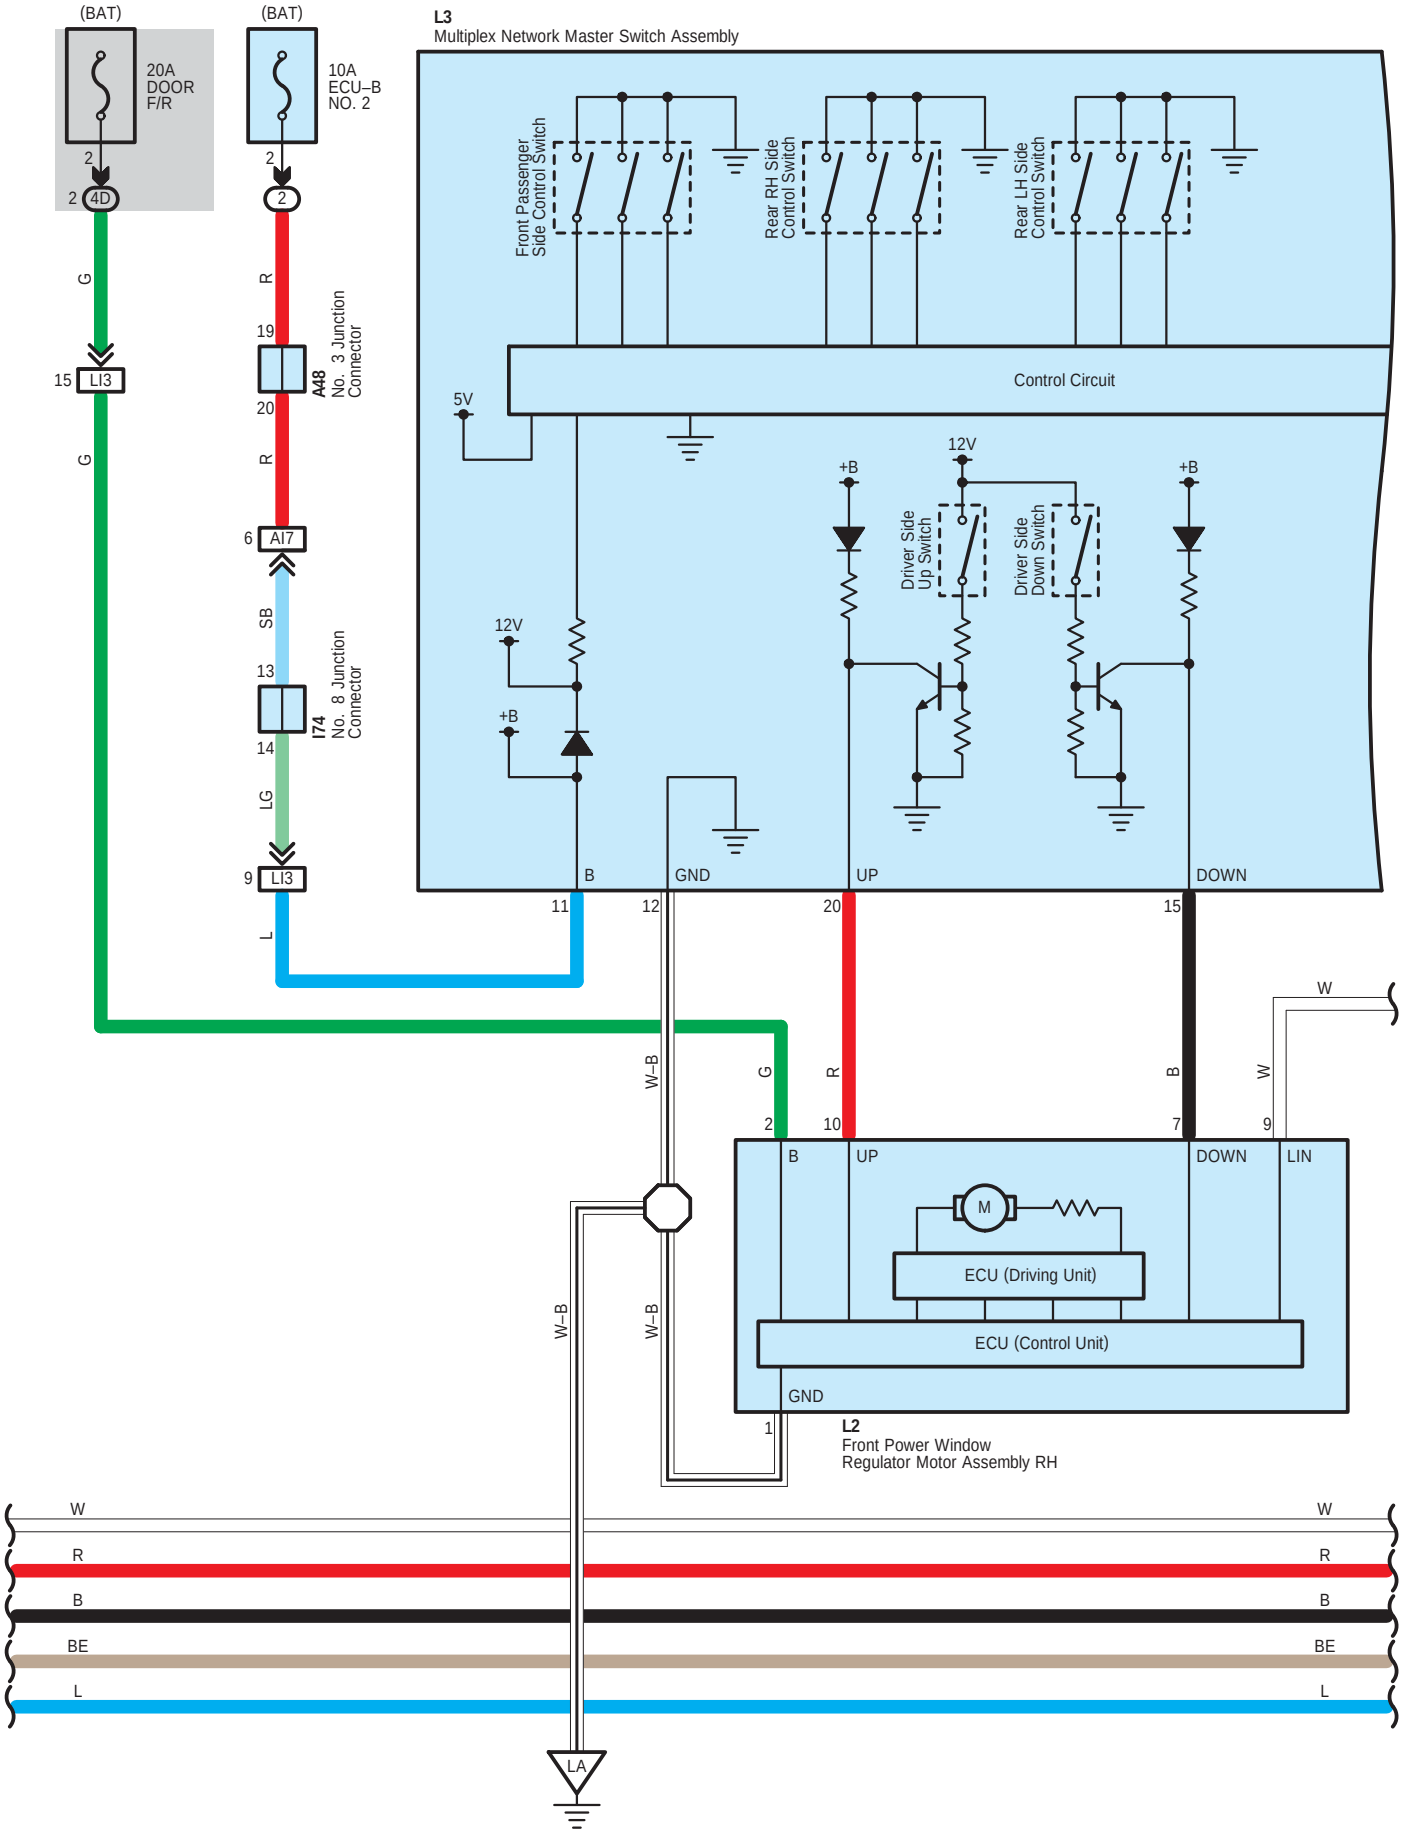
(BAT)
20A
DOOR
F/R
2
2 4D
G
15 LI3
G
(BAT)
10A
ECU–B
NO. 2
2
2
R
19
A48
No. 3 Junction
Connector
20
R
6 AI7
SB
13
I74
No. 8 Junction
Connector
14
LG
9 LI3
L
L3
Multiplex Network Master Switch Assembly
Front Passenger
Side Control Switch
Rear RH Side
Control Switch
Rear LH Side
Control Switch
Control Circuit
5V
12V
+B
12V
+B
+B
Driver Side
Up Switch
Driver Side
Down Switch
B
GND
UP
DOWN
11
12
20
15
W
W–B
G
R
B
W
2
10
7
9
B
UP
DOWN
LIN
M
ECU (Driving Unit)
ECU (Control Unit)
GND
1
L2
Front Power Window
Regulator Motor Assembly RH
W–B
W–B
W
R
B
BE
L
W
R
B
BE
L
LA

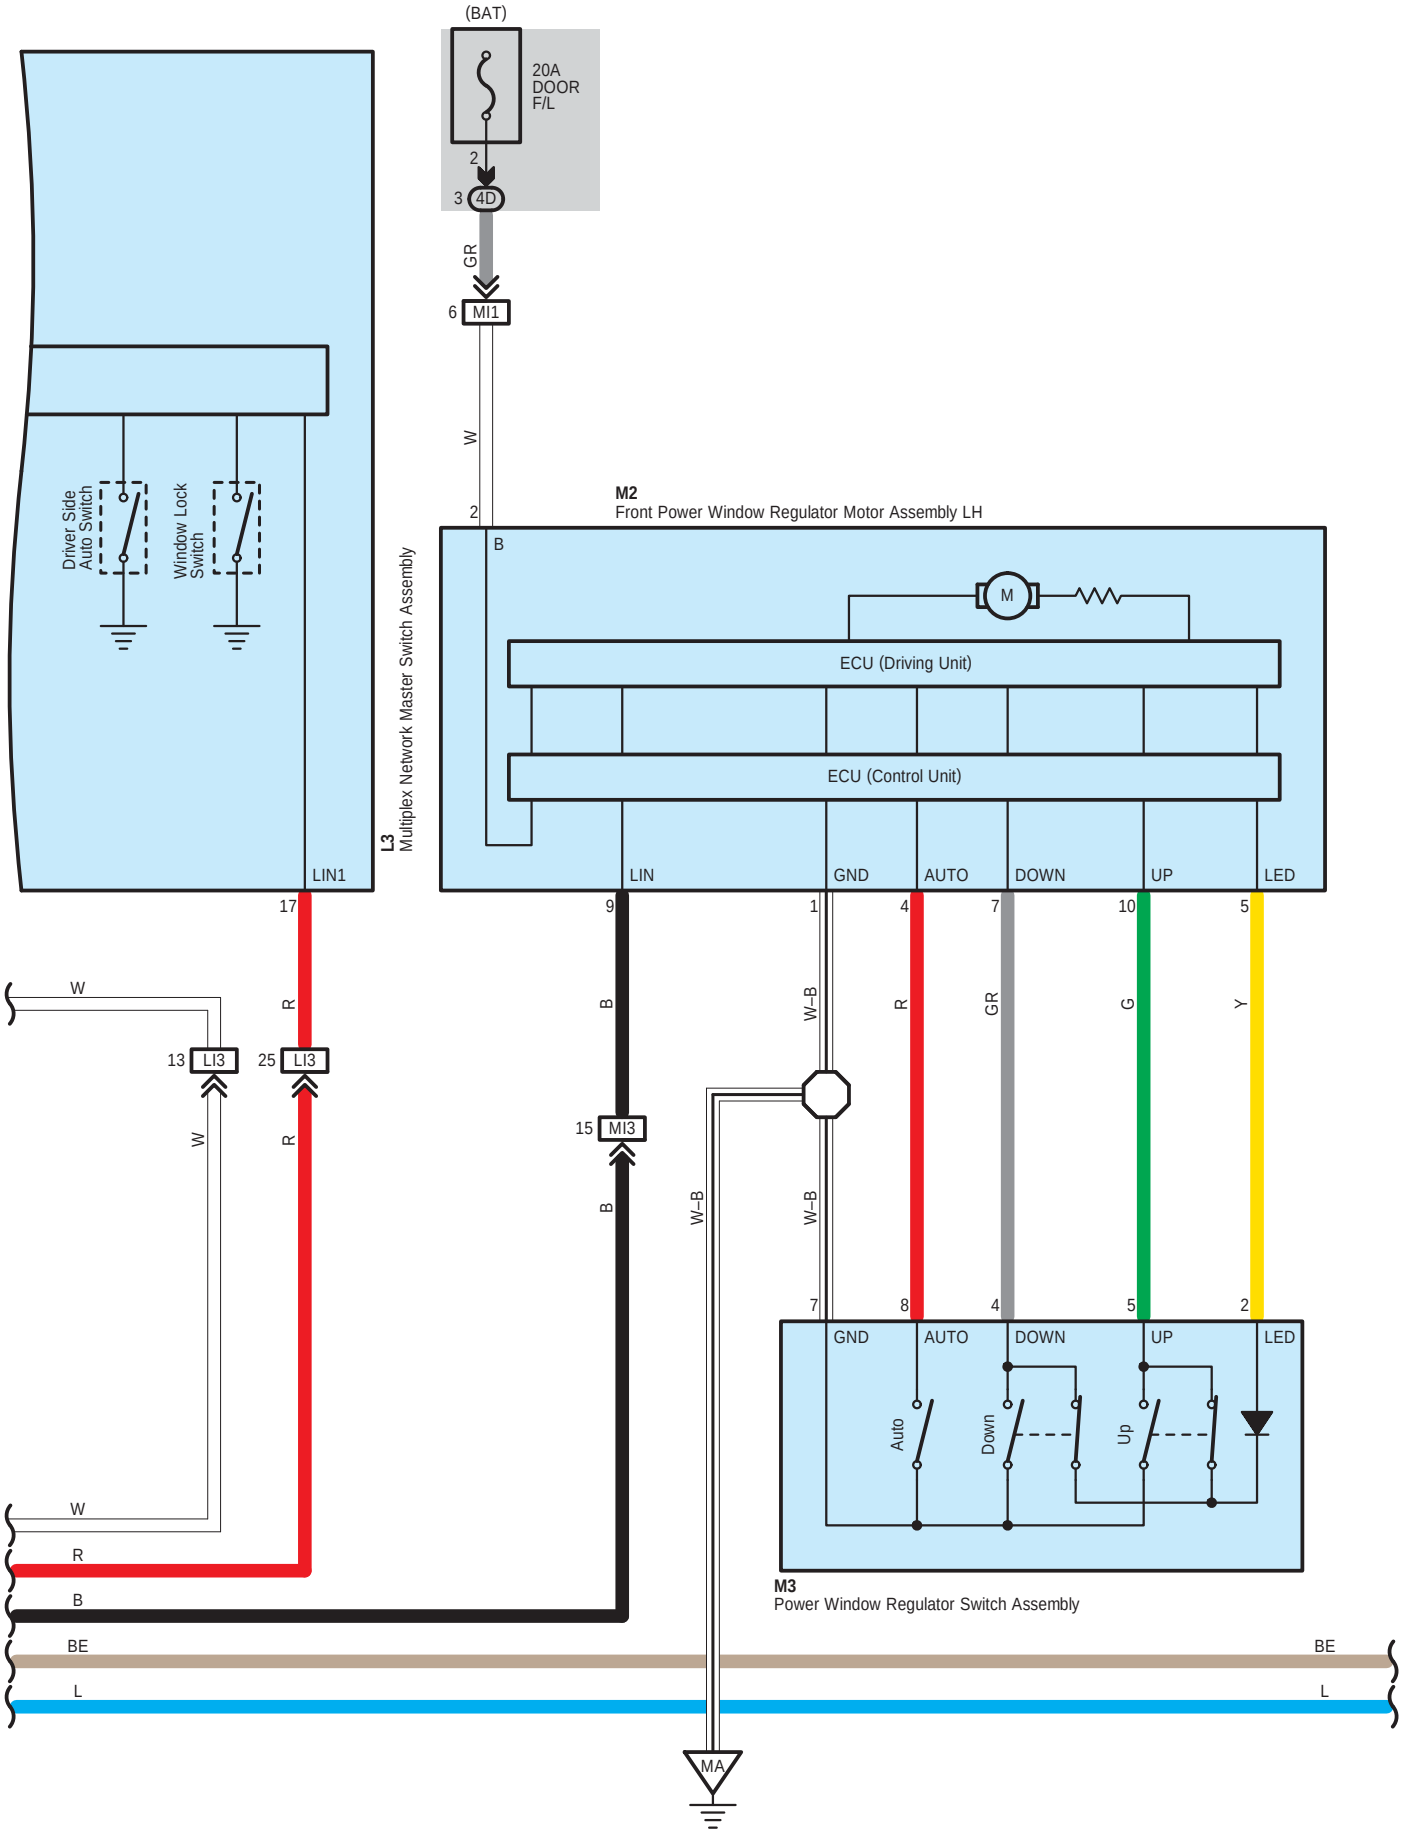
(BAT)
20A
DOOR
F/L
2
3
4D
GR
6
MI1
W
2
M2
Front Power Window Regulator Motor Assembly LH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
Driver Side
Auto Switch
Window Lock
Switch
L3
Multiplex Network Master Switch Assembly
LIN1
17
9
1
4
7
10
5
W
R
B
W–B
R
GR
G
Y
13
LI3
25
LI3
15
MI3
W
R
B
W–B
W–B
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
M3
Power Window Regulator Switch Assembly
W
R
B
BE
L
BE
L
MA

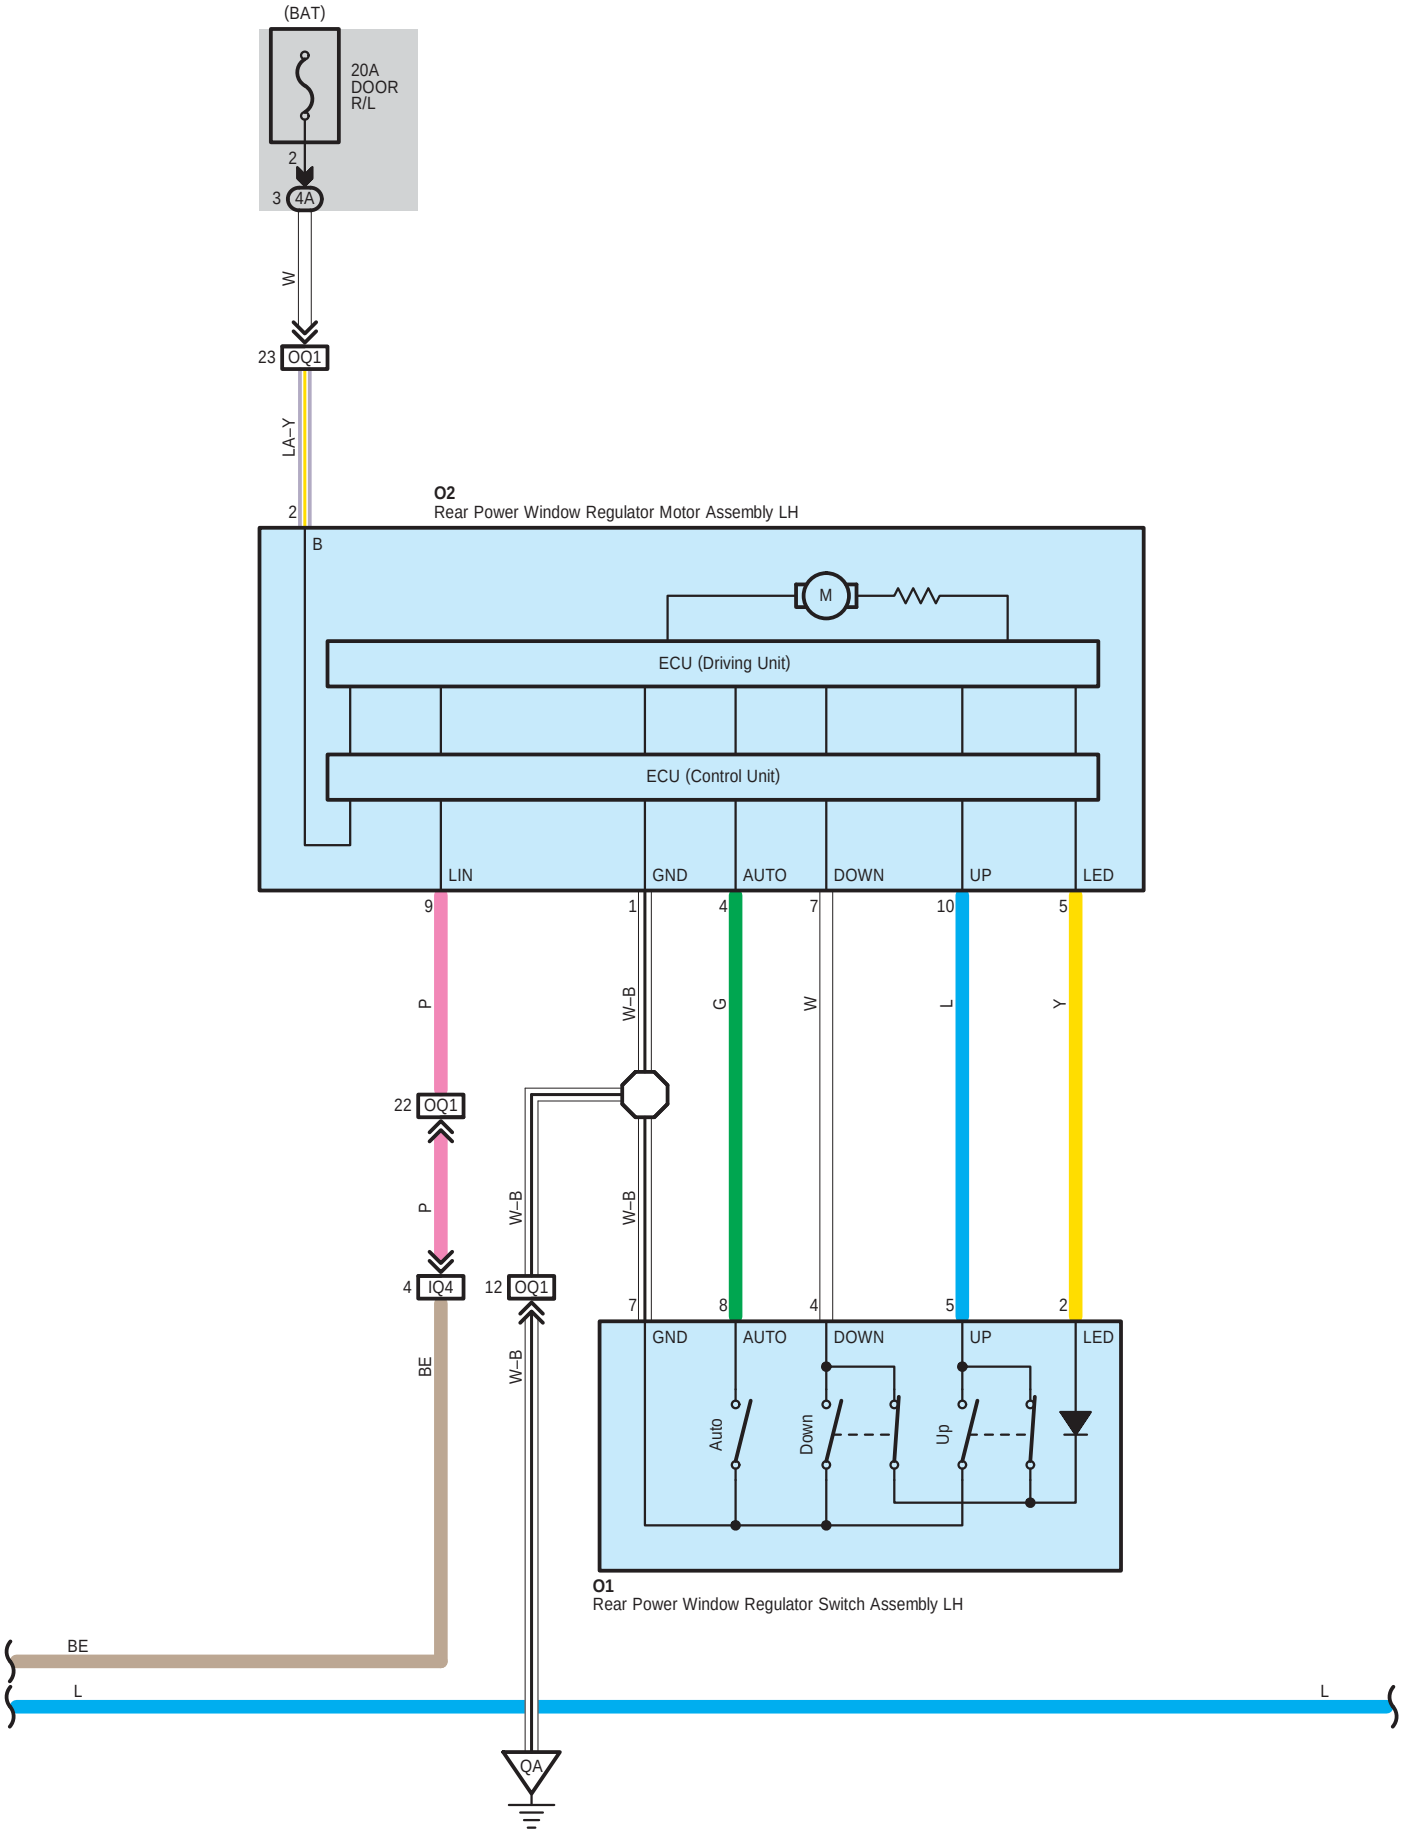
(BAT)
20A
DOOR
R/L
2
3
4A
W
23
OQ1
LA–Y
2
O2
Rear Power Window Regulator Motor Assembly LH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
P
W–B
G
W
L
Y
22
OQ1
P
W–B
W–B
4
IQ4
12
OQ1
7
8
4
5
2
BE
W–B
GND
AUTO
DOWN
UP
LED
Auto
Down
Up
O1
Rear Power Window Regulator Switch Assembly LH
BE
L
L
QA

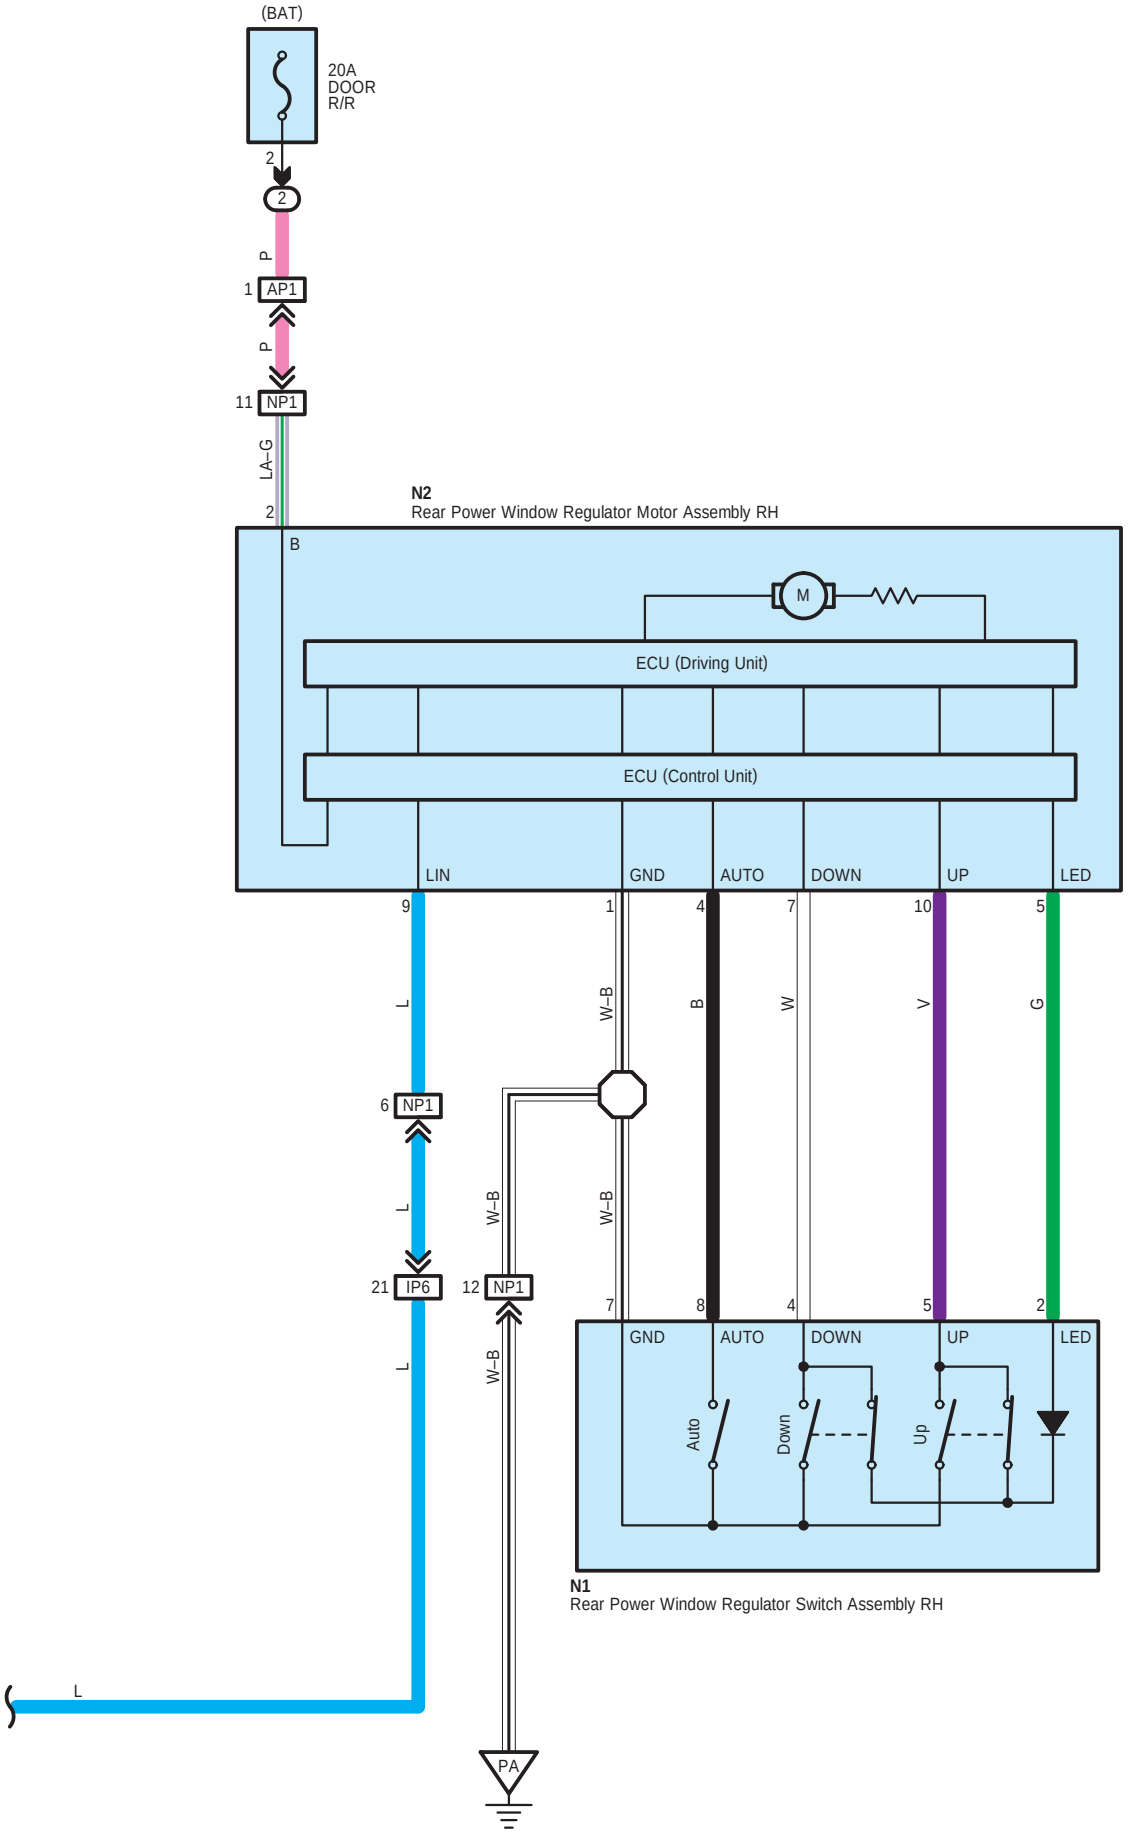
(BAT)
20A
DOOR
R/R
2
2
P
1 AP1
P
11 NP1
LA–G
2
N2
Rear Power Window Regulator Motor Assembly RH
B
M
ECU (Driving Unit)
ECU (Control Unit)
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
L
W–B
B
W
V
G
6 NP1
L
W–B
W–B
21 IP6
12 NP1
7
8
4
5
2
GND
AUTO
DOWN
UP
LED
L
W–B
Auto
Down
Up
N1
Rear Power Window Regulator Switch Assembly RH
L
PA

A48
Blue

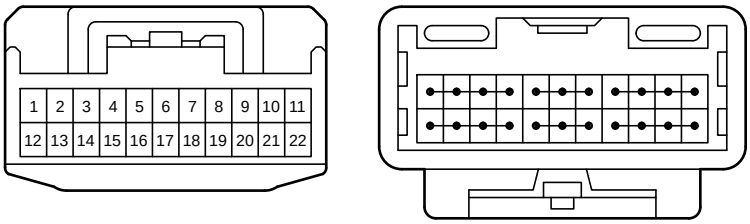

90980-12372

I10
Black

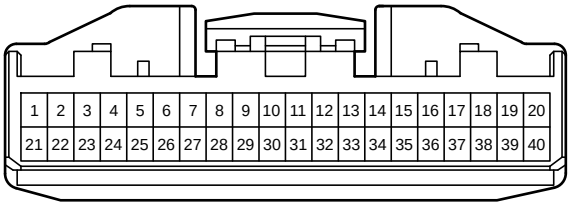

90980-12557

I48
White

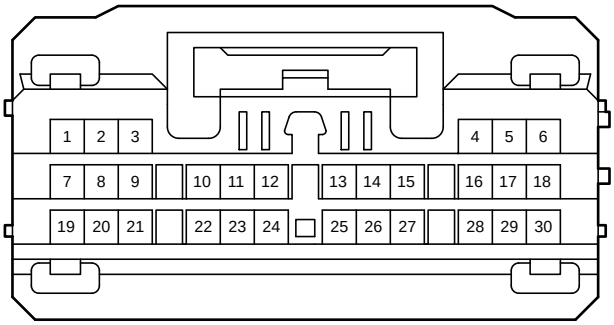

90980-12909

I74
Black

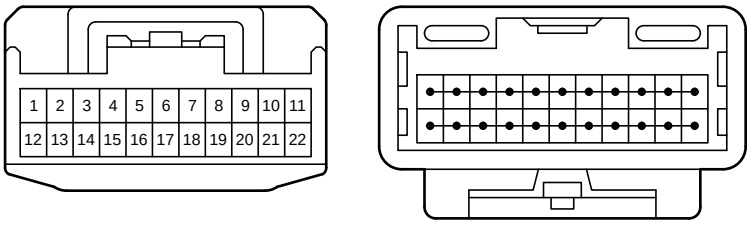

90980-12372
(LHD, RHD Before Sep. 2017 Production)

I74
White

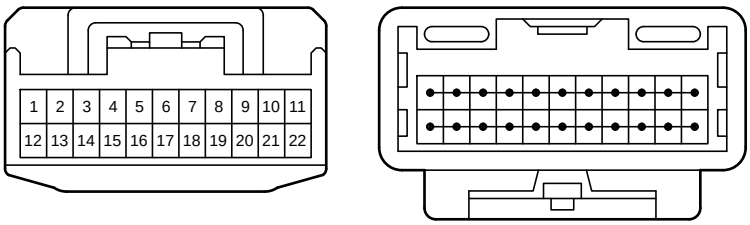

90980-12372
(RHD From Sep. 2017 Production)

I82
Blue

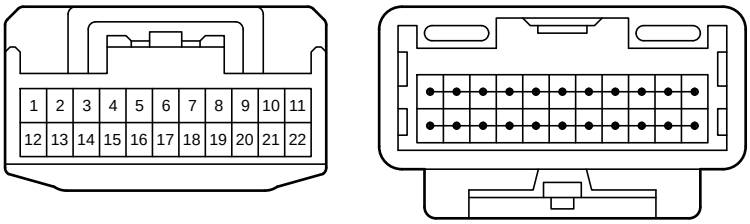

90980-12372
(LHD)

I82
White

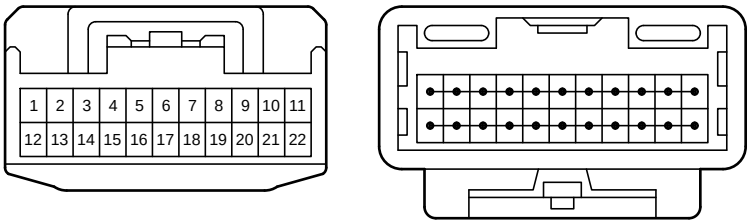

90980-12372
(RHD)

I84
Black

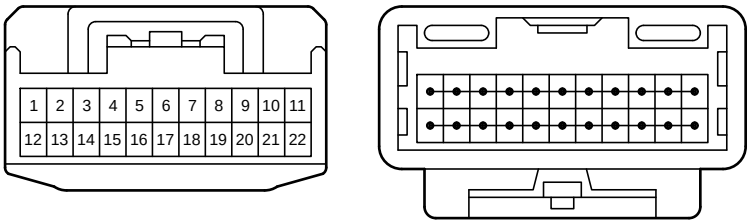

90980-12372
(LHD)

I84
Gray

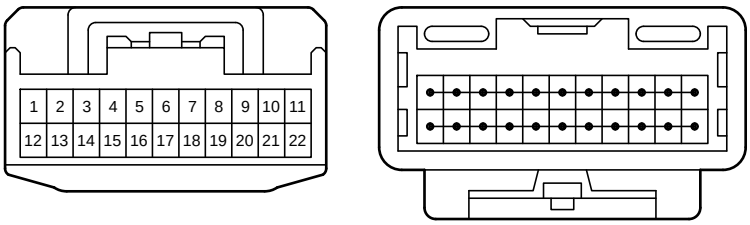

90980-12372
(RHD)

I93
White

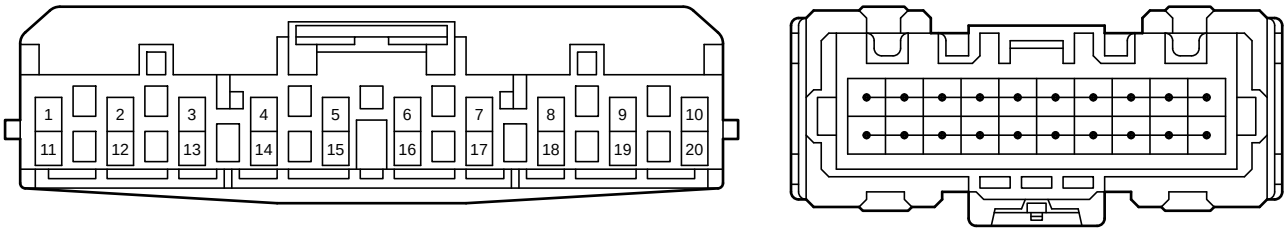

90980-12A58

I94
White

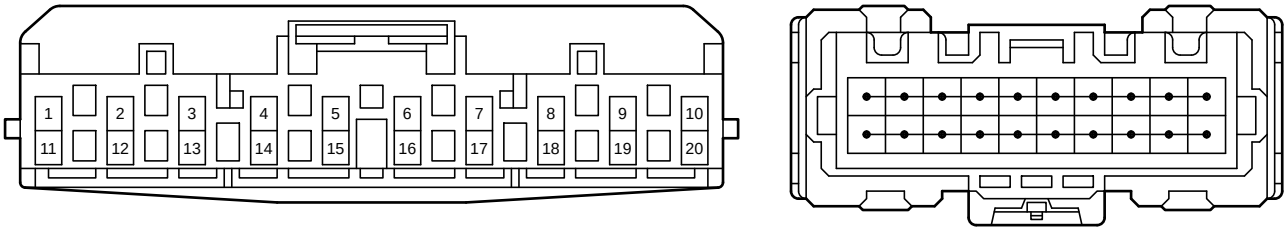

90980-12A58

L2
White

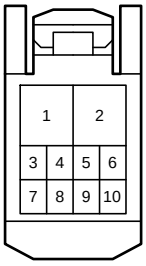

90980-12328

L3
White

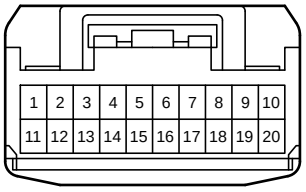

90980-12460

M2
White

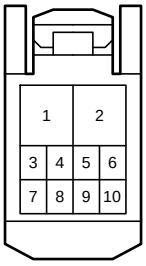

90980-12328

M3
Black

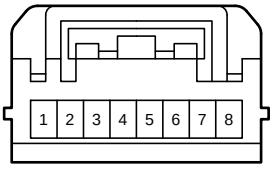

90980-12550

N1
Black

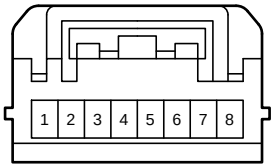

90980-12550

N2
White

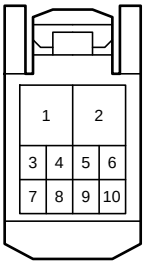

90980-12328

O1
Black

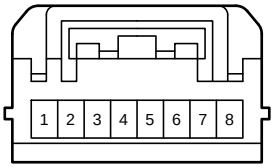

90980-12550

O2
White

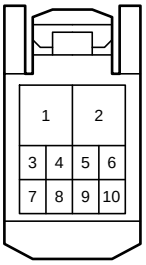

90980-12328

P3
Black

90980-10871

P26
White

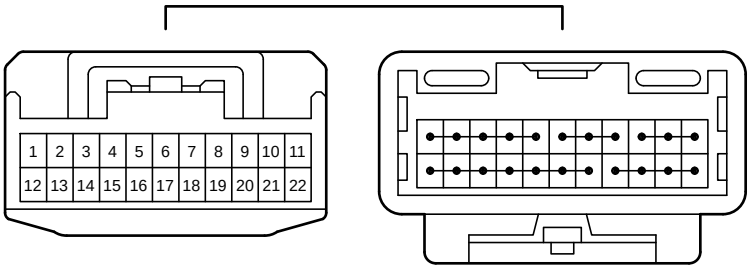

90980-12372

Q3
Black

90980-10871

4A
White

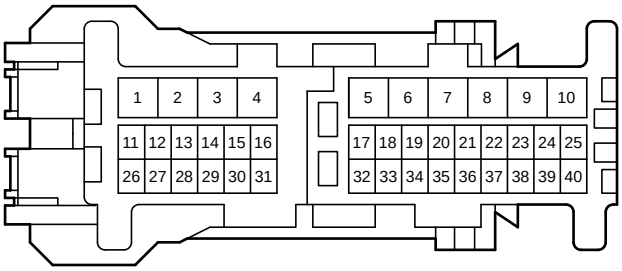

90980-12884

4C
White

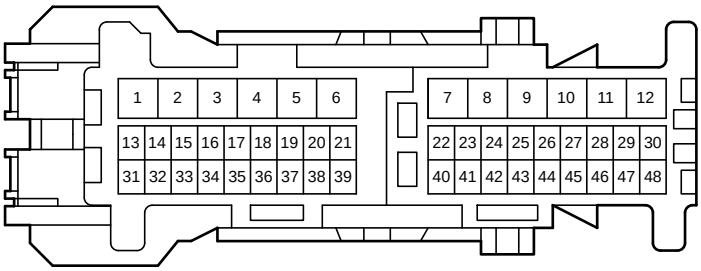

90980-12887

4D
White

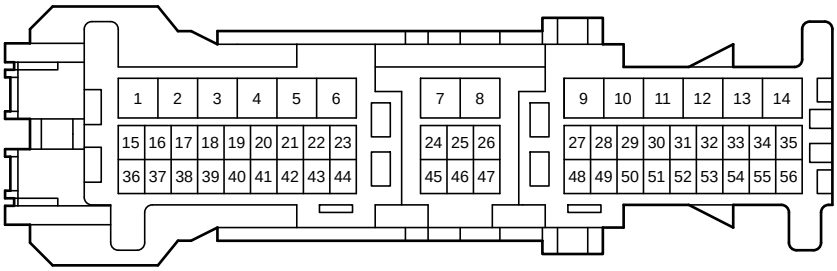

90980-12890

AI7
Gray

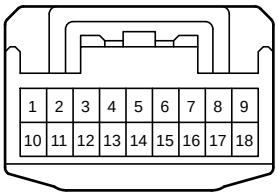

90980-12412

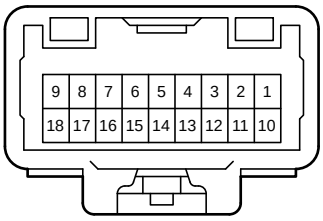

90980-12411

AP1
Black

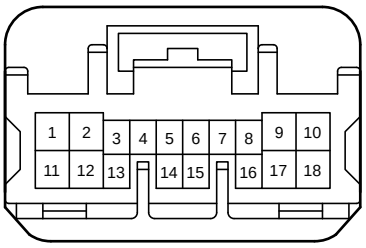

90980-12739

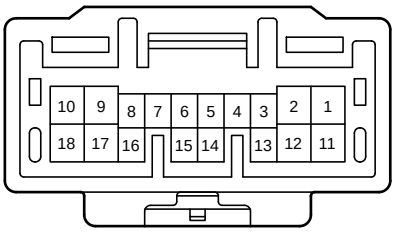

90980-12738

IP2
Blue

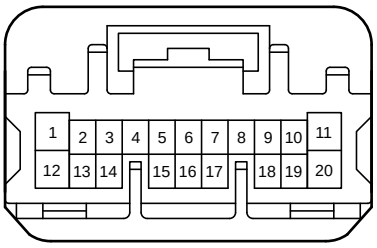

90980-12741

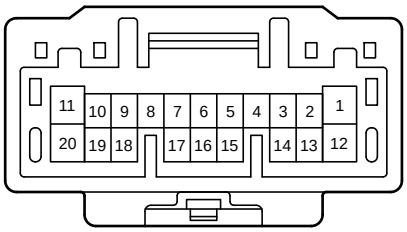

90980-12740

IP6
Gray

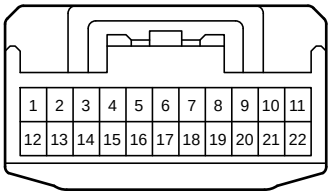

90980-12372

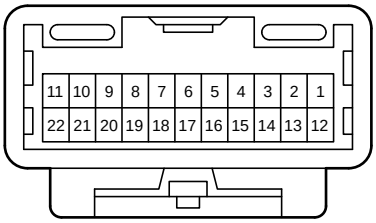

90980-12371

IQ4
Gray

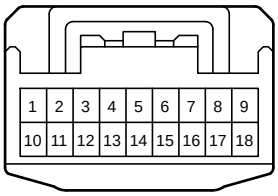

90980-12412

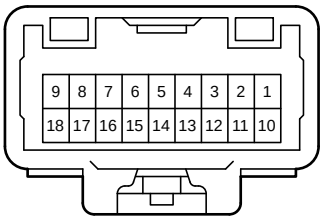

90980-12411

LI3
Black

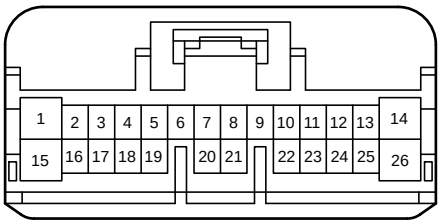

90980-12771

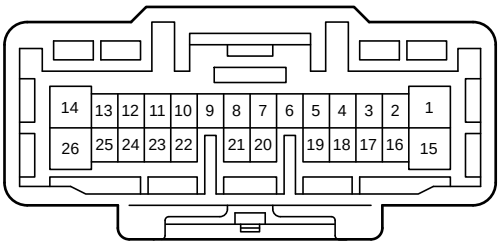

90980-12770

MI1
White

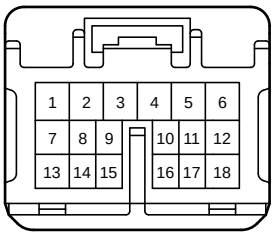

90980-12745

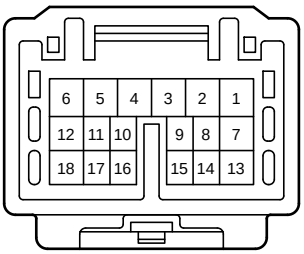

90980-12744

MI3
Black

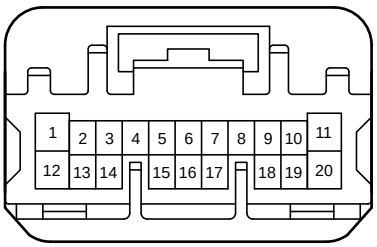

90980-12741

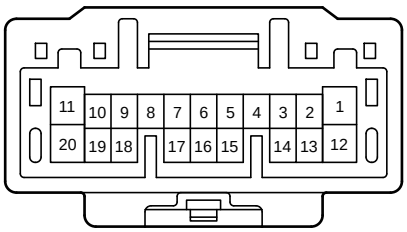

90980-12740

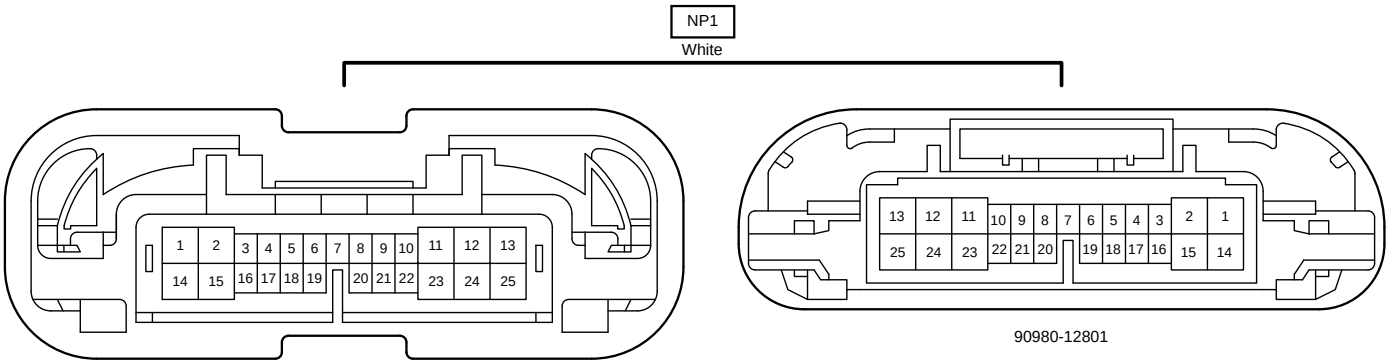

90980-12802

90980-12801

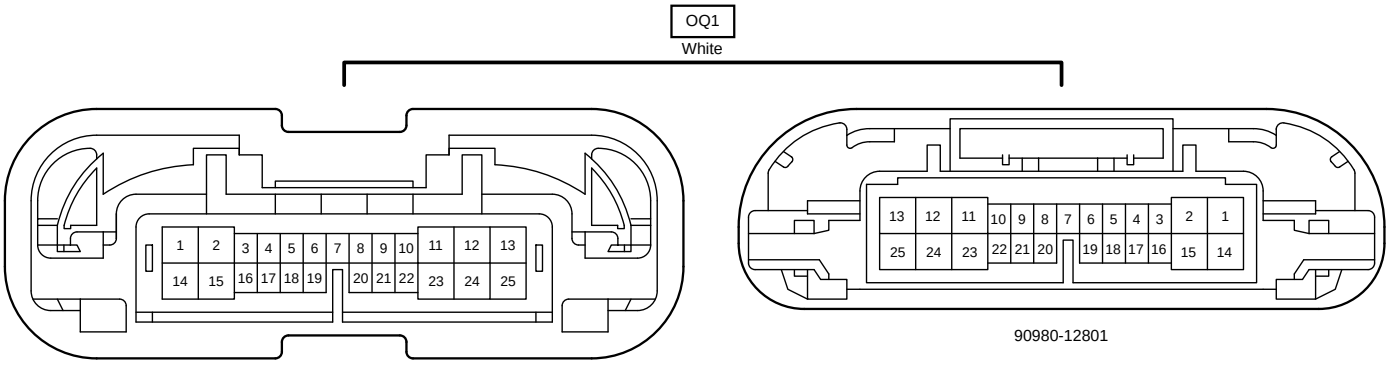

90980-12802

90980-12801