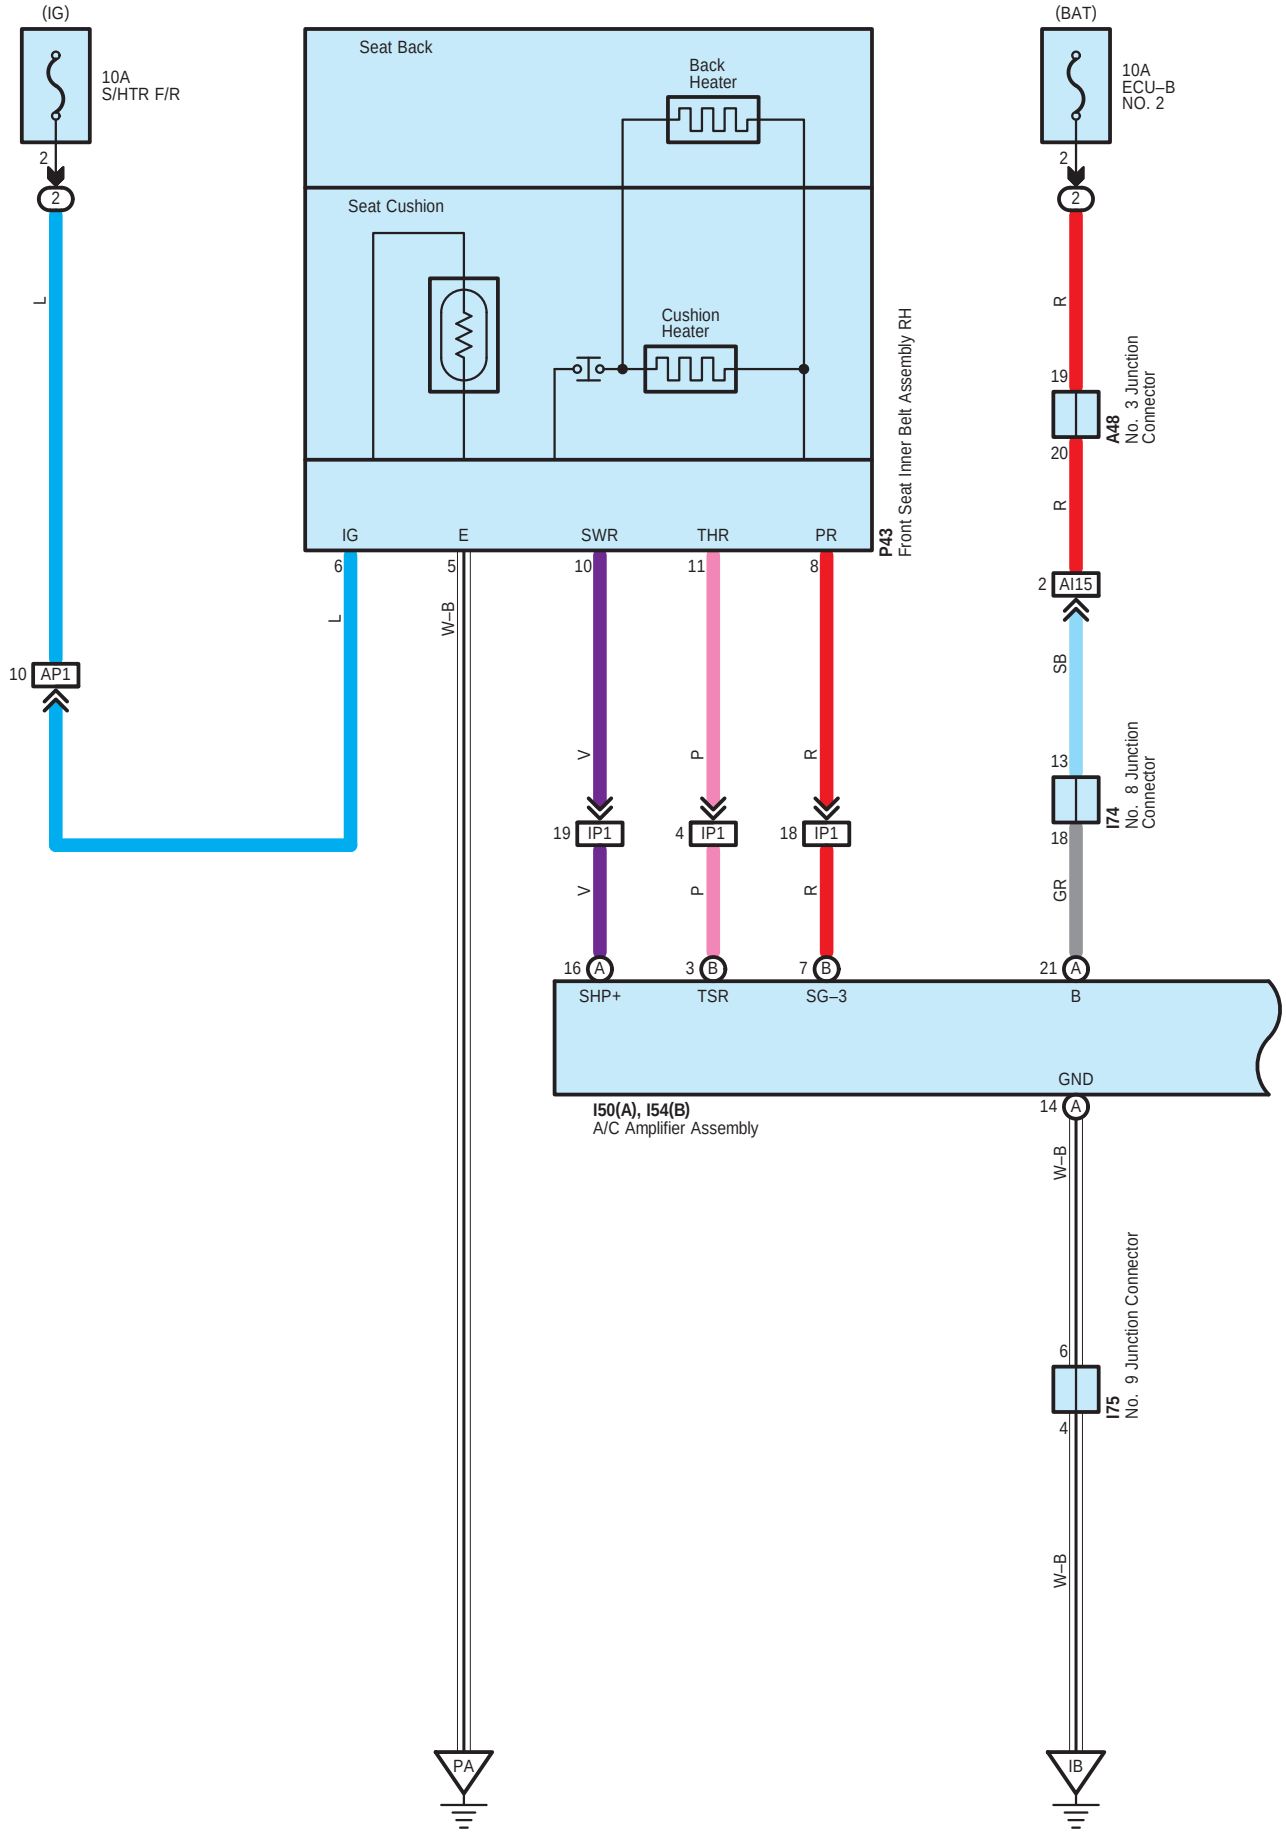
(IG)
10A
S/HTR F/R
2
2
L
10 AP1
Seat Back
Back
Heater
Seat Cushion
Cushion
Heater
IG
E
SWR
THR
PR
6
5
10
11
8
L
W–B
V
P
R
19 IP1
4 IP1
18 IP1
V
P
R
16 A
3 B
7 B
SHP+
TSR
SG–3
P43
Front Seat Inner Belt Assembly RH
(BAT)
10A
ECU–B
NO. 2
2
2
R
19
A48
No. 3 Junction
Connector
20
R
2 AI15
SB
13
I74
No. 8 Junction
Connector
18
GR
21 A
B
GND
14 A
I50(A), I54(B)
A/C Amplifier Assembly
W–B
6
I75
No. 9 Junction Connector
4
W–B
PA
IB

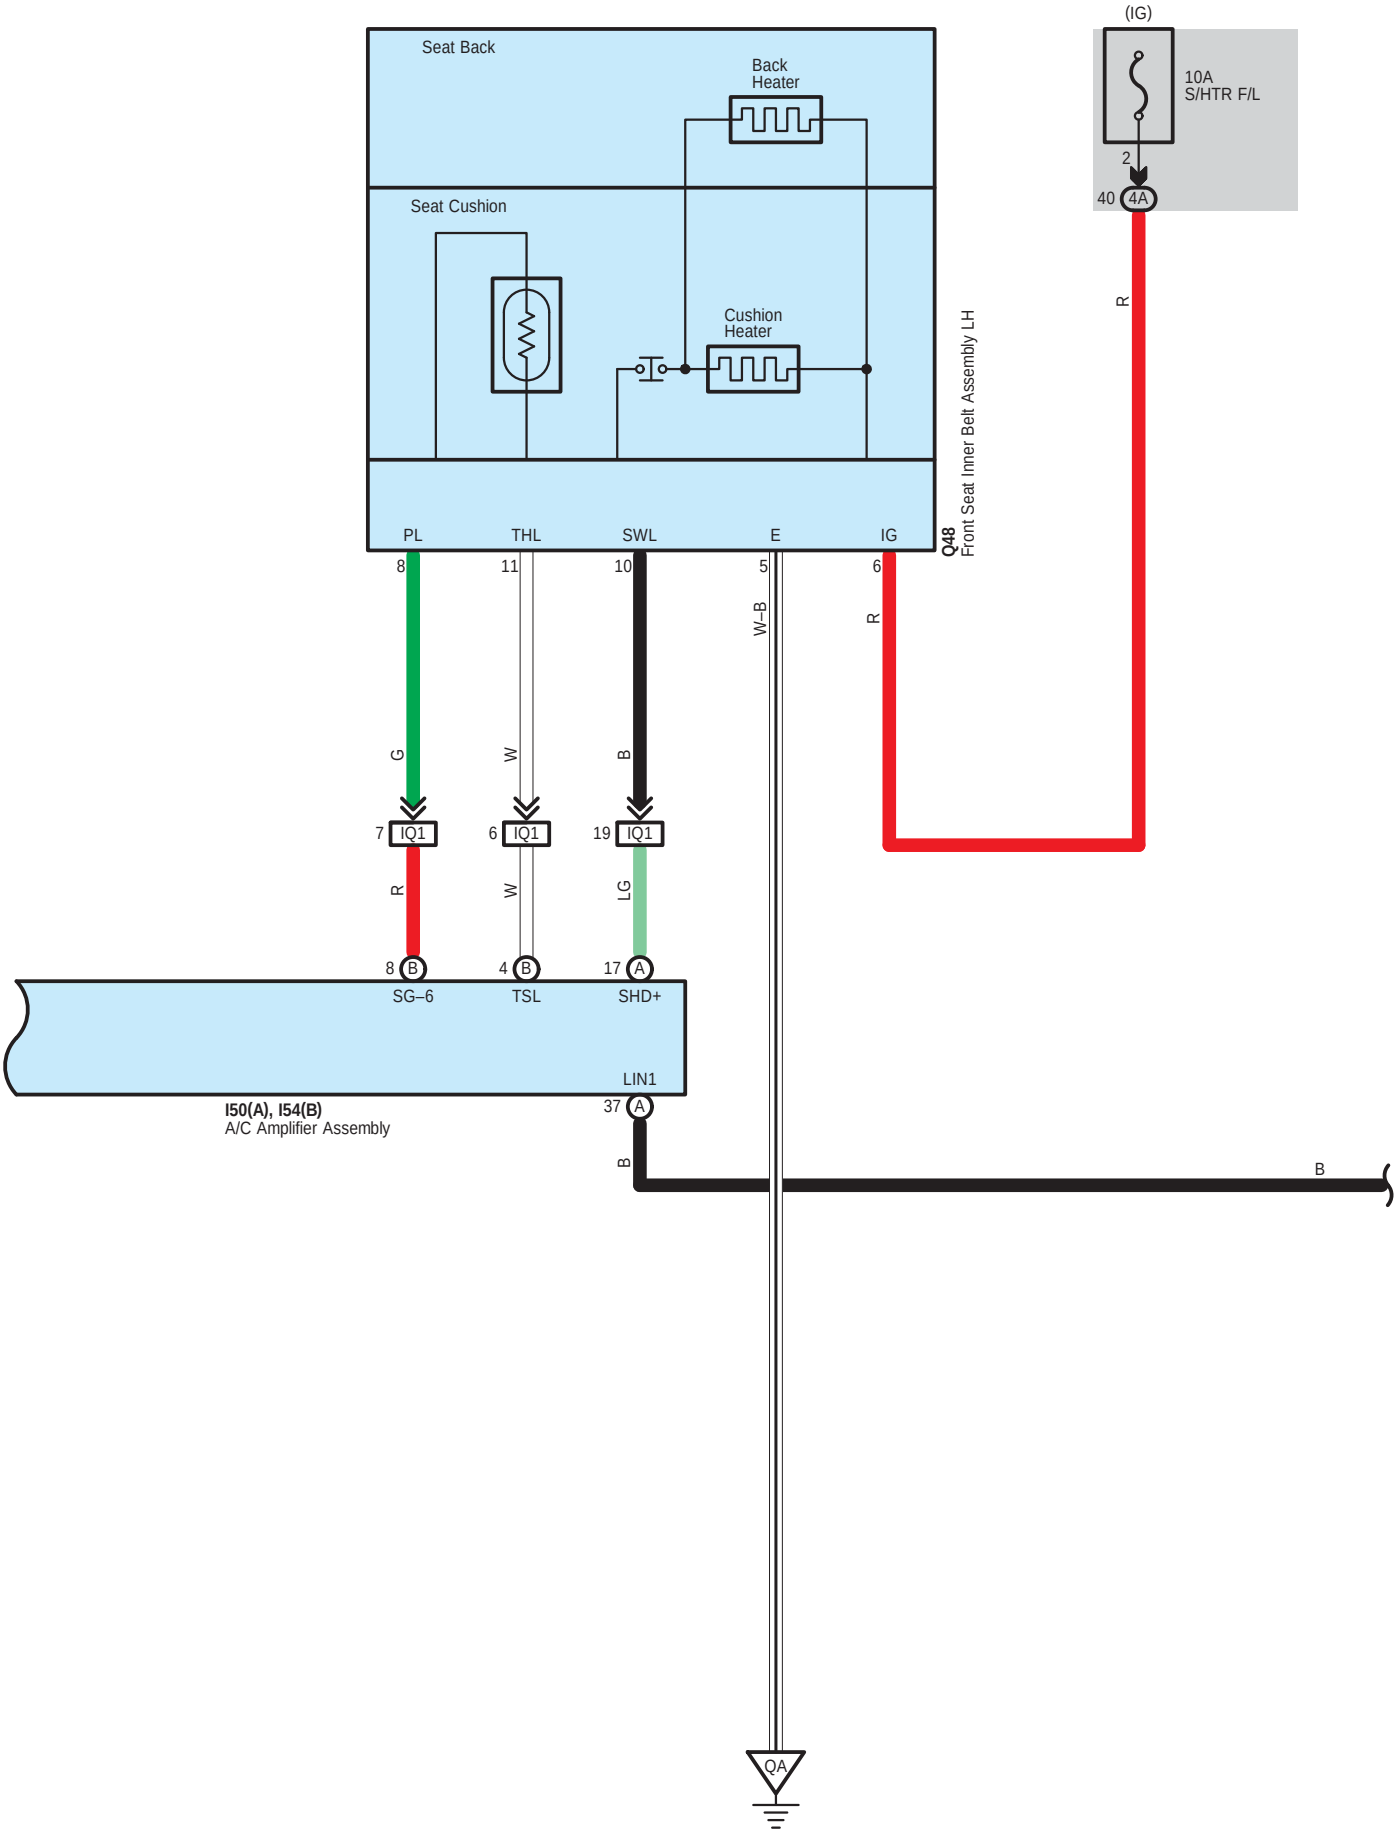
Seat Back
Back Heater
Seat Cushion
Cushion Heater
(IG)
10A S/HTR F/L
2
40 4A
R
Q48
Front Seat Inner Belt Assembly LH
PL
THL
SWL
E
IG
8
11
10
5
6
W–B
R
G
W
B
7 IQ1
6 IQ1
19 IQ1
R
W
LG
8 B
4 B
17 A
SG–6
TSL
SHD+
LIN1
37 A
I50(A), I54(B)
A/C Amplifier Assembly
B
B
QA

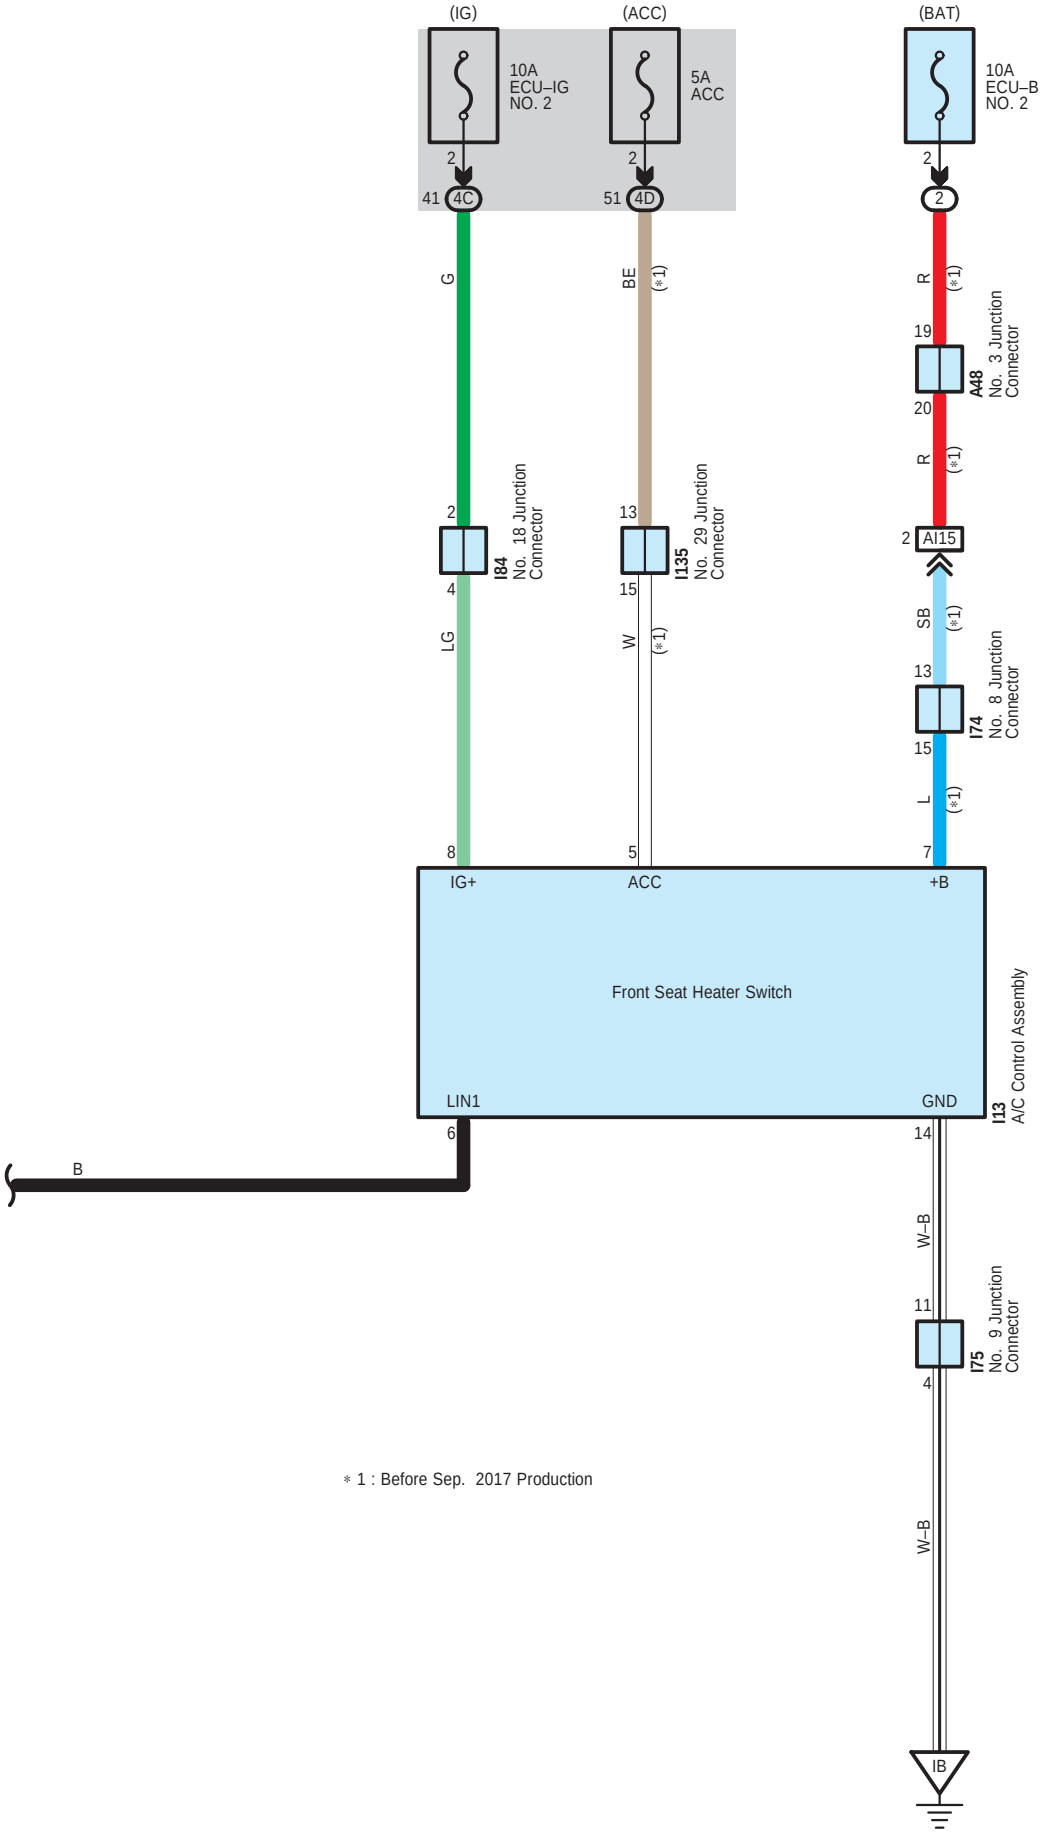

* 1 : Before Sep. 2017 Production

A48
Blue

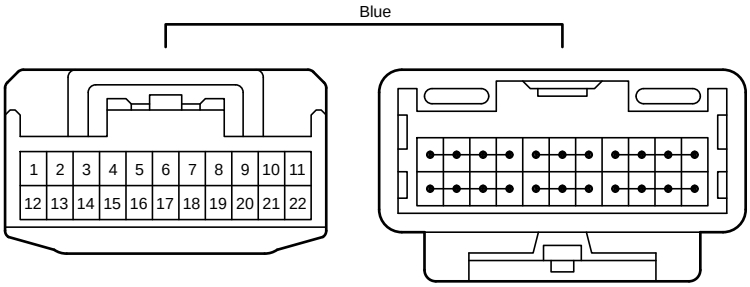

90980-12372

I13
Black

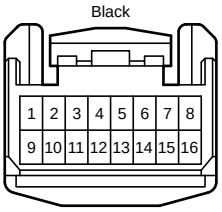

90980-12553

I50
White

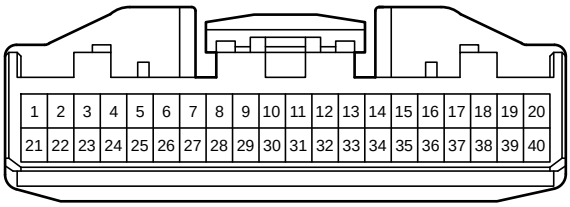

90980-12557

I54
White

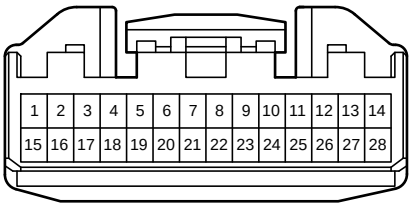

90980-12555

I74
Black

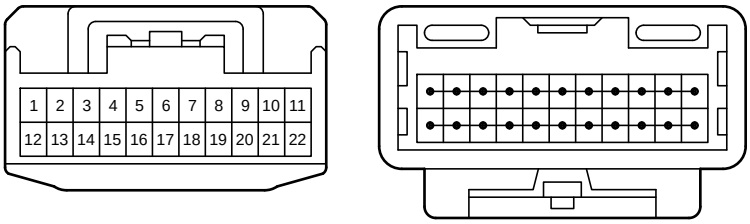

90980-12372
(LHD, RHD Before Sep. 2017 Production)

I74
White

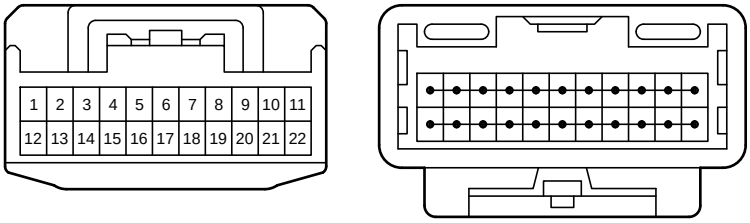

90980-12372
(RHD From Sep. 2017 Production)

I75

Gray

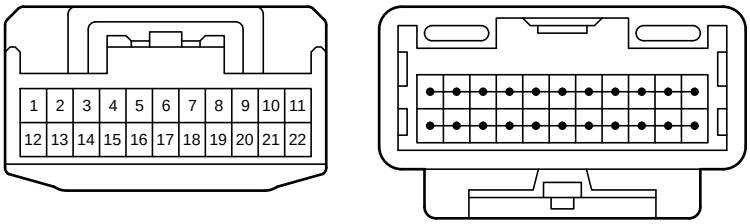

90980-12372
(LHD Before Sep. 2017 Production)

I75

White

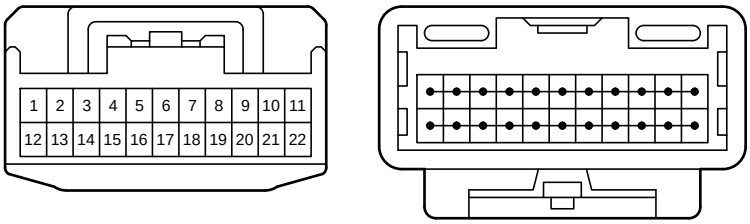

90980-12372
(LHD From Sep. 2017 Production)

I75

Blue

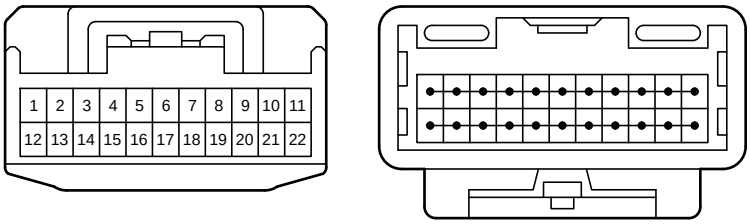

90980-12372
(RHD)

I84

Black

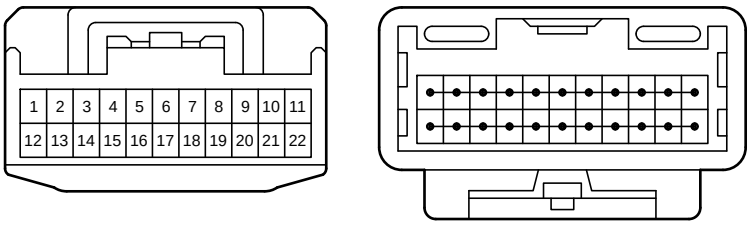

90980-12372
(LHD)

I84
Gray

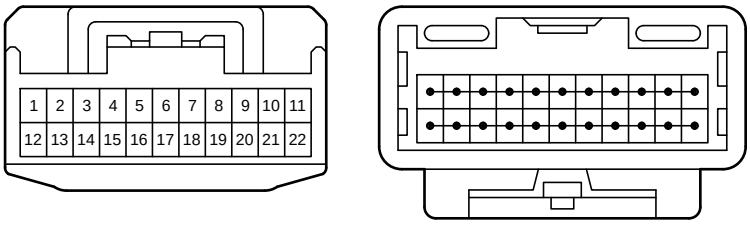

90980-12372
(RHD)

I135
Gray

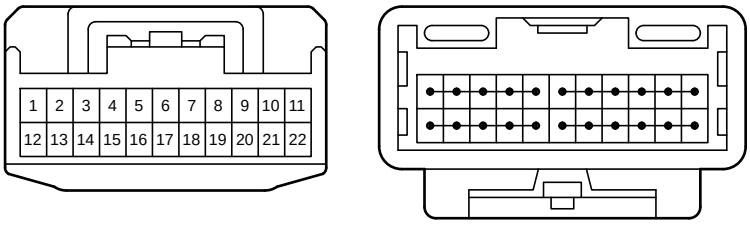

90980-12372

P43
White

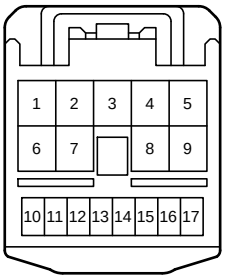

90980-12374

Q48
White

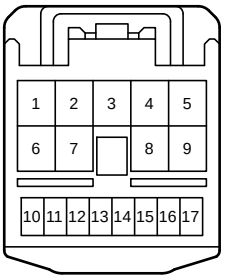

90980-12374

4A
White

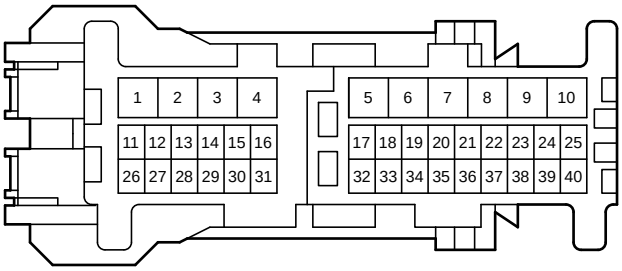

90980-12884

4C
White

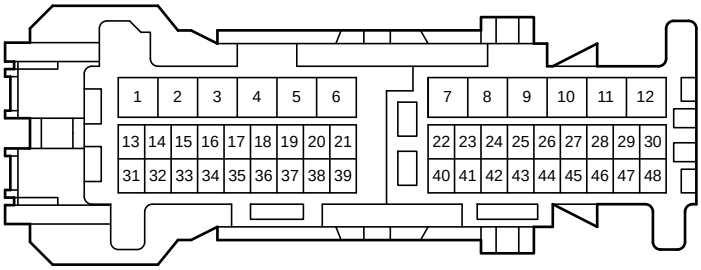

90980-12887

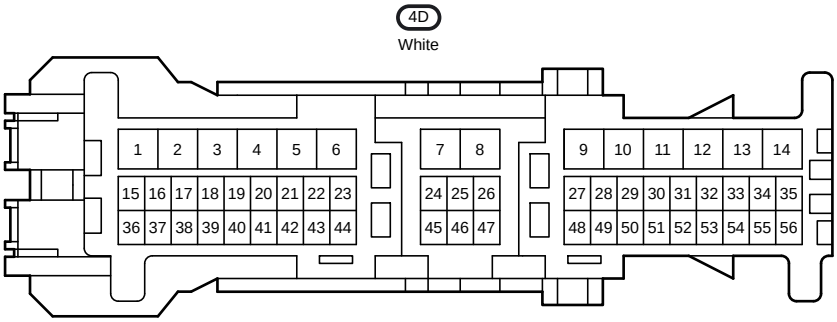

90980-12890

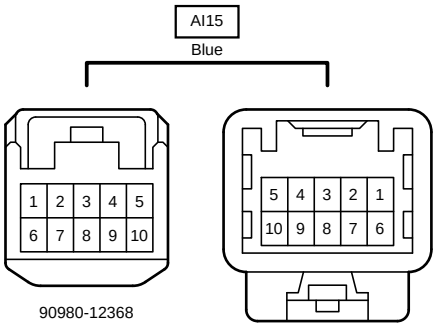

90980-12368

90980-12367

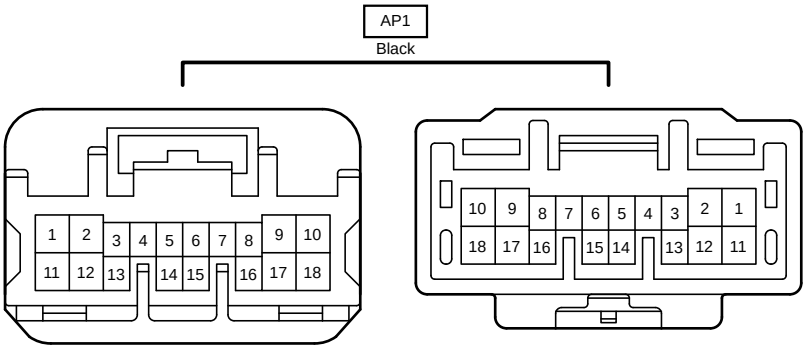

90980-12739

90980-12738

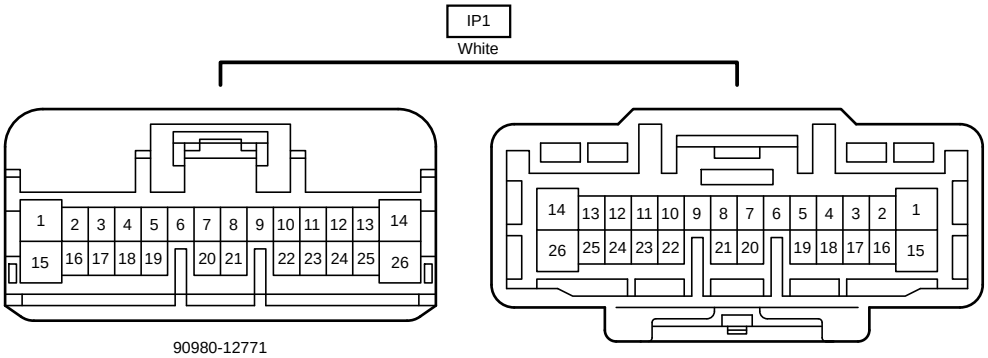

90980-12771

90980-12770

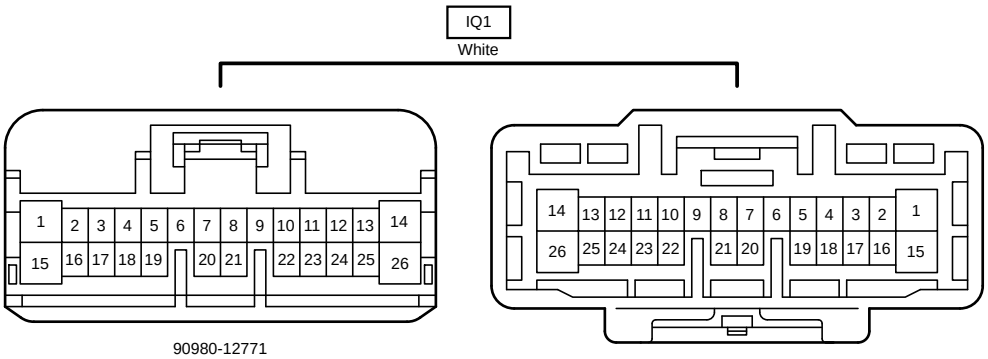

90980-12771

90980-12770