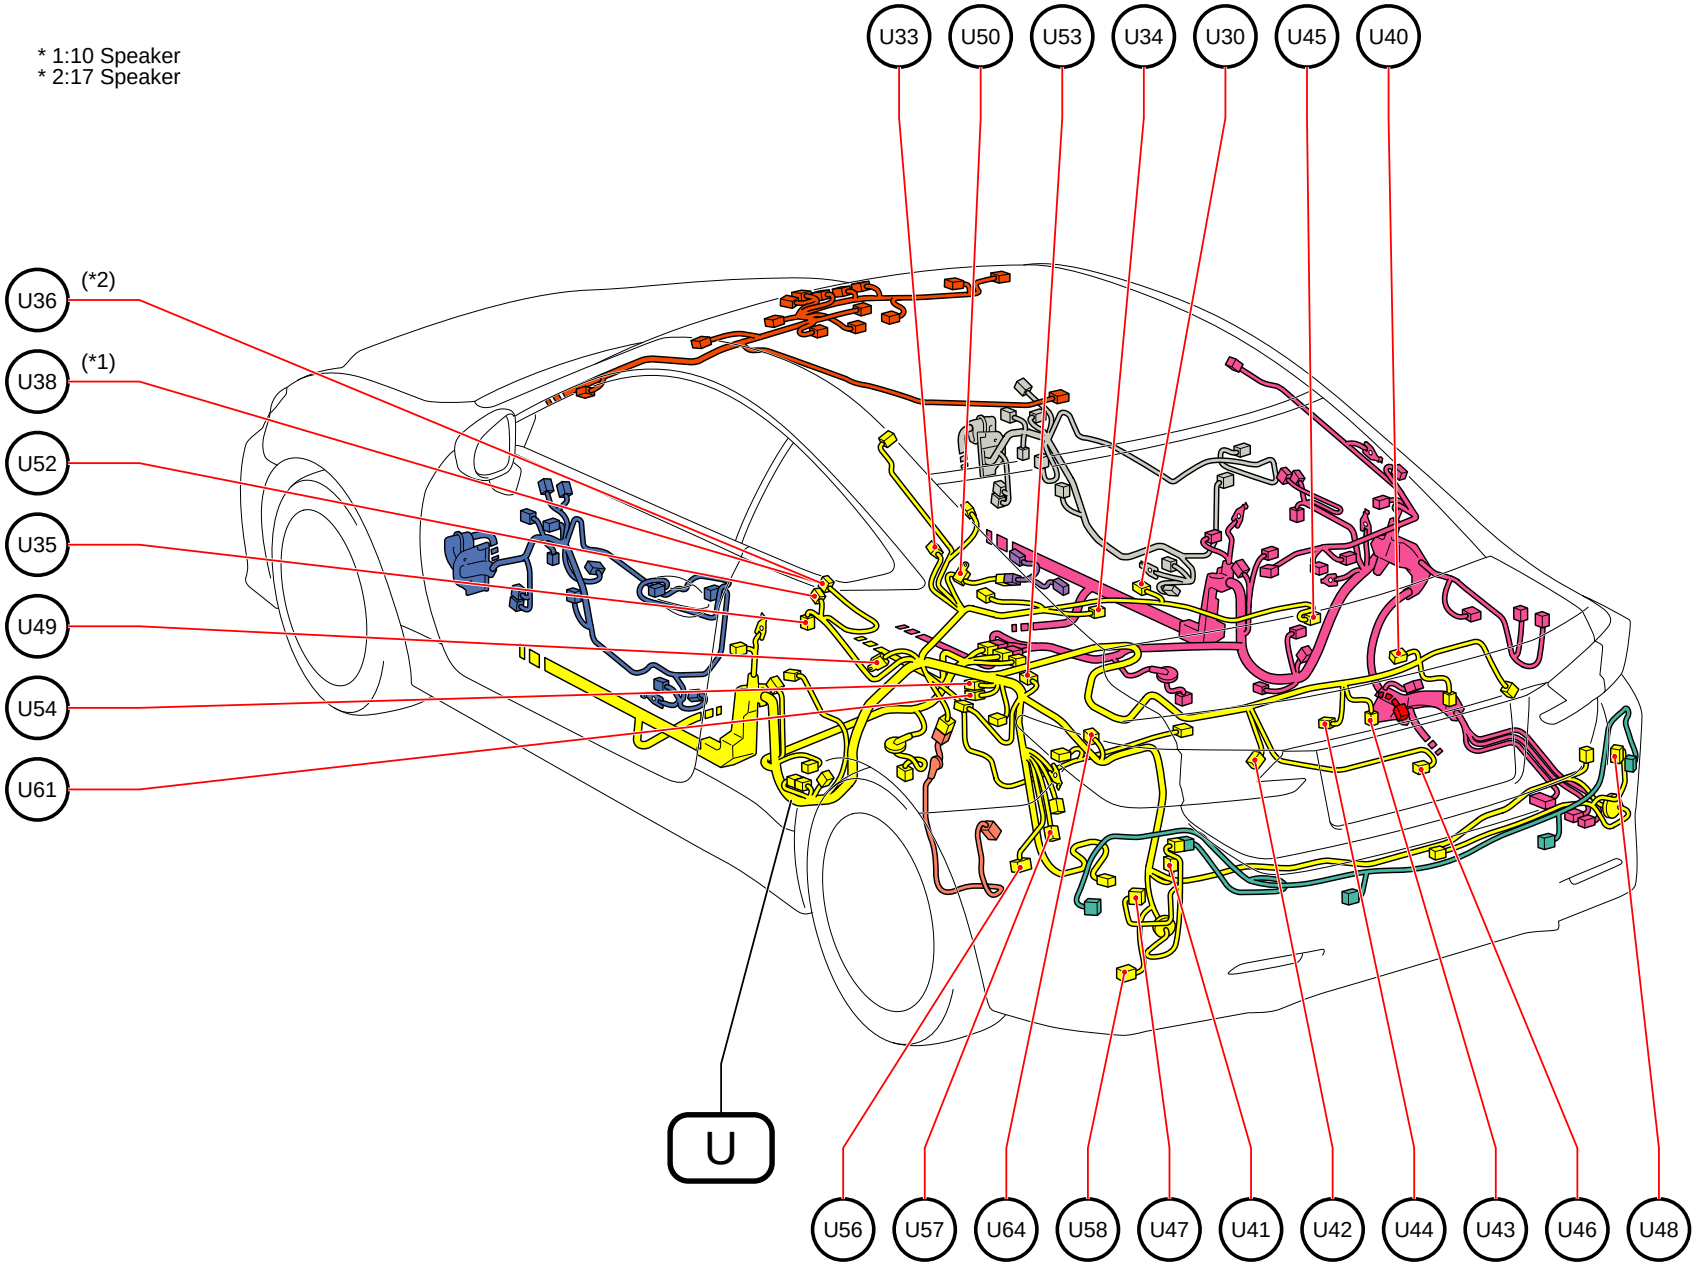
* 1:10 Speaker
* 2:17 Speaker
U33
U50
U53
U34
U30
U45
U40
U36
(*2)
U38
(*1)
U52
U35
U49
U54
U61
U
U56
U57
U64
U58
U47
U41
U42
U44
U43
U46
U48

U30 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
U33 Tire Pressure Warning ECU and Receiver (Electrical Key and Tire Pressure Monitoring System Receiver Assembly)
U34 Rear Header Speaker Assembly LH
U35 Rear Speaker Assembly LH
U36 Rear No. 2 Speaker Assembly LH
U38 Short Connector
U40 Luggage Electrical Key Switch
U41 Rear Combination Light Assembly LH
U42 Rear Light Assembly LH
U43 License Plate Light Assembly LH
U44 Door Unlock Switch Sub-Assembly
U45 No. 1 Luggage Compartment Light Assembly
U46 Luggage Compartment Door Lock Assembly
U47 Blind Spot Monitor Sensor LH
U48 Blind Spot Monitor Sensor RH
U49 Radio Setting Condenser (Center Stop Light Assembly and No. 1 Luggage Compartment Light Assembly)
U50 Radio Setting Condenser (Rear Window Defogger)
U52 Glass Breakage Sensor (Quarter Window Assembly LH)
U53 No. 9 CAN Junction Connector
U54 No. 10 Junction Connector
U56 Fuel Pump Control ECU
U57 Rear Tire Pressure Monitor Initiator
U58 Battery Thermometer Sensor (Thermistor Assembly)
U61 No. 15 CAN Junction Connector
U64 Security Warning Relay

U30
Black



90980-11142

U33
White

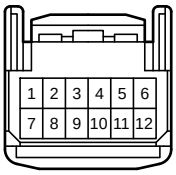

90980-12552

U34
Black

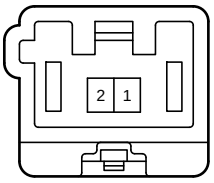

90980-12807

U35
Black



90980-10935

U36
White



90980-12304

U38
White



90980-12304

U40
Blue

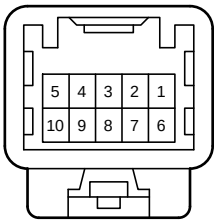

90980-12367

U41
White

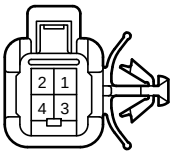

90980-11399

U42
White

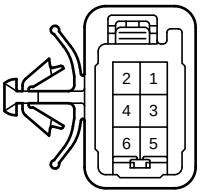

90980-11587

U43
Gray



90980-11148

U44
White

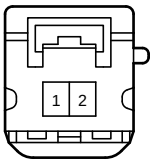

90980-12808

U45
White

90980-11148

U46
Black

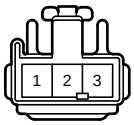

90980-10908

U47
Black

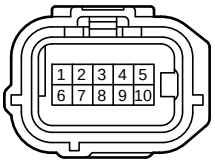

90980-12380

U48
Black

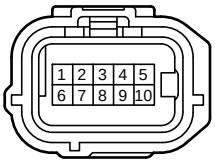

90980-12380

U49
Black



U50
Black



U52
White

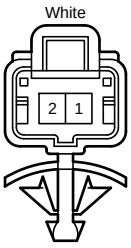

82824-60800

U53
White

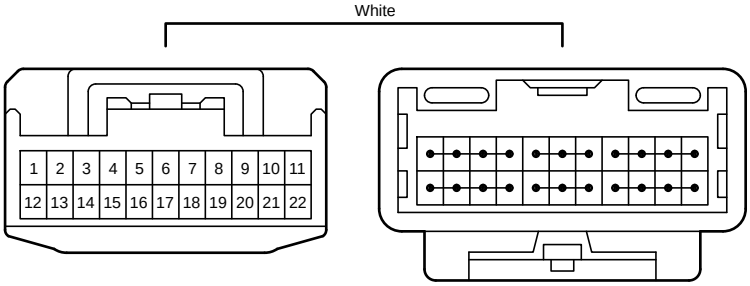

90980-12372

U54
Black

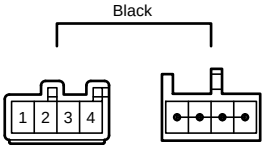

90980-11398

U56
Black

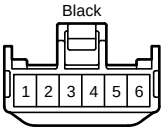

90980-10957

U57
White

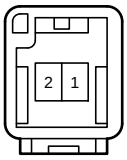

90980-11917

U58
Black

90980-11070

U61
White

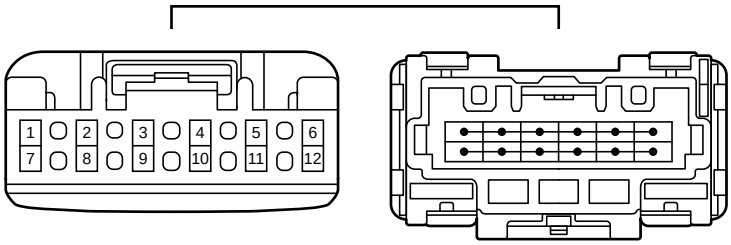

90980-12C68

U64
White

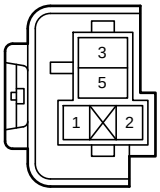

82660-20340