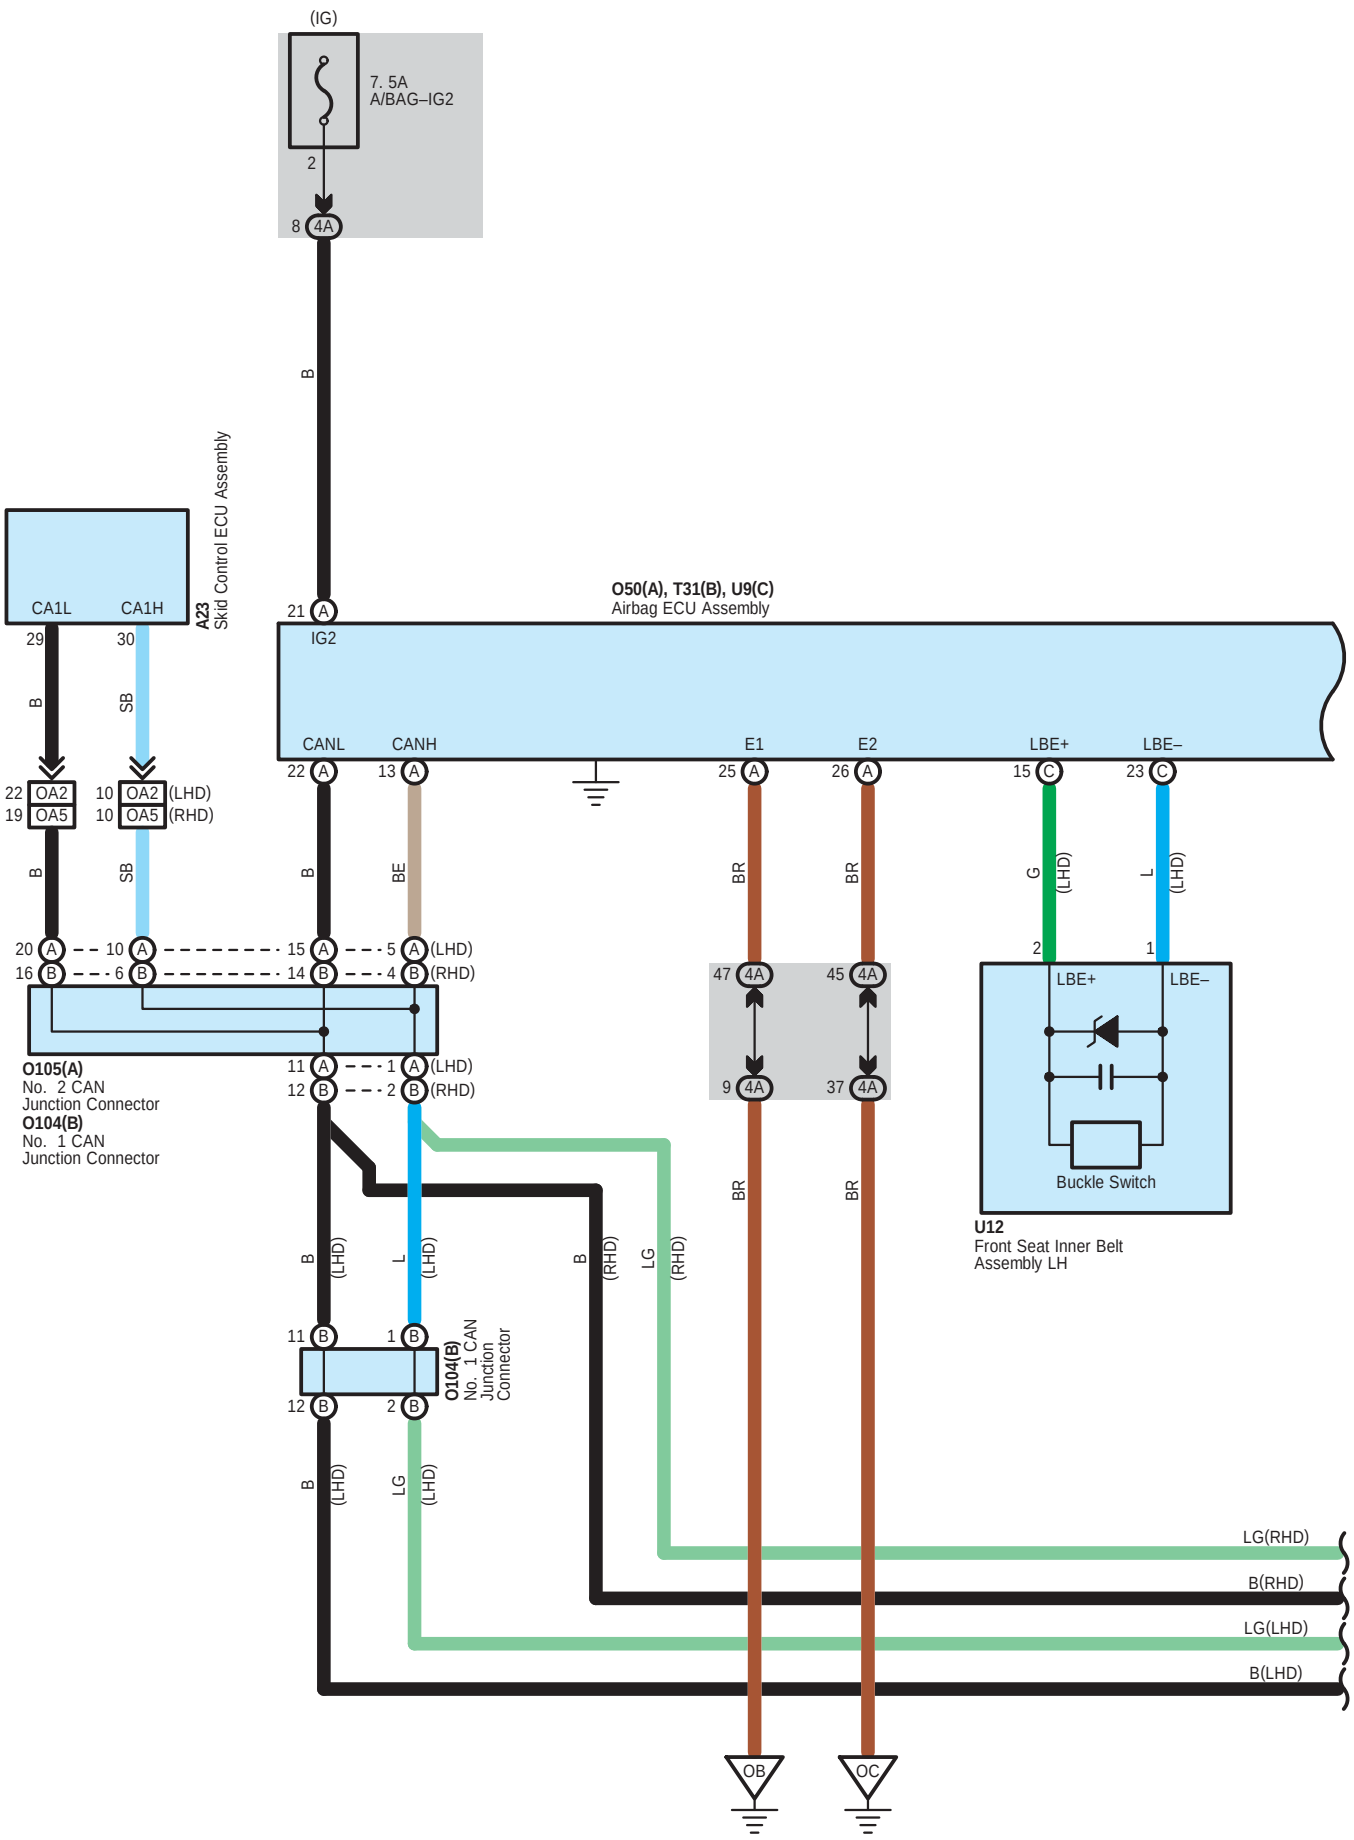
(IG)
7. 5A
A/BAG–IG2
2
8 4A
B
A23
Skid Control ECU Assembly
CA1L
CA1H
29
30
B
SB
22 OA2
19 OA5
10 OA2 (LHD)
10 OA5 (RHD)
B
SB
O50(A), T31(B), U9(C)
Airbag ECU Assembly
21 A
IG2
CANL
CANH
E1
E2
LBE+
LBE–
22 A
13 A
25 A
26 A
15 C
23 C
B
BE
BR
BR
G (LHD)
L (LHD)
20 A
16 B
10 A
6 B
15 A
14 B
5 A (LHD)
4 B (RHD)
47 4A
45 4A
9 4A
37 4A
2
1
LBE+
LBE–
Buckle Switch
O105(A)
No. 2 CAN
Junction Connector
O104(B)
No. 1 CAN
Junction Connector
11 A
12 B
1 A (LHD)
2 B (RHD)
BR
BR
U12
Front Seat Inner Belt
Assembly LH
B (LHD)
L (LHD)
B (RHD)
LG (RHD)
11 B
12 B
1 B
2 B
O104(B)
No. 1 CAN
Junction
Connector
B (LHD)
LG (LHD)
LG(RHD)
B(RHD)
LG(LHD)
B(LHD)
OB
OC

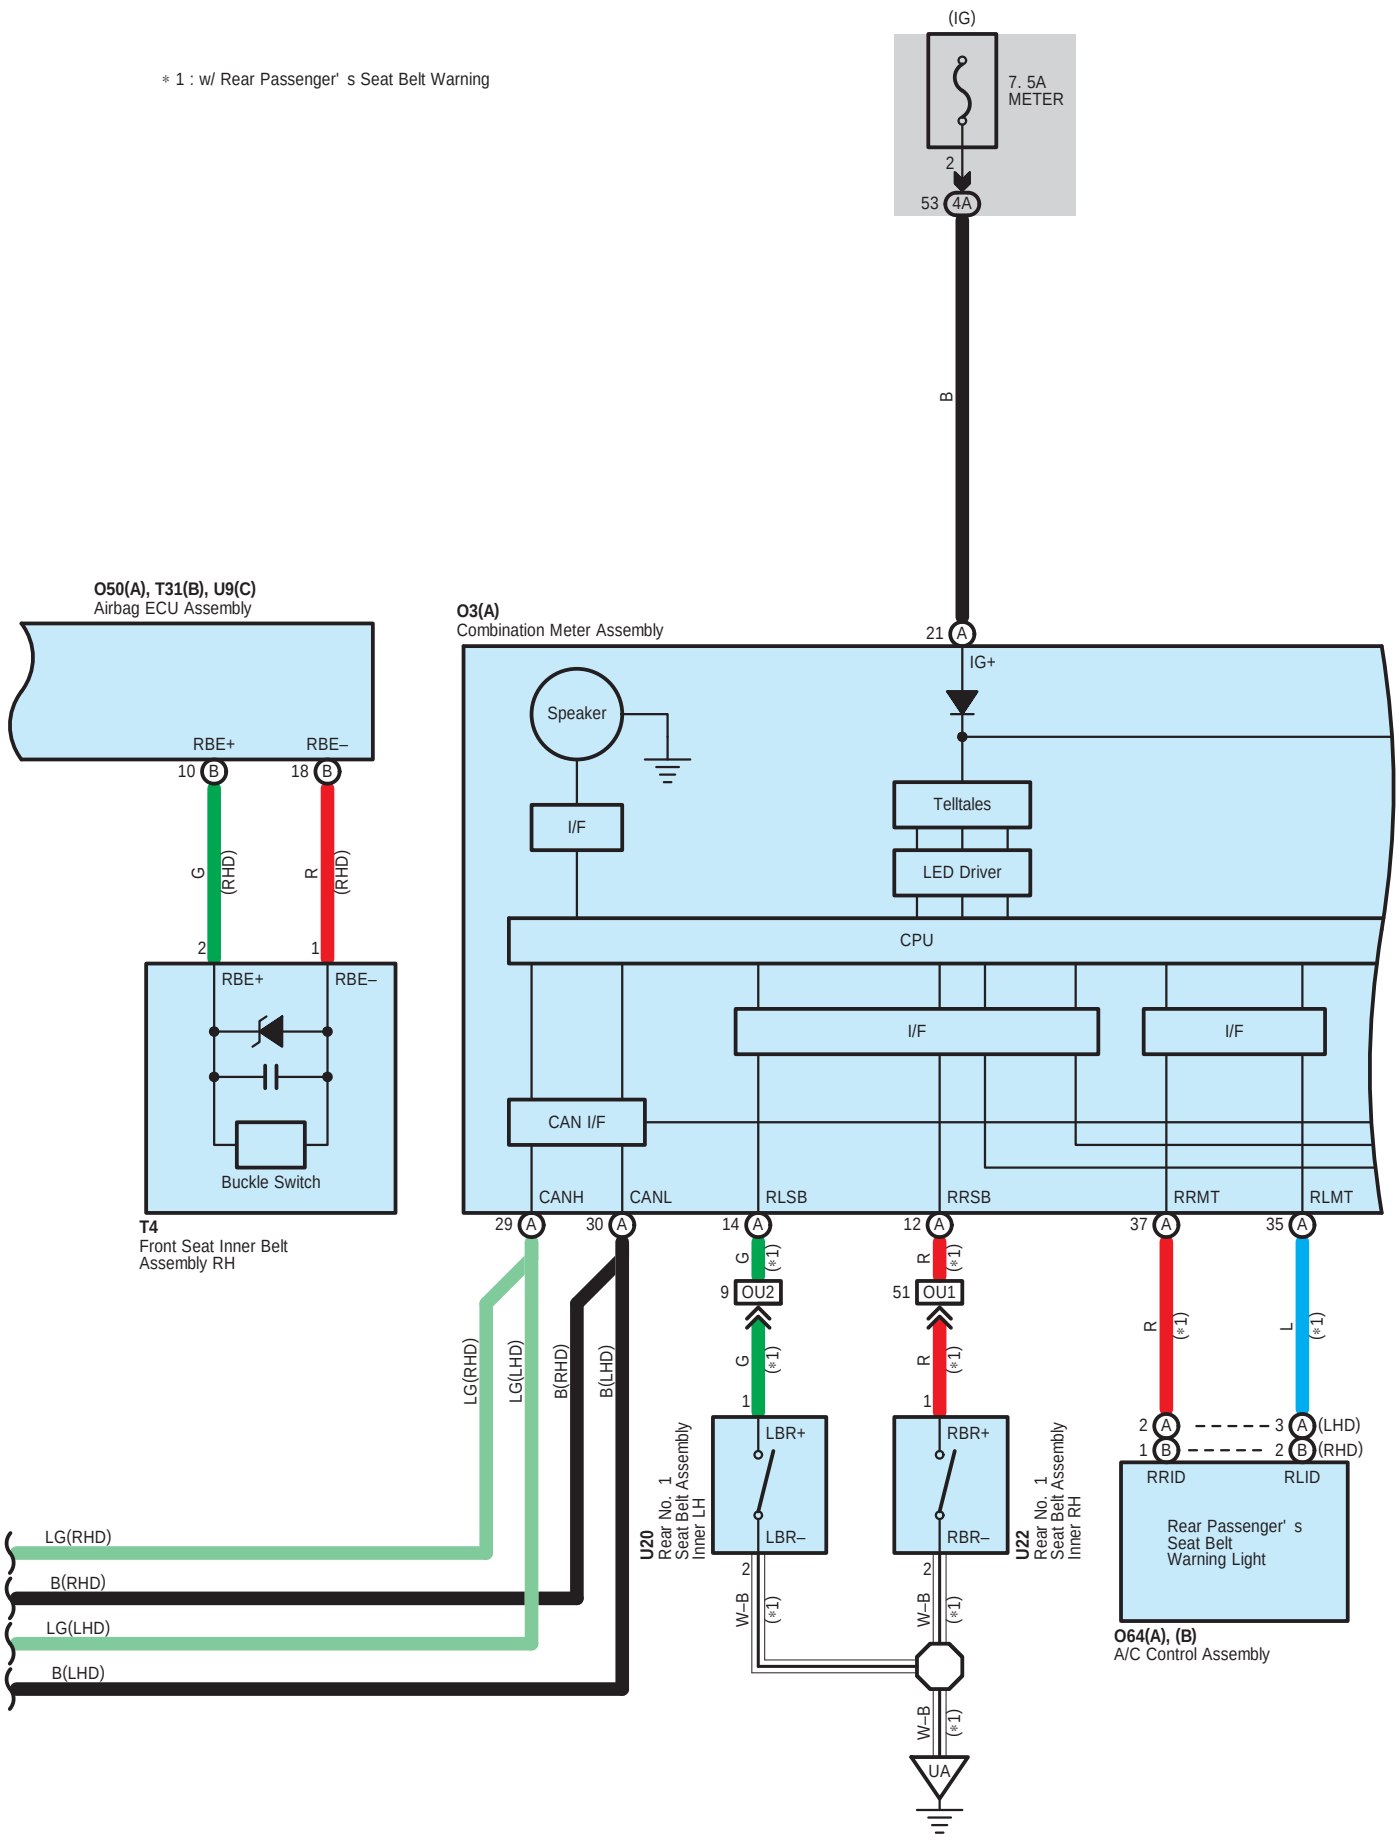
∗ 1 : w/ Rear Passenger' s Seat Belt Warning
(IG)
7. 5A
METER
2
53 4A
B
O50(A), T31(B), U9(C)
Airbag ECU Assembly
RBE+
RBE–
10 B
18 B
G (RHD)
R (RHD)
2
1
RBE+
RBE–
Buckle Switch
T4
Front Seat Inner Belt
Assembly RH
O3(A)
Combination Meter Assembly
21 A
IG+
Speaker
I/F
Telltales
LED Driver
CPU
I/F
I/F
CAN I/F
CANH
CANL
RLSB
RRSB
RRMT
RLMT
29 A
30 A
14 A
12 A
37 A
35 A
G (∗1)
R (∗1)
9 OU2
51 OU1
G (∗1)
R (∗1)
1
1
LBR+
LBR–
RBR+
RBR–
U20
Rear No. 1
Seat Belt Assembly
Inner LH
U22
Rear No. 1
Seat Belt Assembly
Inner RH
2
2
W–B (∗1)
W–B (∗1)
W–B (∗1)
UA
R (∗1)
L (∗1)
2 A
1 B
3 A (LHD)
2 B (RHD)
RRID
RLID
Rear Passenger' s
Seat Belt
Warning Light
O64(A), (B)
A/C Control Assembly
LG(RHD)
LG(LHD)
B(RHD)
B(LHD)
LG(RHD)
B(RHD)
LG(LHD)
B(LHD)

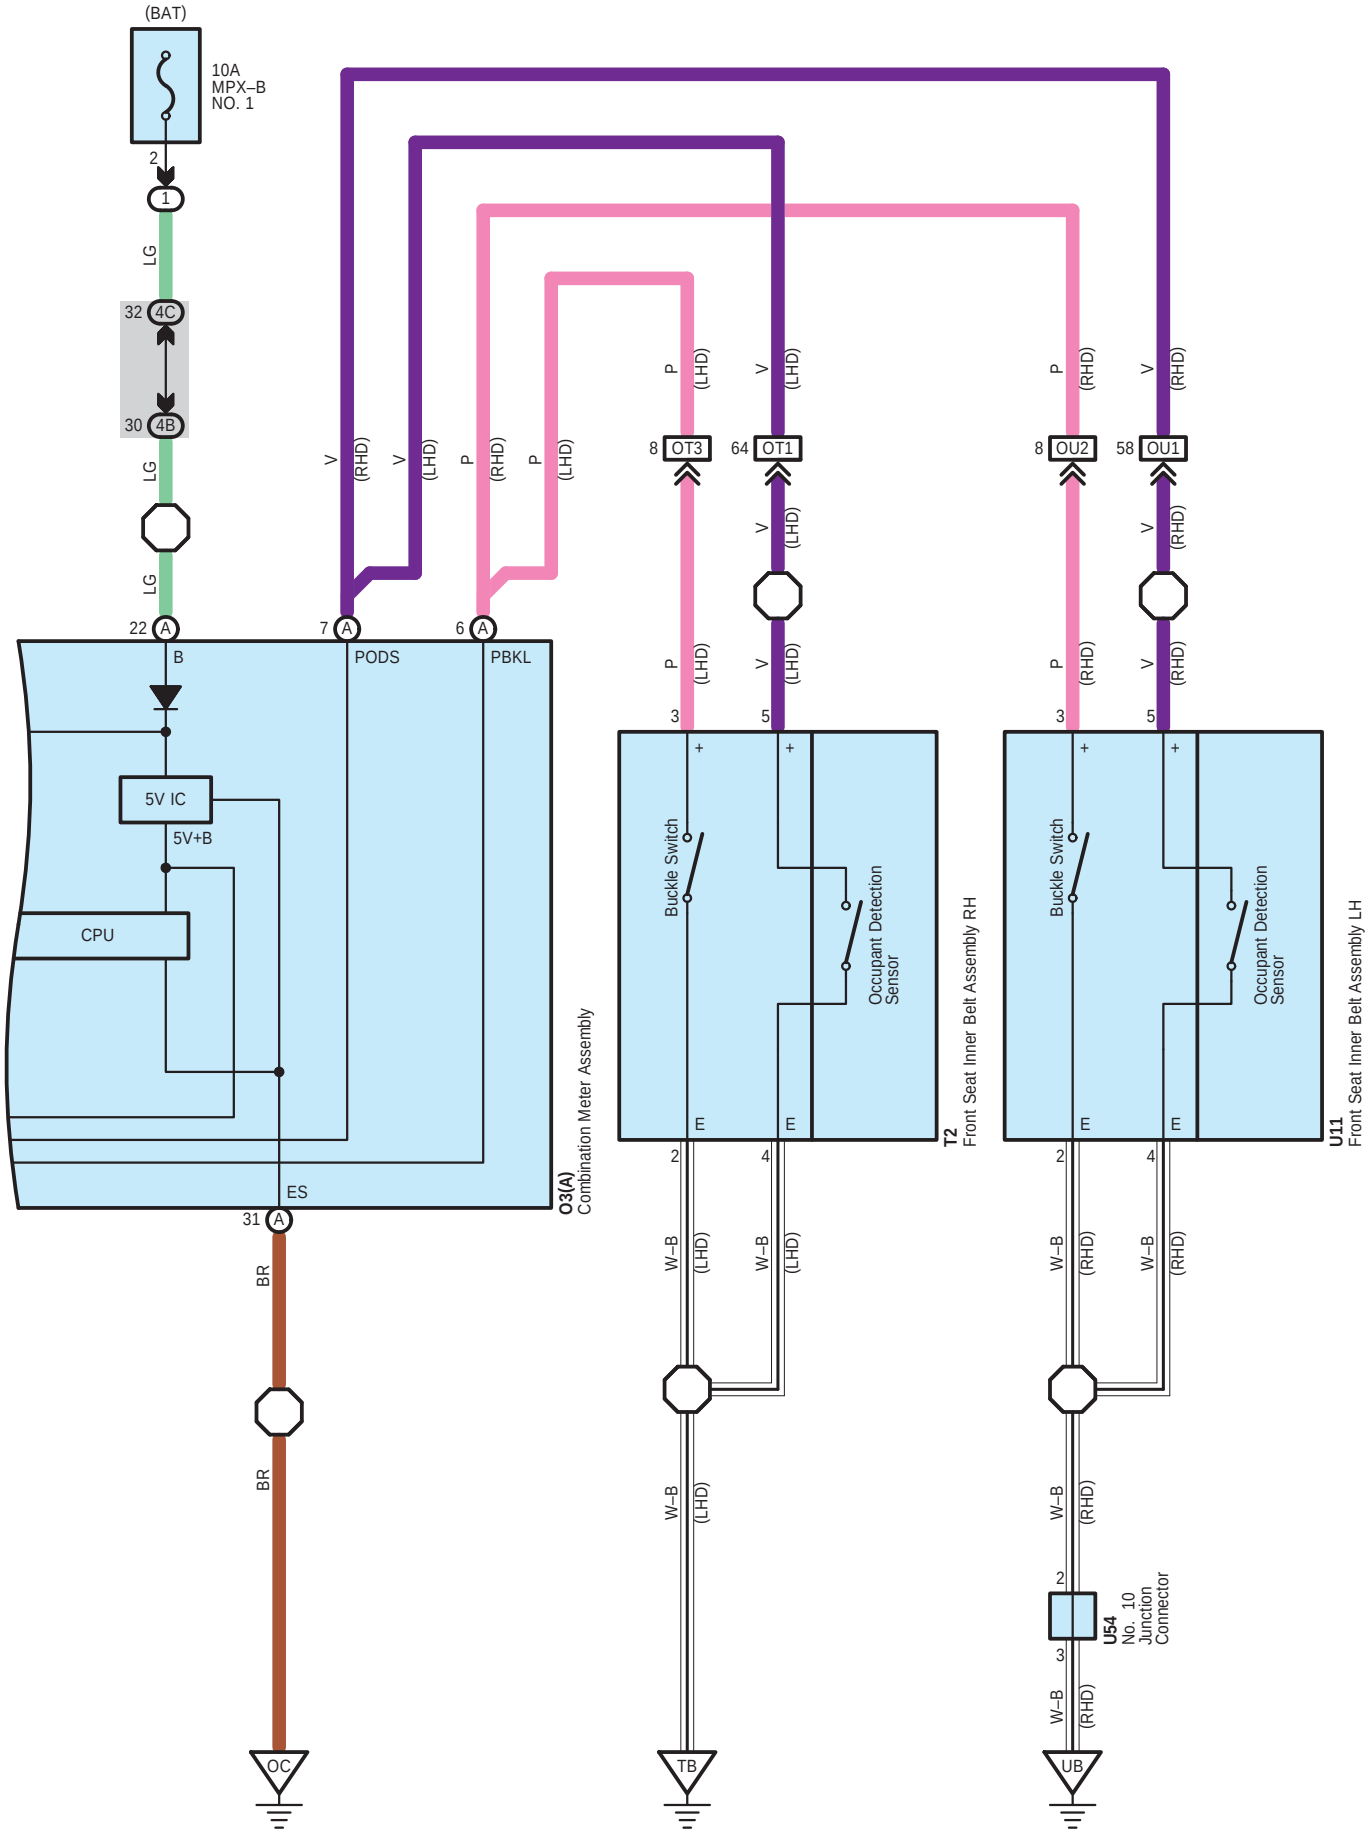
(BAT)
10A
MPX–B
NO. 1
2
1
LG
32 4C
30 4B
LG
LG
22 A
B
5V IC
5V+B
CPU
ES
31 A
BR
BR
OC
7 A
PODS
6 A
PBKL
O3(A)
Combination Meter Assembly
V (RHD)
V (LHD)
P (RHD)
P (LHD)
8 OT3
64 OT1
8 OU2
58 OU1
P (LHD)
V (LHD)
P (RHD)
V (RHD)
3
5
Buckle Switch
Occupant Detection Sensor
T2
Front Seat Inner Belt Assembly RH
U11
Front Seat Inner Belt Assembly LH
2
4
W–B (LHD)
W–B (RHD)
U54
No. 10
Junction
Connector
TB
UB

A23
Gray

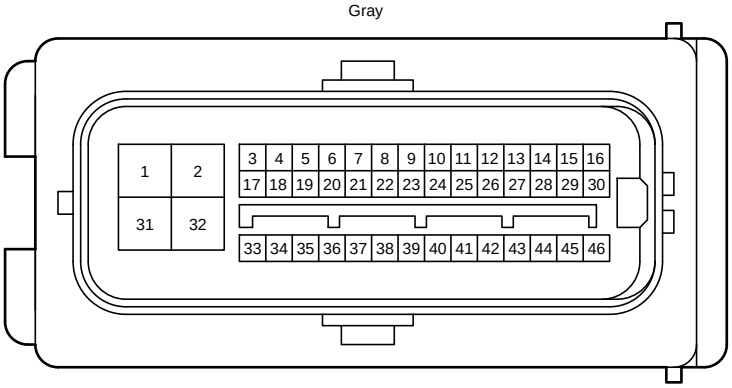


90980-12426

O3
Black

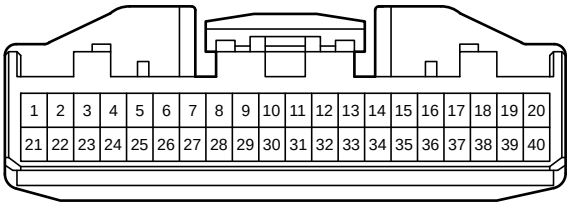


90980-12557

O50
Yellow

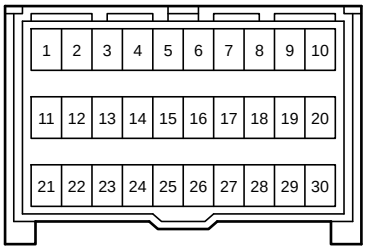


90980-12391

O64
Black

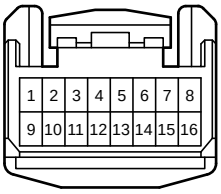


90980-12553

O104
White

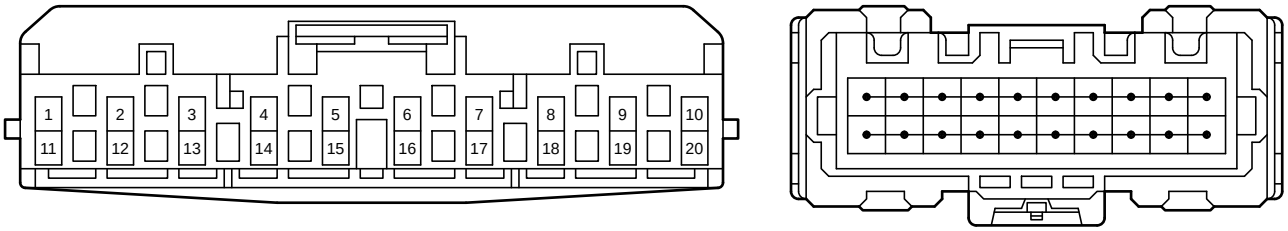


90980-12A58

O105
White

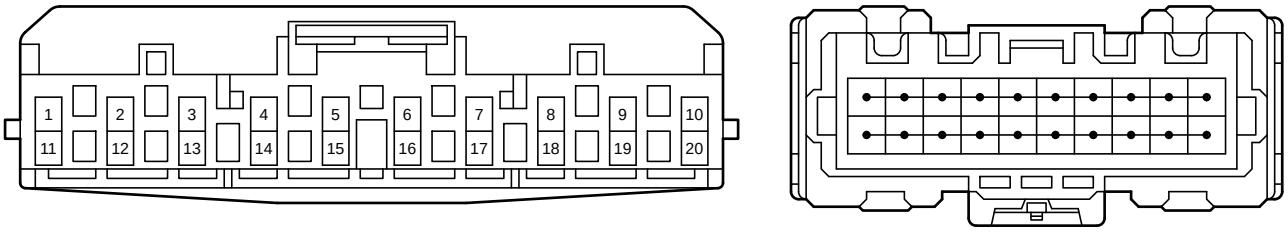


90980-12A58

T2
White

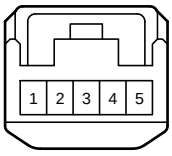


90980-12366

T4
Gray

90980-10942

T31
Yellow

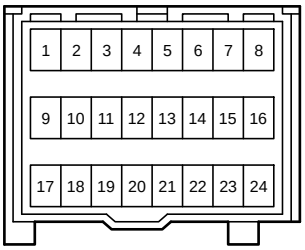


90980-12392

U9
Yellow

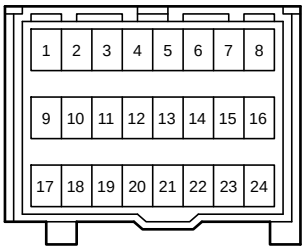


90980-12390

U11
White

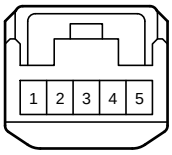


90980-12366

U12
Gray

90980-10942

U20
Black

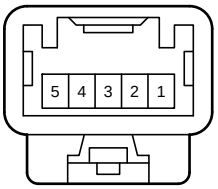


90980-12365

U22
Gray

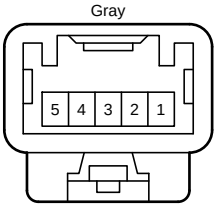


90980-12365

U54
Black

90980-11398

4A
White

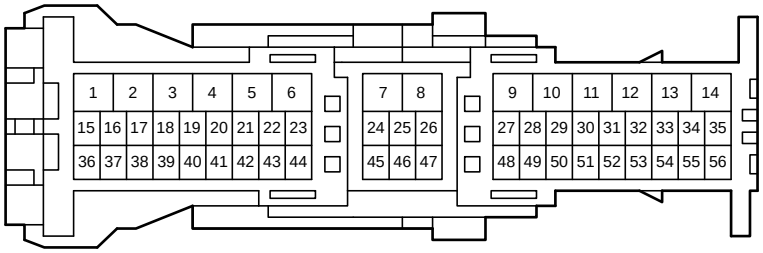


90980-12943

4B
White

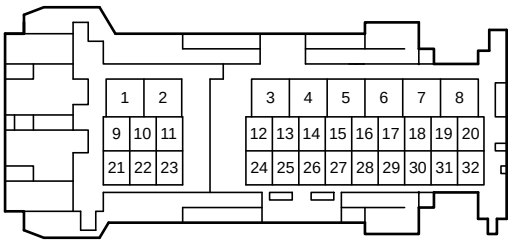


90980-12A48

4C
White

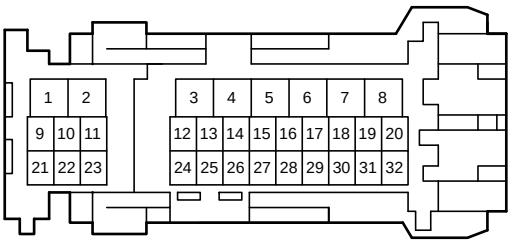


90980-12A47

OA2
White

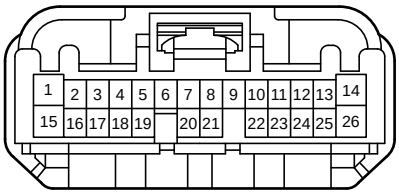


82824-24090

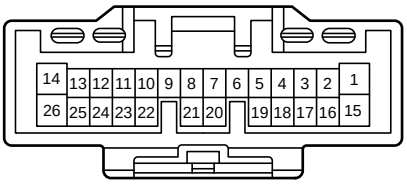


82824-24080

OA5
White

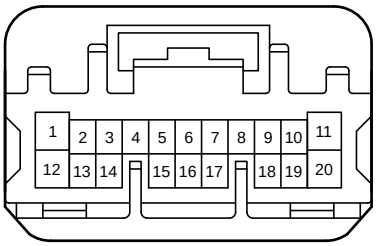


90980-12741

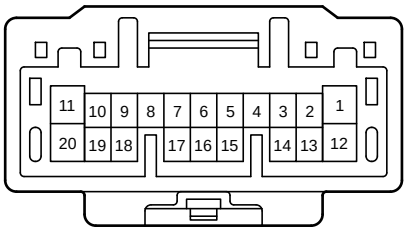


90980-12740

OT1
White

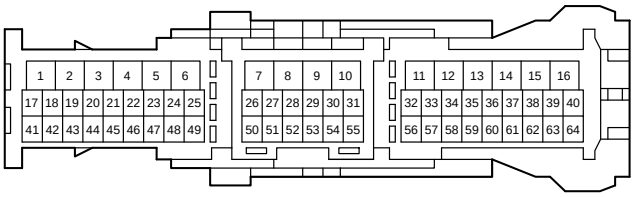


90980-12774

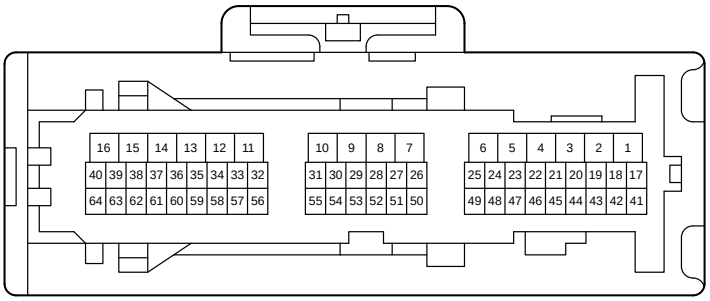


90980-12798

OT3
White

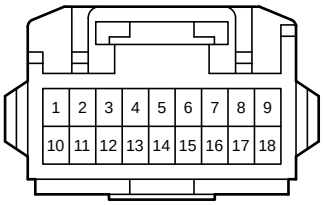


82824-53070

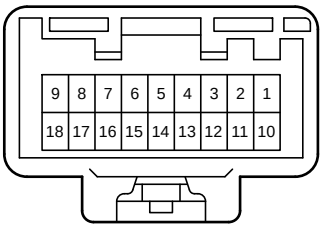


82824-53060

OU1
White

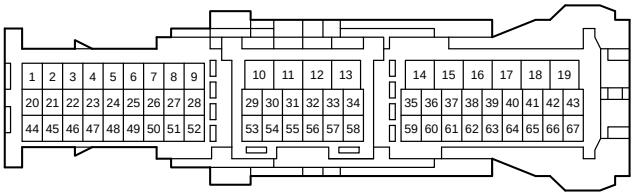


90980-12783

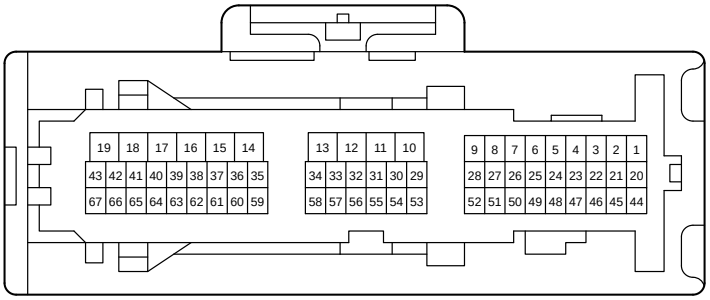


90980-12800

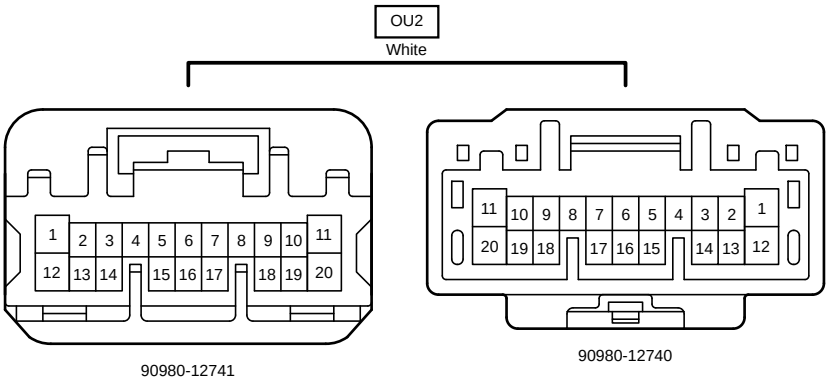
OU2
White
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
90980-12741
11
10
9
8
7
6
5
4
3
2
1
20
19
18
17
16
15
14
13
12
90980-12740