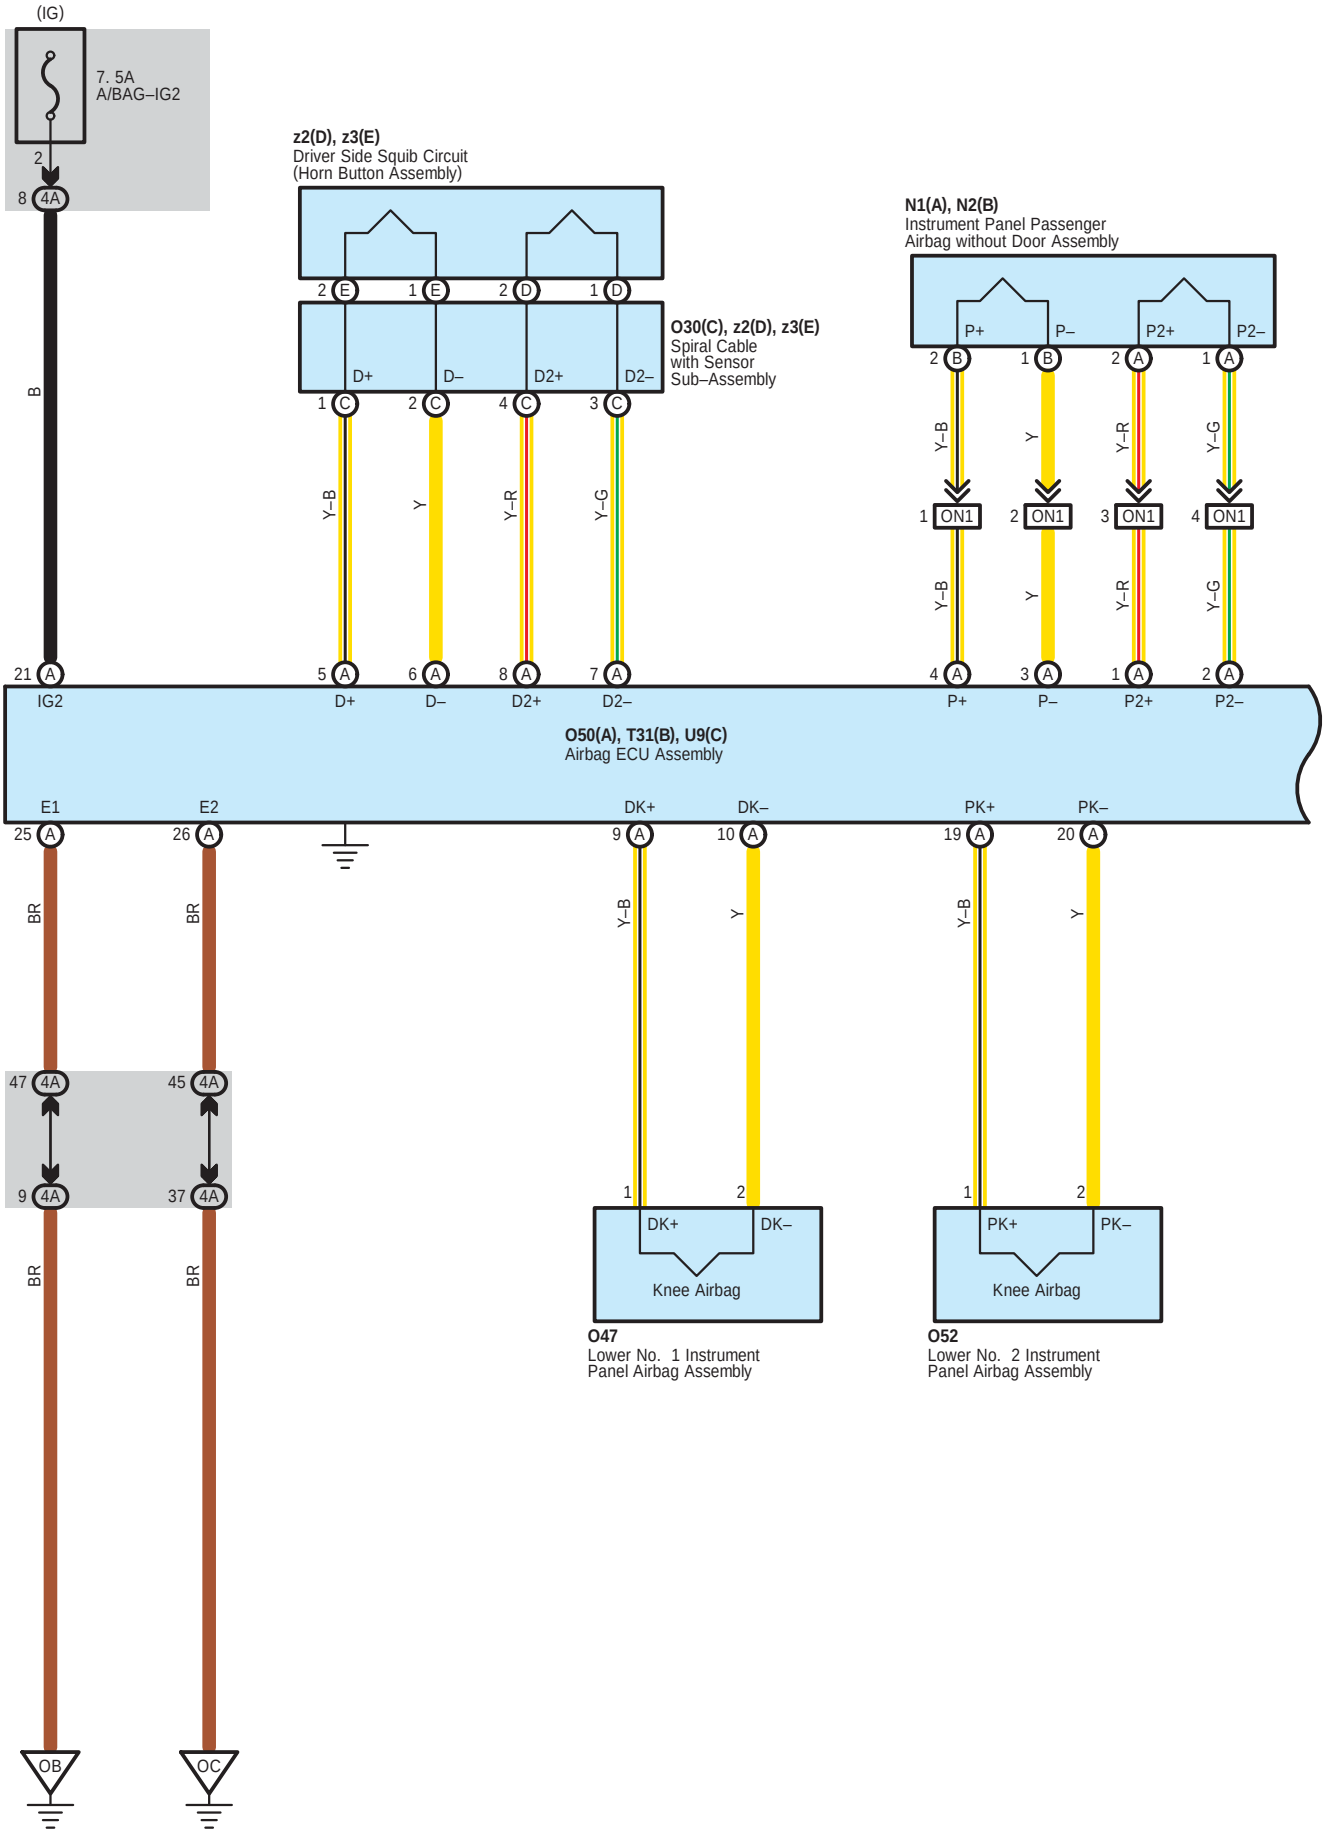
(IG)
7. 5A
A/BAG–IG2
2
8 4A
B
z2(D), z3(E)
Driver Side Squib Circuit
(Horn Button Assembly)
2 E 1 E 2 D 1 D
D+ D– D2+ D2–
1 C 2 C 4 C 3 C
Y–B Y Y–R Y–G
O30(C), z2(D), z3(E)
Spiral Cable
with Sensor
Sub–Assembly
N1(A), N2(B)
Instrument Panel Passenger
Airbag without Door Assembly
P+ P– P2+ P2–
2 B 1 B 2 A 1 A
Y–B Y Y–R Y–G
1 ON1 2 ON1 3 ON1 4 ON1
Y–B Y Y–R Y–G
21 A
IG2
5 A D+
6 A D–
8 A D2+
7 A D2–
4 A P+
3 A P–
1 A P2+
2 A P2–
O50(A), T31(B), U9(C)
Airbag ECU Assembly
E1 E2
25 A 26 A
BR BR
47 4A 45 4A
9 4A 37 4A
BR BR
OB OC
DK+ DK–
9 A 10 A
Y–B Y
1 2
DK+ DK–
Knee Airbag
O47
Lower No. 1 Instrument
Panel Airbag Assembly
PK+ PK–
19 A 20 A
Y–B Y
1 2
PK+ PK–
Knee Airbag
O52
Lower No. 2 Instrument
Panel Airbag Assembly

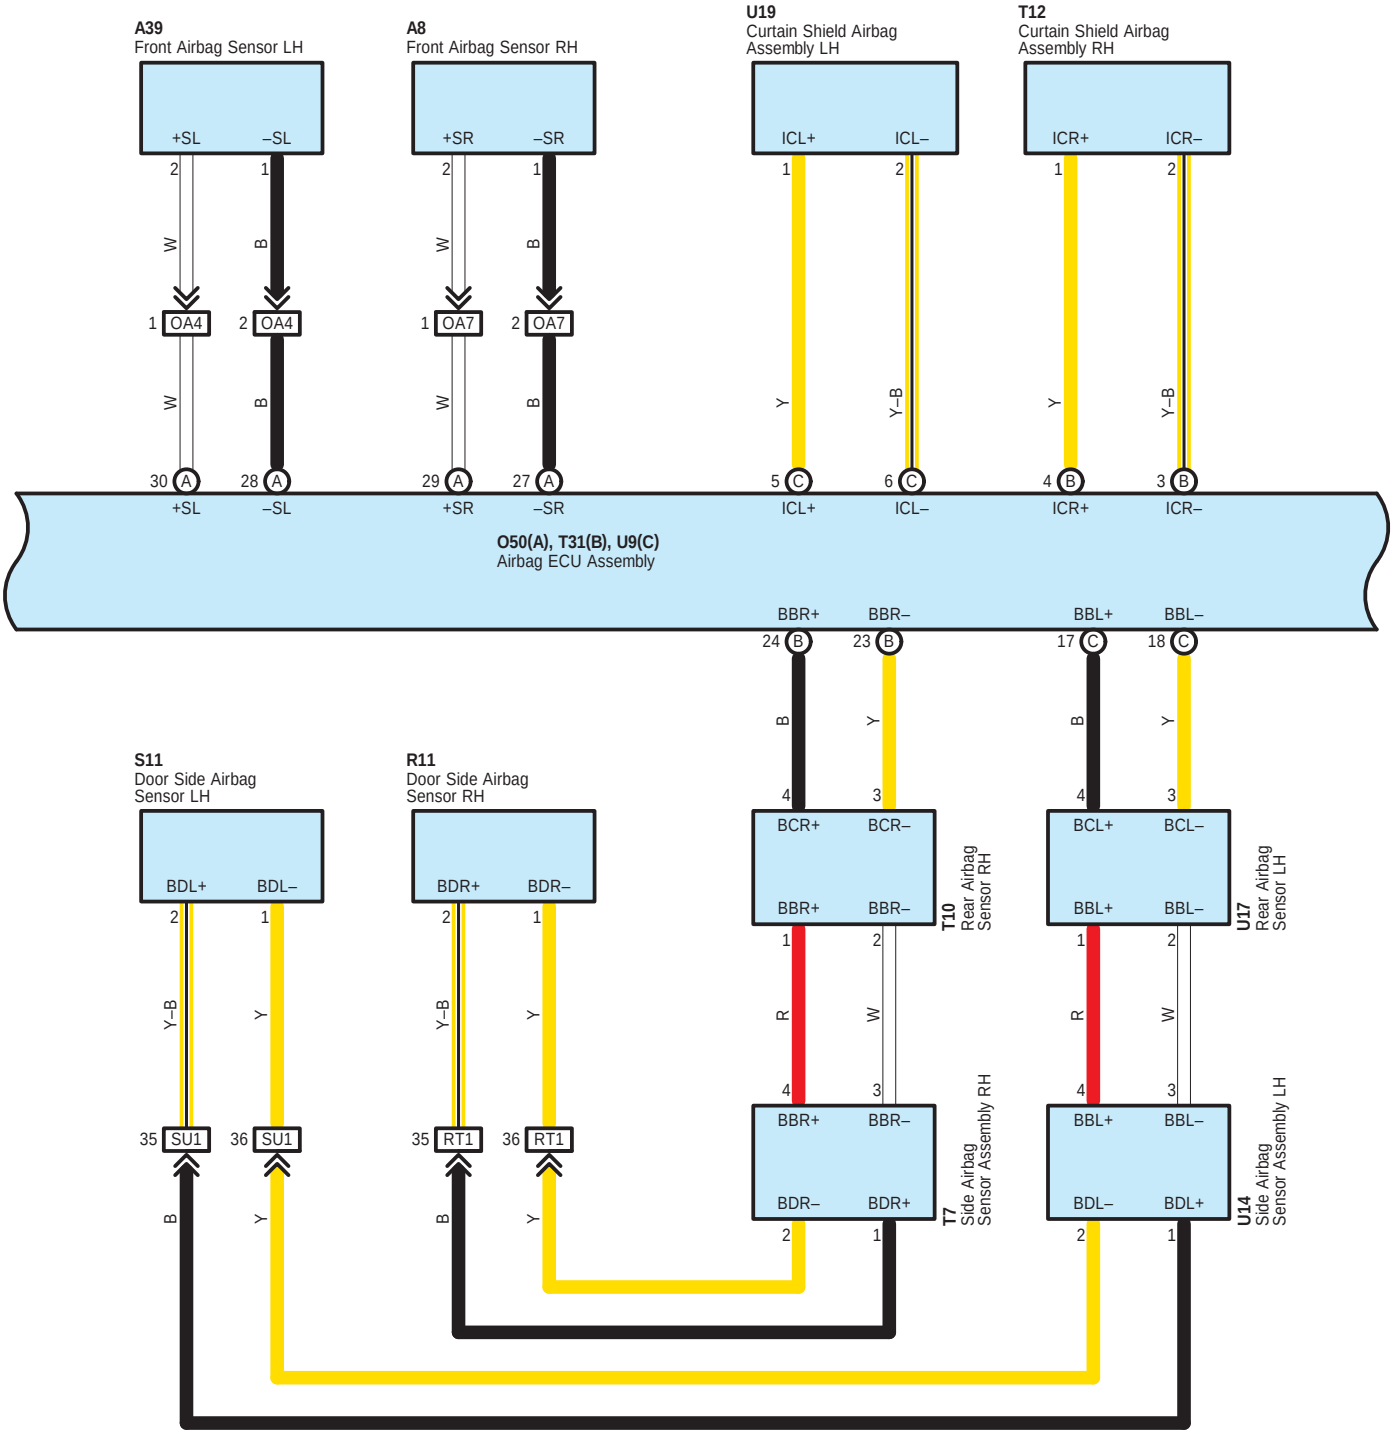
A39
Front Airbag Sensor LH
+SL
–SL
A8
Front Airbag Sensor RH
+SR
–SR
U19
Curtain Shield Airbag Assembly LH
ICL+
ICL–
T12
Curtain Shield Airbag Assembly RH
ICR+
ICR–
OA4
OA7
O50(A), T31(B), U9(C)
Airbag ECU Assembly
BBR+
BBR–
BBL+
BBL–
S11
Door Side Airbag Sensor LH
BDL+
BDL–
R11
Door Side Airbag Sensor RH
BDR+
BDR–
BCR+
BCR–
BCL+
BCL–
T10
Rear Airbag Sensor RH
U17
Rear Airbag Sensor LH
SU1
RT1
T7
Side Airbag Sensor Assembly RH
U14
Side Airbag Sensor Assembly LH

∗ 1 : w/ PASSENGER AIRBAG ON/OFF Indicator
∗ 2 : w/ Airbag Cut Off Switch
∗ 3 : w/ Rear Pretensioner

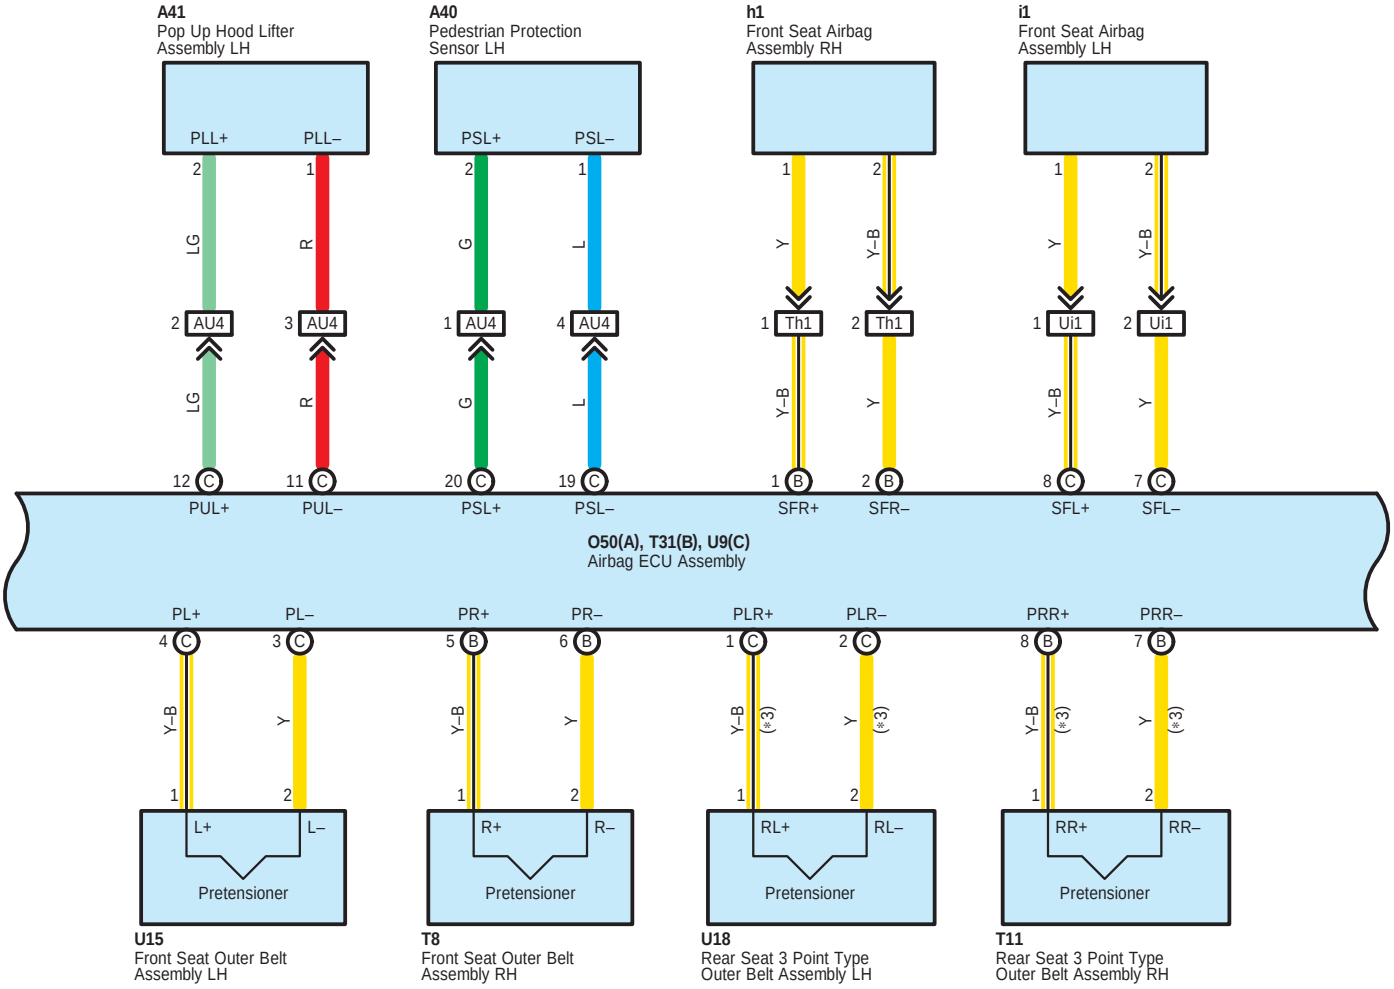

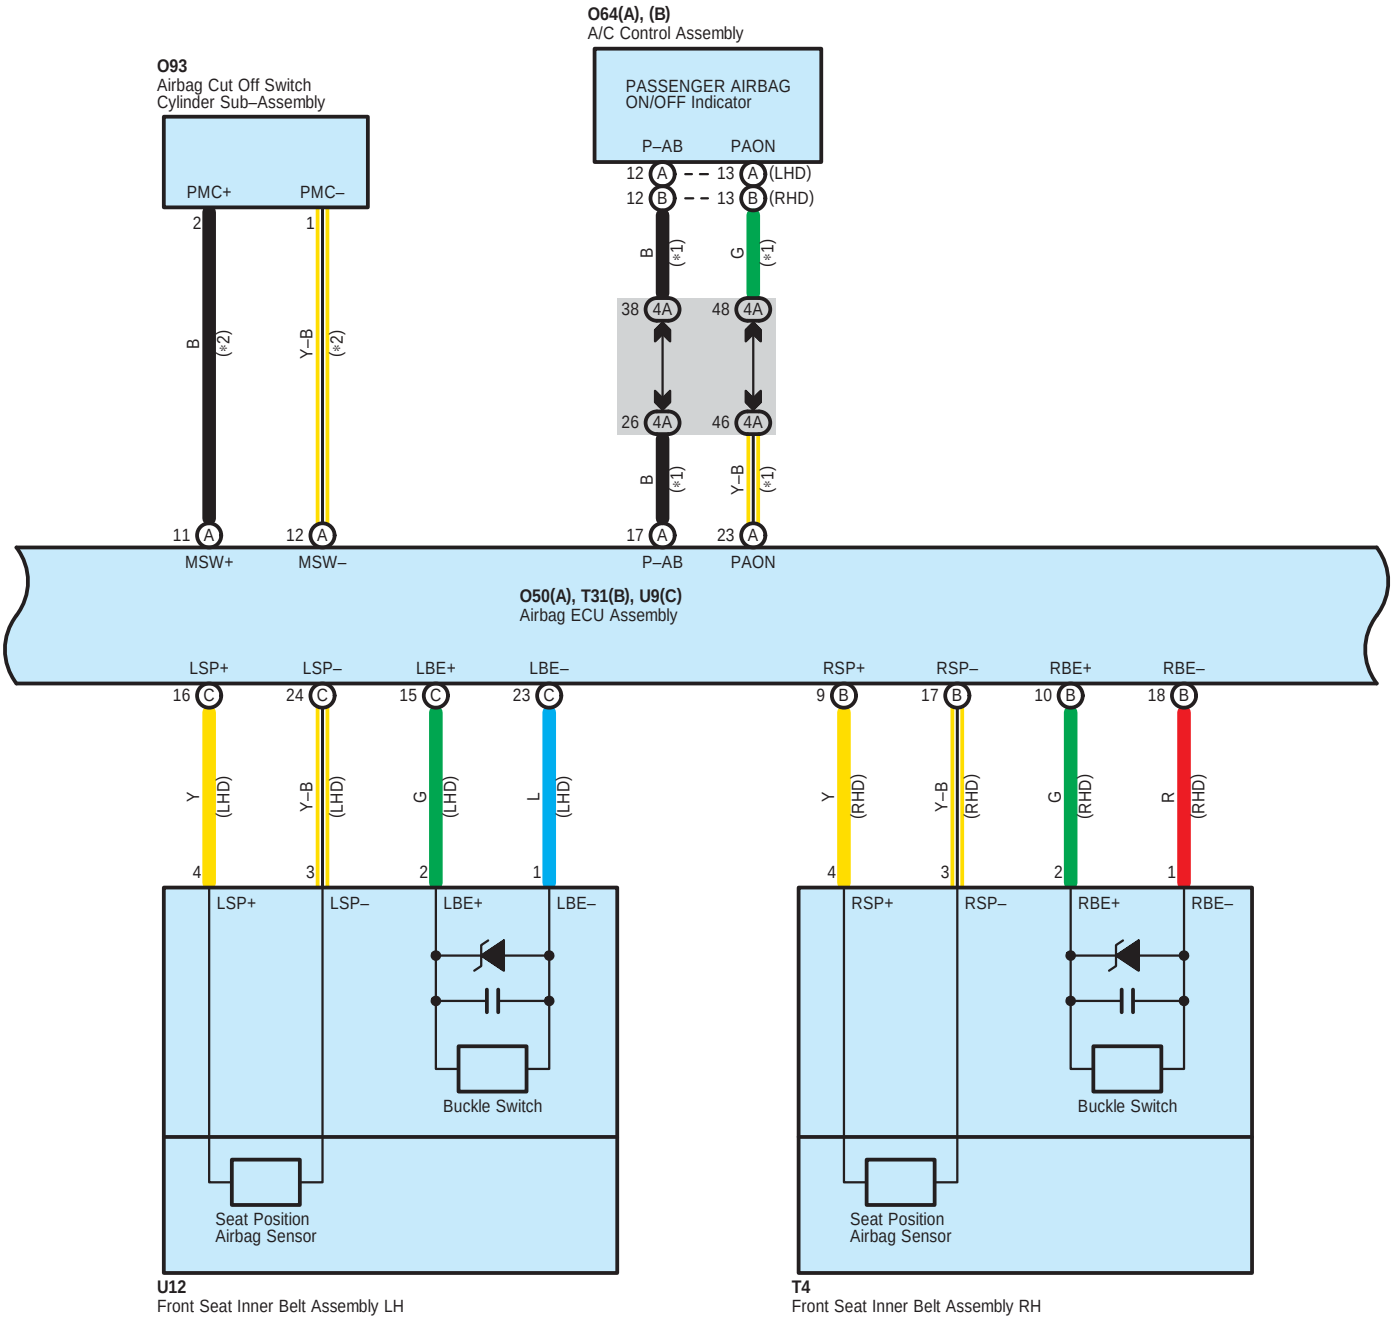
O93
Airbag Cut Off Switch
Cylinder Sub–Assembly
PMC+
PMC–
2
1
B
(*2)
Y–B
(*2)
11 A
12 A
MSW+
MSW–
O64(A), (B)
A/C Control Assembly
PASSENGER AIRBAG
ON/OFF Indicator
P–AB
PAON
12 A
13 A (LHD)
12 B
13 B (RHD)
B
(*1)
G
(*1)
38 4A
48 4A
26 4A
46 4A
B
(*1)
Y–B
(*1)
17 A
23 A
P–AB
PAON
O50(A), T31(B), U9(C)
Airbag ECU Assembly
LSP+
LSP–
LBE+
LBE–
16 C
24 C
15 C
23 C
Y
(LHD)
Y–B
(LHD)
G
(LHD)
L
(LHD)
4
3
2
1
LSP+
LSP–
LBE+
LBE–
Buckle Switch
Seat Position
Airbag Sensor
U12
Front Seat Inner Belt Assembly LH
RSP+
RSP–
RBE+
RBE–
9 B
17 B
10 B
18 B
Y
(RHD)
Y–B
(RHD)
G
(RHD)
R
(RHD)
4
3
2
1
RSP+
RSP–
RBE+
RBE–
Buckle Switch
Seat Position
Airbag Sensor
T4
Front Seat Inner Belt Assembly RH

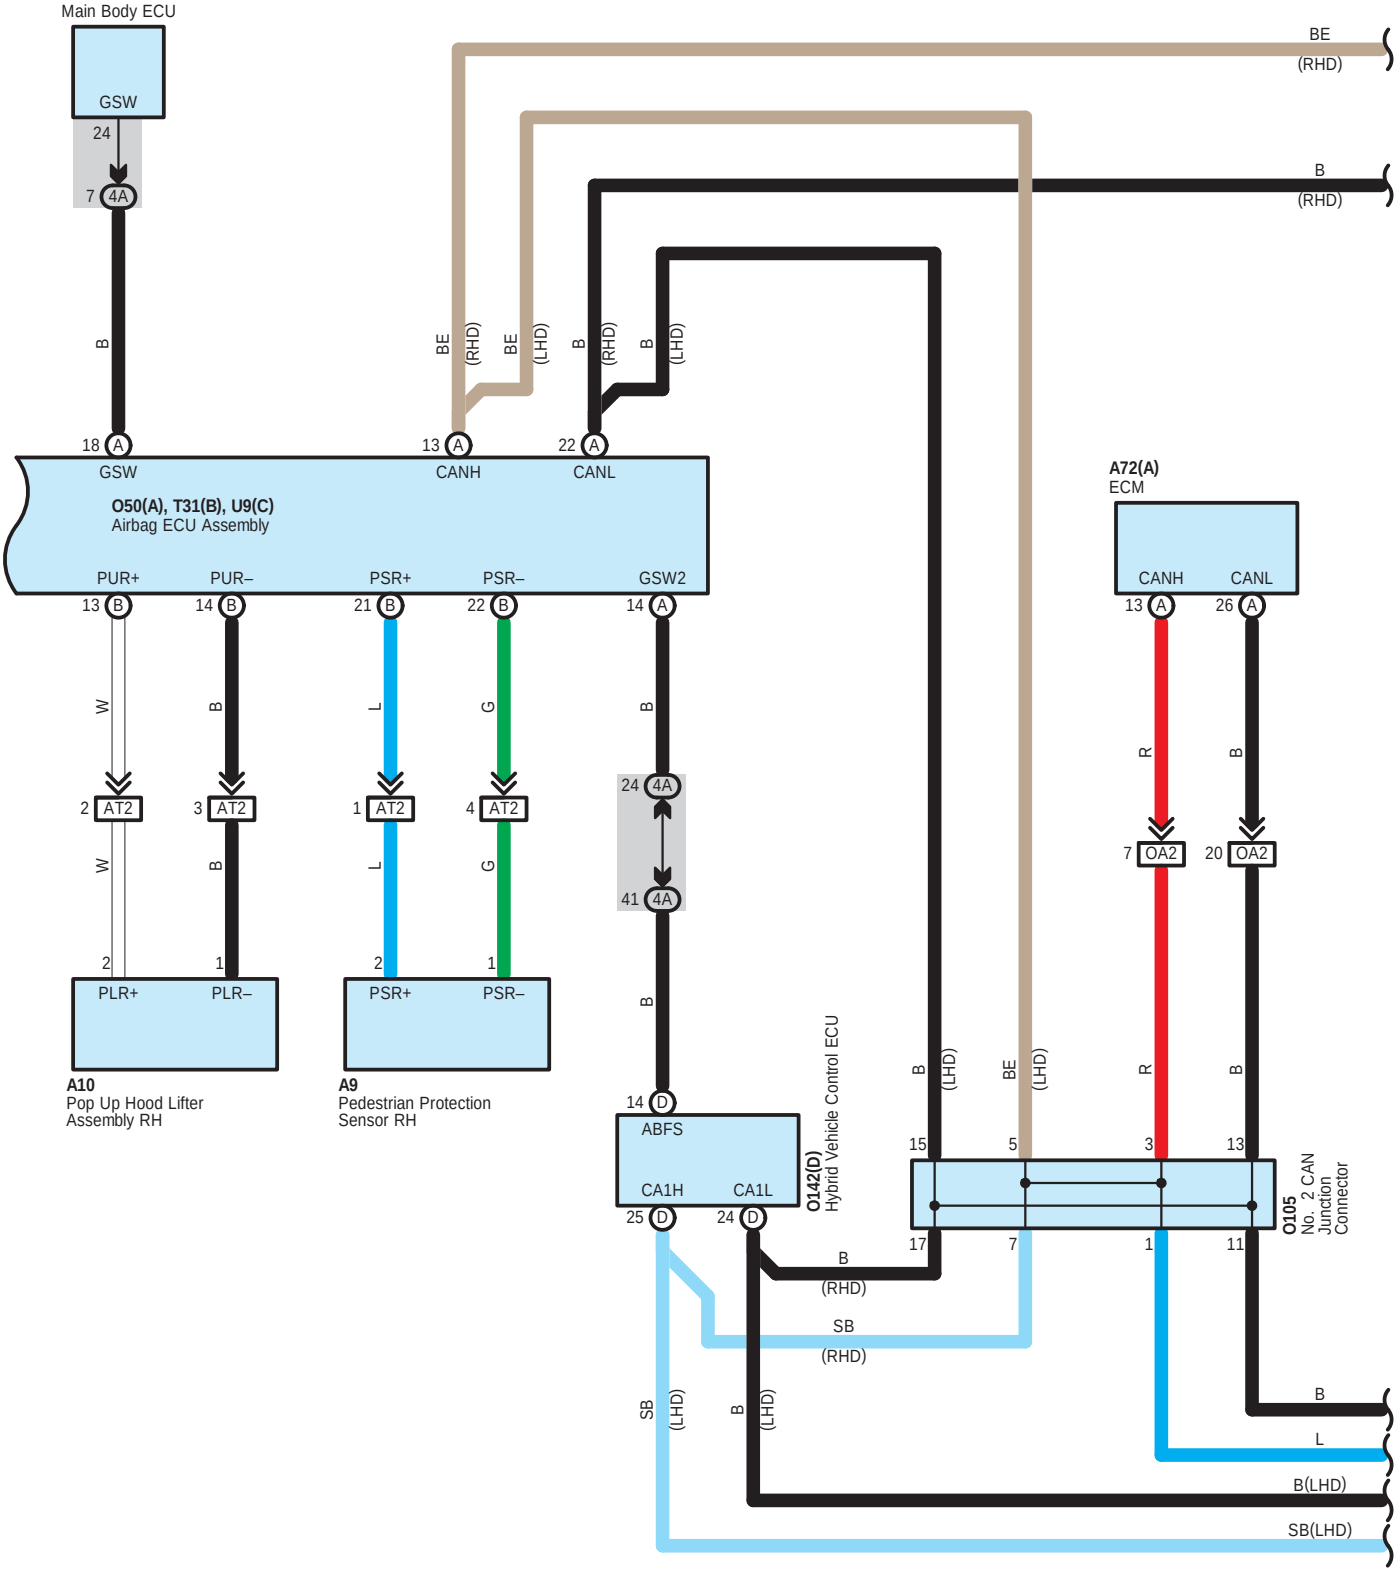
Main Body ECU
GSW
24
7 4A
B
18 A
GSW
BE (RHD)
BE (LHD)
B (RHD)
B (LHD)
13 A
CANH
22 A
CANL
BE
(RHD)
B
(RHD)
O50(A), T31(B), U9(C)
Airbag ECU Assembly
PUR+
PUR–
PSR+
PSR–
GSW2
13 B
14 B
21 B
22 B
14 A
W
B
L
G
B
2 AT2
3 AT2
1 AT2
4 AT2
24 4A
41 4A
W
B
L
G
2
1
2
1
PLR+
PLR–
PSR+
PSR–
A10
Pop Up Hood Lifter
Assembly RH
A9
Pedestrian Protection
Sensor RH
B
14 D
ABFS
CA1H
CA1L
25 D
24 D
O142(D)
Hybrid Vehicle Control ECU
A72(A)
ECM
CANH
CANL
13 A
26 A
R
B
7 OA2
20 OA2
B (LHD)
BE (LHD)
R
B
15
5
3
13
17
7
1
11
O105
No. 2 CAN
Junction
Connector
B
(RHD)
SB
(RHD)
SB (LHD)
B (LHD)
B
L
B(LHD)
SB(LHD)

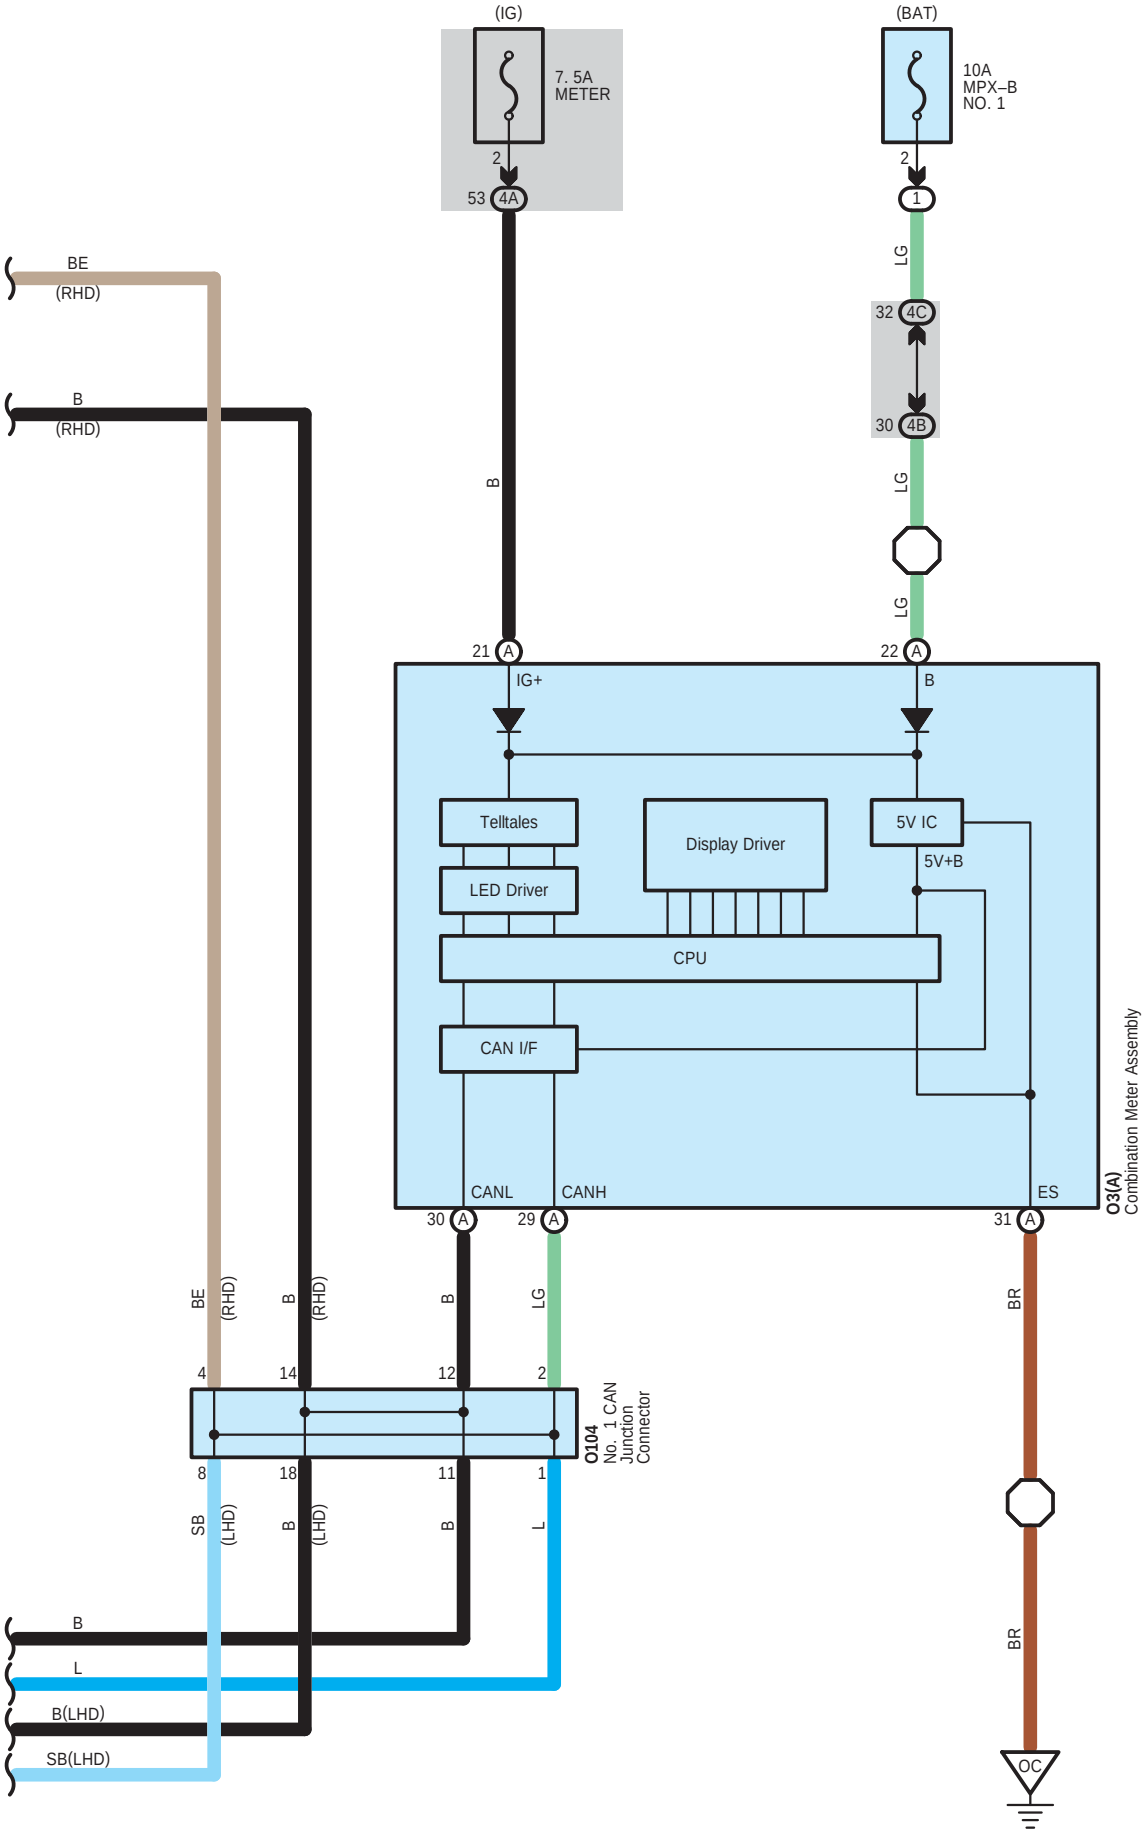
(IG)
7. 5A
METER
2
53 4A
(BAT)
10A
MPX–B
NO. 1
2
1
LG
32 4C
30 4B
LG
LG
BE
(RHD)
B
(RHD)
B
21 A
IG+
22 A
B
Telltales
Display Driver
5V IC
5V+B
LED Driver
CPU
CAN I/F
CANL
CANH
ES
30 A
29 A
31 A
O3(A)
Combination Meter Assembly
BE
(RHD)
B
(RHD)
B
LG
BR
4
14
12
2
O104
No. 1 CAN
Junction
Connector
8
18
11
1
SB
(LHD)
B
(LHD)
B
L
BR
B
L
B(LHD)
SB(LHD)
OC

A8
Yellow

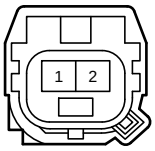

90980-12490

A9
Yellow

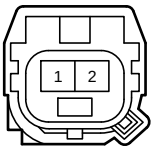

90980-12490

A10
Yellow

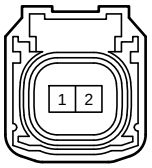

90980-12698

A39
Yellow

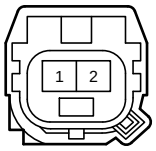

90980-12490

A40
Yellow

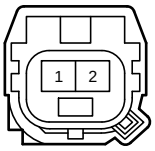

90980-12490

A41
Yellow

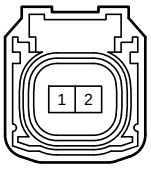

90980-12698

A72
Black

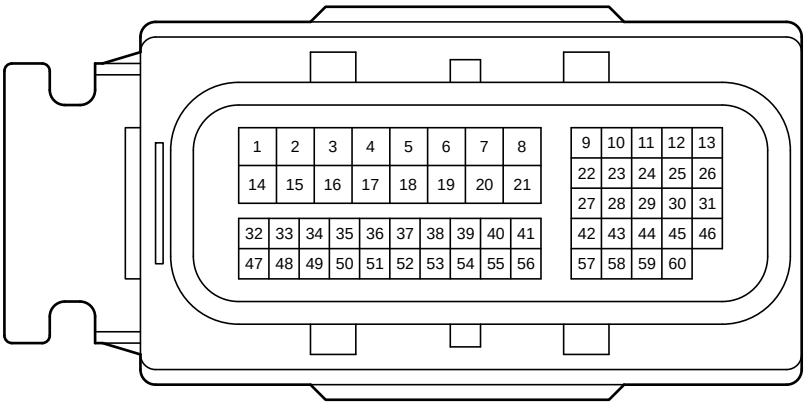

90980-12931

N1
Black



90980-12219

N2
Orange



90980-12224

O3
Black

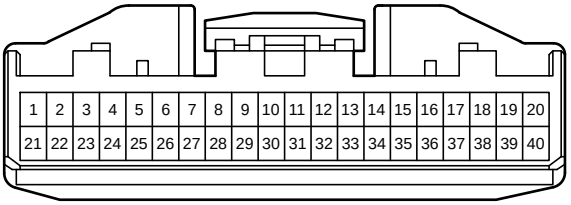

90980-12557

O30
Yellow

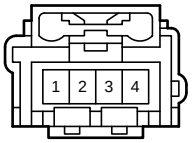

90980-12160

O47
Black



90980-12452

O50
Yellow

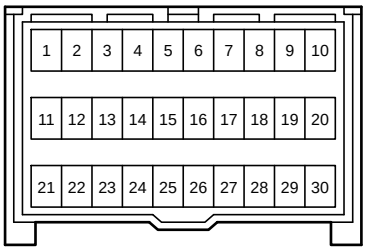

90980-12391

O52
Black



90980-12452

O64
Black

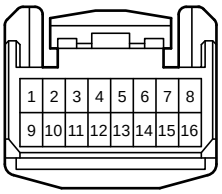

90980-12553

O93
Black



90980-12063

O104
White

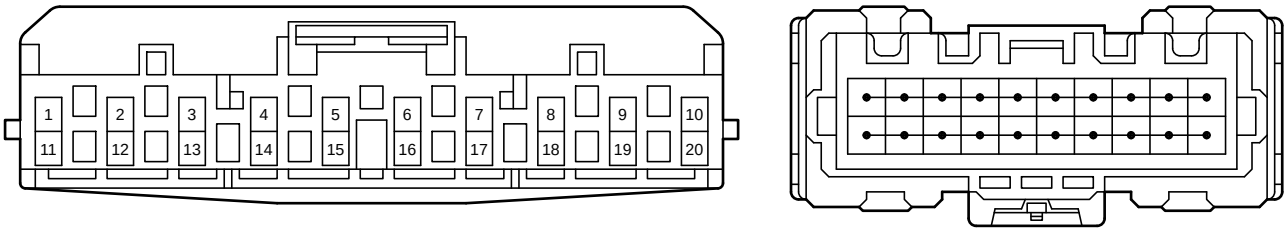

90980-12A58

O105
White

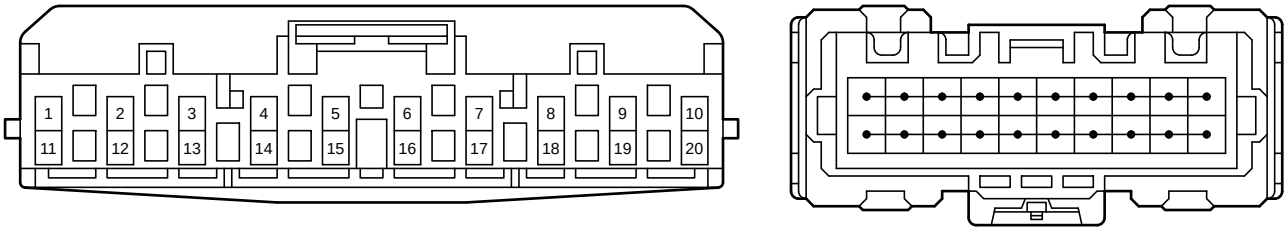

90980-12A58

O142
Gray

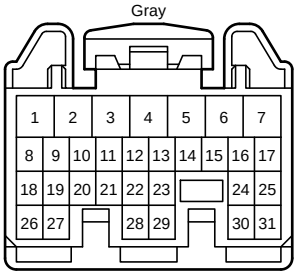

90980-12431

R11
Yellow

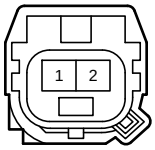

90980-12490

S11
Yellow

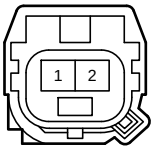

90980-12490

T4
Gray

90980-10942

T7
Yellow

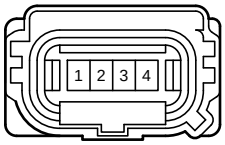

90980-12699

T8
Black



90980-12452

T10
Yellow

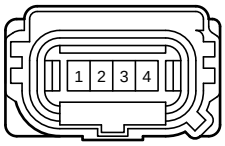

90980-12699

T11
Black



90980-12452

T12
Black

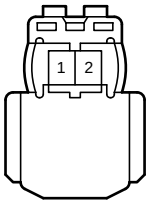

90980-12575

T31
Yellow

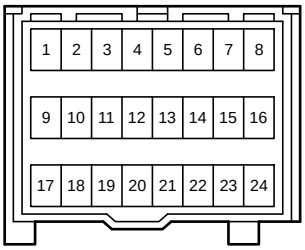

90980-12392

U9
Yellow

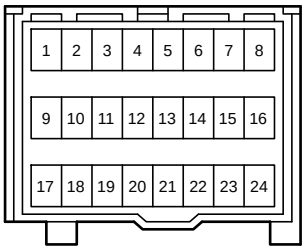

90980-12390

U12
Gray

90980-10942

U14
Yellow

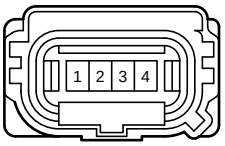

90980-12699

U15
Black



90980-12452

U17
Yellow

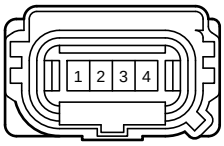

90980-12699

U18
Black



90980-12452

U19
Black

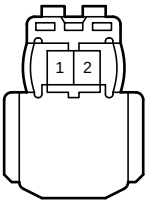

90980-12575

h1
Black



90980-12452

i1
Black



90980-12452

z2
Black



90980-12219

z3
Orange



90980-12224

4A
White

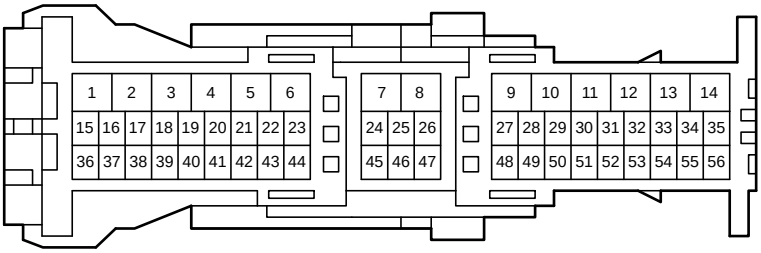

90980-12943

4B
White

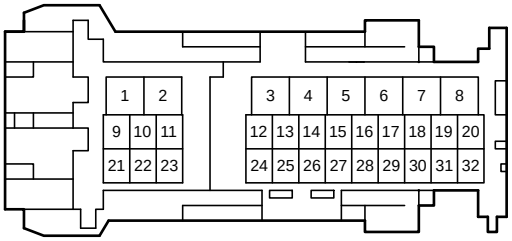

90980-12A48

4C
White

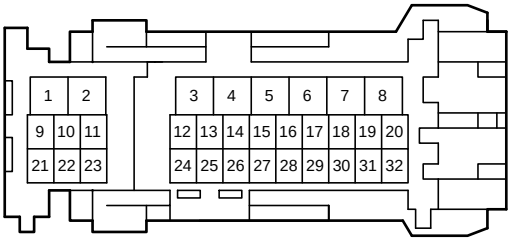

90980-12A47

AT2
Yellow

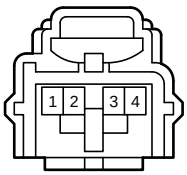

90980-12017

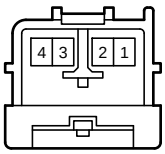

90980-12016

AU4
Yellow

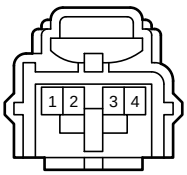

90980-12017

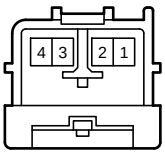

90980-12016

OA2
White

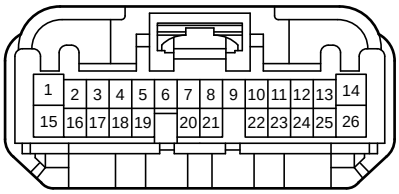

82824-24090

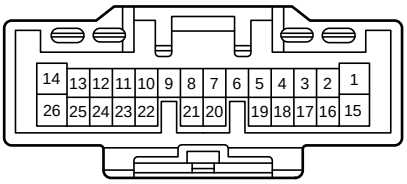

82824-24080

OA4
Yellow

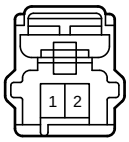

90980-11890



90980-11889

OA7
Gray Yellow

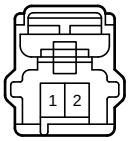

90980-11890



90980-11889

ON1
Yellow

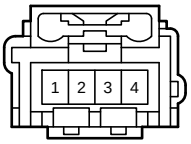

90980-12160

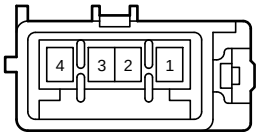

90980-12159

RT1
Yellow

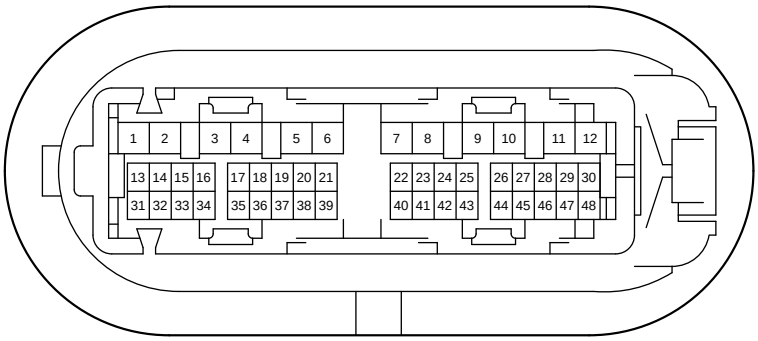

90980-12A09

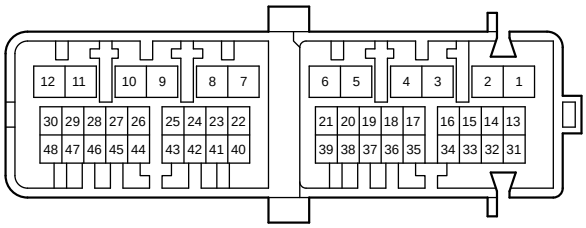

90980-12A06

SU1
Yellow

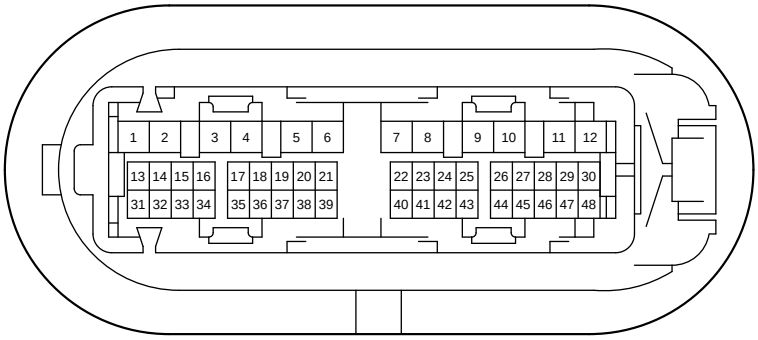

90980-12A09

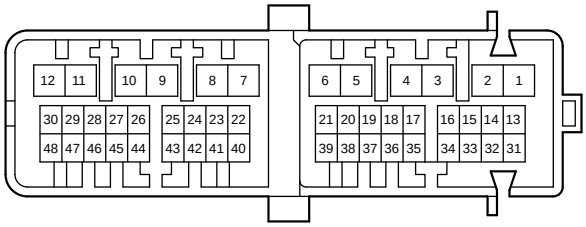

90980-12A06

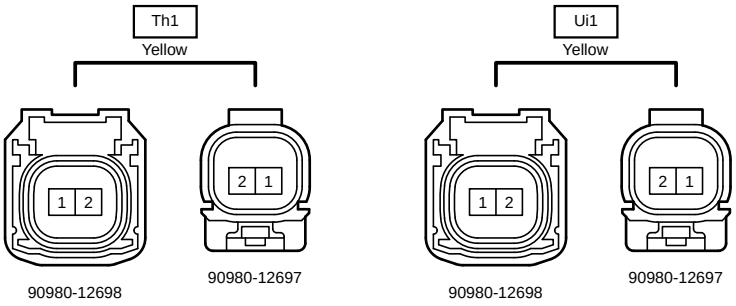
Th1
Yellow
1 2
2 1
90980-12698
90980-12697
Ui1
Yellow
1 2
2 1
90980-12698
90980-12697