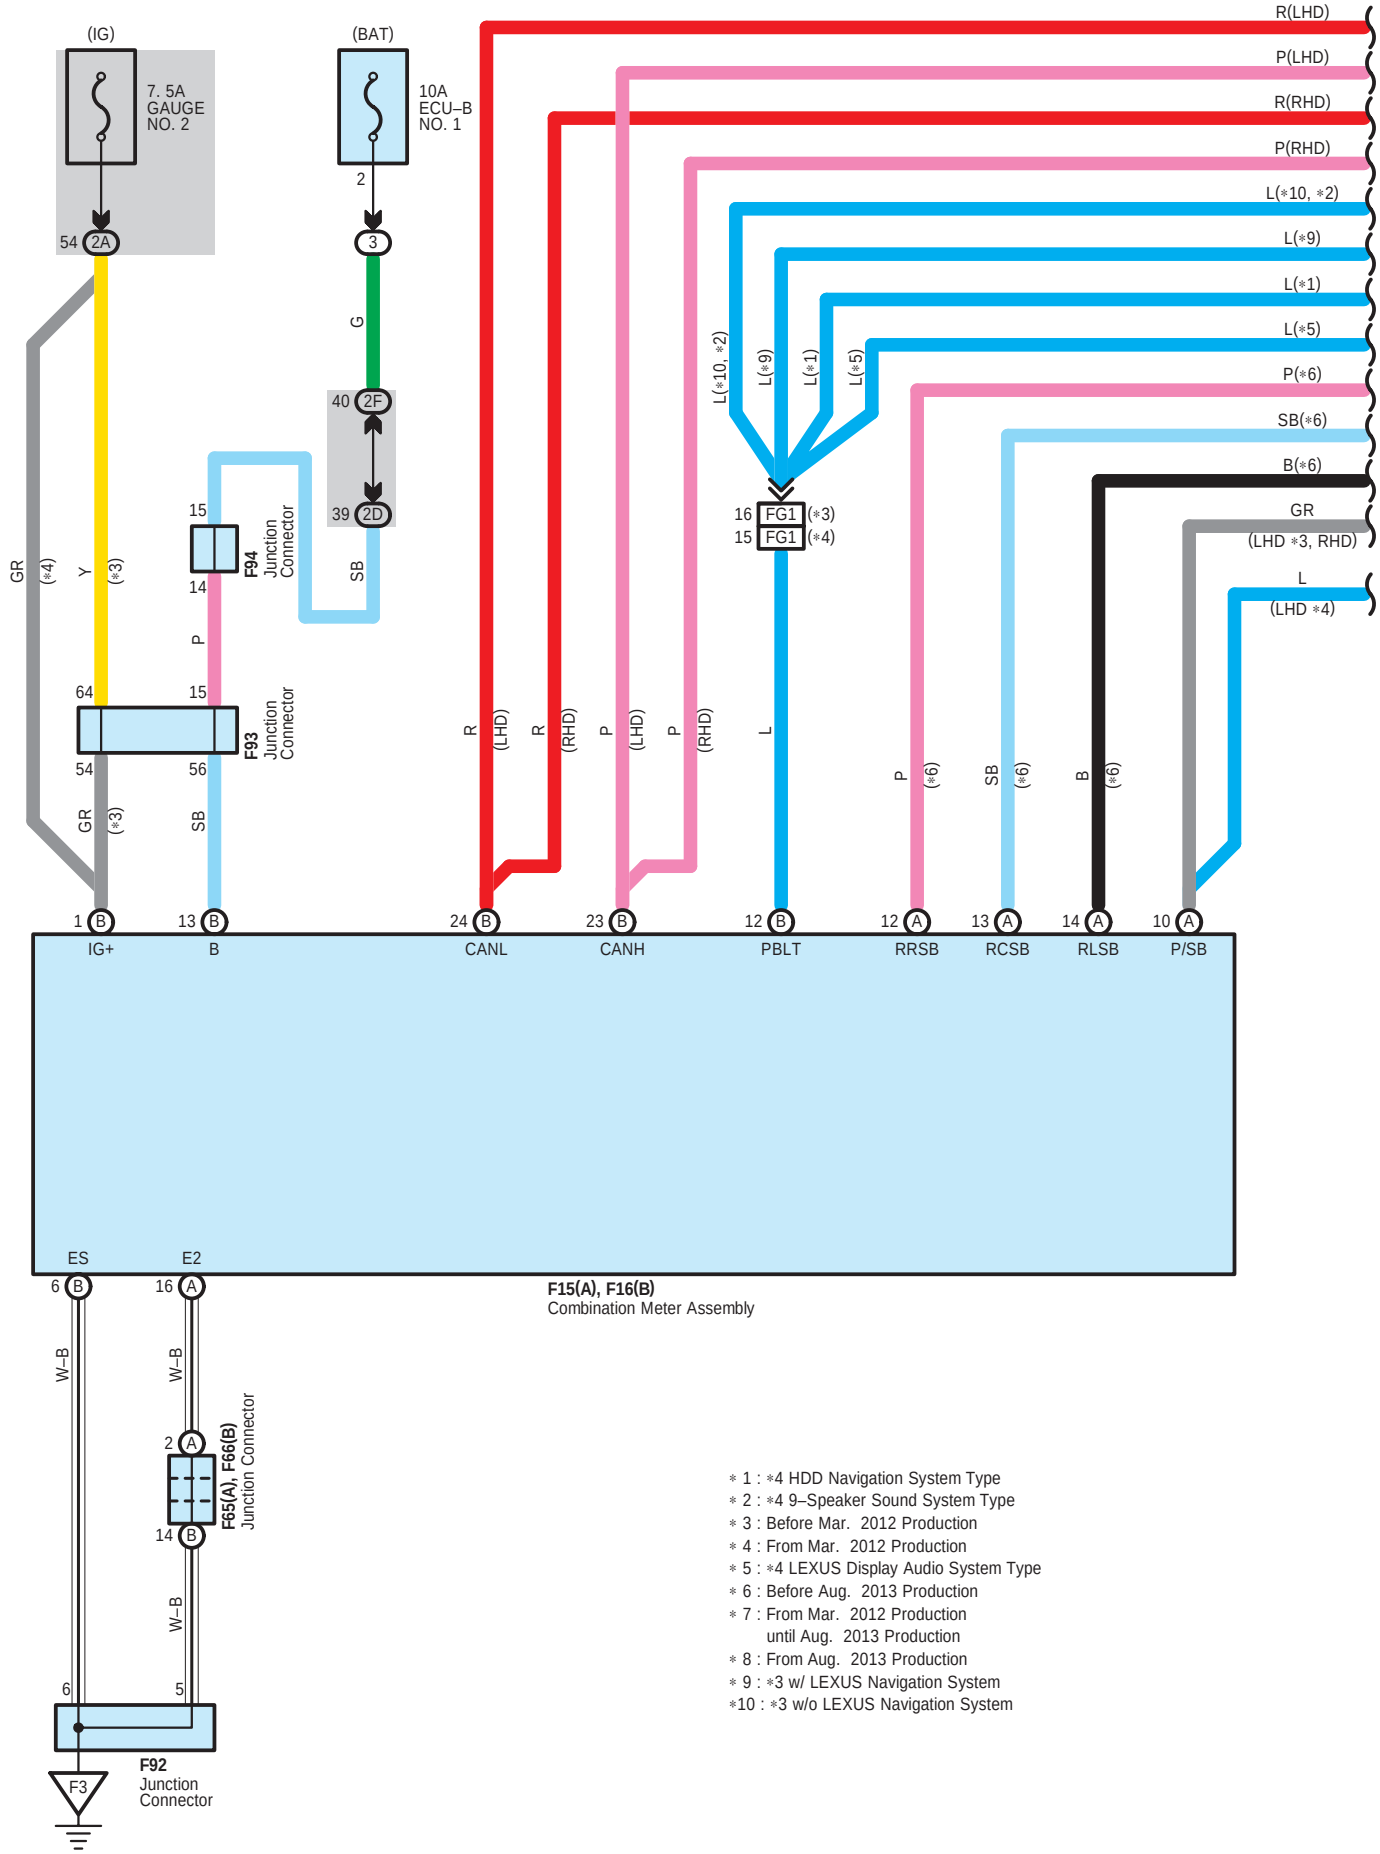

∗ 1 : ∗4 HDD Navigation System Type
∗ 2 : ∗4 9–Speaker Sound System Type
∗ 3 : Before Mar. 2012 Production
∗ 4 : From Mar. 2012 Production
∗ 5 : ∗4 LEXUS Display Audio System Type
∗ 6 : Before Aug. 2013 Production
∗ 7 : From Mar. 2012 Production
until Aug. 2013 Production
∗ 8 : From Aug. 2013 Production
∗ 9 : ∗3 w/ LEXUS Navigation System
∗10 : ∗3 w/o LEXUS Navigation System

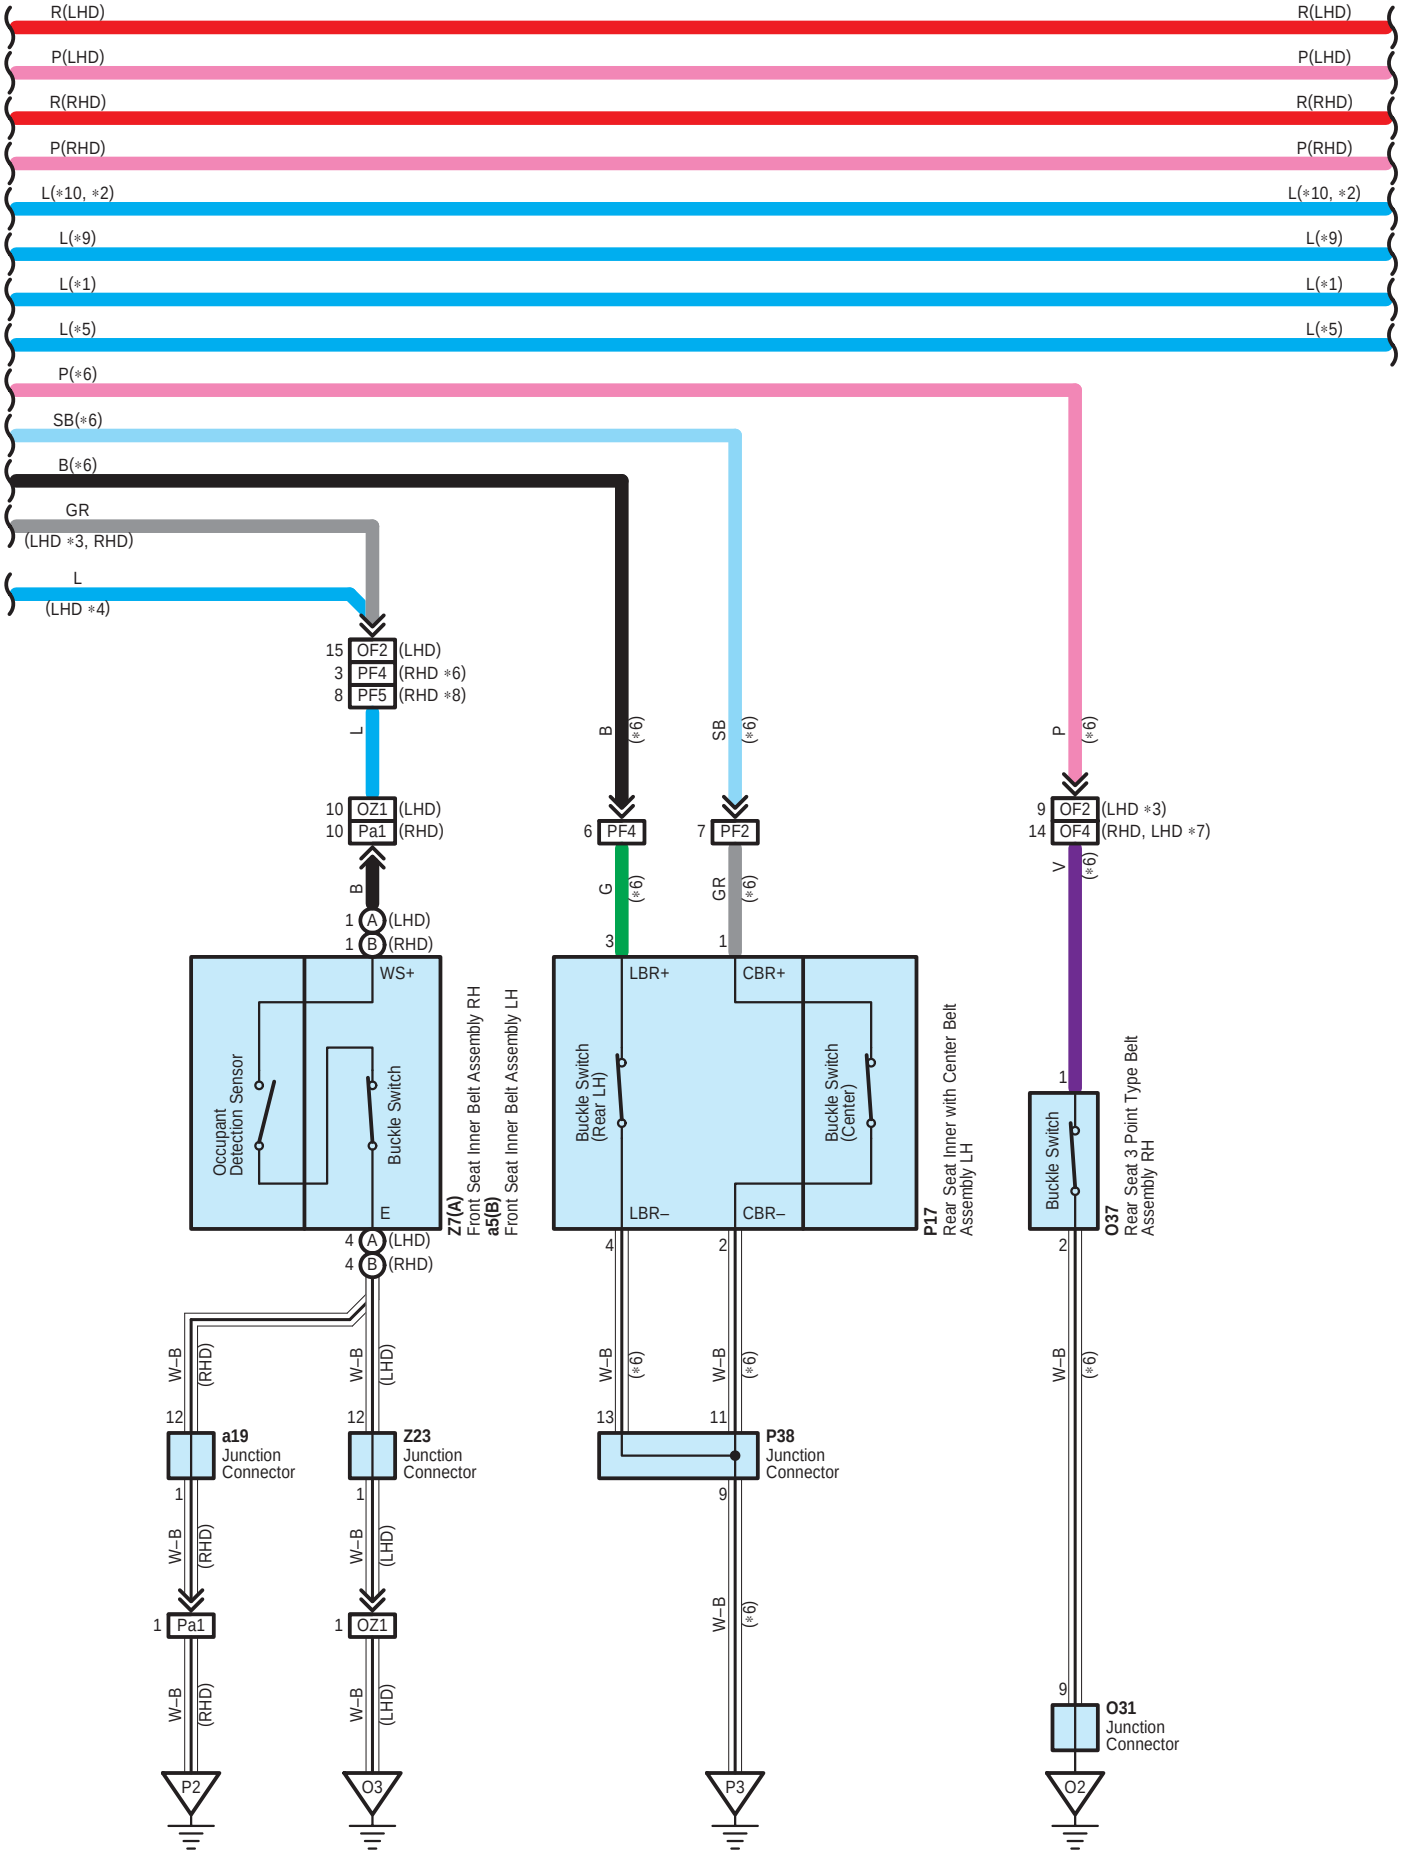
R(LHD)
P(LHD)
R(RHD)
P(RHD)
L(*10, *2)
L(*9)
L(*1)
L(*5)
P(*6)
SB(*6)
B(*6)
GR
(LHD *3, RHD)
L
(LHD *4)
15 OF2 (LHD)
3 PF4 (RHD *6)
8 PF5 (RHD *8)
10 OZ1 (LHD)
10 Pa1 (RHD)
6 PF4
7 PF2
9 OF2 (LHD *3)
14 OF4 (RHD, LHD *7)
1 A (LHD)
1 B (RHD)
WS+
Occupant Detection Sensor
Buckle Switch
E
Z7(A) Front Seat Inner Belt Assembly RH
a5(B) Front Seat Inner Belt Assembly LH
LBR+
CBR+
Buckle Switch (Rear LH)
Buckle Switch (Center)
LBR–
CBR–
P17 Rear Seat Inner with Center Belt Assembly LH
Buckle Switch
O37 Rear Seat 3 Point Type Belt Assembly RH
4 A (LHD)
4 B (RHD)
a19 Junction Connector
Z23 Junction Connector
P38 Junction Connector
O31 Junction Connector
Pa1
OZ1
P2
O3
P3
O2

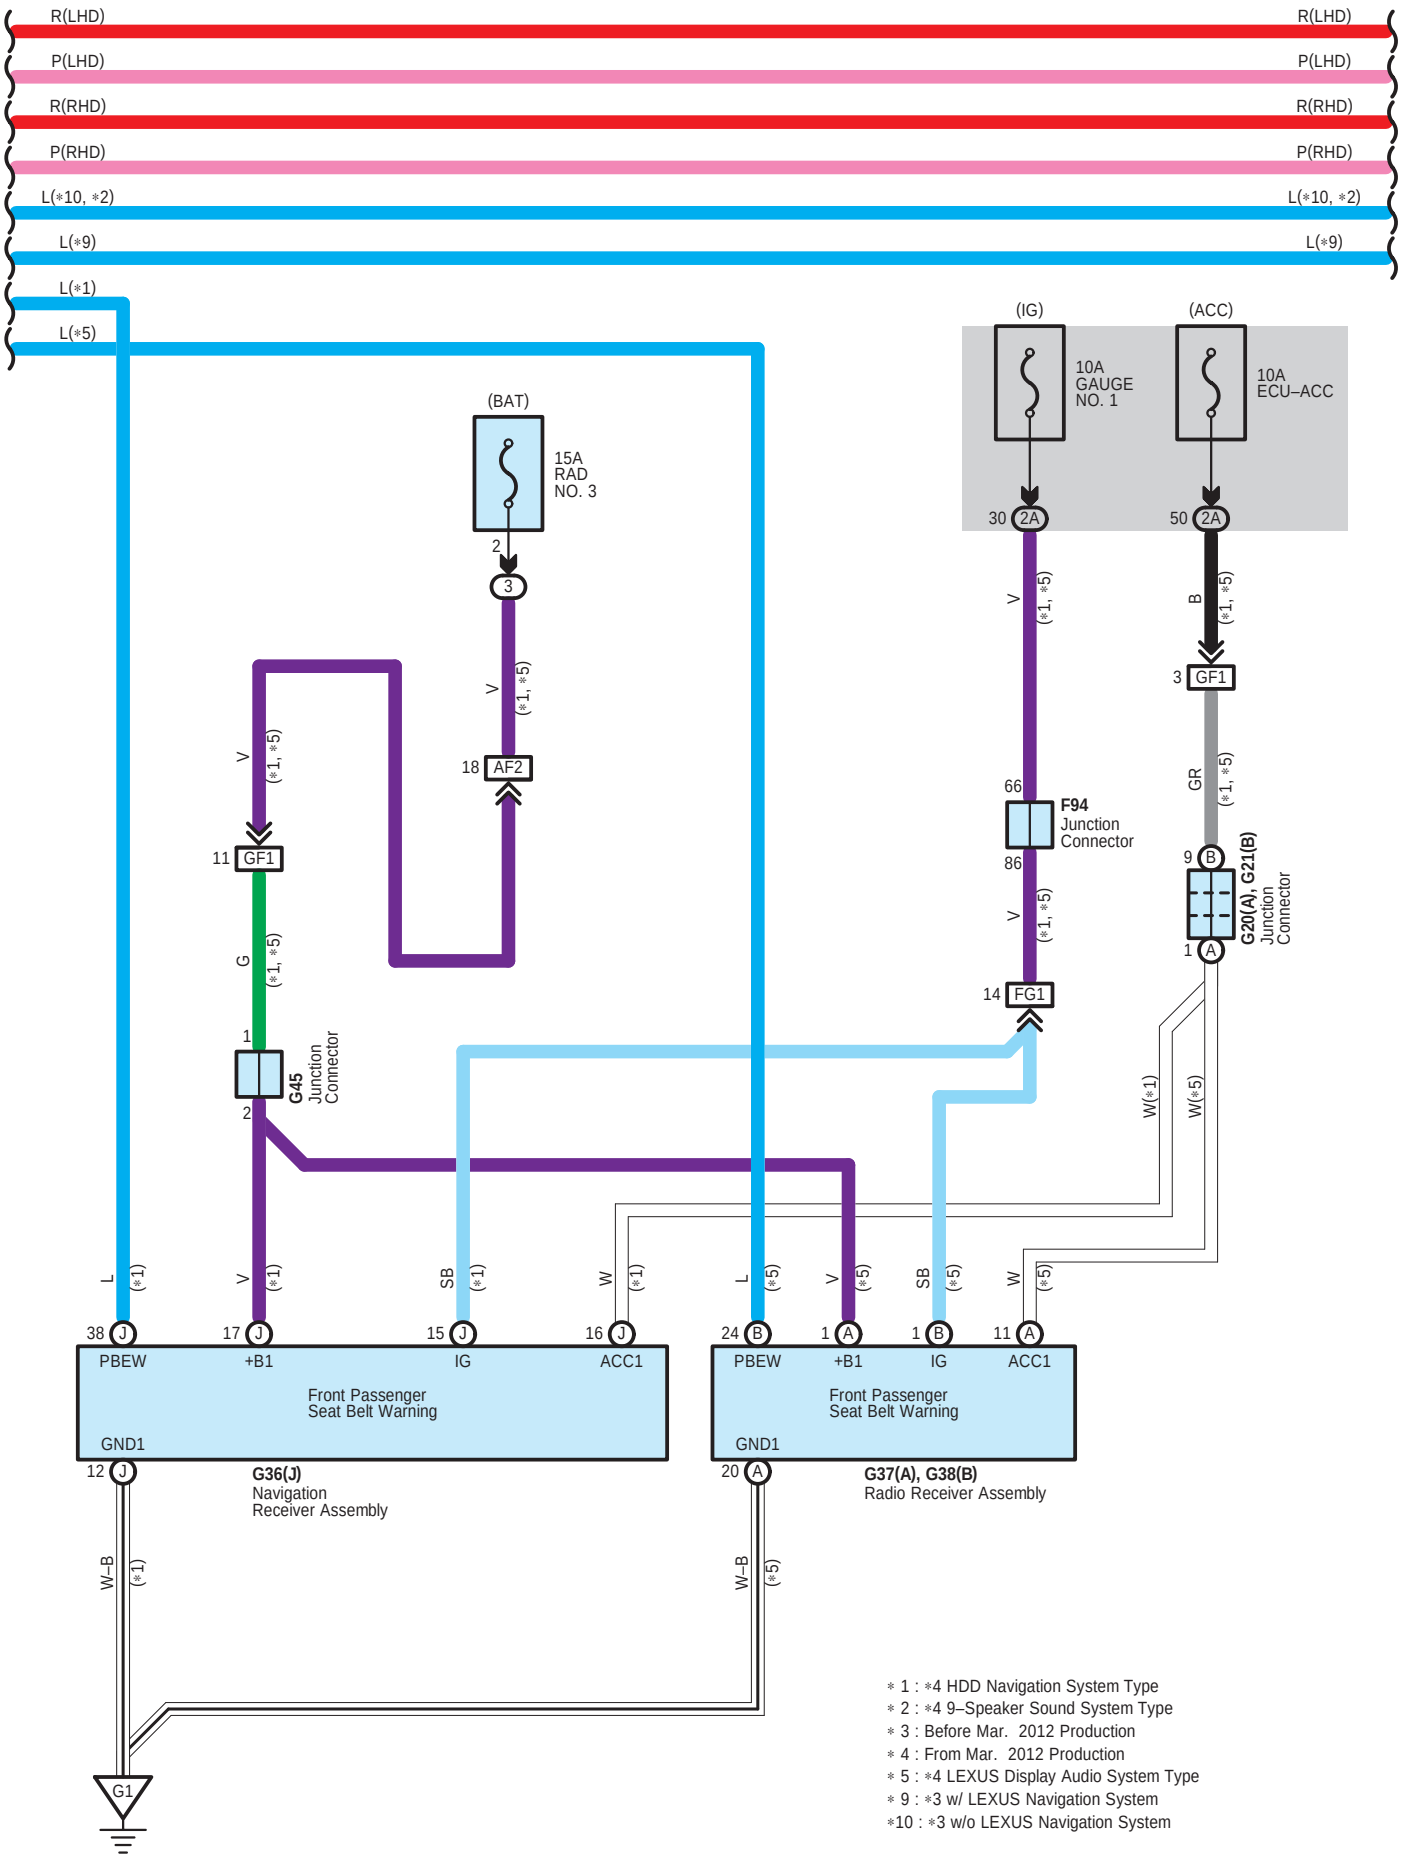

* 1 : *4 HDD Navigation System Type
* 2 : *4 9–Speaker Sound System Type
* 3 : Before Mar. 2012 Production
* 4 : From Mar. 2012 Production
* 5 : *4 LEXUS Display Audio System Type
* 9 : *3 w/ LEXUS Navigation System
*10 : *3 w/o LEXUS Navigation System

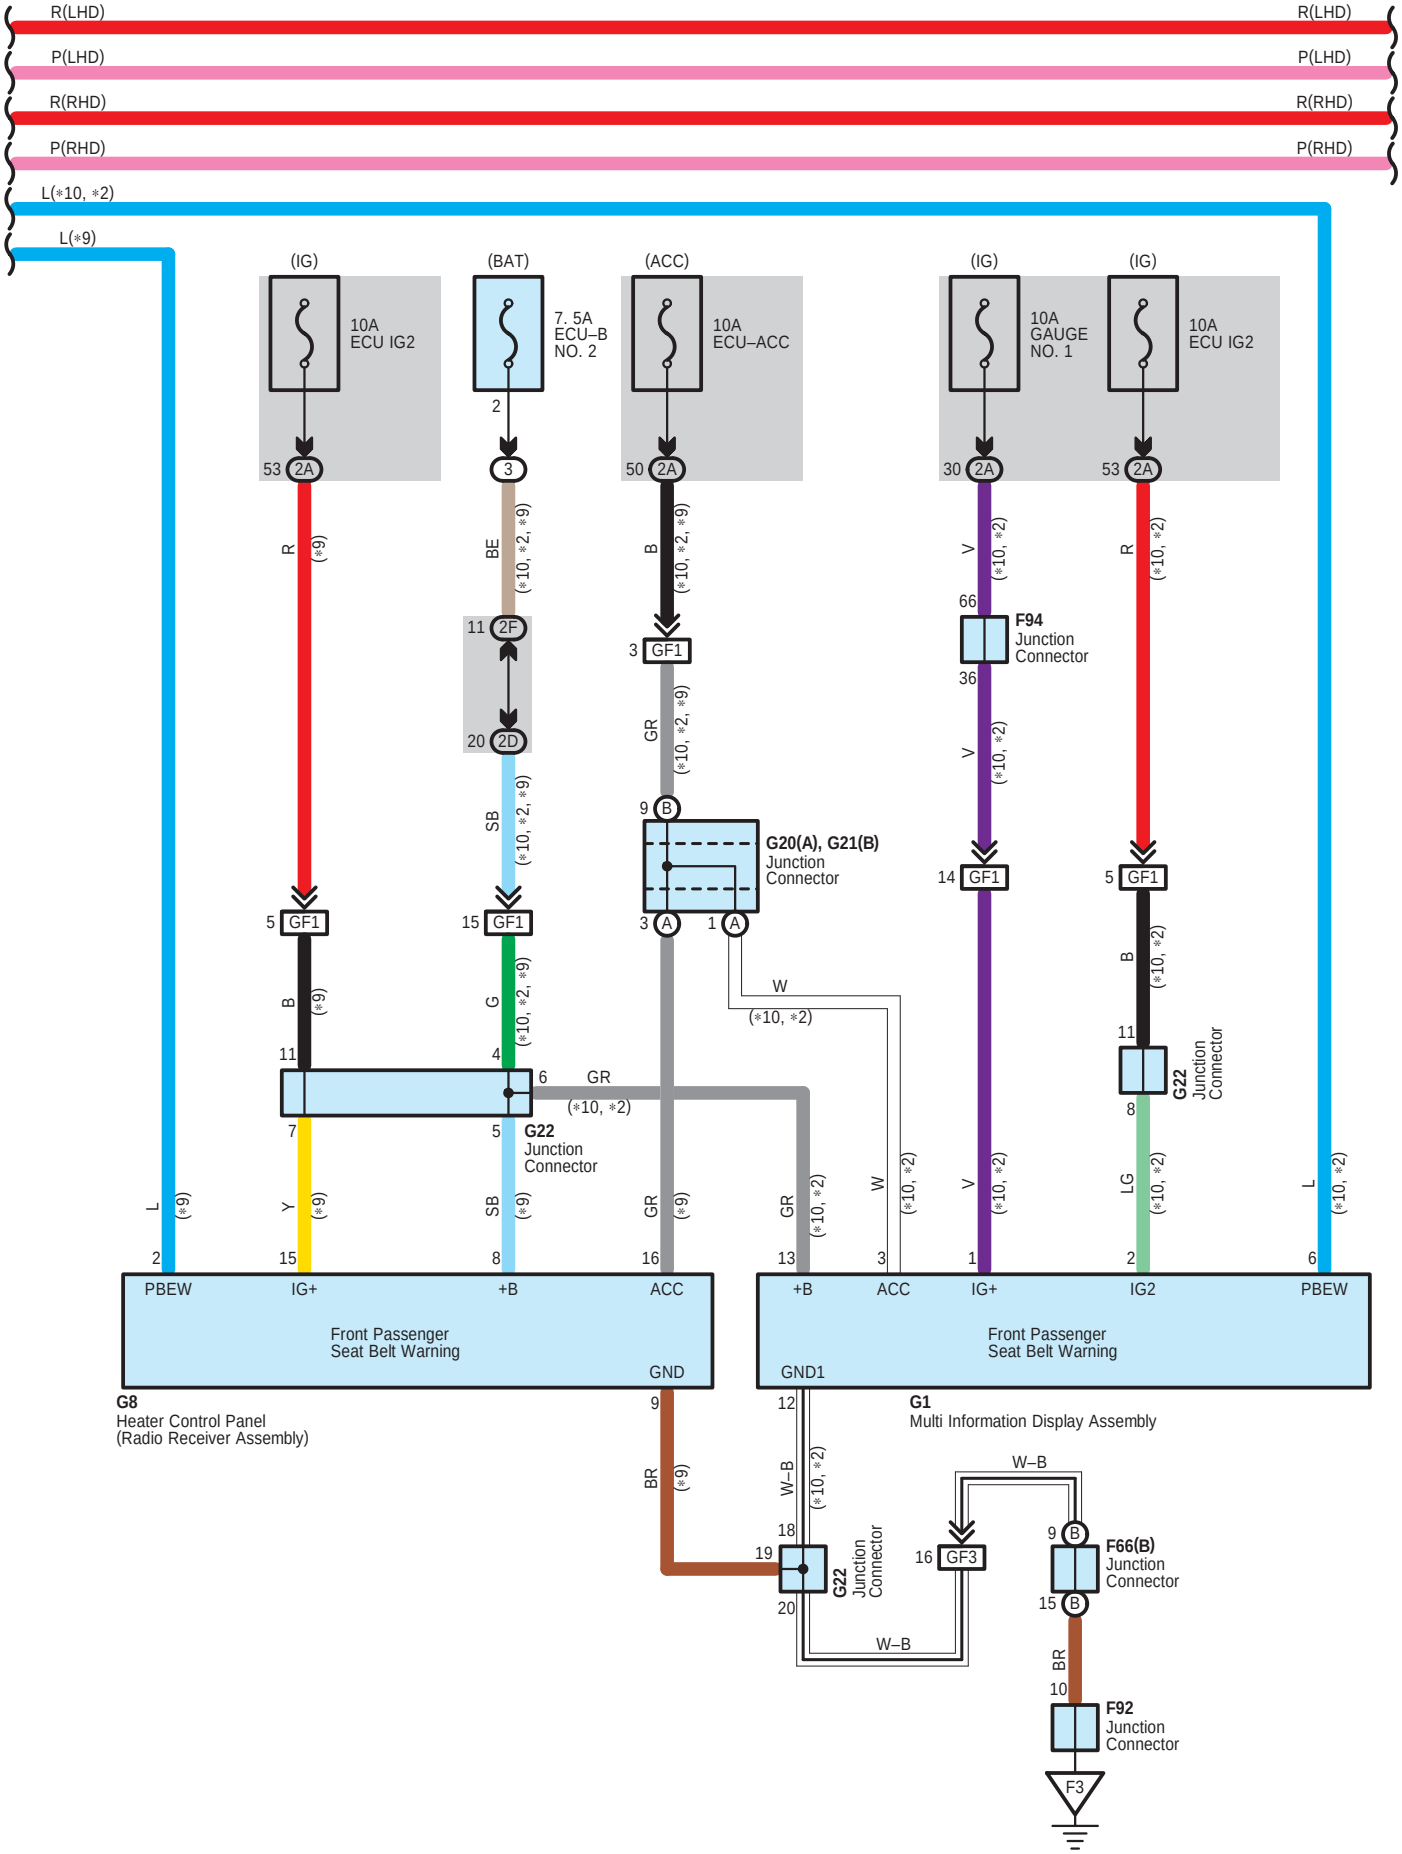
R(LHD)
P(LHD)
R(RHD)
P(RHD)
L(*10, *2)
L(*9)
(IG)
10A
ECU IG2
(BAT)
7. 5A
ECU–B
NO. 2
(ACC)
10A
ECU–ACC
(IG)
10A
GAUGE
NO. 1
(IG)
10A
ECU IG2
53 2A
2
3
50 2A
30 2A
53 2A
R (*9)
BE (*10, *2, *9)
B (*10, *2, *9)
V (*10, *2)
R (*10, *2)
11 2F
20 2D
3 GF1
66
F94
Junction
Connector
36
GR (*10, *2, *9)
V (*10, *2)
SB (*10, *2, *9)
9 B
G20(A), G21(B)
Junction
Connector
14 GF1
5 GF1
3 A
1 A
5 GF1
15 GF1
B (*9)
G (*10, *2, *9)
W
(*10, *2)
B (*10, *2)
11
4
6
GR
(*10, *2)
11
G22
Junction
Connector
8
7
5
G22
Junction
Connector
L (*9)
Y (*9)
SB (*9)
GR (*9)
GR (*10, *2)
W (*10, *2)
V (*10, *2)
LG (*10, *2)
L (*10, *2)
2
15
8
16
13
3
1
2
6
PBEW
IG+
+B
ACC
Front Passenger
Seat Belt Warning
GND
+B
ACC
IG+
IG2
PBEW
Front Passenger
Seat Belt Warning
GND1
G8
Heater Control Panel
(Radio Receiver Assembly)
9
12
G1
Multi Information Display Assembly
BR (*9)
W–B (*10, *2)
W–B
18
19
G22
Junction
Connector
20
16 GF3
9 B
F66(B)
Junction
Connector
15 B
W–B
BR
10
F92
Junction
Connector
F3

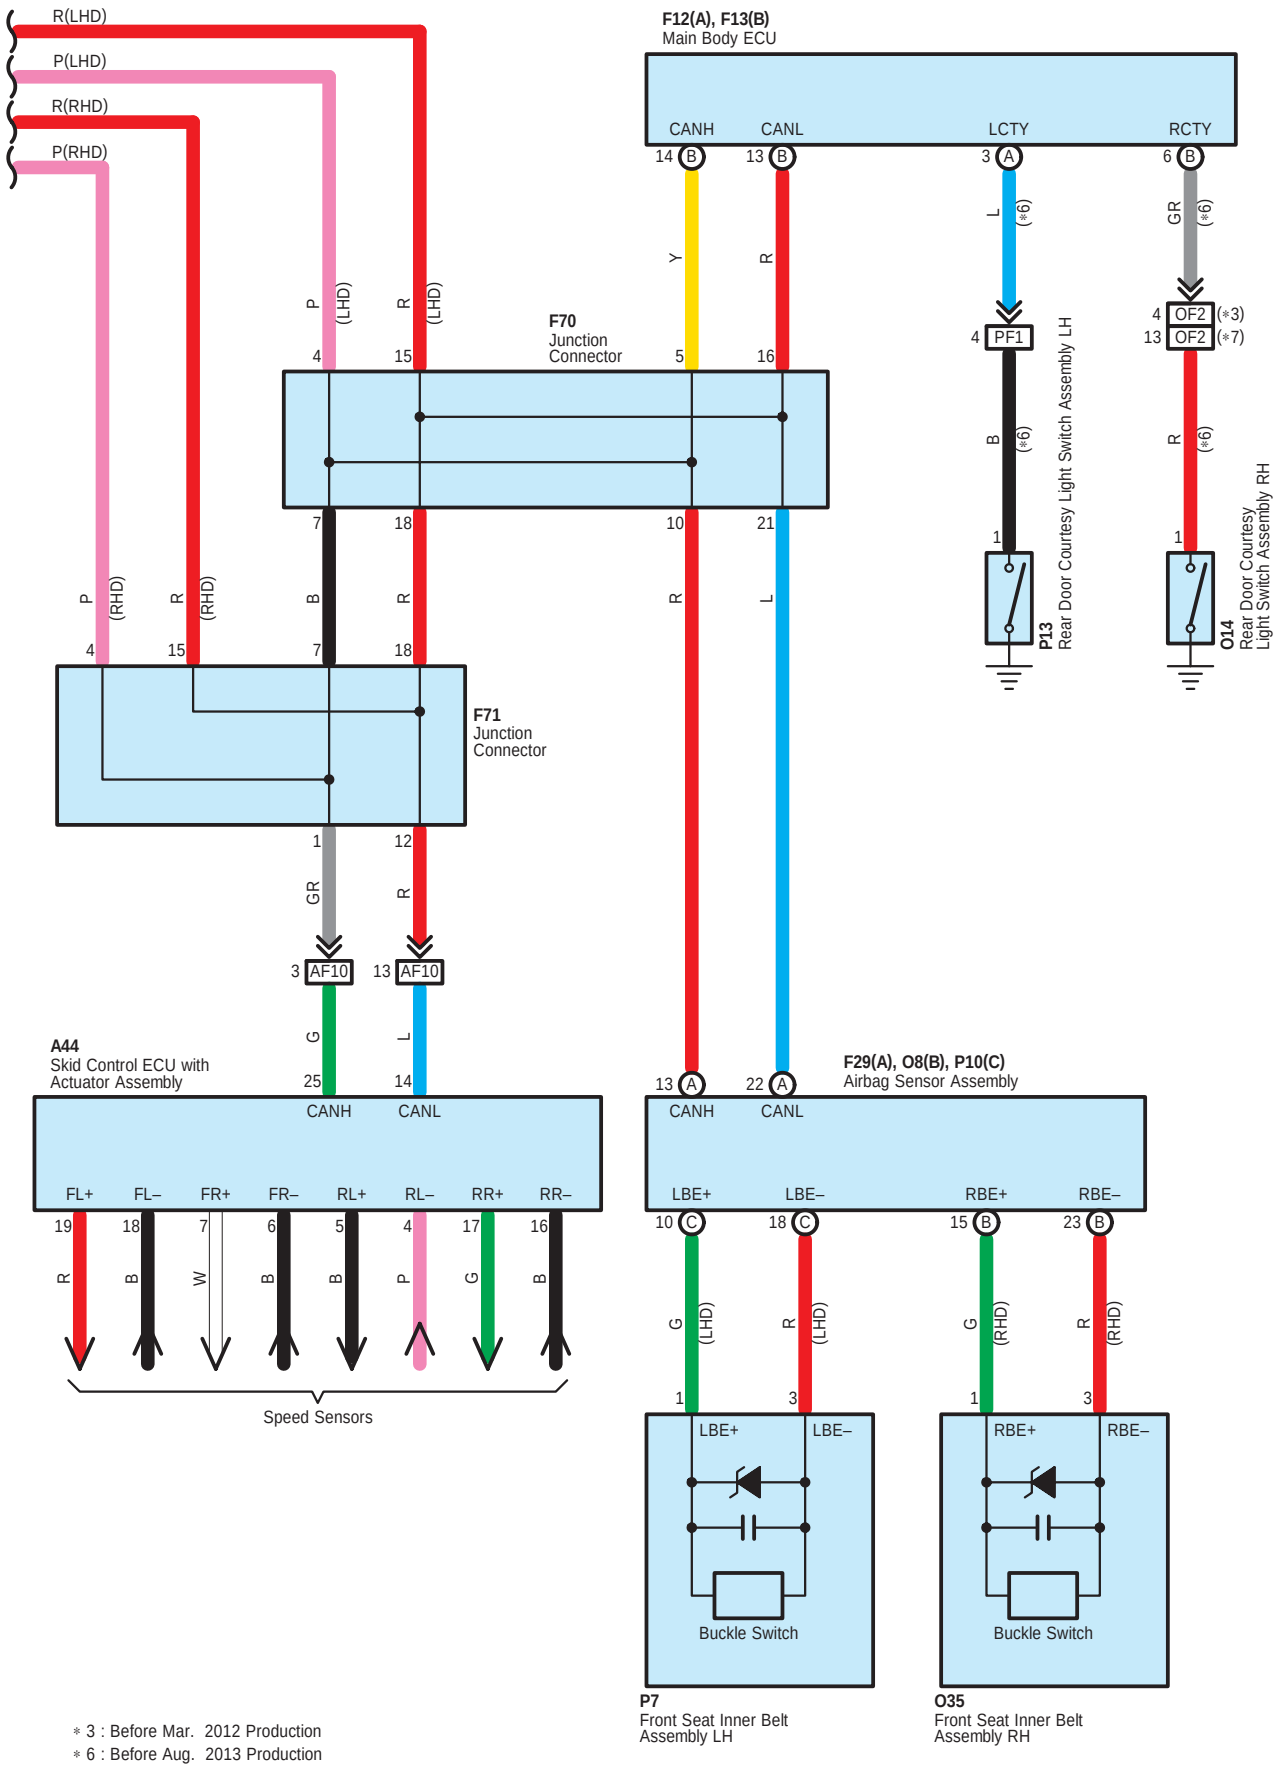

∗ 3 : Before Mar. 2012 Production
∗ 6 : Before Aug. 2013 Production
∗ 7 : From Mar. 2012 Production until Aug. 2013 Production

A 44
Black

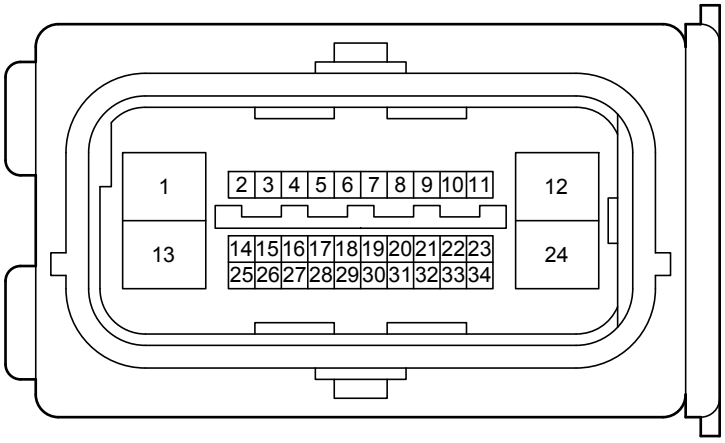

F 12
White

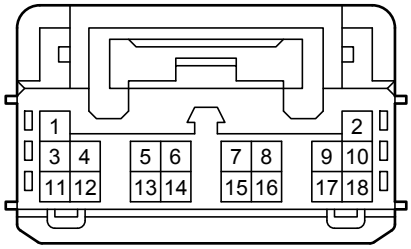

F 13
Black

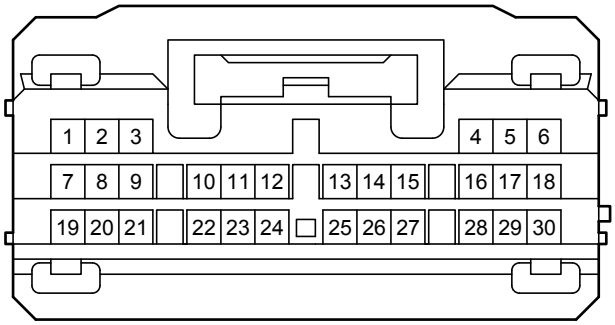

F 15
Black

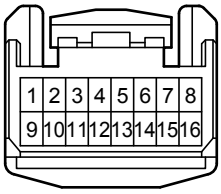

F 16
Black

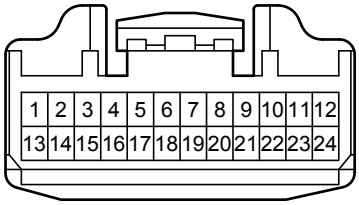

F 29
Yellow

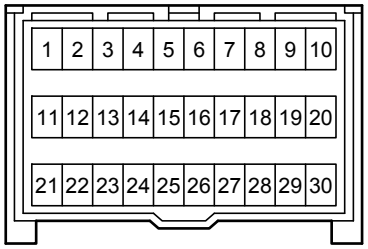

F 65
White

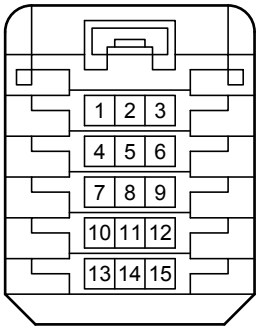

F 66
White

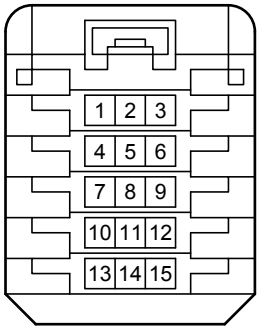

F 70
Blue

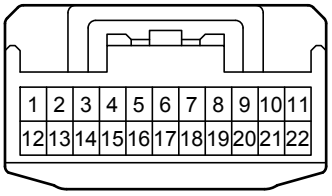

F 71
Blue

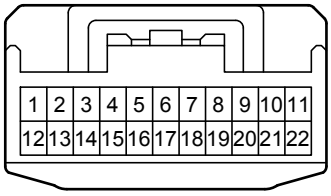

F 92
White

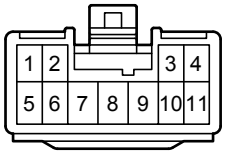

F 93
White

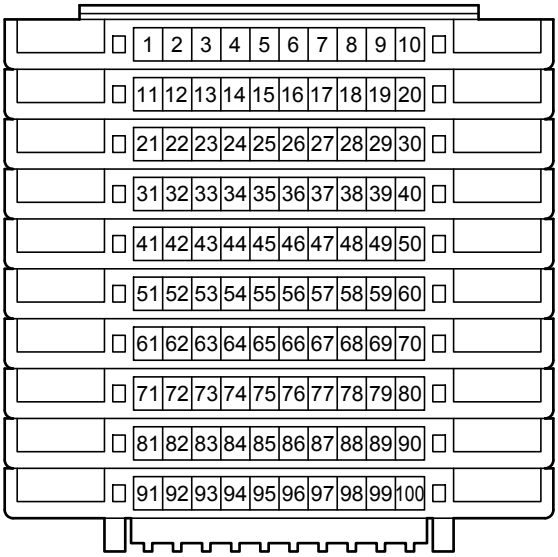

F 94
White

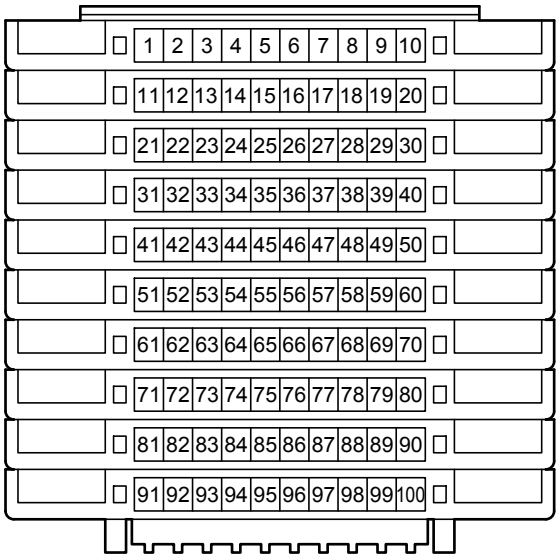

G 1
White

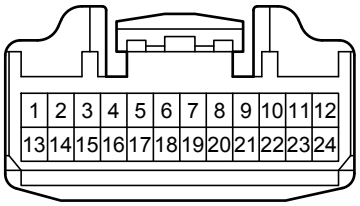

G 8
White

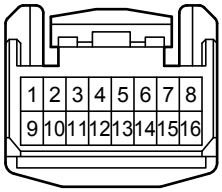

G 20
White

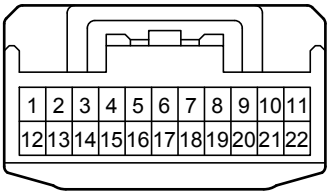

G 21
White

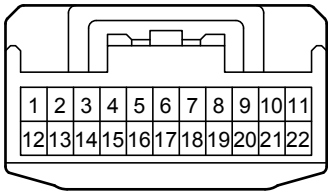

G 22
White

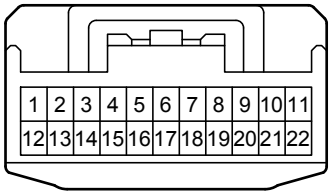

G 36
White

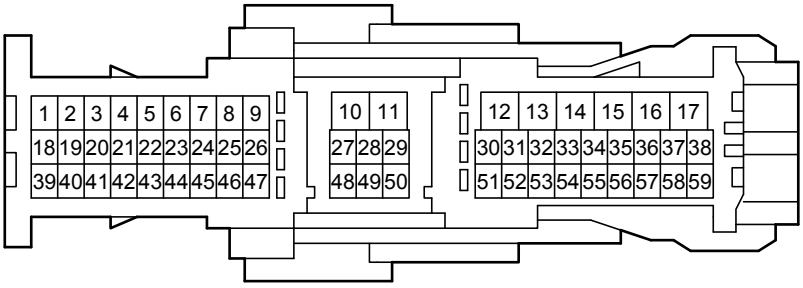

G 37
White

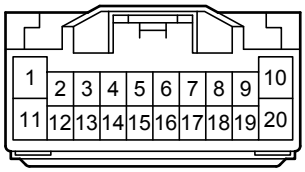

G 38
White

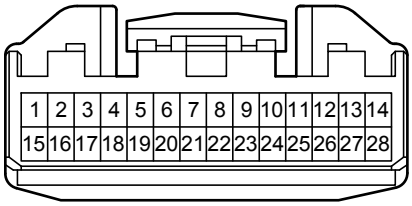

G 45
White



O 8
Yellow

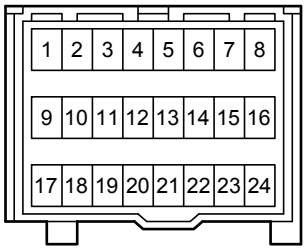

O 14
White

O 31
White

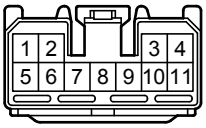

O 35
Black

O 37
White



P 7
Black

P 10
Yellow

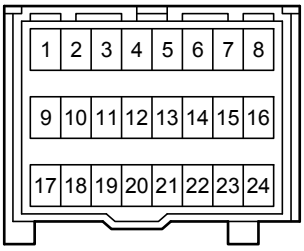

P 13
White

P 17
Black

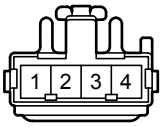

P 38
Black

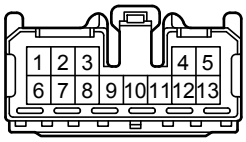

Z 7
White

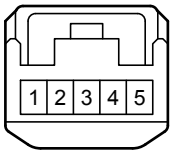

Z 23
Blue



a 5
White

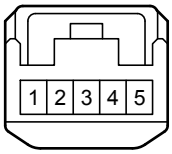

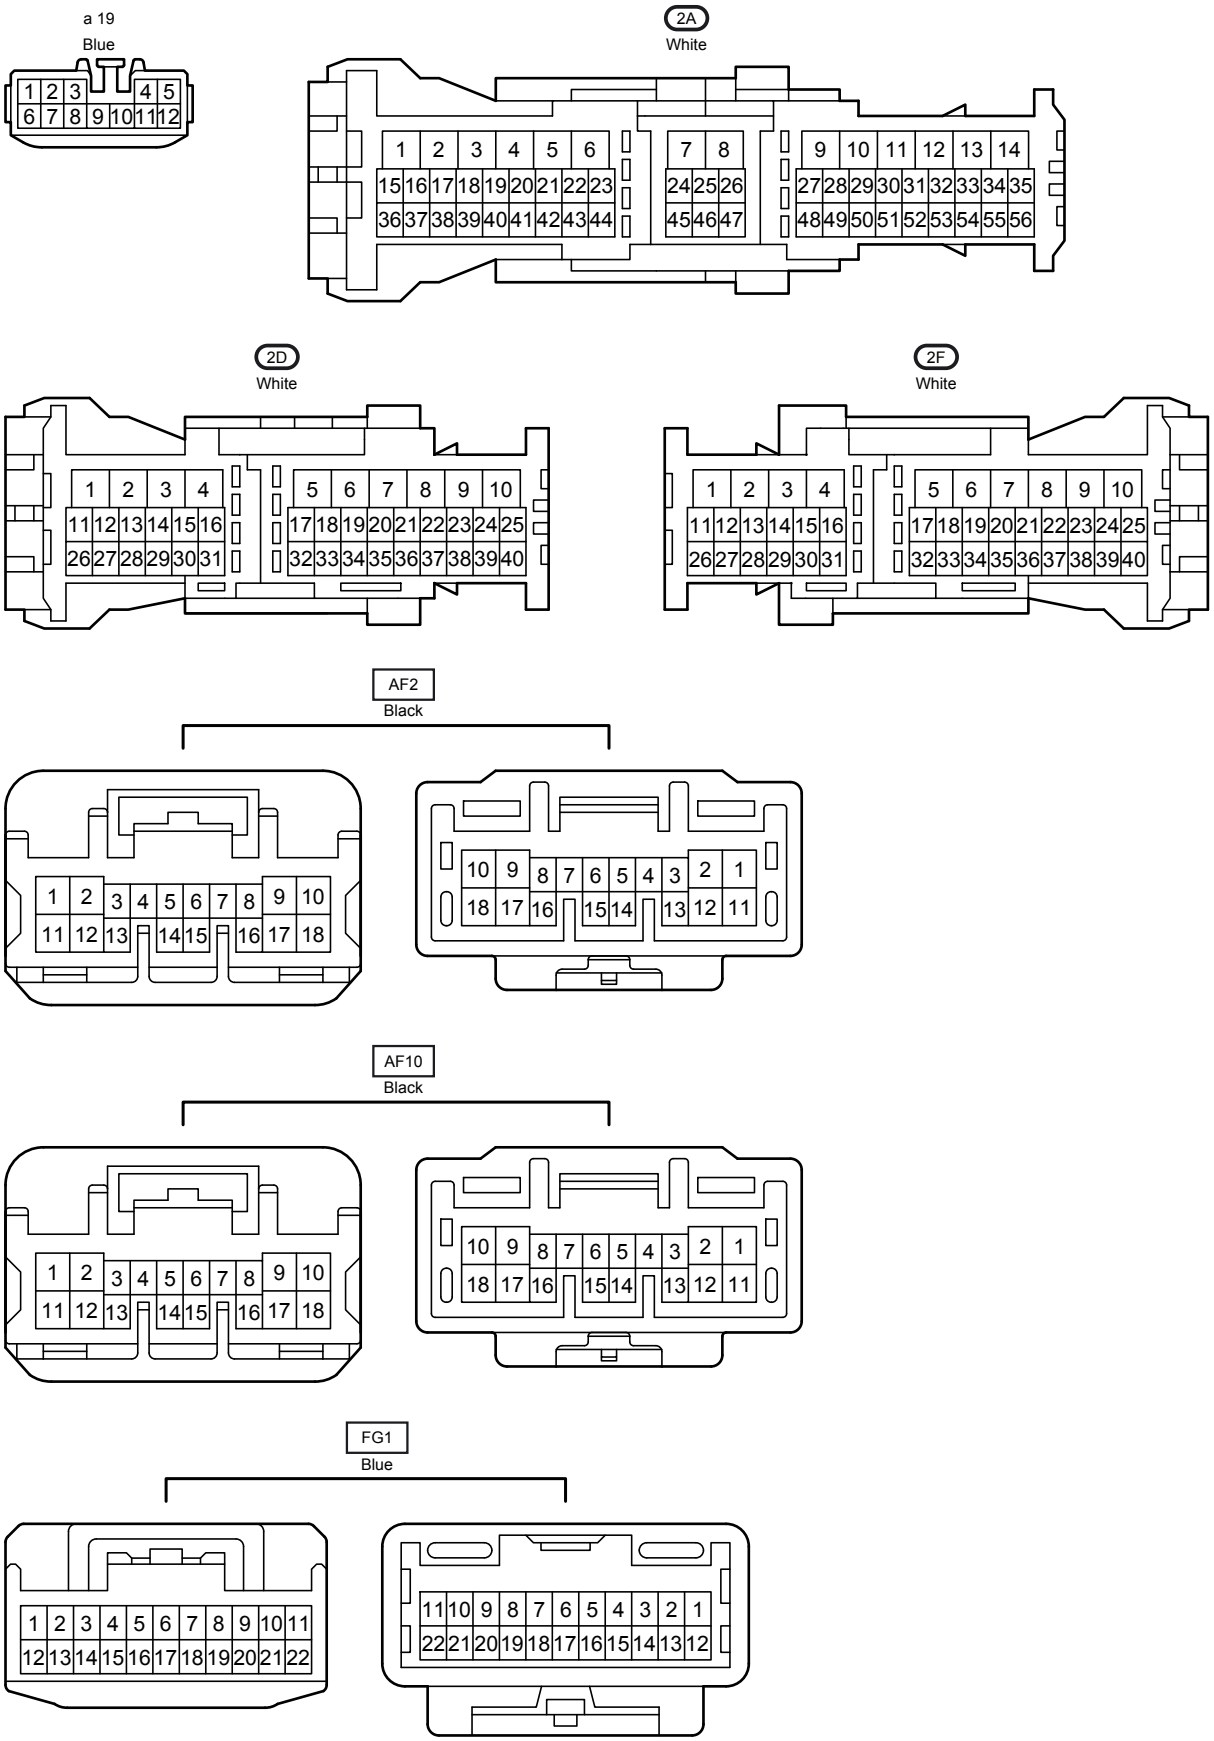
a 19
Blue
2A
White
2D
White
2F
White
AF2
Black
AF10
Black
FG1
Blue

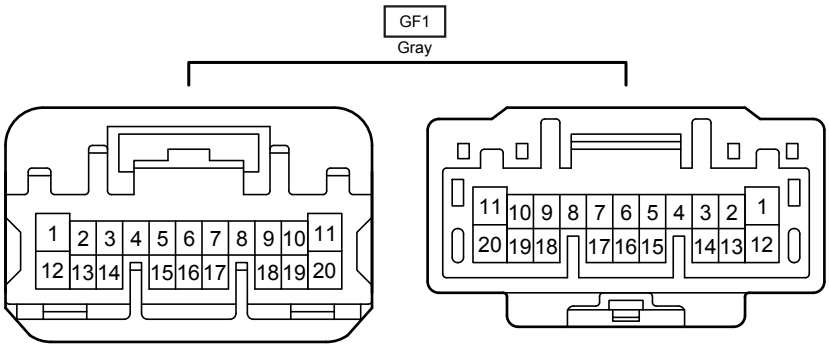
GF1
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

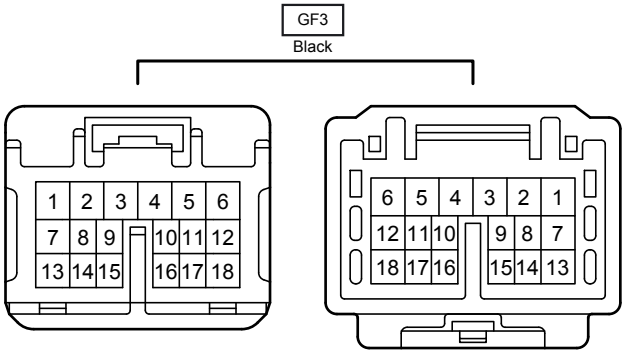
GF3
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

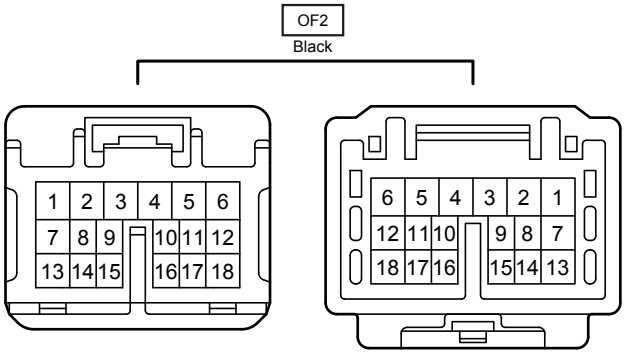
OF2
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

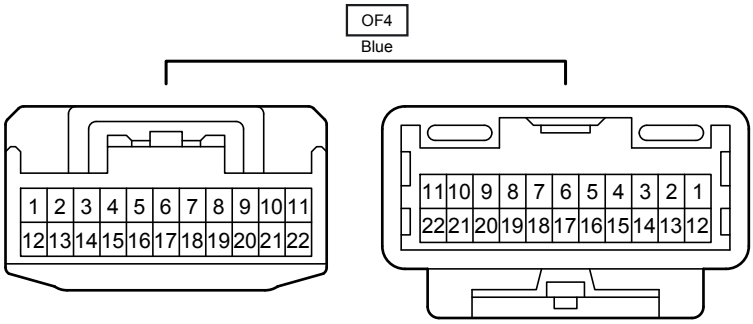
OF4
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

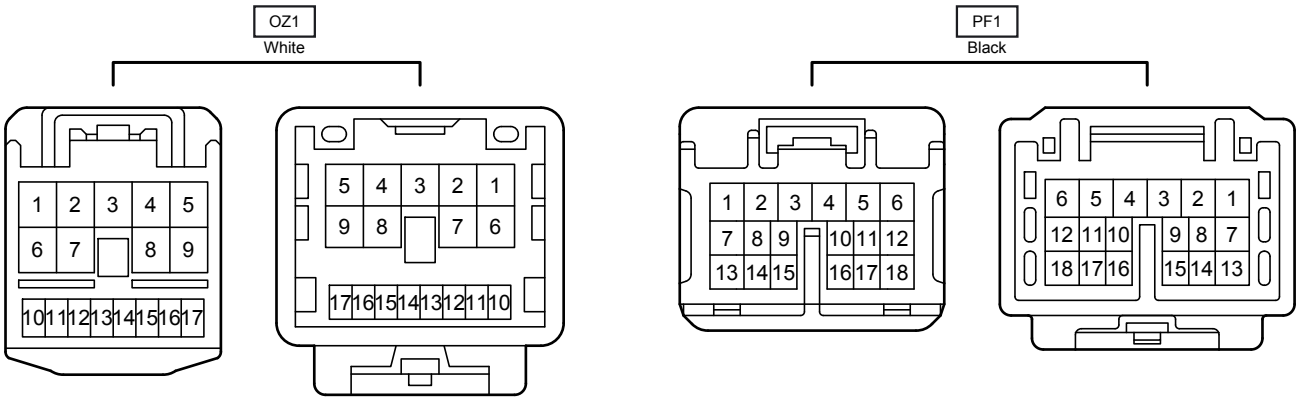
OZ1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
PF1
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

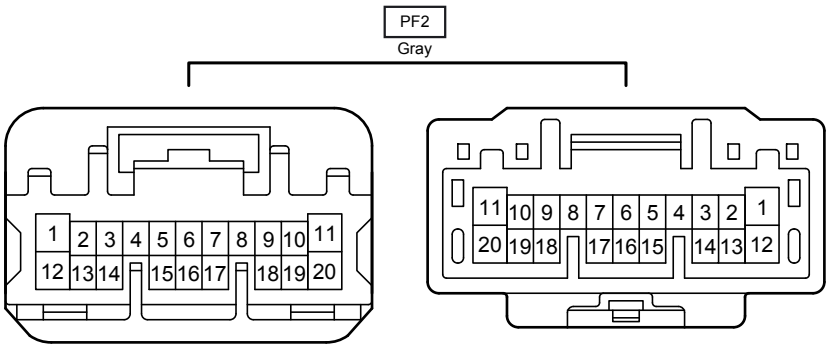
PF2
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

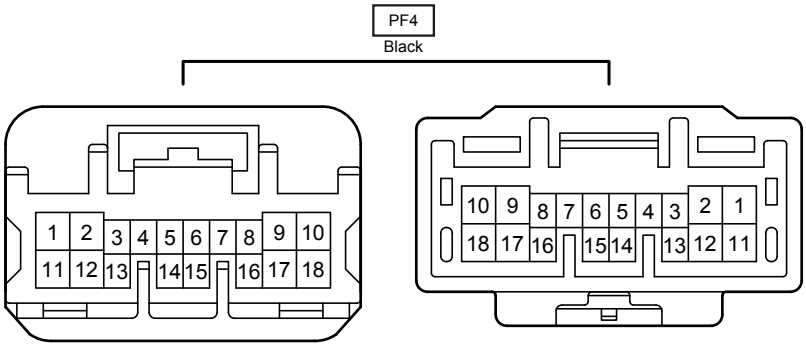
PF4
Black
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

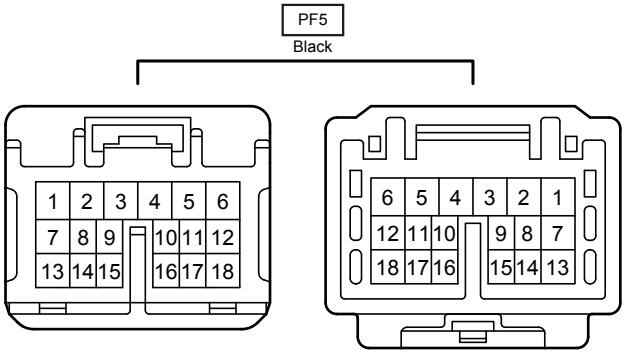
PF5
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

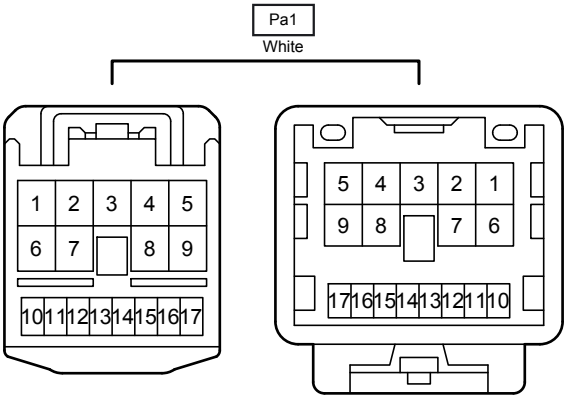
Pa1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10