31 RX 450h

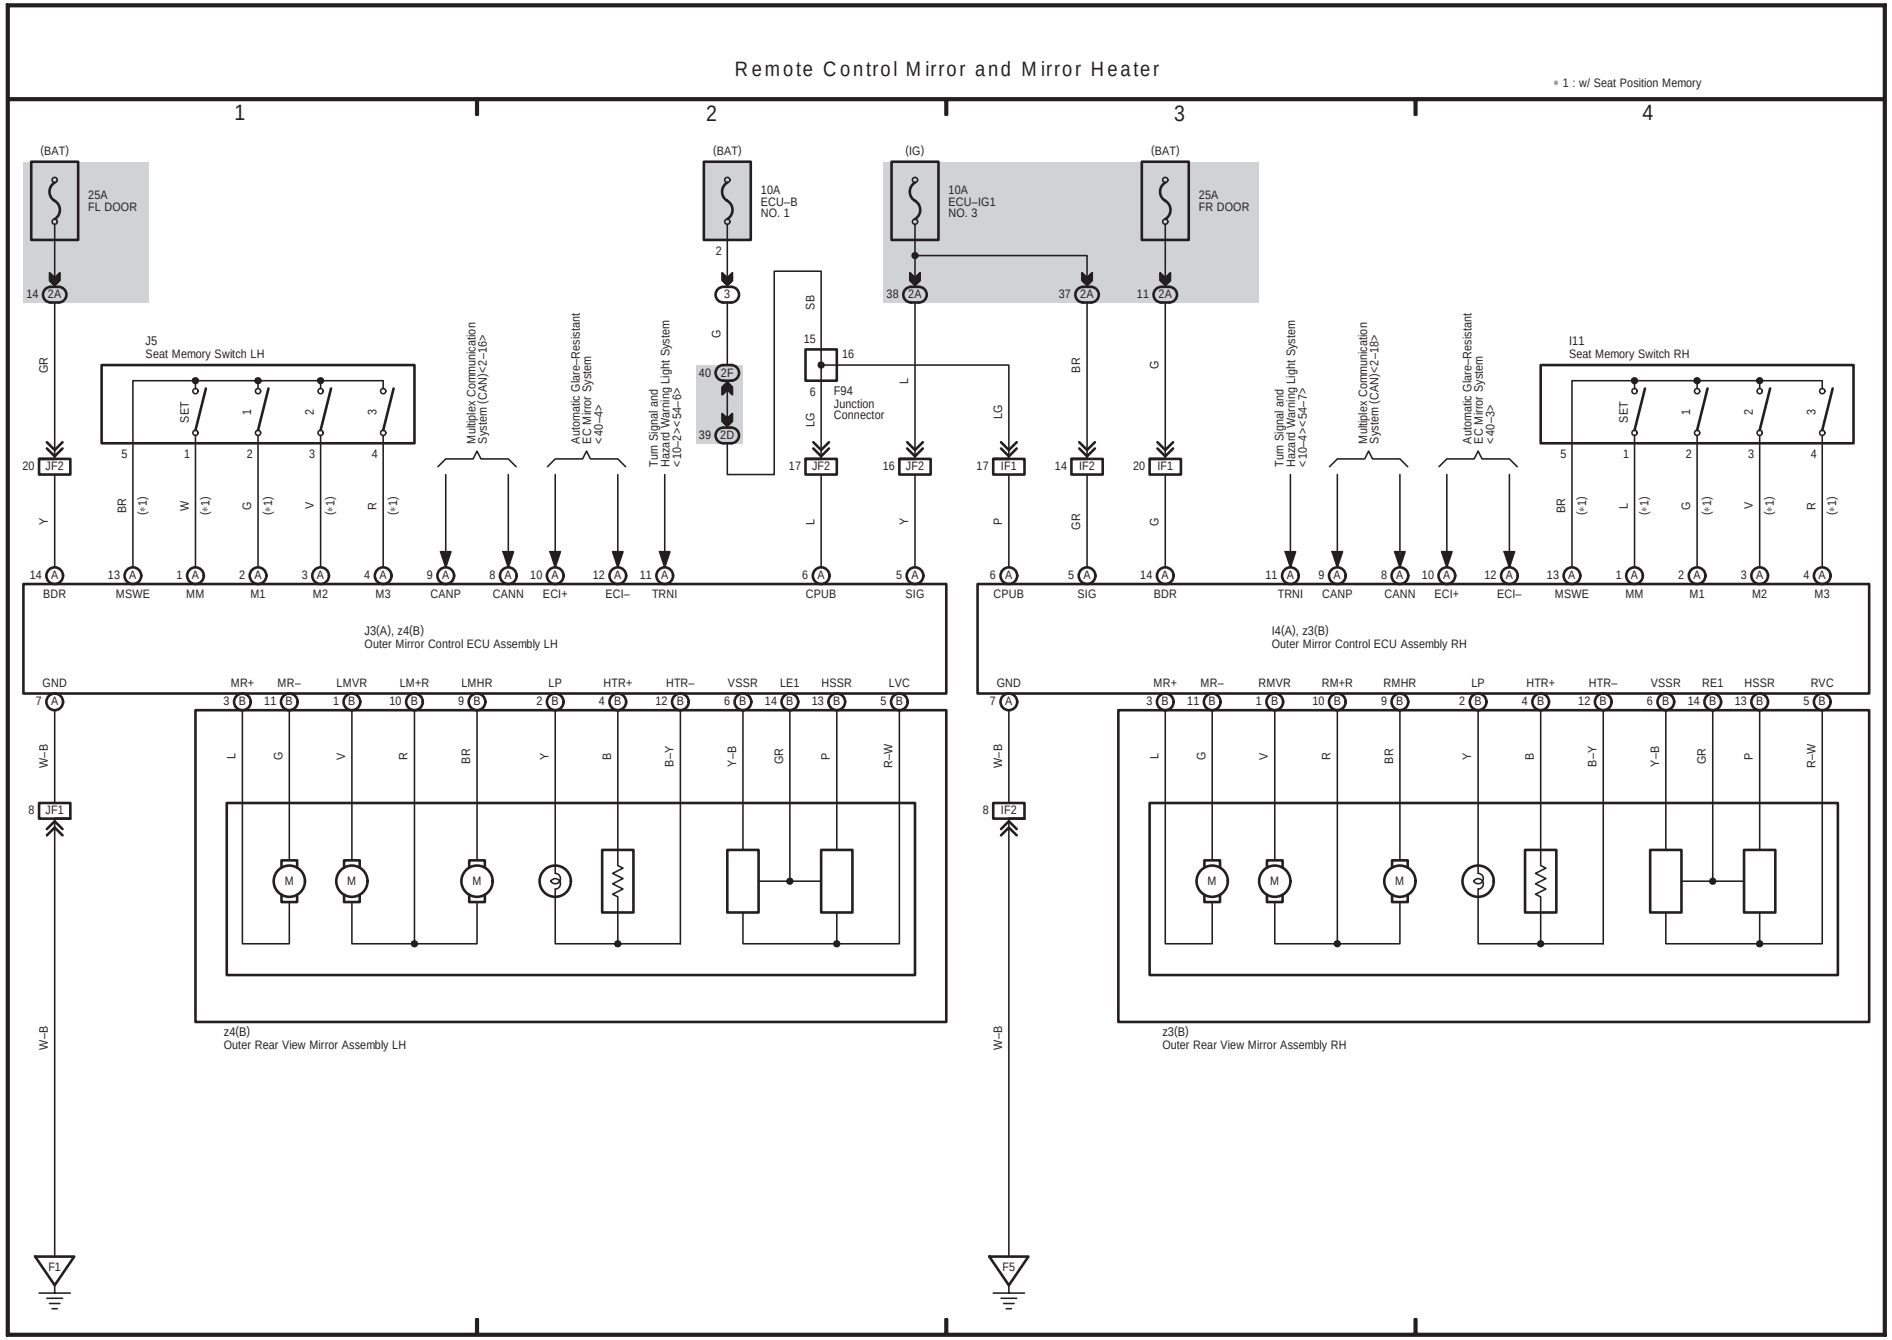
Remote Control Mirror and Mirror Heater
* 1 : w/ Seat Position Memory
1
2
3
4
(BAT)
25A
FL DOOR
(BAT)
10A
ECU–B
NO. 1
(IG)
10A
ECU–IG1
NO. 3
(BAT)
25A
FR DOOR
J5
Seat Memory Switch LH
SET
Multiplex Communication System (CAN)<2–16>
Automatic Glare–Resistant EC Mirror System <40–4>
Turn Signal and Hazard Warning Light System <10–2><54–6>
F94
Junction Connector
Turn Signal and Hazard Warning Light System <10–4><54–7>
Multiplex Communication System (CAN)<2–18>
Automatic Glare–Resistant EC Mirror System <40–3>
I11
Seat Memory Switch RH
BDR
MSWE
MM
M1
M2
M3
CANP
CANN
ECI+
ECI–
TRNI
CPUB
SIG
J3(A), z4(B)
Outer Mirror Control ECU Assembly LH
I4(A), z3(B)
Outer Mirror Control ECU Assembly RH
GND
MR+
MR–
LMVR
LM+R
LMHR
LP
HTR+
HTR–
VSSR
LE1
HSSR
LVC
RMVR
RM+R
RMHR
RE1
RVC
z4(B)
Outer Rear View Mirror Assembly LH
z3(B)
Outer Rear View Mirror Assembly RH
F1
F5