36 RX 450h

(Cont. next page)

Climate Control Seat

∗1 : Before Mar. 2012 Production
∗2 : From Mar. 2012 Production
∗3 : From Mar. 2012 Production until Aug. 2013 Production
∗4 : From Aug. 2013 Production

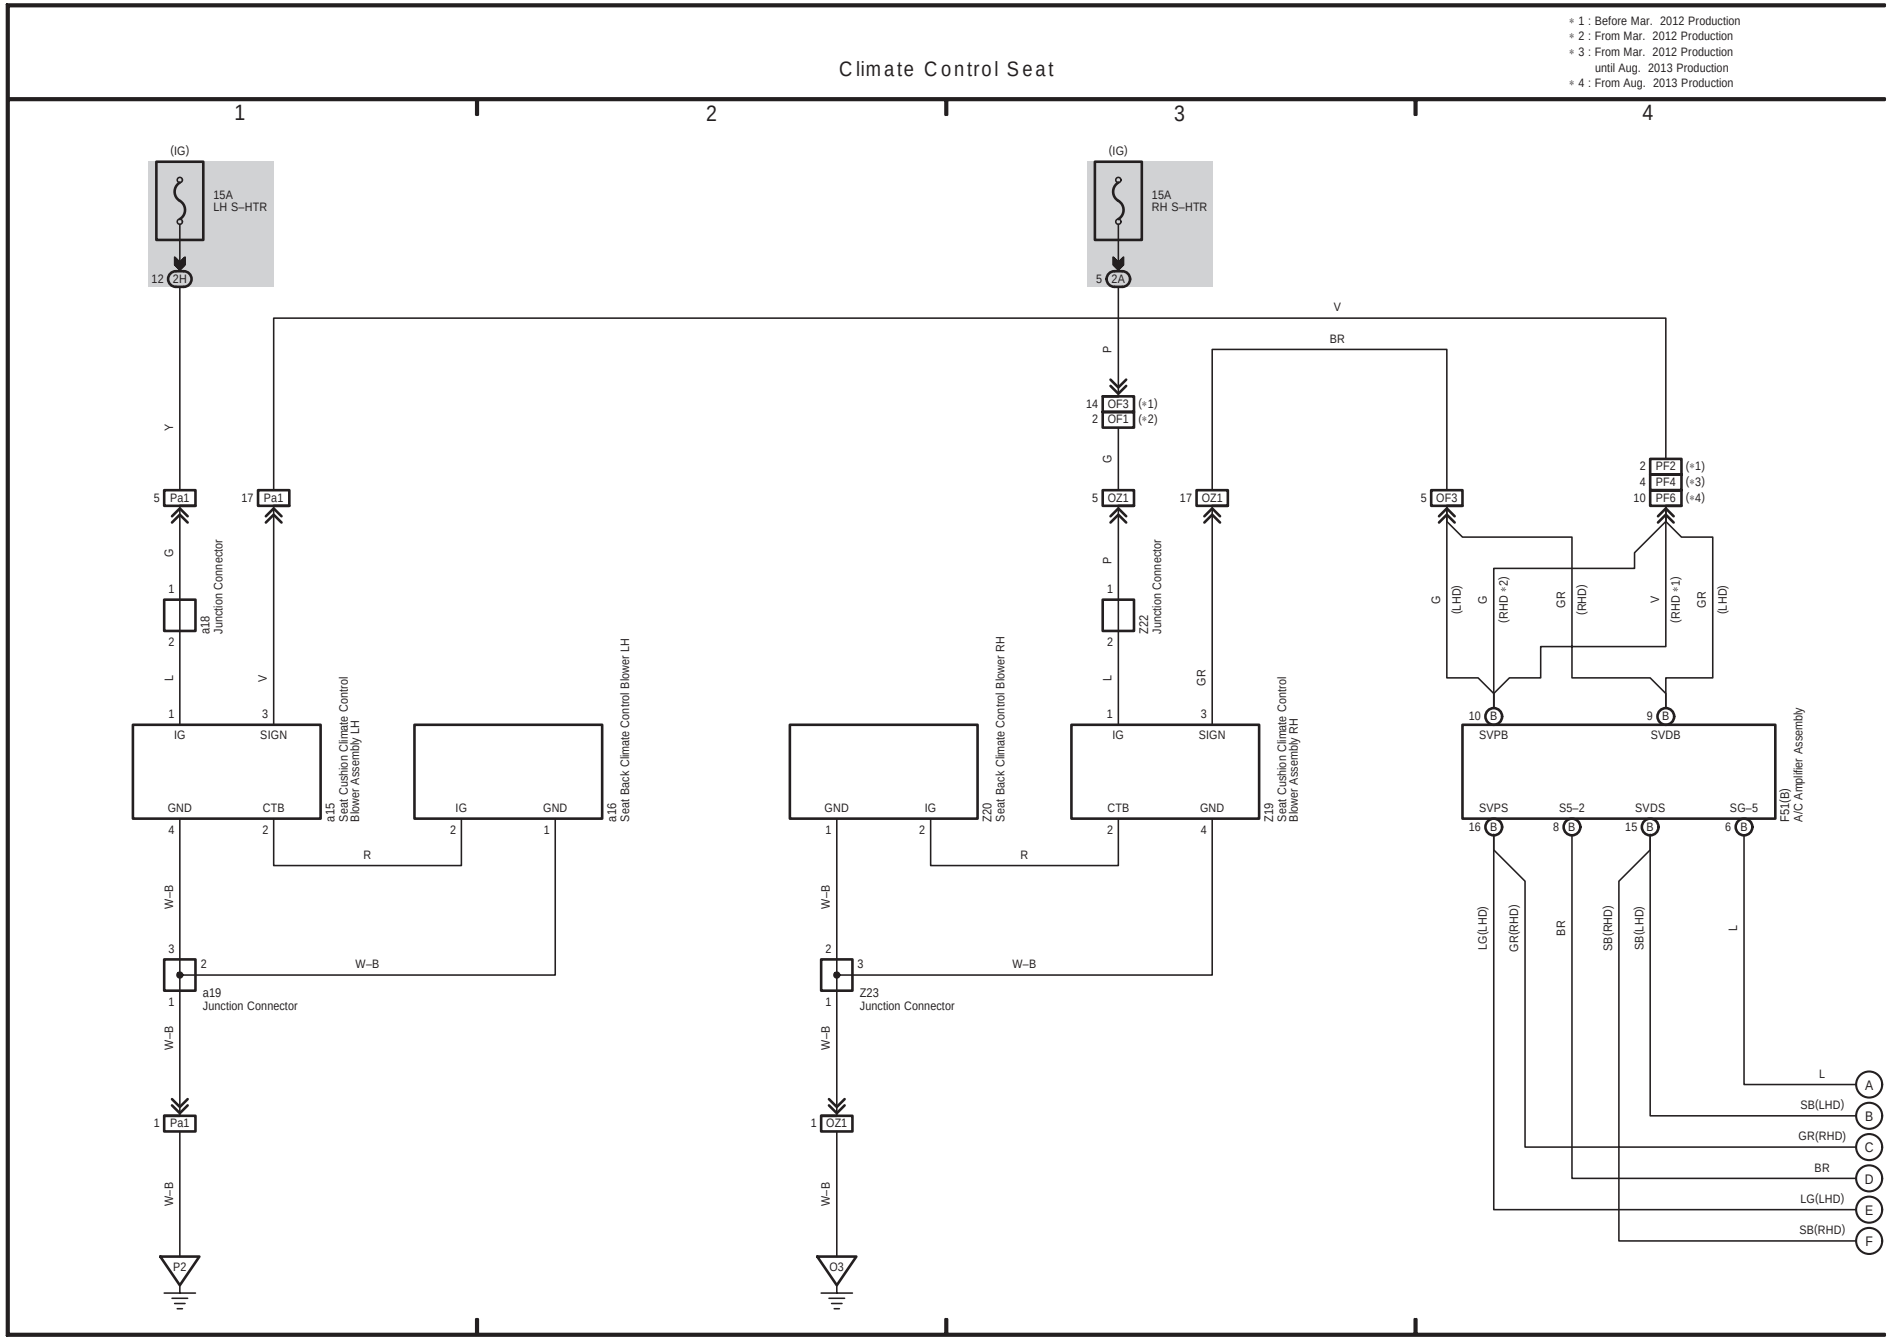

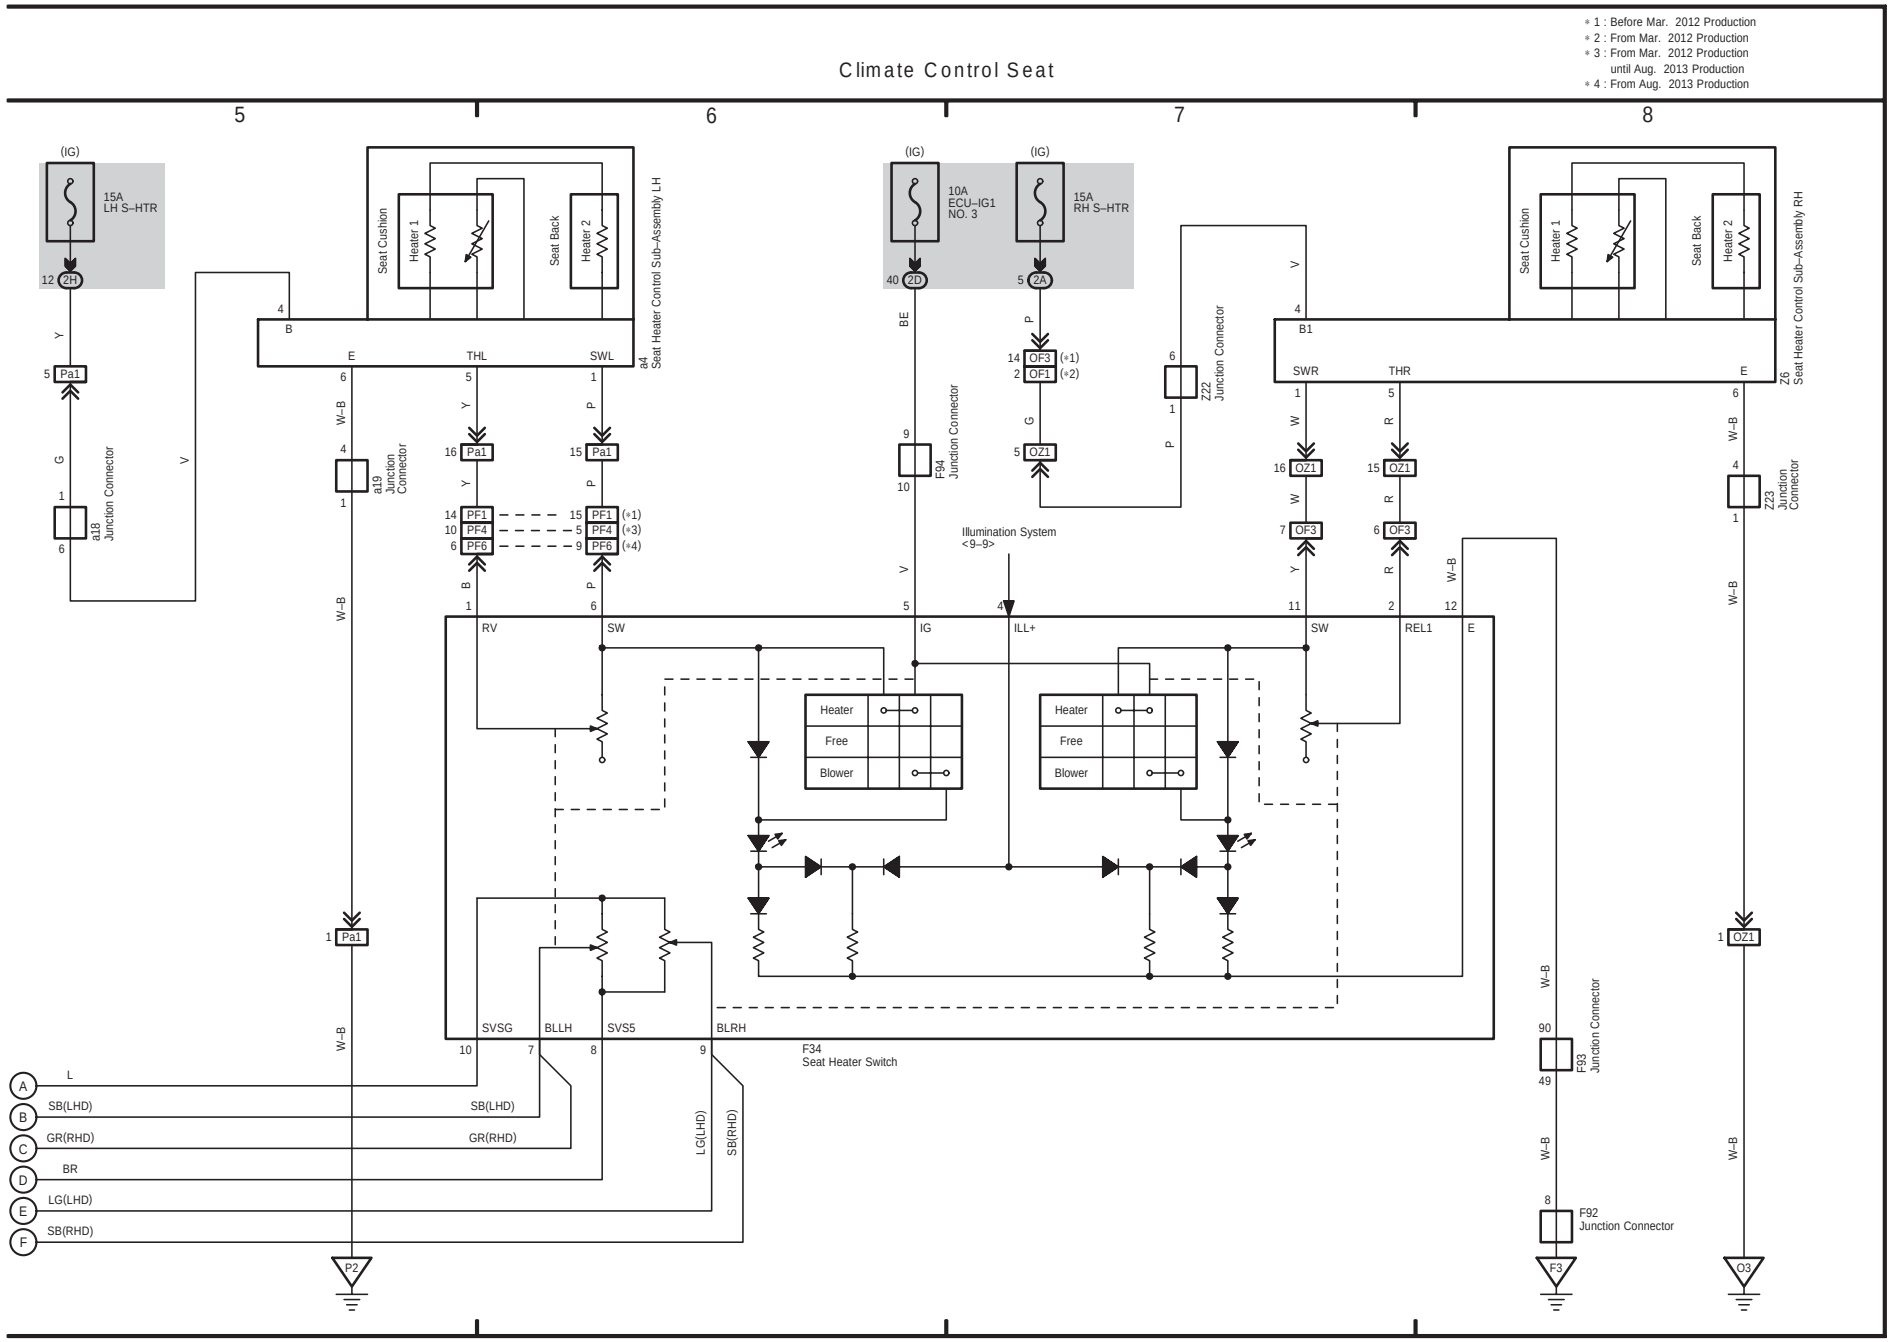
Climate Control Seat
* 1 : Before Mar. 2012 Production
* 2 : From Mar. 2012 Production
* 3 : From Mar. 2012 Production until Aug. 2013 Production
* 4 : From Aug. 2013 Production
5
6
7
8
(IG)
15A LH S–HTR
12 2H
Pa1
a18 Junction Connector
a19 Junction Connector
Seat Cushion
Heater 1
Seat Back
Heater 2
a4 Seat Heater Control Sub–Assembly LH
E
THL
SWL
PF1
PF4
PF6
(*1)
(*3)
(*4)
10A ECU–IG1 NO. 3
40 2D
15A RH S–HTR
5 2A
OF3
OF1
OZ1
F94 Junction Connector
Z22 Junction Connector
Z6 Seat Heater Control Sub–Assembly RH
B1
SWR
THR
Z23 Junction Connector
Illumination System <9–9>
RV
SW
IG
ILL+
REL1
Heater
Free
Blower
SVSG
BLLH
SVS5
BLRH
F34 Seat Heater Switch
F93 Junction Connector
F92 Junction Connector
P2
F3
O3
L
SB(LHD)
GR(RHD)
BR
LG(LHD)
SB(RHD)