5 RX 450h

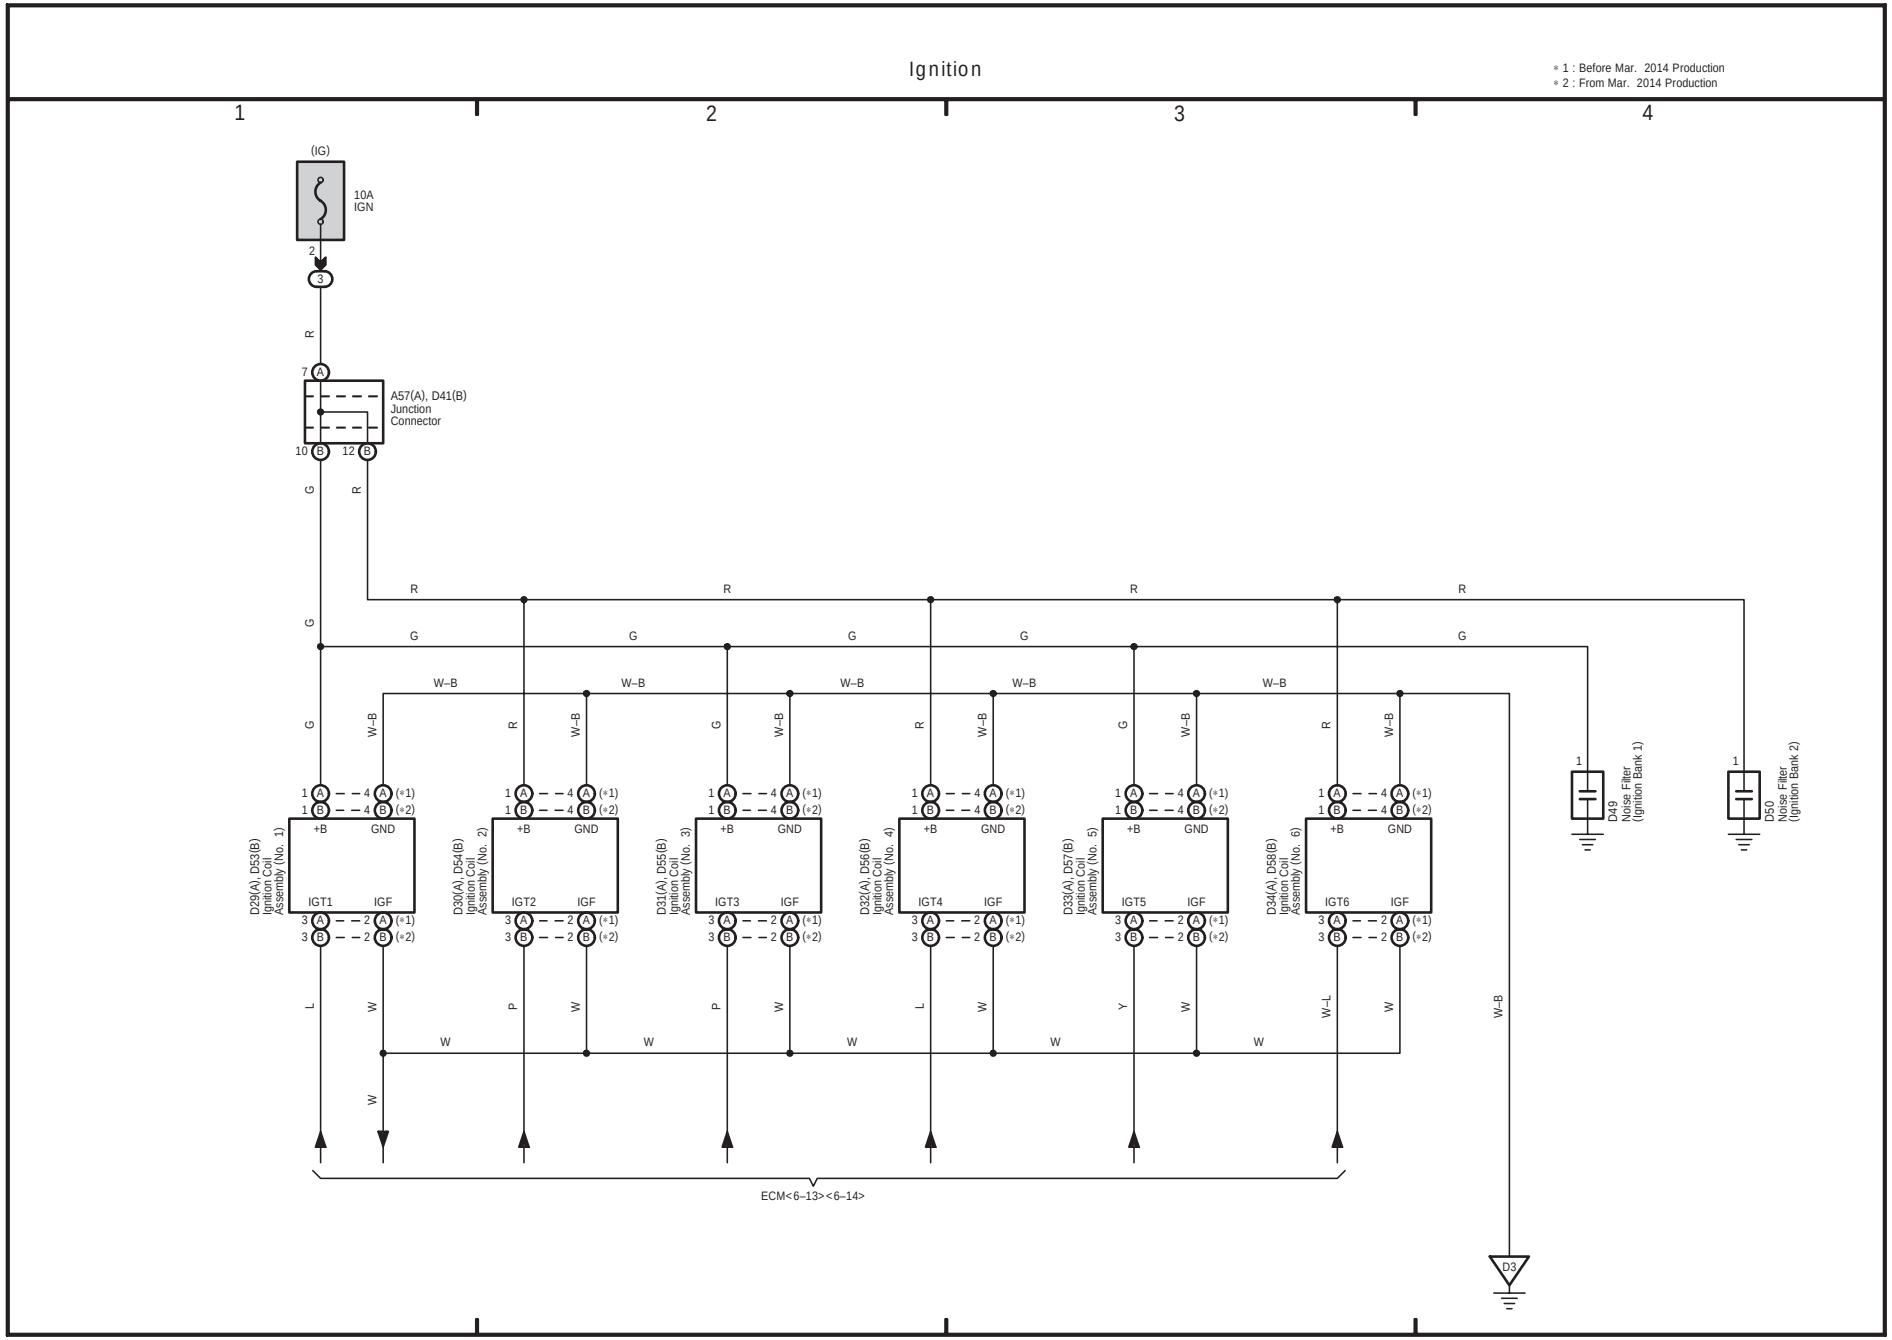
Ignition
* 1 : Before Mar. 2014 Production
* 2 : From Mar. 2014 Production
1
2
3
4
(IG)
10A
IGN
A57(A), D41(B)
Junction
Connector
D29(A), D53(B)
Ignition Coil
Assembly (No. 1)
D30(A), D54(B)
Ignition Coil
Assembly (No. 2)
D31(A), D55(B)
Ignition Coil
Assembly (No. 3)
D32(A), D56(B)
Ignition Coil
Assembly (No. 4)
D33(A), D57(B)
Ignition Coil
Assembly (No. 5)
D34(A), D58(B)
Ignition Coil
Assembly (No. 6)
+B
GND
IGT1
IGF
IGT2
IGT3
IGT4
IGT5
IGT6
D49
Noise Filter
(Ignition Bank 1)
D50
Noise Filter
(Ignition Bank 2)
ECM<6–13><6–14>
D3