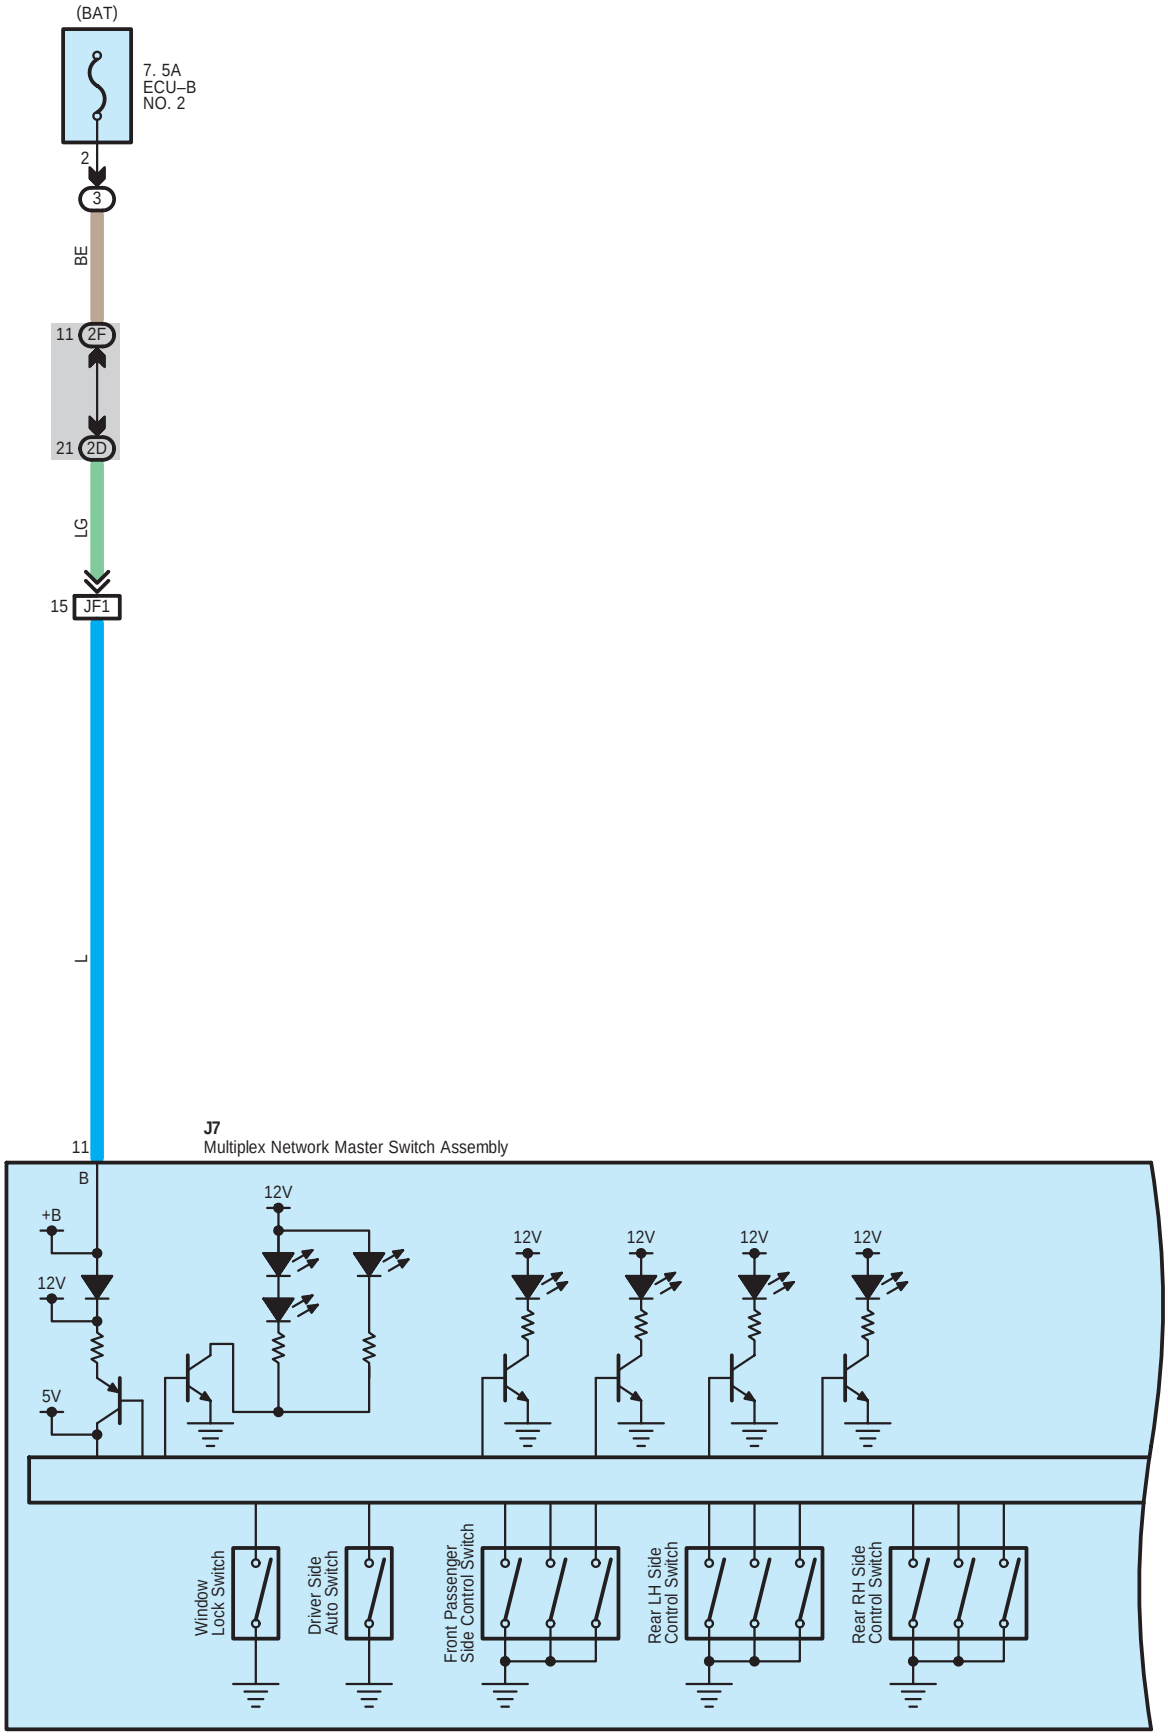
(BAT)
7. 5A
ECU–B
NO. 2
2
3
BE
11
2F
21
2D
LG
15
JF1
L
11
J7
Multiplex Network Master Switch Assembly
B
+B
12V
5V
12V
12V
12V
12V
12V
Window Lock Switch
Driver Side Auto Switch
Front Passenger Side Control Switch
Rear LH Side Control Switch
Rear RH Side Control Switch

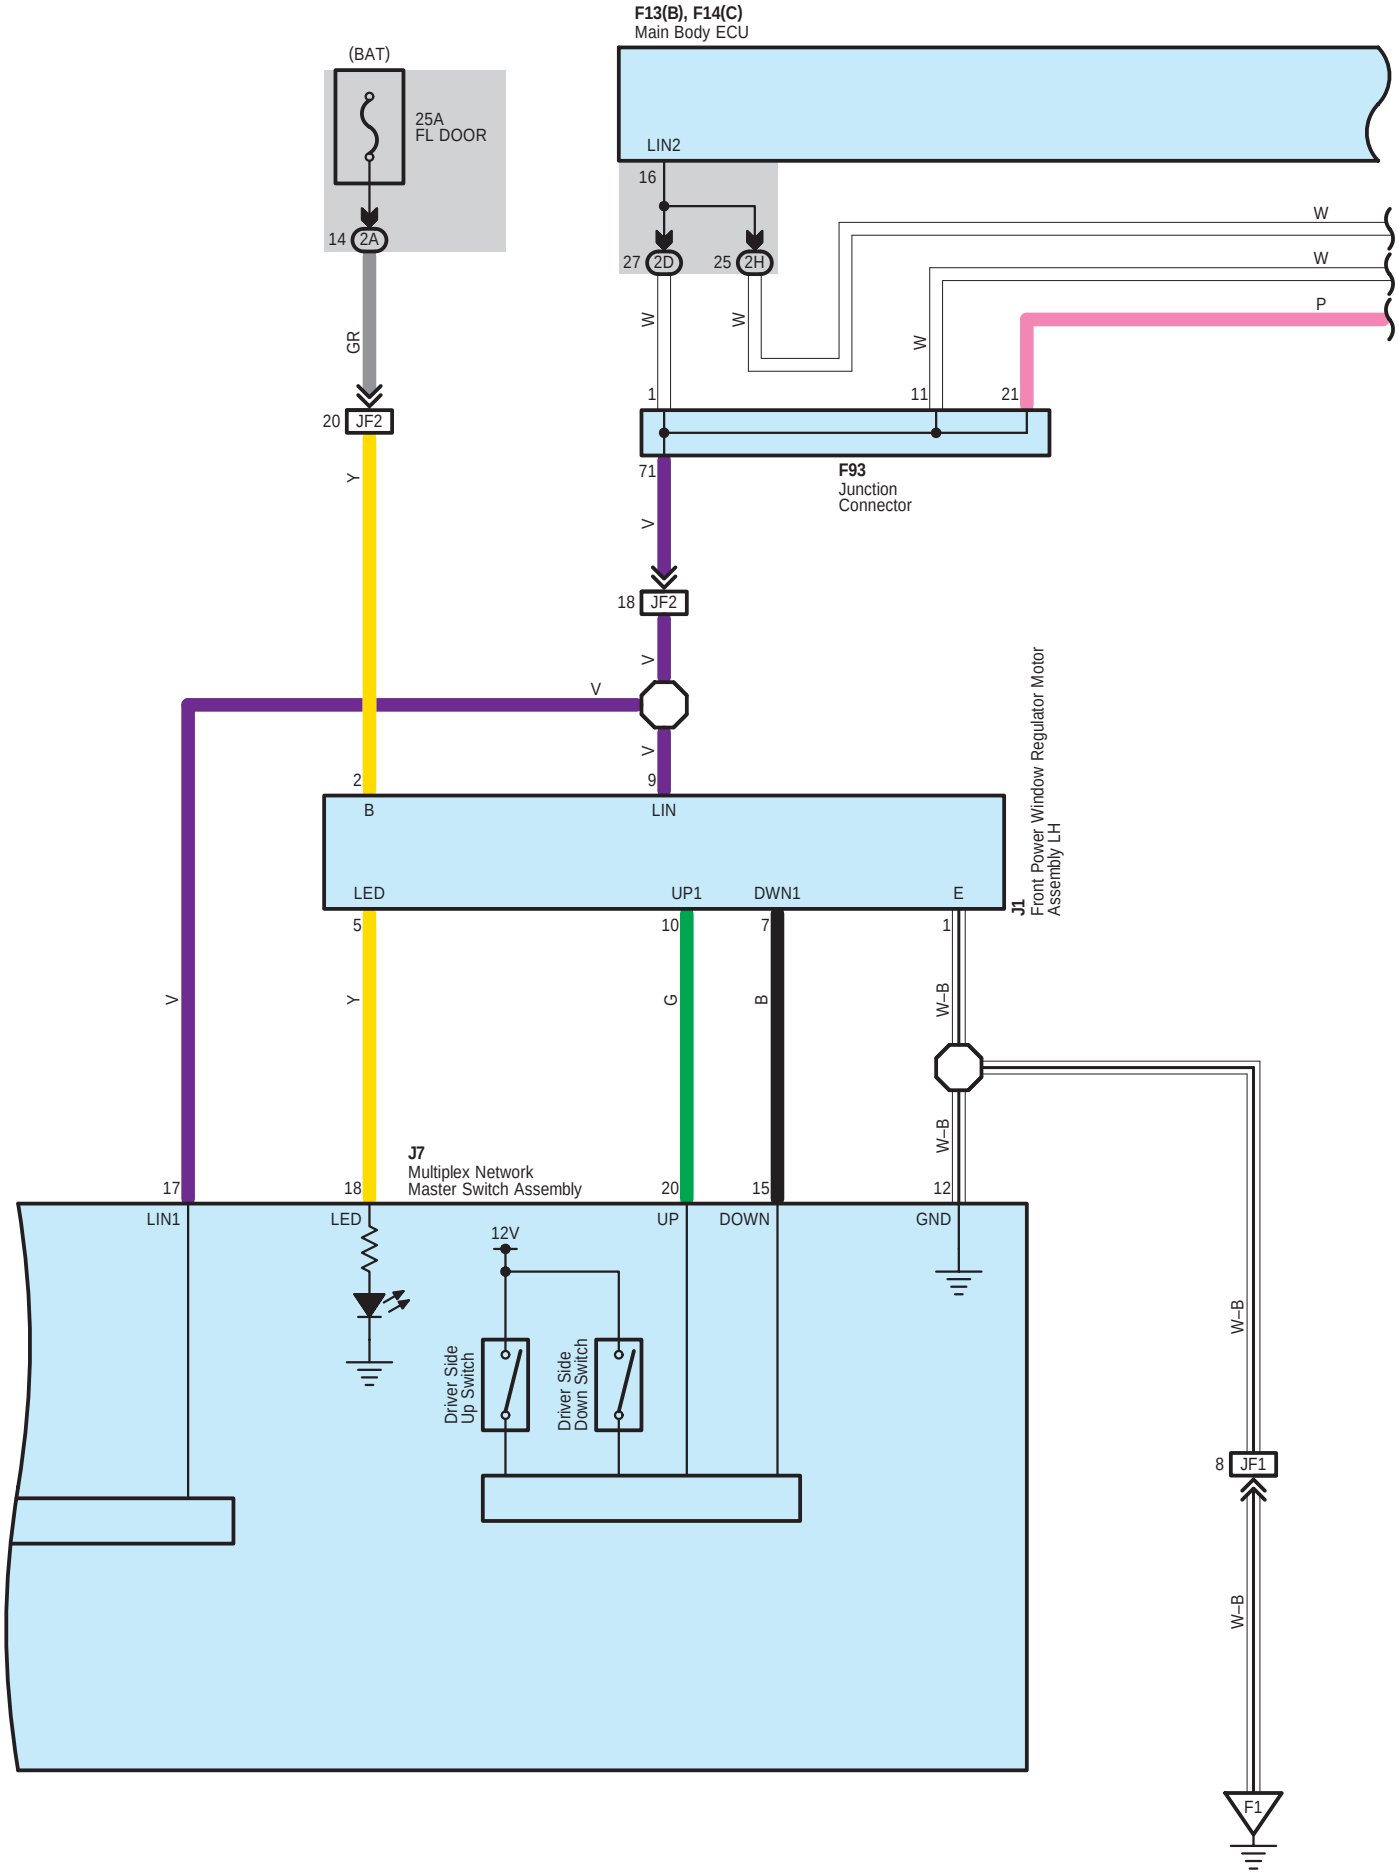
F13(B), F14(C)
Main Body ECU
(BAT)
25A
FL DOOR
LIN2
16
14
2A
27
2D
25
2H
W
W
P
GR
20
JF2
1
11
21
71
F93
Junction
Connector
Y
V
18
JF2
V
V
V
2
9
B
LIN
LED
UP1
DWN1
E
J1
Front Power Window Regulator Motor
Assembly LH
5
10
7
1
V
Y
G
B
W–B
W–B
J7
Multiplex Network
Master Switch Assembly
17
18
20
15
12
LIN1
LED
UP
DOWN
GND
12V
Driver Side
Up Switch
Driver Side
Down Switch
W–B
8
JF1
W–B
F1

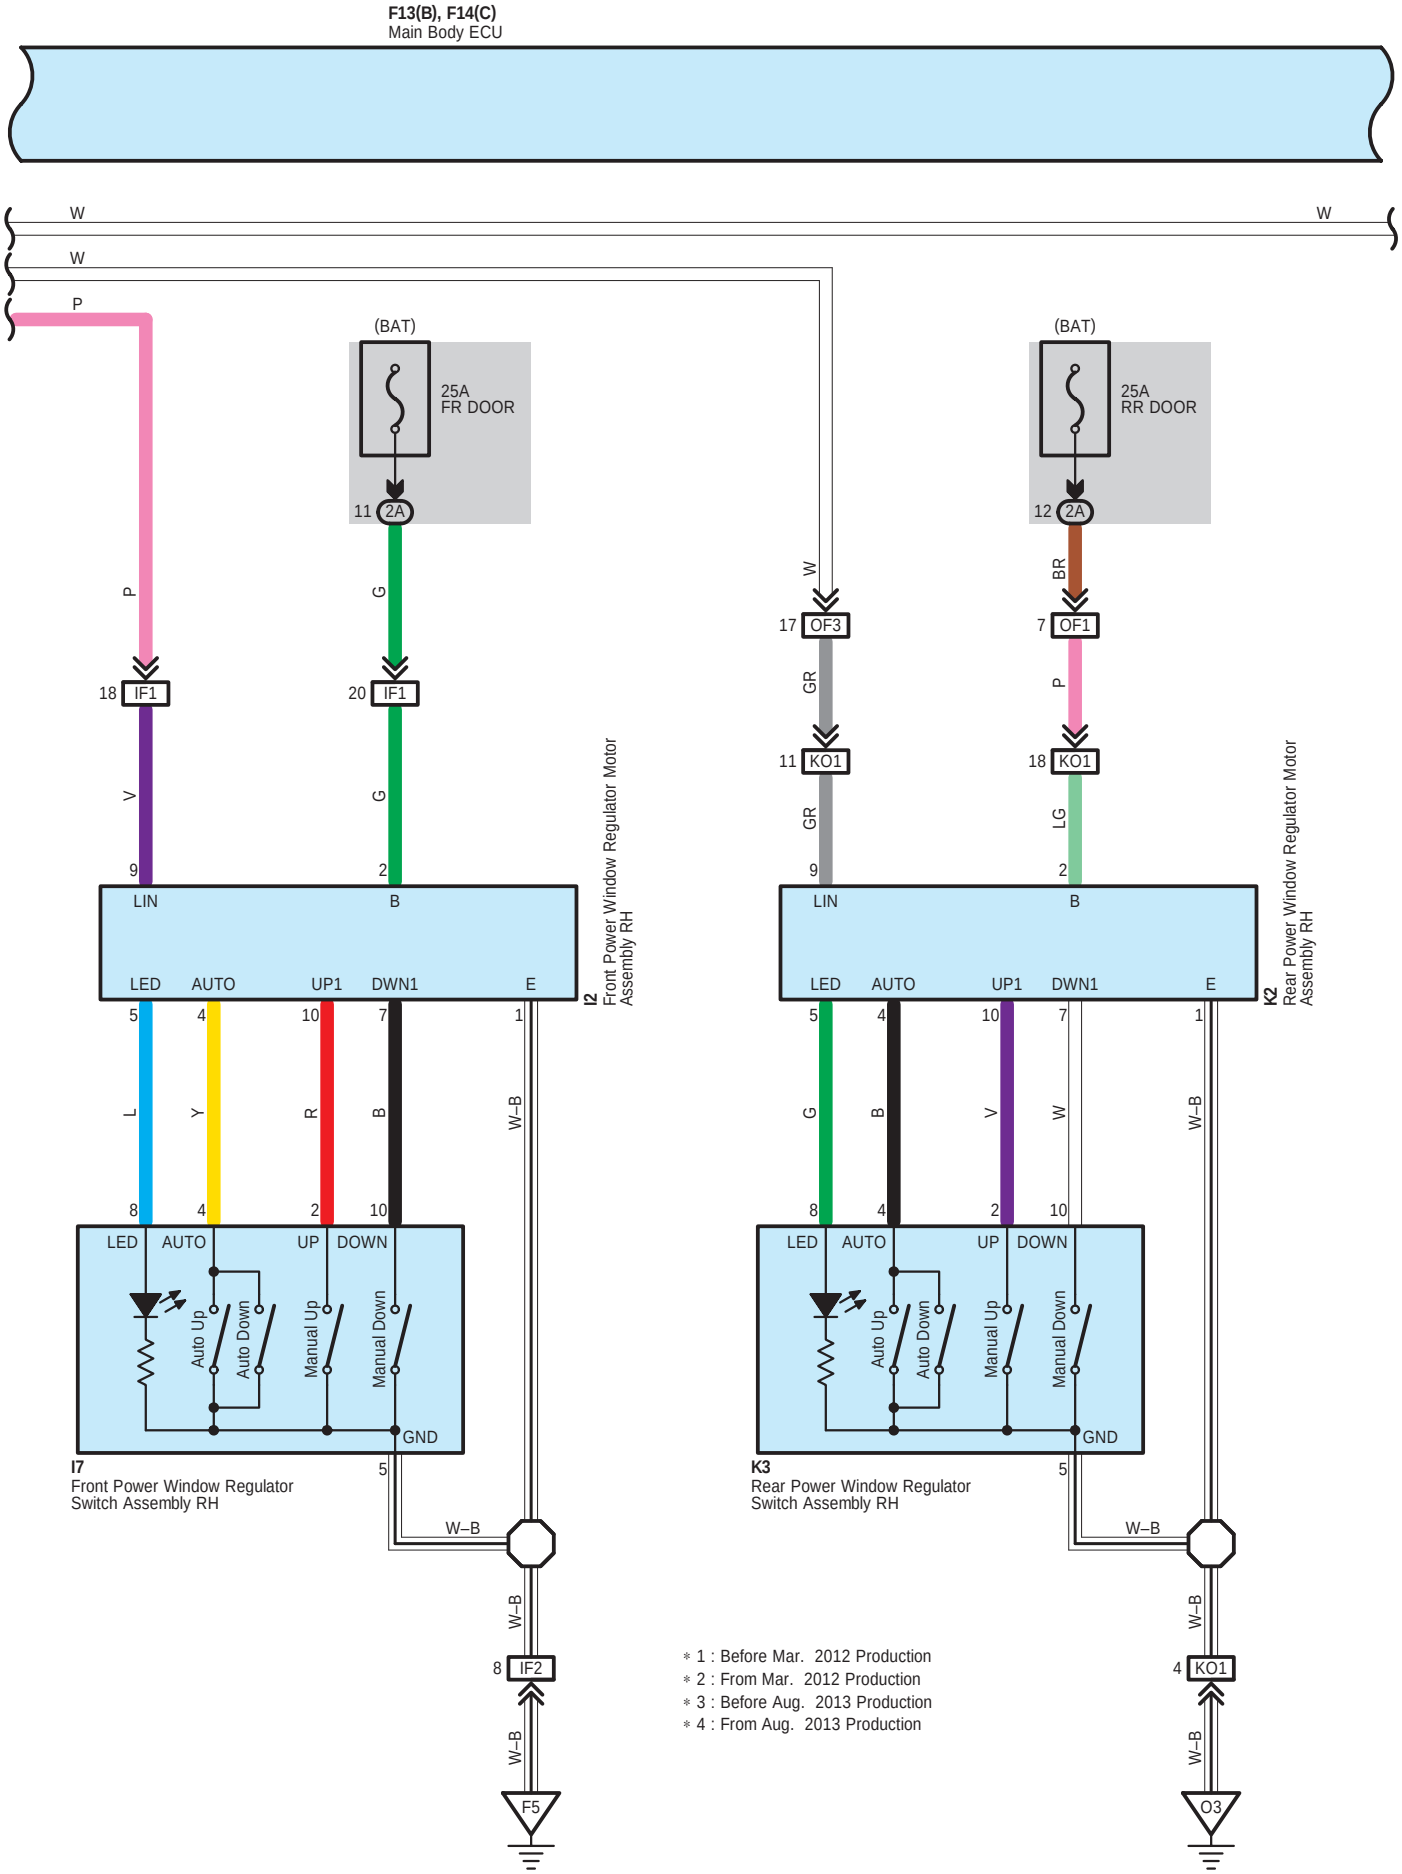

∗ 1 : Before Mar. 2012 Production
∗ 2 : From Mar. 2012 Production
∗ 3 : Before Aug. 2013 Production
∗ 4 : From Aug. 2013 Production

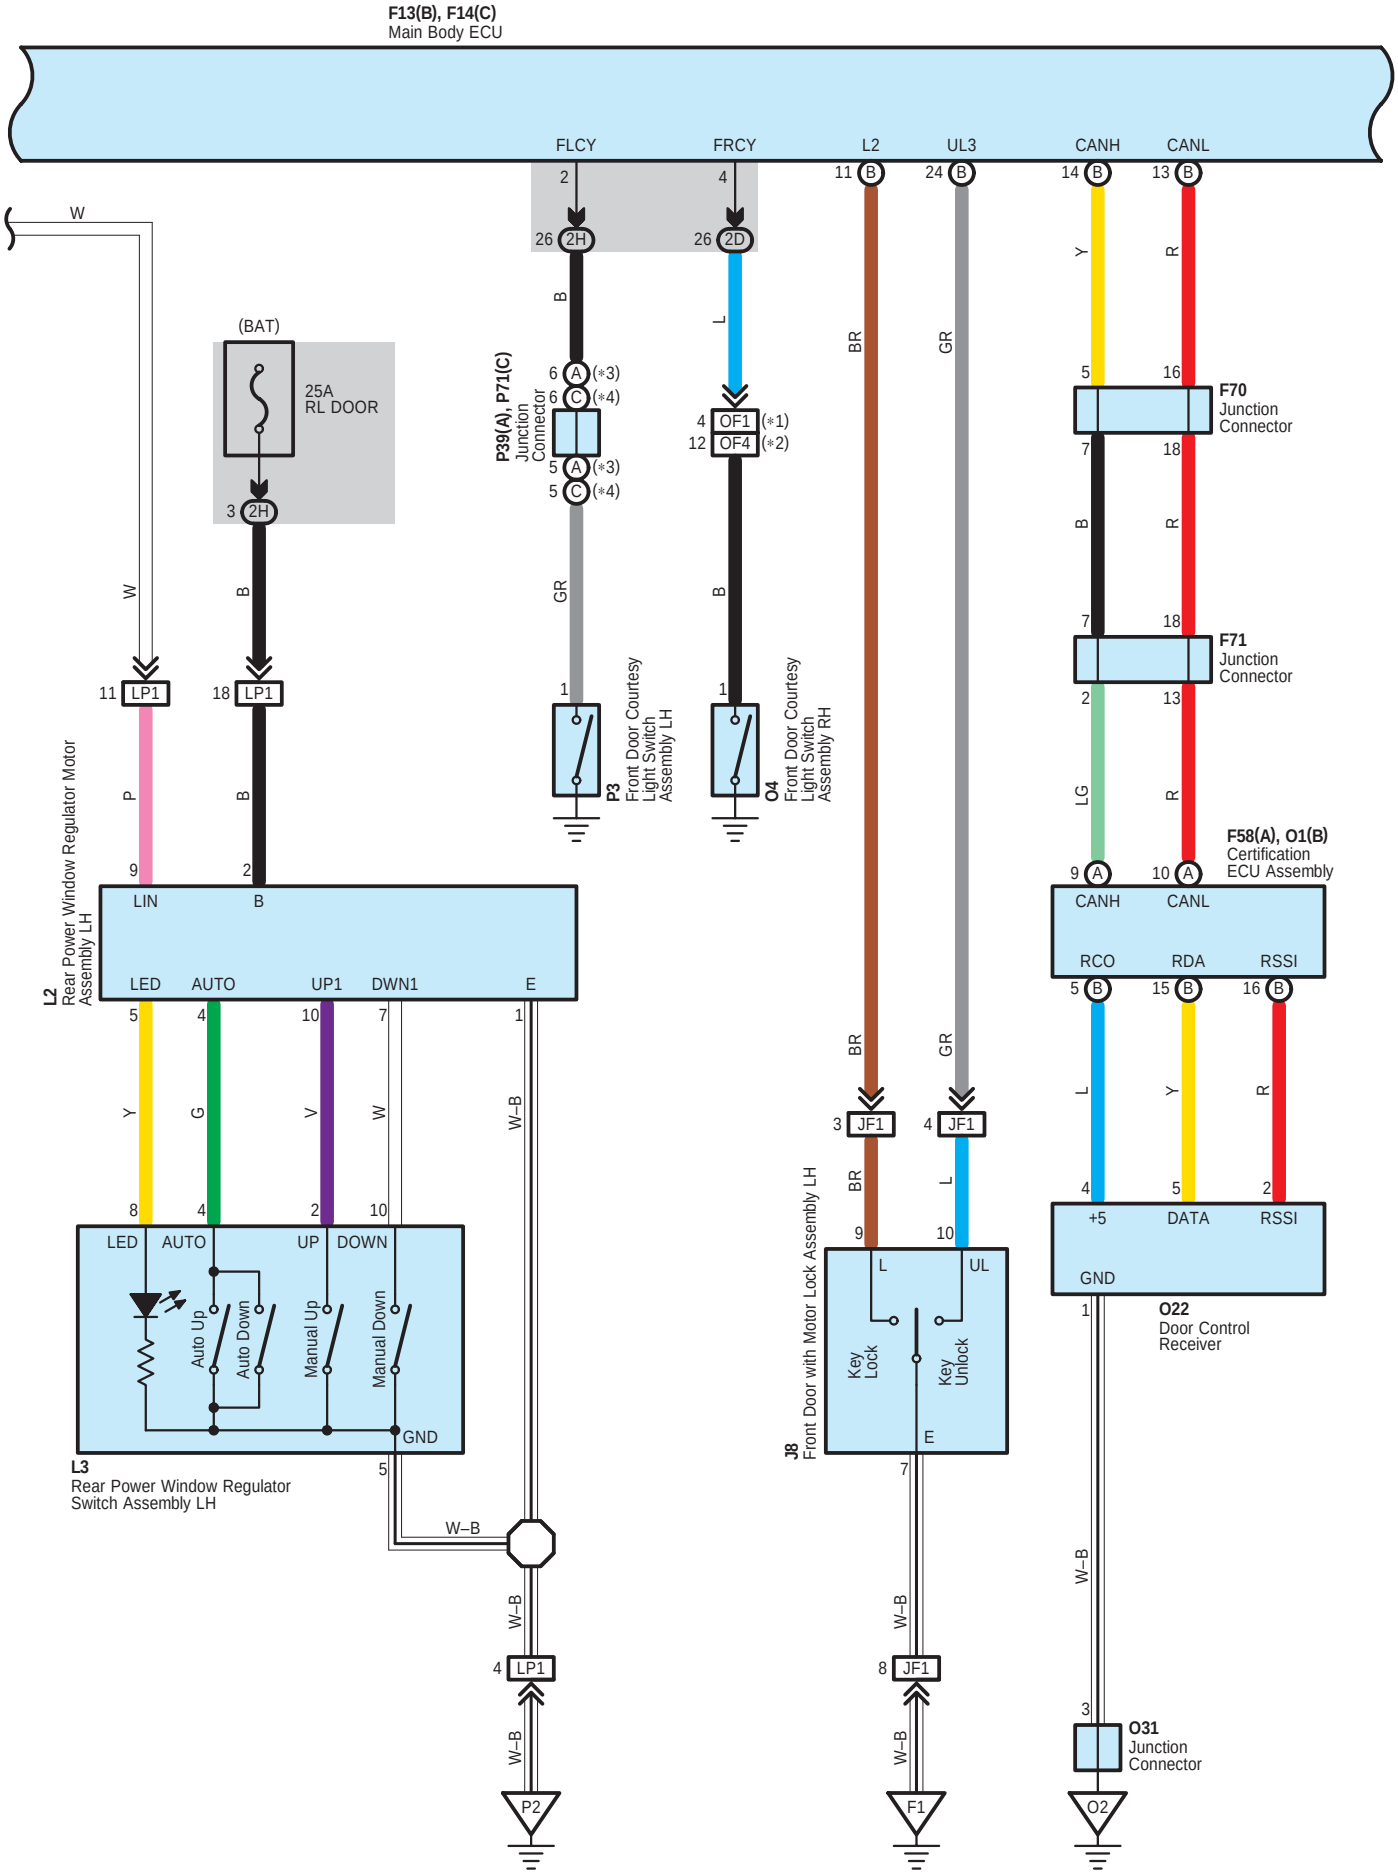
F13(B), F14(C)
Main Body ECU
FLCY
FRCY
L2
UL3
CANH
CANL
(BAT)
25A
RL DOOR
P39(A), P71(C)
Junction
Connector
F70
Junction
Connector
F71
Junction
Connector
P3
Front Door Courtesy
Light Switch
Assembly LH
O4
Front Door Courtesy
Light Switch
Assembly RH
F58(A), O1(B)
Certification
ECU Assembly
L2
Rear Power Window Regulator Motor
Assembly LH
LIN
B
LED
AUTO
UP1
DWN1
E
CANH
CANL
RCO
RDA
RSSI
+5
DATA
RSSI
GND
O22
Door Control
Receiver
L3
Rear Power Window Regulator
Switch Assembly LH
LED
AUTO
UP
DOWN
Auto Up
Auto Down
Manual Up
Manual Down
GND
J8
Front Door with Motor Lock Assembly LH
L
UL
Key
Lock
Key
Unlock
E
O31
Junction
Connector
P2
F1
O2

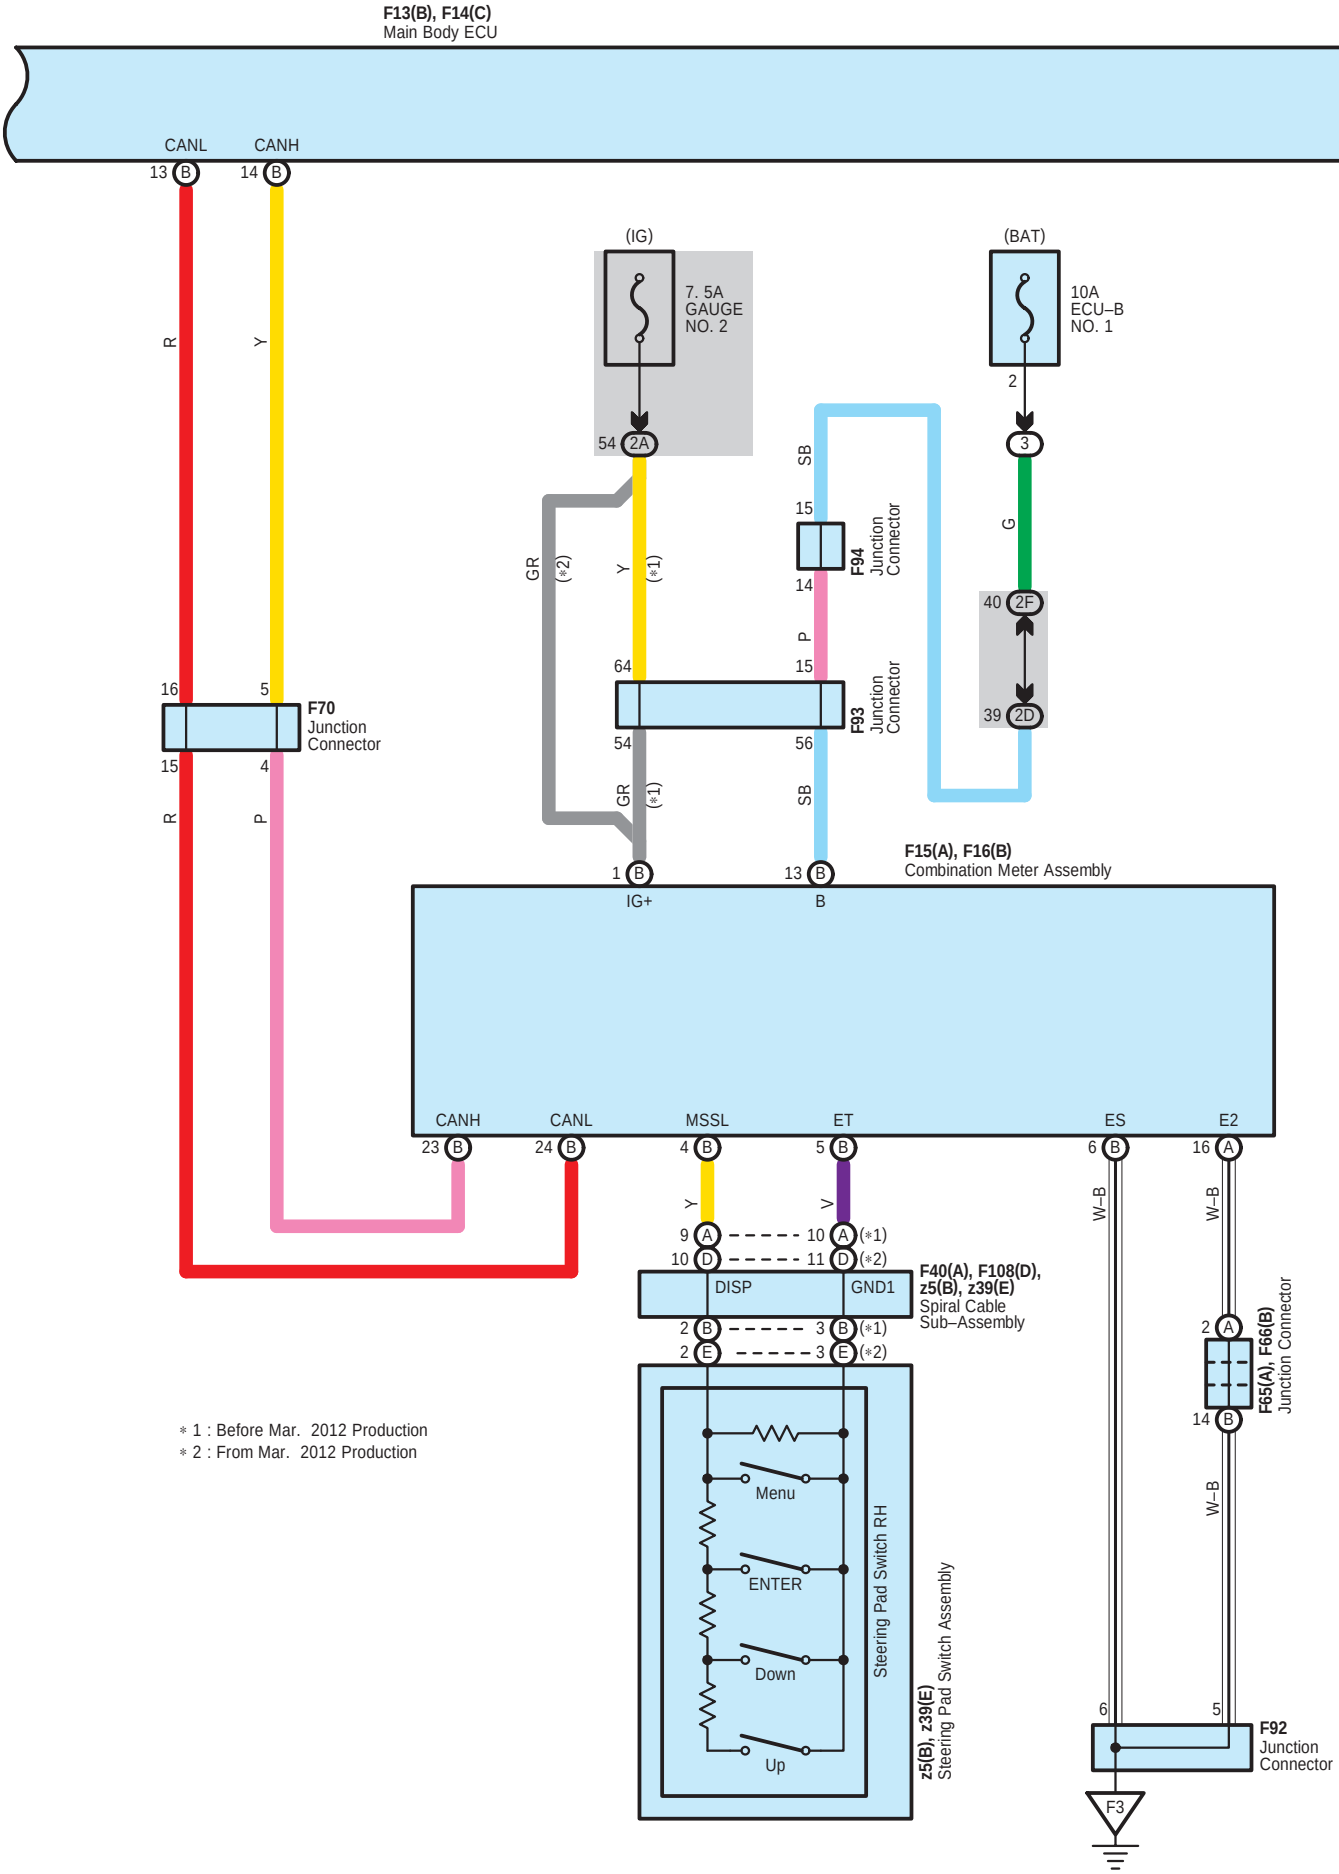
F13(B), F14(C)
Main Body ECU
CANL
CANH
13 B
14 B
(IG)
7. 5A
GAUGE
NO. 2
54 2A
(BAT)
10A
ECU–B
NO. 1
2
3
G
40 2F
39 2D
SB
15
14
F94
Junction
Connector
P
15
64
54
56
F93
Junction
Connector
GR
(*2)
Y
(*1)
GR
(*1)
SB
16
5
F70
Junction
Connector
15
4
R
P
1 B
IG+
13 B
B
F15(A), F16(B)
Combination Meter Assembly
CANH
CANL
MSSL
ET
ES
E2
23 B
24 B
4 B
5 B
6 B
16 A
Y
Y
W–B
W–B
9 A
10 A (*1)
10 D
11 D (*2)
F40(A), F108(D),
z5(B), z39(E)
Spiral Cable
Sub–Assembly
DISP
GND1
2 B
3 B (*1)
2 E
3 E (*2)
2 A
14 B
F65(A), F66(B)
Junction Connector
W–B
Menu
ENTER
Down
Up
Steering Pad Switch RH
z5(B), z39(E)
Steering Pad Switch Assembly
6
5
F92
Junction
Connector
F3
* 1 : Before Mar. 2012 Production
* 2 : From Mar. 2012 Production

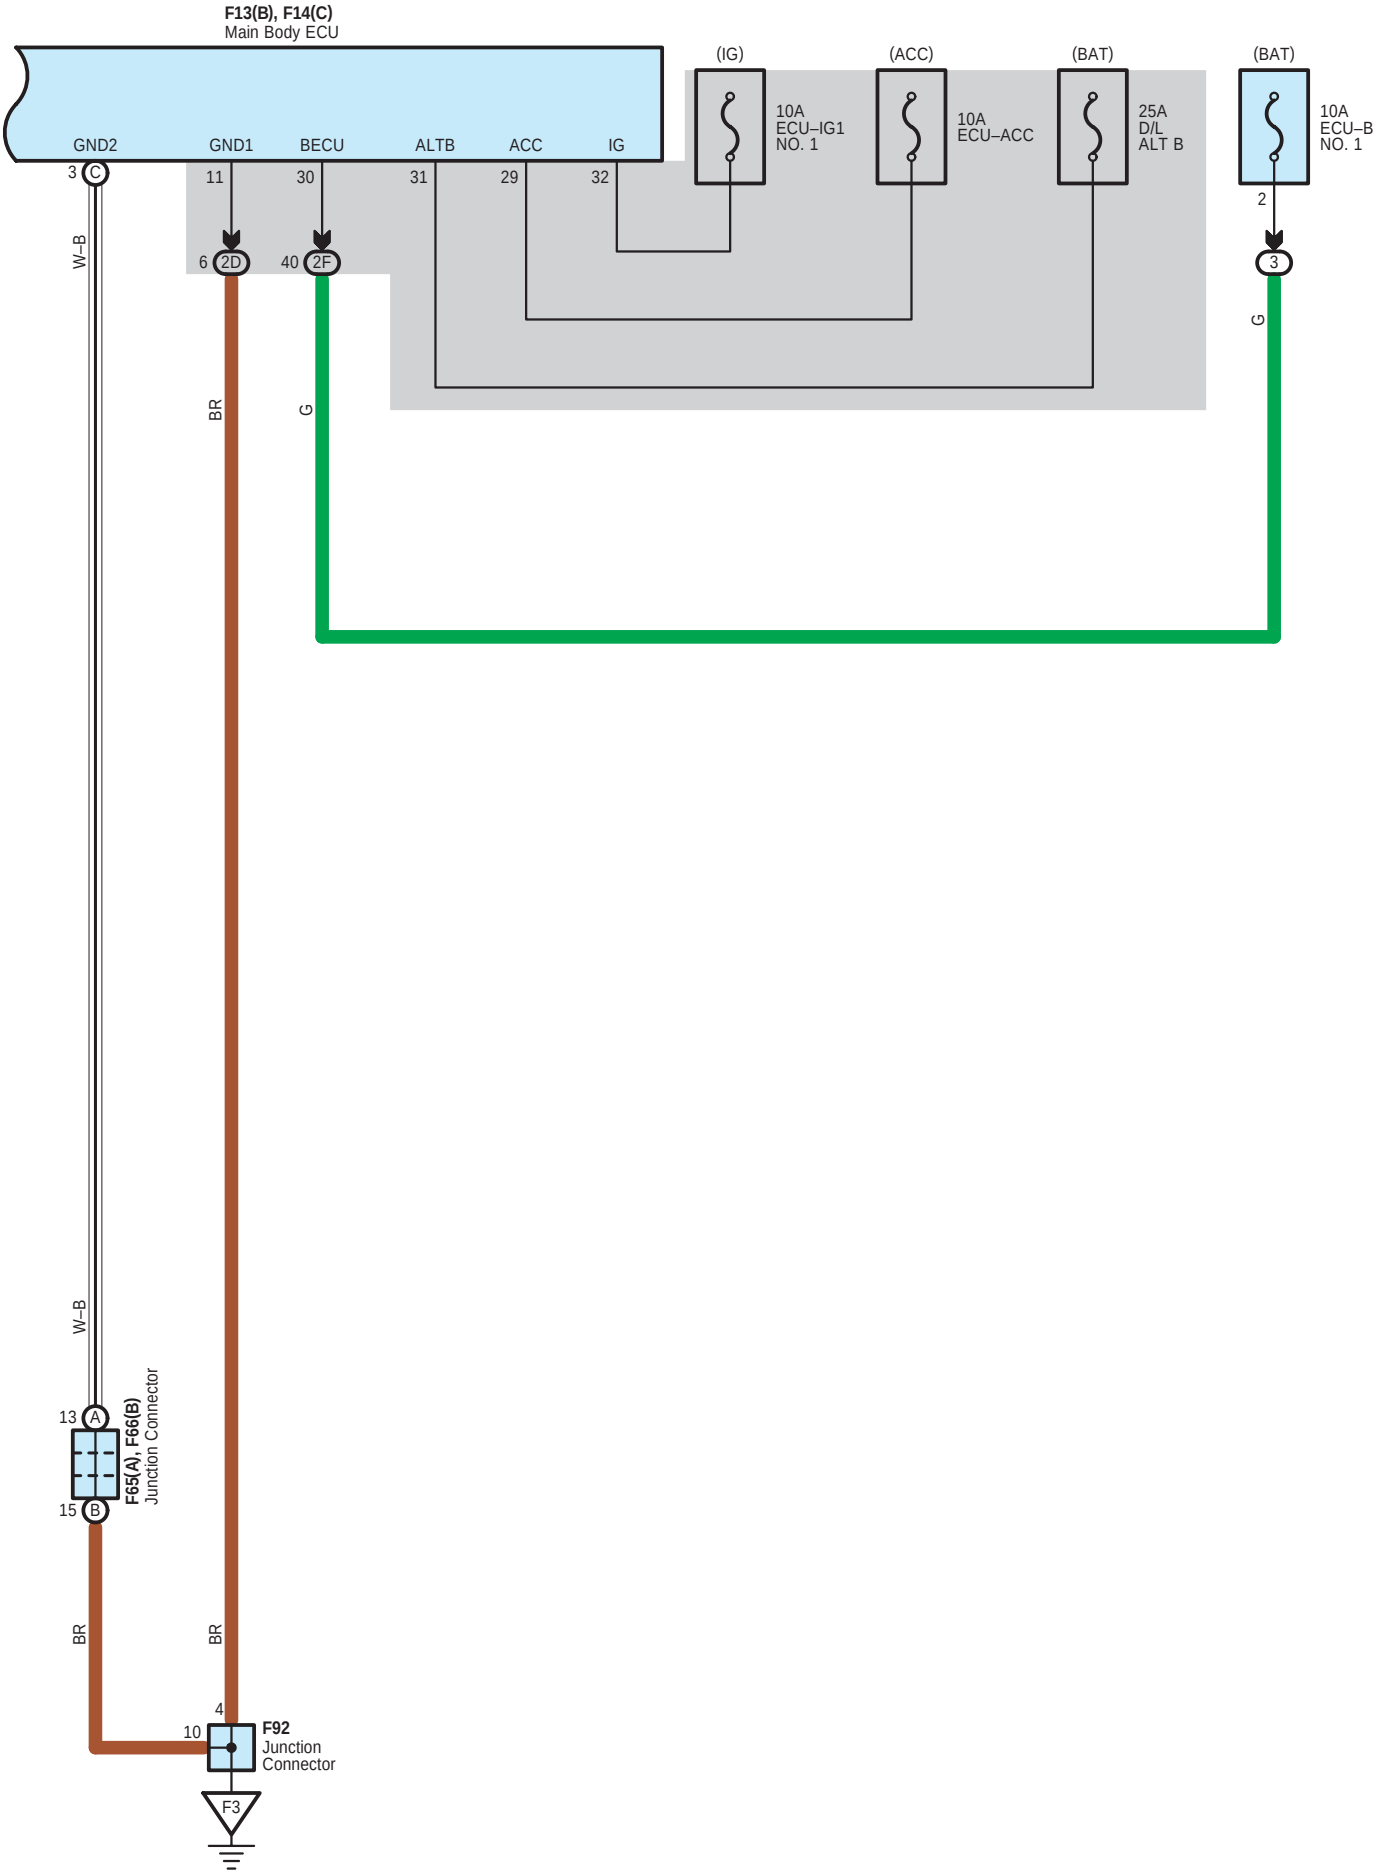
F13(B), F14(C)
Main Body ECU
GND2
GND1
BECU
ALTB
ACC
IG
(IG)
(ACC)
(BAT)
(BAT)
10A
ECU–IG1
NO. 1
10A
ECU–ACC
25A
D/L
ALT B
10A
ECU–B
NO. 1
3 C
11
30
31
29
32
2
6 2D
40 2F
3
W–B
BR
G
G
W–B
13 A
15 B
F65(A), F66(B)
Junction Connector
BR
BR
4
10
F92
Junction
Connector
F3

F 13
Black

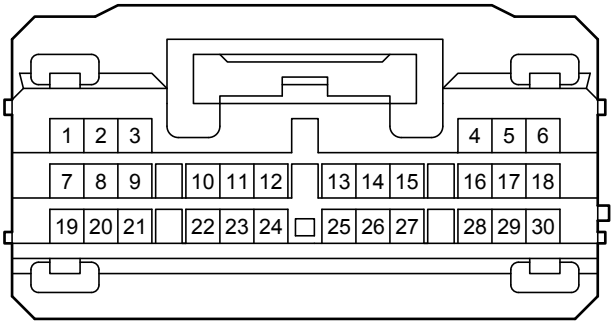

F 14
White

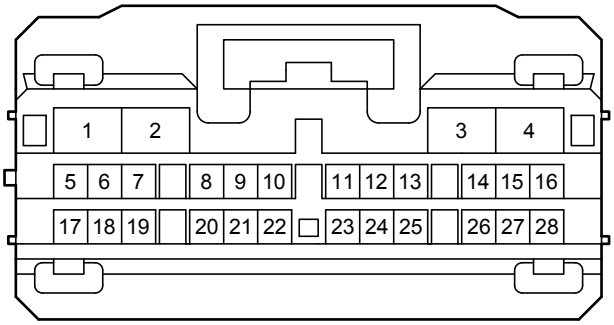

F 15
Black

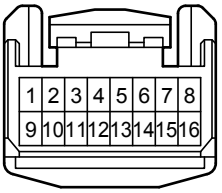

F 16
Black

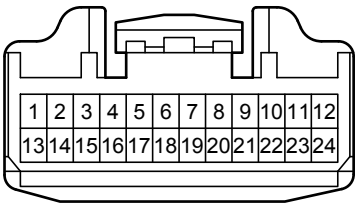

F 40
Black

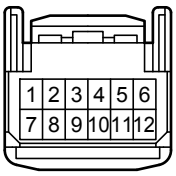

F 58
White

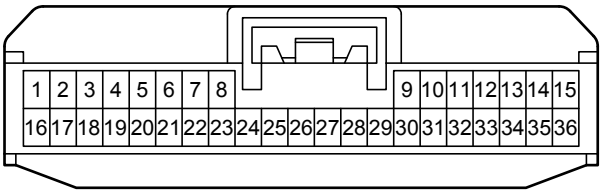

F 65
White

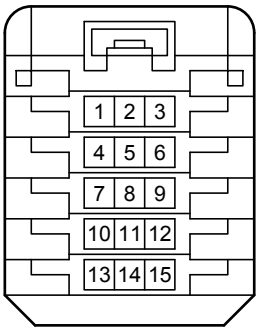

F 66
White

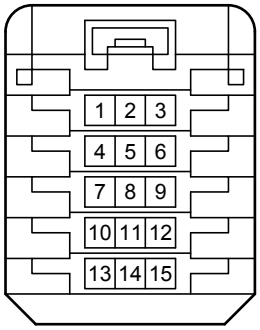

F 70
Blue

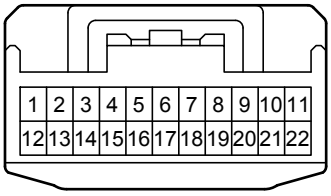

F 71
Blue

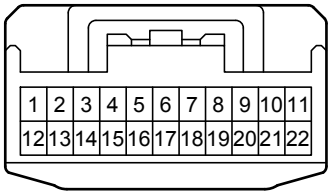

F 92
White

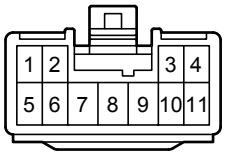

F 93
White

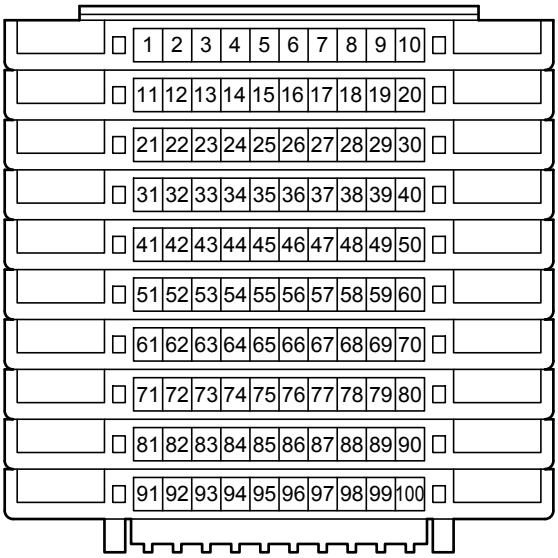

F 94
White

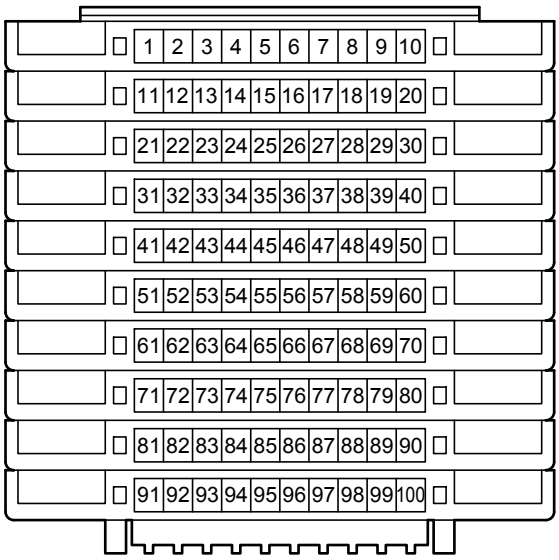

F108
Black

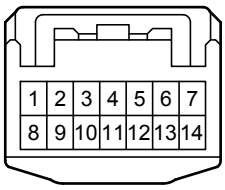

I 2
White

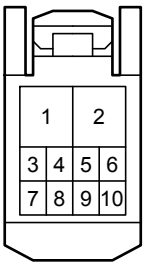

I 7
White

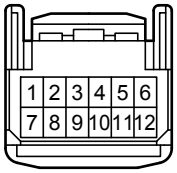

J 1
White

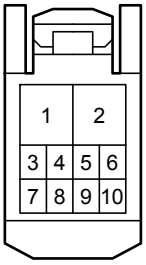

J 7
White

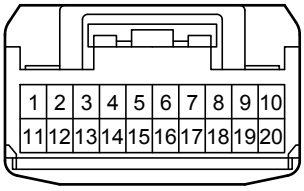

J 8
White

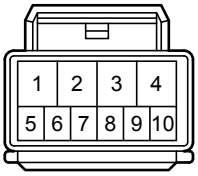

K 2
White

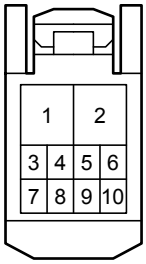

K 3
White

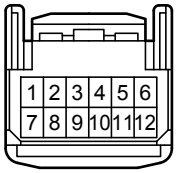

L 2
White

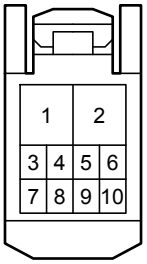

L 3
White

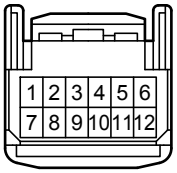

O 1
White

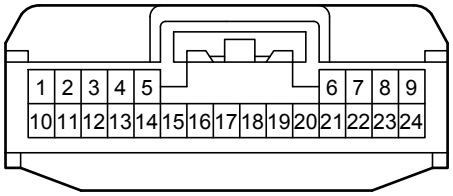

O 4
White

O 22
Blue

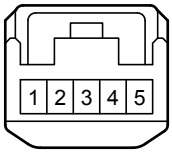

O 31
White

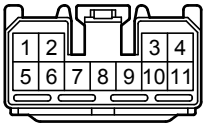

P 3
White

P 39
Blue

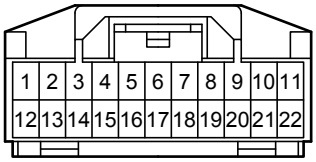

P 71
Blue

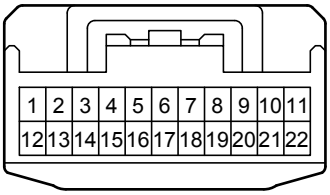

z 5
White

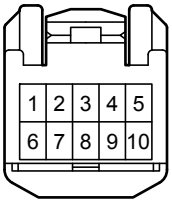

z 39
Black

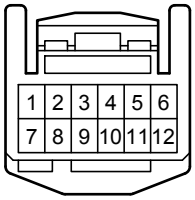

2A
White

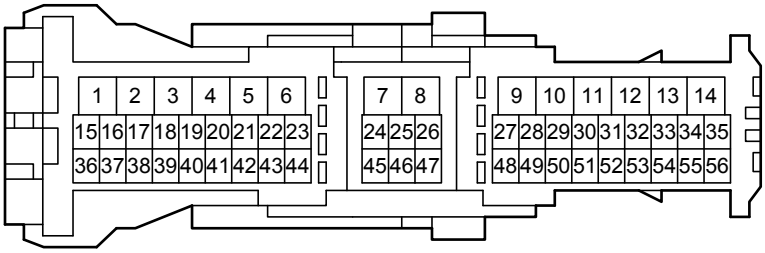

2D
White

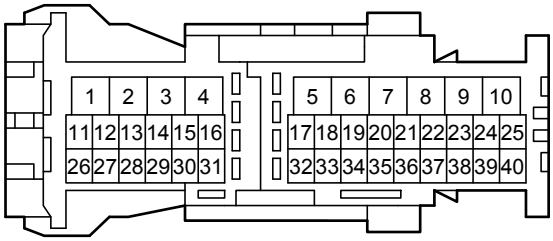

2F
White

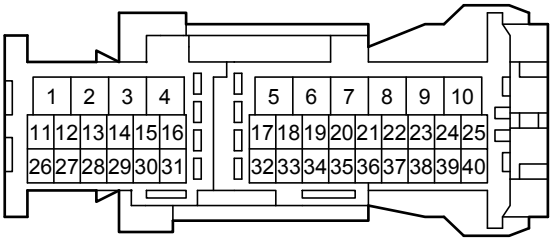

2H
White

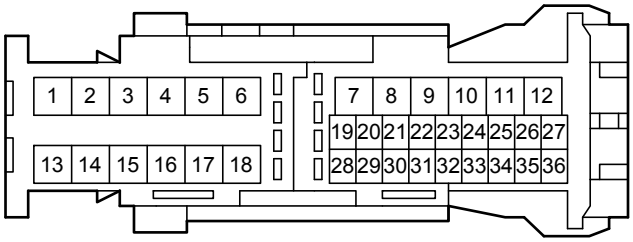

IF1
White

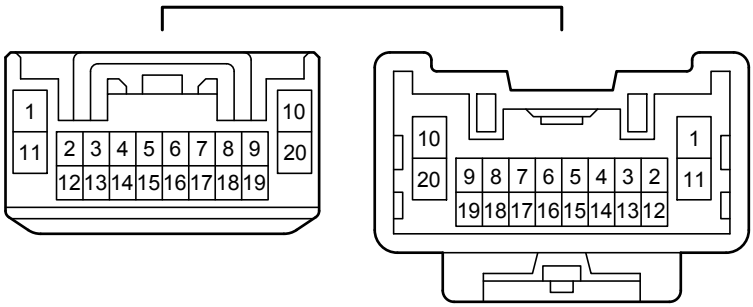

IF2
White

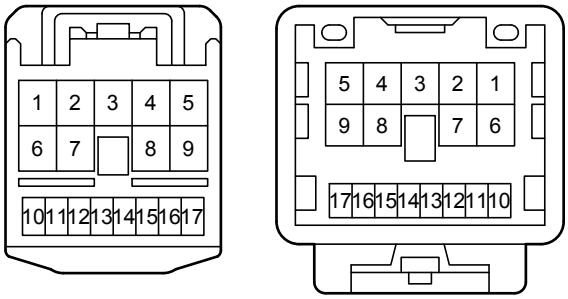

JF1
White

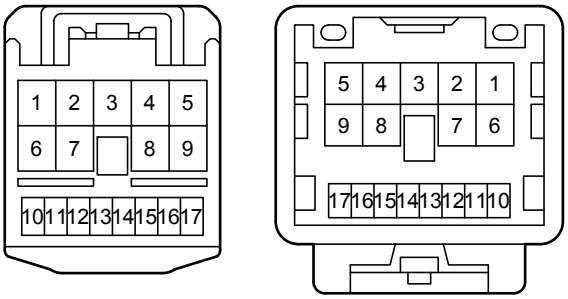

JF2
White

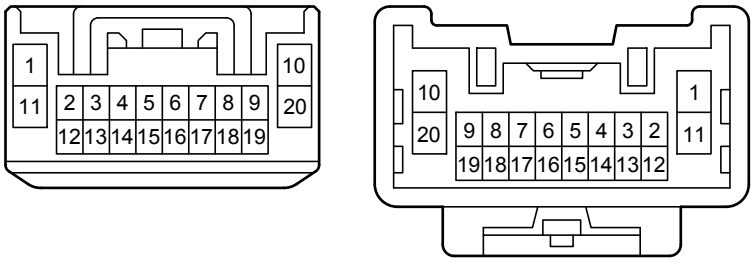

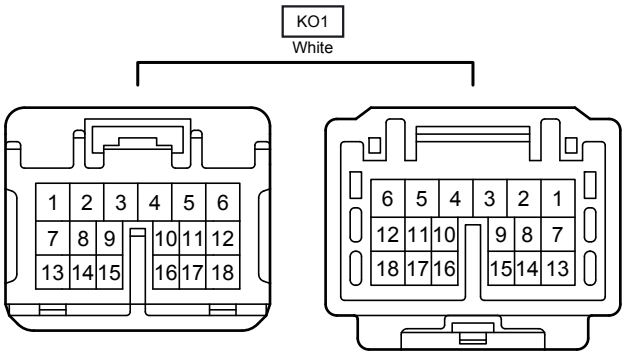
KO1
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

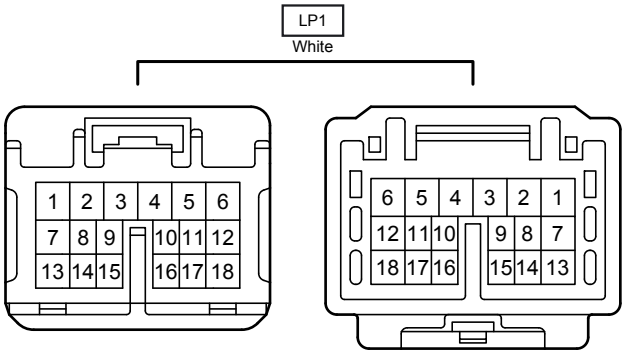
LP1
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

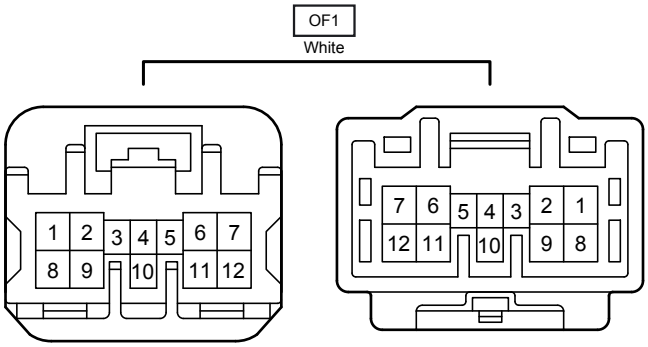
OF1
White
1 2 3 4 5 6 7
8 9 10 11 12
7 6 5 4 3 2 1
12 11 10 9 8

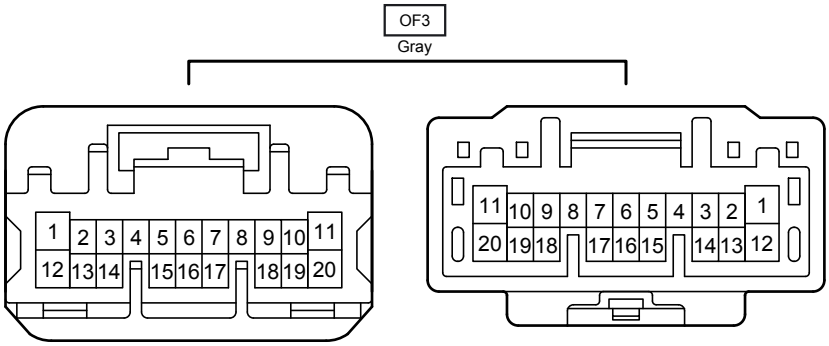
OF3
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

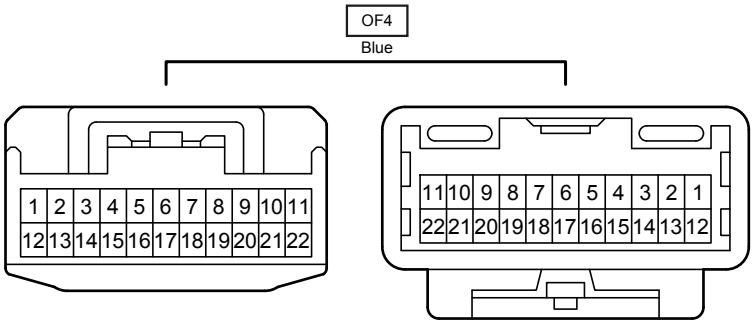
OF4
Blue
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12