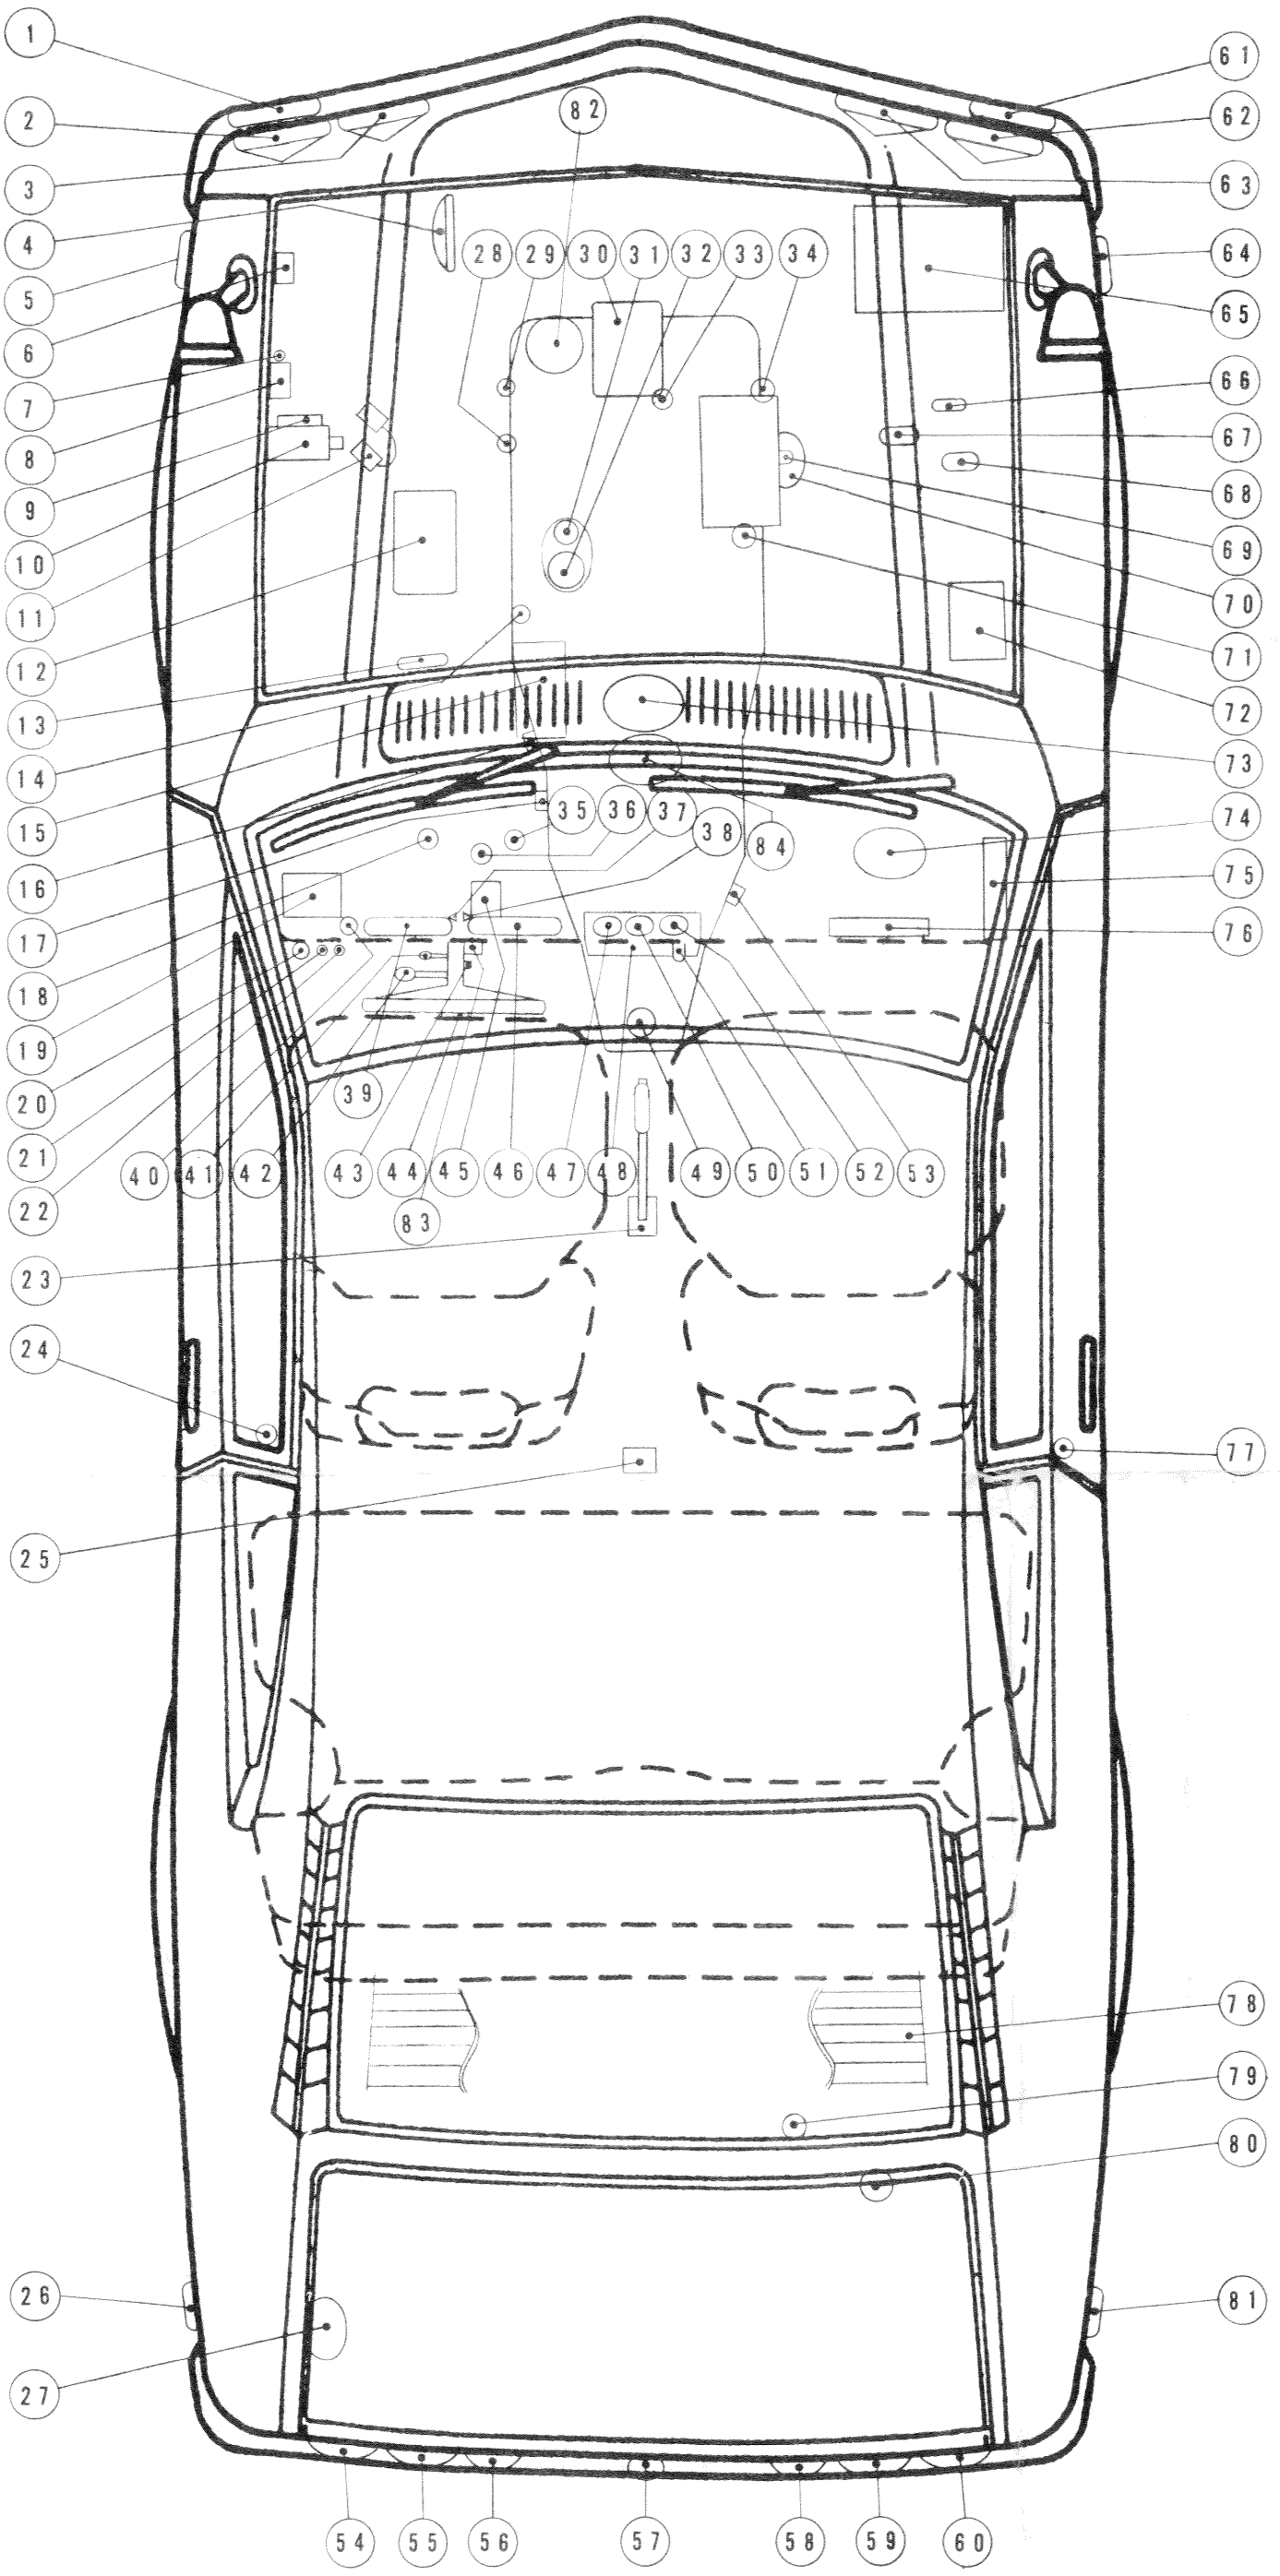


LOC NS
PART NO. 9999-95-0031-75
DESC. RX3WIRDIAG
QTY. ORD. 1 QTY. SHIP

MAZDA
FORM 120-104


002 INV. LINE
57393 INV. NO.
4-15-75 INV. DATE
60504 DLR. CODE

1975 AUTOMOBILES

MAZDA RX-3 WIRING DIAGRAM

© 1974 TOYO KOGYO CO., LTD.

PRINTED IN JAPAN 5108-10-74L

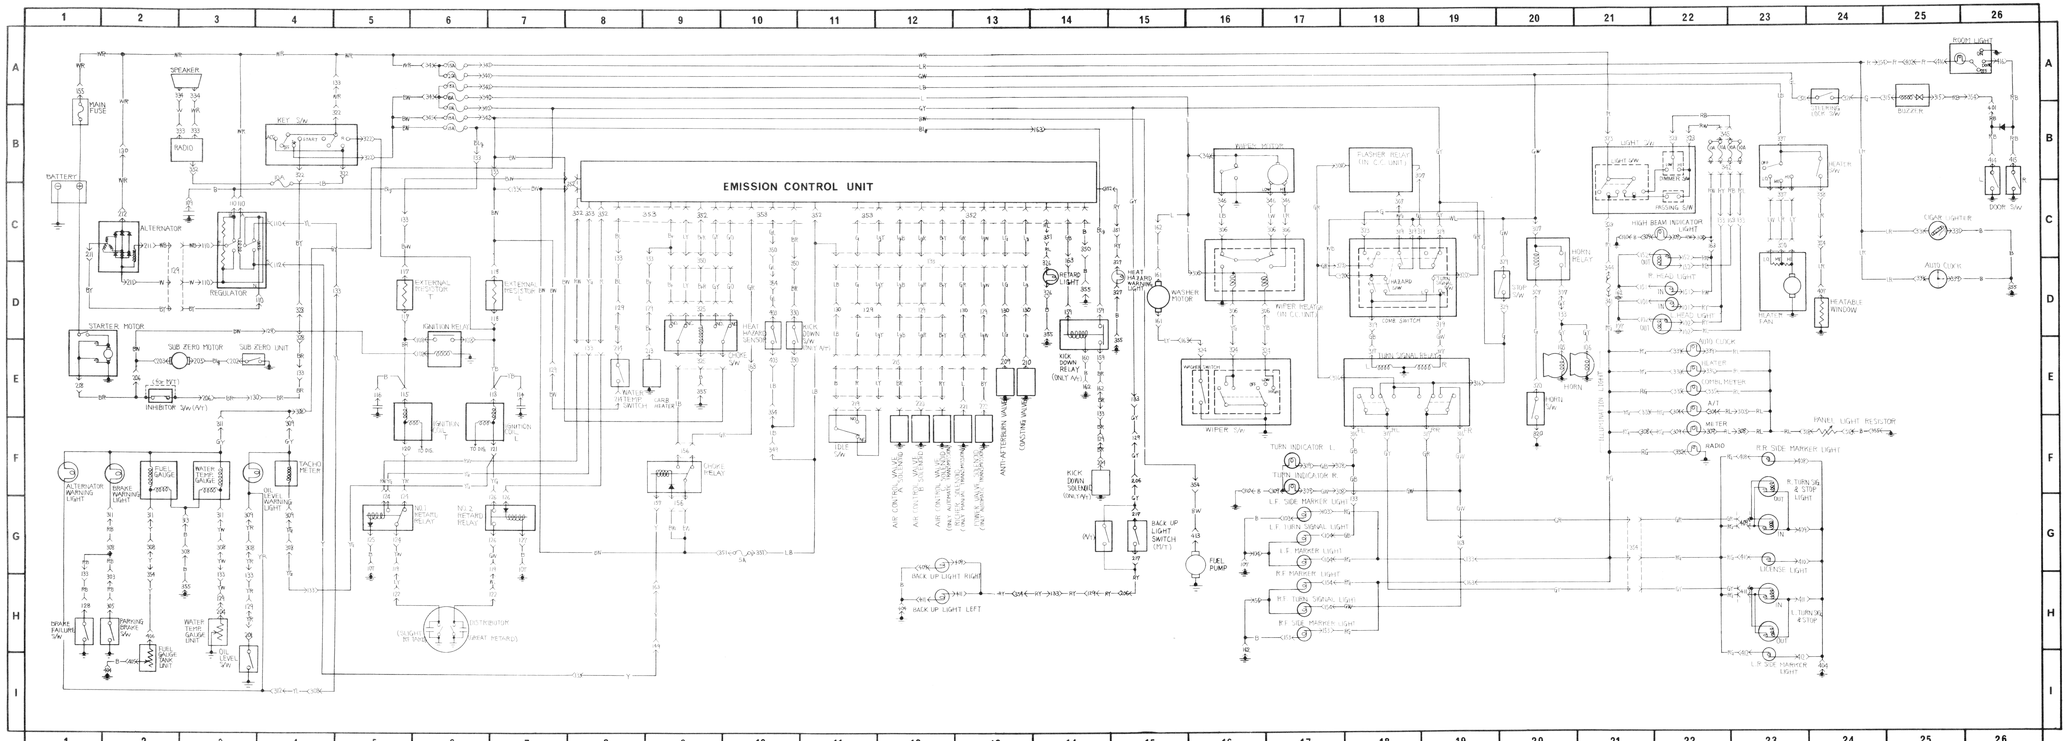

INDEX

COMPONENT	LOCATION
AIR CONDITIONER E ····· F-12	70 RIGHT SIDE OF ENG. RM
A SOLENOID ····· E-12	
B SOLENOID ····· F-12	
C SOLENOID ····· F-12	
ALTERNATOR ····· F-4	32 ABOVE ENGINE FRONT
ALTERNATOR WARNING LIGHT ····· F-4	31 AT COMBINATION METER
ANTI-AFTERBURN VALVE ····· F-11	32 ABOVE ENGINE
ASH-TRAY LIGHT ····· D-23	41 AT COMBINATION METER
BACK UP LIGHT	
LEFT ····· B-12	74 UNDER REAR BUMPER
RIGHT ····· B-12	75 UNDER REAR BUMPER
BACK UP LIGHT SWITCH ····· G-11	53 AT TRANSMISSION
BATTERY ····· A-2	1 UNDER DRIVER'S SEAT FRONT
BRAKE FAILURE SWITCH ····· D-20	33 AT BRAKE PEDAL
BRAKE FLUID LEVEL ····· D-20	34 AT COMBINATION METER
BRAKE WARNING LIGHT ····· D-20	35 AT COMBINATION METER
BUZZER ····· E-23	73 UNDER DASH BOARD LEFT
CARB HEATER ····· E- 9	11 AT CARBURETOR
CHOKE RELAY ····· E- 9	12 ABOVE ENGINE
CIGAR LIGHTER ····· E-23	42 FRONT CONSOLE
CLOCK ····· F-23	43 ABOVE ENGINE
CONSTANT VALVE ····· F-11	33 ABOVE ENGINE
COMBINATION METER ····· D-18	40 LEFT SIDE OF STEERING COLUMN
DIMMER SWITCH ····· E-21	47 AT COMBINATION SWITCH
DISTRIBUTOR ····· E- 9	82 ABOVE ENGINE
DOOR SWITCH	
LEFT ····· E-24	83 AT DOOR
RIGHT ····· E-25	82 AT DOOR
EMISSION CONTROL UNIT ····· C-11	71 UNDER DASH BOARD RIGHT
EXTERNAL RESISTOR	
LEADING ····· B-	16 ON FENDER APRON LEFT FRONT
TRAILING ····· B-	17 ON FENDER APRON LEFT FRONT
FLASHER RELAY ····· E-18	19 IN CENTER CONTROL UNIT
FUEL GAUGE ····· F- 3	36 AT COMBINATION METER
FUEL GAUGE TANK UNIT ····· E- 3	9 AT FUEL TANK
FUEL PUMP ····· F- 3	15 UNDER LEFT REAR SEAT
HAZARD SWITCH ····· E-18	47 RIGHT SIDE OF STEERING COLUMN
HEAD LIGHT	
LEFT UP ····· D-22	3 ABOVE FRONT BUMPER
LEFT DOT ····· D-22	4 ABOVE FRONT BUMPER
RIGHT UP ····· D-22	50 ABOVE FRONT BUMPER
RIGHT DOT ····· D-22	51 ABOVE FRONT BUMPER
HEATABLE WINDOW ····· D-24	81 AT REAR WINDOW
HEAT HAZARD WARNING LIGHT ····· D-23	48 AT COMBINATION METER
HEATER FAN ····· D-23	79 UNDER DASH BOARD RIGHT
HEATER SWITCH ····· D-23	78 AT CENTER CONSOLE
HIGH BEAM INDICATION LIGHT ····· C-22	46 AT COMBINATION METER
HORN ····· D-20	36 ON FENDER APRON RIGHT FRONT
HORN RELAY ····· D-20	37 UNDER DASH BOARD LEFT
HORN SWITCH ····· D-20	38 STEERING WHEEL CENTER
IDLE S/W ····· F-11	30 AT CARBURETOR
IGNITION COIL ····· F- 3	10 ON FENDER APRON LEFT FRONT
LEADING ····· F- 3	10 ON FENDER APRON LEFT FRONT
TRAILING ····· F- 3	10 ON FENDER APRON LEFT FRONT
INSTRUMENT LIGHT ····· E-22	44 AT COMBINATION METER
ILLUMINATION LIGHT ····· E-22	45 AT SHIFT LEVER
INHIBITOR SWITCH ····· E- 5	52 AT TRANSMISSION
KEY SWITCH ····· B-	69 RIGHT SIDE OF STEERING COLUMN
KICK DOWN RELAY ····· E-11	54 ON ZENSHA APRON FRONT
KICK DOWN SOLENOID ····· E-11	55 AT TRANSMISSION
KICK DOWN SWITCH ····· E-10	56 ABOVE VOLKSWAGEN PEDAL
LICENSE LIGHT ····· G-23	85 ABOVE REAR BUMPER
LIGHT SWITCH ····· F-23	39 LEFT SIDE OF DASH BOARD
MAIN FUSE ····· A- 1	24 ON FENDER APRON RIGHT FRONT
MARKER LIGHT	
LEFT ····· G-17	87 AT FRONT BUMPER LEFT
RIGHT ····· G-17	88 AT FRONT BUMPER RIGHT
NOISE CONDENSER ·····	5 NEAR REGULATOR
OIL LEVEL SWITCH ····· B-	28 AT OIL PAN
OIL LEVEL WARNING LIGHT ····· F-	29 AT COMBINATION METER
PANEL LIGHT RESISTER ····· F-24	64 LEFT SIDE OF DASH BOARD
PARKING BRAKE SWITCH ····· F-	27 AT PARKING BRAKE
PARKING BRAKE WARNING LIGHT ····· F-	26 AT COMBINATION METER
POWER VALVE ····· F-11	35 AT CARBURETOR
RADIO ····· E-	66 AT FRONT CONSOLE
RADIO ANTENNA ····· C-	2 ON FENDER APRON LEFT
RETARD RELAY ····· B-24	25 LEFT SIDE OF DASH BOARD
RETARD RELAY	
NO.1 ····· G-	25 ON FENDER APRON LEFT CENTER
NO.2 ····· G-	13 ON FENDER APRON LEFT CENTER
RIGHT SPEAKER ····· C-	1 AT PARCEL SHELF
ROOM LIGHT ····· A-22	76 AT INTEGRATED CONSOLE
SIDE MARKER LIGHT	
LEFT FRONT ····· F-17	7 AT LEFT FRONT FENDER
RIGHT FRONT ····· F-17	84 AT RIGHT FRONT FENDER
LEFT REAR ····· F-23	74 AT LEFT REAR FENDER
RIGHT REAR ····· F-23	75 AT RIGHT REAR FENDER
SPEAKER ····· B-	86 UNDER CROSS RAD CENTER
STARTER MOTOR ····· A-	23 AT ENGINE
STEERING LOCK SWITCH ····· E-	63 AT KEY SWITCH
STOP LIGHT SWITCH ····· D-20	96 ABOVE BRAKE PEDAL
SUNROOF MOTOR ····· E-	57 AT RIGHT FENDER APRON
SUNROOF UNIT ····· E-	59 AT OIL PAN
TACHO-METER ····· F-	38 AT METER SET
TURN SIGNAL INDICATOR	
LEFT ····· F-17	97 AT METER SET
RIGHT ····· F-17	98 AT METER SET
TURN SIGNAL & STOP LIGHT	
LEFT ····· B-23	94 AT REAR END PANEL
RIGHT REAR ····· B-23	95 AT REAR END PANEL
TURN SIGNAL LIGHT	
LEFT ····· G-17	1 UNDER FRONT BUMPER
RIGHT ····· G-17	2 UNDER FRONT BUMPER
TURN SIGNAL FLASHER ····· E-18	18 IN CENTER CONTROL UNIT
TURN SIGNAL SWITCH ····· E-18	48 AT COMBINATION METER
WASHER SWITCH ····· D-18	62 AT COMBINATION SWITCH
WATER TEMPERATURE GAUGE ····· E- 3	35 AT COMBINATION METER
WATER TEMPERATURE GAUGE UNIT ····· E- 3	34 AT ENGINE LEFT
WATER THERMO SWITCH ····· E- 8	13 HEAD CYLINDER
WIPER MOTOR ····· C-14	73 UNDER DASH BOARD
WIPER RELAY ····· C-14	72 IN CENTER CONTROL UNIT
WIPER SWITCH ····· E-13	61 AT COMBINATION SWITCH