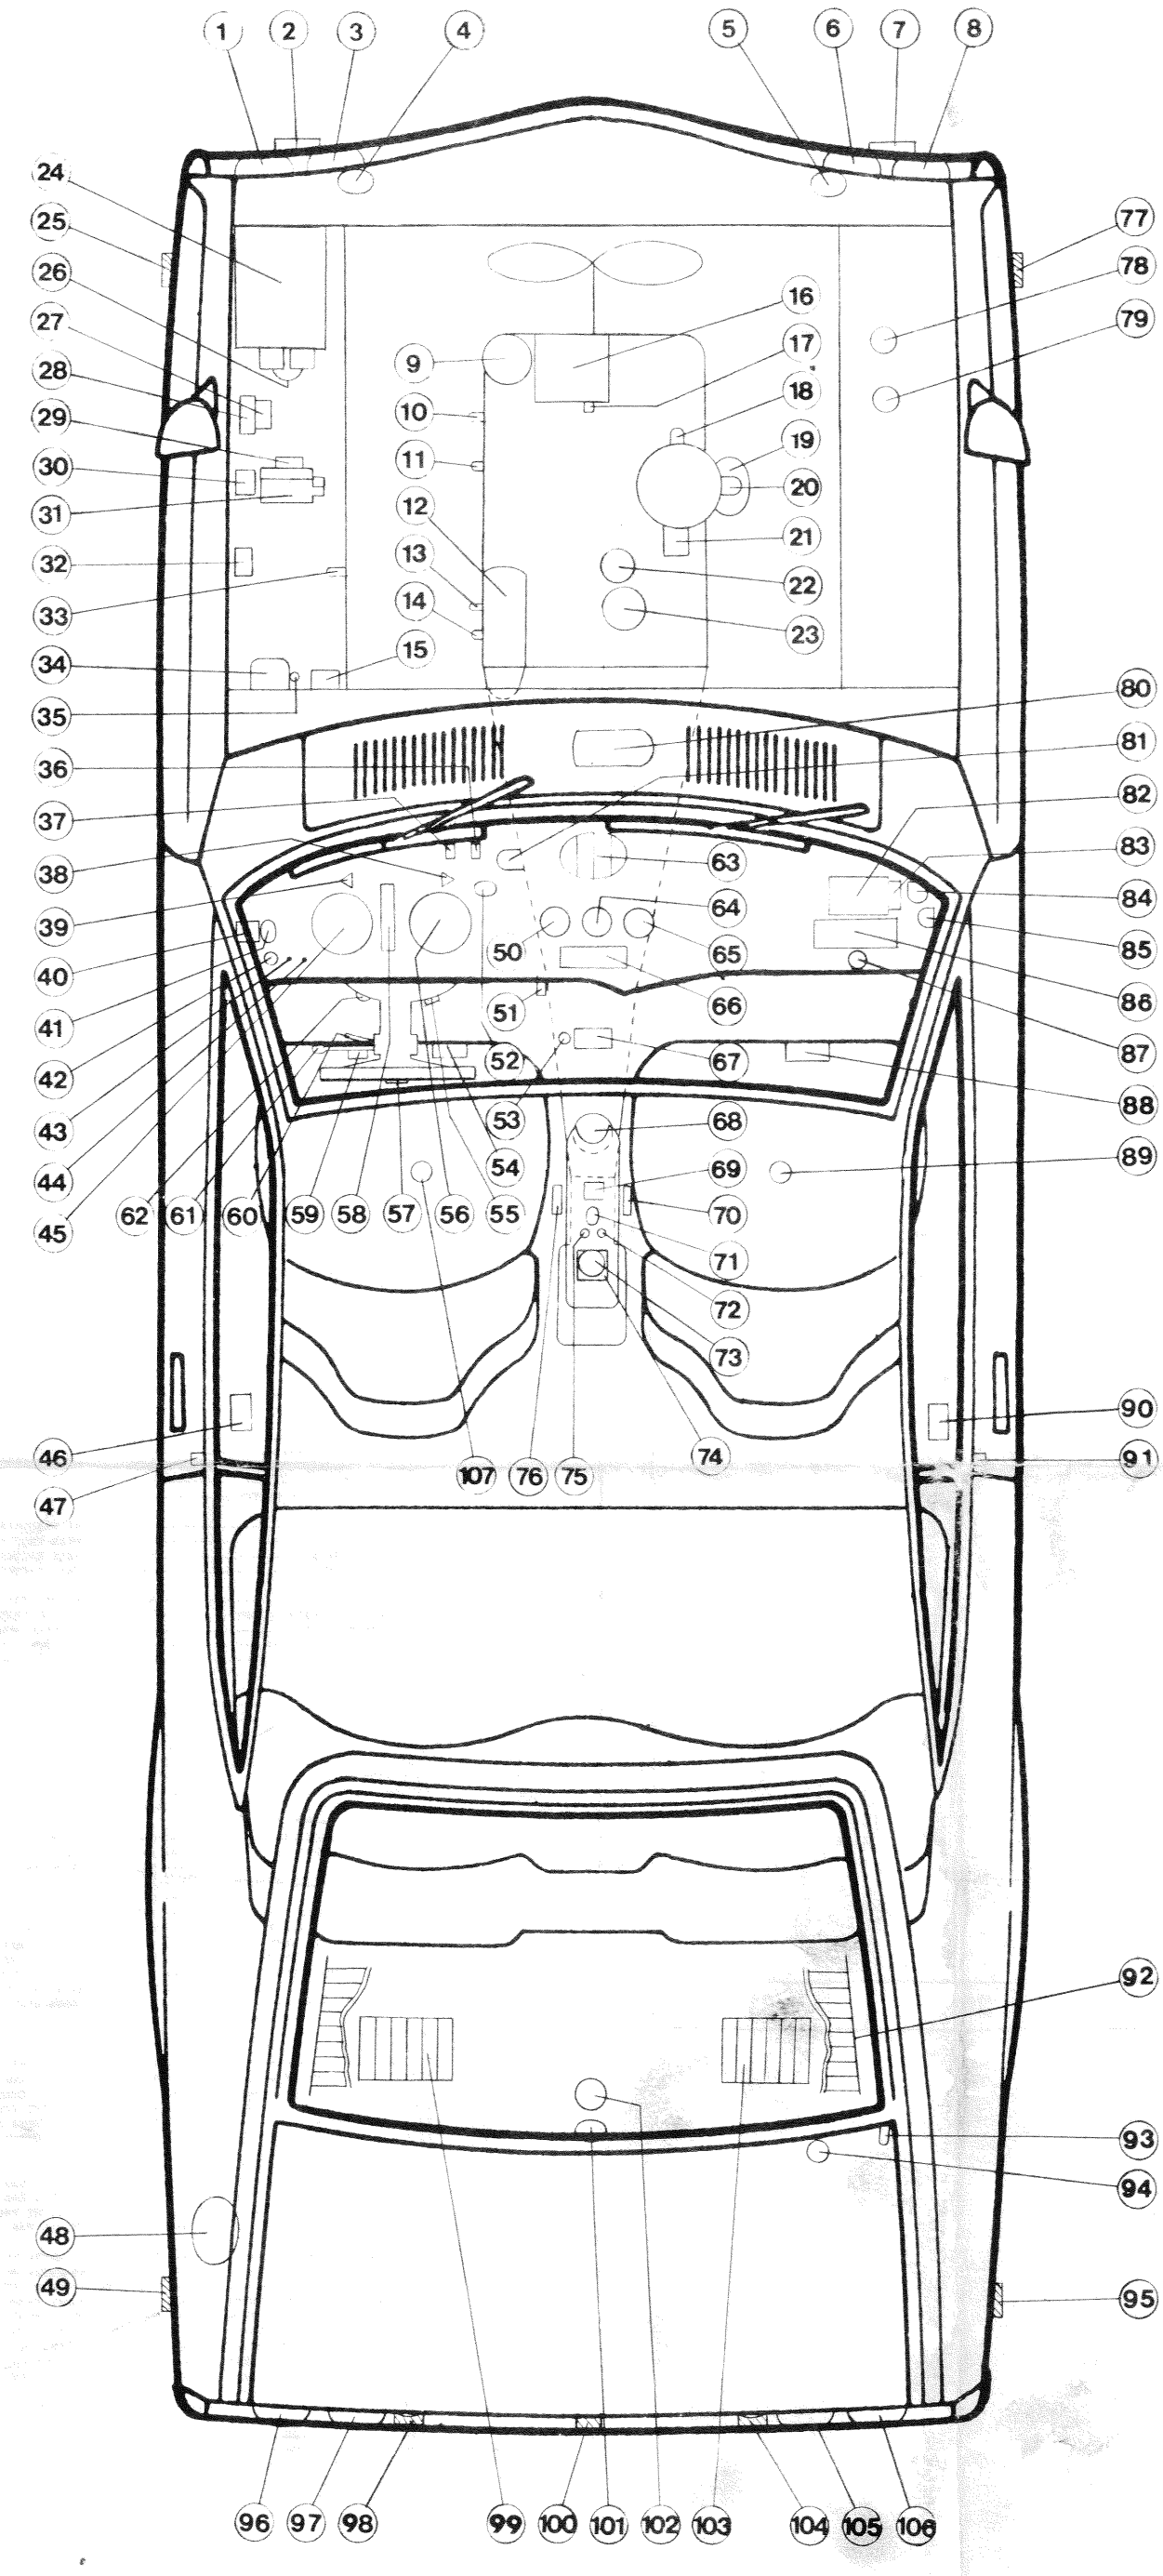



1975 AUTOMOBILES 9999-95-0106-75

MAZDA RX-4 WIRING DIAGRAM

Rich

© 1974 TOYO KOGYO CO.,LTD.

PRINTED IN JAPAN
5908-10-74L

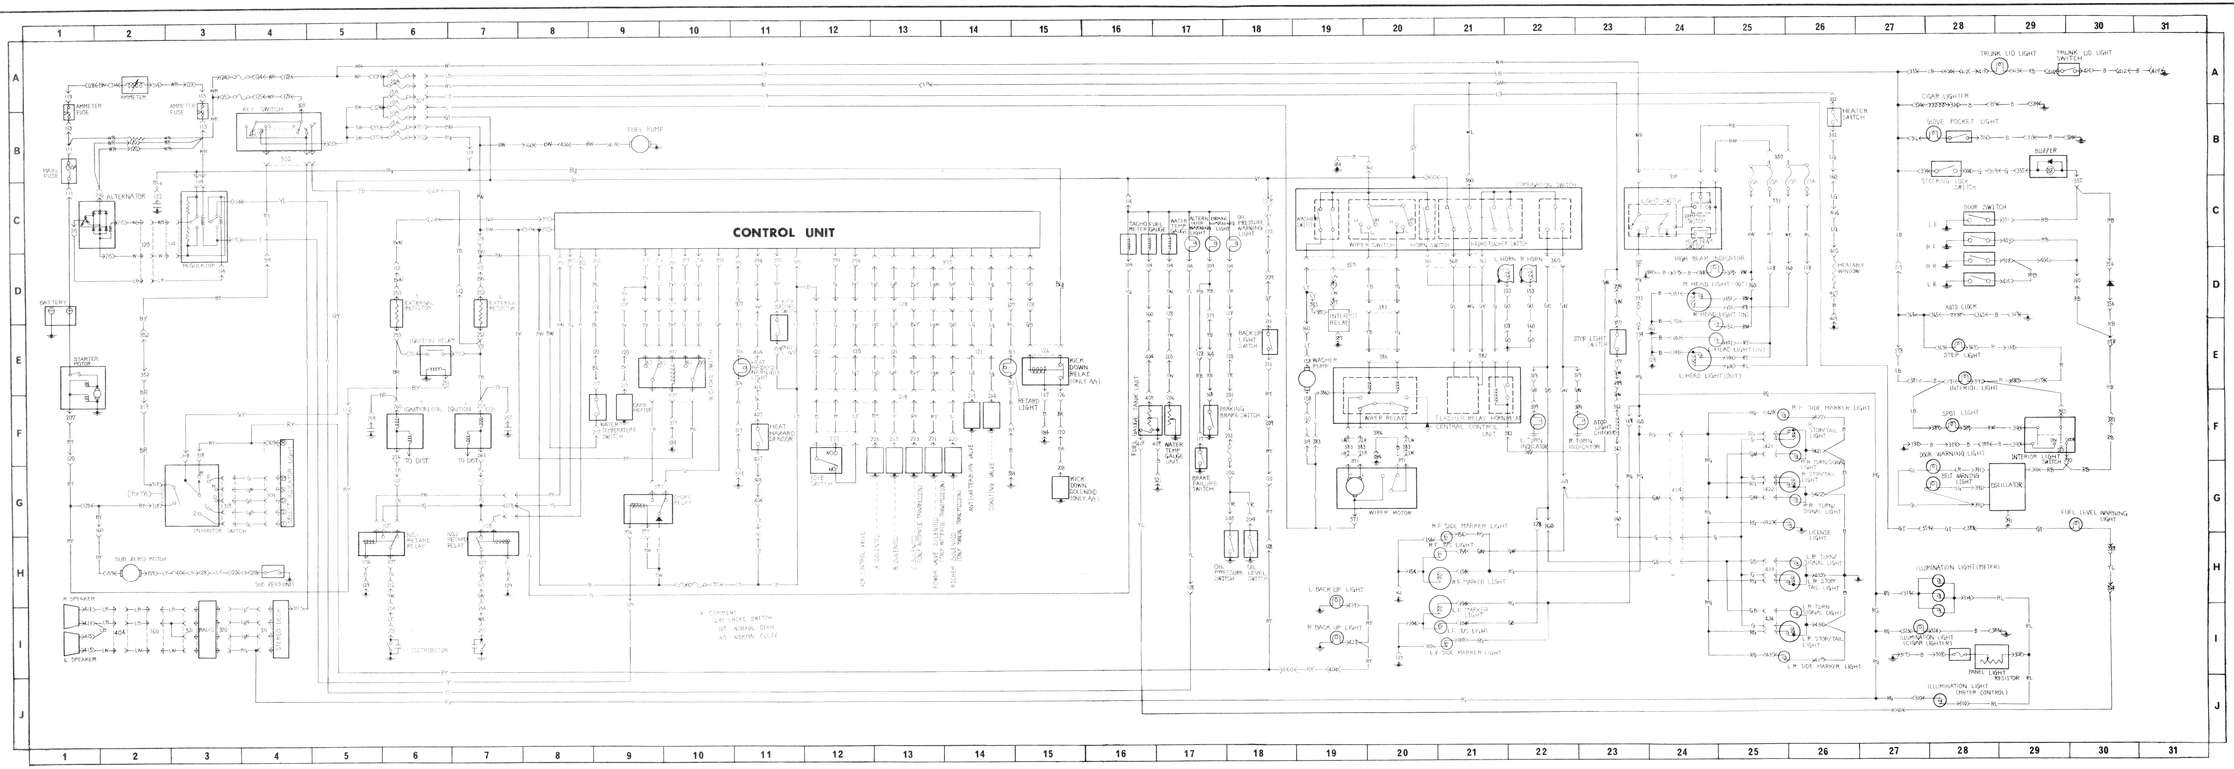
CONTROL UNIT
AMMETER FUSE
KEY SWITCH
FUEL PUMP
MAIN FUSE
GR ALTERNATOR
REGULATOR
BATTERY
STARTER MOTOR
IGNITION COIL
IGNITION COIL
IGNITION RESISTOR
IGNITION RESISTOR
IGNITION RELAY
TO DIST.
TO DIST.
INHIBITOR SWITCH
SUB ZERO MOTOR
SUB ZERO UNIT
R SPEAKER
L SPEAKER
DISTRIBUTOR
TACHO RUBY METER GAUGE
WATER TEMP. GAUGE
ALTERNATOR WARNING LIGHT
OIL PRESSURE WARNING LIGHT
WIPER SWITCH
HORN SWITCH
HAZARD SWITCH
L HORN
R HORN
HEATER SWITCH
TRUNK LID LIGHT
TRUNK LID LIGHT SWITCH
CIGAR LIGHTER
GLOVE POCKET LIGHT
STEERING LOCK SWITCH
BUFFER
DOOR SWITCH
AUTO CLOCK
STOP LIGHT SWITCH
R HEAD LIGHT (OUT)
L HEAD LIGHT (OUT)
HEADLAMP WARNING LIGHT
SPOT LIGHT
INTERIOR LIGHT
INTERIOR LIGHT SWITCH
R WASHER PUMP
L WASHER PUMP
WASHER RELAY
WIPER MOTOR
INTERMITTENT RELAY
R FRONT SIDE MARKER LIGHT
R REAR SIDE MARKER LIGHT
L FRONT SIDE MARKER LIGHT
L REAR SIDE MARKER LIGHT
L BACK UP LIGHT
R BACK UP LIGHT
R PARKING LIGHT
R TURN INDICATOR
L TURN INDICATOR
R TURN SIGNAL LIGHT
L TURN SIGNAL LIGHT
R STOP/TAIL LIGHT
L STOP/TAIL LIGHT
R TURN SIGNAL LIGHT
L TURN SIGNAL LIGHT
LICENSE LIGHT
R REAR SIDE MARKER LIGHT
L REAR SIDE MARKER LIGHT
R STOP/TAIL LIGHT
L STOP/TAIL LIGHT
ILLUMINATION LIGHT (METER CONTROL)
PANEL LIGHT RESISTOR
FUEL LEVEL WARNING LIGHT
ILLUMINATION LIGHT (CIGAR LIGHTER)
ILLUMINATION LIGHT (METER CONTROL)
HEADLAMP WARNING LIGHT
HEATED REAR WINDOW
HEATED REAR WINDOW RELAY
HEATED REAR WINDOW TIMER
HEATED REAR WINDOW SWITCH
HEATED REAR WINDOW
HEATED REAR WINDOW
HEATED REAR WINDOW