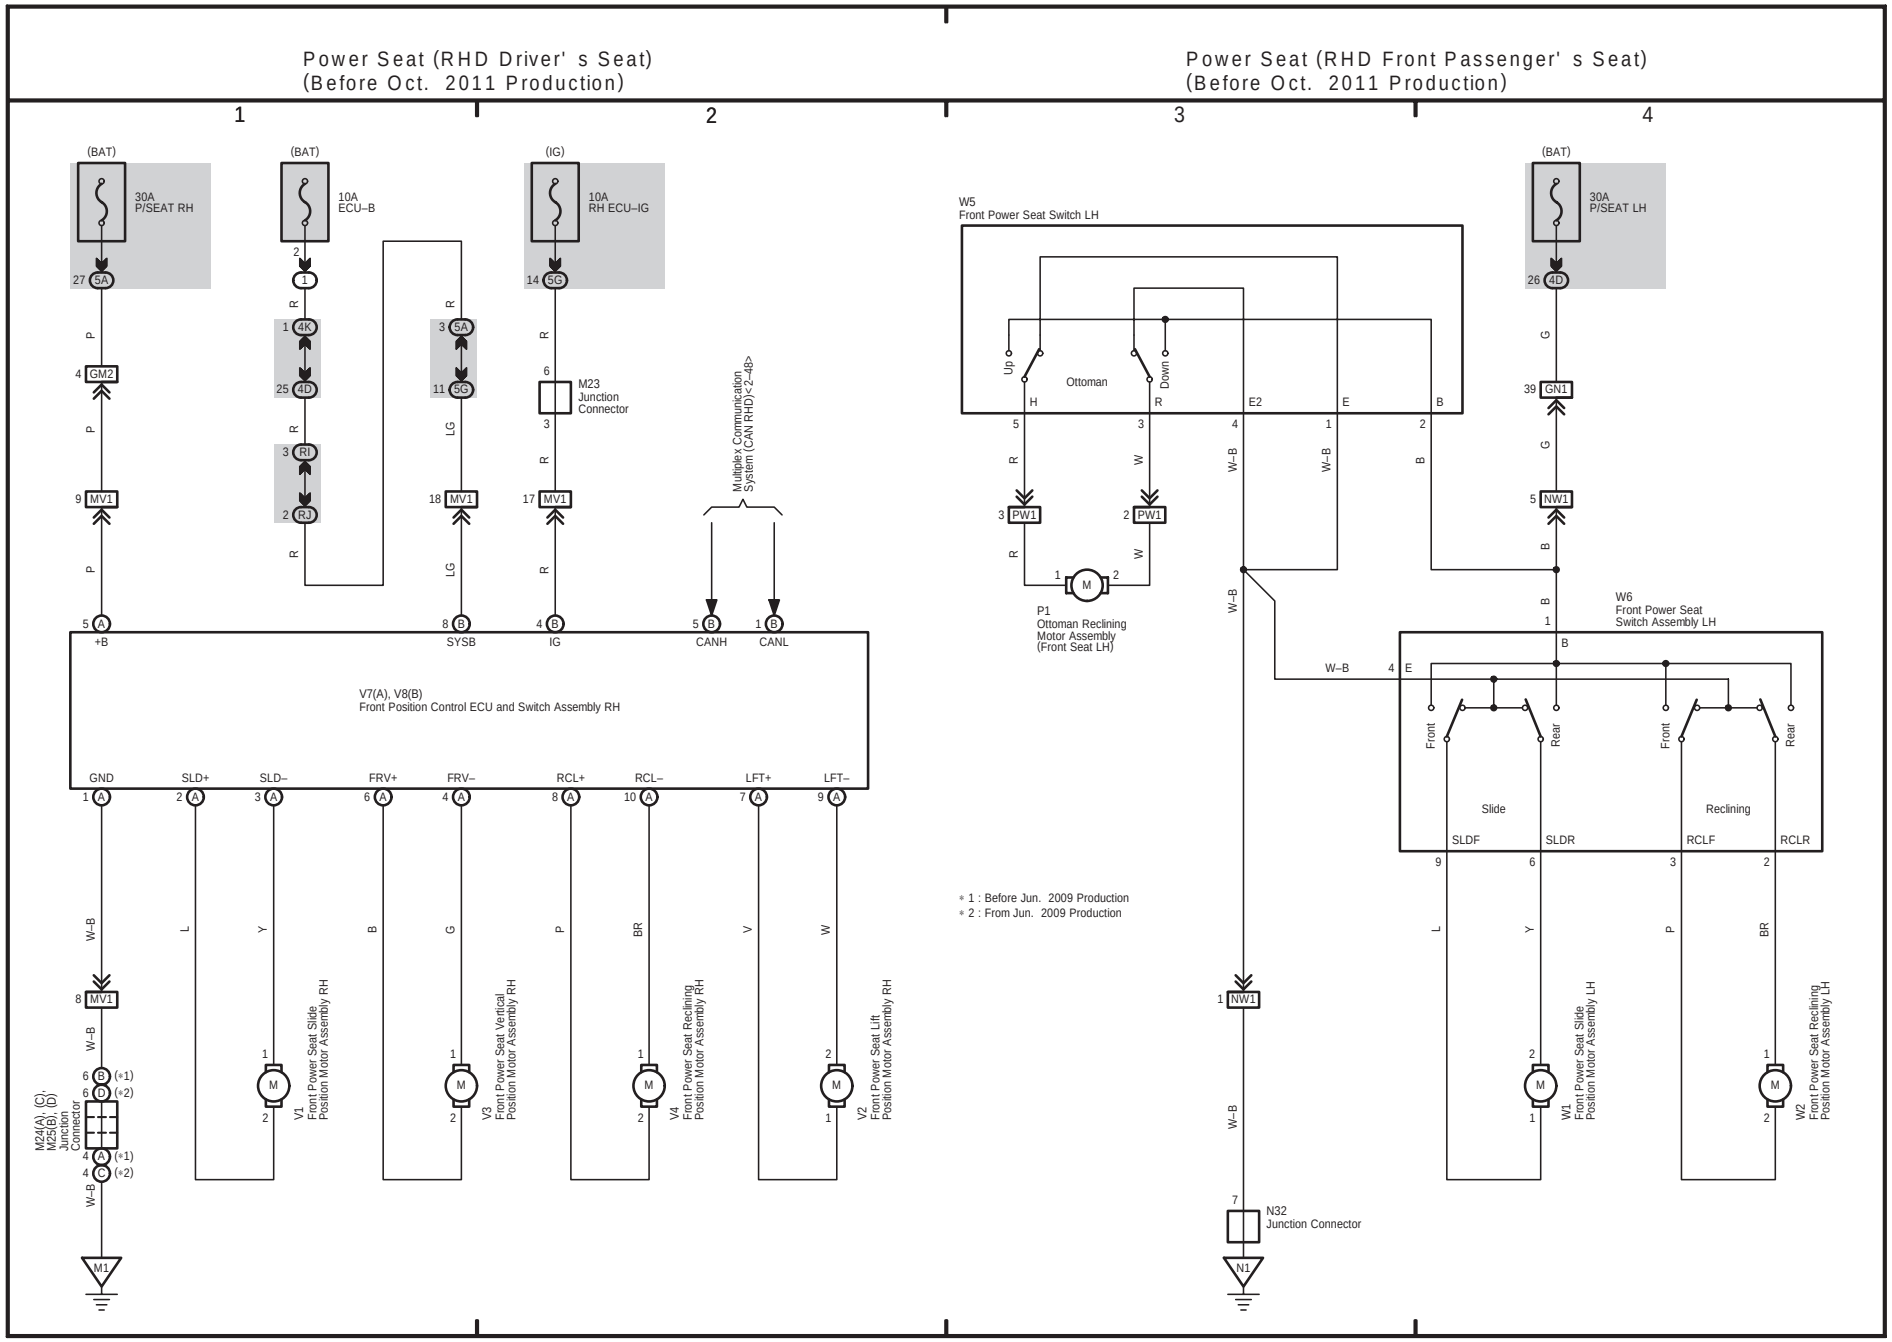
Power Seat (RHD Driver' s Seat)
(Before Oct. 2011 Production)
Power Seat (RHD Front Passenger' s Seat)
(Before Oct. 2011 Production)
1
2
3
4
(BAT)
30A
P/SEAT RH
(BAT)
10A
ECU–B
(IG)
10A
RH ECU–IG
M23
Junction
Connector
Multiplex Communication
System (CAN RHD)<2–48>
+B
SYSB
IG
CANH
CANL
V7(A), V8(B)
Front Position Control ECU and Switch Assembly RH
GND
SLD+
SLD–
FRV+
FRV–
RCL+
RCL–
LFT+
LFT–
M24(A), (C),
M25(B), (D)
Junction
Connector
V1
Front Power Seat Slide
Position Motor Assembly RH
V3
Front Power Seat Vertical
Position Motor Assembly RH
V4
Front Power Seat Reclining
Position Motor Assembly RH
V2
Front Power Seat Lift
Position Motor Assembly RH
W5
Front Power Seat Switch LH
Up
Down
Ottoman
P1
Ottoman Reclining
Motor Assembly
(Front Seat LH)
(BAT)
30A
P/SEAT LH
W6
Front Power Seat
Switch Assembly LH
Front
Rear
Slide
Reclining
SLDF
SLDR
RCLF
RCLR
W1
Front Power Seat Slide
Position Motor Assembly LH
W2
Front Power Seat Reclining
Position Motor Assembly LH
N32
Junction Connector
∗ 1 : Before Jun. 2009 Production
∗ 2 : From Jun. 2009 Production