(Cont. next page)

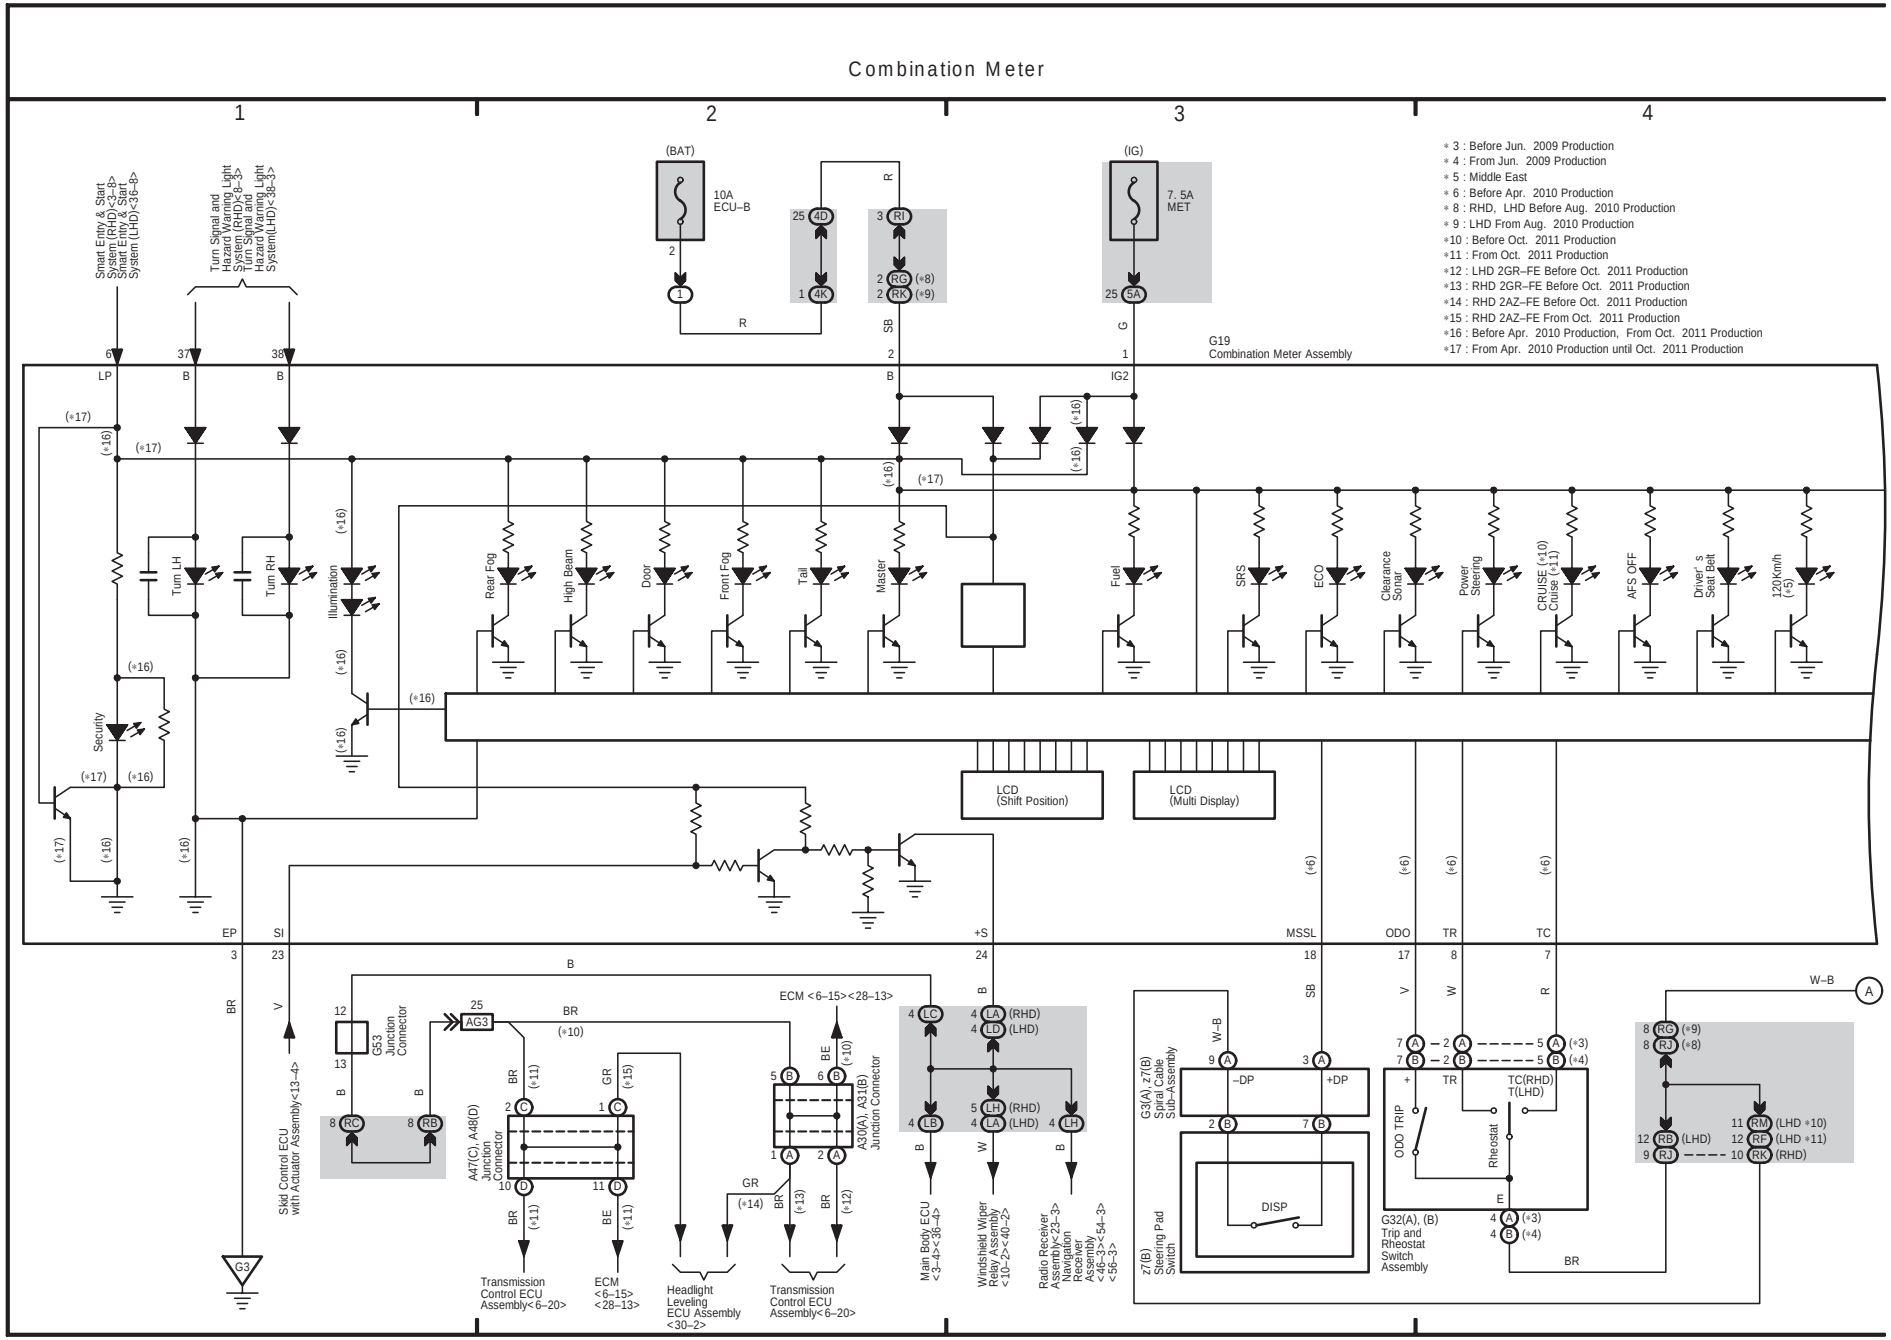

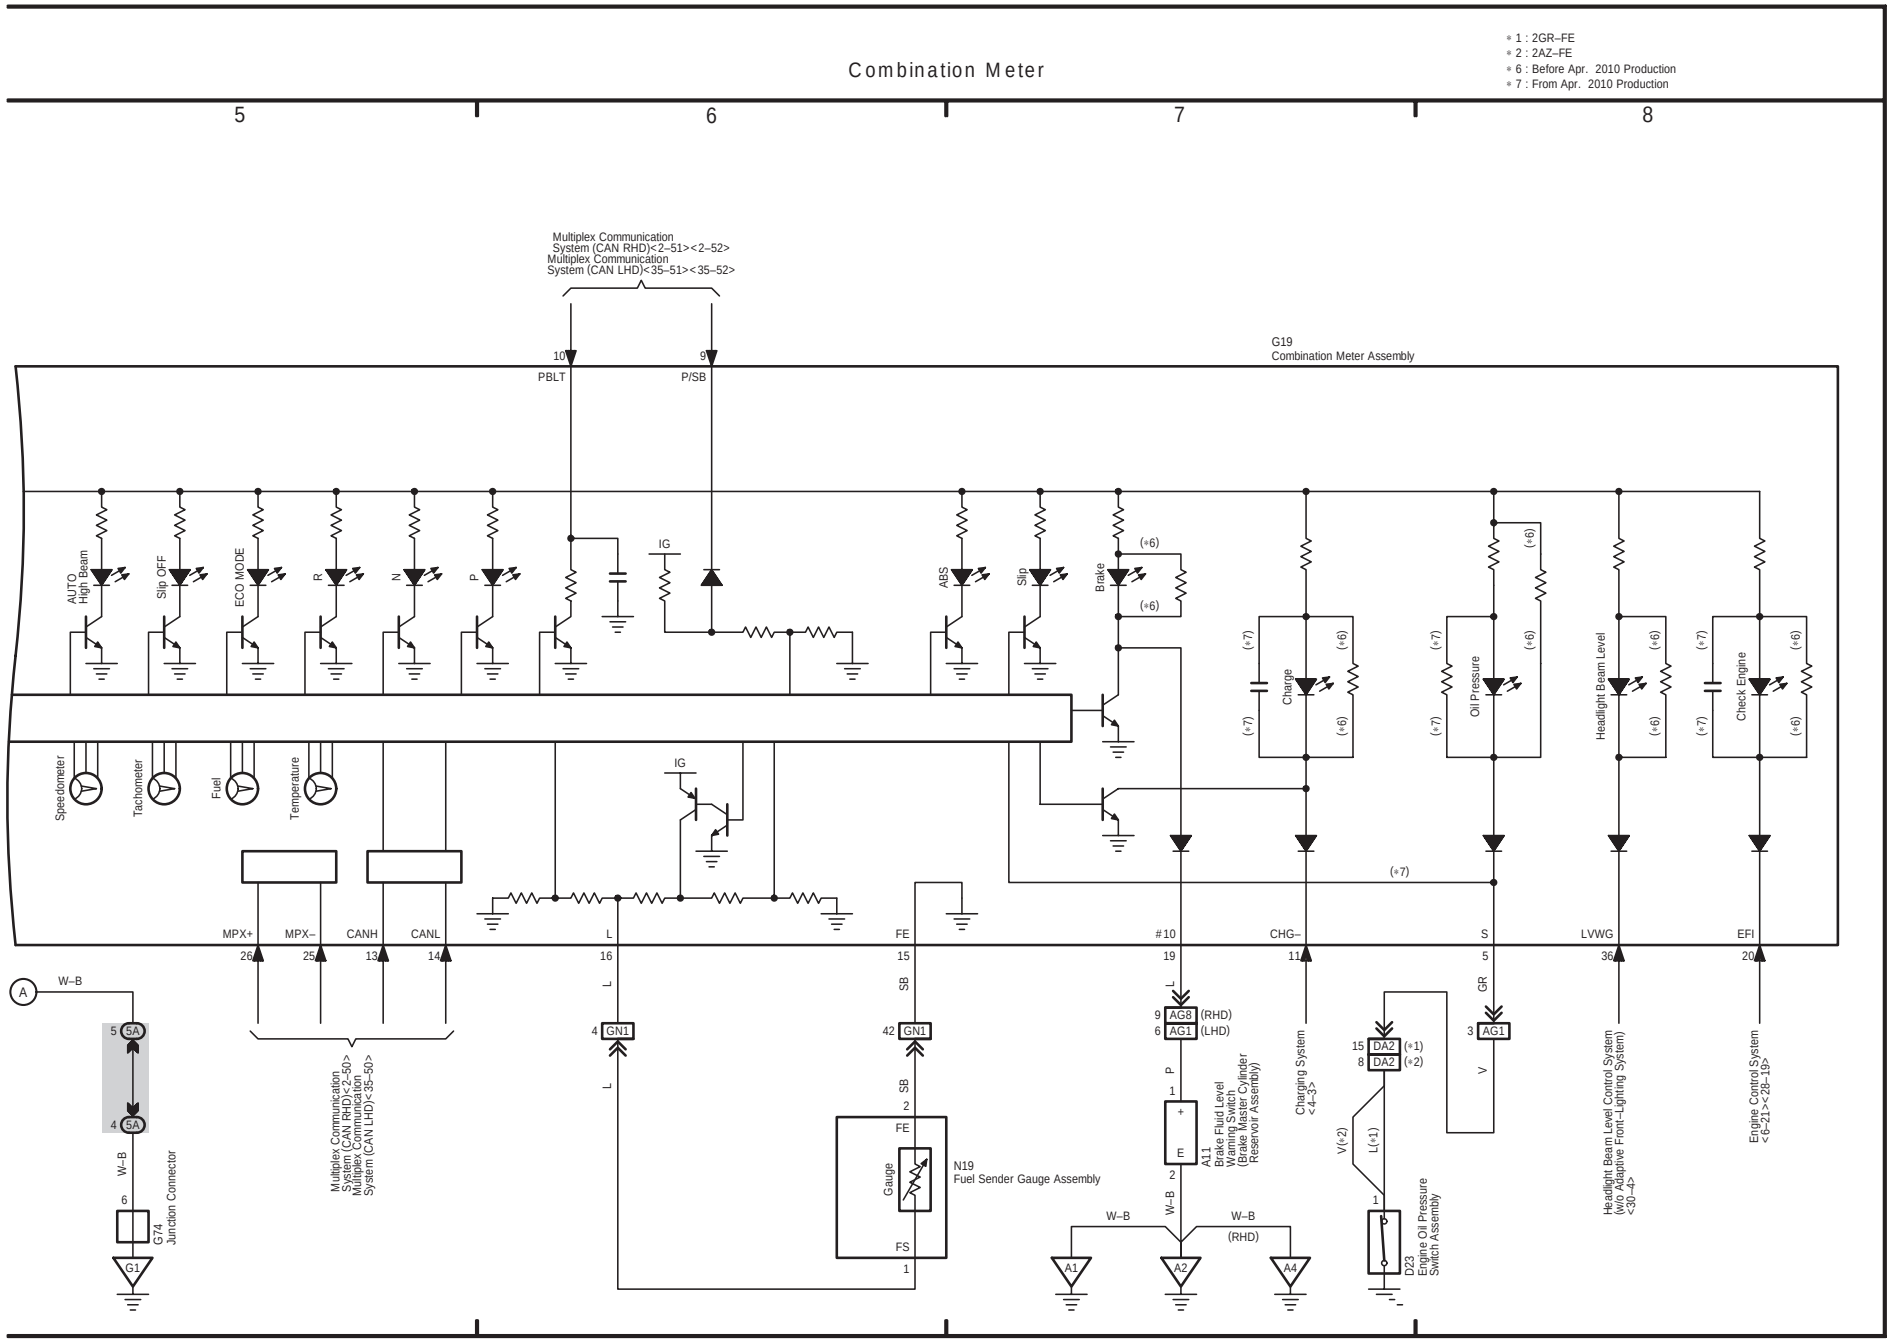
Combination Meter
* 1 : 2GR–FE
* 2 : 2AZ–FE
* 6 : Before Apr. 2010 Production
* 7 : From Apr. 2010 Production
5
6
7
8
Multiplex Communication System (CAN RHD)<2–51><2–52>
Multiplex Communication System (CAN LHD)<35–51><35–52>
G19
Combination Meter Assembly
PBLT
P/SB
AUTO High Beam
Slip OFF
ECO MODE
R
N
P
IG
ABS
Slip
Brake
Charge
Oil Pressure
Headlight Beam Level
Check Engine
Speedometer
Tachometer
Fuel
Temperature
MPX+
MPX–
CANH
CANL
L
FE
#10
CHG–
S
LVWG
EFI
W–B
5A
G74
Junction Connector
G1
GN1
N19
Fuel Sender Gauge Assembly
Gauge
FS
AG8 (RHD)
AG1 (LHD)
A11
Brake Fluid Level Warning Switch (Behind Master Cylinder Reservoir Assembly)
A1
A2
A4
(RHD)
Charging System <4–3>
DA2
D23
Engine Oil Pressure Switch Assembly
AG1
Multiplex Communication System (CAN RHD)<2–50>
Multiplex Communication System (CAN LHD)<35–50>
Headlight Beam Level Control System (w/o Adaptive Front-Lighting System) <30–4>
Engine Control System <6–21><28–19>