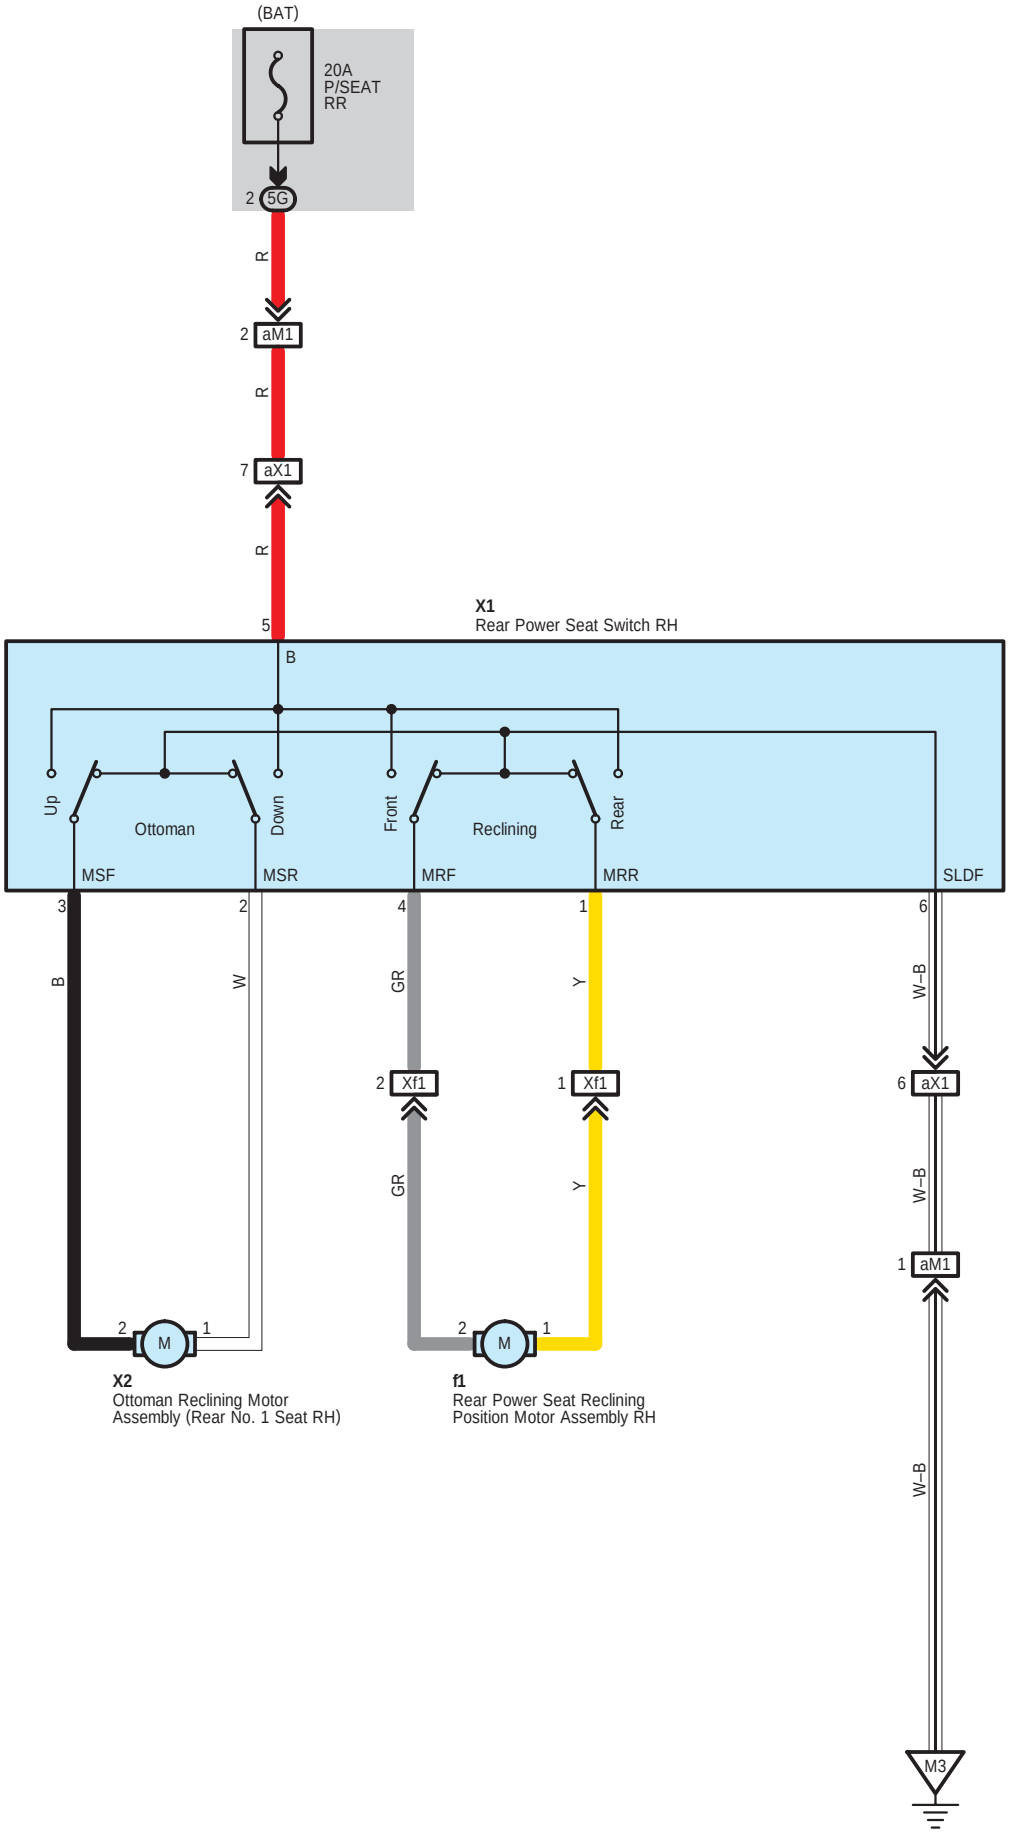
(BAT)
20A
P/SEAT
RR
2 5G
R
2 aM1
R
7 aX1
R
5
X1
Rear Power Seat Switch RH
B
Up
Ottoman
Down
Front
Reclining
Rear
MSF
MSR
MRF
MRR
SLDF
3
2
4
1
6
B
W
GR
Y
W–B
2 Xf1
1 Xf1
6 aX1
GR
Y
W–B
1 aM1
2
M
1
2
M
1
W–B
M3
X2
Ottoman Reclining Motor
Assembly (Rear No. 1 Seat RH)
f1
Rear Power Seat Reclining
Position Motor Assembly RH

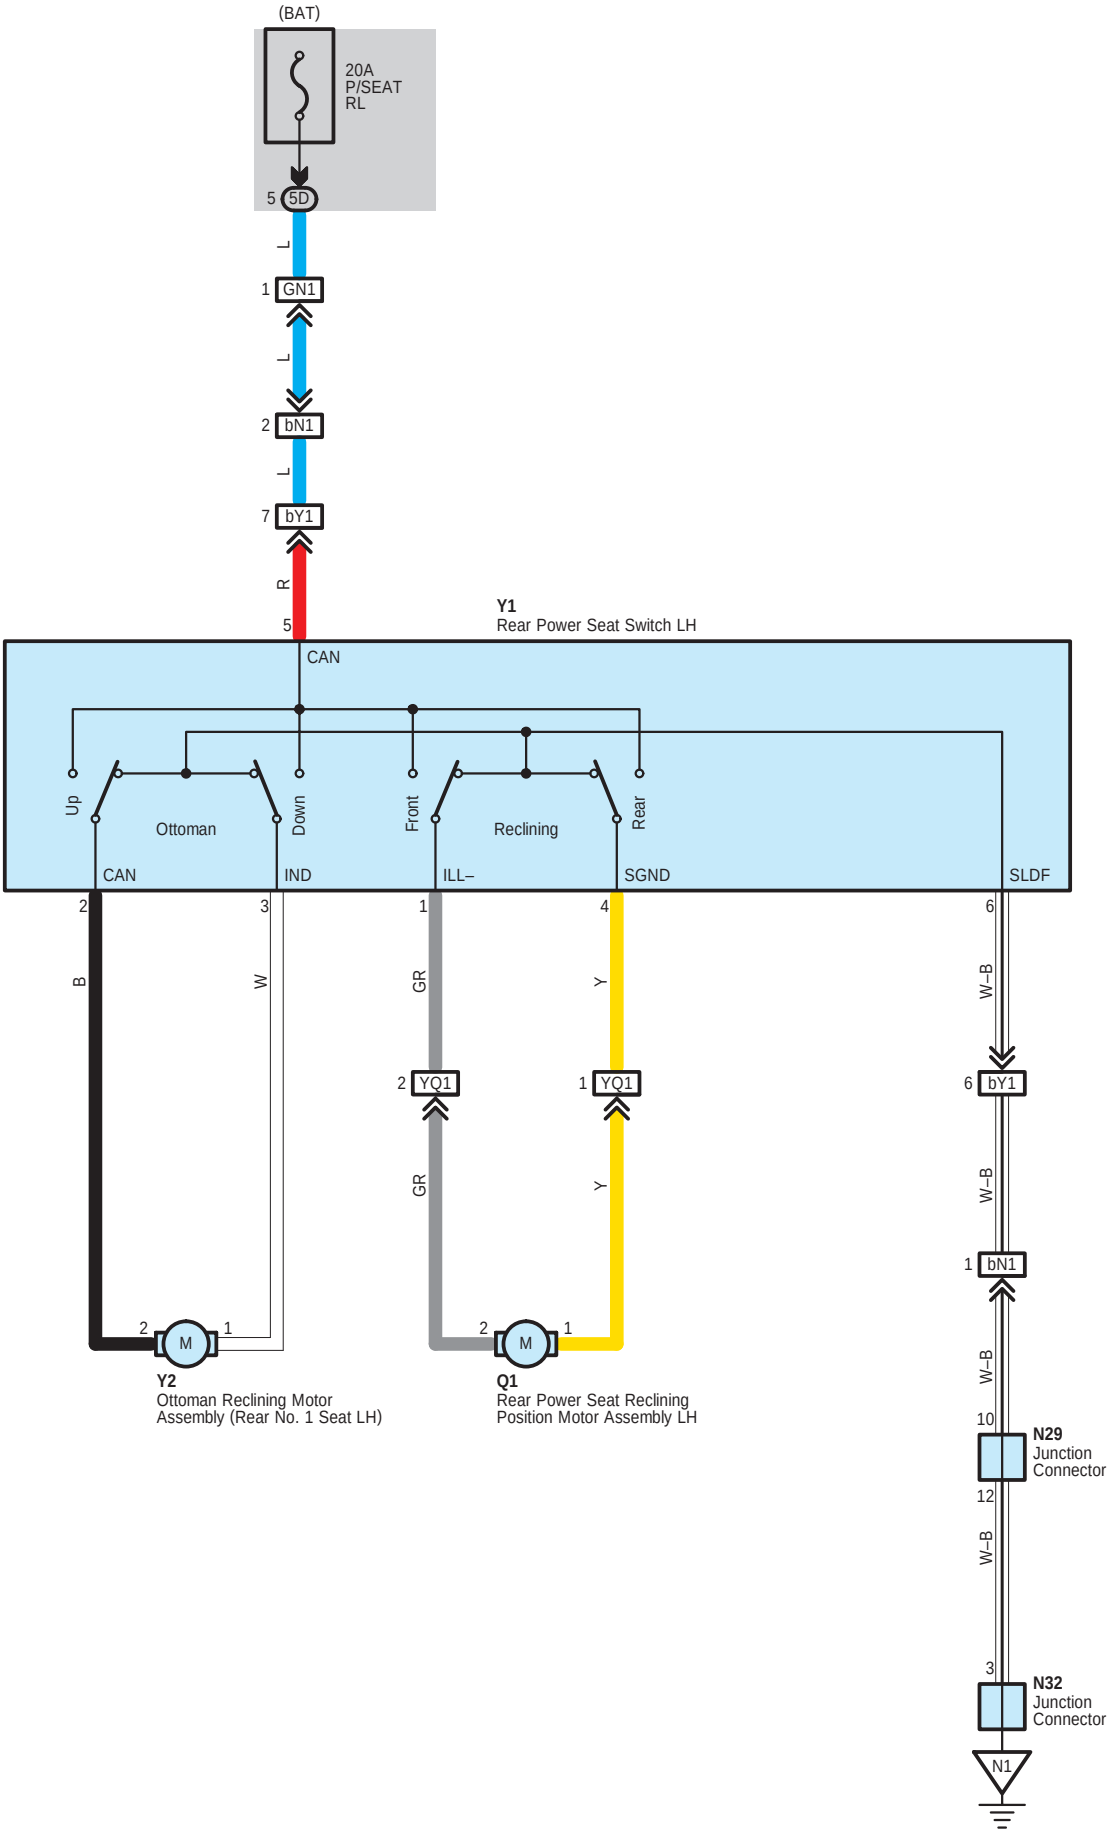
(BAT)
20A
P/SEAT
RL
5
5D
L
1
GN1
L
2
bN1
L
7
bY1
R
5
Y1
Rear Power Seat Switch LH
CAN
Up
Ottoman
Down
Front
Reclining
Rear
CAN
IND
ILL–
SGND
SLDF
2
3
1
4
6
B
W
GR
Y
W–B
2
YQ1
1
YQ1
6
bY1
GR
Y
W–B
1
bN1
2
M
1
2
M
1
W–B
10
N29
Junction
Connector
12
W–B
3
N32
Junction
Connector
N1
Y2
Ottoman Reclining Motor
Assembly (Rear No. 1 Seat LH)
Q1
Rear Power Seat Reclining
Position Motor Assembly LH

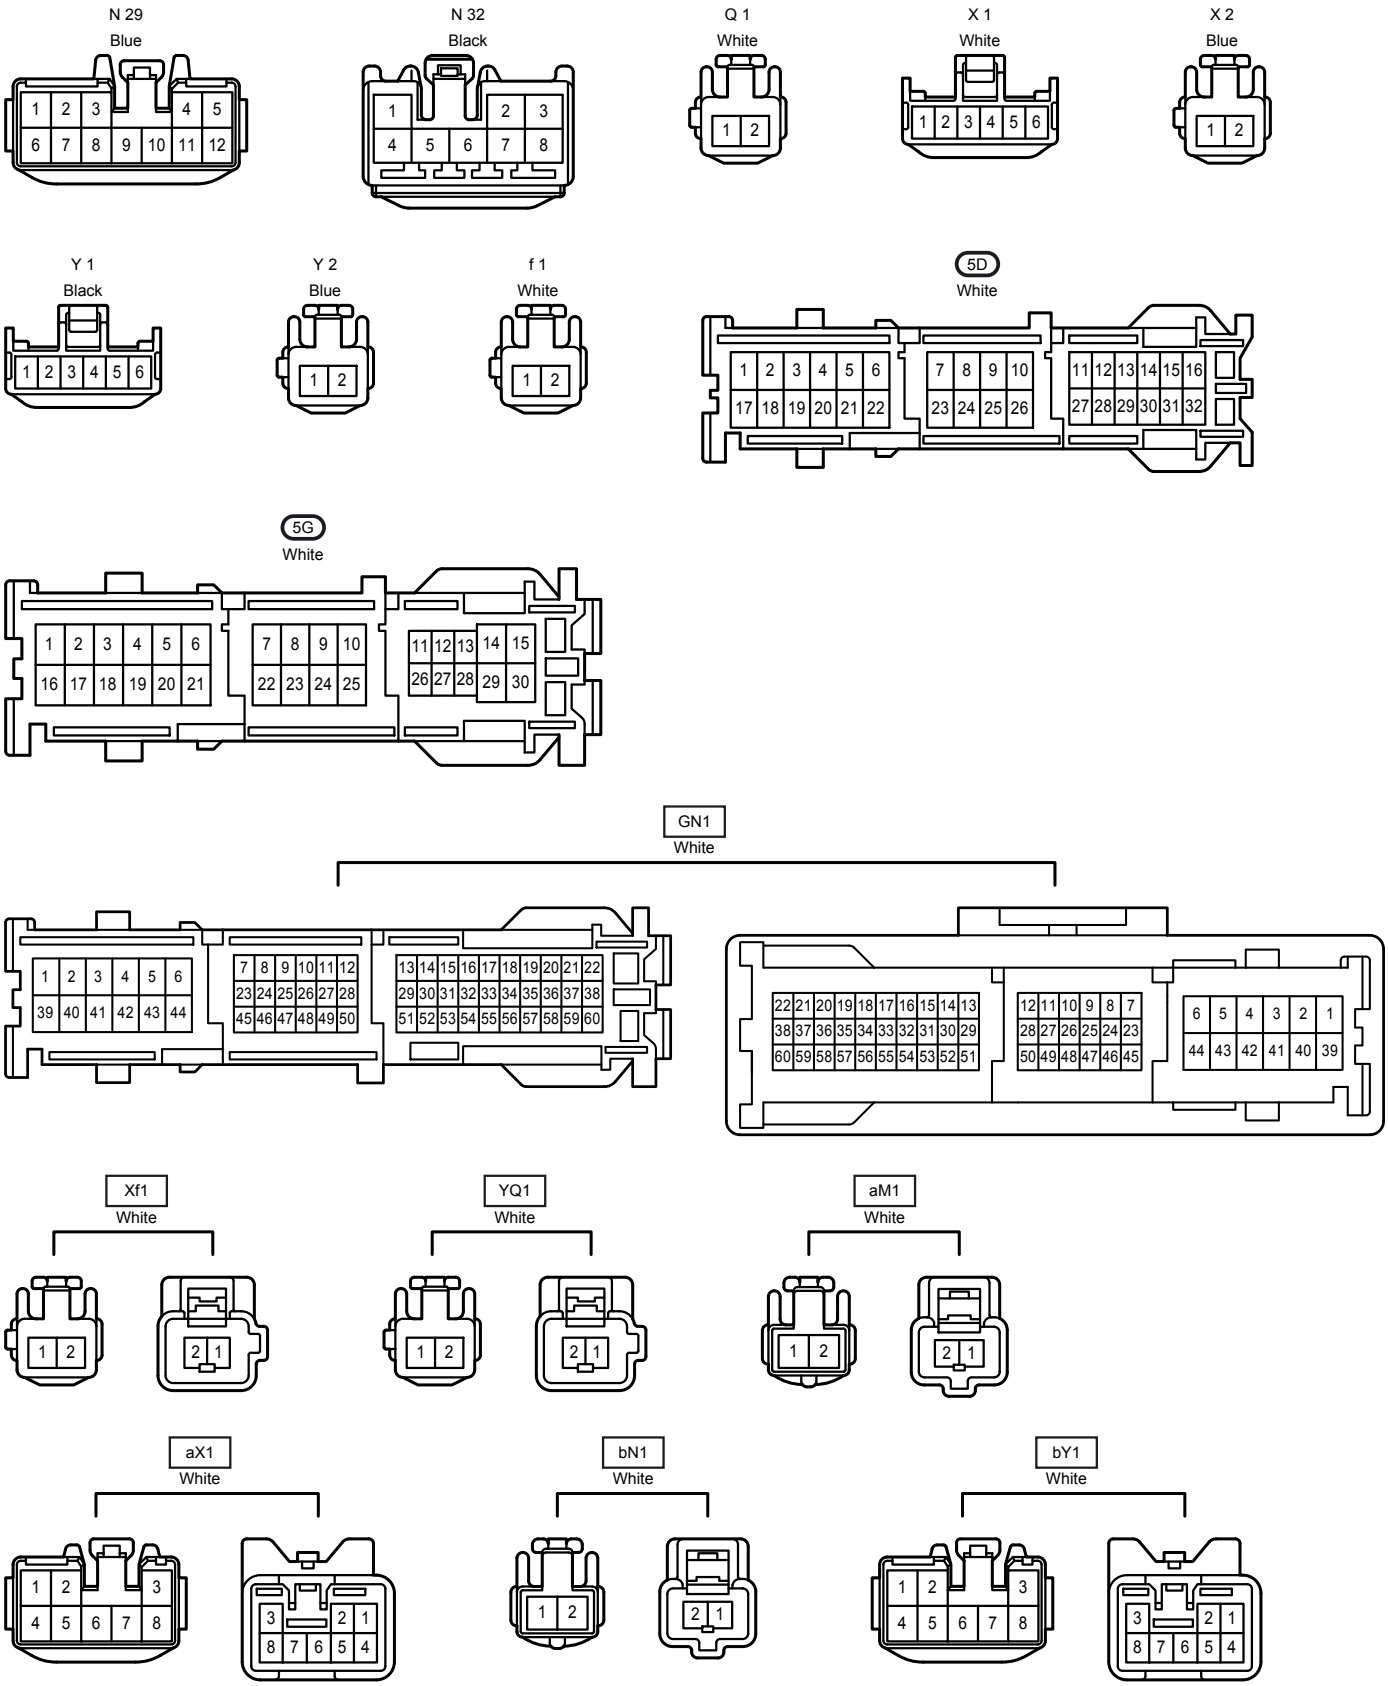
N 29
Blue
N 32
Black
Q 1
White
X 1
White
X 2
Blue
Y 1
Black
Y 2
Blue
f 1
White
5D
White
5G
White
GN1
White
Xf1
White
YQ1
White
aM1
White
aX1
White
bN1
White
bY1
White