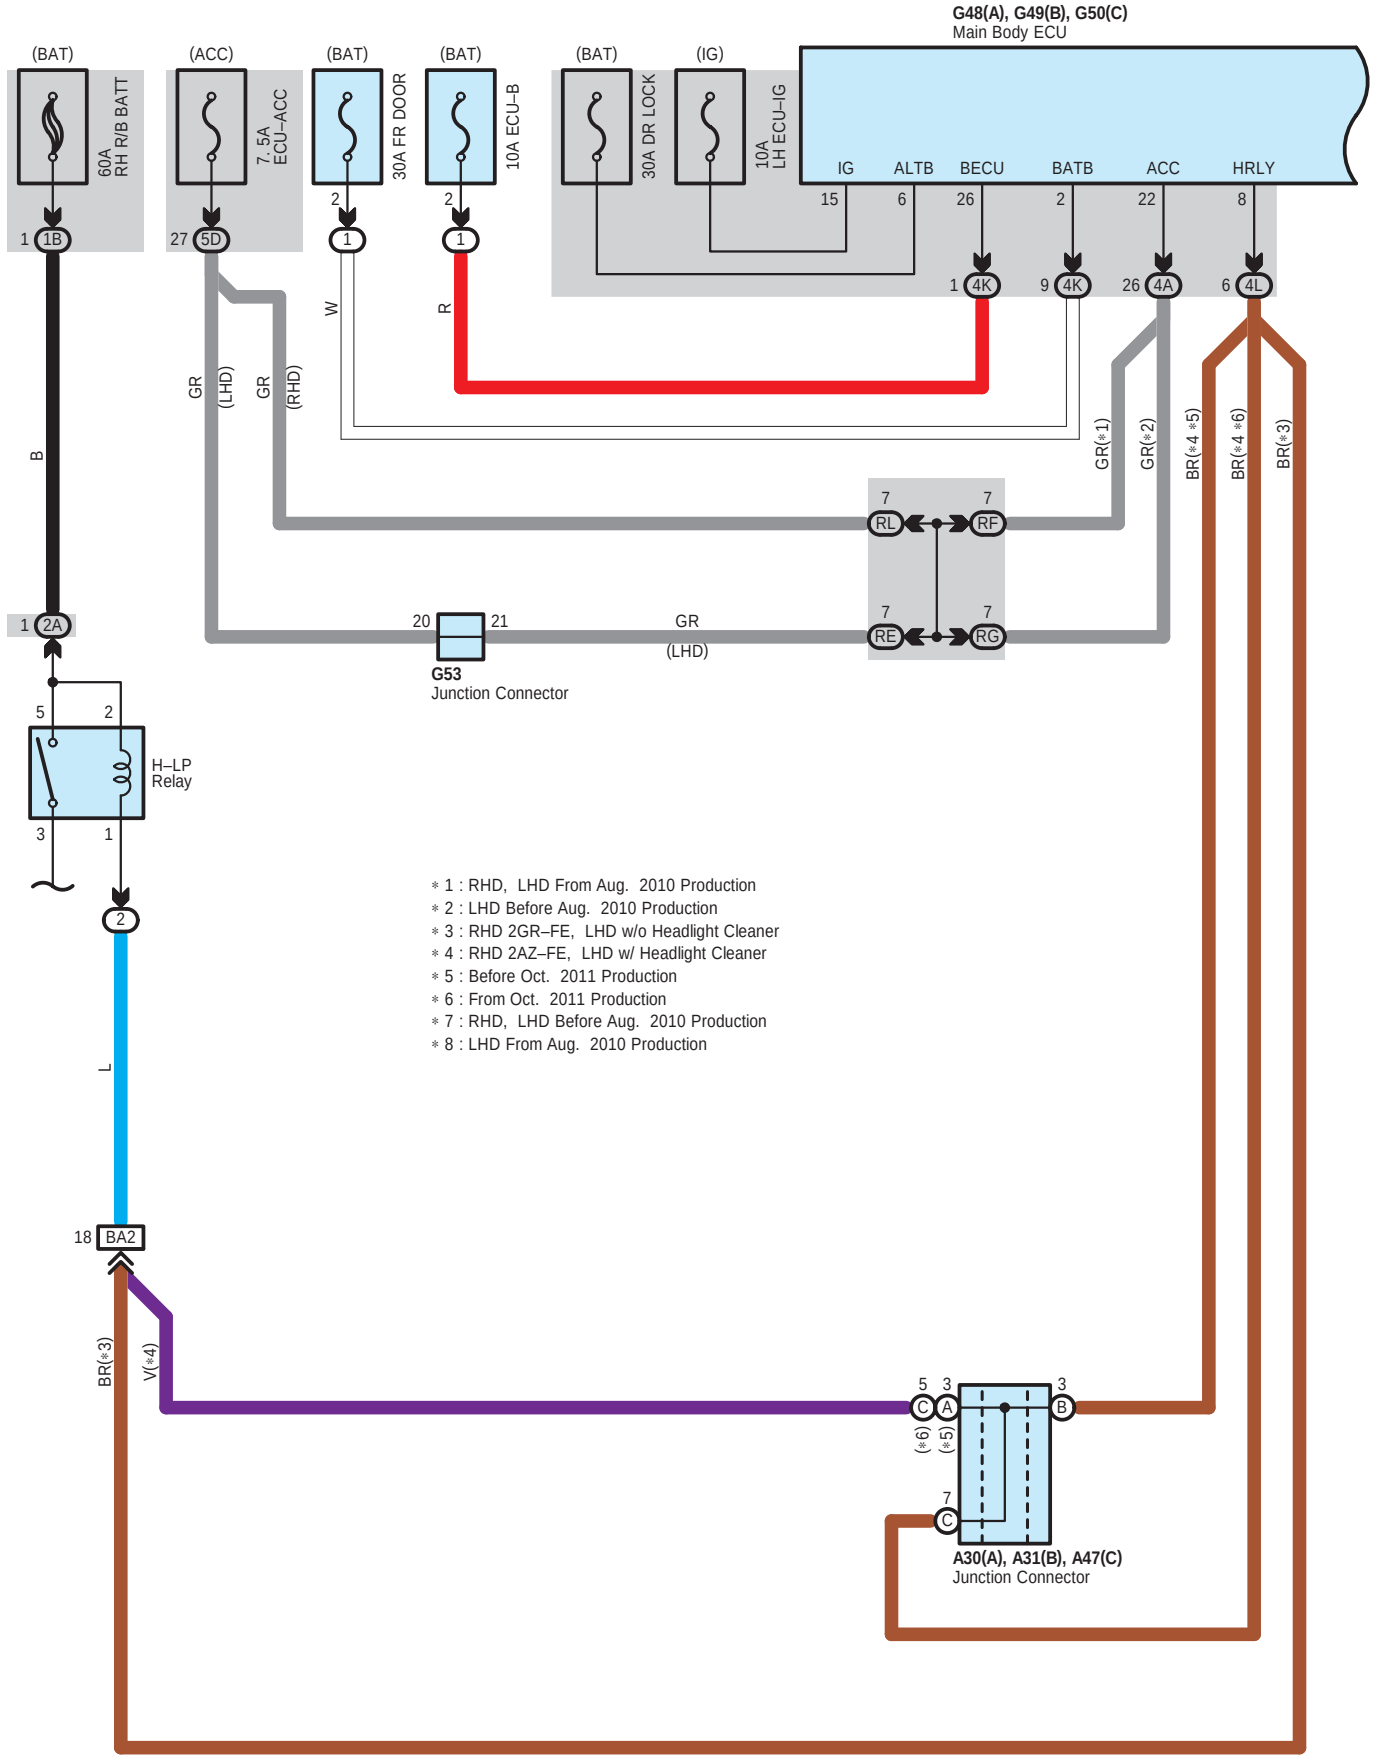

* 1 : RHD, LHD From Aug. 2010 Production
* 2 : LHD Before Aug. 2010 Production
* 3 : RHD 2GR–FE, LHD w/o Headlight Cleaner
* 4 : RHD 2AZ–FE, LHD w/ Headlight Cleaner
* 5 : Before Oct. 2011 Production
* 6 : From Oct. 2011 Production
* 7 : RHD, LHD Before Aug. 2010 Production
* 8 : LHD From Aug. 2010 Production

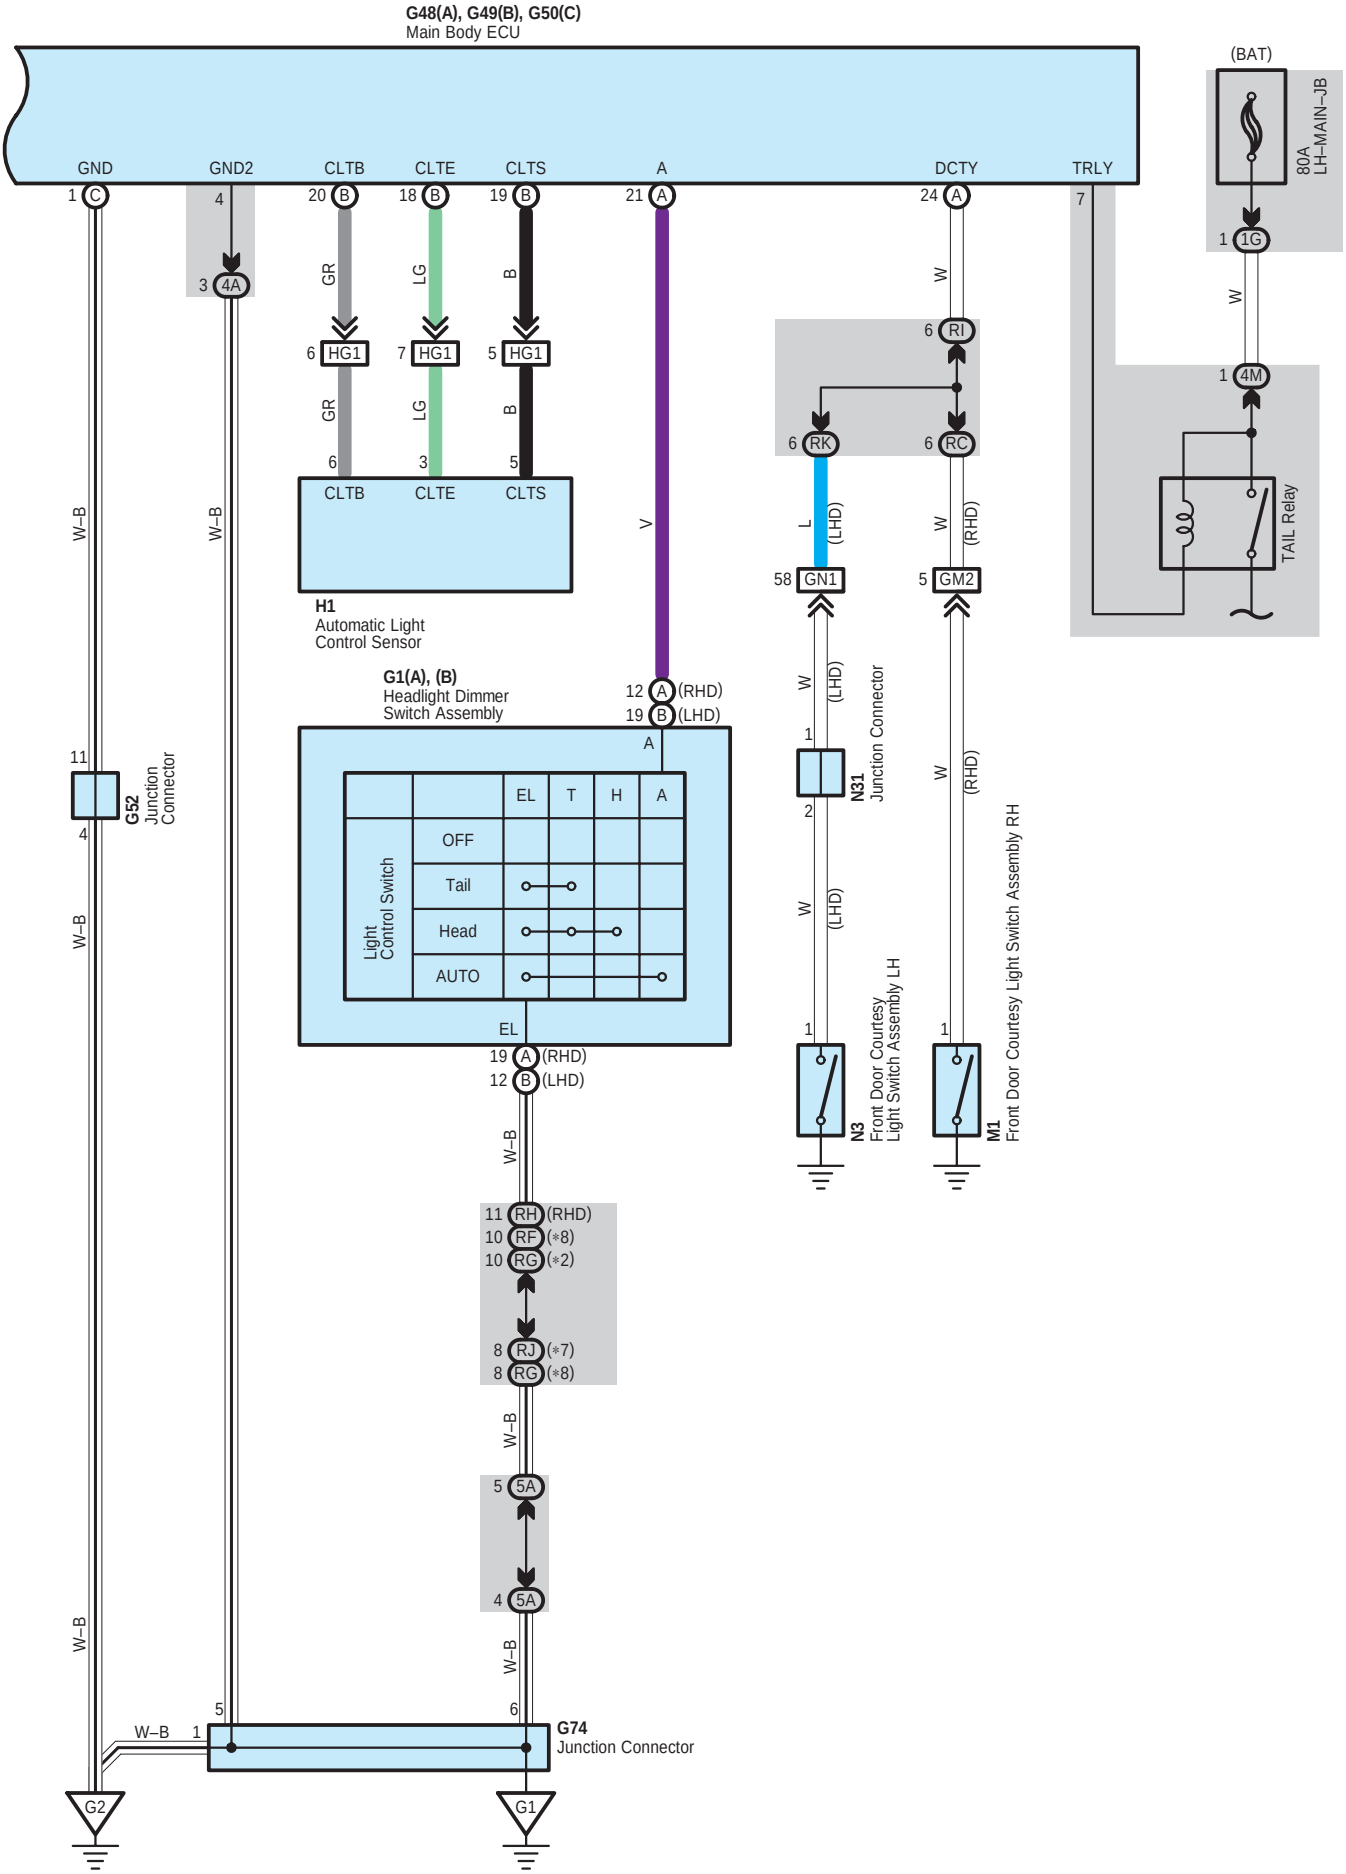
G48(A), G49(B), G50(C)
Main Body ECU
GND
GND2
CLTB
CLTE
CLTS
A
DCTY
TRLY
(BAT)
80A
LH–MAIN–JB
1G
4M
TAIL Relay
4A
HG1
RI
RK
RC
GN1
GM2
H1
Automatic Light
Control Sensor
G1(A), (B)
Headlight Dimmer
Switch Assembly
(RHD)
(LHD)
EL
T
H
A
OFF
Tail
Head
AUTO
Light
Control Switch
G52
Junction
Connector
N31
Junction Connector
N3
Front Door Courtesy
Light Switch Assembly LH
M1
Front Door Courtesy Light Switch Assembly RH
RH
RF
RG
RJ
5A
G74
Junction Connector
G2
G1
W–B
GR
LG
B
V
L
W

A 30
Black

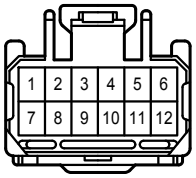

A 31
Black

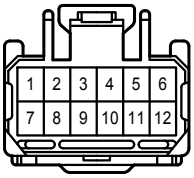

A 47
Black

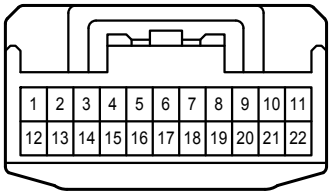

G 1
White

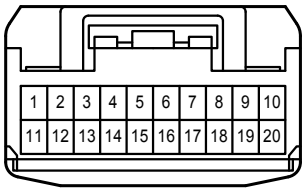

G 48
White

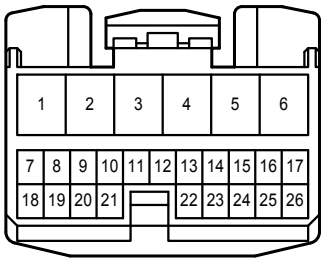

G 49
White

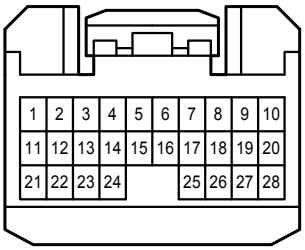

G 50
White

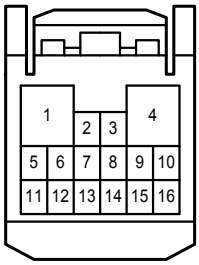

G 52
Gray

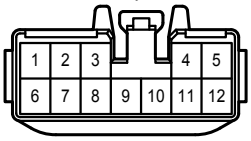

G 53
Black

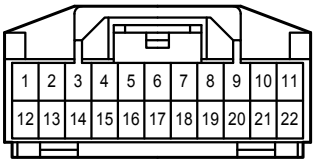

G 74
White

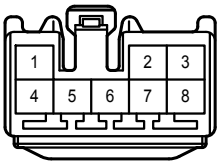

H 1
Black

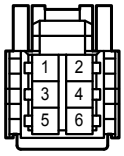

M 1
White

N 3
White

N 31
Gray

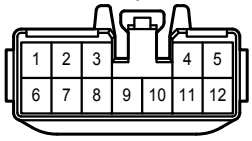

1B



1G



2A



4A
White

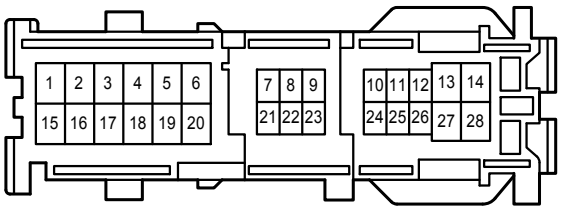

4K
Gray

4L
Gray

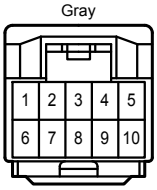

4M
White



5A
White

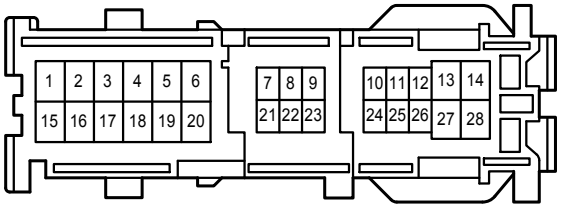

5D
White

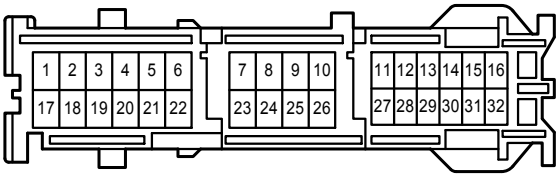

RC
White



RE
White



RF
Gray



RG
White



RH
Gray



RI
White



RJ
Gray



RK
White



RL
Gray



BA2
Gray

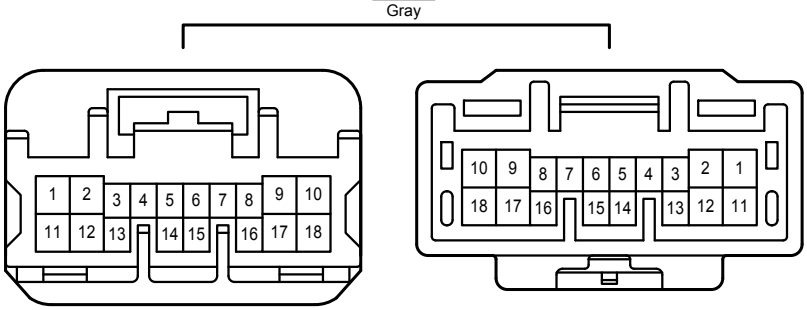

GM2
White

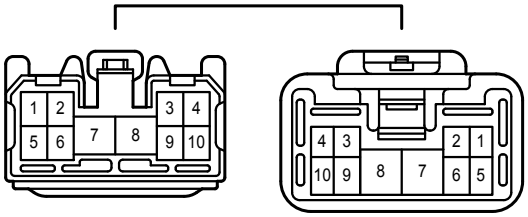

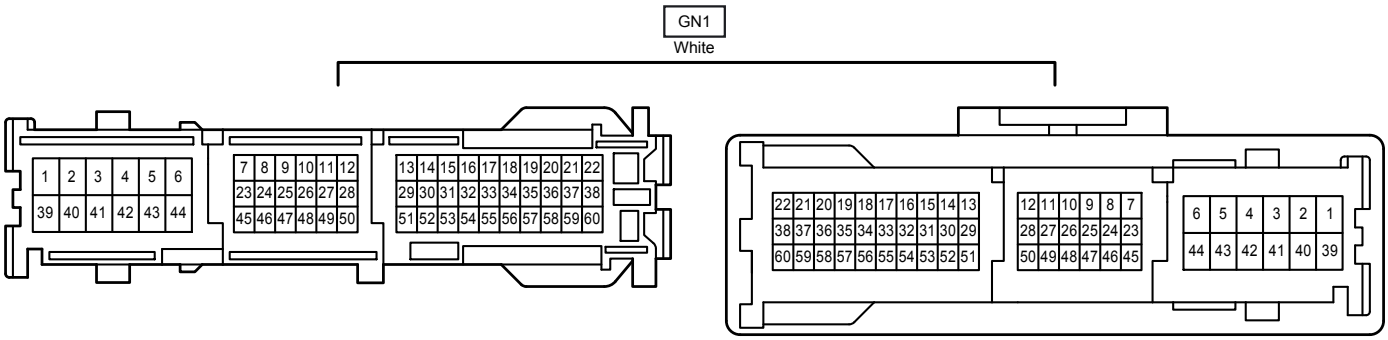
GN1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39

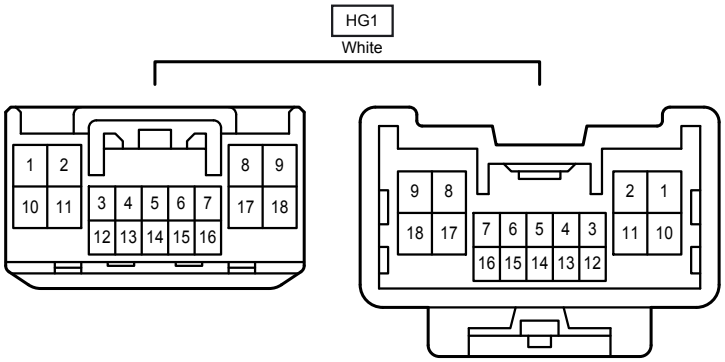
HG1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10