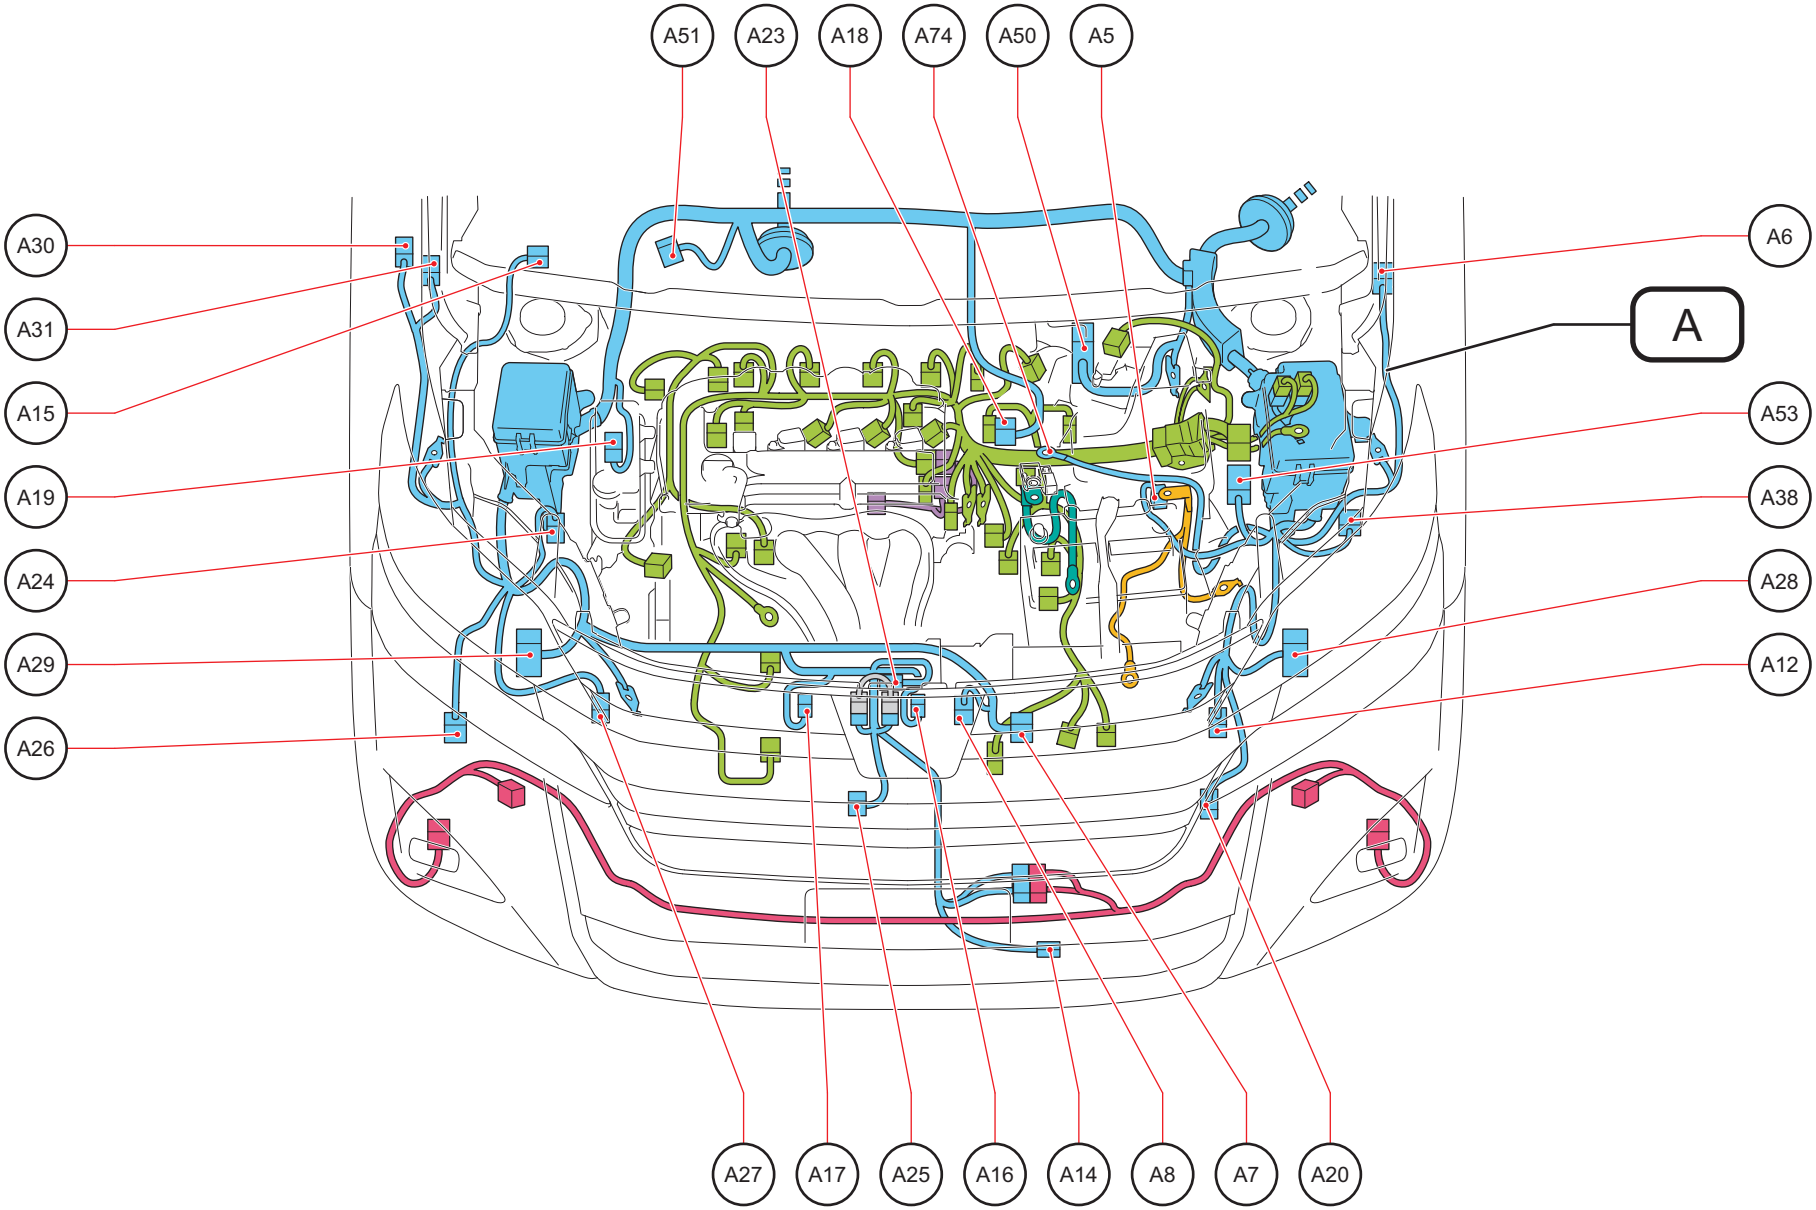
A51
A23
A18
A74
A50
A5
A30
A31
A15
A19
A24
A29
A26
A6
A
A53
A38
A28
A12
A27
A17
A25
A16
A14
A8
A7
A20

A 5 Battery Current Sensor Assembly
A 6 Front Speed Sensor LH
A 7 Cooling Fan Motor
A 8 No. 2 Cooling Fan Motor
A 12 Front Airbag Sensor LH
A 14 Thermistor Assembly (Ambient Temperature Sensor)
A 15 Windshield Wiper Motor Assembly
A 16 Low Pitched Horn Assembly
A 17 High Pitched Horn Assembly
A 18 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 19 Security Horn Assembly
A 20 ECO Run Vehicle Converter Assembly
A 23 Engine Hood Courtesy Switch (Hood Lock Assembly)
A 24 Air Conditioner Pressure Sensor
A 25 Smog Ventilation Sensor
A 26 Windshield Washer Motor and Pump Assembly
A 27 Front Airbag Sensor RH
A 28 Headlight Light Control ECU Sub-Assembly LH
A 29 Headlight Light Control ECU Sub-Assembly RH
A 30 Wireless Door Lock Buzzer
A 31 Front Speed Sensor RH
A 38 Option Connector
A 50 Brake Actuator Assembly
A 51 Vacuum Booster Pressure Sensor (Vacuum Sensor)
A 53 ECM
A 74 Fusible Link Block Assembly

A5
Black

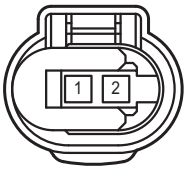

90080-98275

A6
Black

90980-12416

A7
Gray

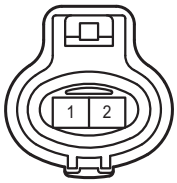

90980-10928

A8
Gray

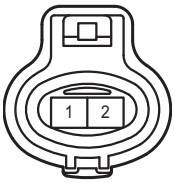

90980-10928

A12
Yellow

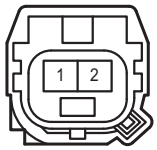

90980-12490

A14
Black

90980-12416

A15
Gray

90980-11599

A16
Black

90980-10619

A17
Black

90980-10619

A18
Gray

90980-11207

A19
Black

90980-10619

A20
Black

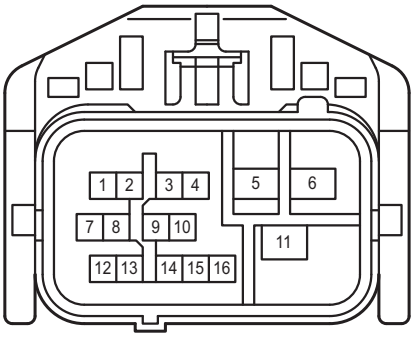

82824-12400

A23
Black

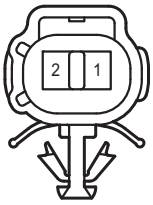

90980-11002

A24
Black

90980-10845

A25
Black

90980-11034

A26
Black

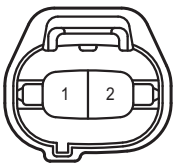

90980-11156

A27
Yellow

90980-12490

A28
Gray

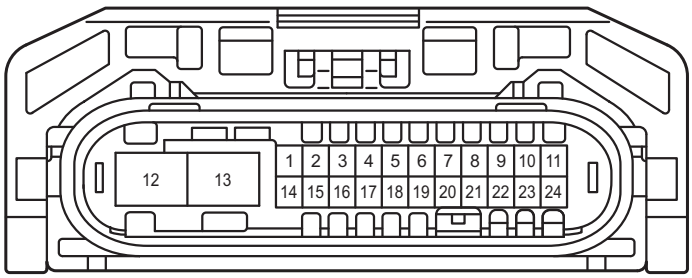

90980-12A92

A29
Gray

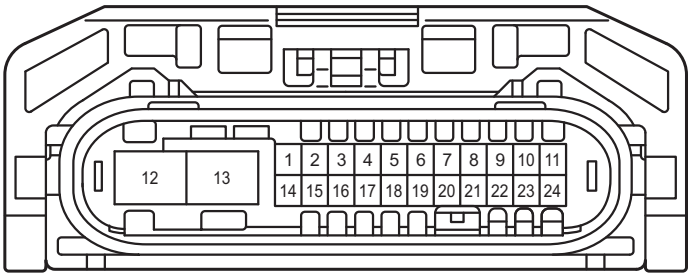

90980-12A92

A30
Gray

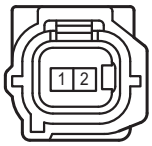

90980-12572

A31
Black

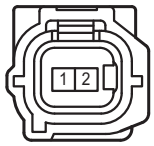

90980-12416

A38
Gray

90980-11028

A50
Black

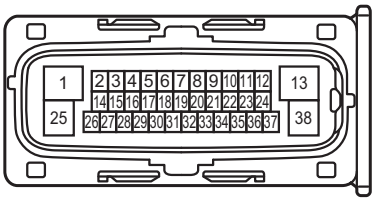

90980-12B01

A51
Black

90980-10845

A53
Black

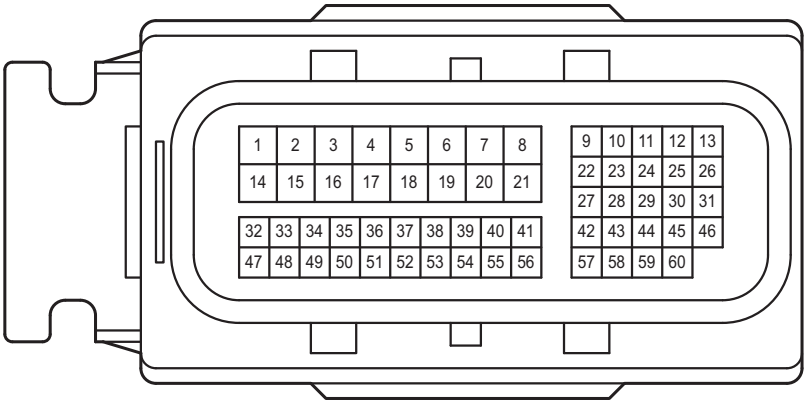

90980-12931

A74