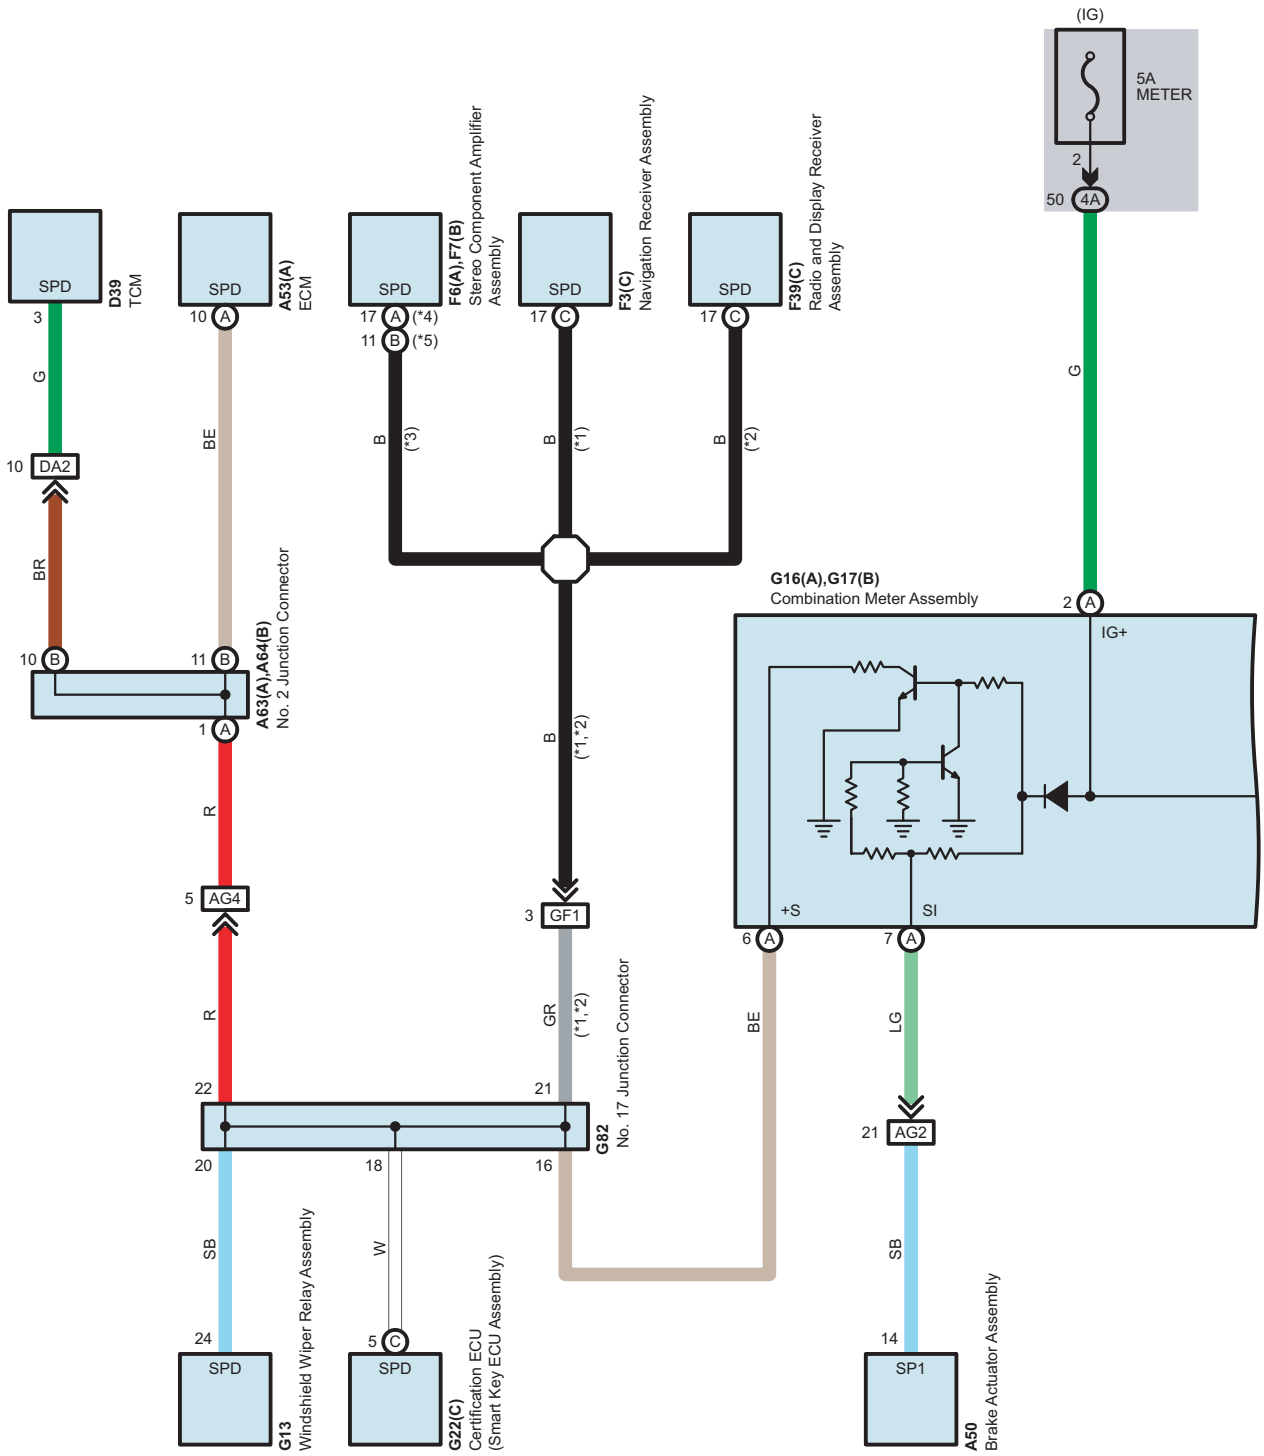
(IG)
5A
METER
2
50
4A
G
SPD
D39
TCM
3
G
10
DA2
BR
10
B
SPD
A53(A)
ECM
10
A
BE
11
B
A63(A),A64(B)
No. 2 Junction Connector
1
A
R
5
AG4
R
22
20
SB
24
SPD
G13
Windshield Wiper Relay Assembly
SPD
F6(A),F7(B)
Stereo Component Amplifier
Assembly
17
A
(*4)
11
B
(*5)
B
(*3)
SPD
F3(C)
Navigation Receiver Assembly
17
C
B
(*1)
SPD
F39(C)
Radio and Display Receiver
Assembly
17
C
B
(*2)
B
(*1,*2)
3
GF1
GR
(*1,*2)
21
16
18
G82
No. 17 Junction Connector
W
5
C
SPD
G22(C)
Certification ECU
(Smart Key ECU Assembly)
G16(A),G17(B)
Combination Meter Assembly
2
A
IG+
+S
SI
6
A
7
A
BE
LG
21
AG2
SB
14
SP1
A50
Brake Actuator Assembly

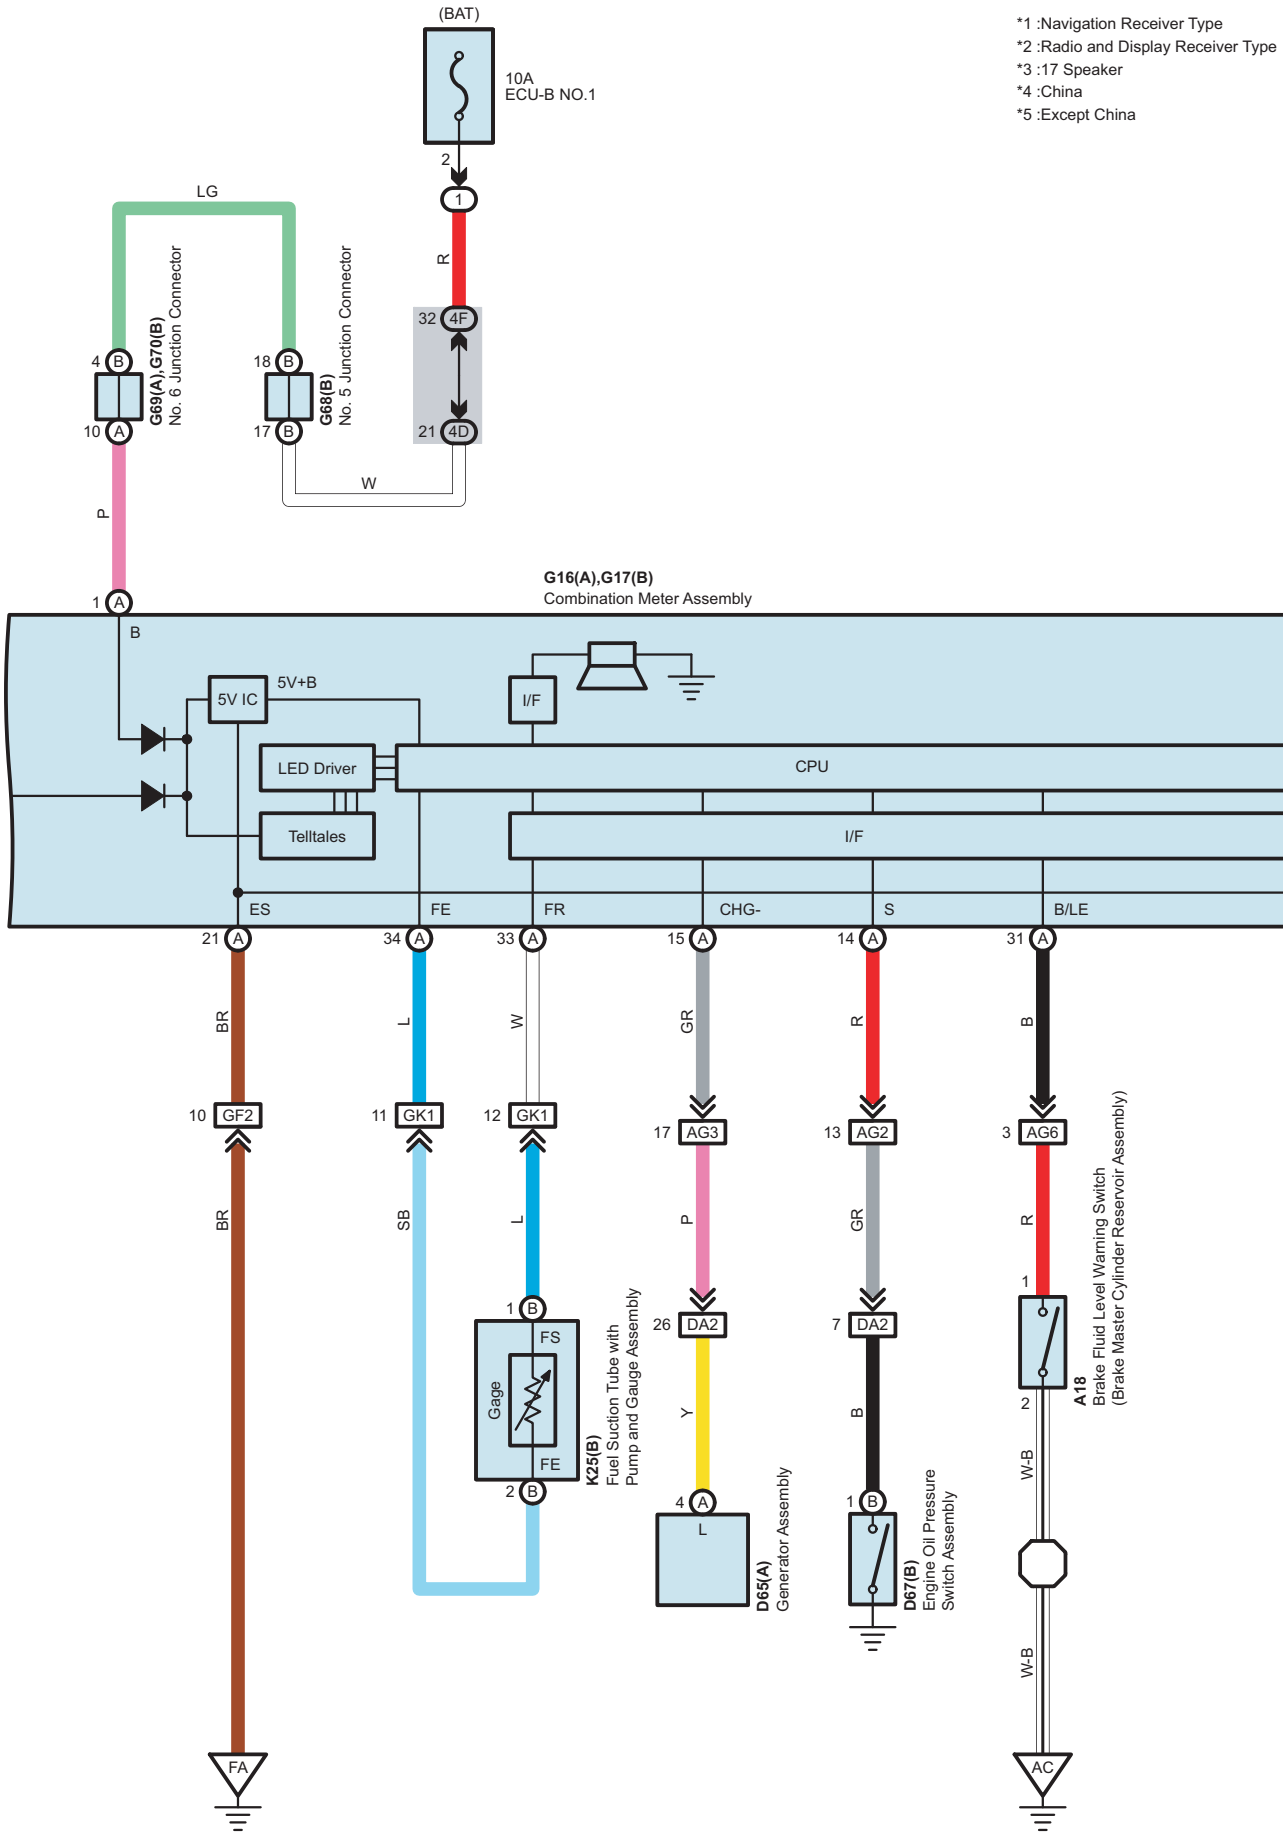
(BAT)
10A
ECU-B NO.1
*1 :Navigation Receiver Type
*2 :Radio and Display Receiver Type
*3 :17 Speaker
*4 :China
*5 :Except China
LG
R
W
P
G69(A),G70(B)
No. 6 Junction Connector
G68(B)
No. 5 Junction Connector
G16(A),G17(B)
Combination Meter Assembly
5V IC
5V+B
I/F
LED Driver
CPU
Telltales
ES
FE
FR
CHG-
S
B/LE
BR
L
SB
GR
B
GF2
GK1
AG3
AG2
AG6
DA2
FS
Gage
K25(B)
Fuel Suction Tube with
Pump and Gauge Assembly
D65(A)
Generator Assembly
D67(B)
Engine Oil Pressure
Switch Assembly
A18
Brake Fluid Level Warning Switch
(Brake Master Cylinder Reservoir Assembly)
W-B
FA
AC

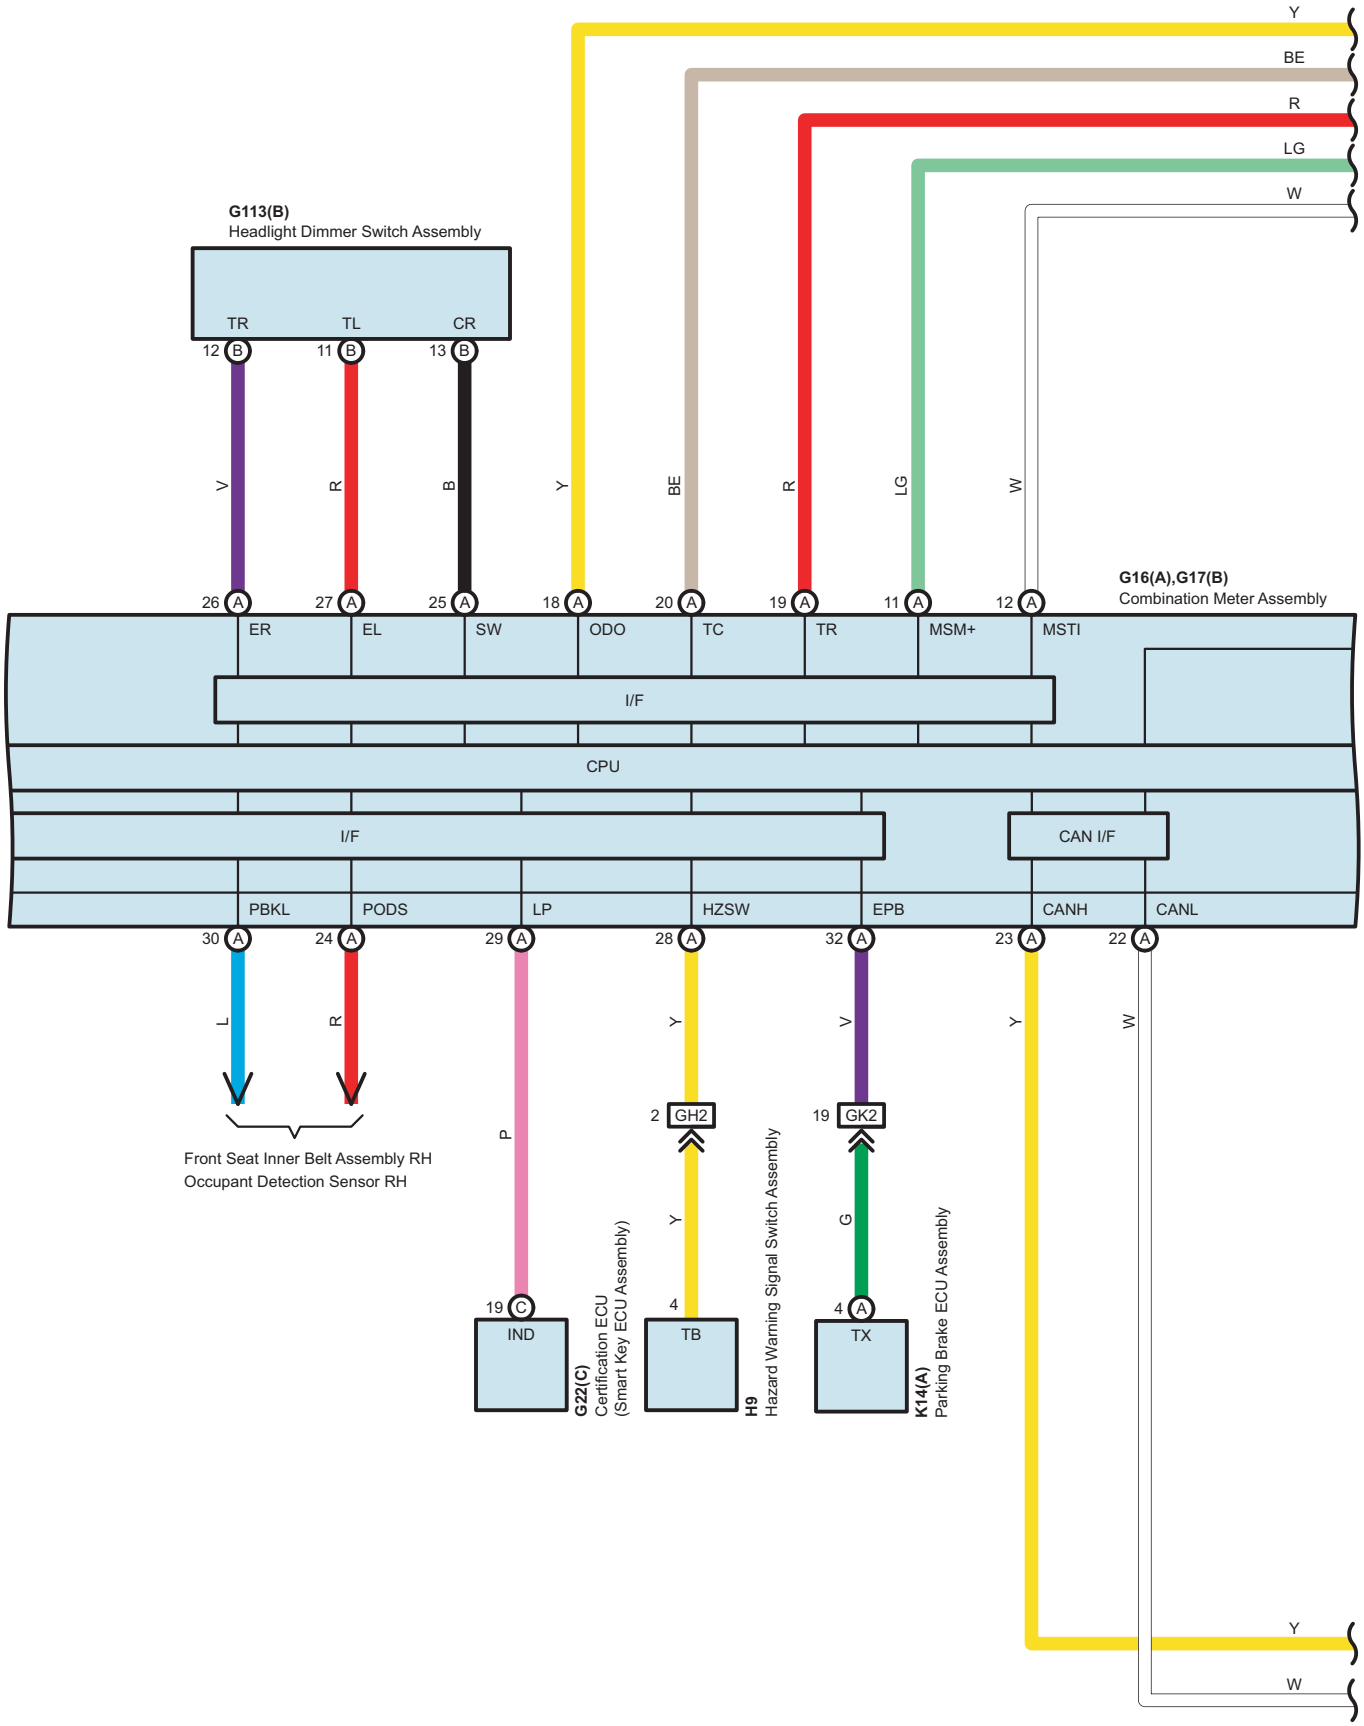
G113(B)
Headlight Dimmer Switch Assembly
TR
TL
CR
12 B
11 B
13 B
V
R
B
Y
BE
R
LG
W
G16(A),G17(B)
Combination Meter Assembly
26 A
27 A
25 A
18 A
20 A
19 A
11 A
12 A
ER
EL
SW
ODO
TC
TR
MSM+
MSTI
I/F
CPU
I/F
CAN I/F
PBKL
PODS
LP
HZSW
EPB
CANH
CANL
30 A
24 A
29 A
28 A
32 A
23 A
22 A
L
R
P
Y
V
Y
W
Front Seat Inner Belt Assembly RH
Occupant Detection Sensor RH
2 GH2
19 GK2
Y
G
19 C
IND
G22(C)
Certification ECU
(Smart Key ECU Assembly)
4
TB
H9
Hazard Warning Signal Switch Assembly
4 A
TX
K14(A)
Parking Brake ECU Assembly
Y
W

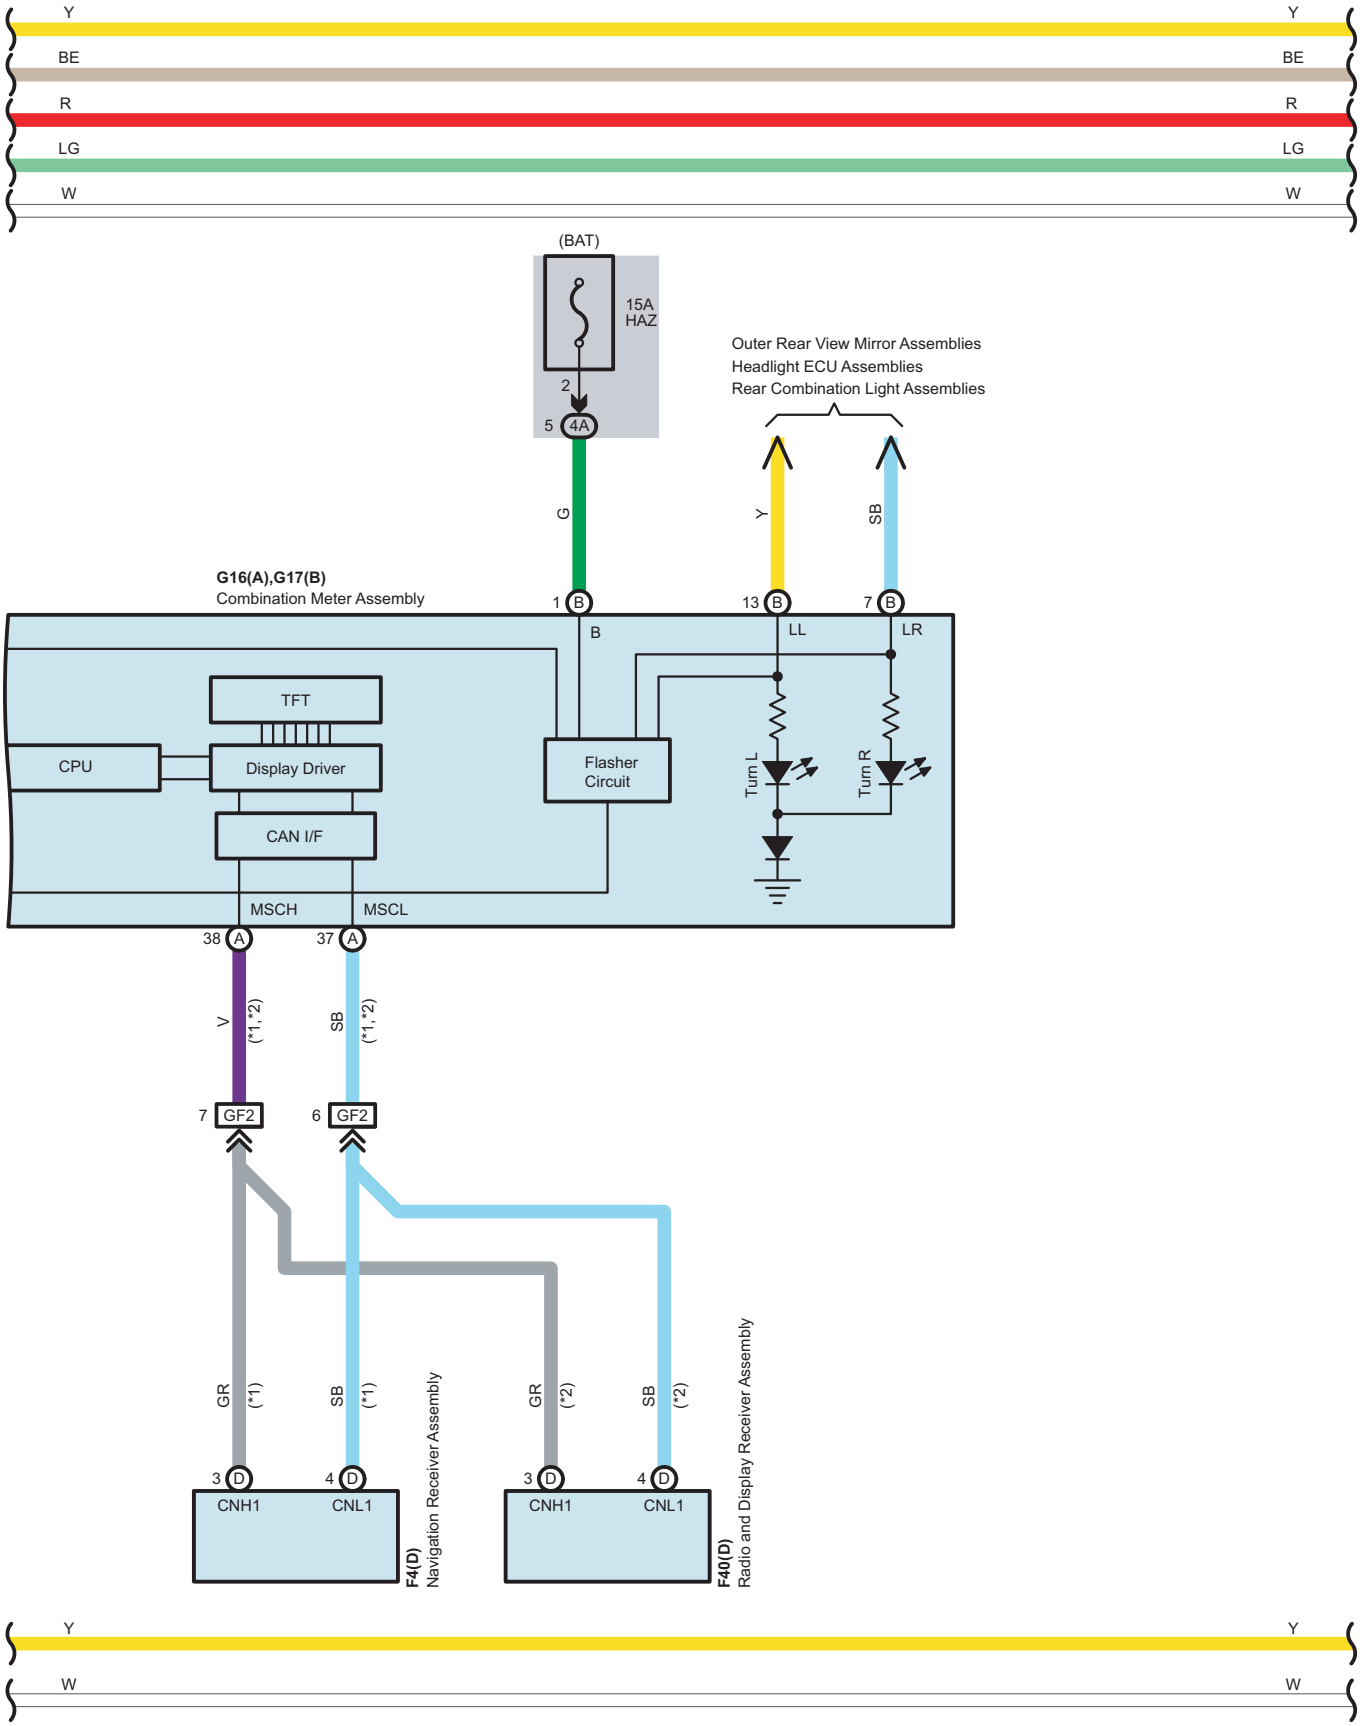

*1 :Navigation Receiver Type
*2 :Radio and Display Receiver Type

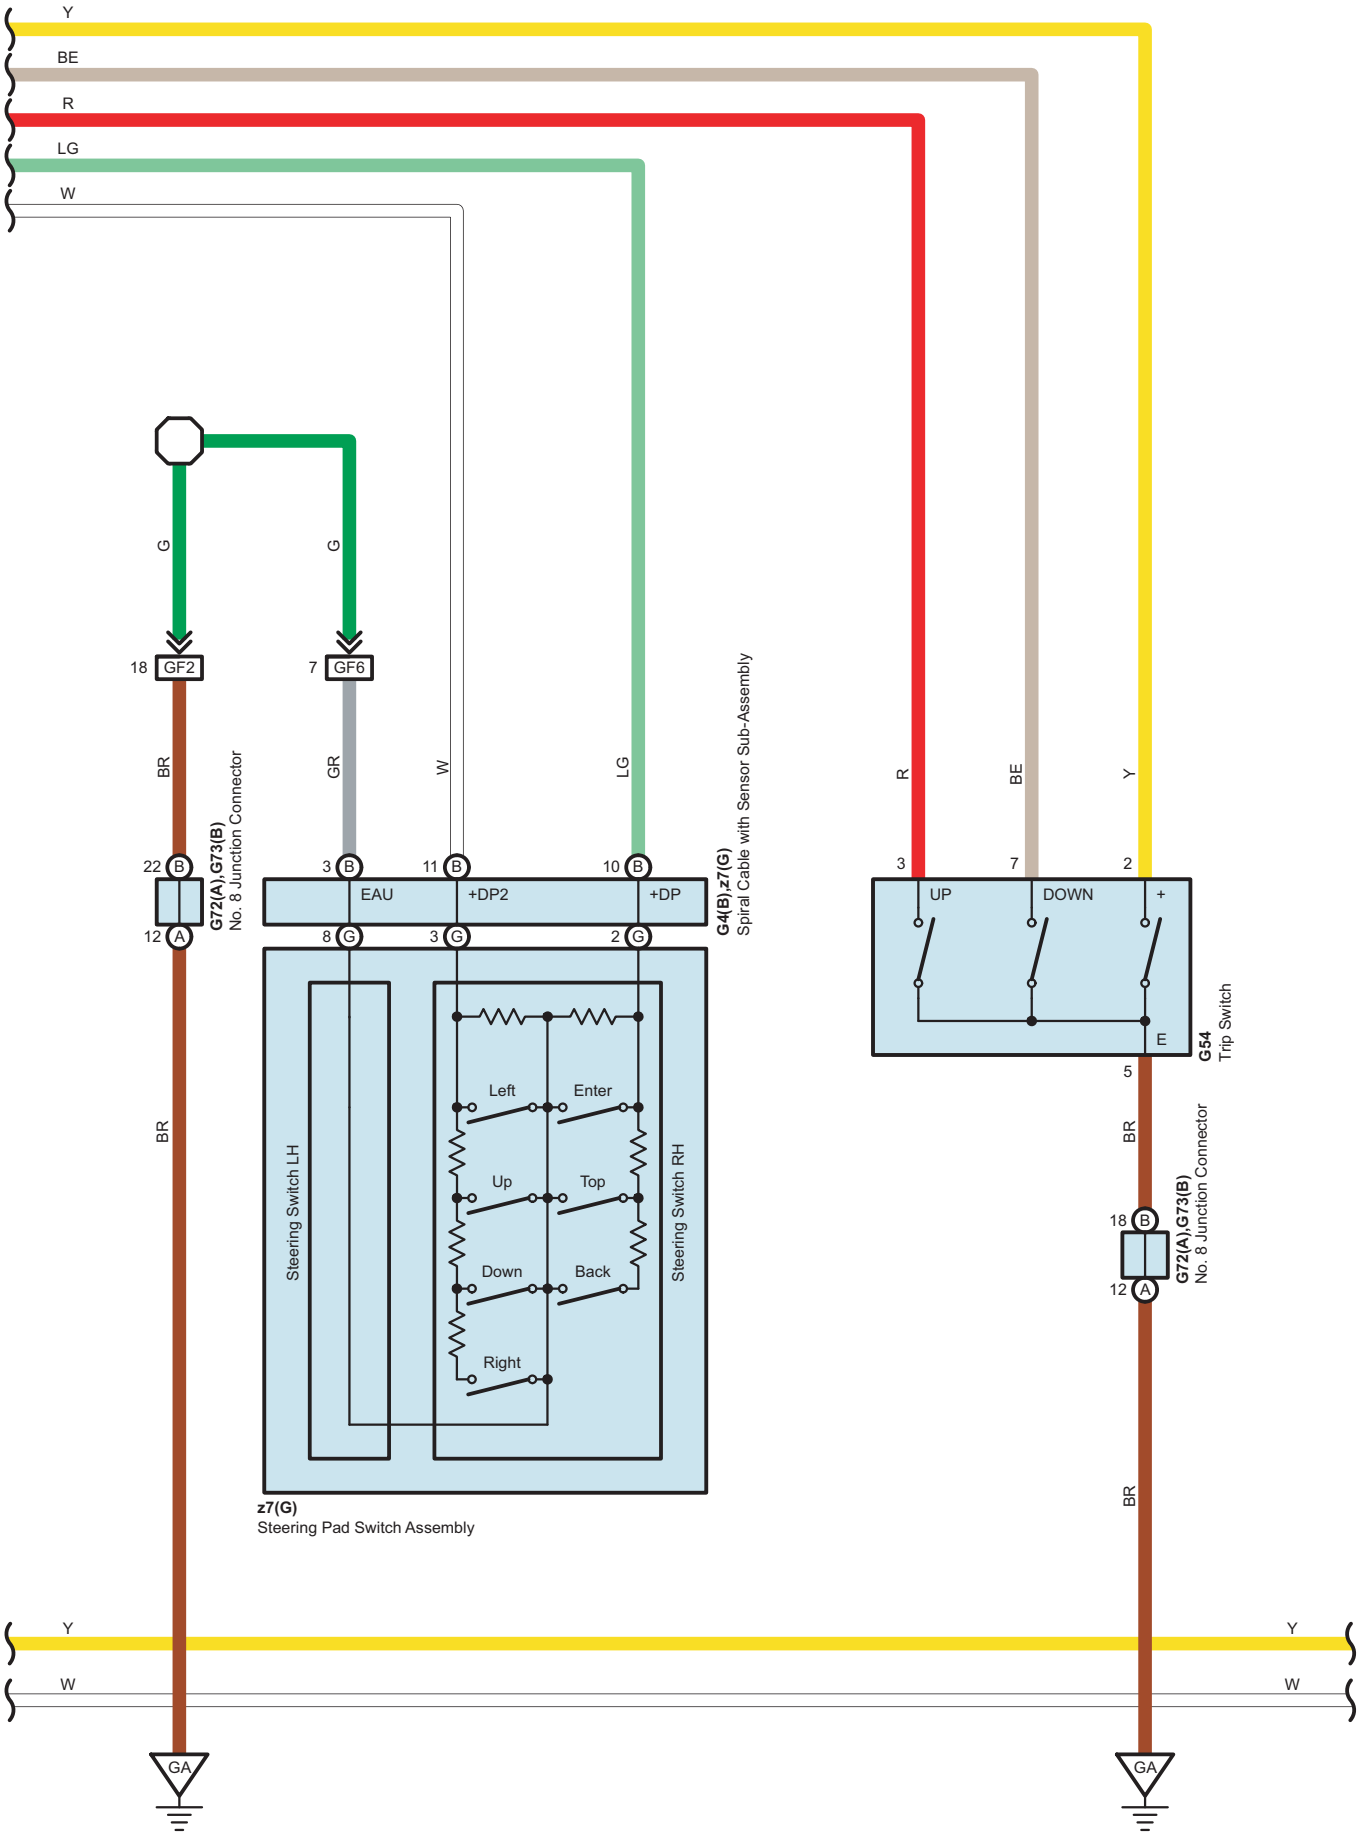
Y
BE
R
LG
W
G
G
18 GF2
7 GF6
BR
GR
W
LG
R
BE
Y
22 B
12 A
G72(A),G73(B)
No. 8 Junction Connector
3 B
11 B
10 B
EAU
+DP2
+DP
8 G
3 G
2 G
G4(B),z7(G)
Spiral Cable with Sensor Sub-Assembly
3
7
2
UP
DOWN
+
E
G54
Trip Switch
5
BR
18 B
12 A
G72(A),G73(B)
No. 8 Junction Connector
Steering Switch LH
Left
Enter
Up
Top
Down
Back
Right
Steering Switch RH
z7(G)
Steering Pad Switch Assembly
BR
BR
BR
Y
W
Y
W
GA
GA

*6 :w/ Network Gateway ECU
*7 :w/ Panoramic View Monitor System

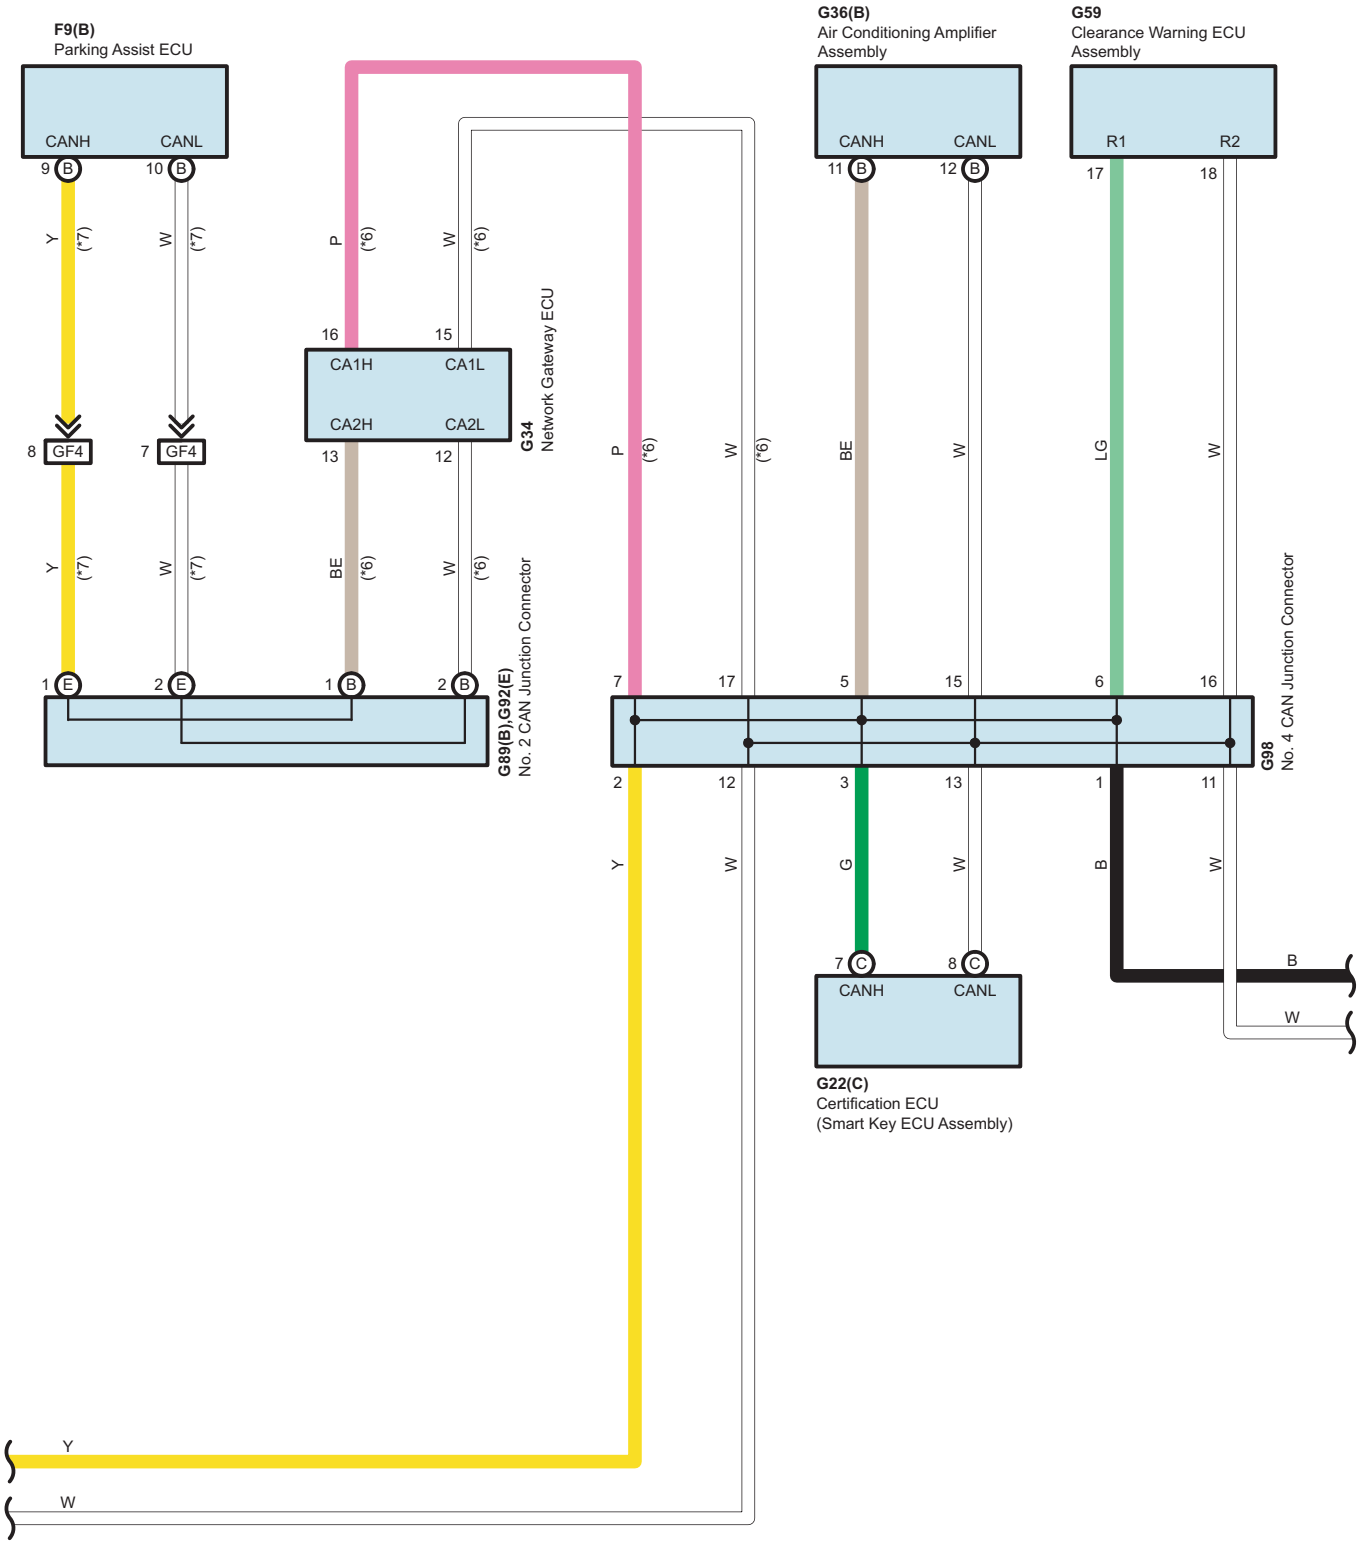

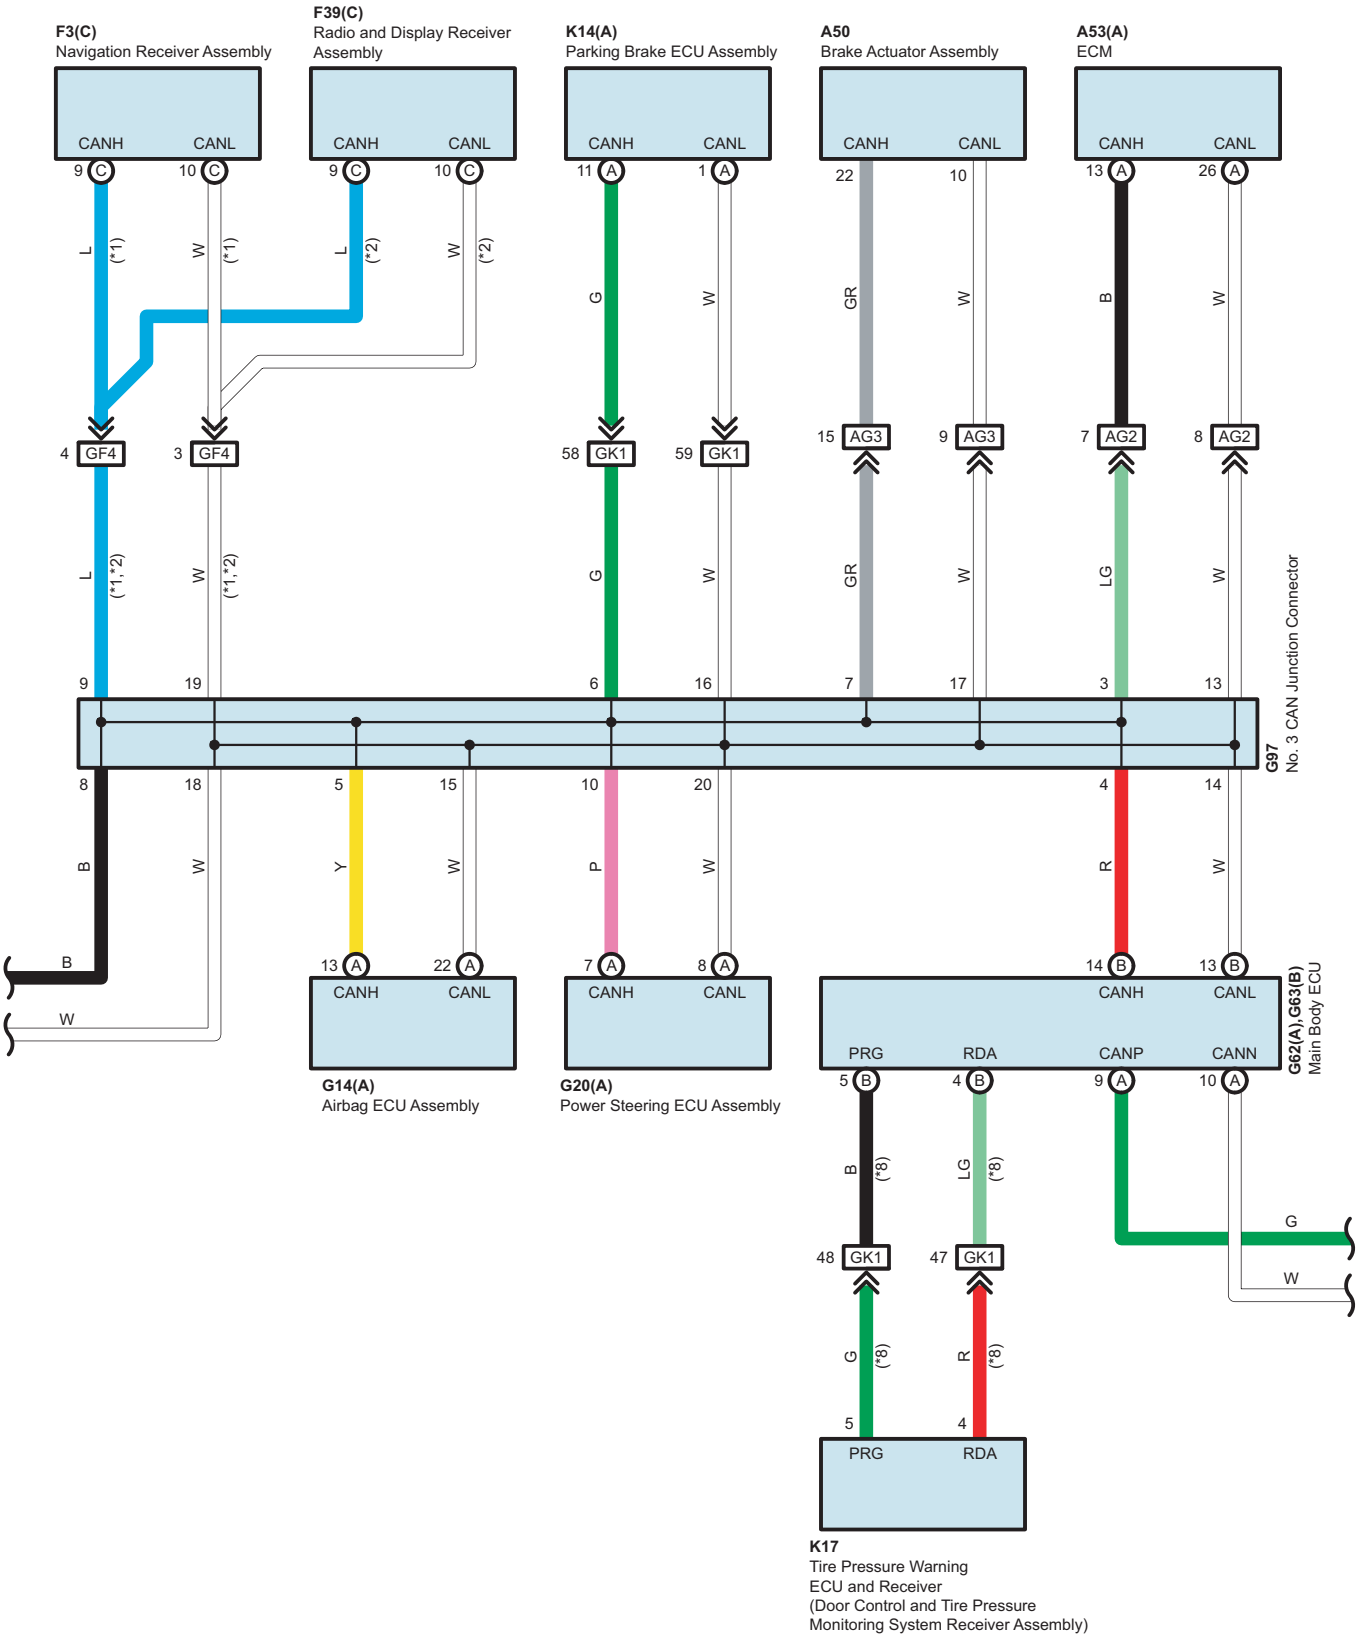
F3(C)
Navigation Receiver Assembly
F39(C)
Radio and Display Receiver Assembly
K14(A)
Parking Brake ECU Assembly
A50
Brake Actuator Assembly
A53(A)
ECM
CANH
CANL
GF4
GK1
AG3
AG2
G97
No. 3 CAN Junction Connector
G14(A)
Airbag ECU Assembly
G20(A)
Power Steering ECU Assembly
G62(A), G63(B)
Main Body ECU
PRG
RDA
CANP
CANN
K17
Tire Pressure Warning
ECU and Receiver
(Door Control and Tire Pressure
Monitoring System Receiver Assembly)

*1 :Navigation Receiver Type
*2 :Radio and Display Receiver Type
*8 :w/ Tire Pressure Warning System

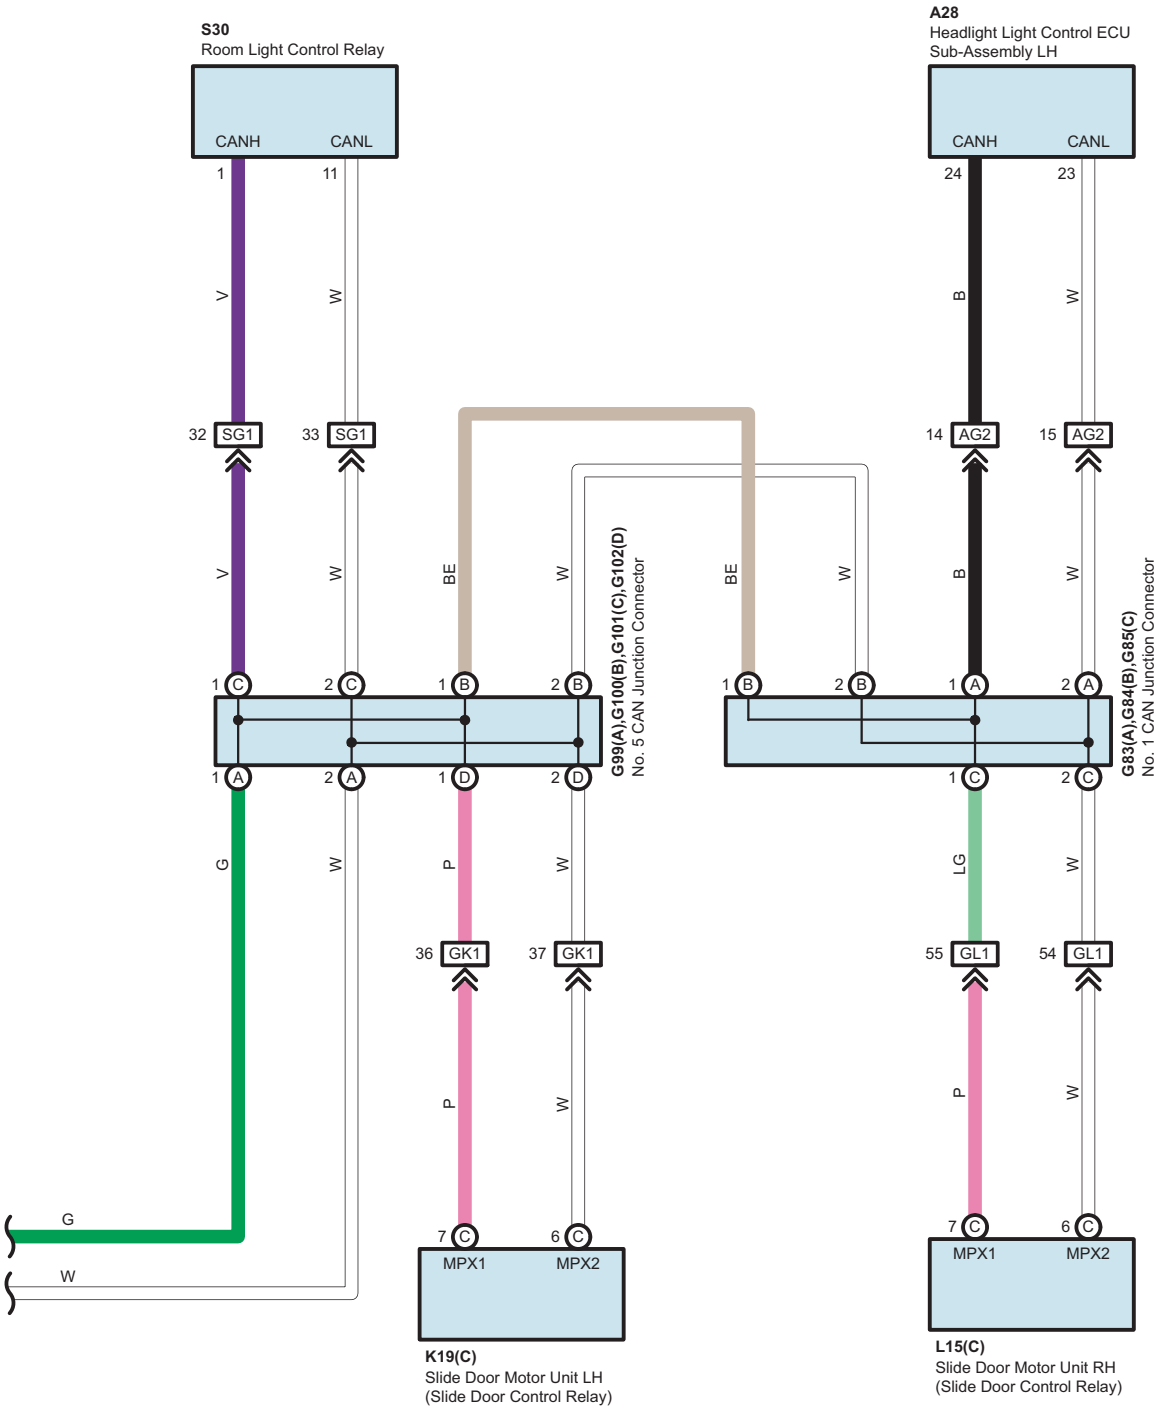

A18
Gray

90980-11207

A28
Gray

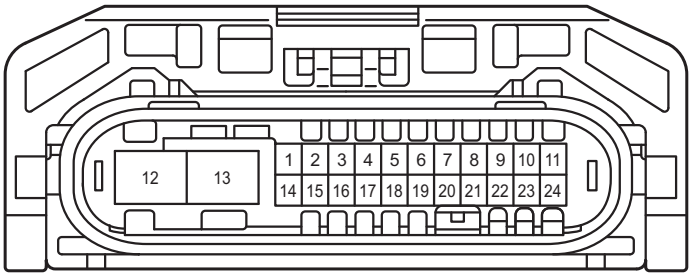

90980-12A92

A50
Black

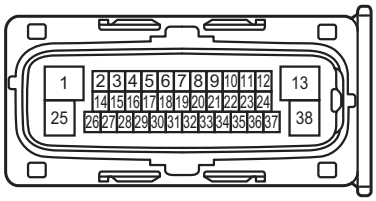

90980-12B01

A53
Black

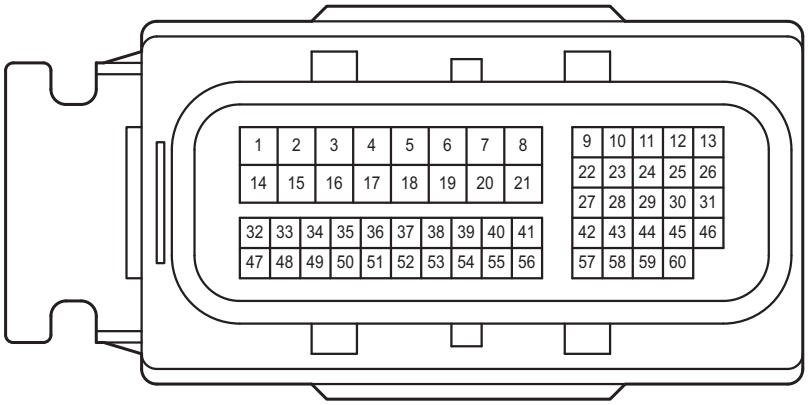

90980-12931

A63
Black

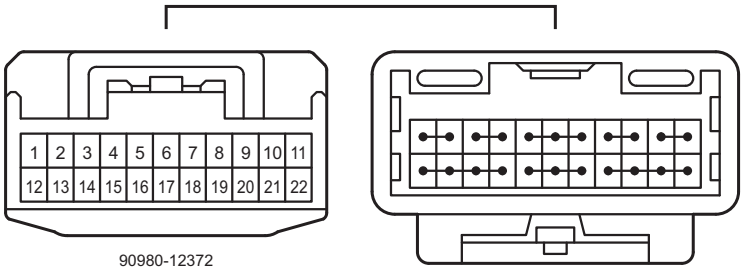

90980-12372

A64
Black

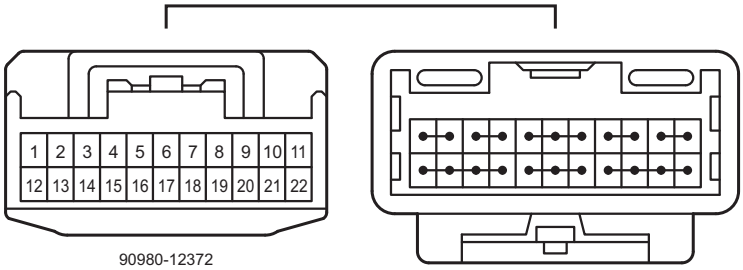

90980-12372

D39
Gray

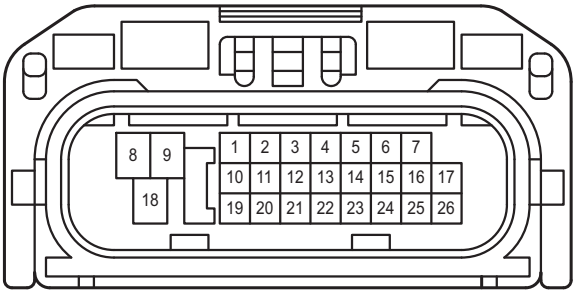

82824-73020

D65
Black

90980-11964

D67
Gray

90980-11363

F3
White

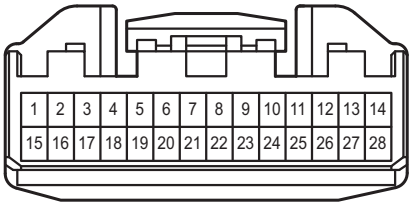

90980-12555

F4
White

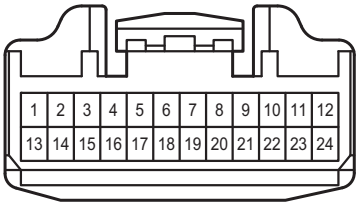

90980-12554

F6
White



90980-12979

F7
White

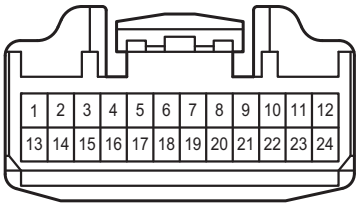

90980-12554

F9
White

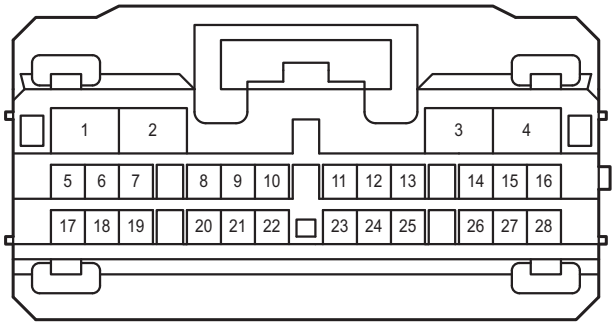

90980-12760

F39
White

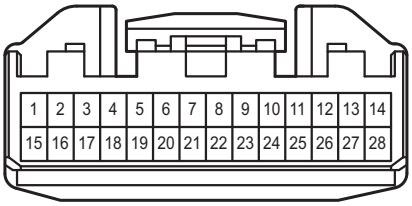

90980-12555

F40
White

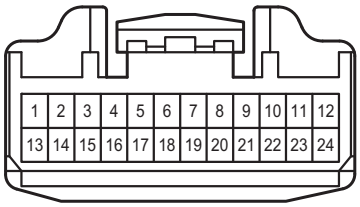

90980-12554

G4
Black

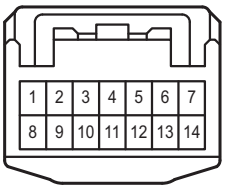

90980-12370

G13
White

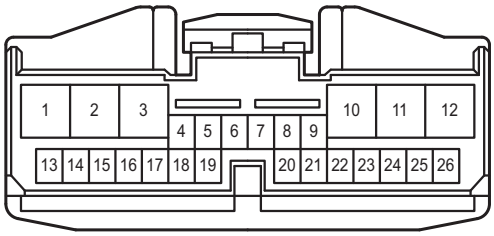

90980-12444

G14
Yellow

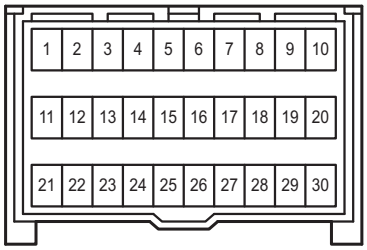

90980-12391

G16
Black

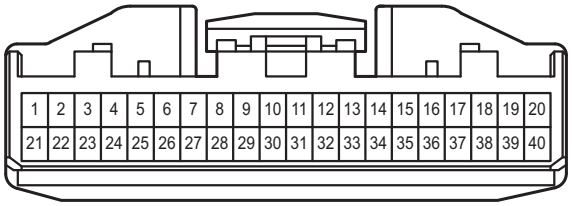

90980-12557

G17
Black

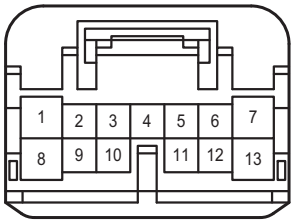

90980-12767

G20
Black

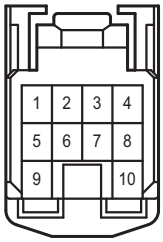

90980-12898

G22
Black

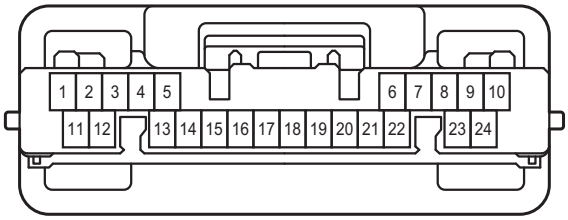

90980-12A42

G34
White

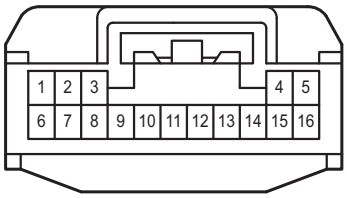

90980-12423

G36
Black

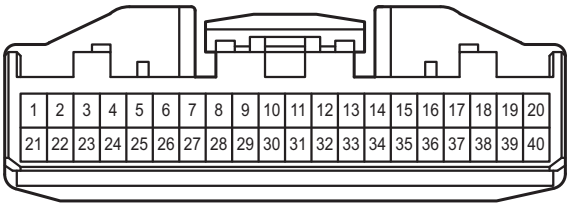

90980-12557

G54
Black

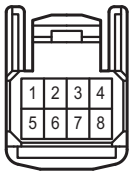

90980-12551

G59
Black

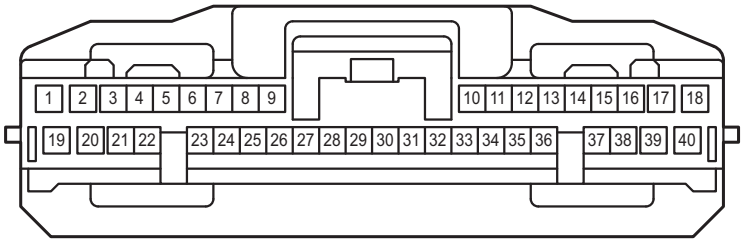

90980-12924

G62
White

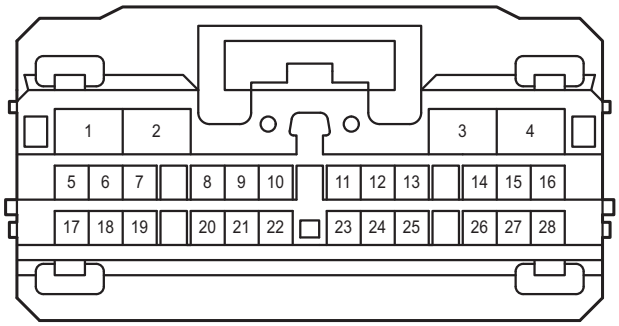

90980-12908

G63
White

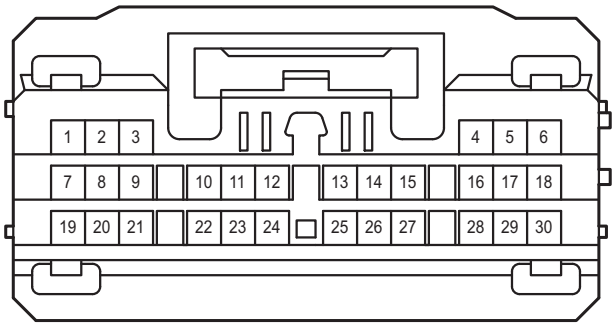

90980-12909

G68
LHD : White RHD : Black

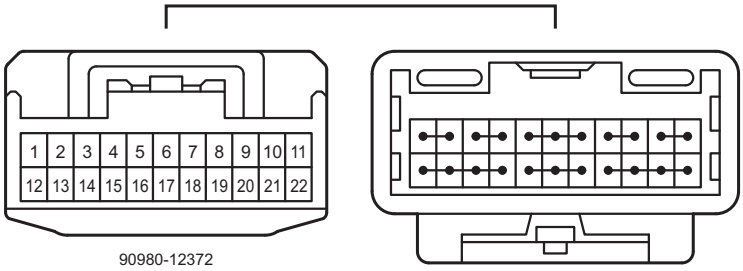

G69
LHD : White RHD : Blue

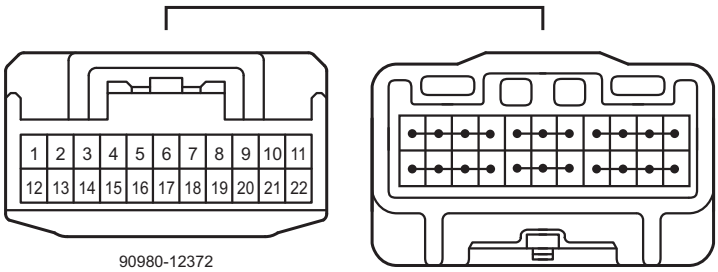

G70
Black

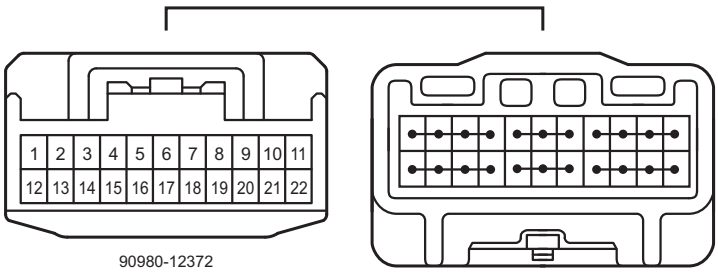

G72
Black

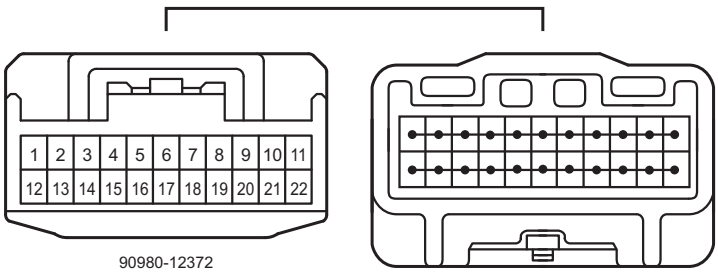

G73
LHD : White RHD : Blue

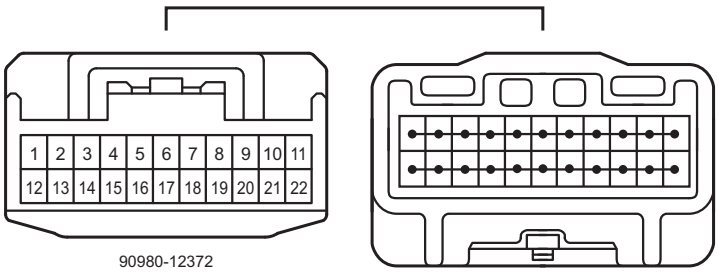

G82
White

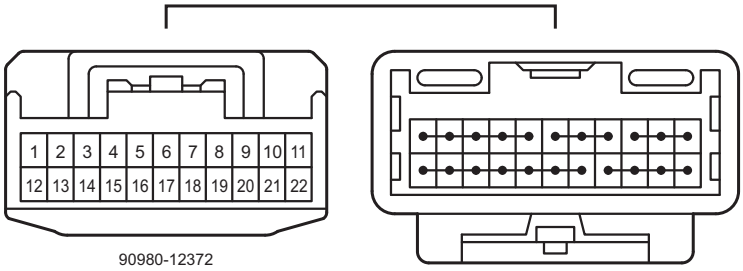

90980-12372

G83
White



90980-12827

G84
White



90980-12827

G85
White



90980-12827

G89
White



90980-12827

G92
White



90980-12827

G97
White

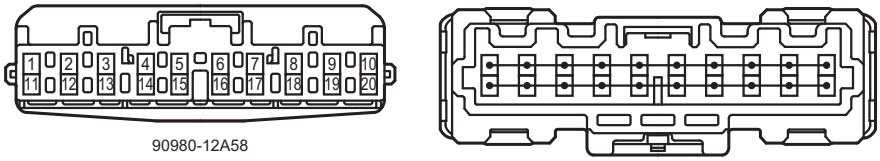

90980-12A58

G98
White

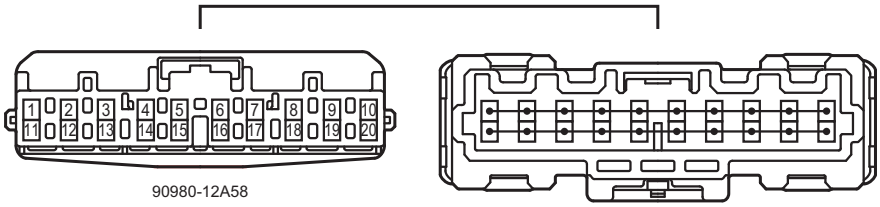

90980-12A58

G99
White



90980-12827

G100
White



90980-12827

G101
White



90980-12827

G102
White



90980-12827

G113
Black

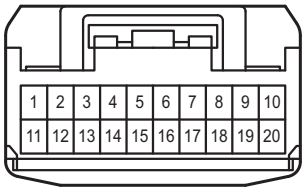

90980-12460

H9
Gray

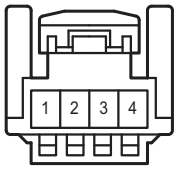

90980-12876

K14
White

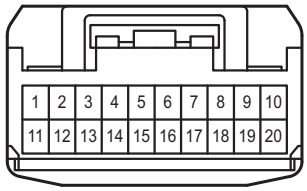

90980-12460

K17
White

90980-12552

K19
White

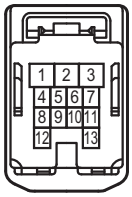

82824-28400

K25
White

90980-11077

L15
White

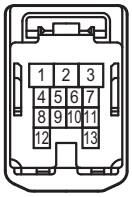

82824-28400

S30
Black

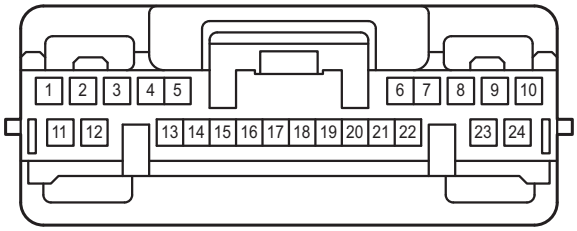

90980-12912

z7
Black

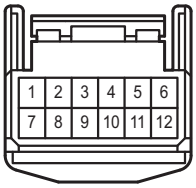

90980-12559

4A
White

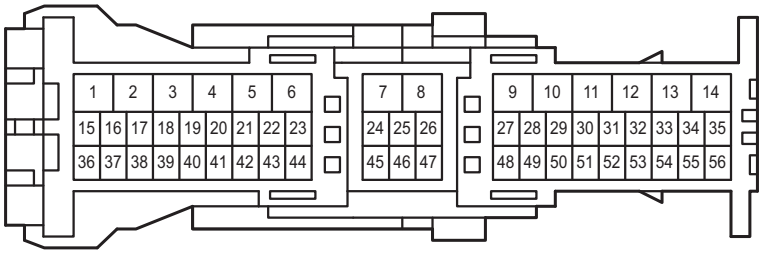

90980-12943

4D
White

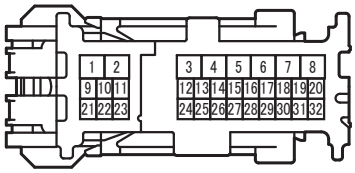

90980-12A48

4F
White

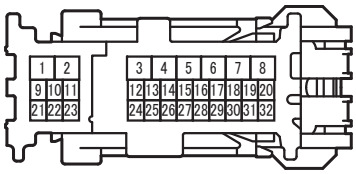

90980-12A47

AG2
Blue

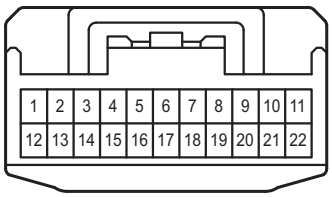

90980-12372

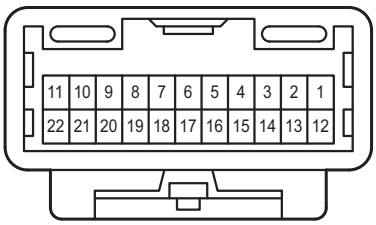

90980-12371

AG3
Black

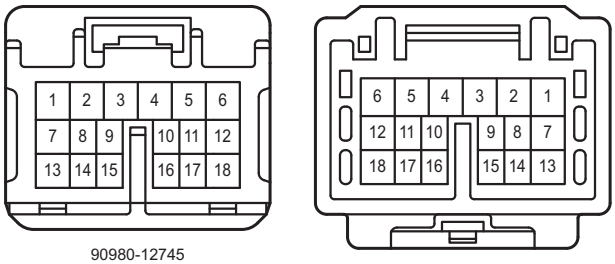

90980-12745

90980-12744

AG4
Gray

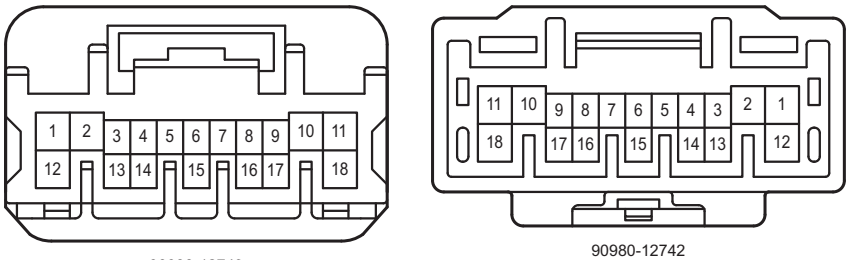

90980-12743

90980-12742

AG6
Blue

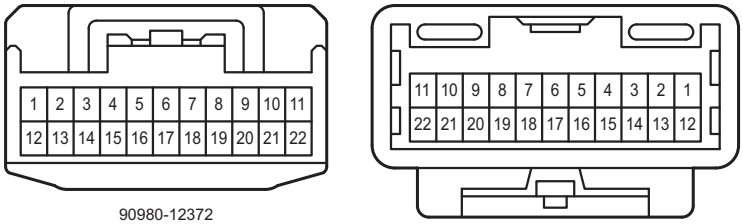

90980-12372

90980-12371

DA2
White

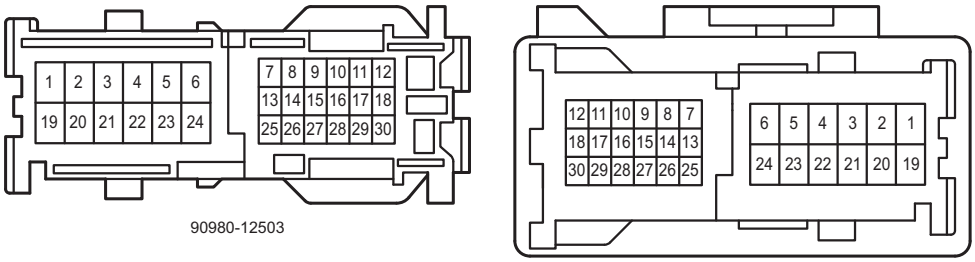

90980-12503

90980-12516

GF1
Gray

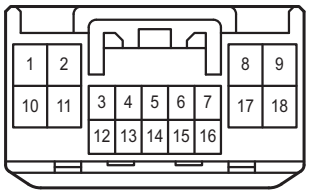

90980-12376

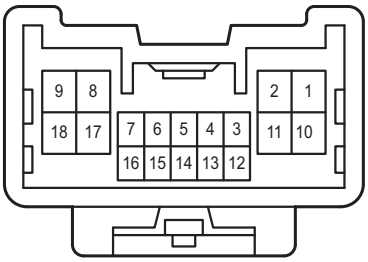

90980-12375

GF2
Blue

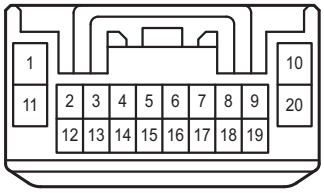

90980-12378

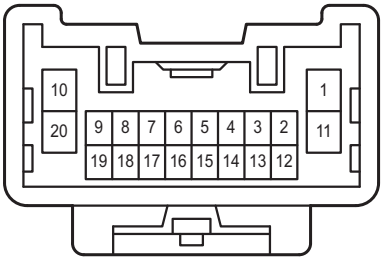

90980-12377

GF4
White

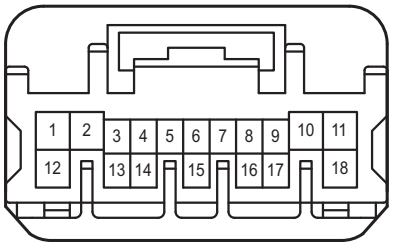

90980-12743

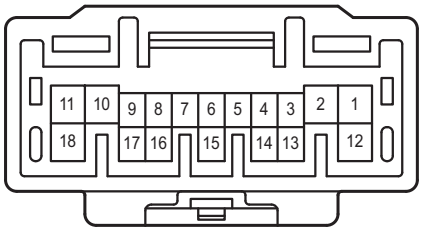

90980-12742

GF6
White

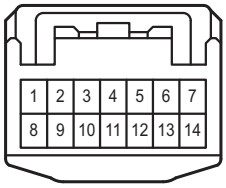

90980-12370

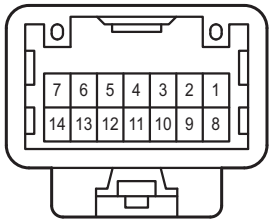

90980-12369

GH2
White

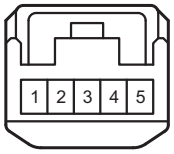

90980-12366

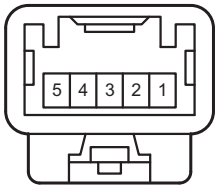

90980-12365

GK1
White

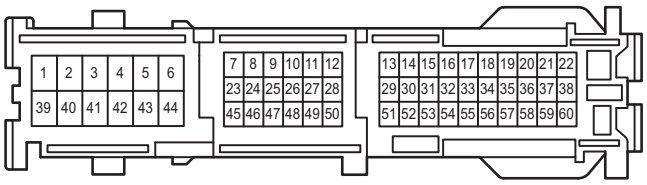

90980-12501

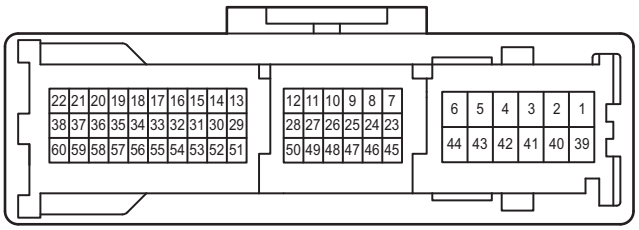

90980-12514

GK2
White

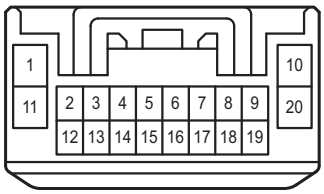

90980-12378

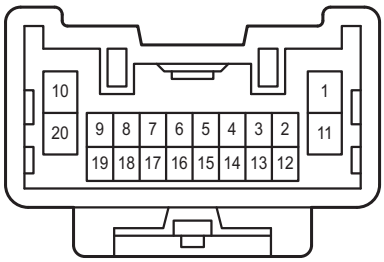

90980-12377

GL1
White

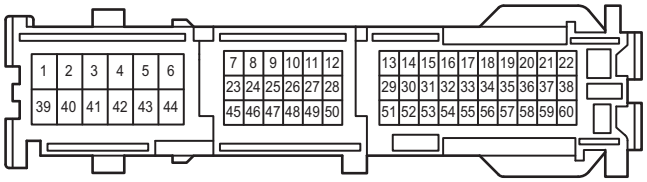

90980-12501

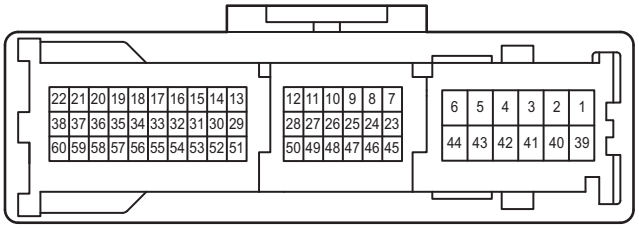

90980-12514

SG1
White

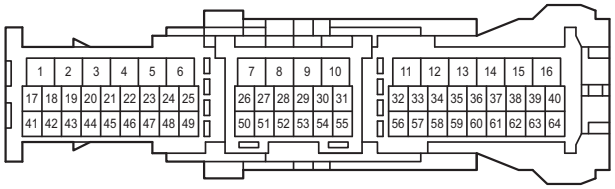

90980-12774

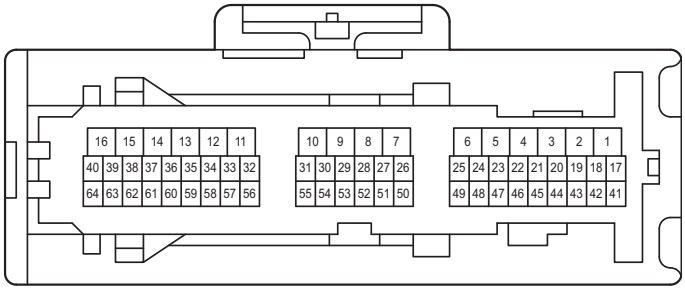

90980-12798