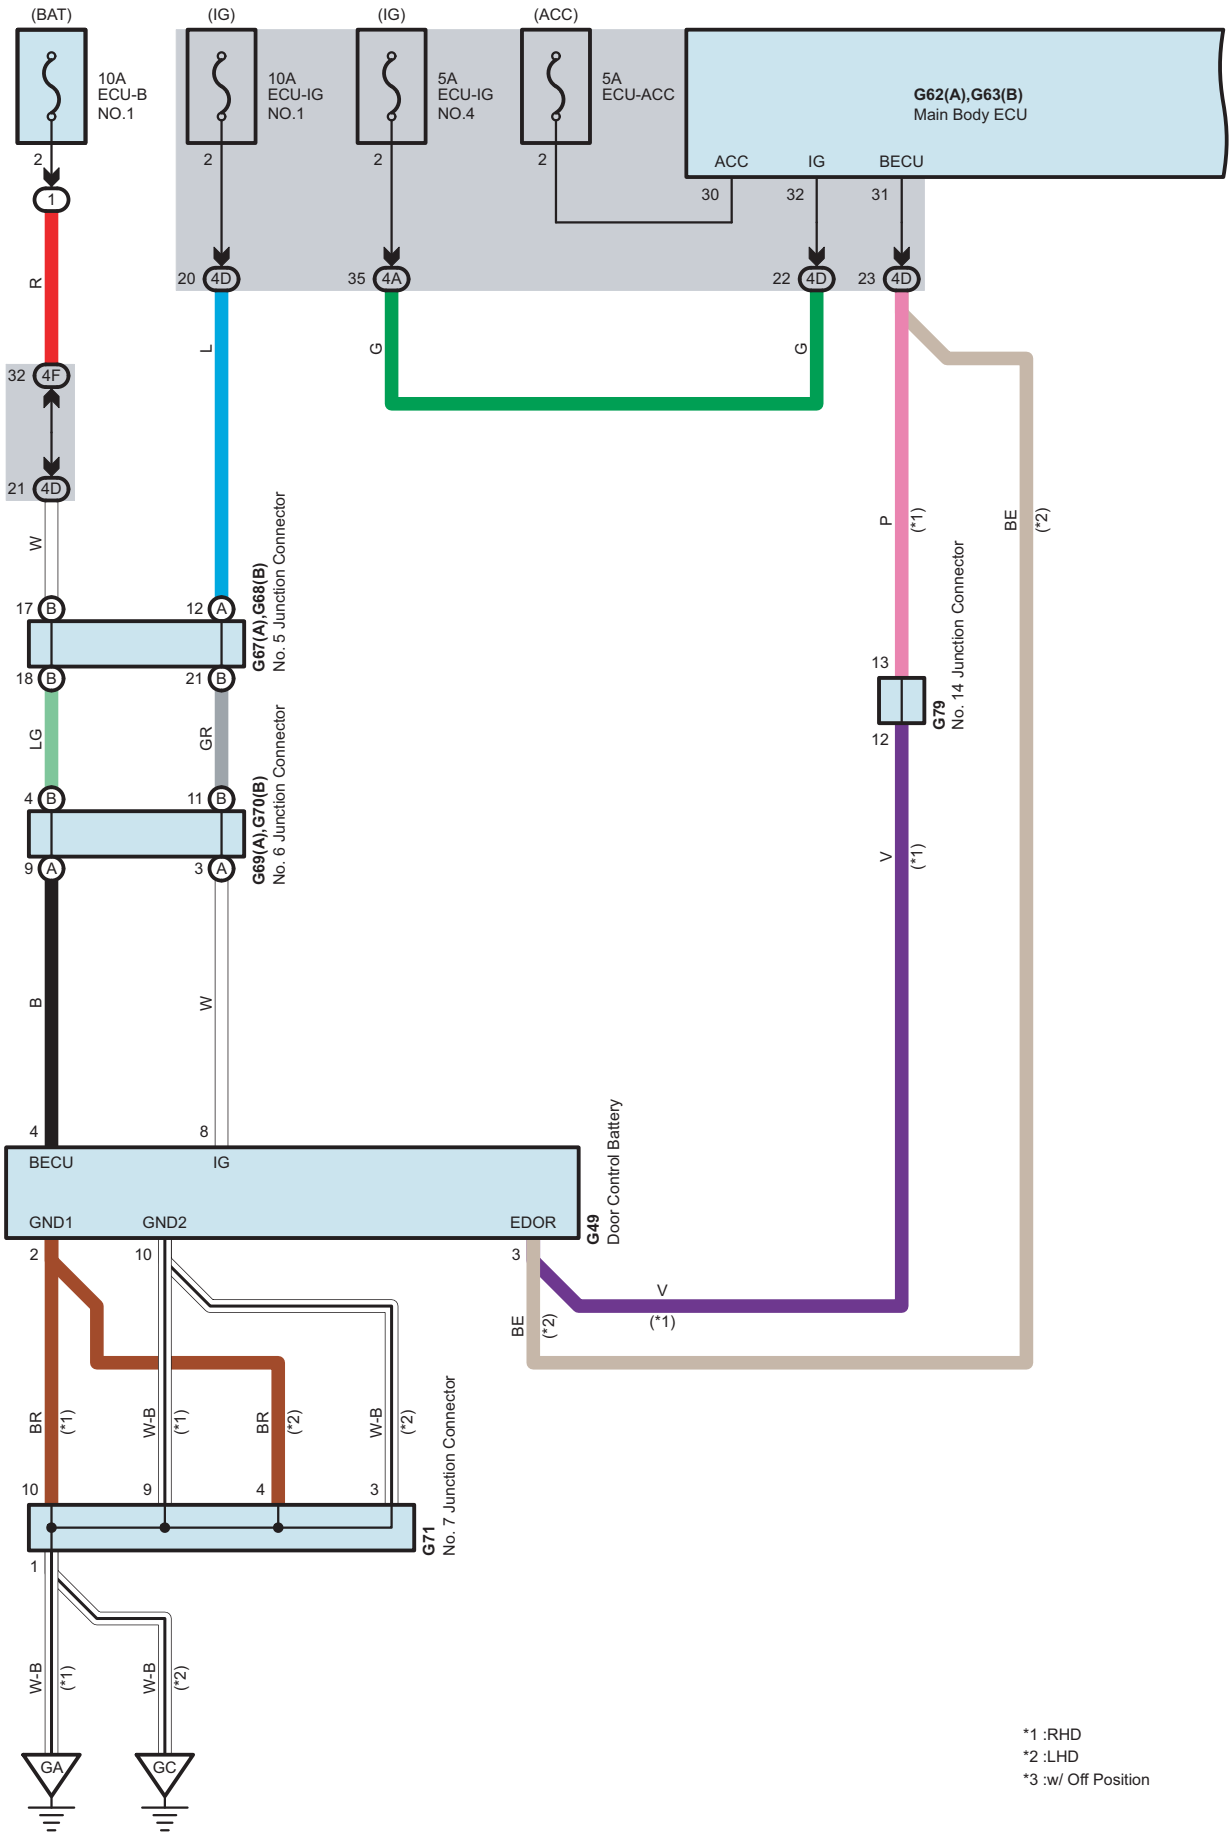
(BAT)
(IG)
(IG)
(ACC)
10A
ECU-B
NO.1
10A
ECU-IG
NO.1
5A
ECU-IG
NO.4
5A
ECU-ACC
G62(A),G63(B)
Main Body ECU
ACC
IG
BECU
30
32
31
2
1
R
20 4D
35 4A
22 4D
23 4D
L
G
G
32 4F
21 4D
W
P
(*1)
BE
(*2)
17 B
12 A
18 B
21 B
G67(A),G68(B)
No. 5 Junction Connector
13
12
G79
No. 14 Junction Connector
LG
GR
4 B
11 B
9 A
3 A
G69(A),G70(B)
No. 6 Junction Connector
V
(*1)
B
W
4
8
BECU
IG
GND1
GND2
EDOR
G49
Door Control Battery
2
10
3
V
(*1)
BE
(*2)
BR
(*1)
W-B
(*1)
BR
(*2)
W-B
(*2)
10
9
4
3
G71
No. 7 Junction Connector
1
W-B
(*1)
W-B
(*2)
GA
GC
*1 :RHD
*2 :LHD
*3 :w/ Off Position

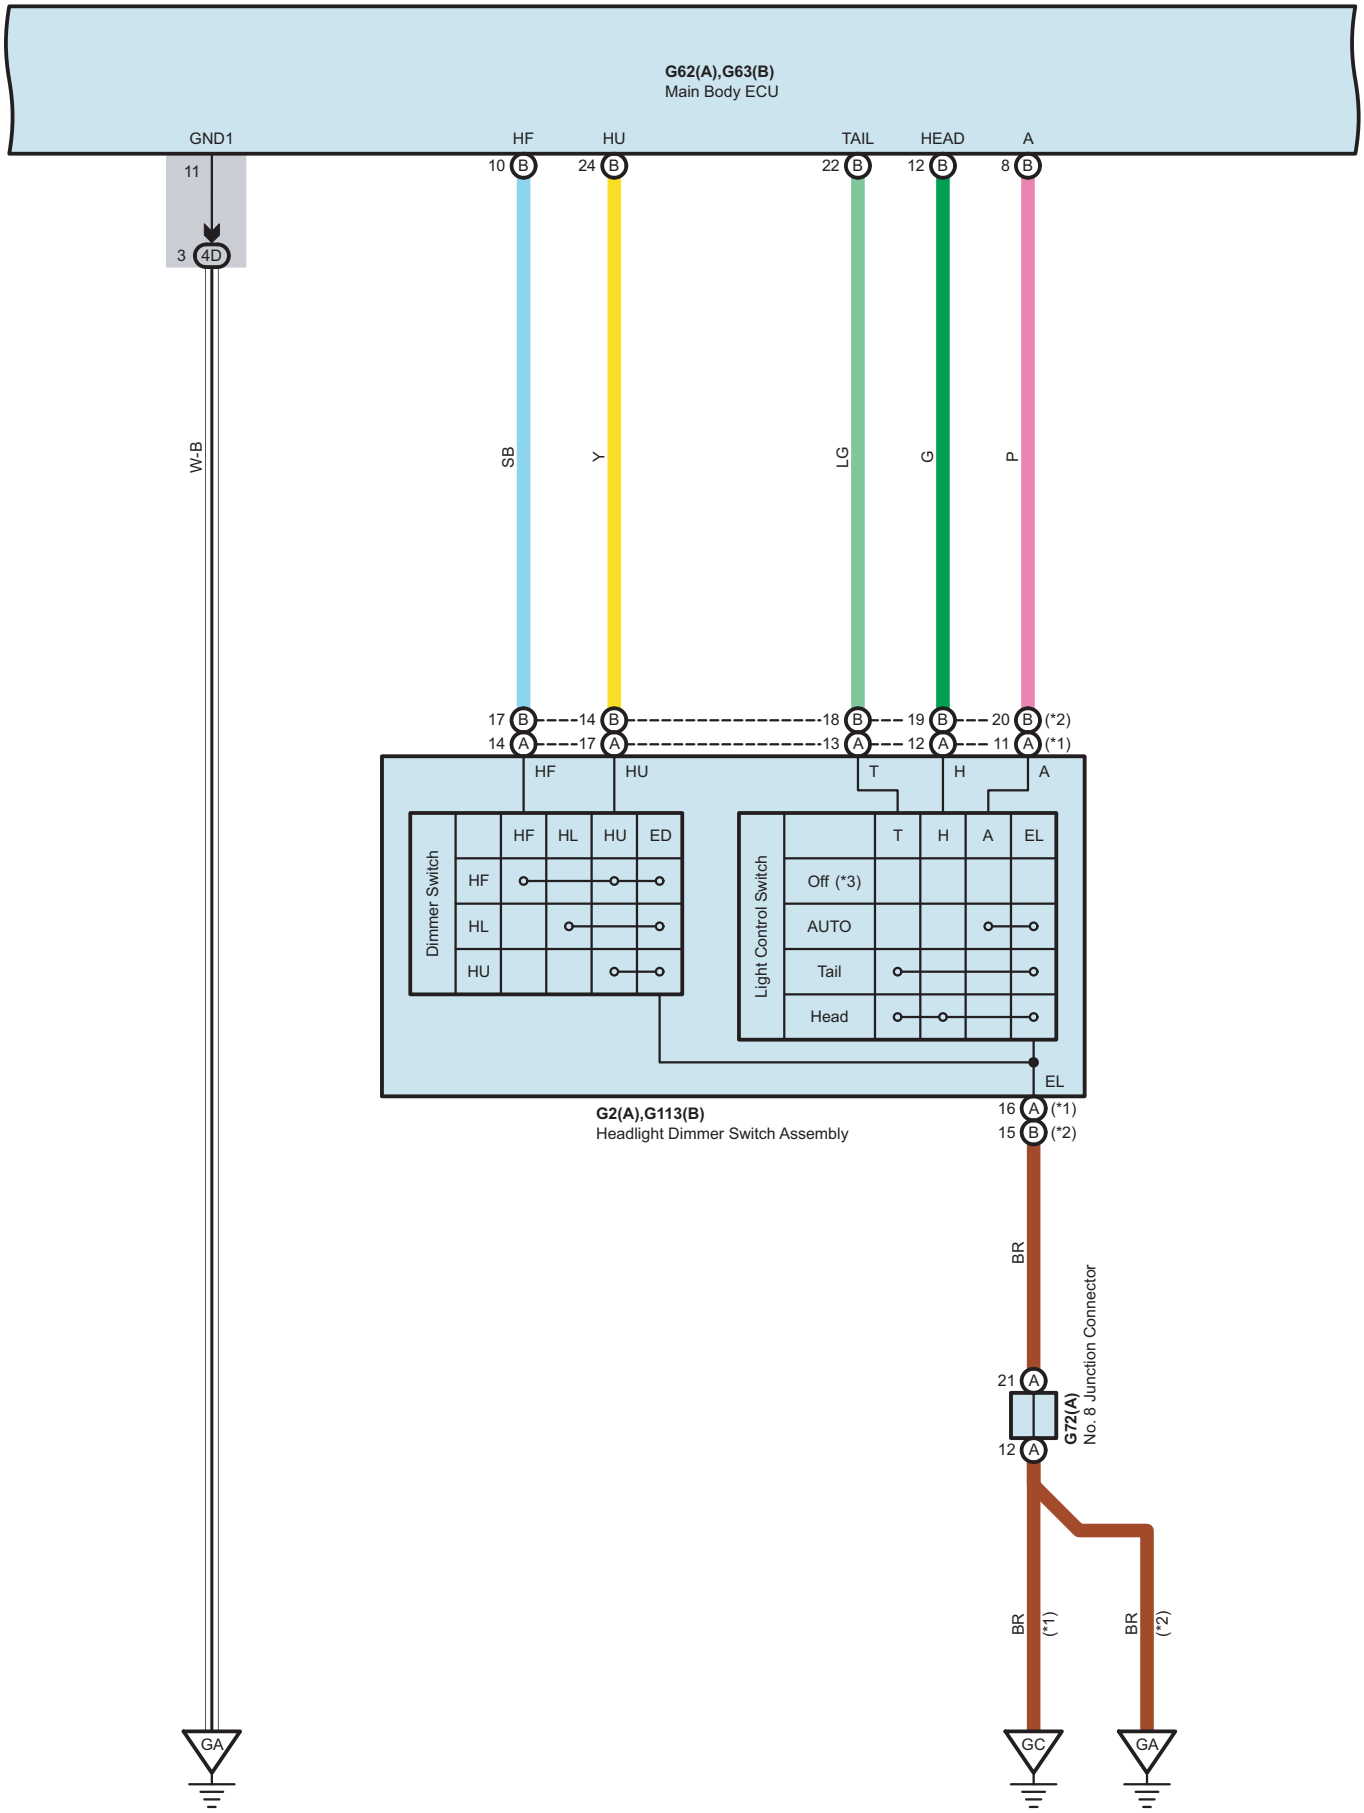
G62(A),G63(B)
Main Body ECU
GND1
HF
HU
TAIL
HEAD
A
11
3 4D
10 B
24 B
22 B
12 B
8 B
W-B
SB
Y
LG
G
P
17 B
14 A
14 B
17 A
18 B
13 A
19 B
12 A
20 B (*2)
11 A (*1)
HF
HU
T
H
A
Dimmer Switch
HF HL HU ED
HF
HL
HU
Light Control Switch
T H A EL
Off (*3)
AUTO
Tail
Head
EL
G2(A),G113(B)
Headlight Dimmer Switch Assembly
16 A (*1)
15 B (*2)
BR
21 A
12 A
G72(A)
No. 8 Junction Connector
BR (*1)
BR (*2)
GA
GC
GA

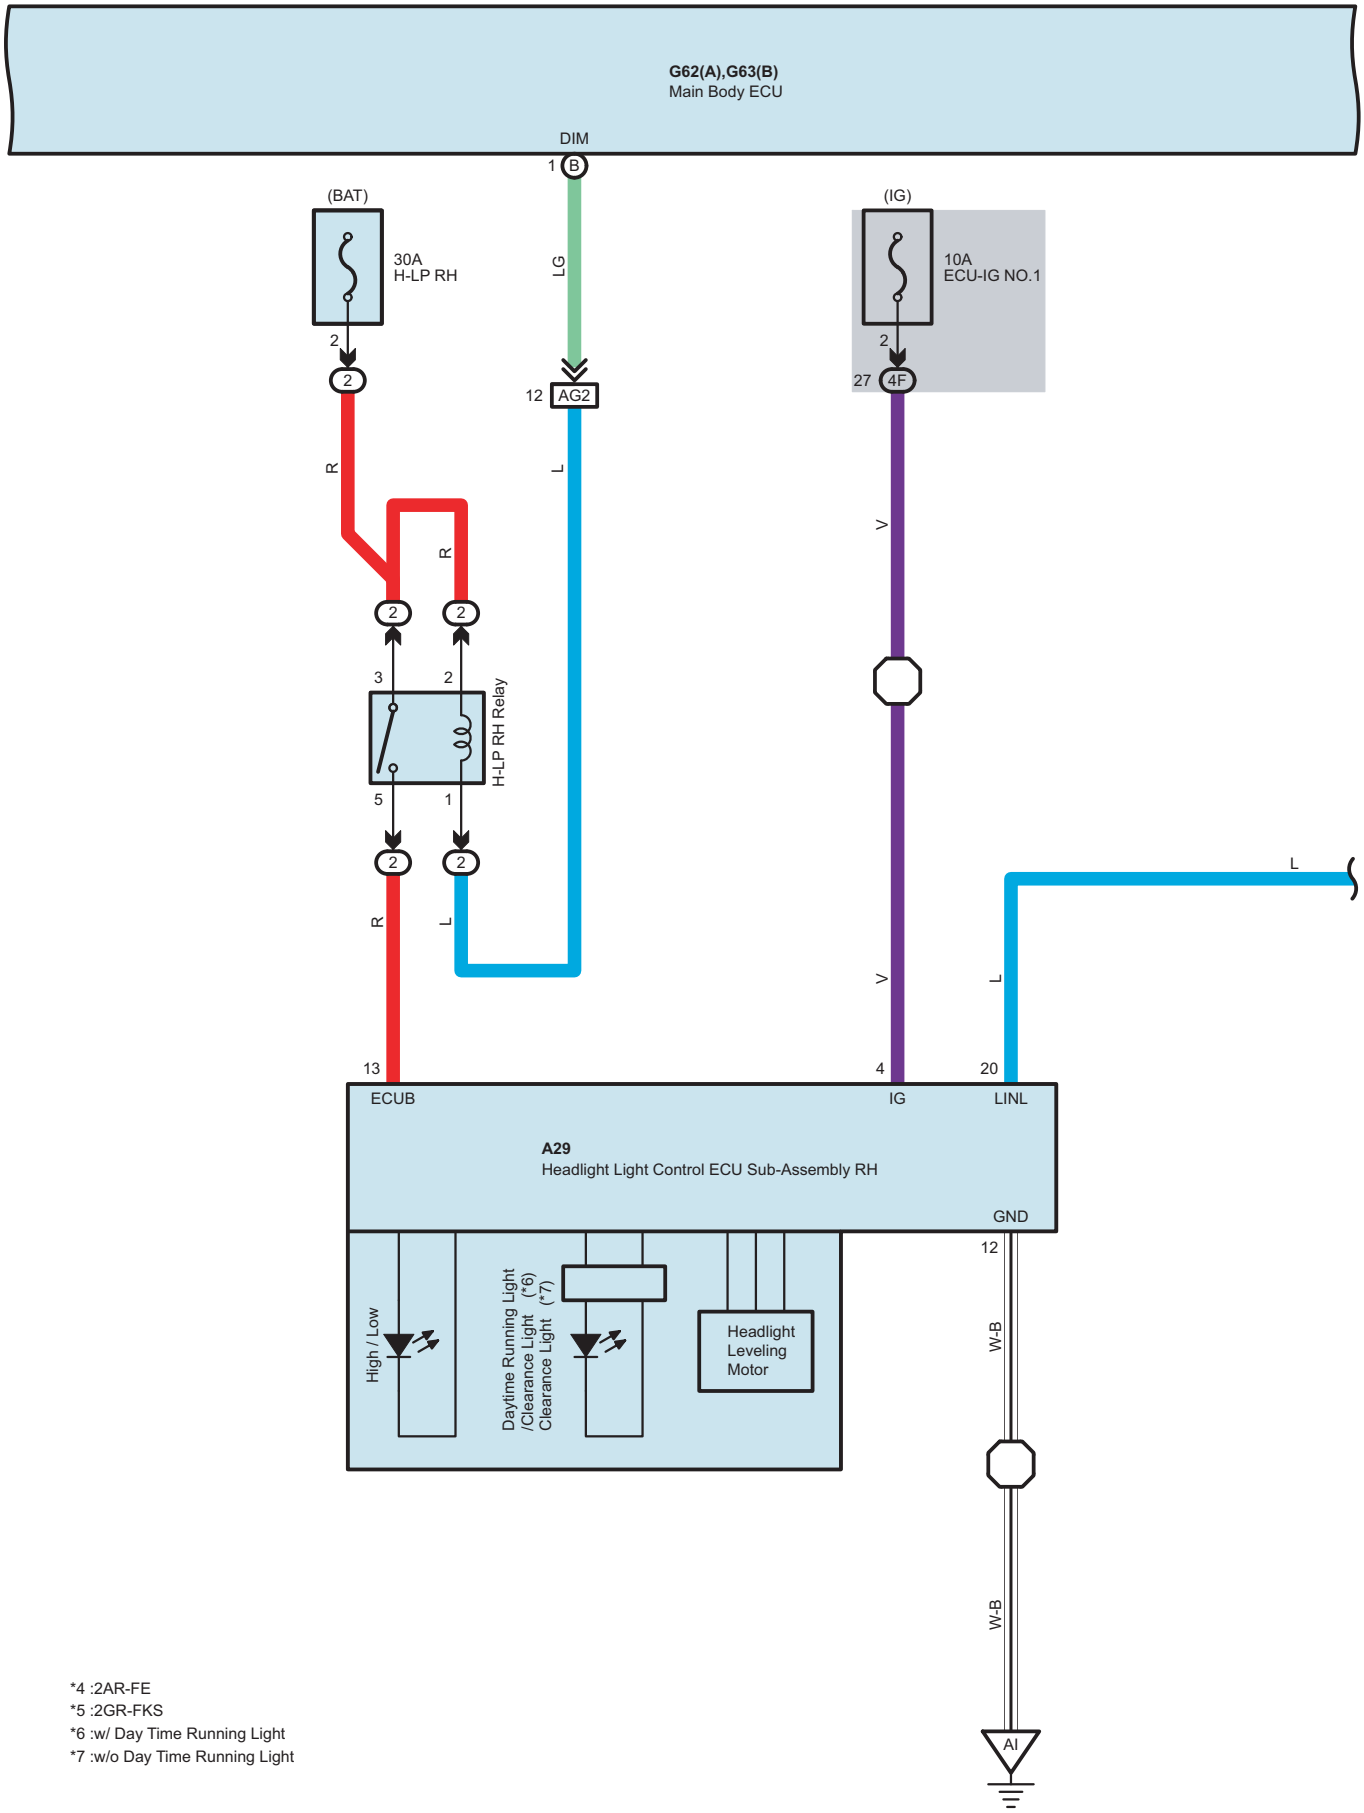

*4 :2AR-FE
*5 :2GR-FKS
*6 :w/ Day Time Running Light
*7 :w/o Day Time Running Light

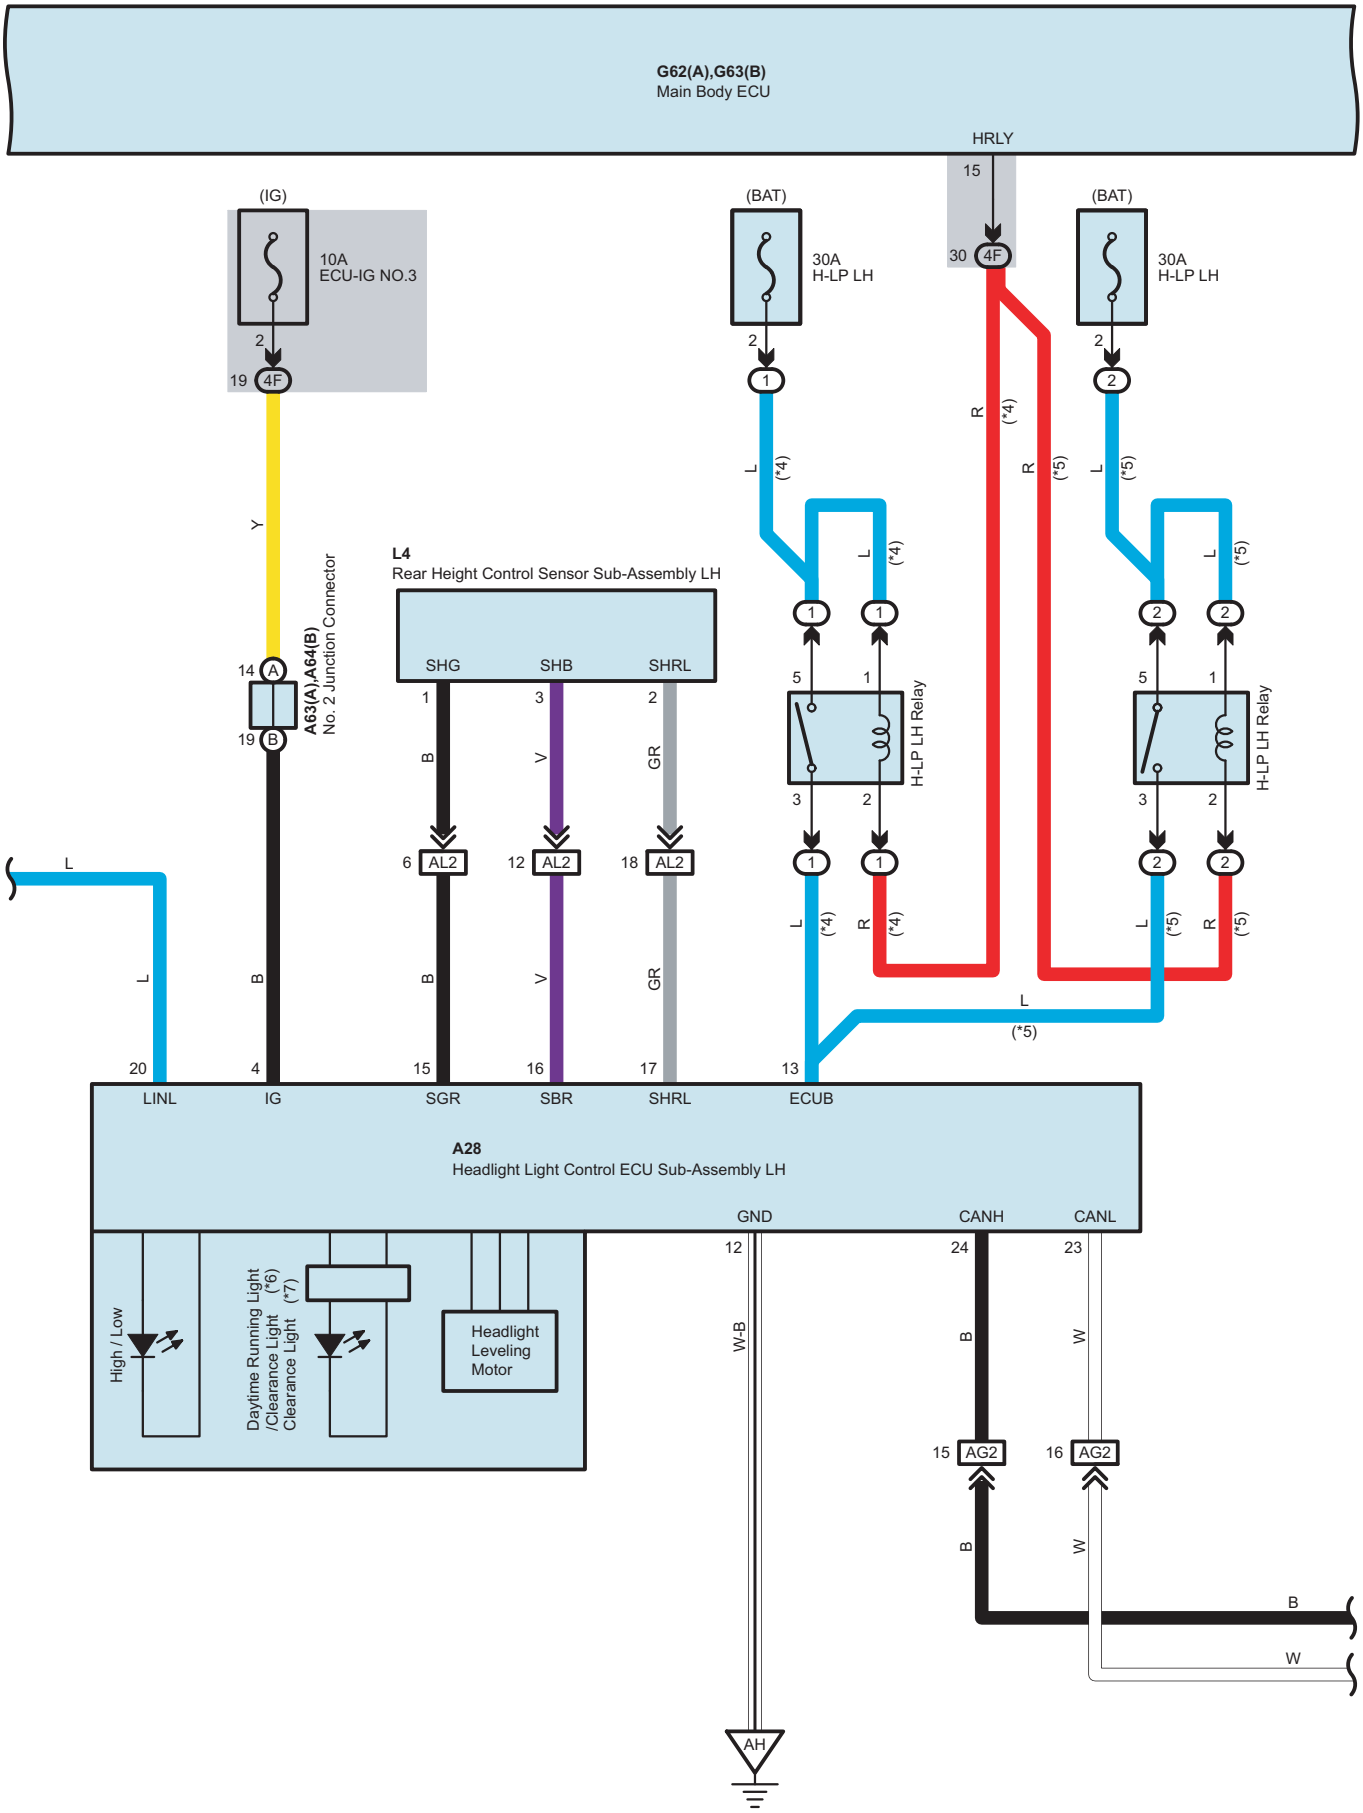
G62(A),G63(B)
Main Body ECU
HRLY
15
30
4F
(IG)
10A
ECU-IG NO.3
2
19
4F
(BAT)
30A
H-LP LH
(BAT)
30A
H-LP LH
Y
L4
Rear Height Control Sensor Sub-Assembly LH
SHG
SHB
SHRL
A63(A),A64(B)
No. 2 Junction Connector
14
A
19
B
H-LP LH Relay
H-LP LH Relay
AL2
LINL
IG
SGR
SBR
SHRL
ECUB
A28
Headlight Light Control ECU Sub-Assembly LH
GND
CANH
CANL
High / Low
Daytime Running Light
/Clearance Light (*6)
Clearance Light (*7)
Headlight
Leveling
Motor
W-B
AG2
AH

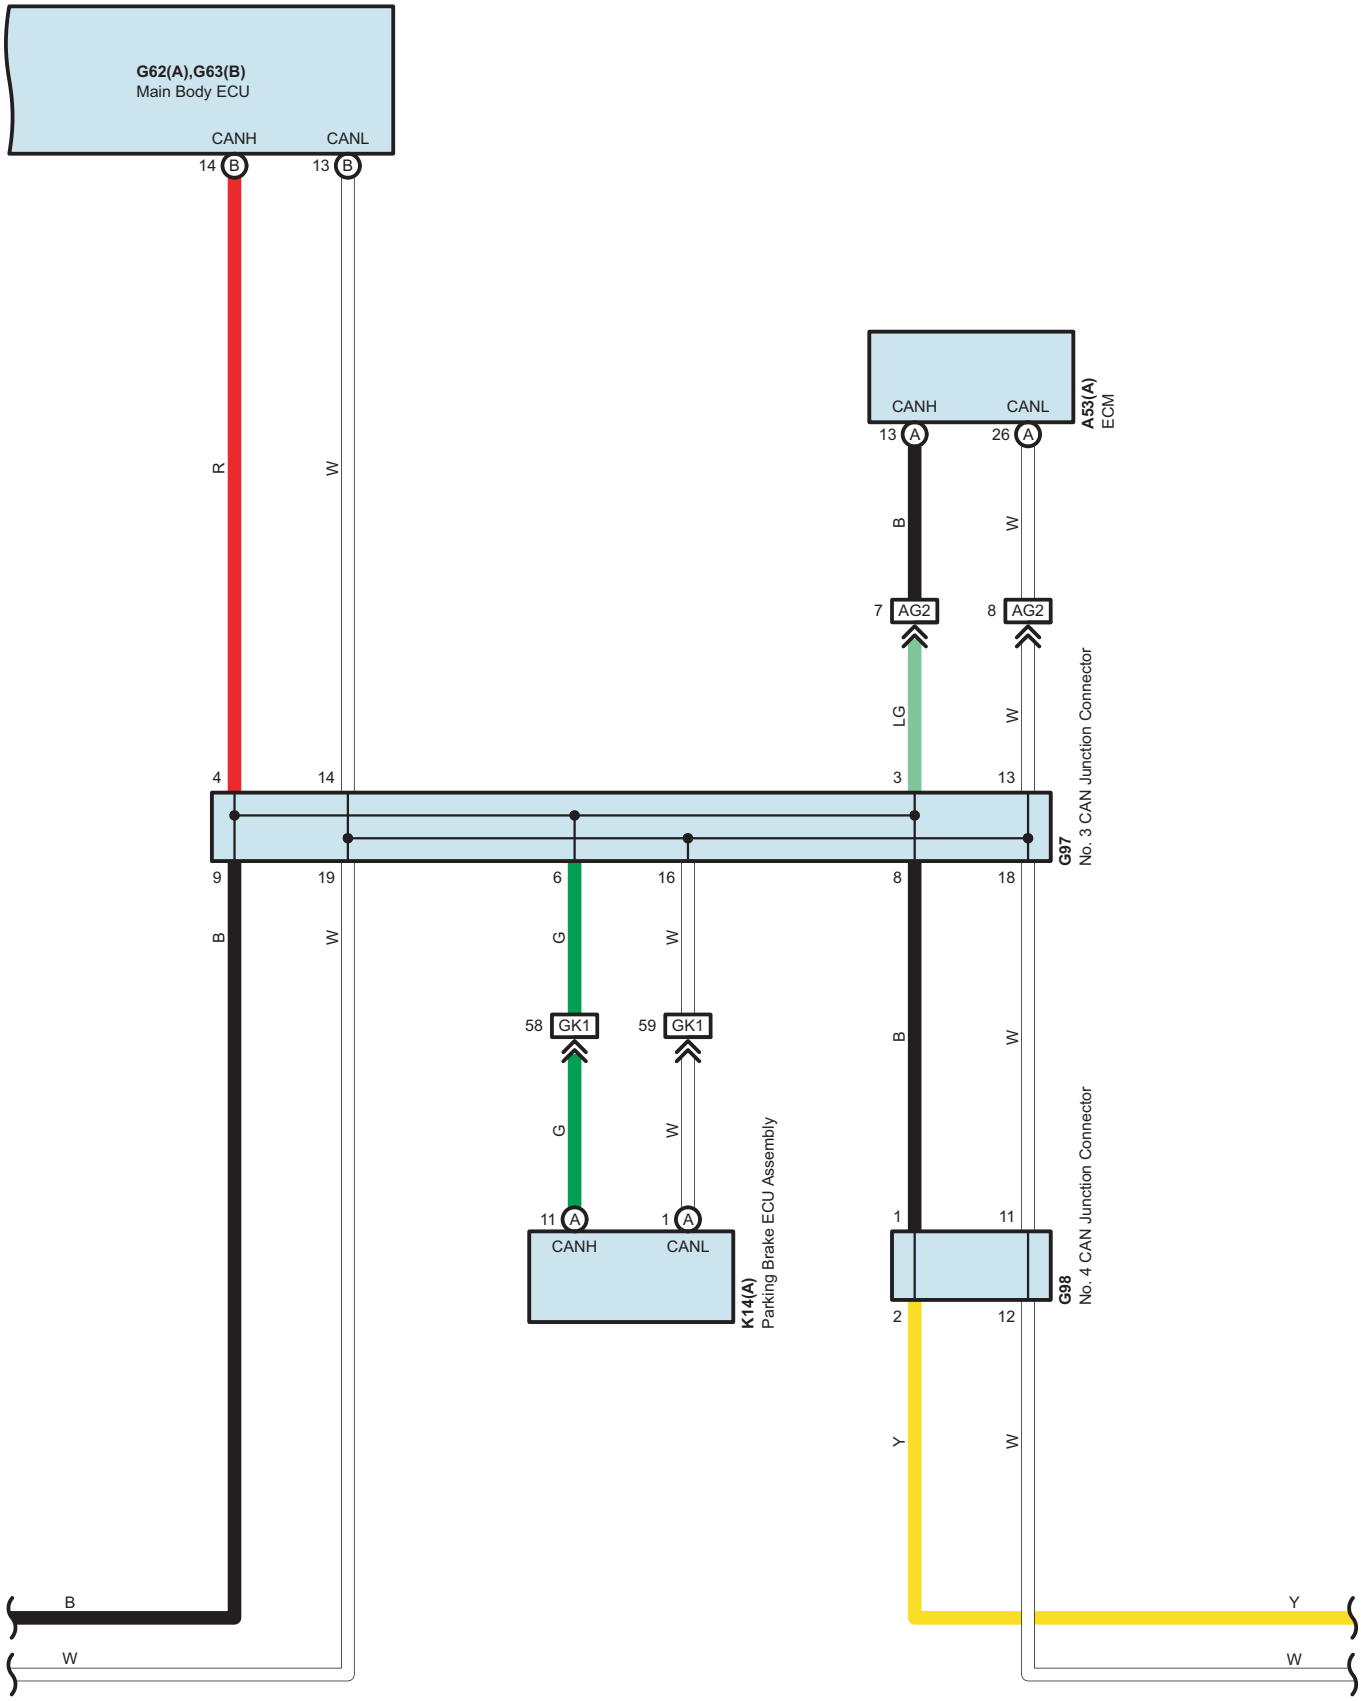
G62(A),G63(B)
Main Body ECU
CANH
CANL
14 B
13 B
R
W
A53(A)
ECM
CANH
CANL
13 A
26 A
B
W
7 AG2
8 AG2
LG
W
4
14
3
13
G97
No. 3 CAN Junction Connector
9
19
6
16
8
18
B
W
G
W
58 GK1
59 GK1
B
W
G
W
11 A
1 A
CANH
CANL
K14(A)
Parking Brake ECU Assembly
1
11
G98
No. 4 CAN Junction Connector
2
12
Y
W
B
W
Y
W

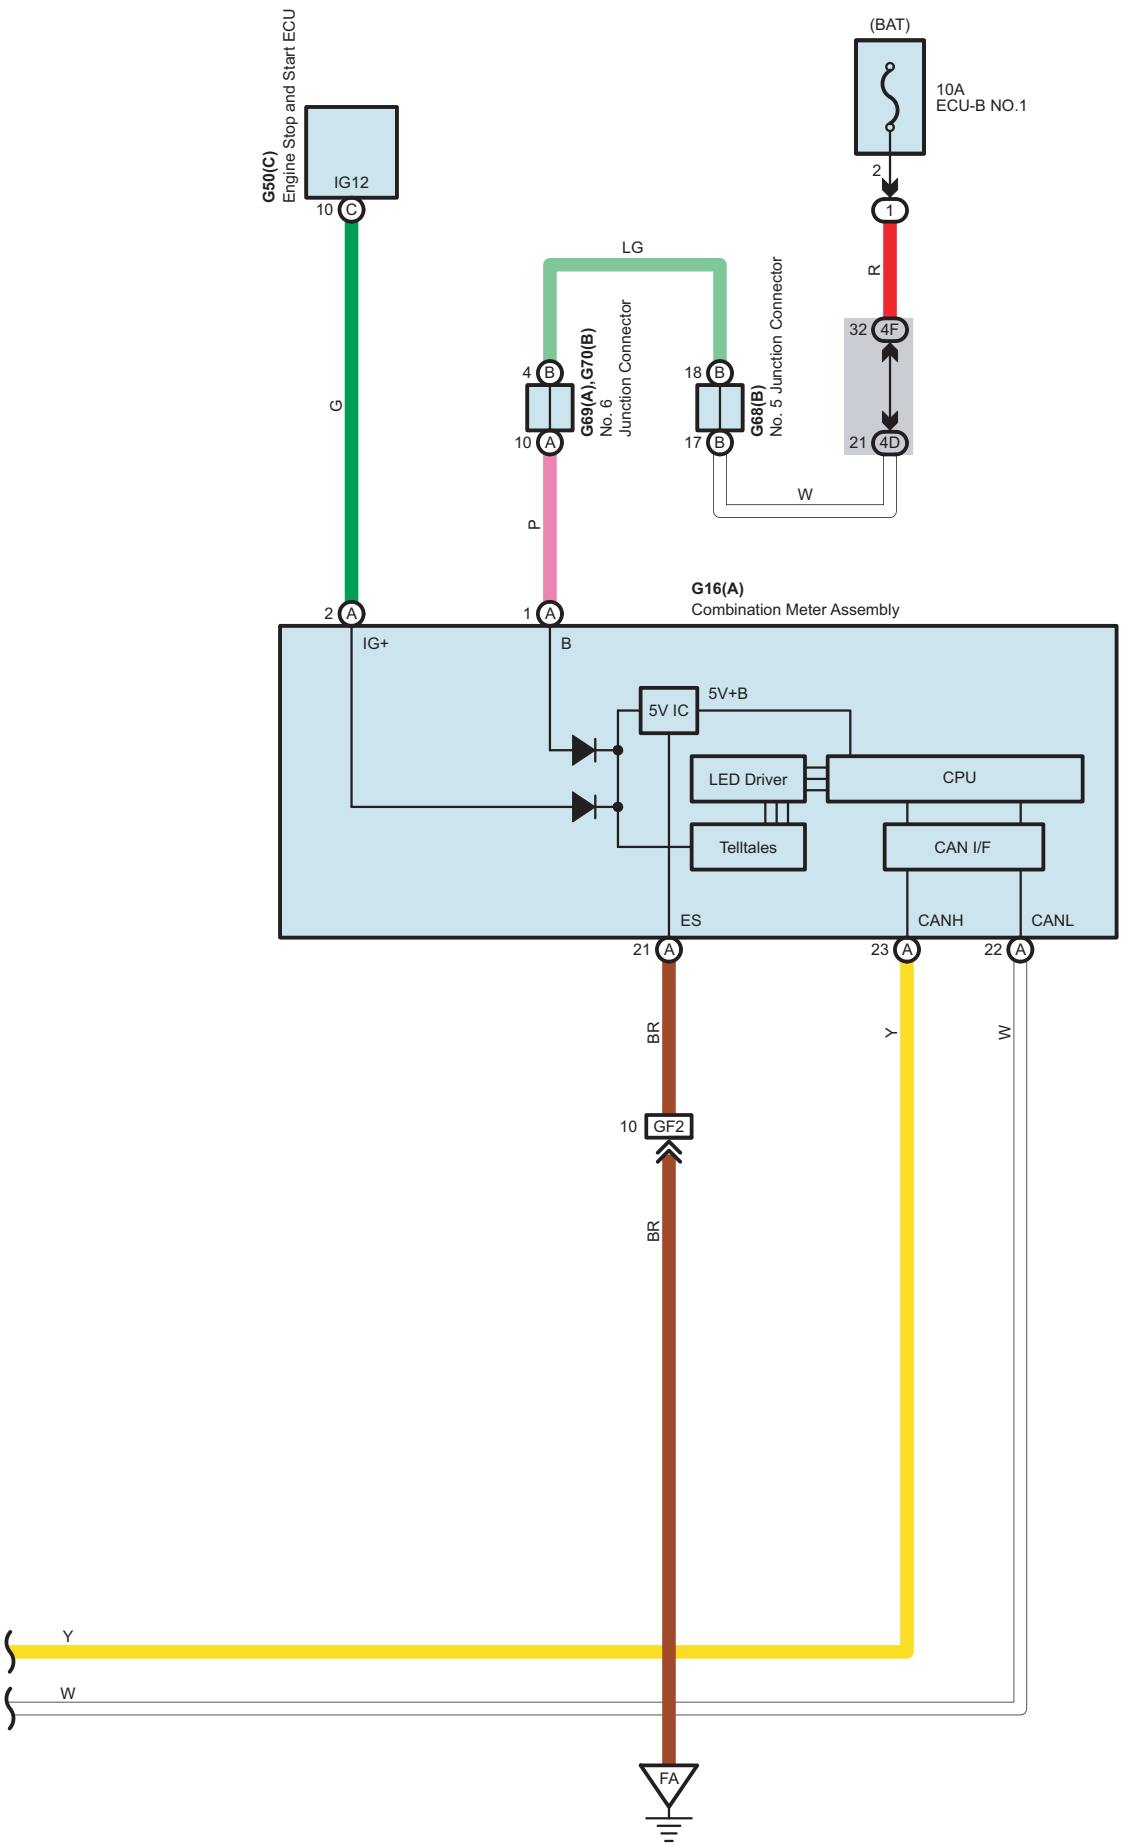
G50(C)
Engine Stop and Start ECU
IG12
10 C
G
(BAT)
10A
ECU-B NO.1
2
1
R
32 4F
21 4D
LG
4 B
10 A
G69(A),G70(B)
No. 6
Junction Connector
18 B
17 B
G68(B)
No. 5 Junction Connector
W
P
G16(A)
Combination Meter Assembly
2 A
IG+
1 A
B
5V IC
5V+B
LED Driver
CPU
Telltales
CAN I/F
ES
CANH
CANL
21 A
23 A
22 A
BR
Y
W
10 GF2
BR
Y
W
FA

A28
Gray

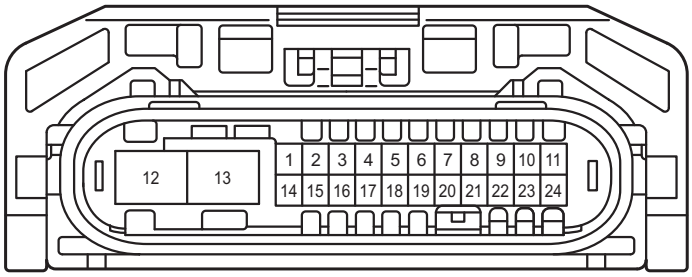

90980-12A92

A29
Gray

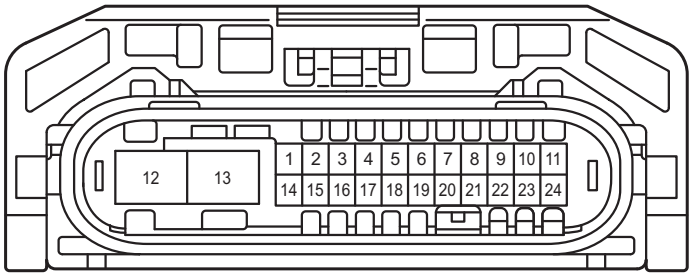

90980-12A92

A53
Black

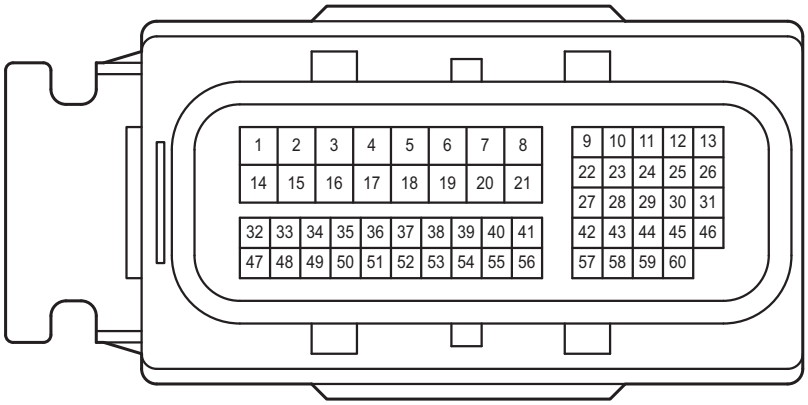

90980-12931

A63
Black

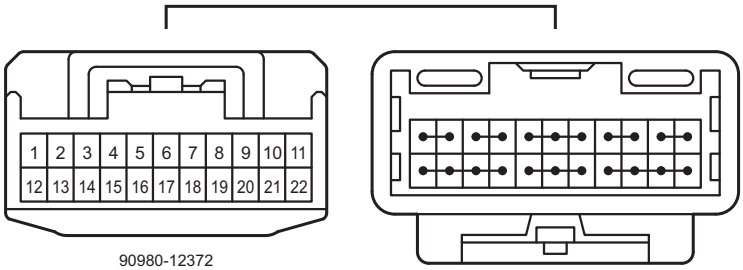

90980-12372

A64
Black

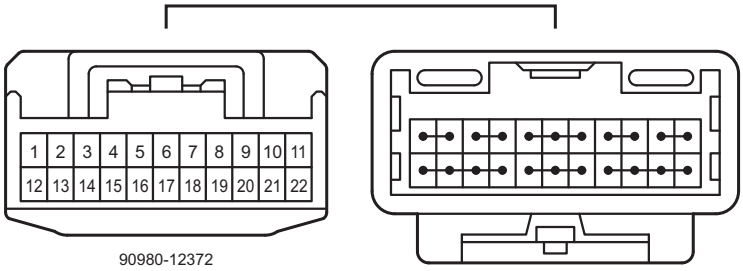

90980-12372

G2
White

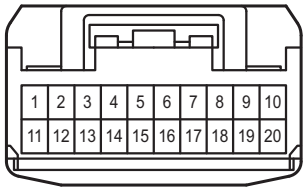

90980-12460

G16
Black

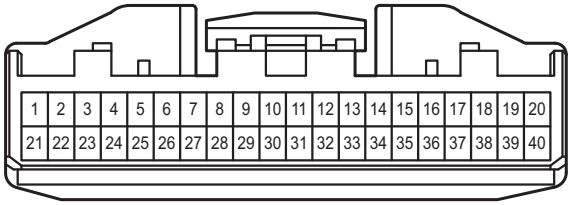

90980-12557

G49
Gray

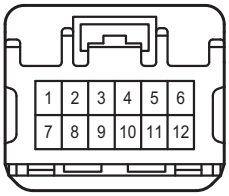

90980-12737

G50
Black

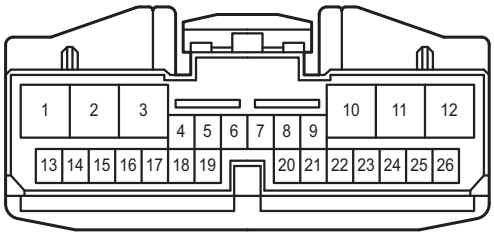

82824-12510

G63
White

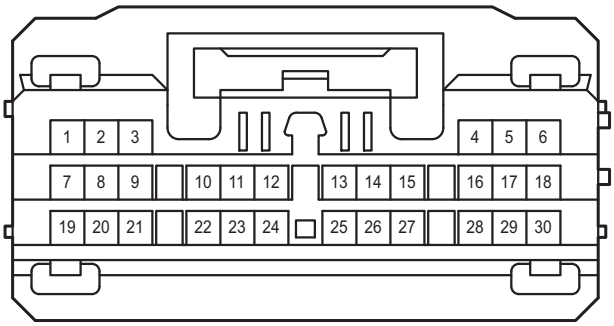

90980-12909

G67
LHD : Black RHD : Blue

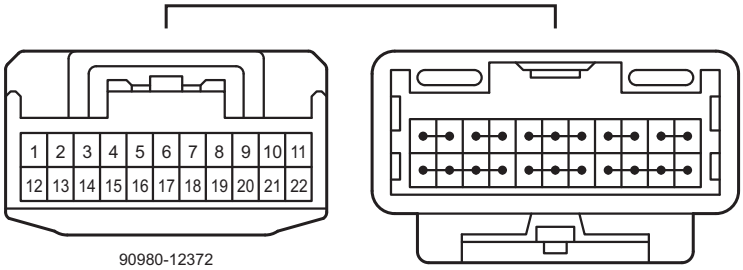

90980-12372

G68
LHD : White RHD : Black

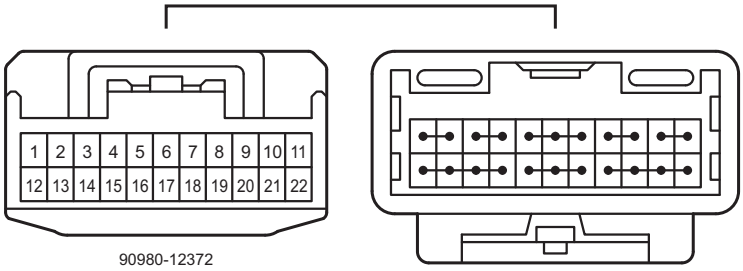

G69
LHD : White RHD : Blue

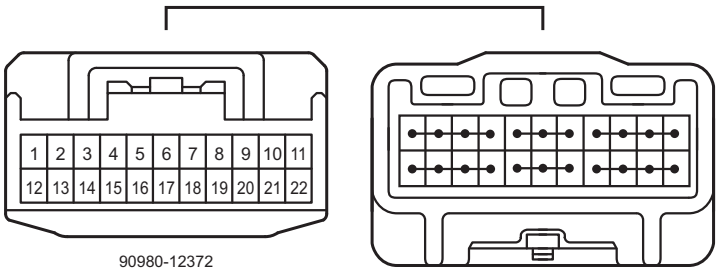

G70
Black

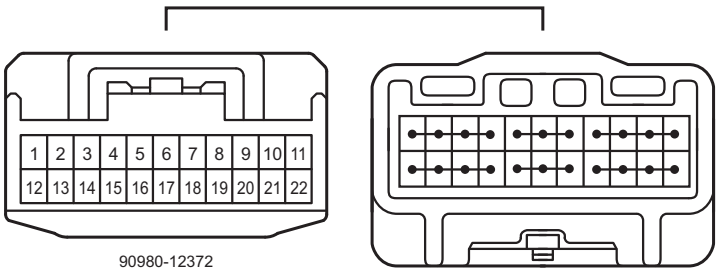

G71
Gray

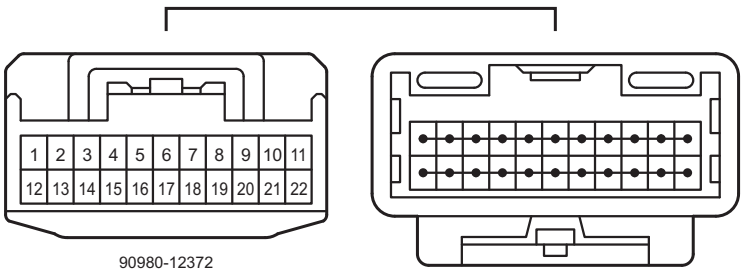

G72
Black

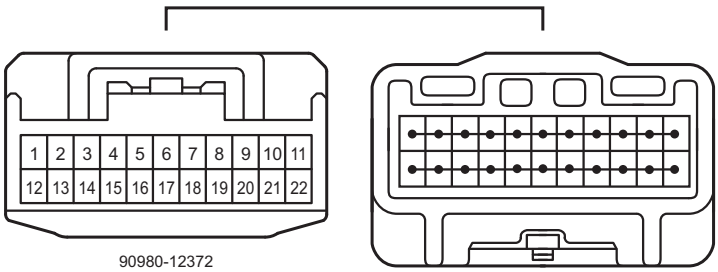

G79
Blue

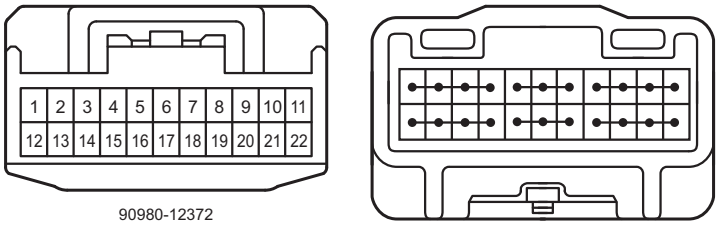

90980-12372

G97
White

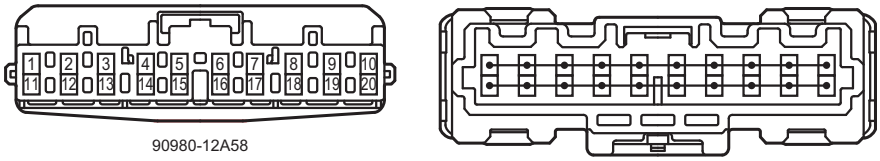

90980-12A58

G98
White

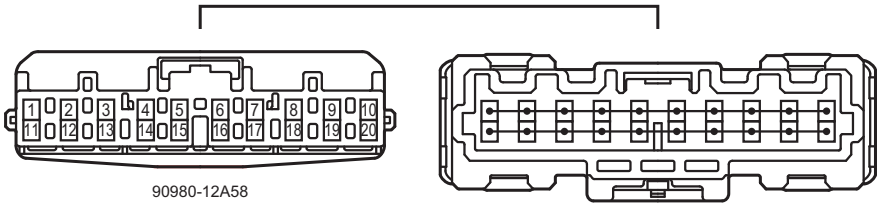

90980-12A58

G113
Black

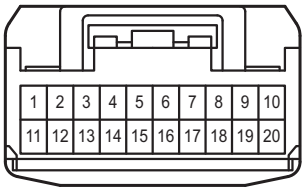

90980-12460

K14
White

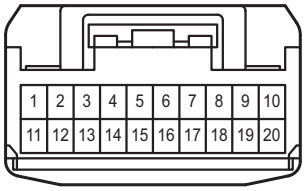

90980-12460

L4
Black

90980-12353

4A
White

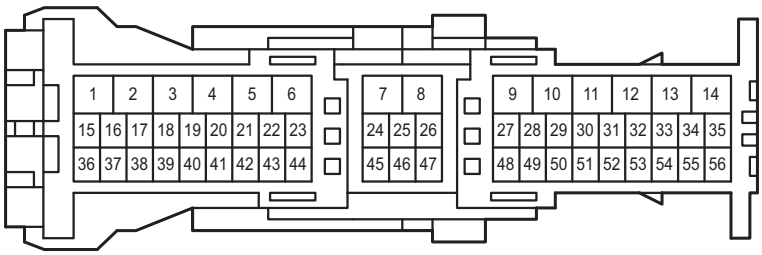

90980-12943

4D
White

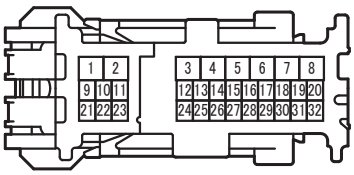

90980-12A48

4F
White

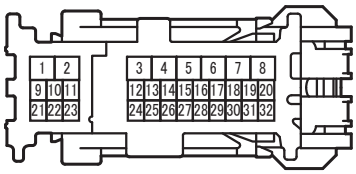

90980-12A47

AG2
Blue

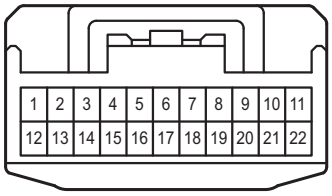

90980-12372

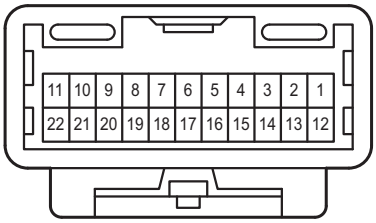

90980-12371

AL2
Black

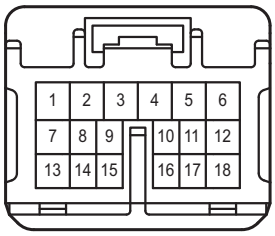

90980-12745

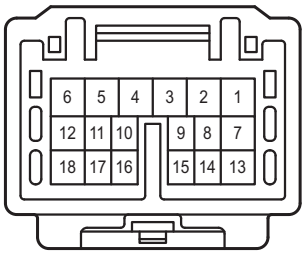

90980-12744

GF2
Blue

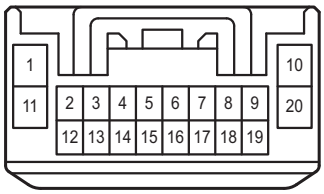

90980-12378

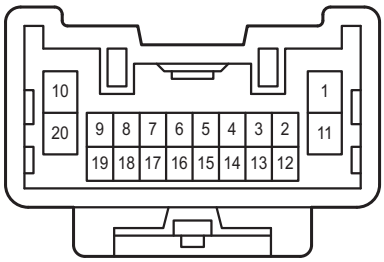

90980-12377

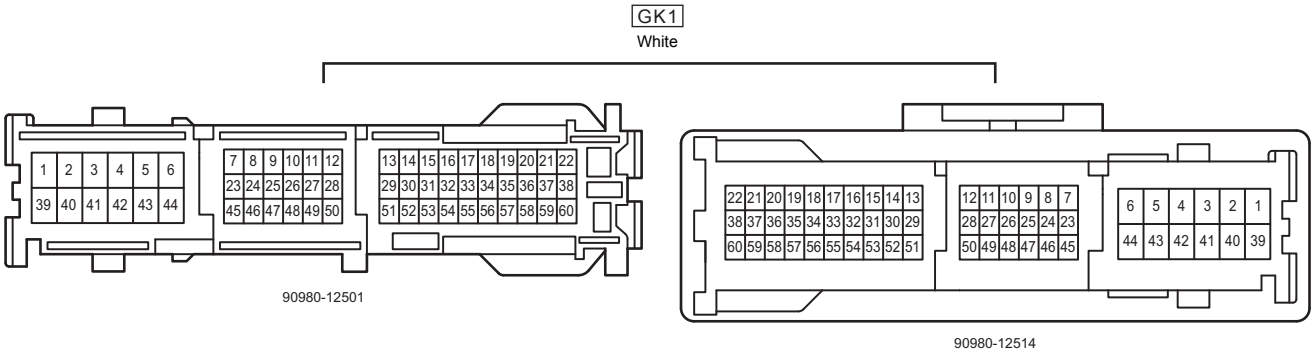
GK1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
90980-12501
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39
90980-12514