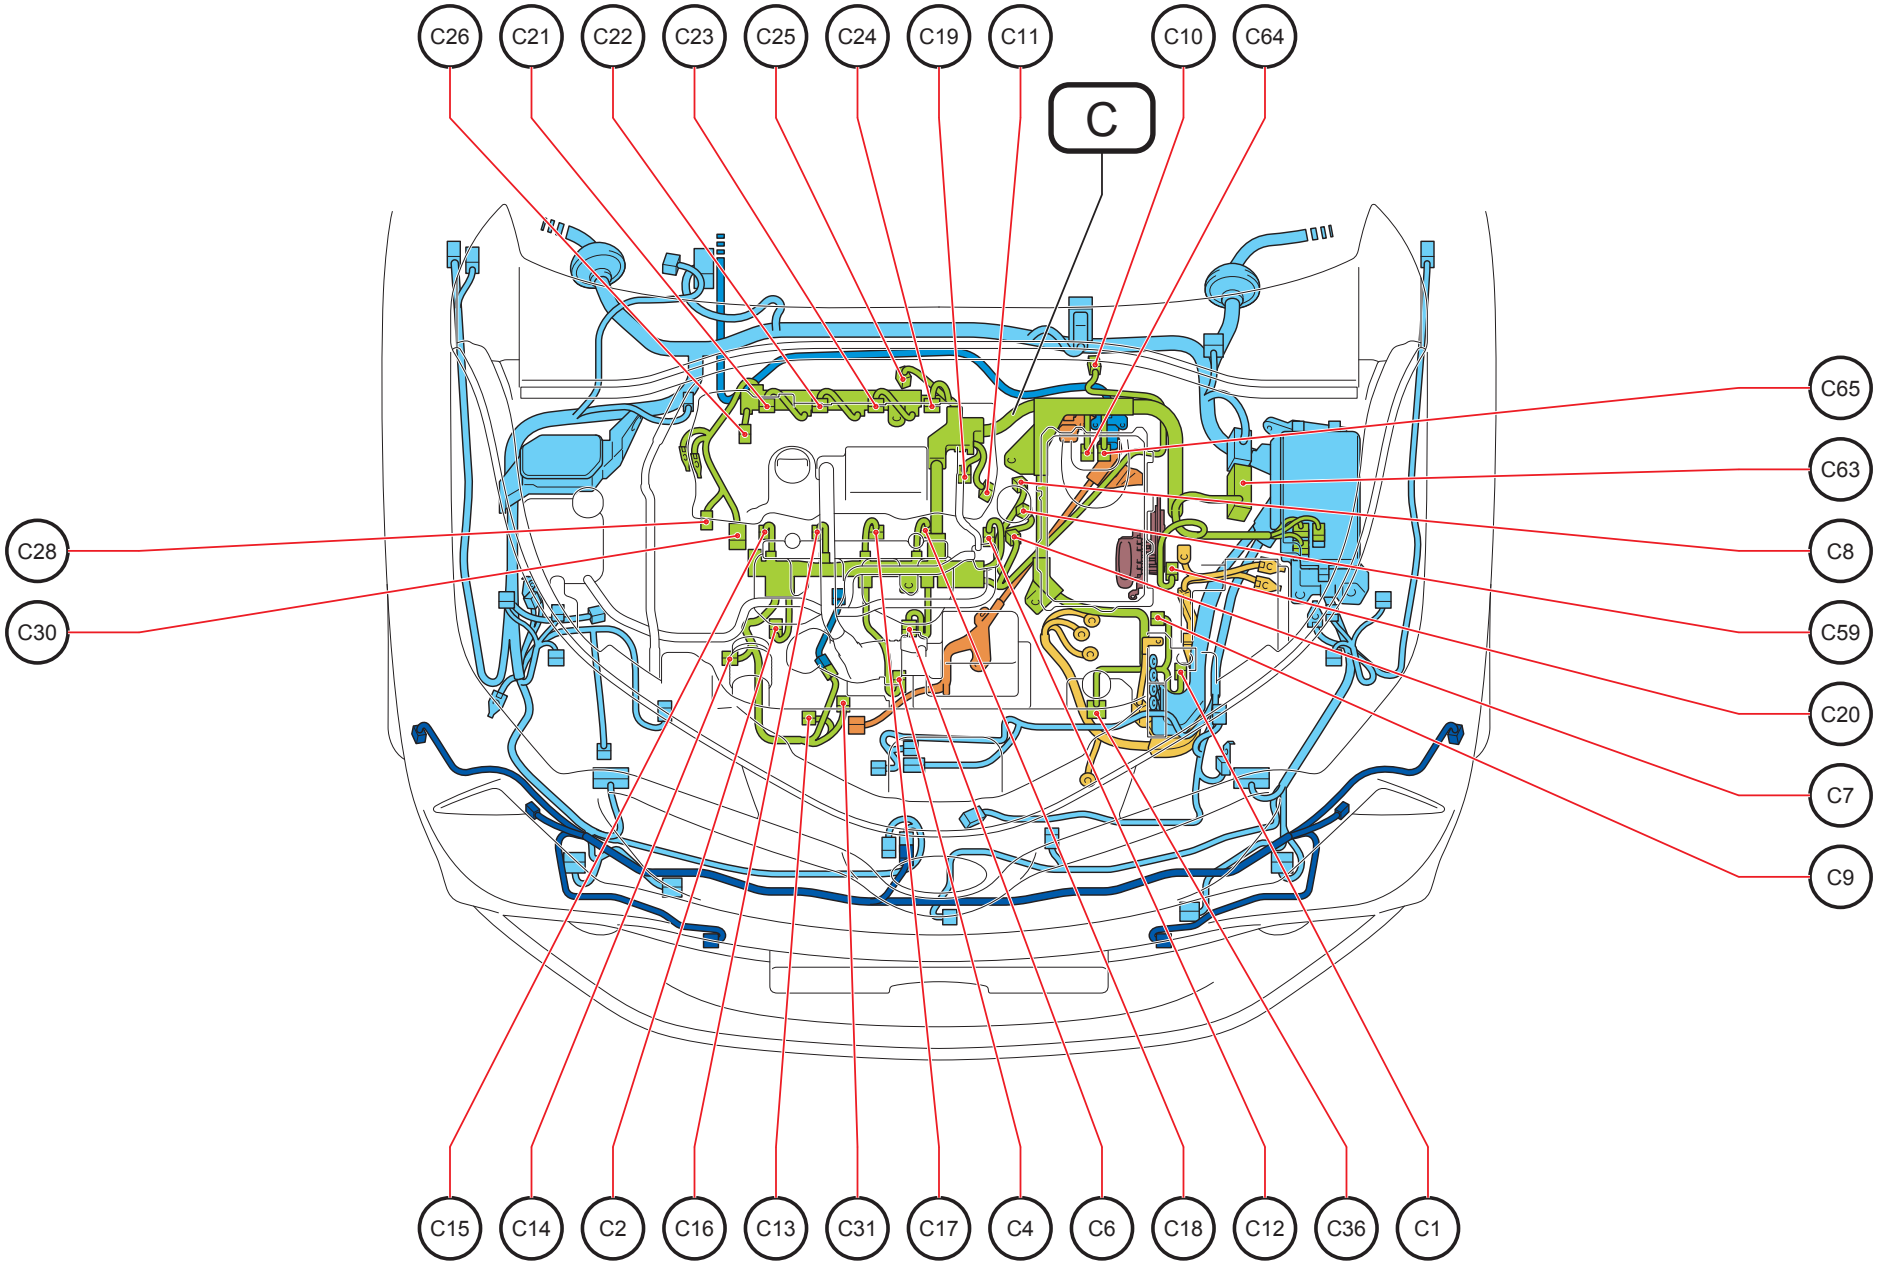
C26
C21
C22
C23
C25
C24
C19
C11
C10
C64
C
C65
C63
C8
C59
C20
C7
C9
C28
C30
C15
C14
C2
C16
C13
C31
C17
C4
C6
C18
C12
C36
C1

C1	Hybrid Vehicle Transaxle Assembly
C2	E.F.I. Vacuum Sensor Assembly
C4	Throttle with Motor Body Assembly
C6	Intake Mass Air Flow Meter Sub-Assembly
C7	E.F.I. Engine Coolant Temperature Sensor
C8	Engine Coolant Temperature Sensor (Heater)
C9	Hybrid Vehicle Transaxle Assembly
C10	Oxygen Sensor (Bank 1 Sensor 2)
C11	EGR Valve Assembly
C12	Purge VSV
C13	Compressor with Motor Assembly
C14	Engine Water Pump Assembly
C15	Fuel Injector Assembly No. 1
C16	Fuel Injector Assembly No. 2
C17	Fuel Injector Assembly No. 3
C18	Fuel Injector Assembly No. 4
C19	VVT Sensor (Intake Side)
C20	Battery State Sensor Assembly
C21	Ignition Coil Assembly No. 1
C22	Ignition Coil Assembly No. 2
C23	Ignition Coil Assembly No. 3
C24	Ignition Coil Assembly No. 4
C25	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C26	Camshaft Timing Oil Control Valve Assembly
C28	Engine Oil Pressure Switch Assembly
C30	Crank Position Sensor
C31	Engine Oil Level Sensor
C36	Shift Lever Position Sensor
C59	Water Valve
C63	ECM
C64	Inverter with Converter Assembly
C65	Inverter with Converter Assembly

C1
Black

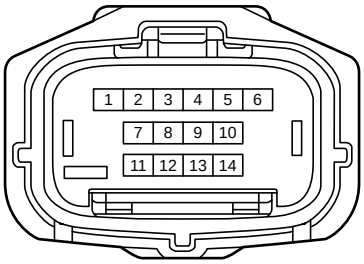

82824-47850

C2
Black

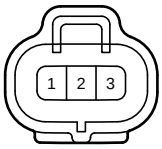

90980-10845

C4
Black

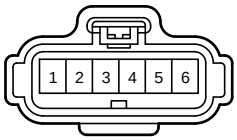

90980-11858

C6
Black

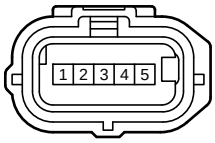

90980-12292

C7
Black

90980-10735

C8
Black

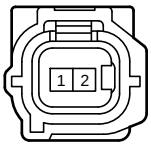

90980-12416

C9
Black

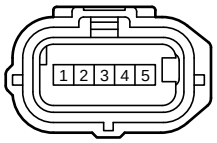

90980-12292

C10
Gray

90980-11930

C11
Black

90980-11144

C12
Black

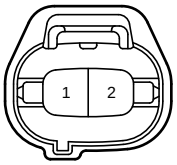

90980-11156

C13
Gray

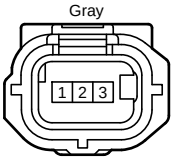

90980-12354

C14
Black

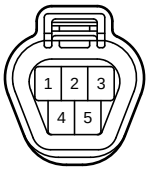

90980-11599

C15
Black



90980-11875

C16
Gray

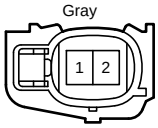

90980-11875

C17
Black



90980-11875

C18
Gray



90980-11875

C19
Black

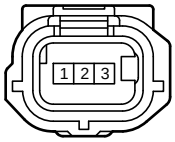

90980-12353

C20
Black

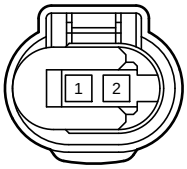

90080-98275

C21
Black



90980-12A29

C22
Gray

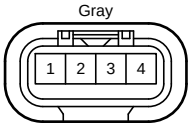

90980-12A29

C23
Black



90980-12A29

C24
Gray

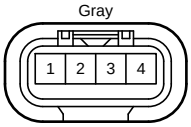

90980-12A29

C25
Gray

90980-10869

C26
Black

90980-11162

C28
Gray

90980-11363

C30
Black

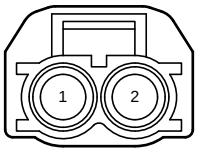

90980-12611

C31
Black

90980-11166

C36
Black

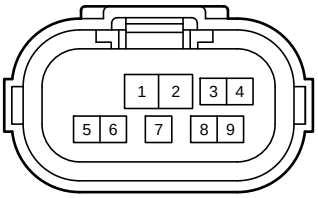

90980-12362

C59
Gray

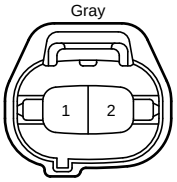

90980-11156

C63
Black

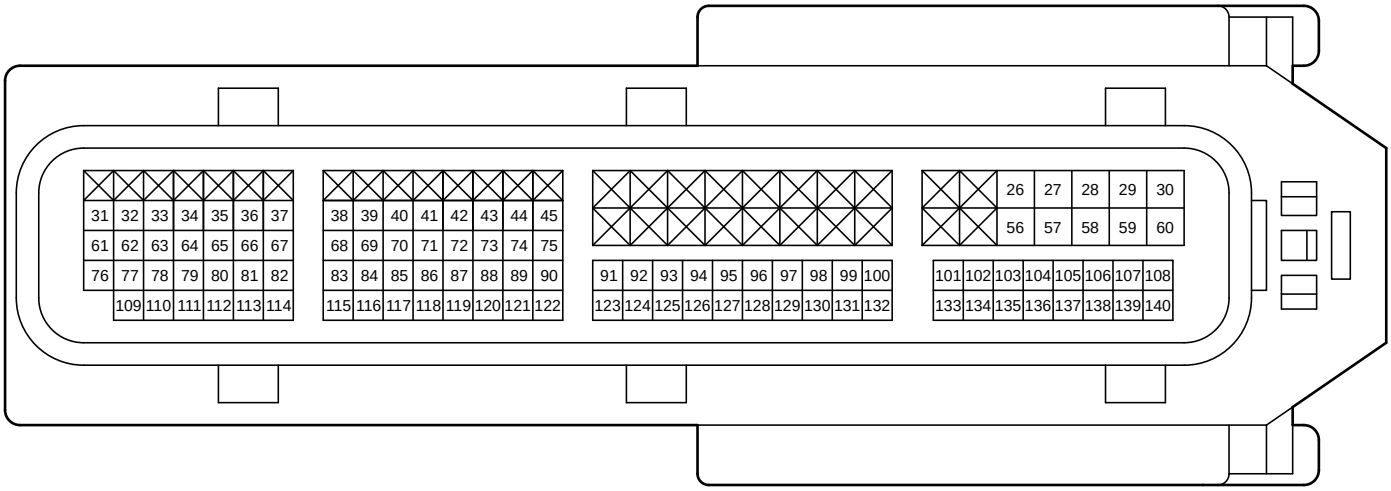

90980-12A39

C64
Black

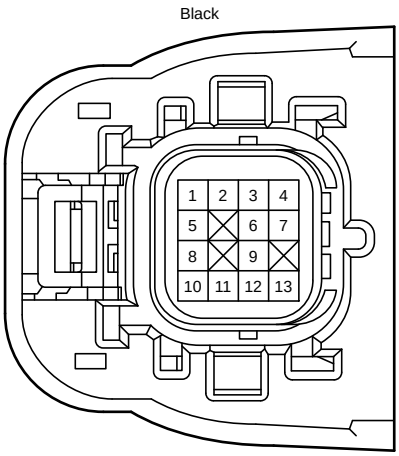

90980-12B85

C65
Black

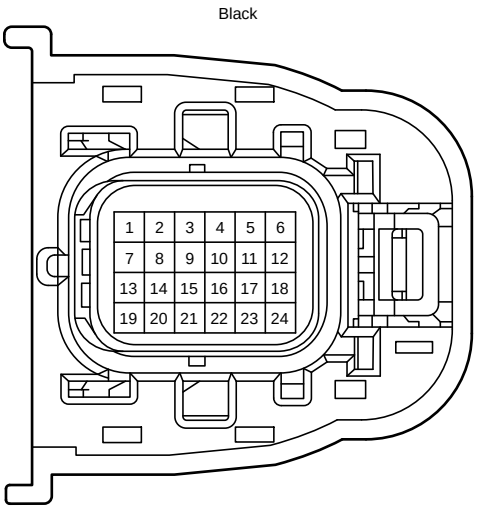

90980-12B86