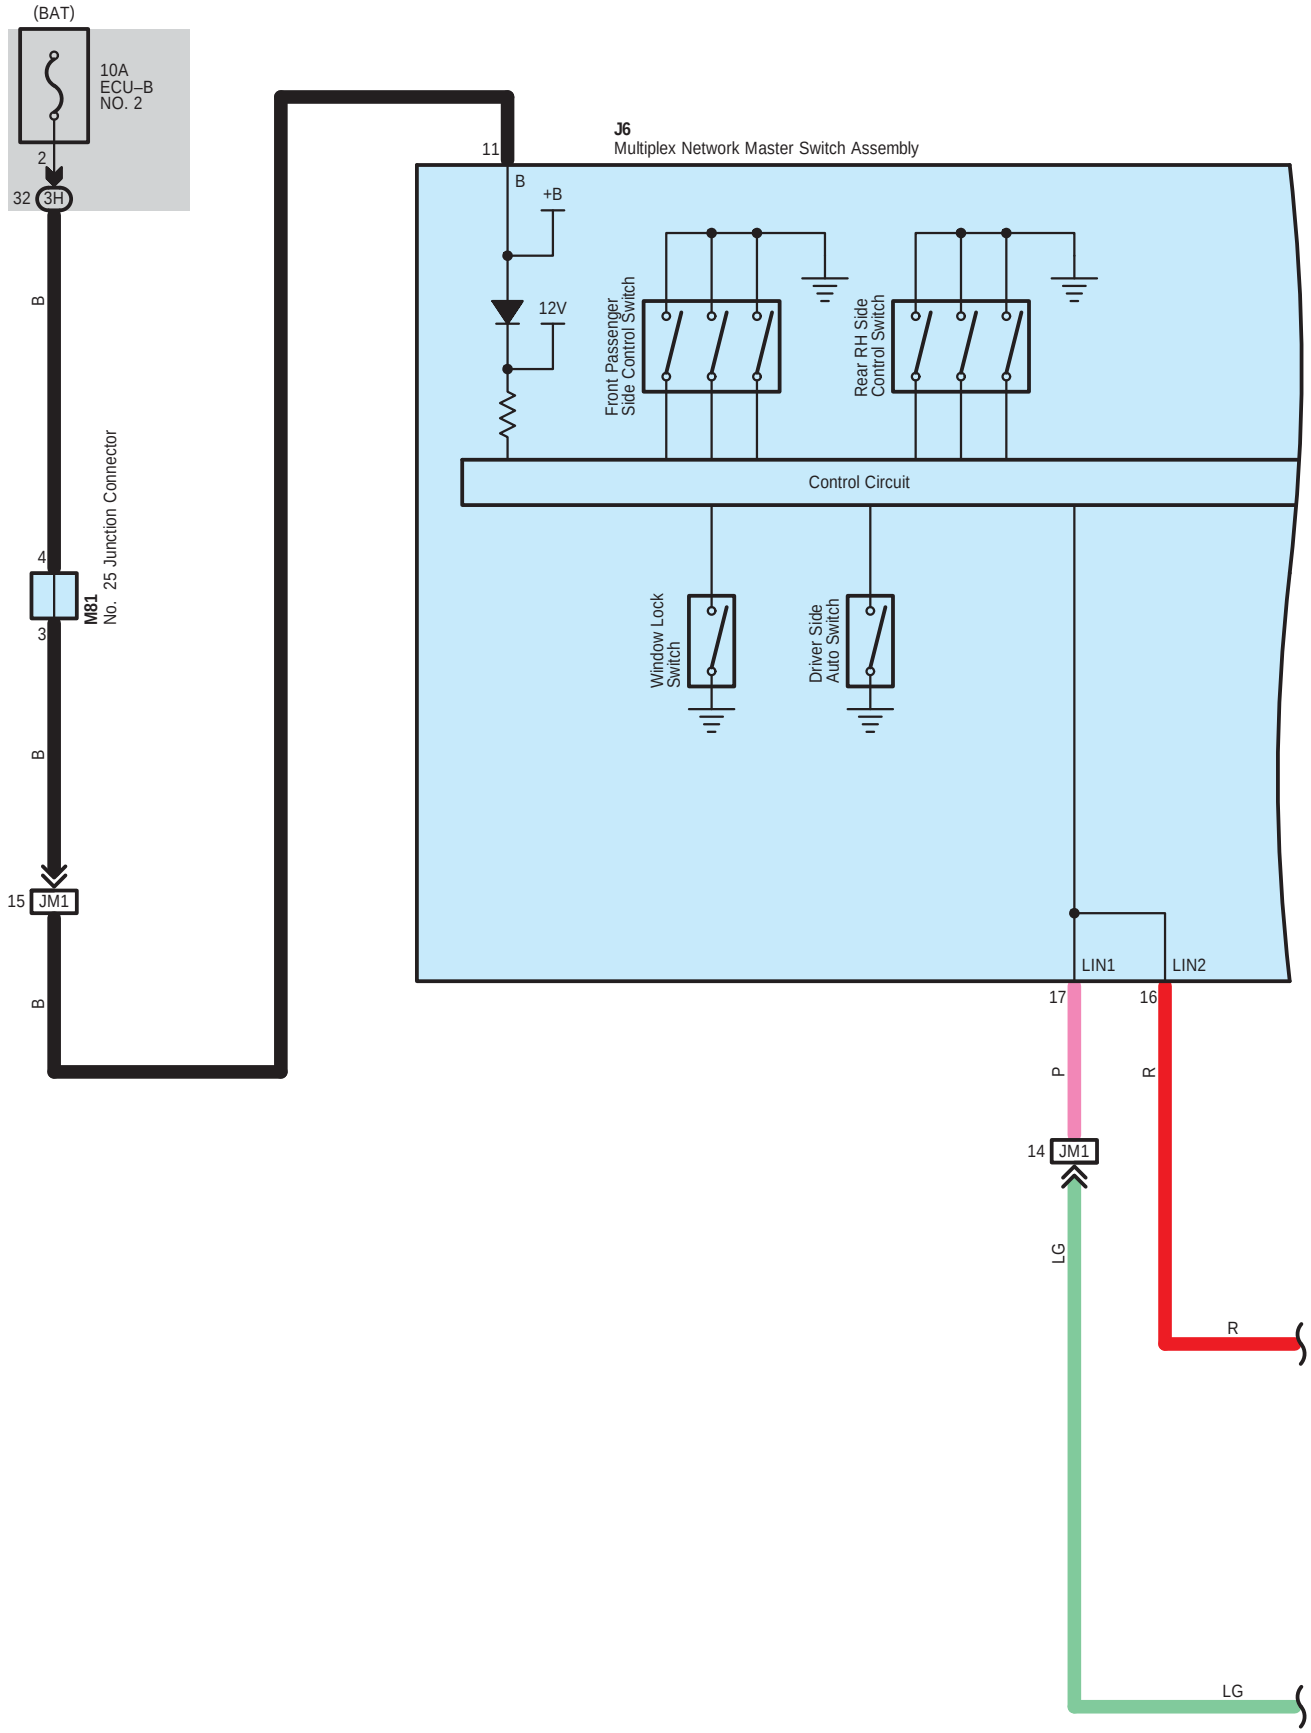
(BAT)
10A
ECU–B
NO. 2
2
32
3H
B
4
M81
No. 25 Junction Connector
3
B
15
JM1
B
11
J6
Multiplex Network Master Switch Assembly
B
+B
12V
Front Passenger
Side Control Switch
Rear RH Side
Control Switch
Control Circuit
Window Lock
Switch
Driver Side
Auto Switch
LIN1
LIN2
17
16
P
R
14
JM1
LG
R
LG

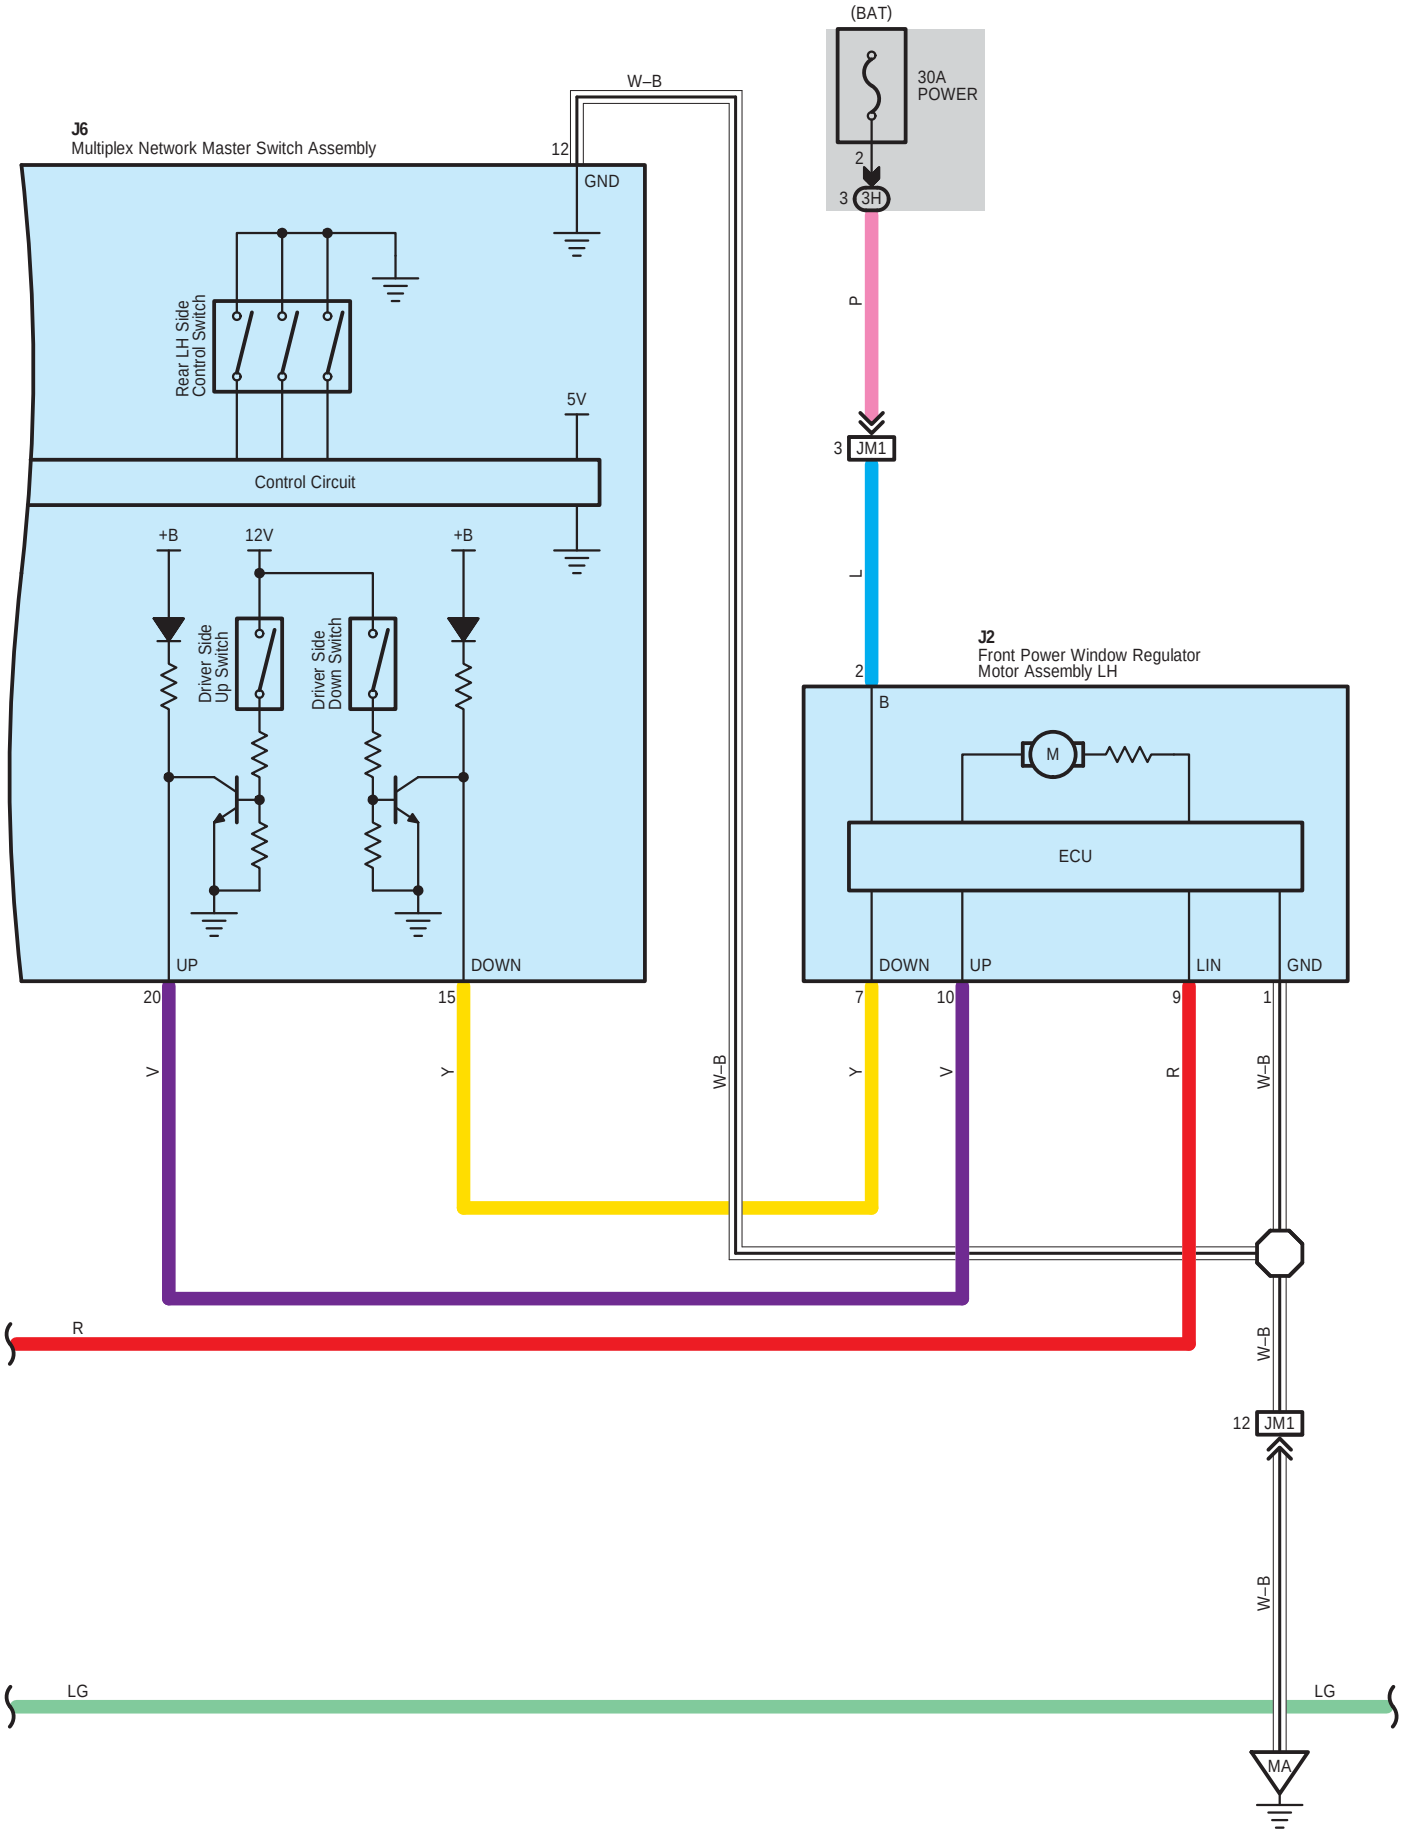
(BAT)
30A
POWER
2
3
3H
P
3
JM1
L
2
J2
Front Power Window Regulator
Motor Assembly LH
B
M
ECU
DOWN
UP
LIN
GND
7
10
9
1
W–B
Y
V
R
W–B
W–B
12
JM1
W–B
LG
LG
MA
J6
Multiplex Network Master Switch Assembly
12
GND
W–B
Rear LH Side
Control Switch
5V
Control Circuit
+B
12V
+B
Driver Side
Up Switch
Driver Side
Down Switch
UP
DOWN
20
15
V
Y
R

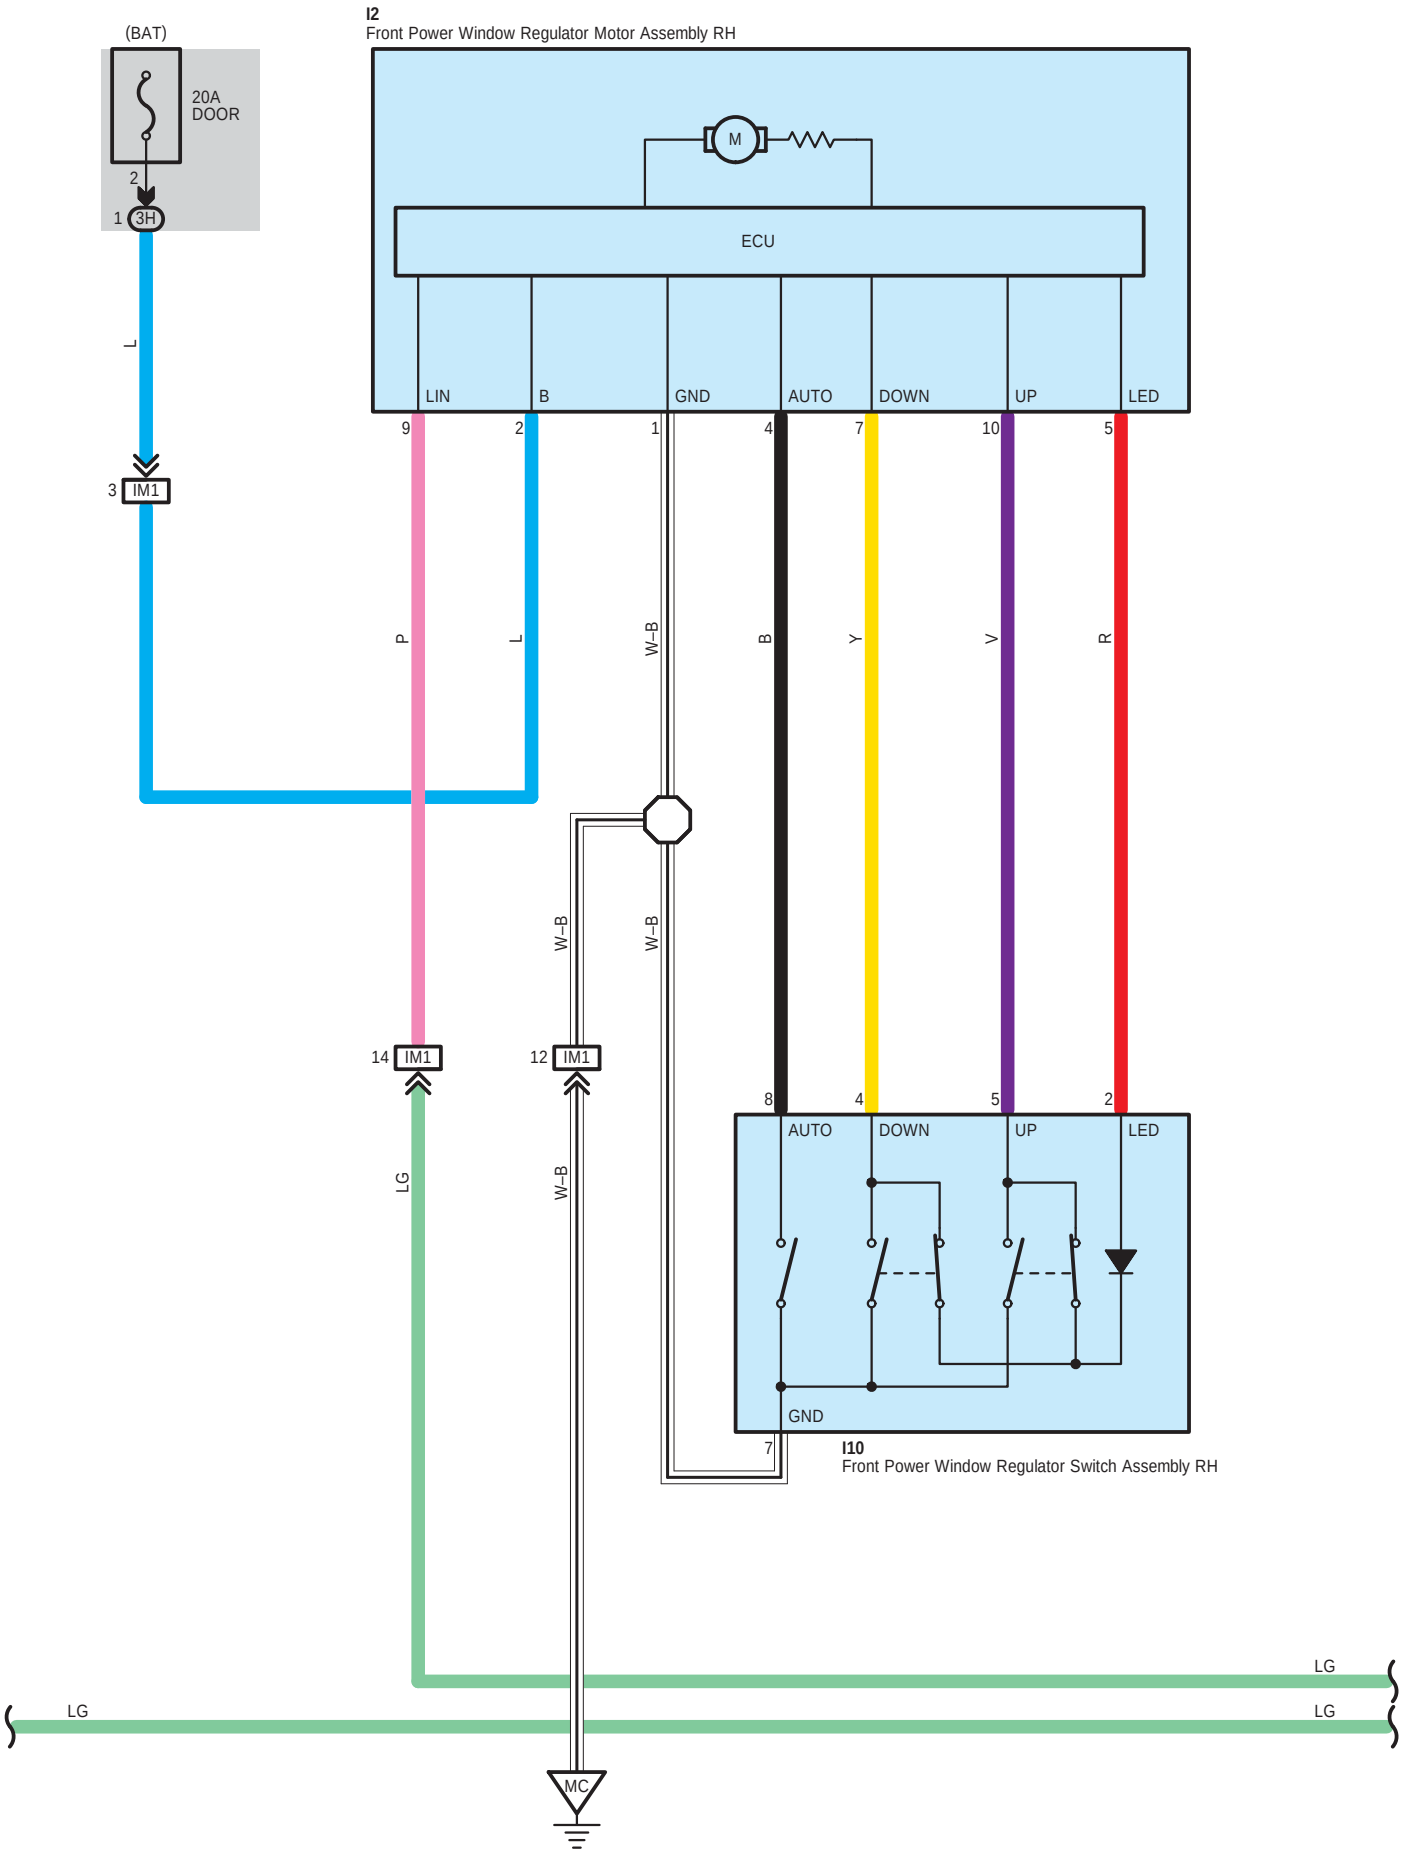
(BAT)
20A
DOOR
2
1 3H
L
3 IM1
I2
Front Power Window Regulator Motor Assembly RH
M
ECU
LIN
B
GND
AUTO
DOWN
UP
LED
9
2
1
4
7
10
5
P
L
W–B
B
Y
V
R
W–B
W–B
14 IM1
12 IM1
LG
W–B
8
4
5
2
AUTO
DOWN
UP
LED
GND
7
I10
Front Power Window Regulator Switch Assembly RH
LG
LG
LG
MC

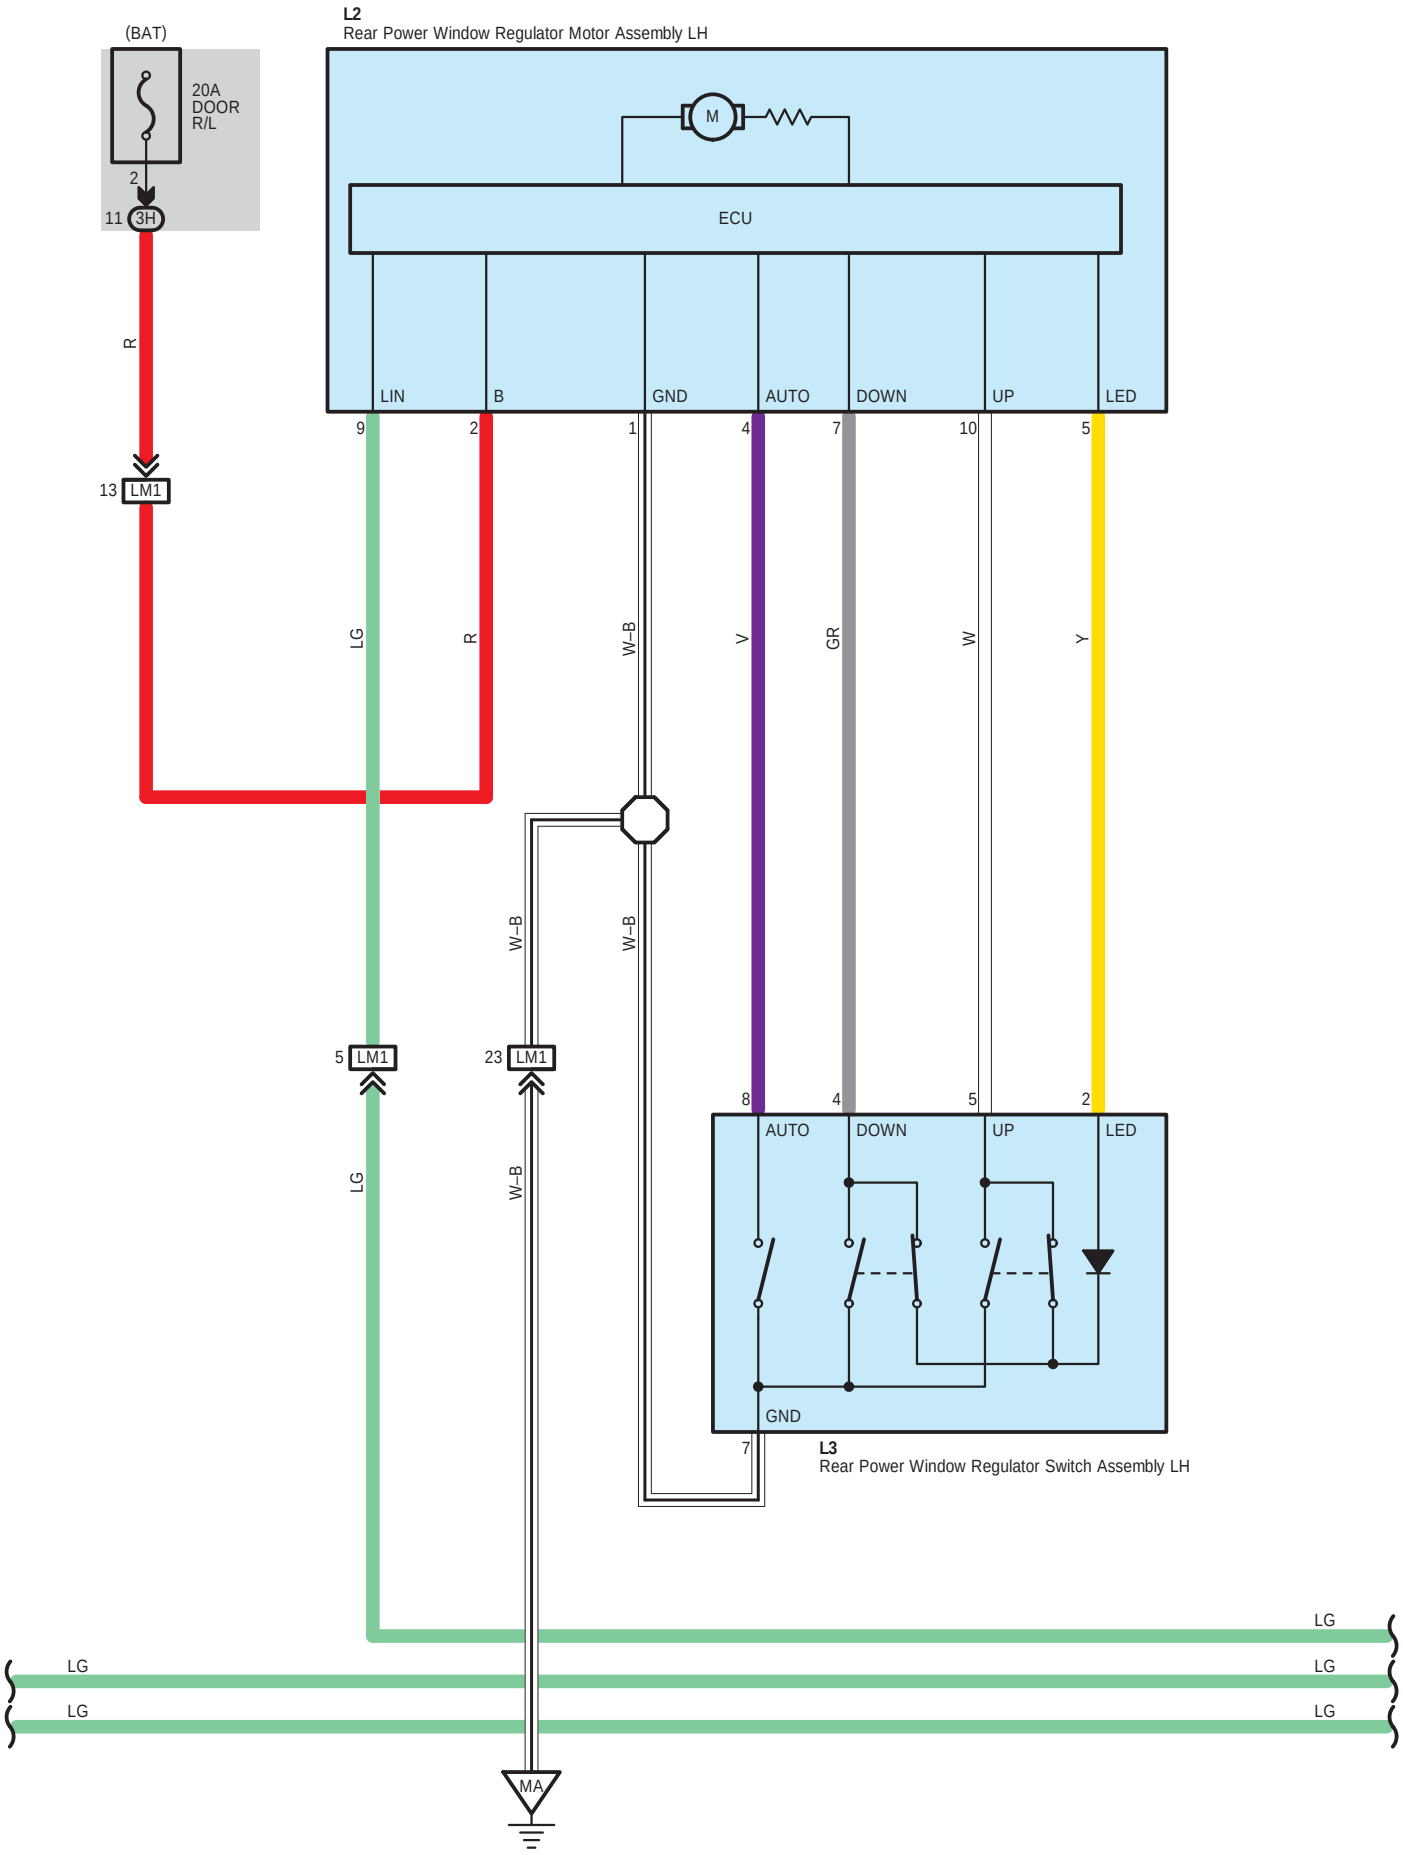
(BAT)
20A
DOOR
R/L
2
11
3H
R
13
LM1
L2
Rear Power Window Regulator Motor Assembly LH
M
ECU
LIN
B
GND
AUTO
DOWN
UP
LED
9
2
1
4
7
10
5
LG
R
W–B
V
GR
W
Y
W–B
W–B
5
LM1
23
LM1
LG
W–B
8
4
5
2
AUTO
DOWN
UP
LED
GND
7
L3
Rear Power Window Regulator Switch Assembly LH
LG
LG
LG
LG
LG
LG
MA

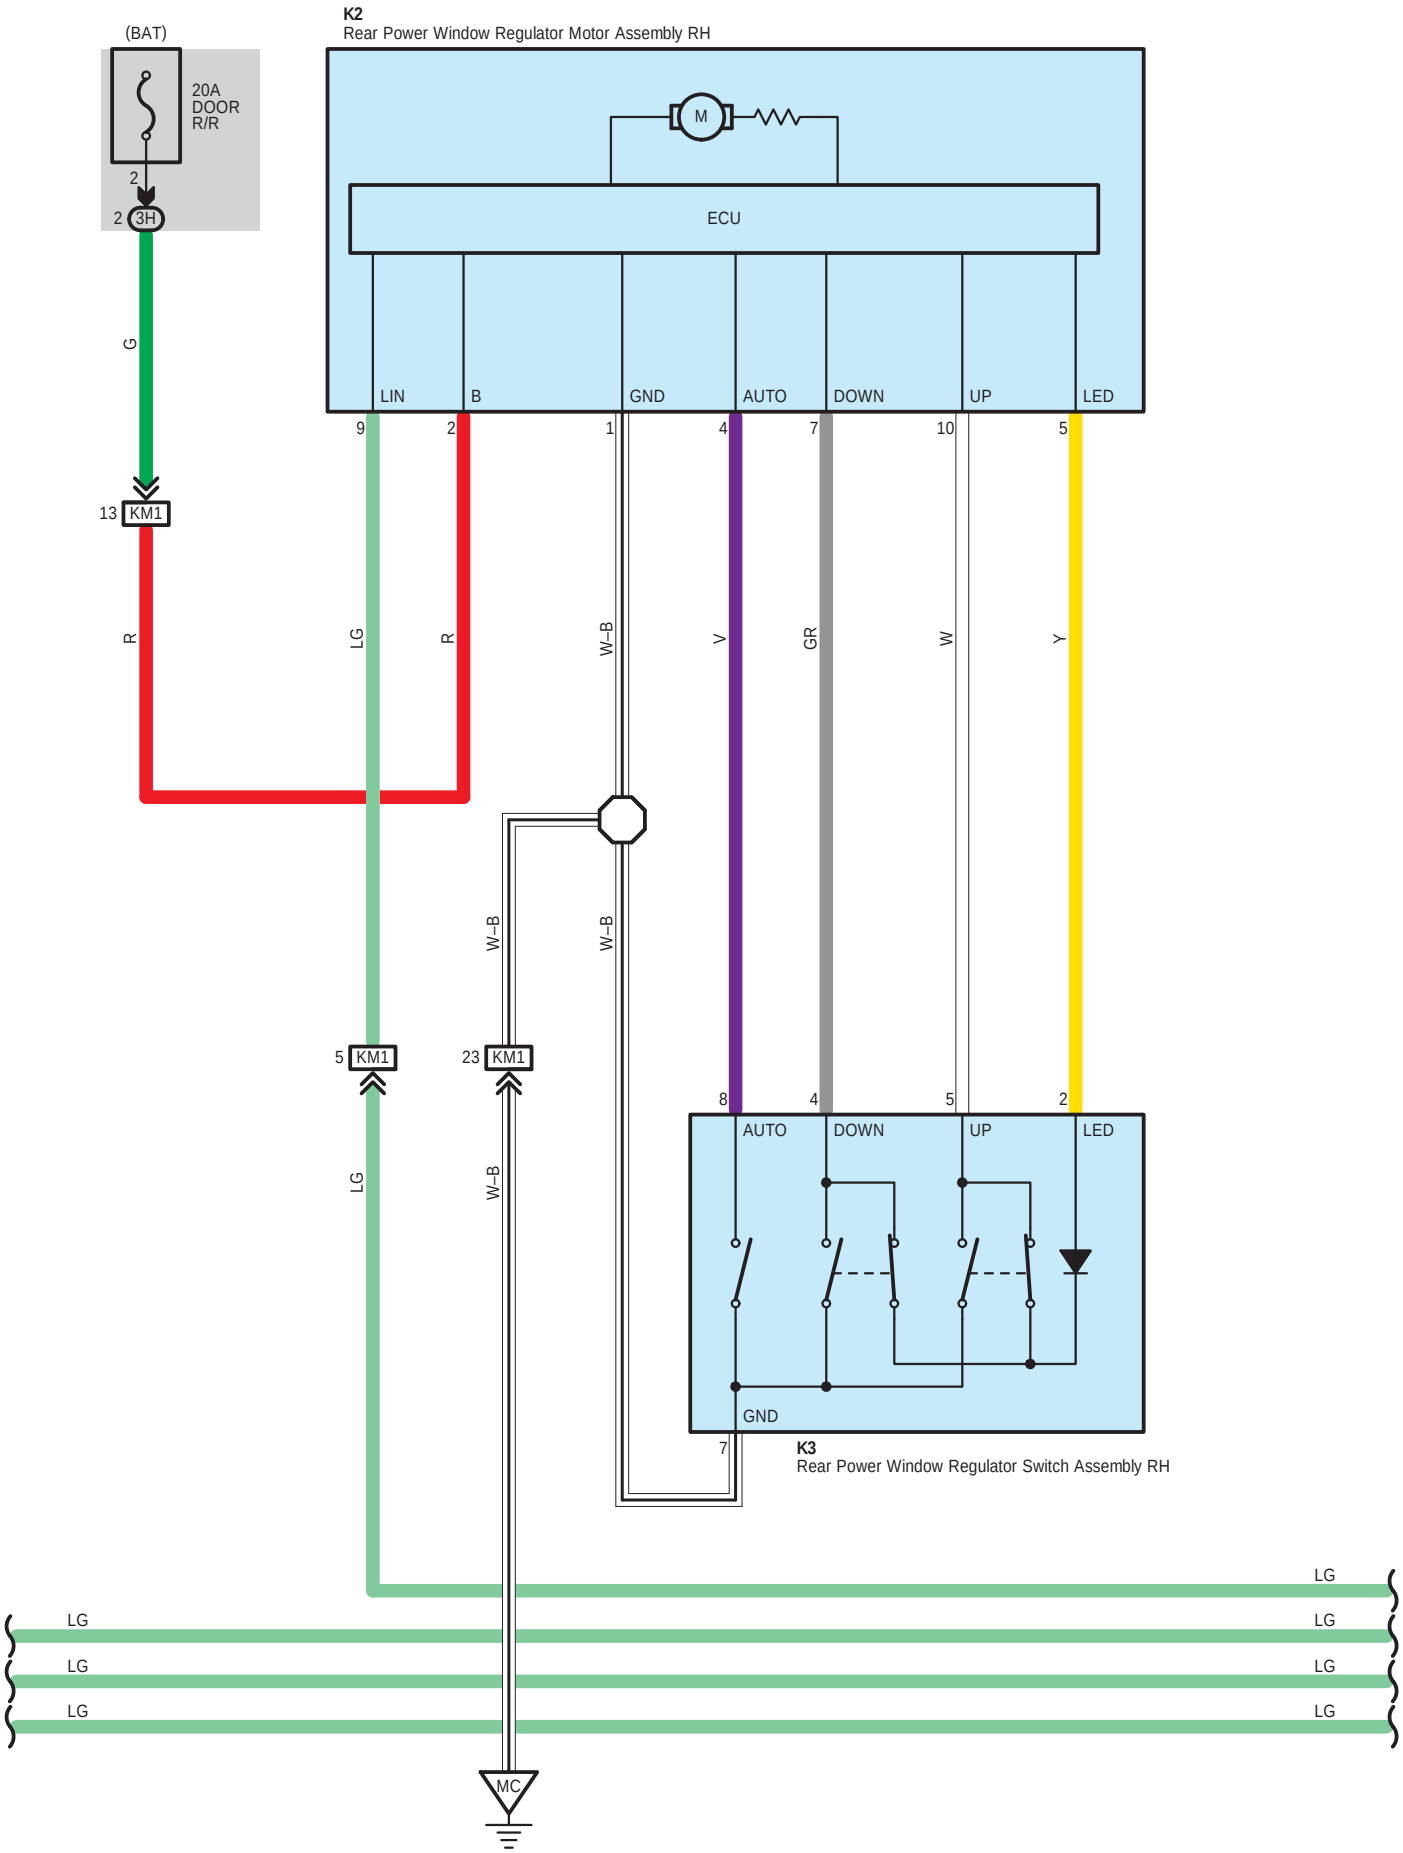
(BAT)
20A
DOOR
R/R
2
2 3H
G
13 KM1
R
LG
R
W–B
V
GR
W
Y
K2
Rear Power Window Regulator Motor Assembly RH
M
ECU
LIN
B
GND
AUTO
DOWN
UP
LED
9
2
1
4
7
10
5
W–B
W–B
5 KM1
23 KM1
LG
W–B
8
4
5
2
AUTO
DOWN
UP
LED
GND
7
K3
Rear Power Window Regulator Switch Assembly RH
LG
LG
LG
LG
LG
LG
LG
LG
MC

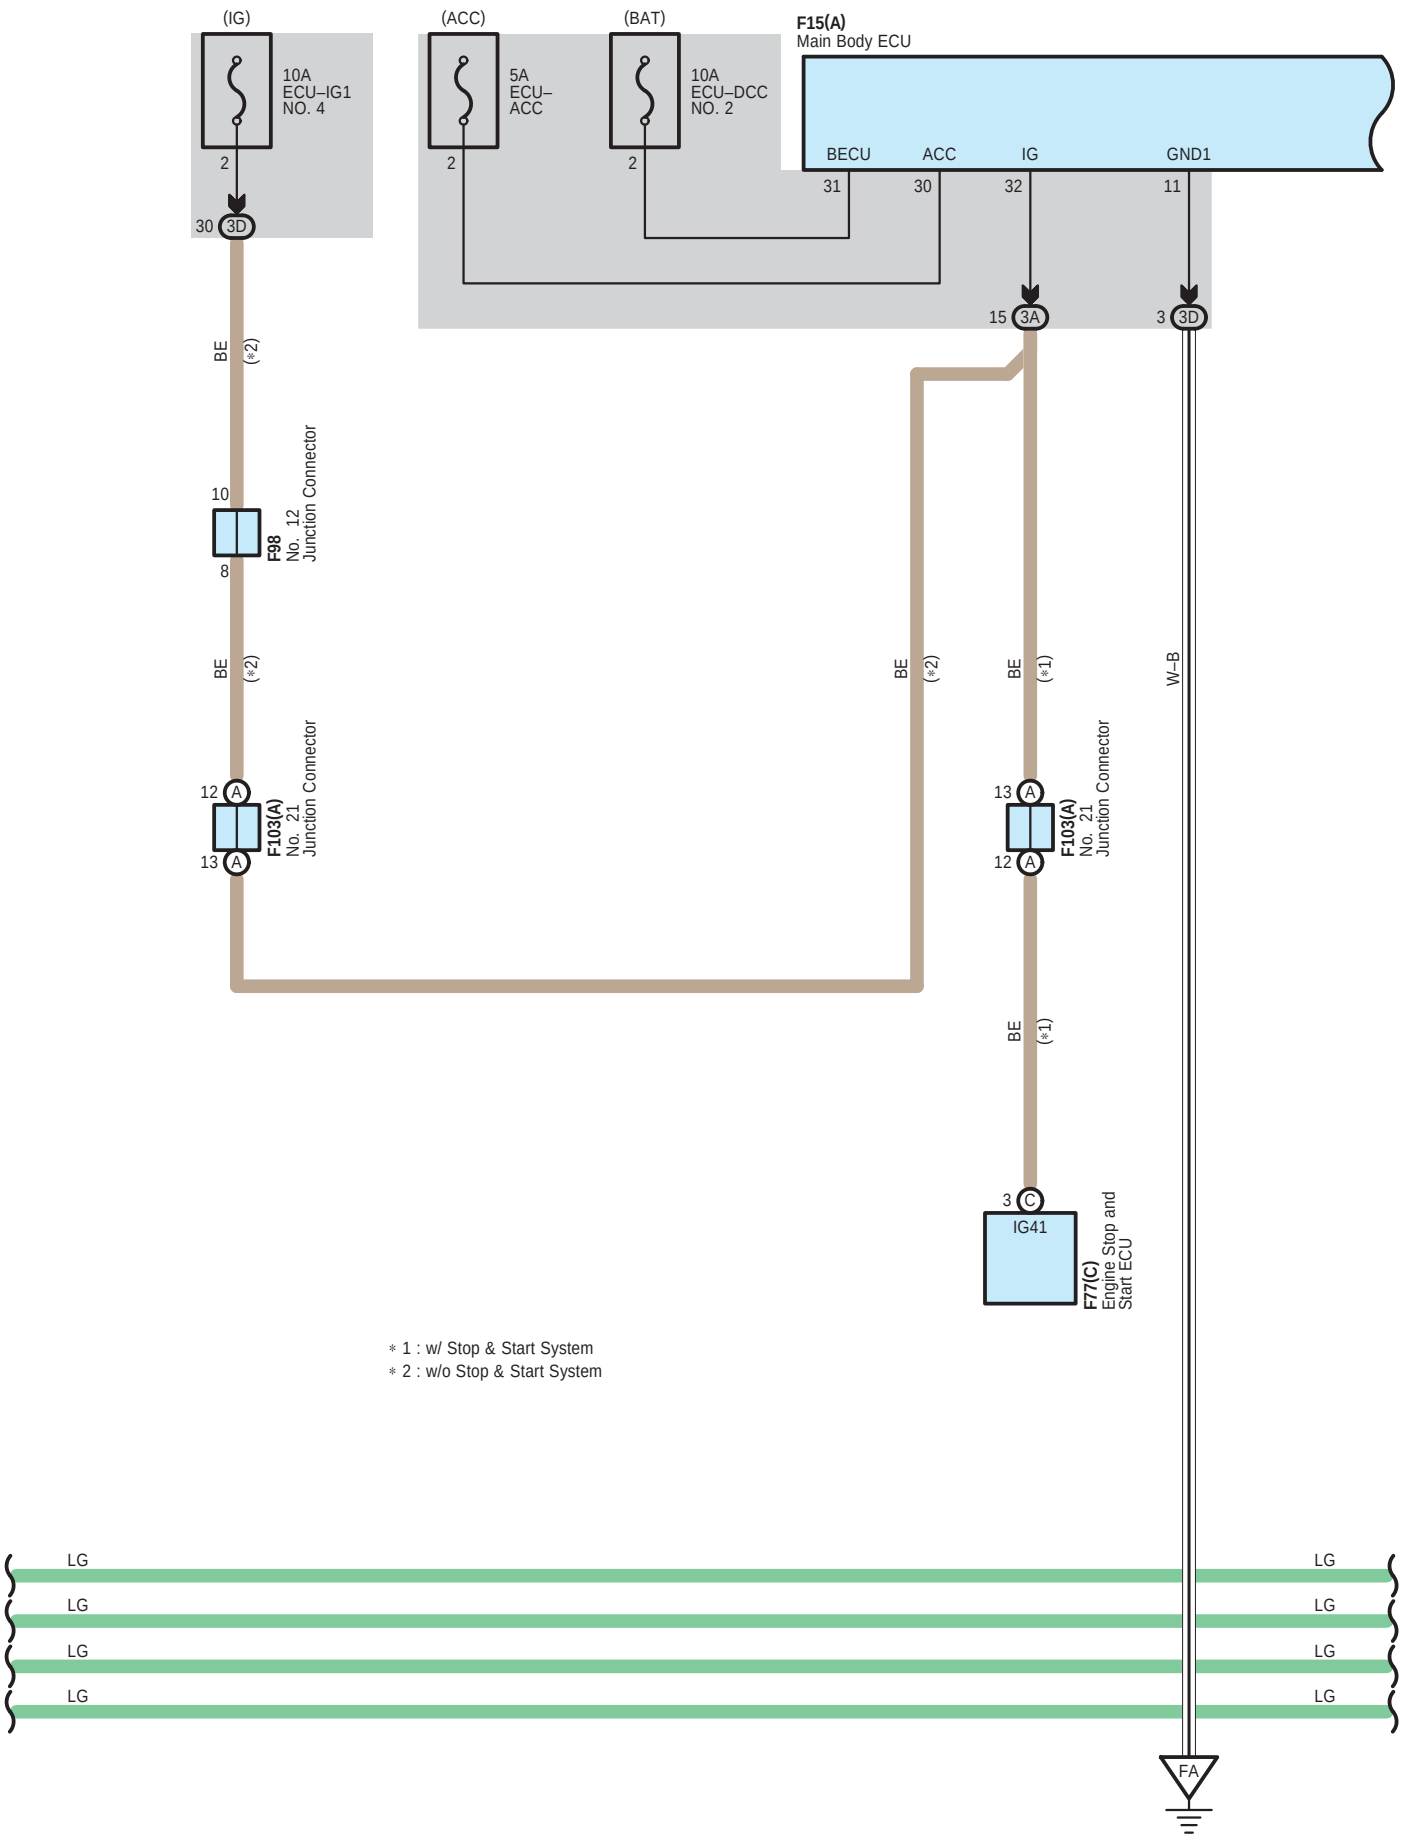
(IG)
10A
ECU–IG1
NO. 4
2
30 3D
(ACC)
5A
ECU–
ACC
2
(BAT)
10A
ECU–DCC
NO. 2
2
F15(A)
Main Body ECU
BECU
ACC
IG
GND1
31
30
32
11
15 3A
3 3D
BE
(*2)
10
F98
No. 12
Junction Connector
8
BE
(*2)
12 A
F103(A)
No. 21
Junction Connector
13 A
BE
(*2)
BE
(*1)
13 A
F103(A)
No. 21
Junction Connector
12 A
W–B
BE
(*1)
3 C
IG41
F77(C)
Engine Stop and
Start ECU
* 1 : w/ Stop & Start System
* 2 : w/o Stop & Start System
LG
LG
LG
LG
LG
LG
LG
LG
FA

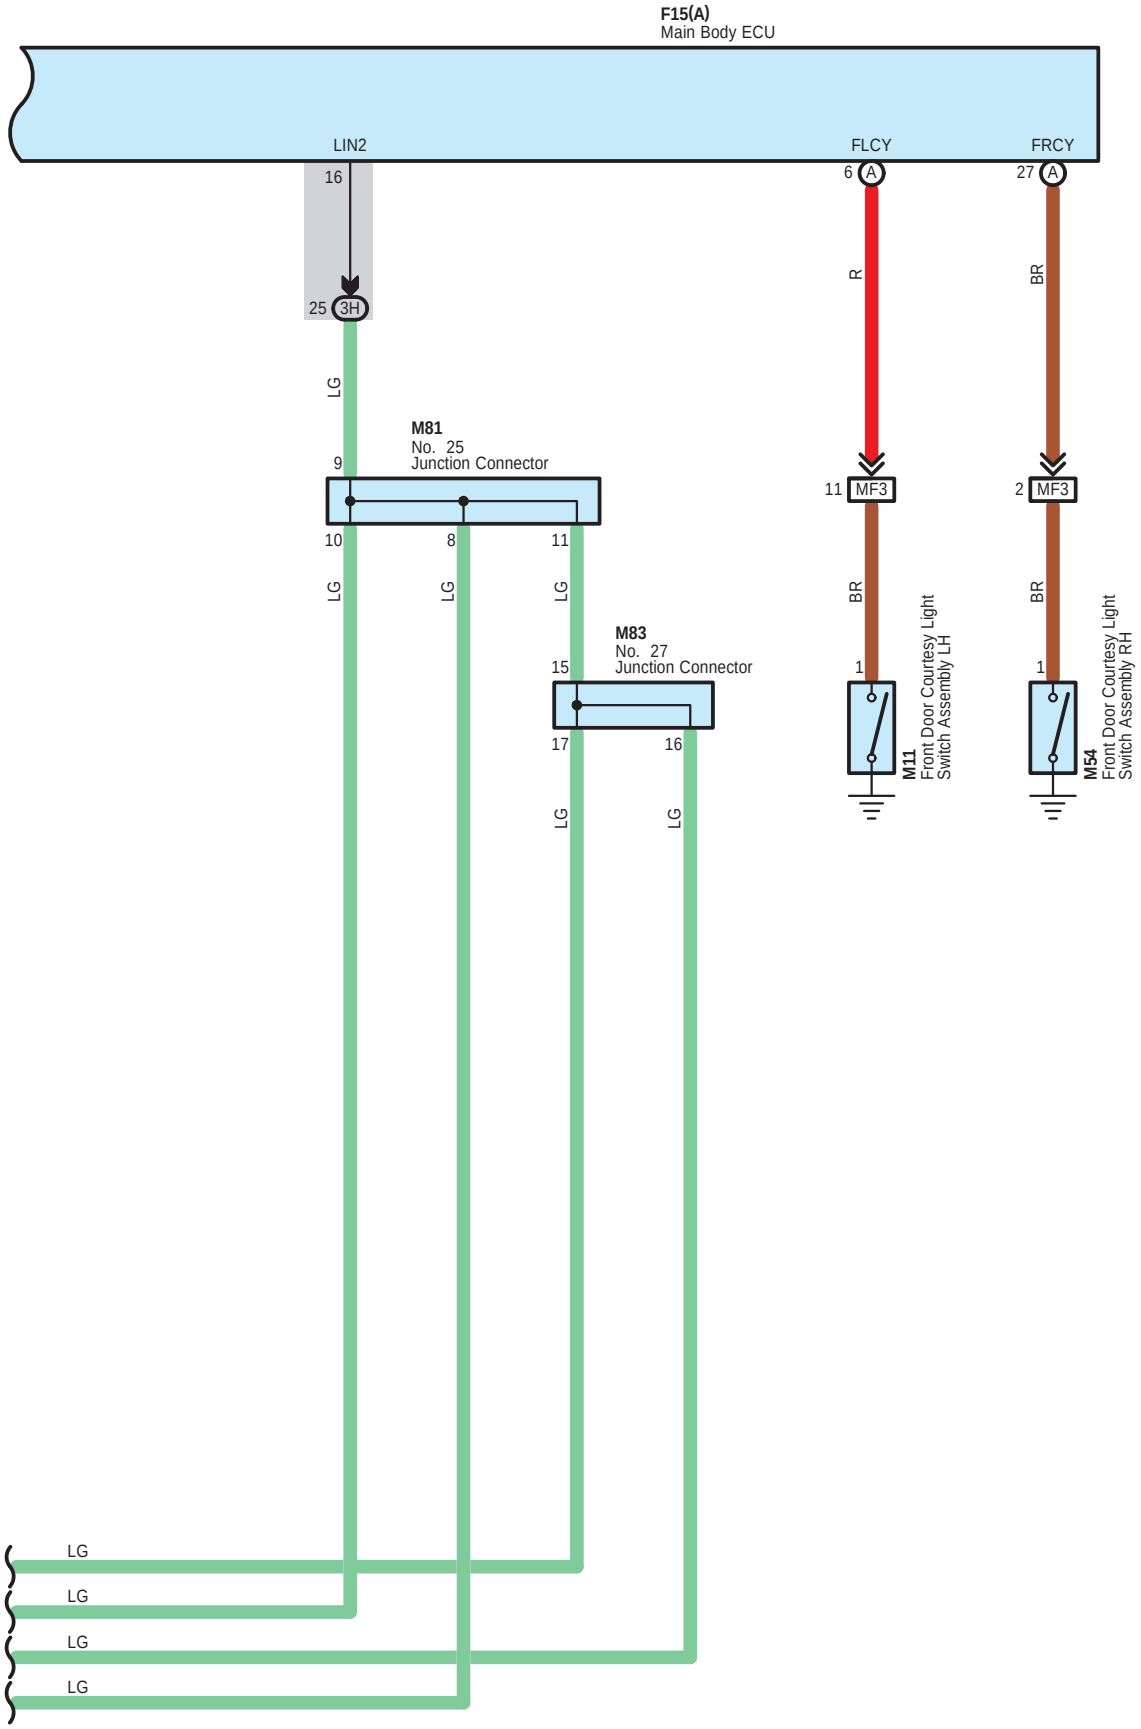
F15(A)
Main Body ECU
LIN2
16
25 3H
FLCY
6 A
FRCY
27 A
R
BR
LG
M81
No. 25
Junction Connector
9
10
8
11
11 MF3
2 MF3
BR
BR
1
1
M11
Front Door Courtesy Light
Switch Assembly LH
M54
Front Door Courtesy Light
Switch Assembly RH
M83
No. 27
Junction Connector
15
17
16
LG
LG
LG
LG
LG
LG
LG
LG

F15
White

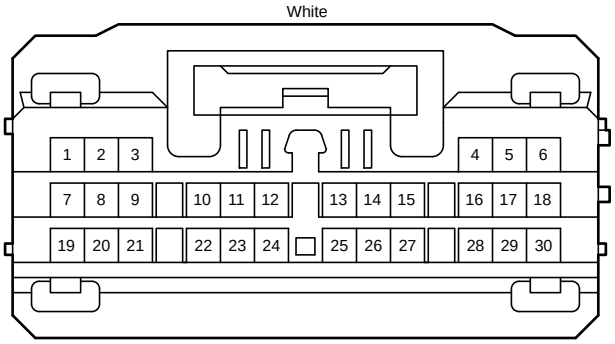

90980-12909

F77
Black

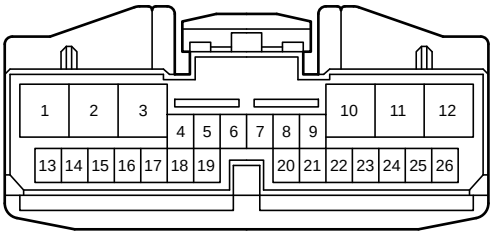

82824-12510

F98
Black

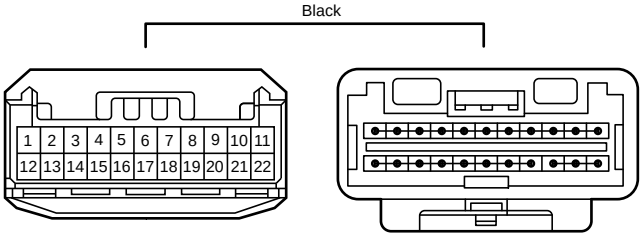

90980-12B54

F103
White

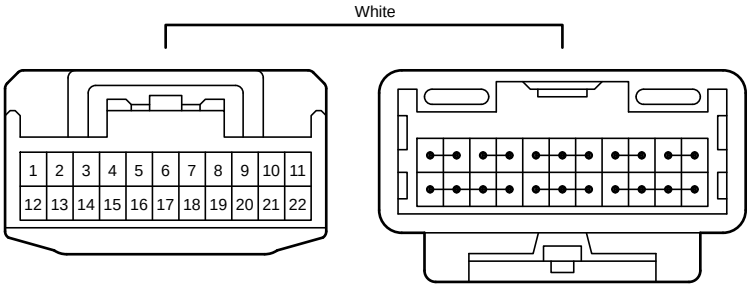

90980-12372

I2
White

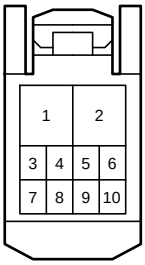

90980-12328

I10
Black

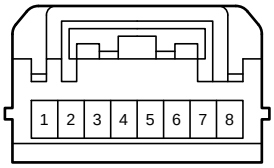

90980-12550

J2
White

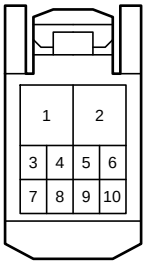

90980-12328

J6
White

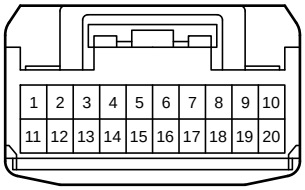

90980-12460

K2
White

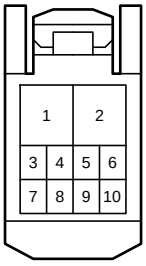

90980-12328

K3
Black

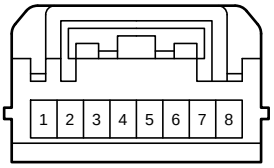

90980-12550

L2
White

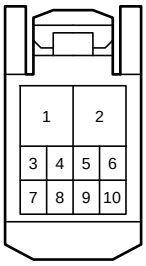

90980-12328

L3
Black

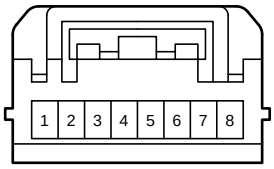

90980-12550

M11
Black

90980-10871

M54
Black

90980-10871

M81
Black

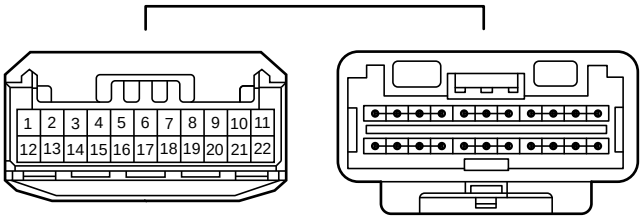

90980-12B54

M83
Black

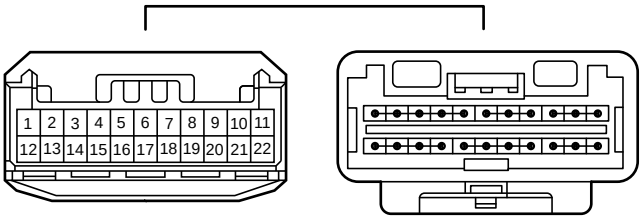

90980-12B54

3A
White

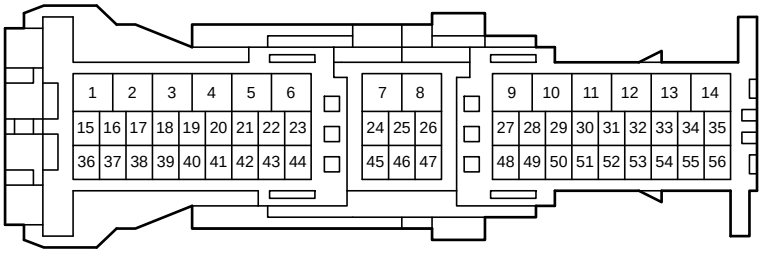

90980-12943

3D
White

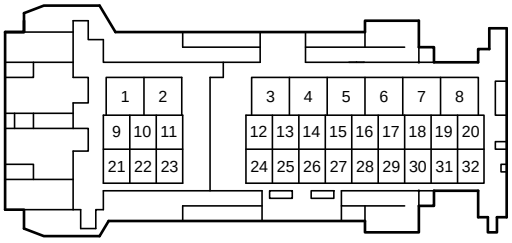

90980-12A48

3H
White

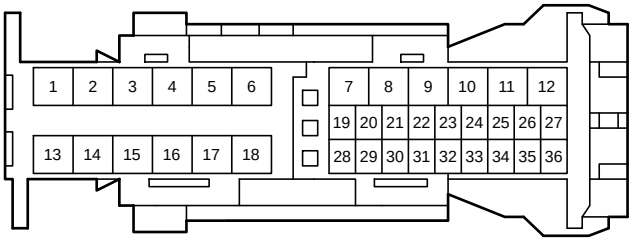

90980-12944

IM1
White

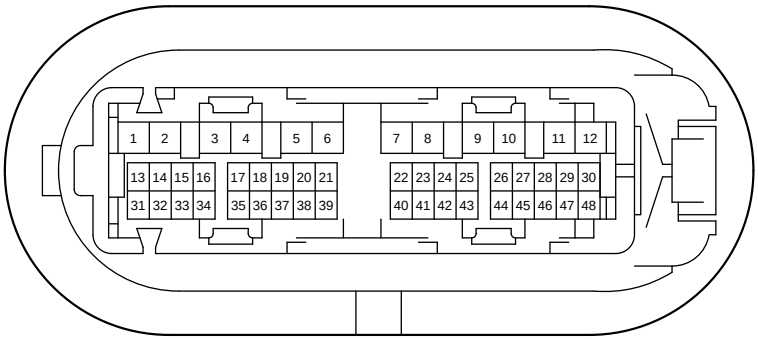

90980-12A09

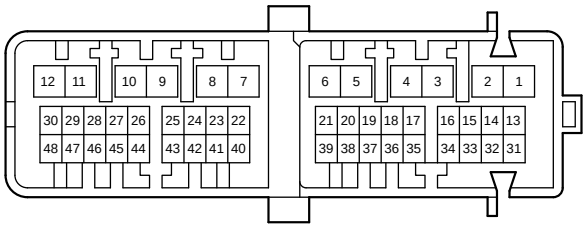

90980-12A06

JM1
White

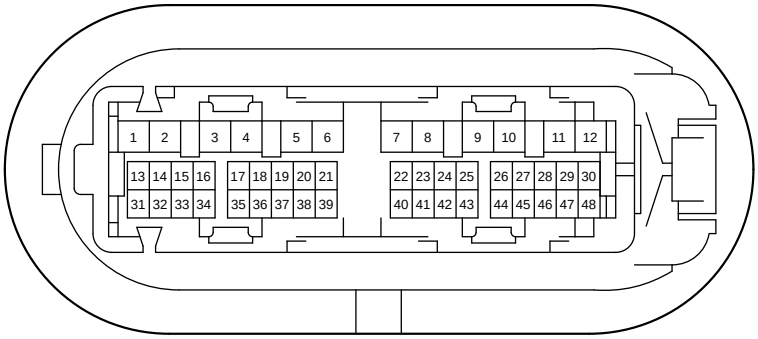

90980-12A09

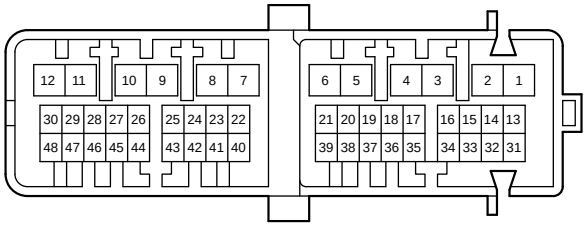

90980-12A06

KM1
White

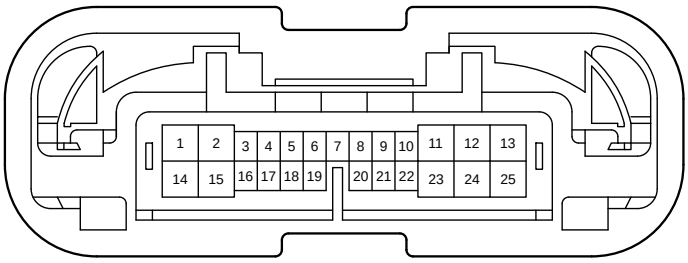

90980-12802

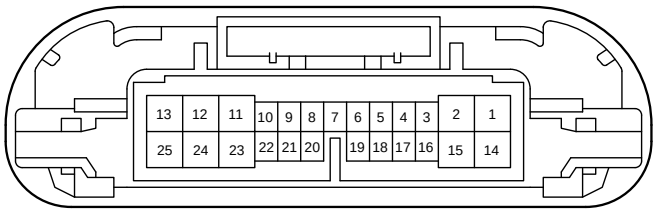

90980-12801

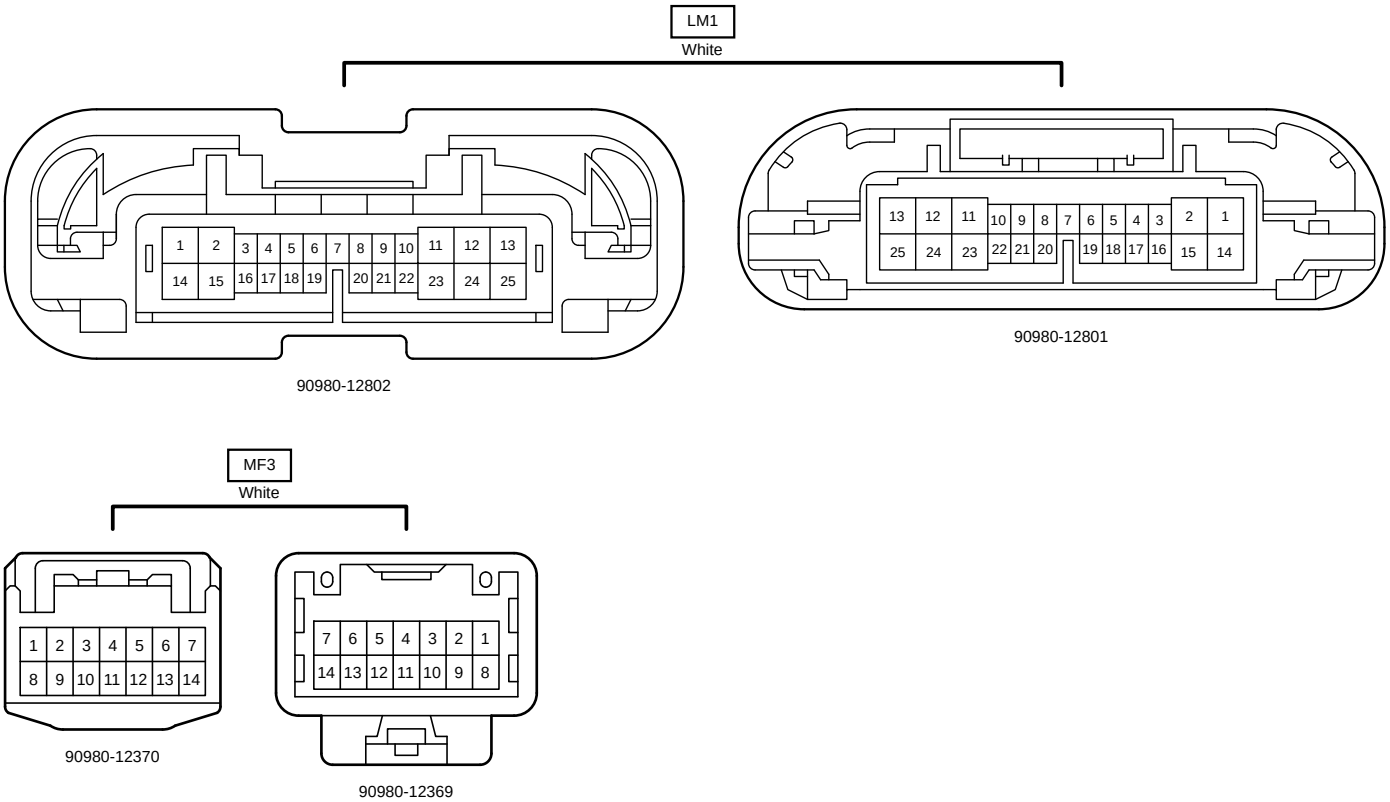
LM1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25
90980-12802
13 12 11 10 9 8 7 6 5 4 3 2 1
25 24 23 22 21 20 19 18 17 16 15 14
90980-12801
MF3
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
90980-12370
7 6 5 4 3 2 1
14 13 12 11 10 9 8
90980-12369