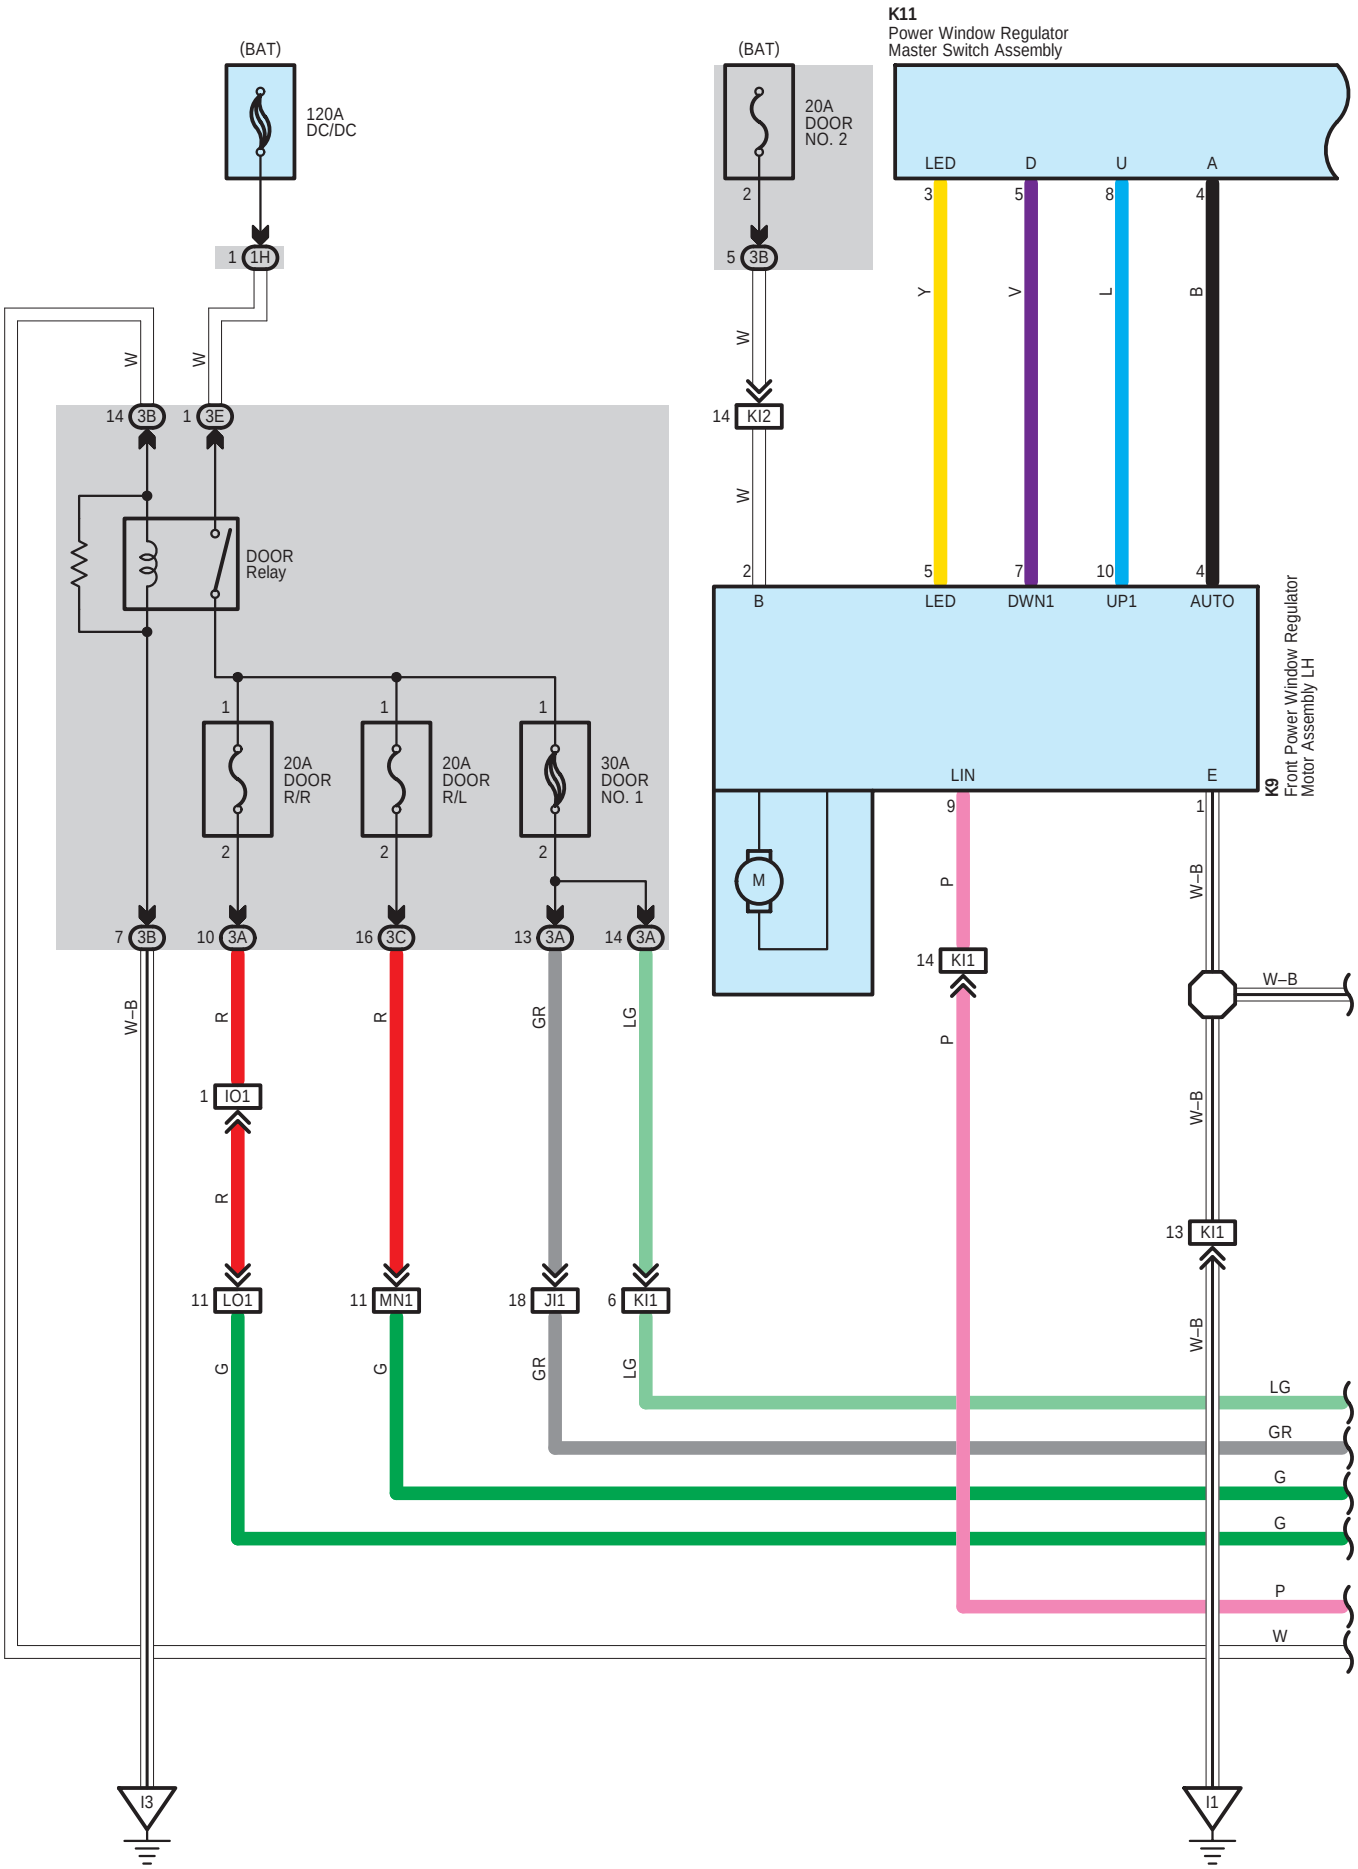
(BAT)
120A
DC/DC
1 1H
W
W
14 3B
1 3E
DOOR
Relay
1
1
1
20A
DOOR
R/R
20A
DOOR
R/L
30A
DOOR
NO. 1
2
2
2
7 3B
10 3A
16 3C
13 3A
14 3A
W–B
R
R
GR
LG
1 IO1
R
11 LO1
11 MN1
18 JI1
6 KI1
G
G
GR
LG
I3
(BAT)
20A
DOOR
NO. 2
2
5 3B
W
14 KI2
W
2
K11
Power Window Regulator
Master Switch Assembly
LED
D
U
A
3
5
8
4
Y
V
L
B
B
LED
DWN1
UP1
AUTO
LIN
E
K9
Front Power Window Regulator
Motor Assembly LH
9
1
M
P
W–B
14 KI1
P
W–B
W–B
13 KI1
W–B
LG
GR
G
G
P
W
I1

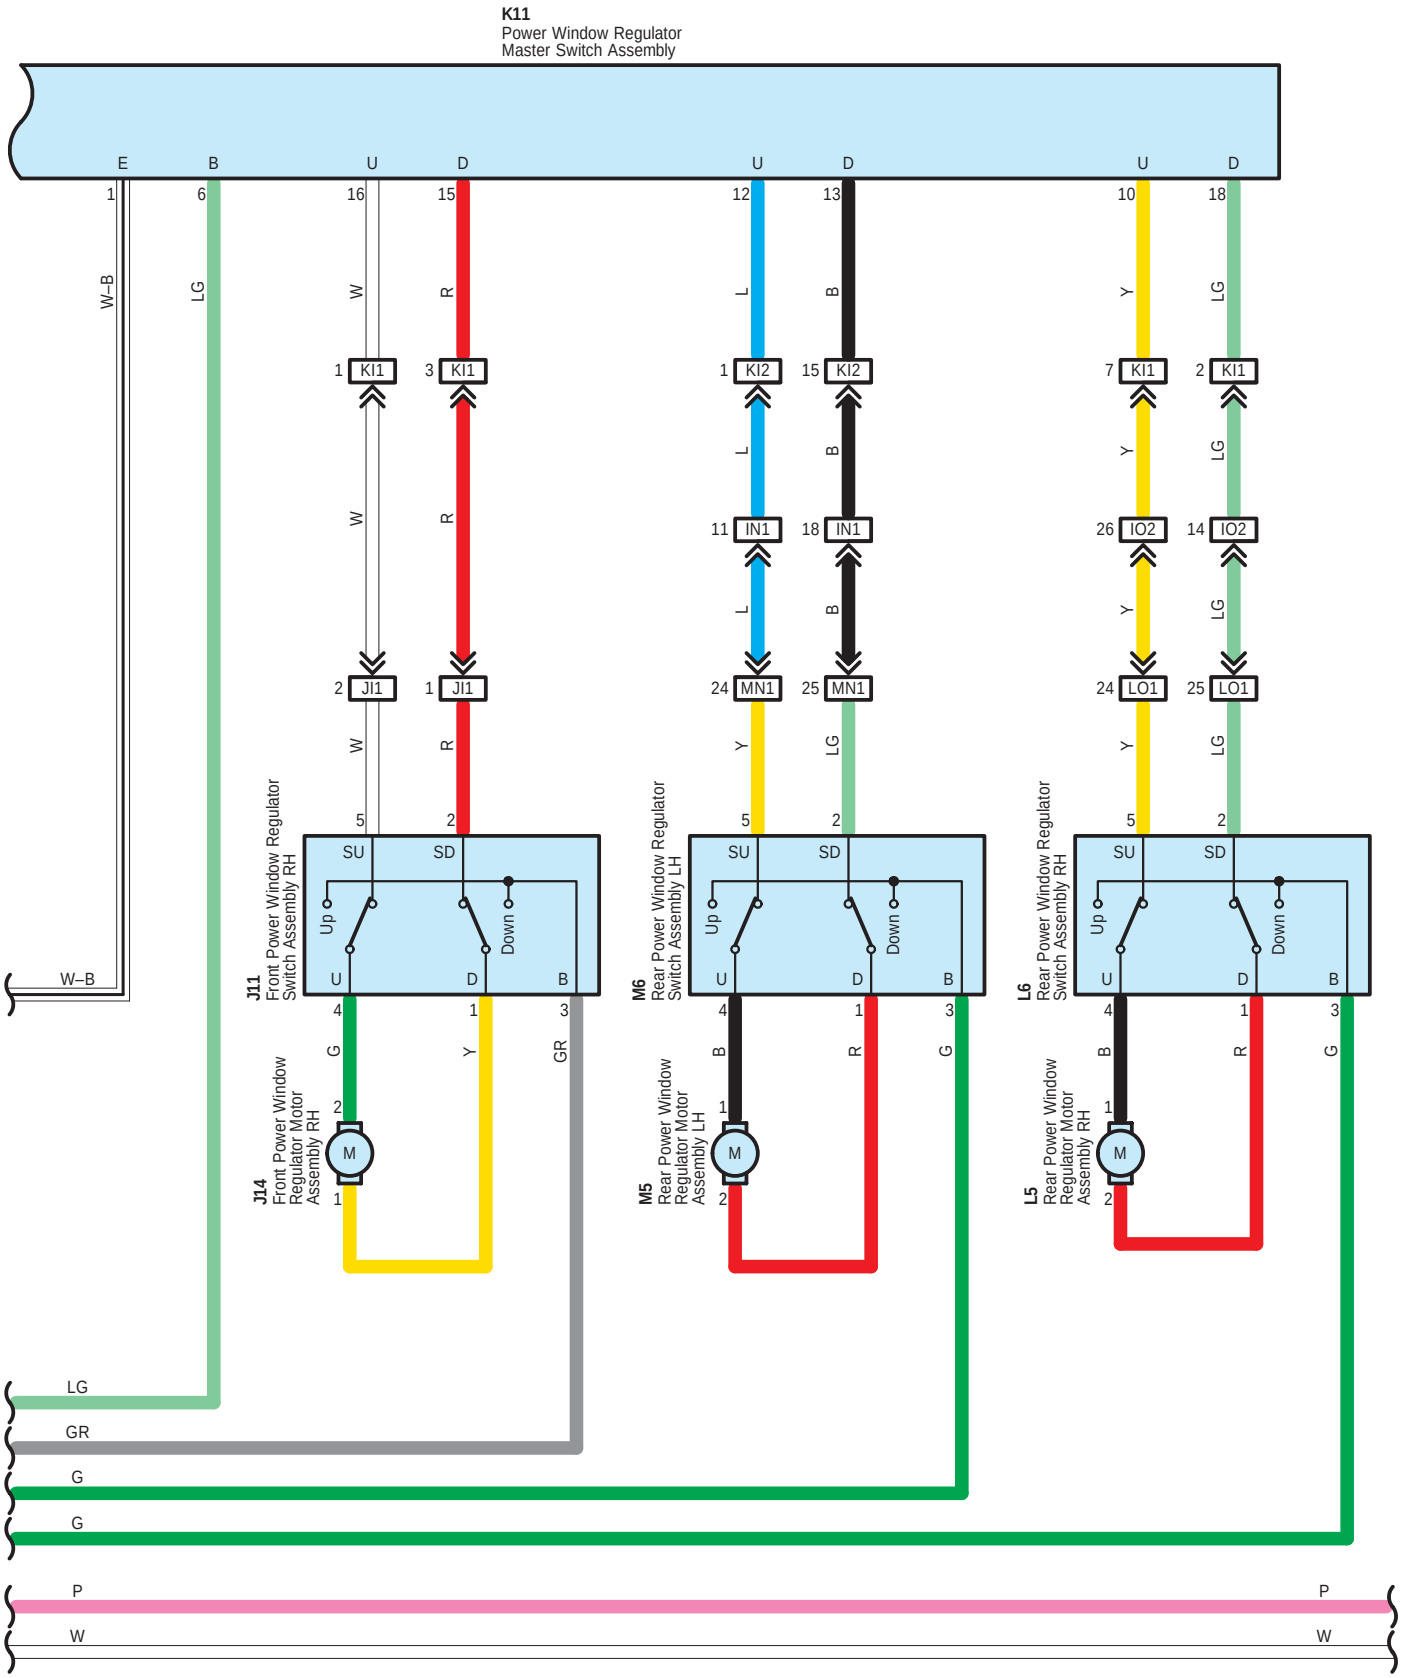
K11
Power Window Regulator
Master Switch Assembly
E
B
U
D
U
D
U
D
1
6
16
15
12
13
10
18
W–B
LG
W
R
L
B
Y
LG
1 KI1
3 KI1
1 KI2
15 KI2
7 KI1
2 KI1
11 IN1
18 IN1
26 IO2
14 IO2
2 JI1
1 JI1
24 MN1
25 MN1
24 LO1
25 LO1
5
2
SU
SD
Up
Down
U
D
B
J11
Front Power Window Regulator Switch Assembly RH
M6
Rear Power Window Regulator Switch Assembly LH
L6
Rear Power Window Regulator Switch Assembly RH
4
1
3
G
Y
GR
B
R
G
J14
Front Power Window Regulator Motor Assembly RH
M5
Rear Power Window Regulator Motor Assembly LH
L5
Rear Power Window Regulator Motor Assembly RH
M
W–B
LG
GR
G
G
P
W

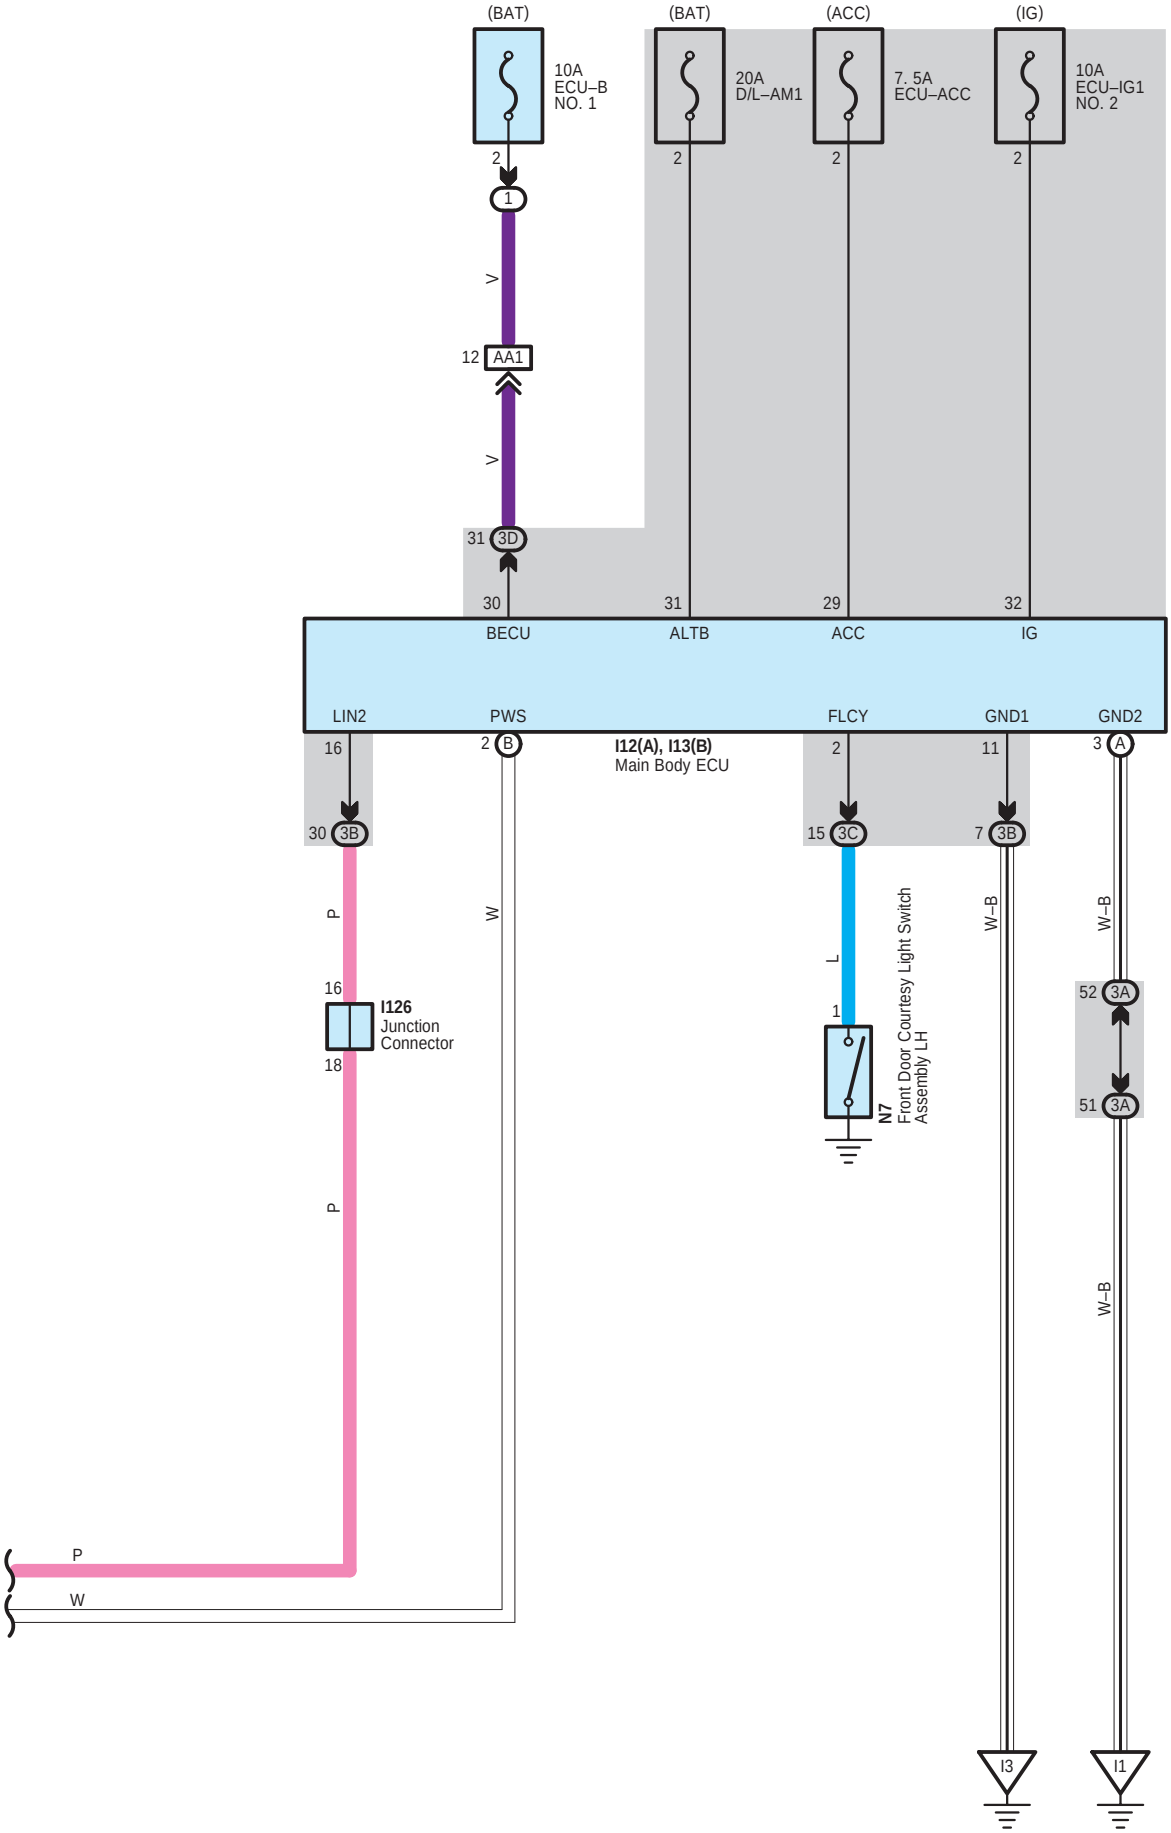
(BAT)
10A
ECU–B
NO. 1
(BAT)
20A
D/L–AM1
(ACC)
7. 5A
ECU–ACC
(IG)
10A
ECU–IG1
NO. 2
2
1
V
12
AA1
V
31
3D
30
31
29
32
BECU
ALTB
ACC
IG
LIN2
PWS
FLCY
GND1
GND2
16
2
B
I12(A), I13(B)
Main Body ECU
2
11
3
A
30
3B
15
3C
7
3B
P
W
L
W–B
W–B
16
I126
Junction
Connector
18
1
N7
Front Door Courtesy Light Switch
Assembly LH
52
3A
51
3A
P
W–B
P
W
I3
I1

I 12
White

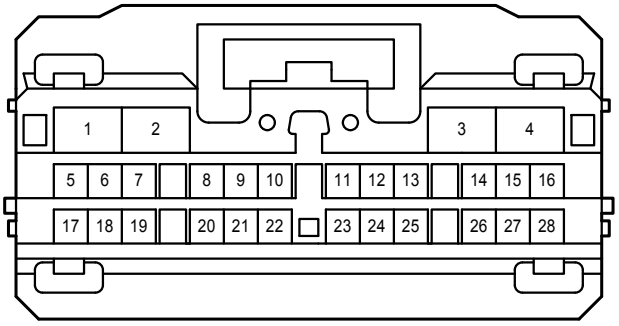

I 13
White

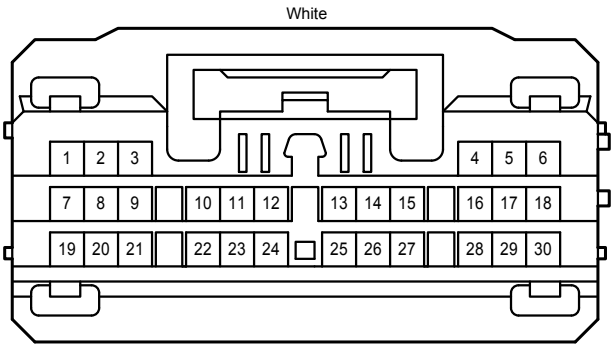

I126
White

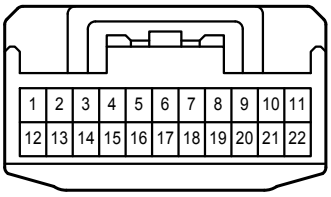

J 11
White

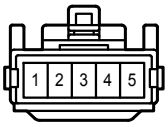

J 14
Black

K 9
White

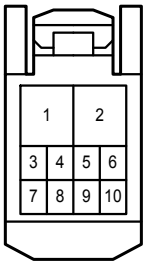

K 11
White

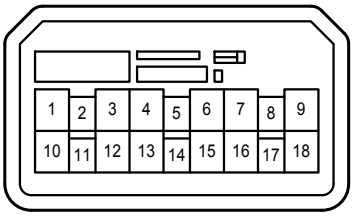

L 5
Black

L 6
White

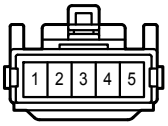

M 5
Black

M 6
White

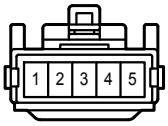

N 7
Black

1H
White



3A
White

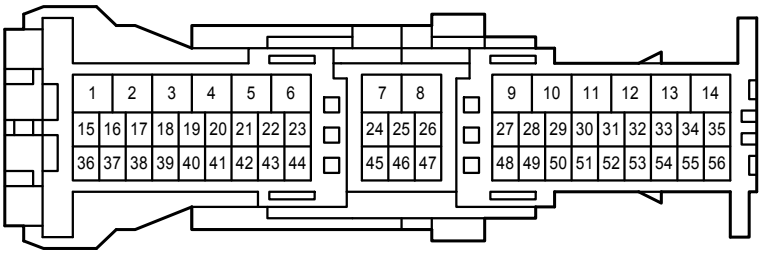

3B
White

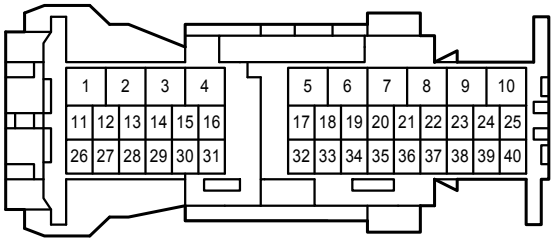

3C
White

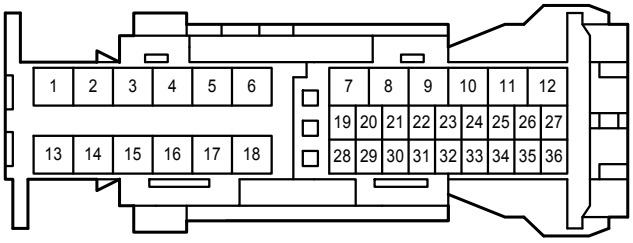

3D
White

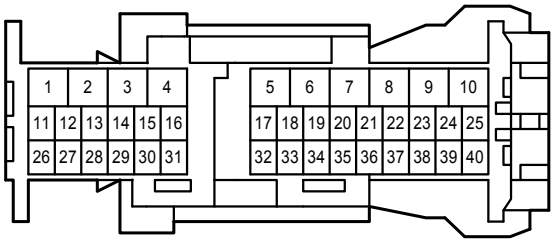

3E
White

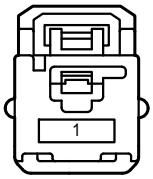

AA1
Blue

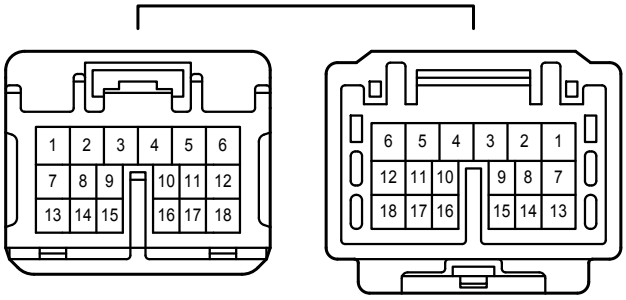

IN1
White

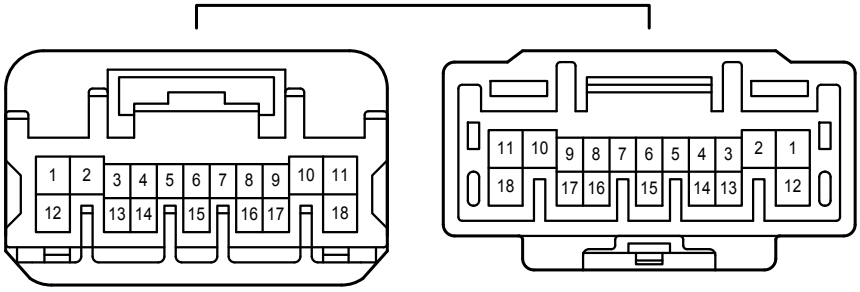

IO1
White

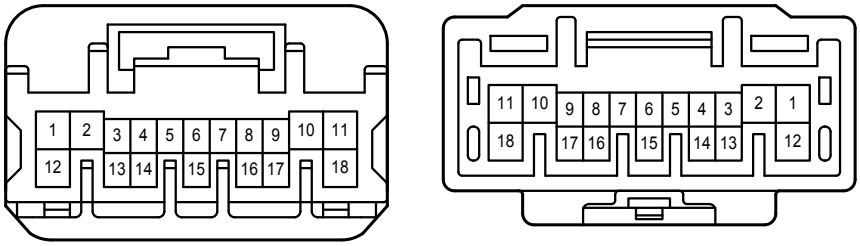

IO2
White

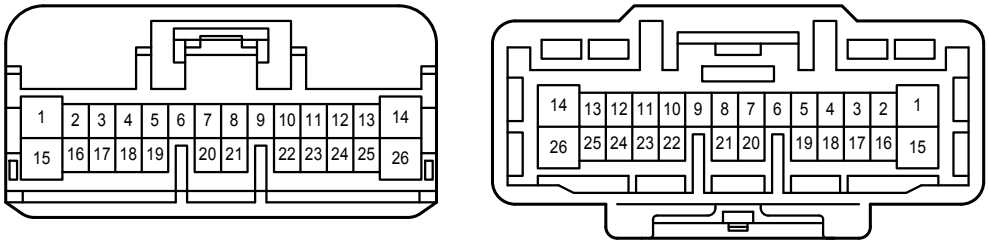

JI1
Gray

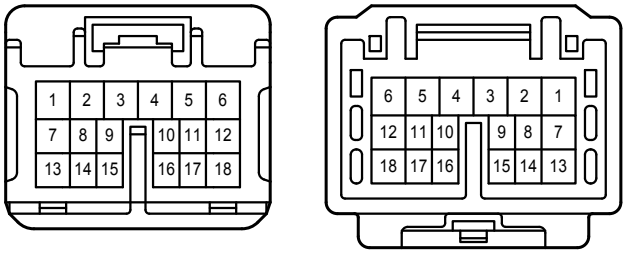

KI1
White

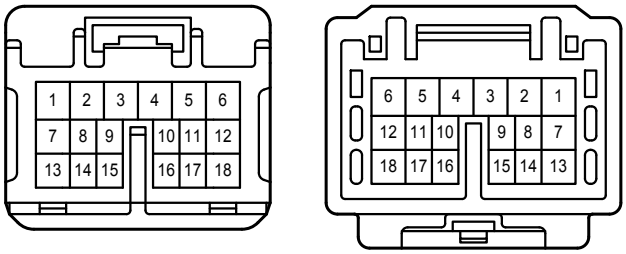

KI2
White

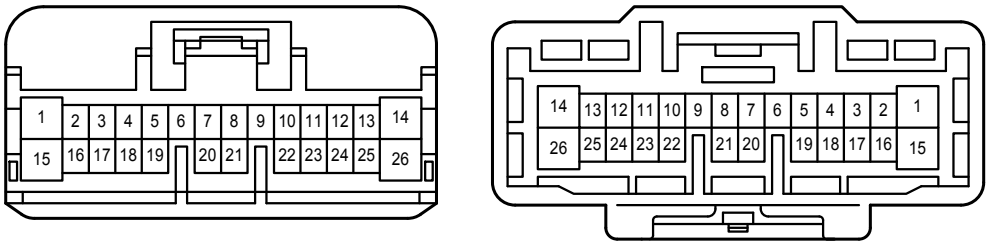

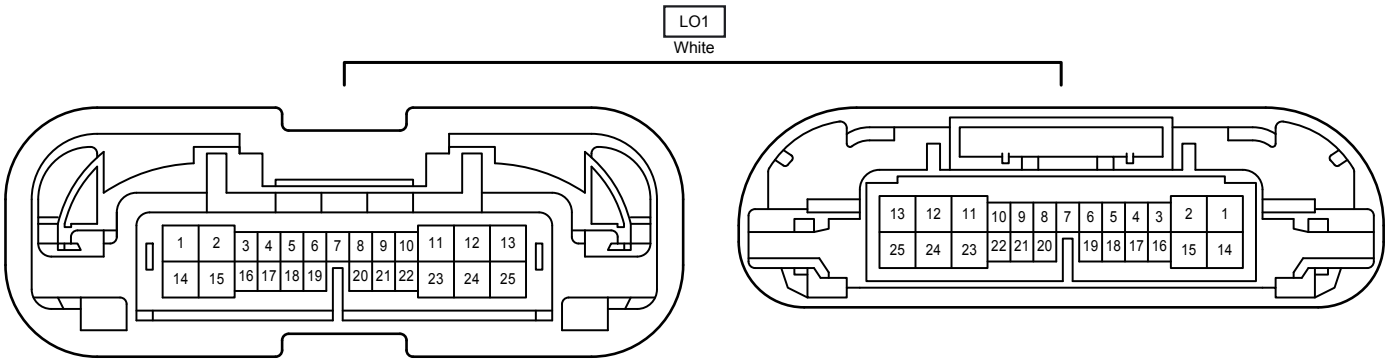
LO1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25
13 12 11 10 9 8 7 6 5 4 3 2 1
25 24 23 22 21 20 19 18 17 16 15 14

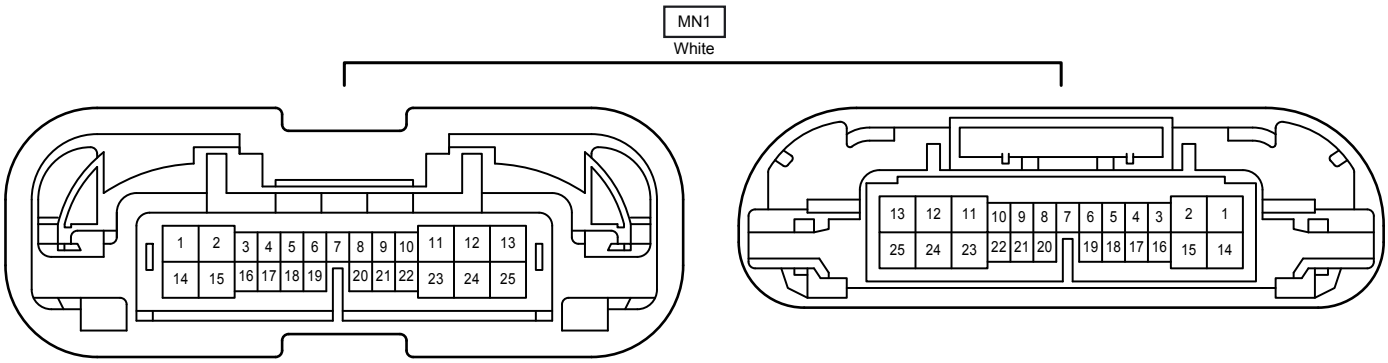
MN1
White
1 2 3 4 5 6 7 8 9 10 11 12 13
14 15 16 17 18 19 20 21 22 23 24 25
13 12 11 10 9 8 7 6 5 4 3 2 1
25 24 23 22 21 20 19 18 17 16 15 14