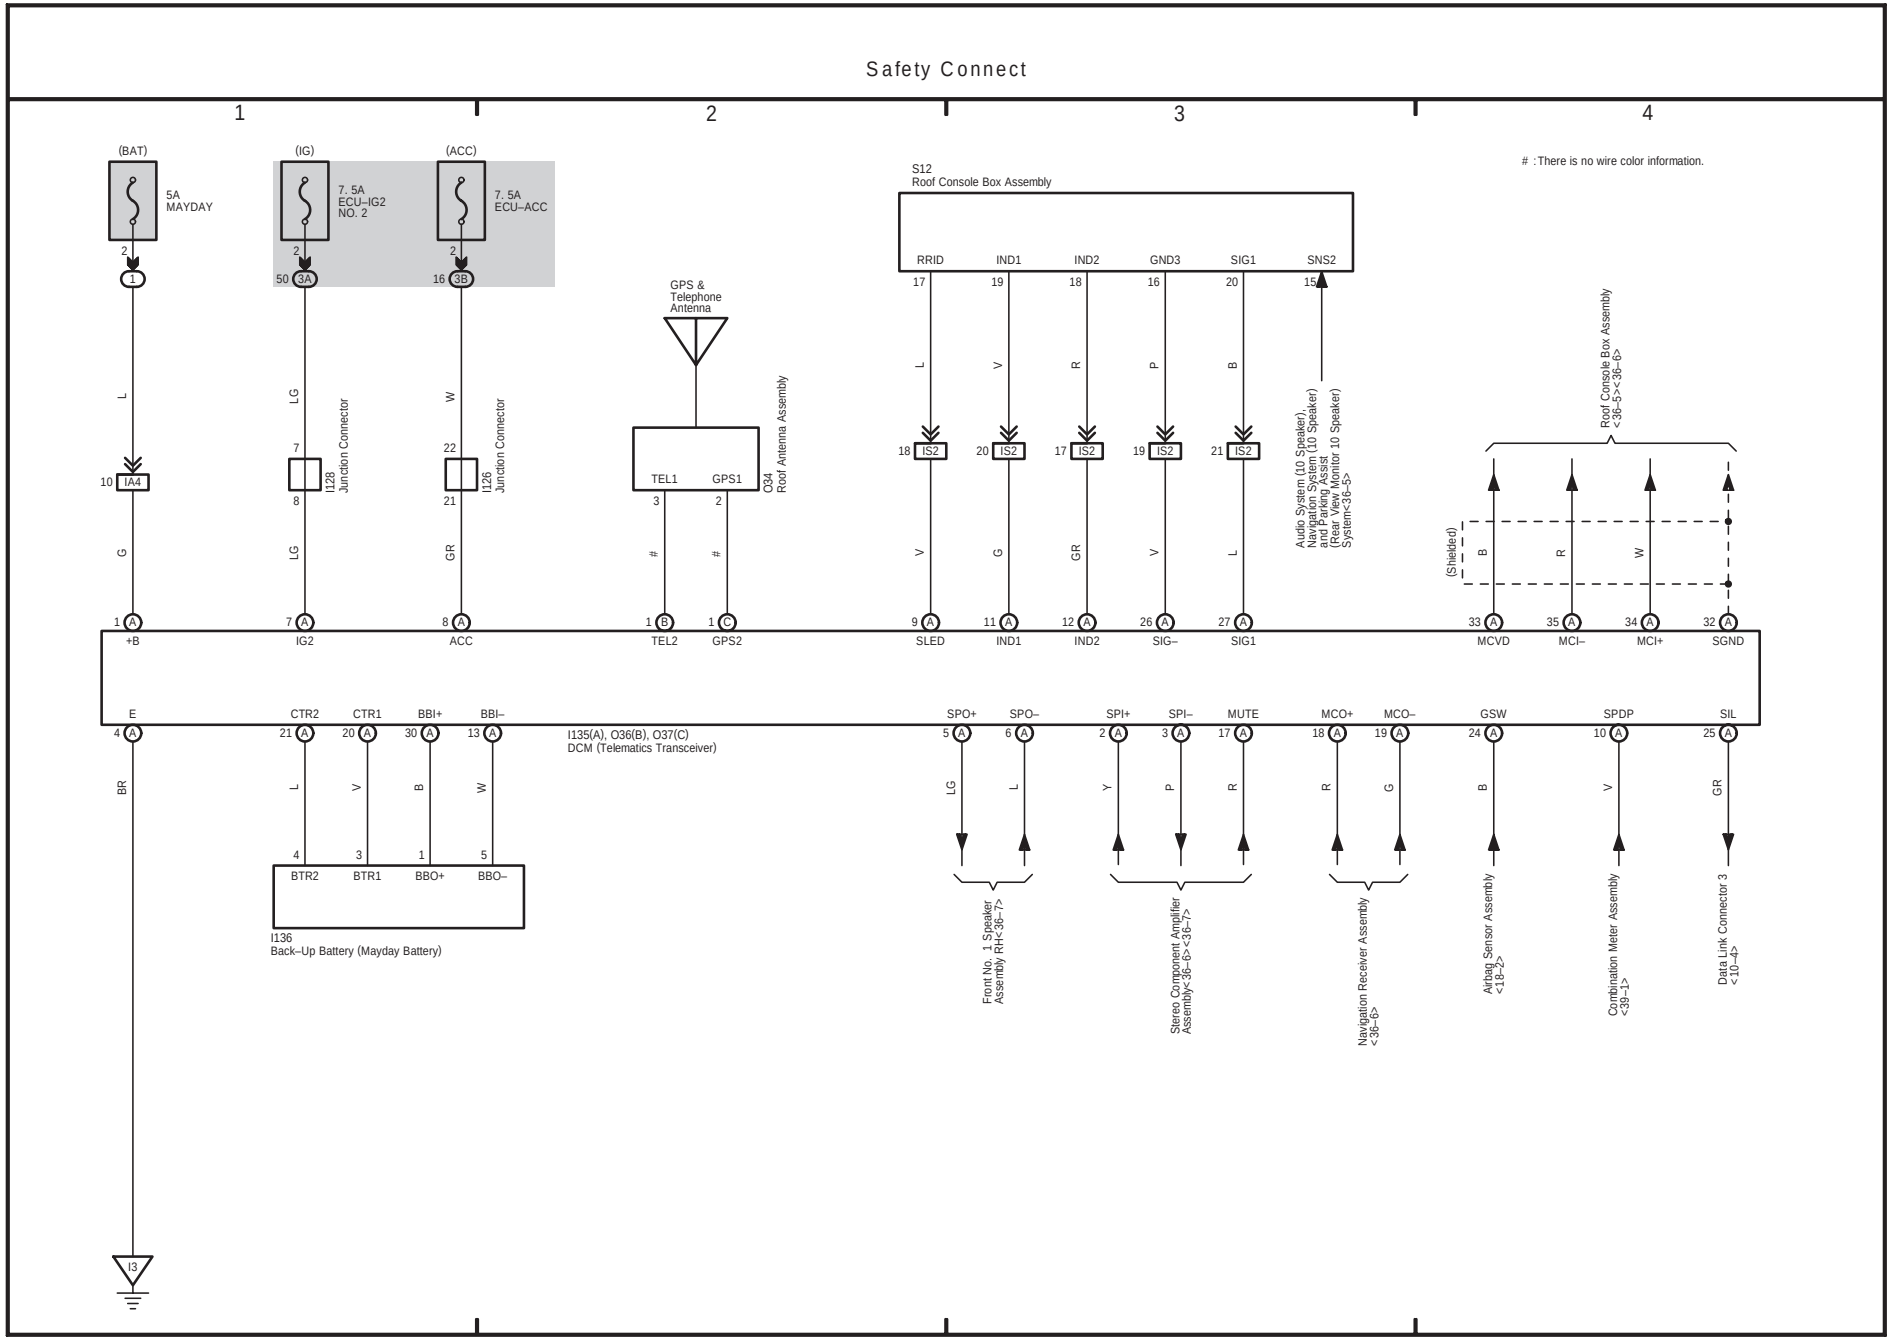
Safety Connect
1
2
3
4
: There is no wire color information.
(BAT)
5A
MAYDAY
(IG)
7. 5A
ECU–IG2
NO. 2
(ACC)
7. 5A
ECU–ACC
GPS &
Telephone
Antenna
S12
Roof Console Box Assembly
RRID
IND1
IND2
GND3
SIG1
SNS2
IA4
I128
Junction Connector
I126
Junction Connector
TEL1
GPS1
O34
Roof Antenna Assembly
IS2
Audio System (10 Speaker),
Navigation System (10 Speaker)
and Parking Assist
(Rear View Monitor 10 Speaker)
System<36–5>
Roof Console Box Assembly
< 36–5>< 36–6>
(Shielded)
+B
IG2
ACC
TEL2
GPS2
SLED
IND1
IND2
SIG–
SIG1
MCVD
MCI–
MCI+
SGND
E
CTR2
CTR1
BBI+
BBI–
I135(A), O36(B), O37(C)
DCM (Telematics Transceiver)
SPO+
SPO–
SPI+
SPI–
MUTE
MCO+
MCO–
GSW
SPDP
SIL
BTR2
BTR1
BBO+
BBO–
I136
Back–Up Battery (Mayday Battery)
Front No. 1 Speaker
Assembly RH<36–7>
Stereo Component Amplifier
Assembly<36–6><36–7>
Navigation Receiver Assembly
<36–6>
Airbag Sensor Assembly
<18–2>
Combination Meter Assembly
<39–1>
Data Link Connector 3
<10–4>
I3