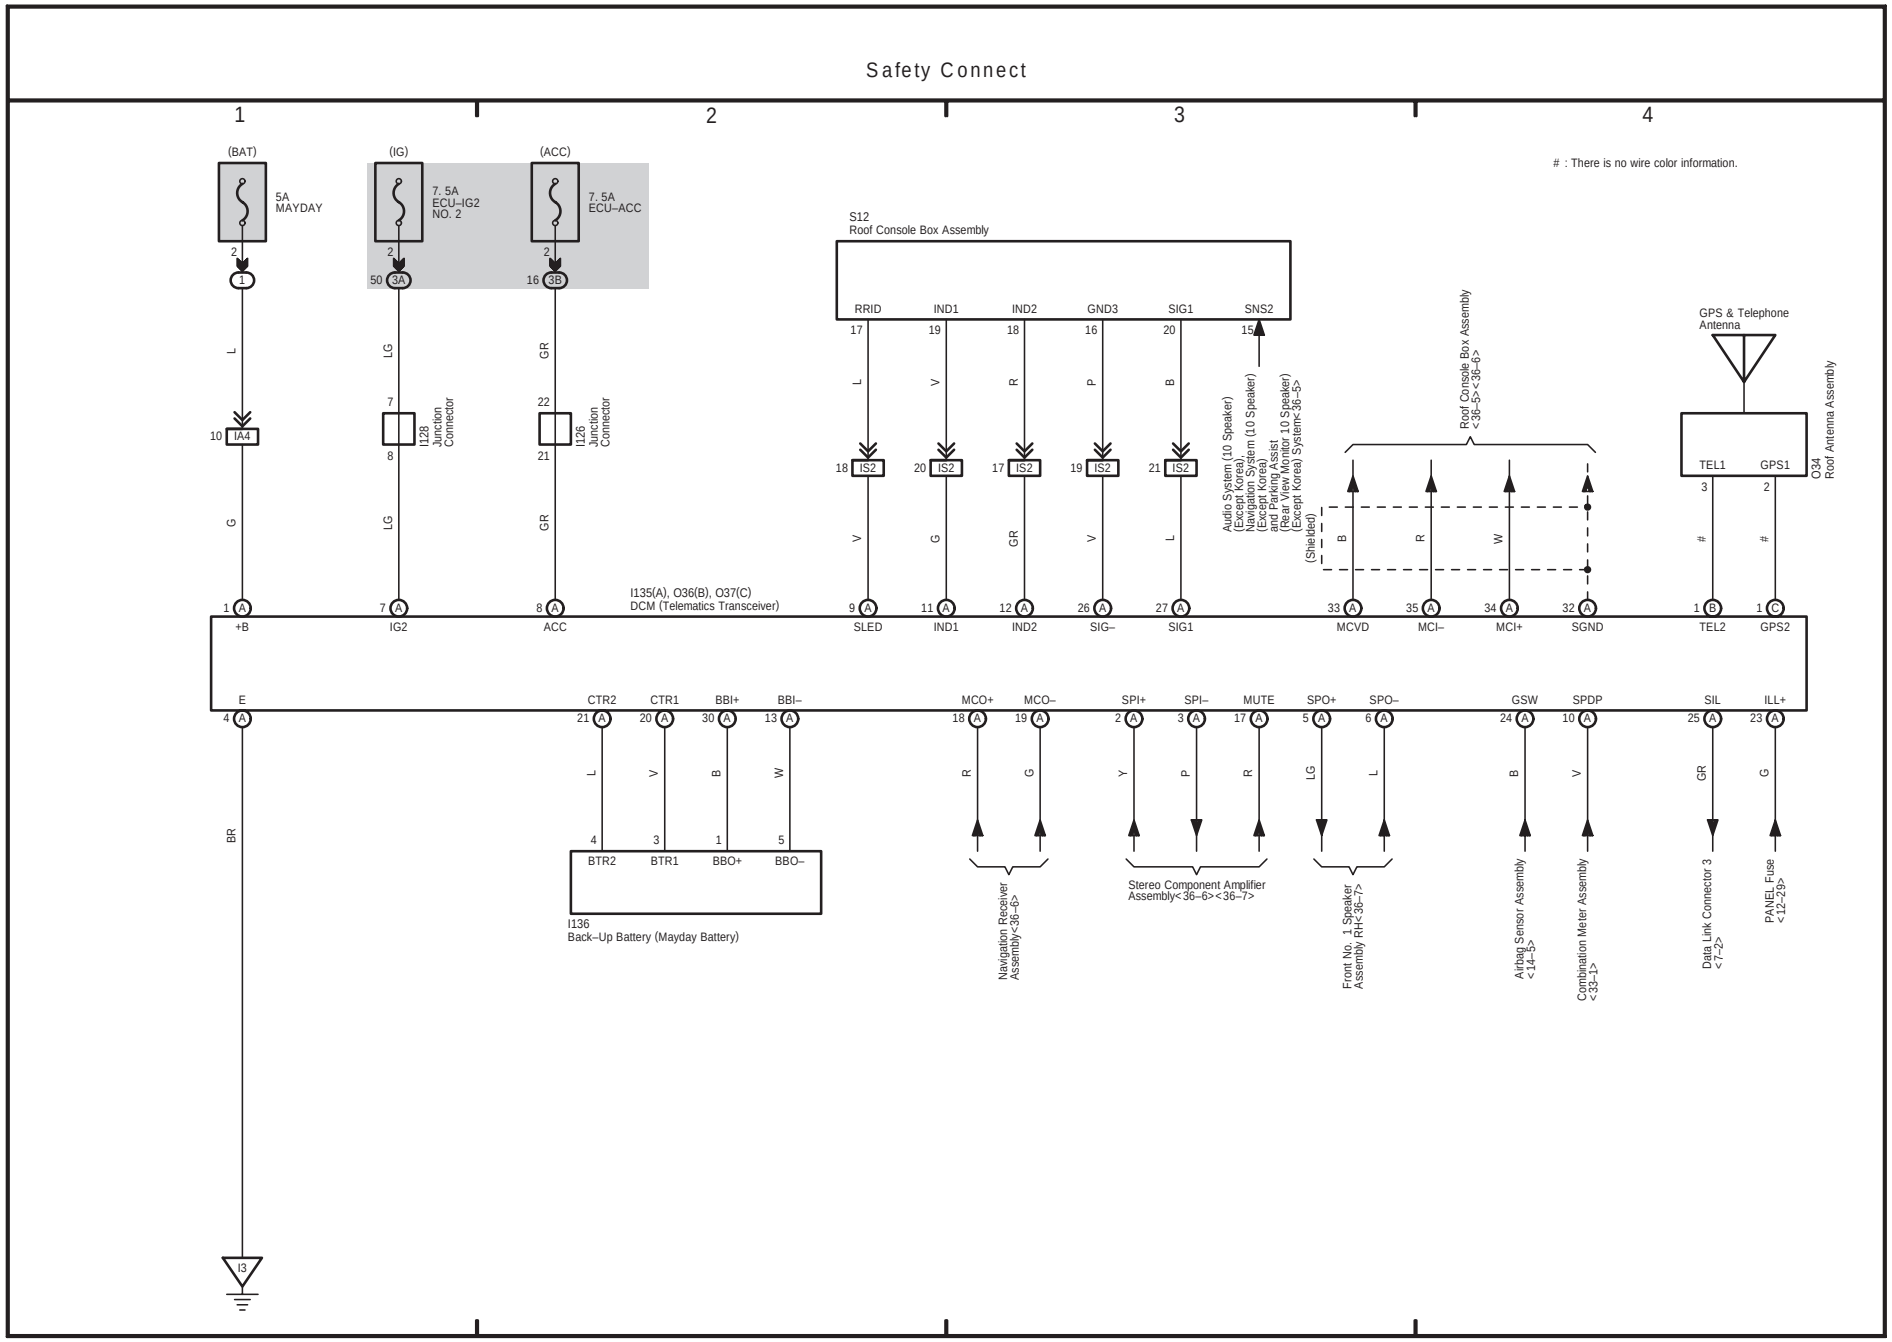
Safety Connect
1
2
3
4
: There is no wire color information.
(BAT)
5A
MAYDAY
(IG)
7. 5A
ECU–IG2
NO. 2
(ACC)
7. 5A
ECU–ACC
S12
Roof Console Box Assembly
RRID
IND1
IND2
GND3
SIG1
SNS2
IA4
I128
Junction
Connector
I126
Junction
Connector
IS2
Audio System (10 Speaker)
(Except Korea),
Navigation System (10 Speaker)
(Except Korea)
and Parking Assist
(Rear View Monitor 10 Speaker)
(Except Korea) System<36–5>
(Shielded)
Roof Console Box Assembly
< 36–5>< 36–6>
GPS & Telephone
Antenna
TEL1
GPS1
O34
Roof Antenna Assembly
I135(A), O36(B), O37(C)
DCM (Telematics Transceiver)
+B
IG2
ACC
SLED
IND1
IND2
SIG–
SIG1
MCVD
MCI–
MCI+
SGND
TEL2
GPS2
E
CTR2
CTR1
BBI+
BBI–
MCO+
MCO–
SPI+
SPI–
MUTE
SPO+
SPO–
GSW
SPDP
SIL
ILL+
BTR2
BTR1
BBO+
BBO–
I136
Back–Up Battery (Mayday Battery)
Navigation Receiver
Assembly<36–6>
Stereo Component Amplifier
Assembly< 36–6>< 36–7>
Front No. 1 Speaker
Assembly RH<36–7>
Airbag Sensor Assembly
< 14–5>
Combination Meter Assembly
< 33–1>
Data Link Connector 3
< 17–2>
PANEL Fuse
< 12–29>
I3