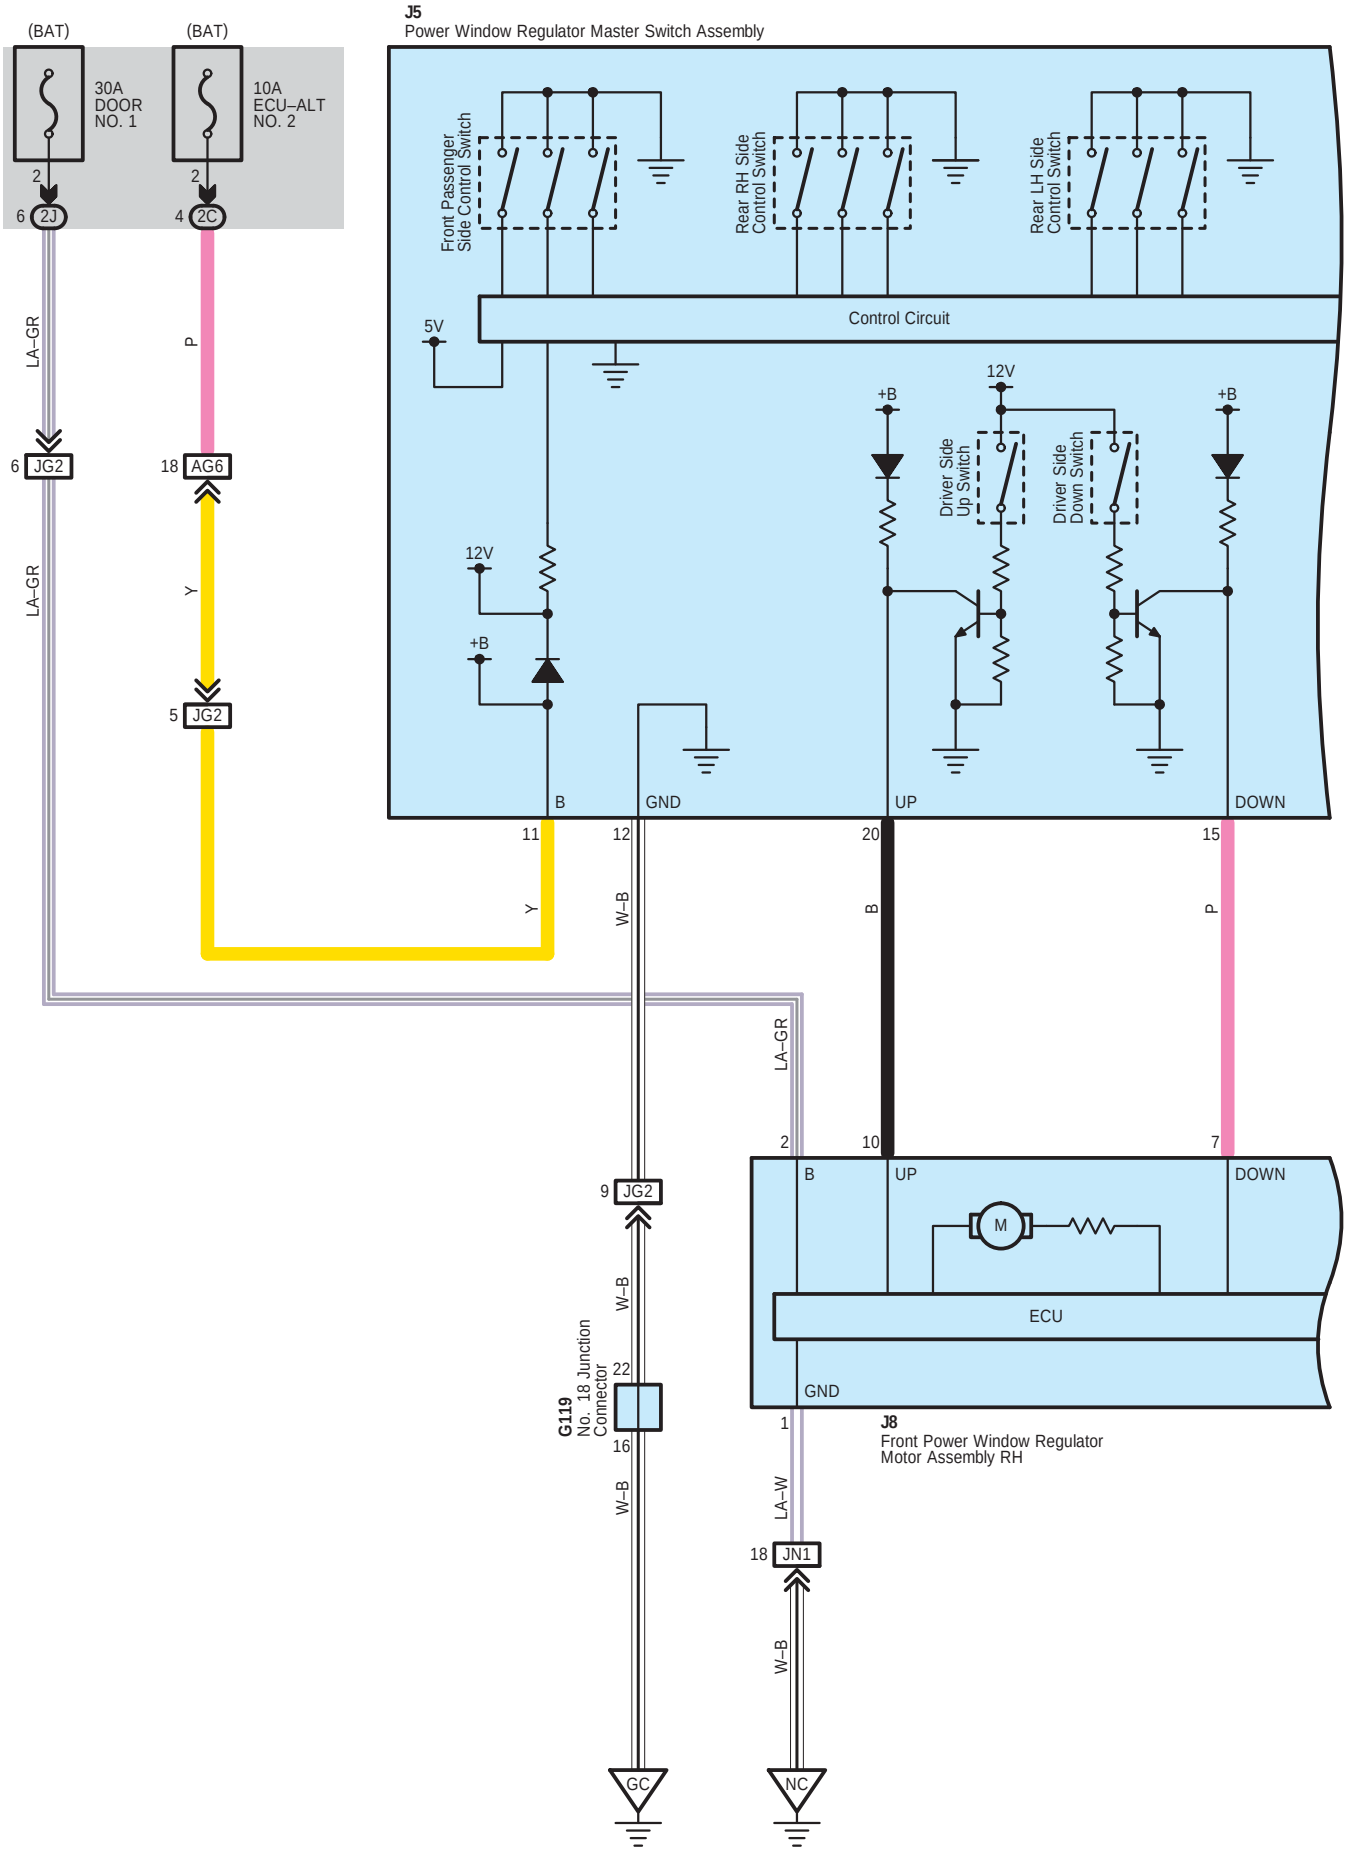
(BAT)
(BAT)
30A
DOOR
NO. 1
10A
ECU–ALT
NO. 2
2
2
6 2J
4 2C
LA–GR
P
6 JG2
18 AG6
LA–GR
Y
5 JG2
J5
Power Window Regulator Master Switch Assembly
Front Passenger
Side Control Switch
Rear RH Side
Control Switch
Rear LH Side
Control Switch
Control Circuit
5V
12V
+B
+B
+B
12V
Driver Side
Up Switch
Driver Side
Down Switch
B
GND
UP
DOWN
11
12
20
15
Y
W–B
B
P
LA–GR
2
10
7
B
UP
DOWN
M
ECU
GND
9 JG2
W–B
G119
No. 18 Junction
Connector
22
16
W–B
1
J8
Front Power Window Regulator
Motor Assembly RH
LA–W
18 JN1
W–B
GC
NC

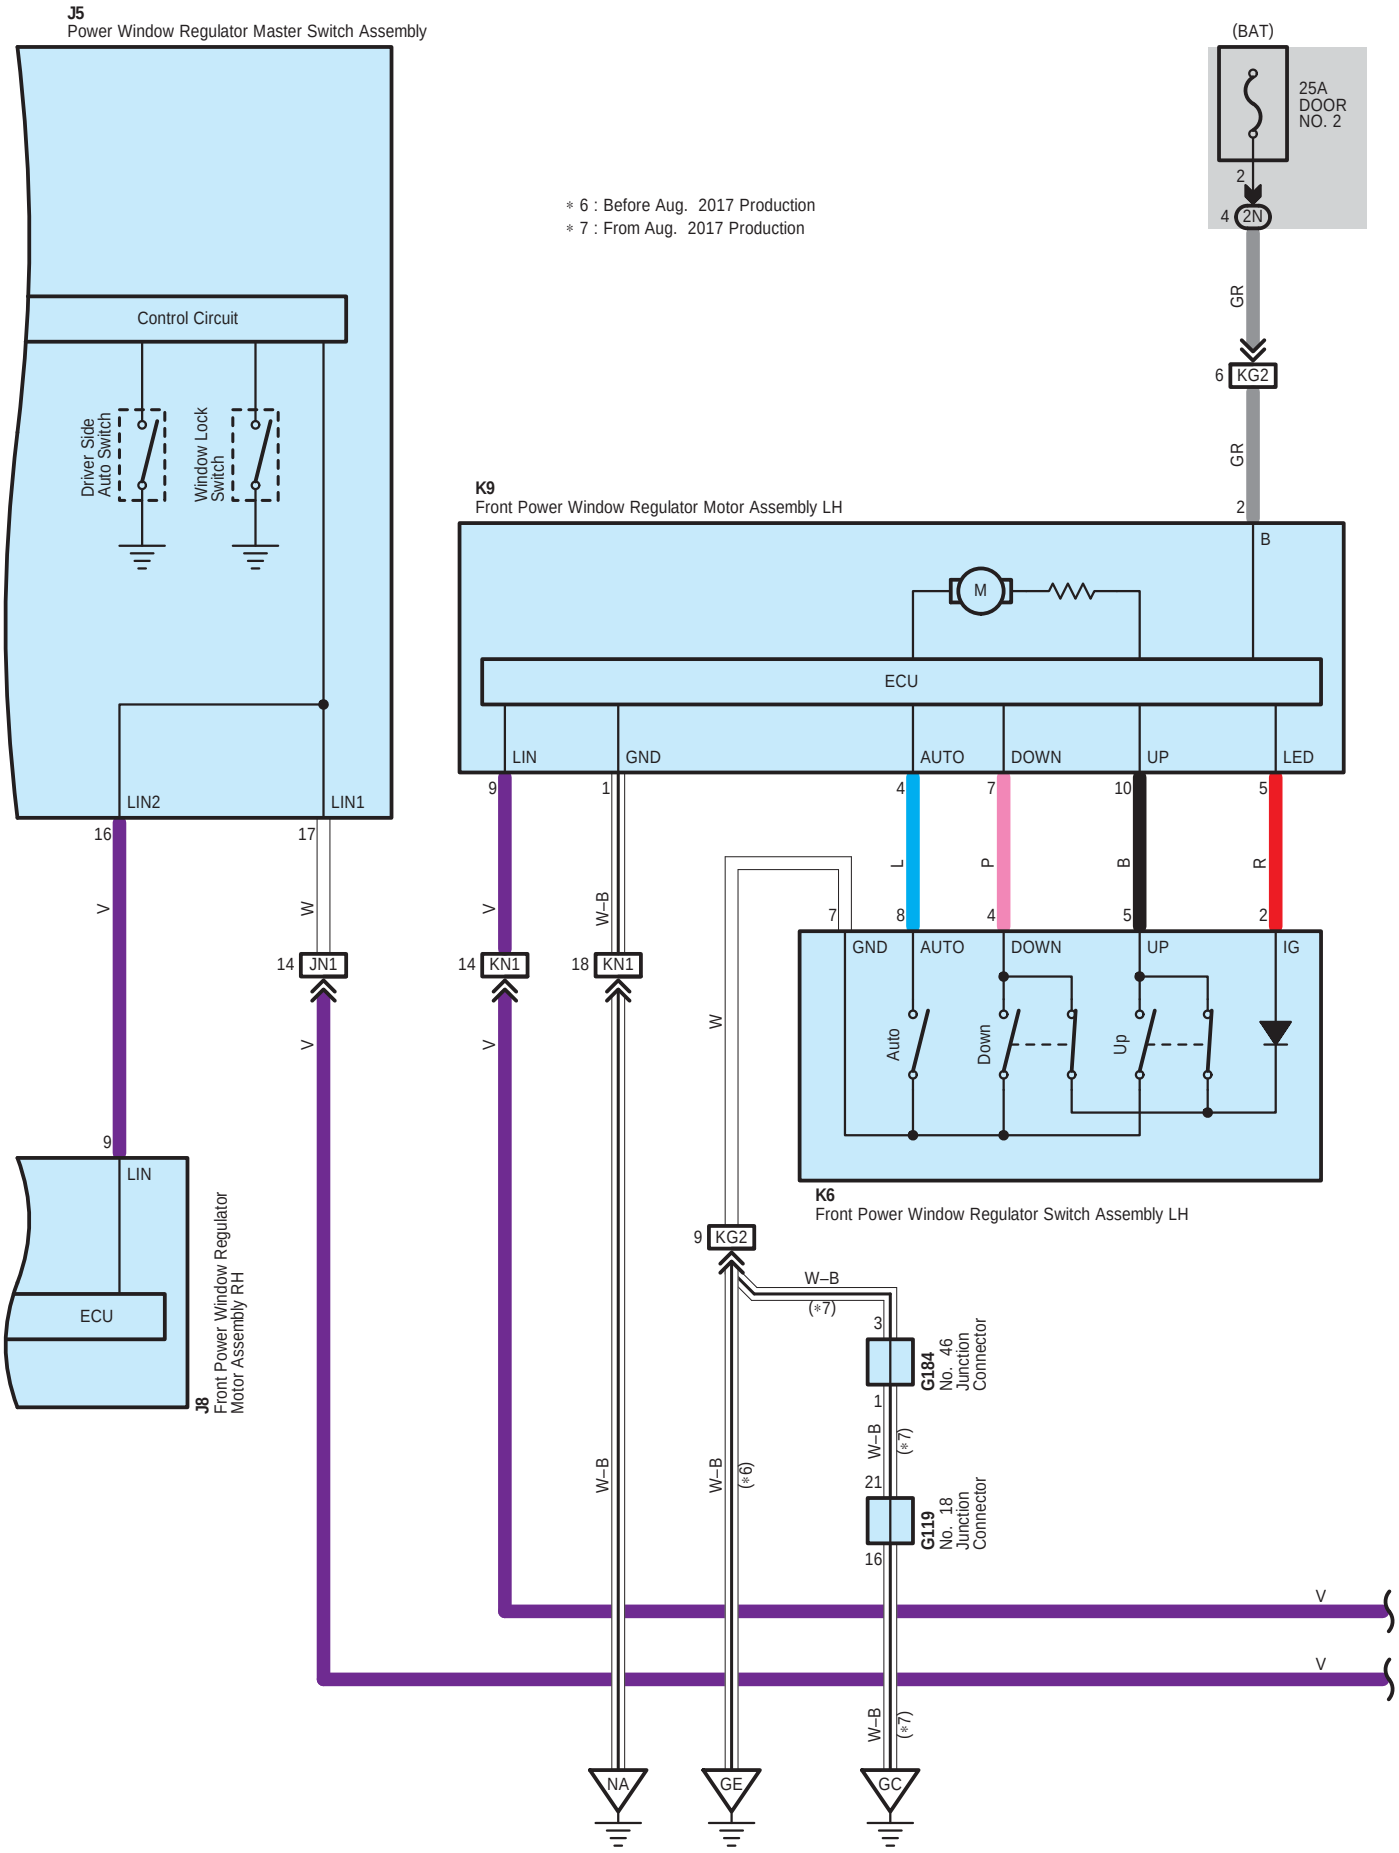
J5
Power Window Regulator Master Switch Assembly
Control Circuit
Driver Side Auto Switch
Window Lock Switch
LIN2
LIN1
16
17
V
W
14 JN1
V
9
LIN
ECU
J8
Front Power Window Regulator Motor Assembly RH
∗ 6 : Before Aug. 2017 Production
∗ 7 : From Aug. 2017 Production
(BAT)
25A DOOR NO. 2
2
4 2N
GR
6 KG2
GR
2
K9
Front Power Window Regulator Motor Assembly LH
B
M
ECU
LIN
GND
AUTO
DOWN
UP
LED
9
1
4
7
10
5
L
P
B
R
V
W–B
14 KN1
18 KN1
V
V
7
8
4
5
2
GND
AUTO
DOWN
UP
IG
Auto
Down
Up
W
K6
Front Power Window Regulator Switch Assembly LH
9 KG2
W–B
(∗7)
3
G184
No. 46 Junction Connector
1
W–B
(∗7)
21
G119
No. 18 Junction Connector
16
W–B
W–B
(∗6)
V
V
W–B
(∗7)
NA
GE
GC

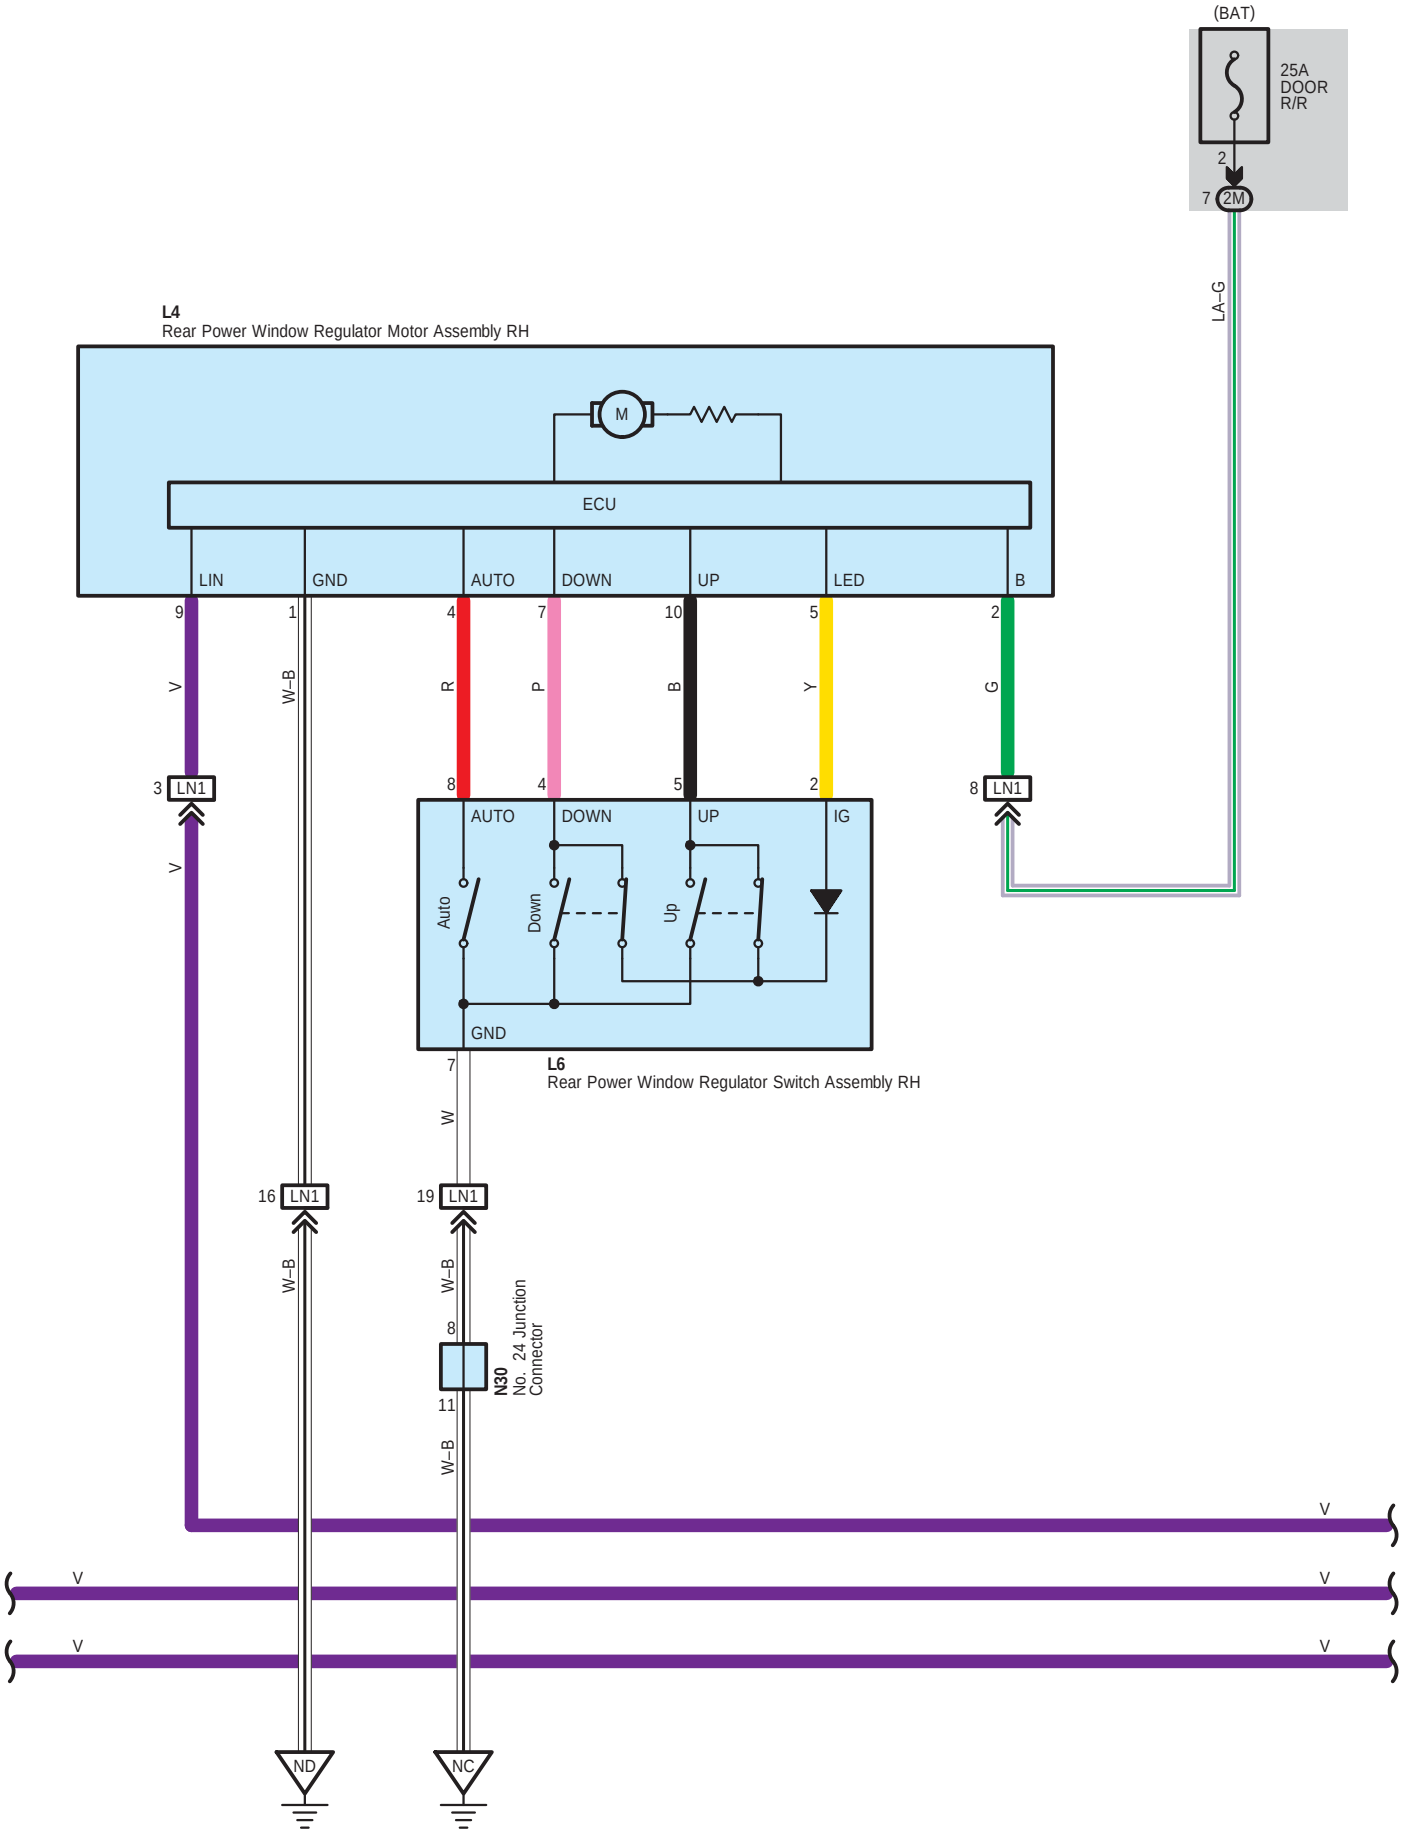
(BAT)
25A
DOOR
R/R
2
7
2M
LA–G
L4
Rear Power Window Regulator Motor Assembly RH
M
ECU
LIN
GND
AUTO
DOWN
UP
LED
B
9
1
4
7
10
5
2
V
W–B
R
P
B
Y
G
3
LN1
8
4
5
2
8
LN1
AUTO
DOWN
UP
IG
Auto
Down
Up
GND
7
L6
Rear Power Window Regulator Switch Assembly RH
W
16
LN1
19
LN1
W–B
W–B
8
N30
No. 24 Junction
Connector
11
W–B
V
V
V
V
V
ND
NC

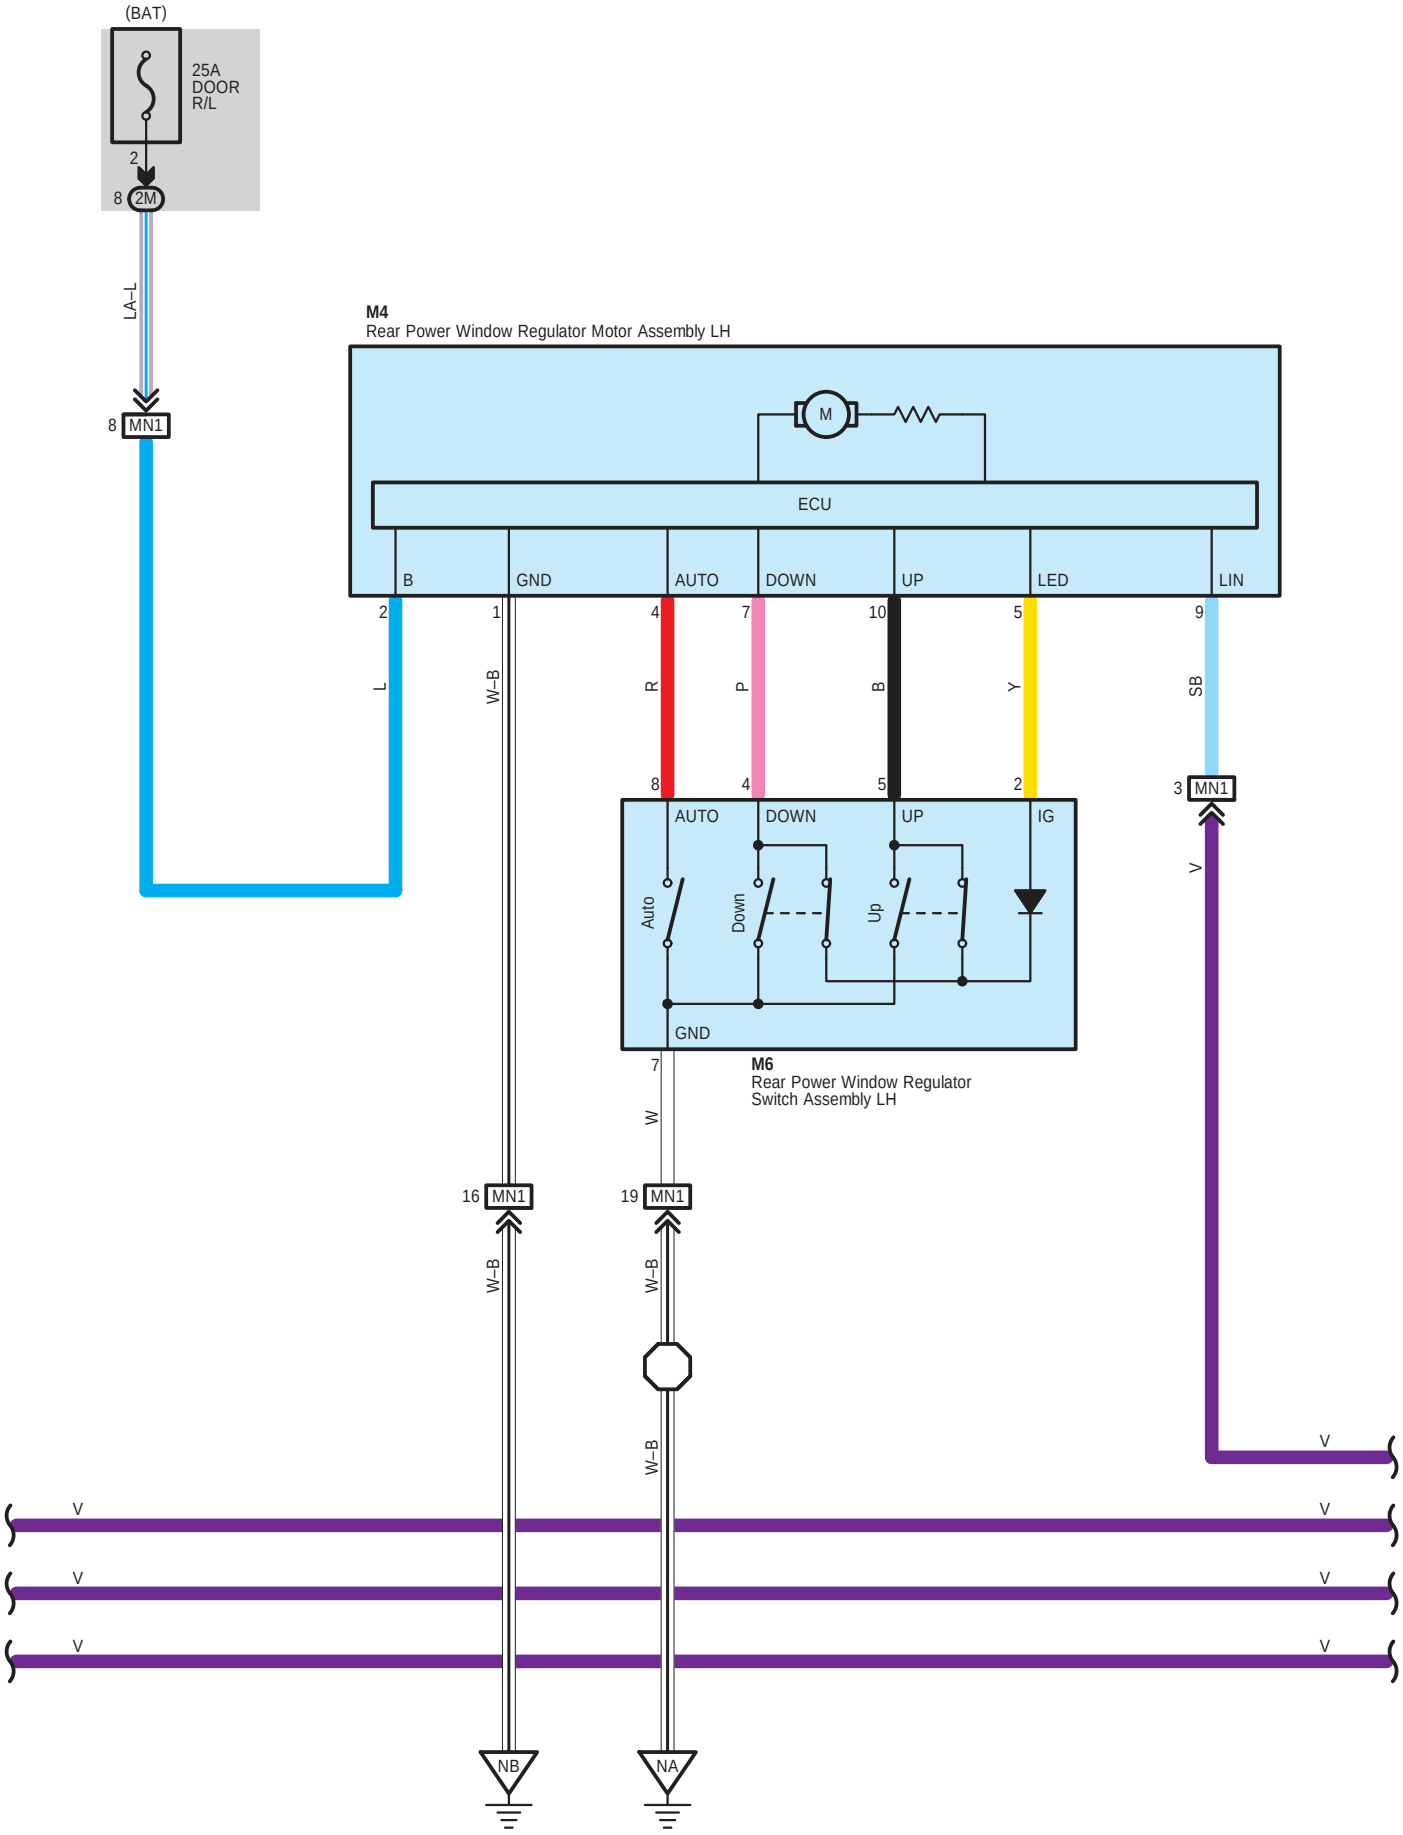
(BAT)
25A
DOOR
R/L
2
8 2M
LA–L
8 MN1
M4
Rear Power Window Regulator Motor Assembly LH
M
ECU
B
GND
AUTO
DOWN
UP
LED
LIN
2
1
4
7
10
5
9
L
W–B
R
P
B
Y
SB
8
4
5
2
3 MN1
AUTO
DOWN
UP
IG
Auto
Down
Up
GND
V
7
W
M6
Rear Power Window Regulator
Switch Assembly LH
16 MN1
19 MN1
W–B
W–B
W–B
V
V
V
V
V
V
V
NB
NA

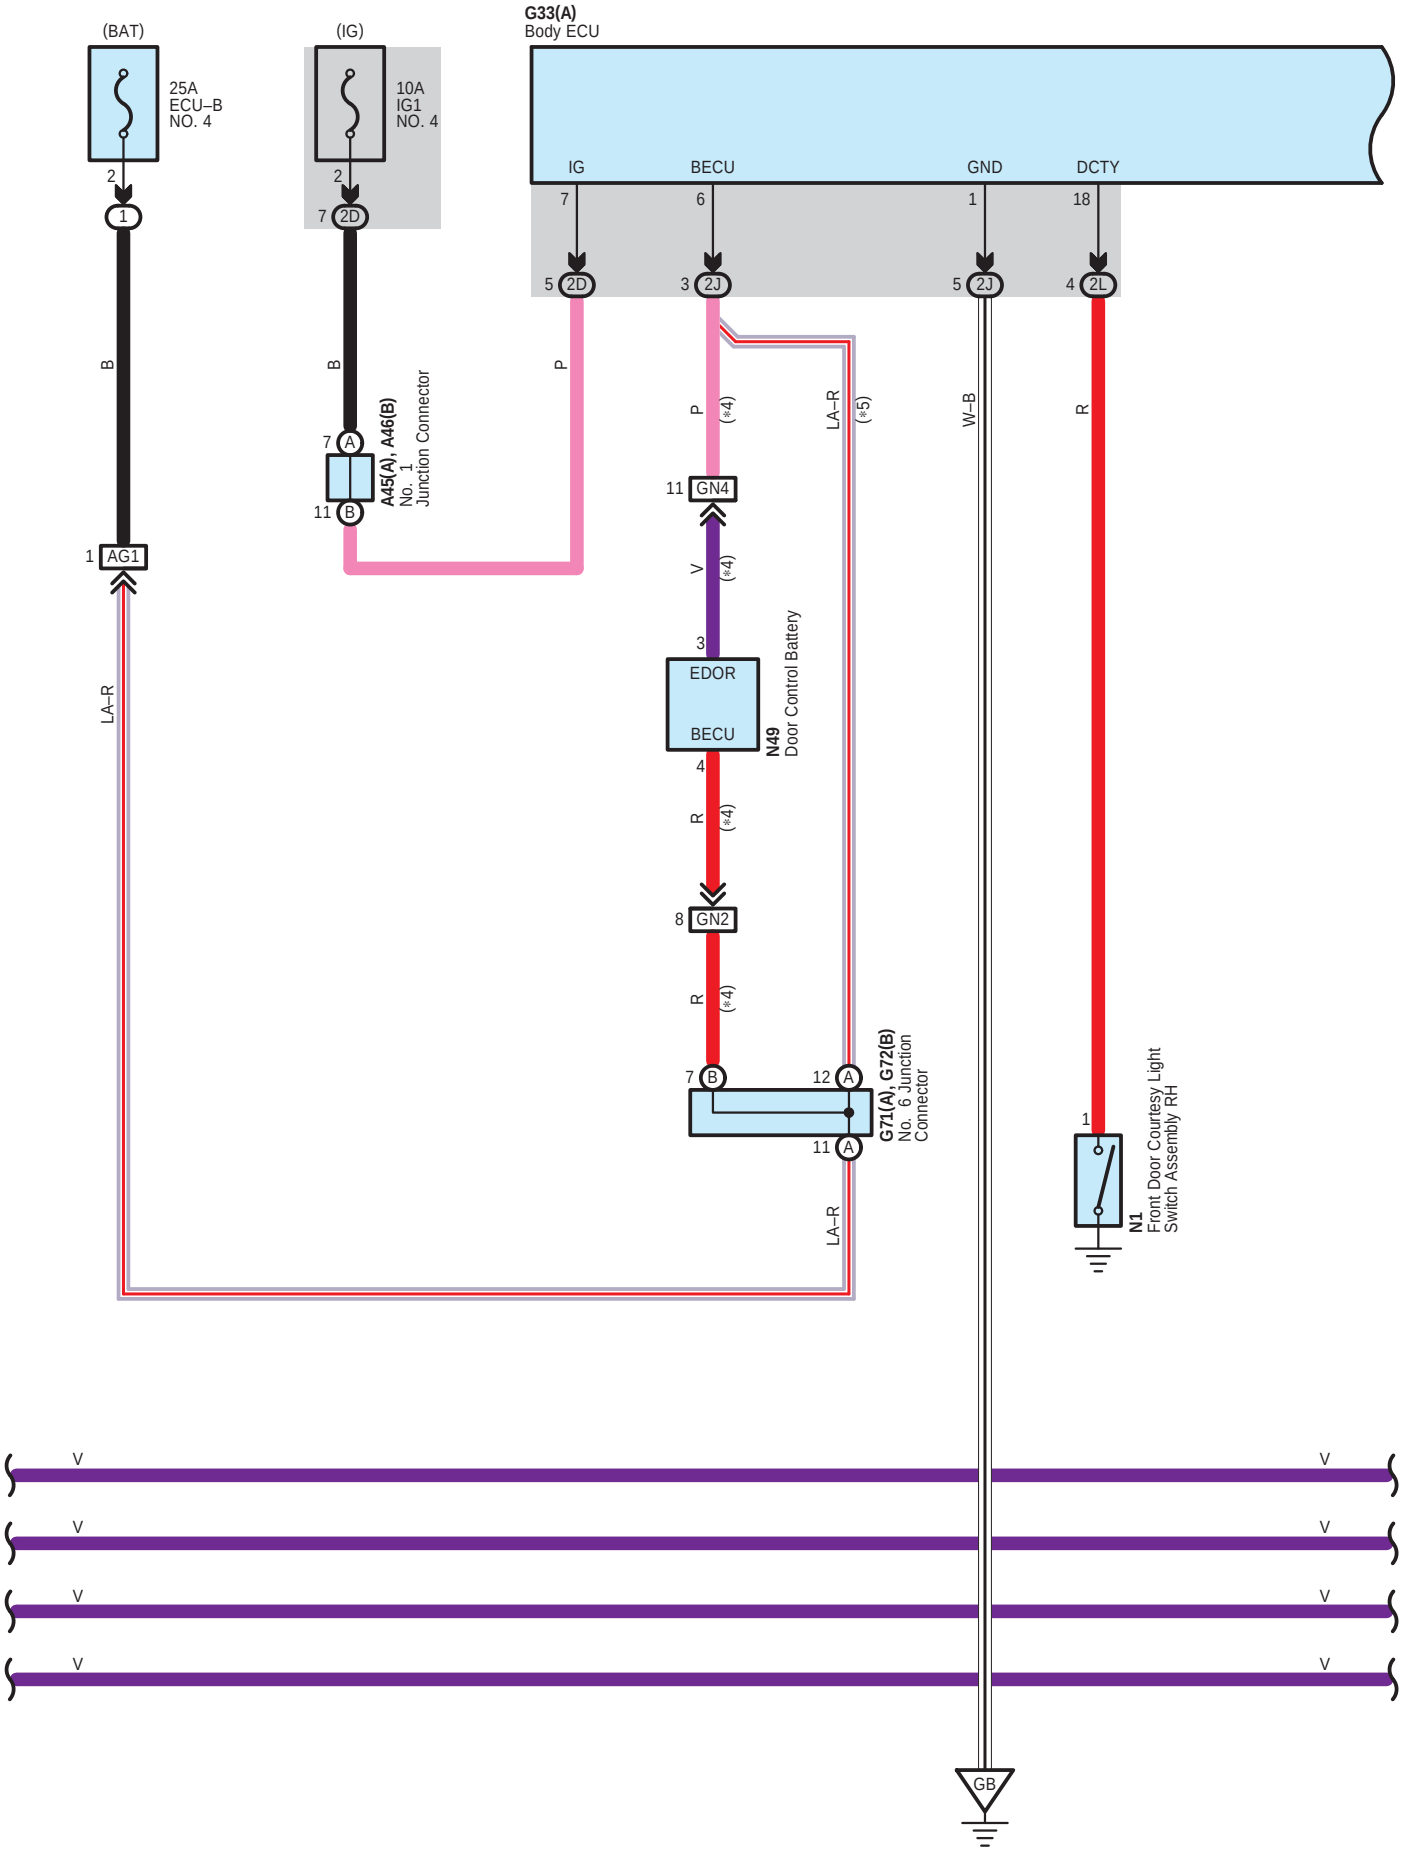
(BAT)
25A
ECU–B
NO. 4
(IG)
10A
IG1
NO. 4
G33(A)
Body ECU
IG
BECU
GND
DCTY
B
B
P
P
(*4)
LA–R
(*5)
W–B
R
A45(A), A46(B)
No. 1
Junction Connector
AG1
GN4
V
(*4)
EDOR
BECU
N49
Door Control Battery
R
(*4)
GN2
R
(*4)
G71(A), G72(B)
No. 6 Junction
Connector
LA–R
N1
Front Door Courtesy Light
Switch Assembly RH
V
GB

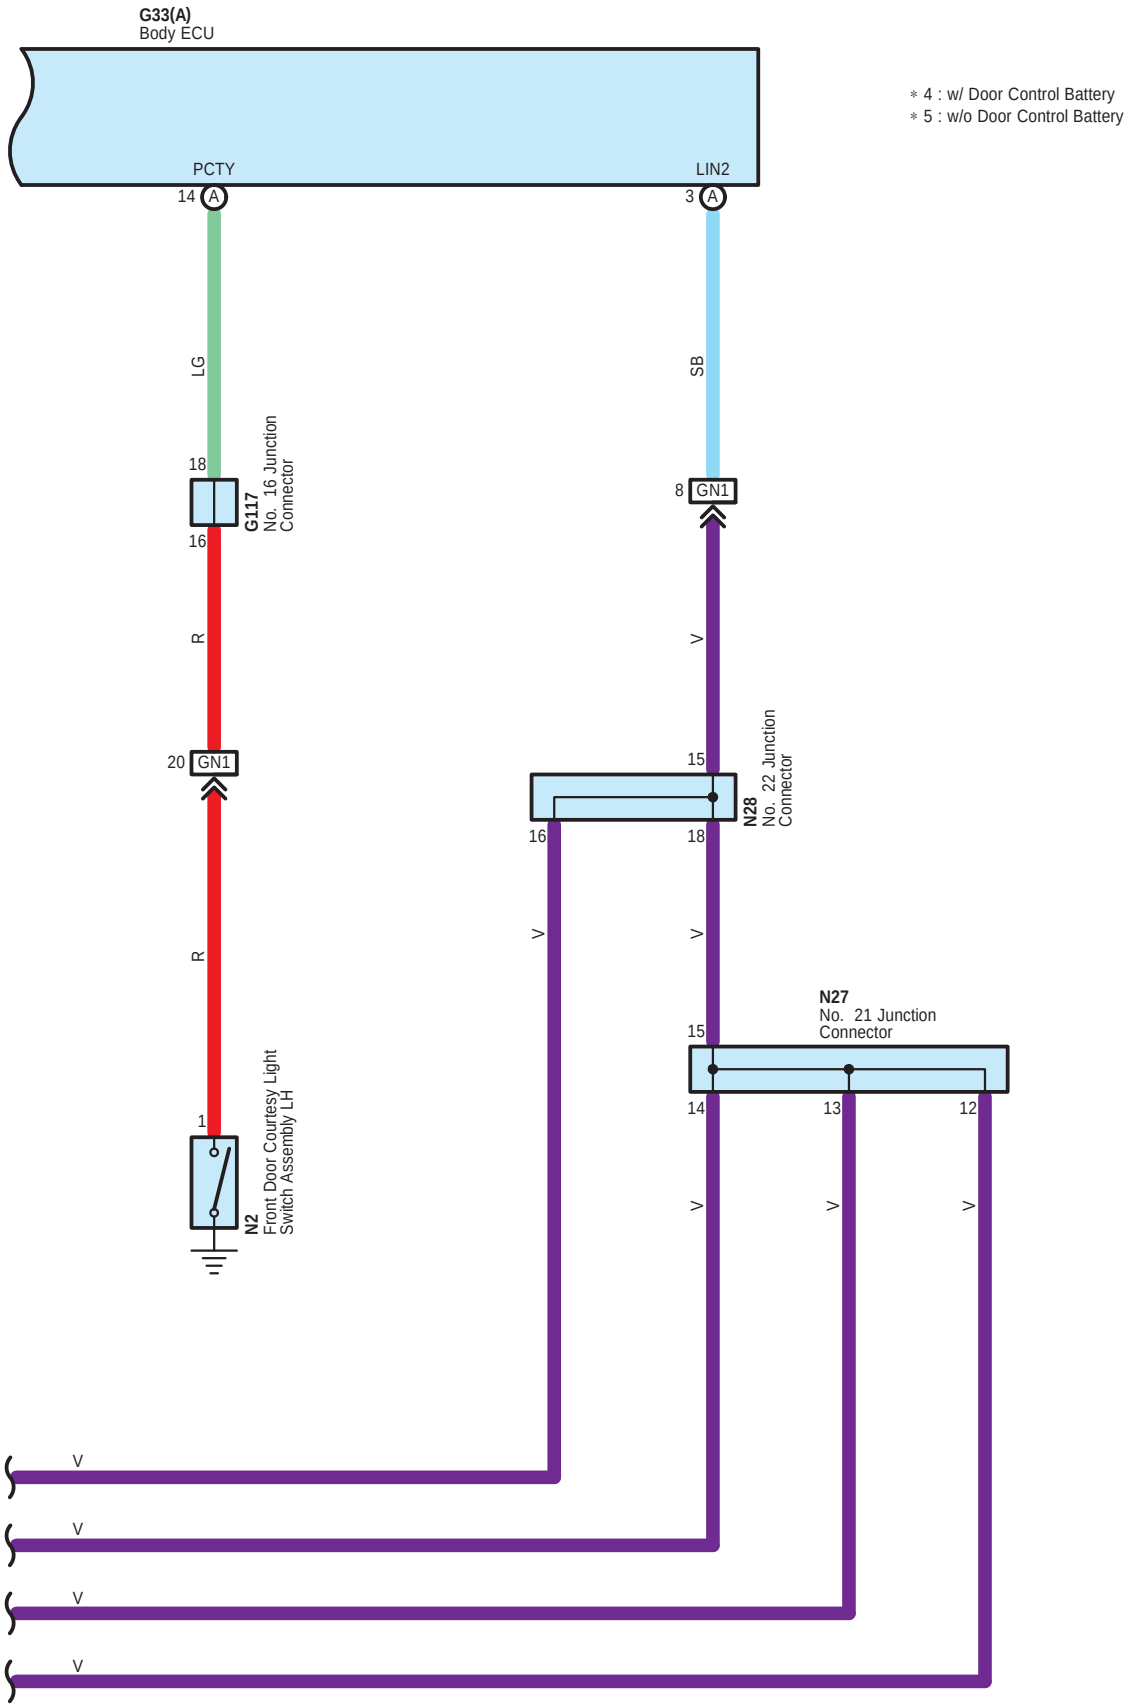

∗ 4 : w/ Door Control Battery
∗ 5 : w/o Door Control Battery

A45
White

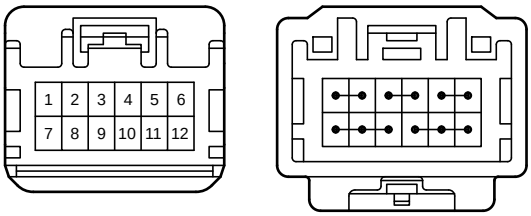

90980-12737

A46
White

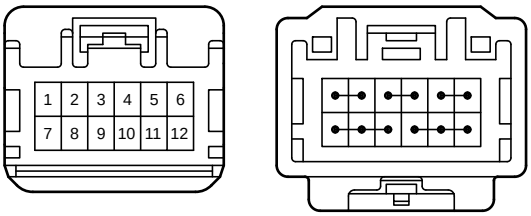

90980-12737

G33
White

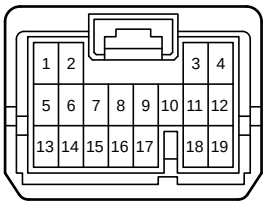

90980-12A45

G71
White

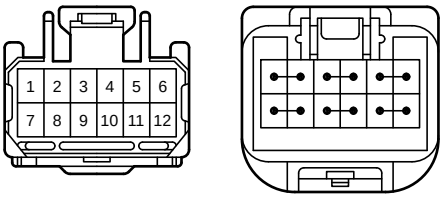

90980-11661

G72
White

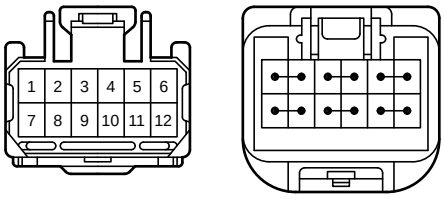

90980-11661

G117
Black

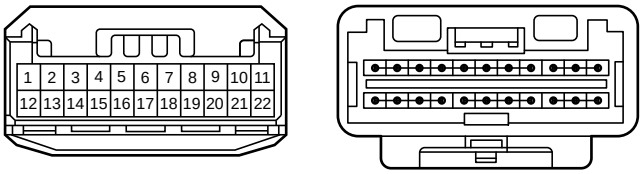

90980-12B54

G119
Black

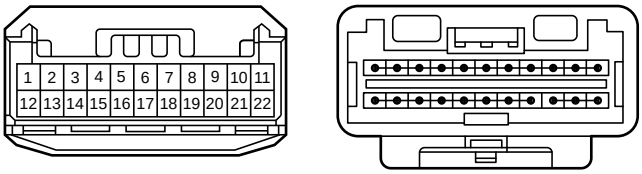

90980-12B54

G184
Black

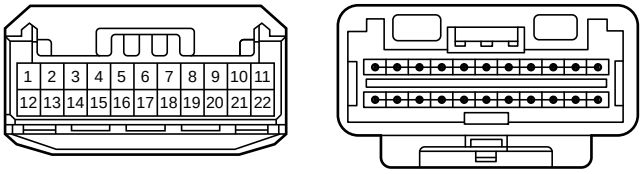

90980-12B54

J5
White

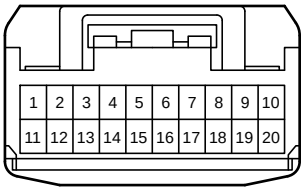

90980-12460

J8
White

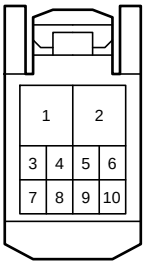

90980-12328

Power Window (RHD All Door Jam Protection)

K6
Black

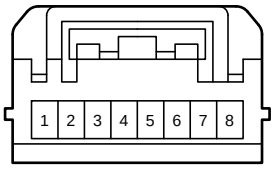

90980-12550
(All Door Jam Protection)

K9
White

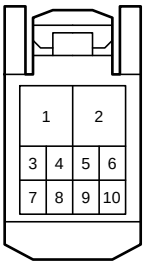

90980-12328

L4
White

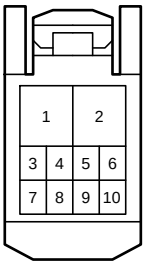

90980-12328

L6
Black

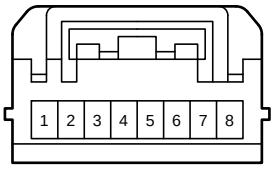

90980-12550
(All Door Jam Protection)

M4
White

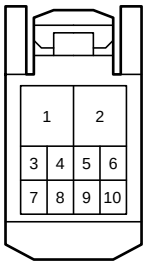

90980-12328

M6
Black

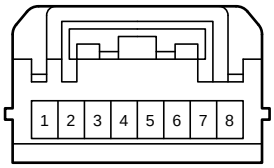

90980-12550
(All Door Jam Protection)

N1
Black

90980-10871

N2
Black

90980-10871

N27
Black

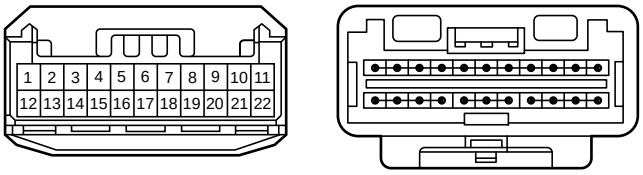

90980-12B54

N28
Black

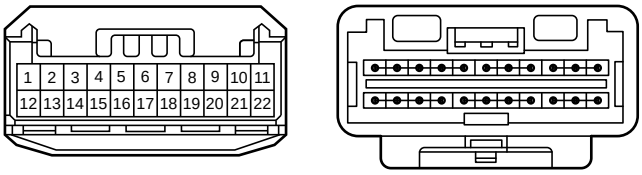

90980-12B54

N30
Black

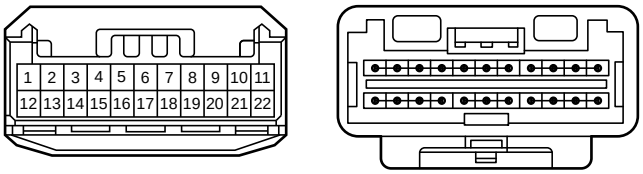

90980-12B54

N49
White

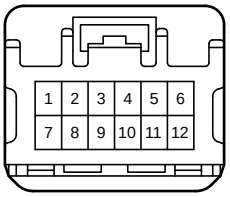

90980-12737

2C
White

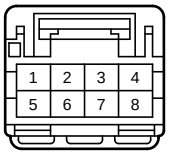

90980-12A54

2D
White

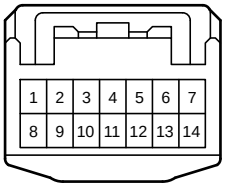

90980-12370

2J
White

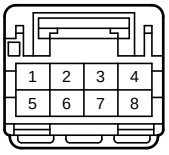

90980-12A54

2L
White

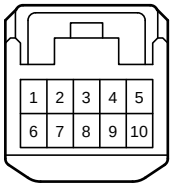

90980-12368

2M
White

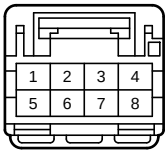

90980-12A55

2N
White

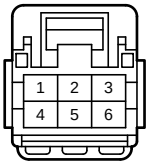

90980-12A61

AG1
White

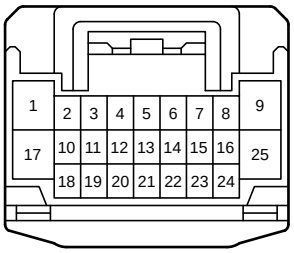

90980-12414

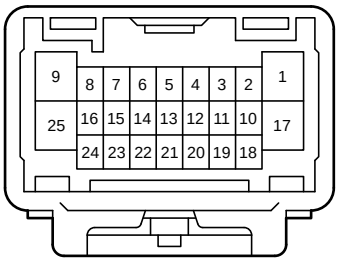

90980-12413

AG6
White

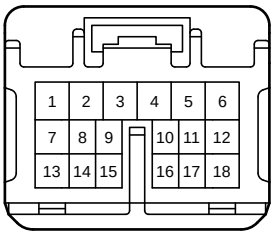

90980-12745

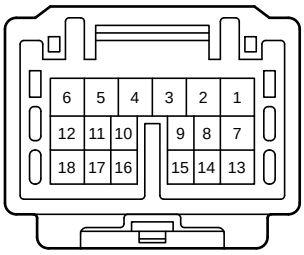

90980-12744

GN1
White

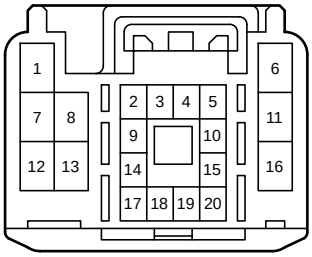

82824-52530

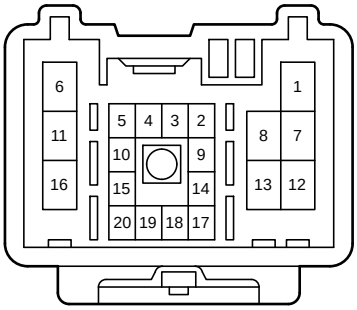

82824-52520

GN2
White

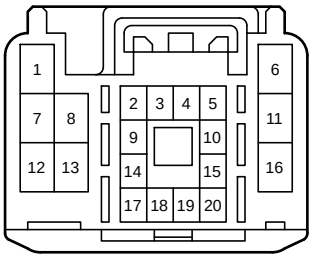

82824-52530

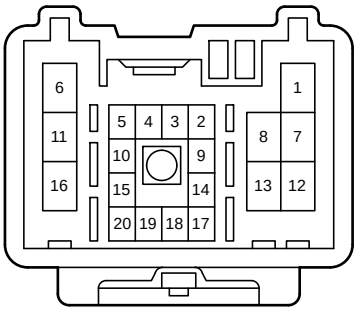

82824-52520

GN4
White

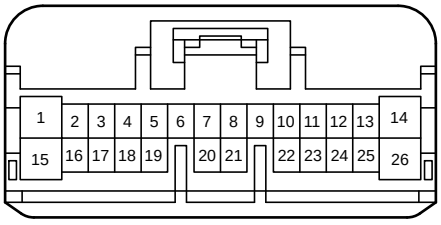

90980-12771

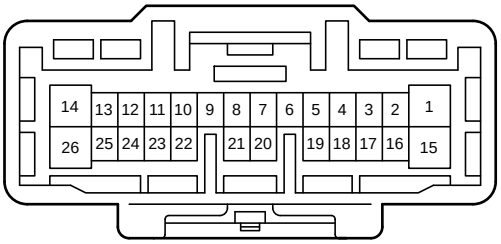

90980-12770

JG2
White

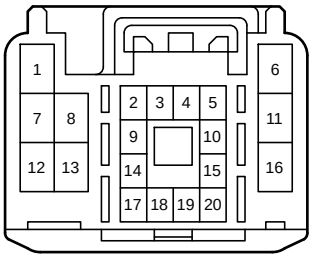

82824-52530

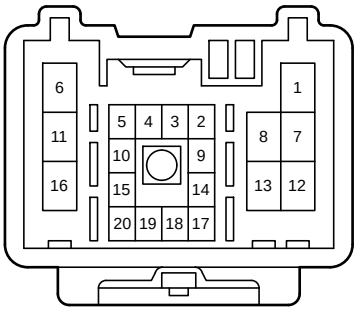

82824-52520

JN1
White

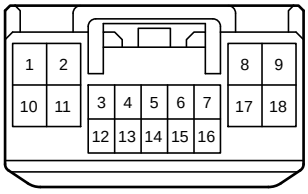

90980-12A21

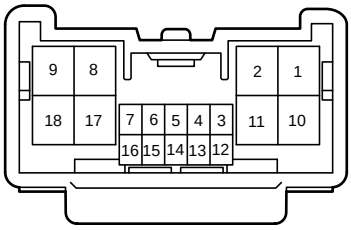

90980-12B07

KG2
White

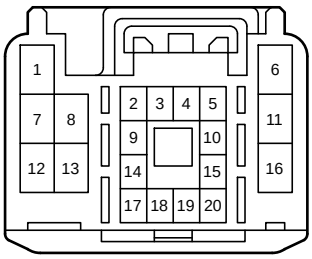

82824-52530

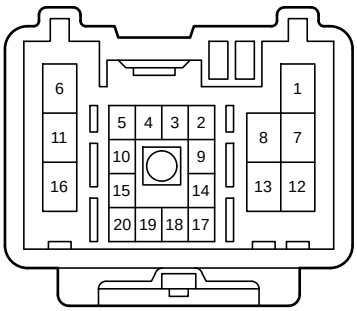

82824-52520

KN1
White

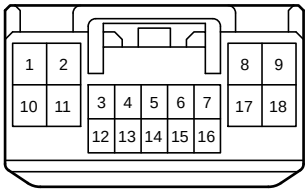

90980-12A21

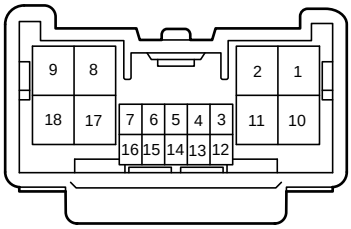

90980-12B07

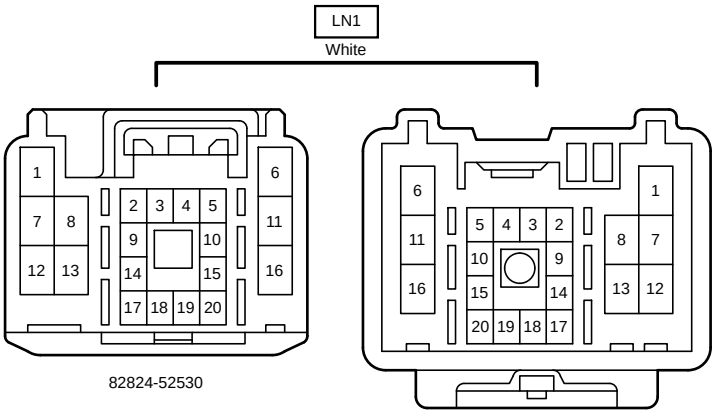
LN1
White
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
82824-52530
82824-52520

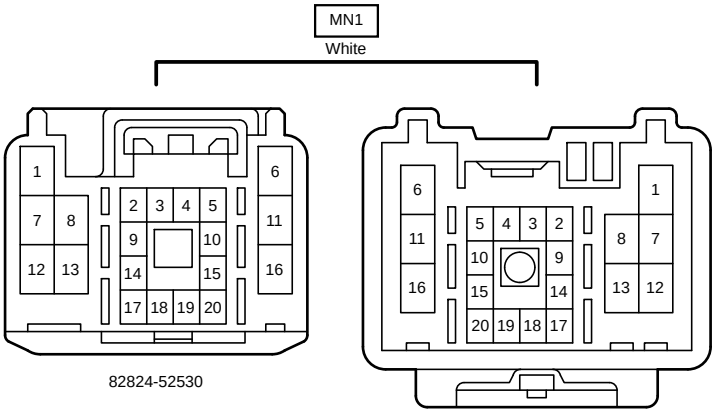
MN1
White
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
82824-52530
82824-52520