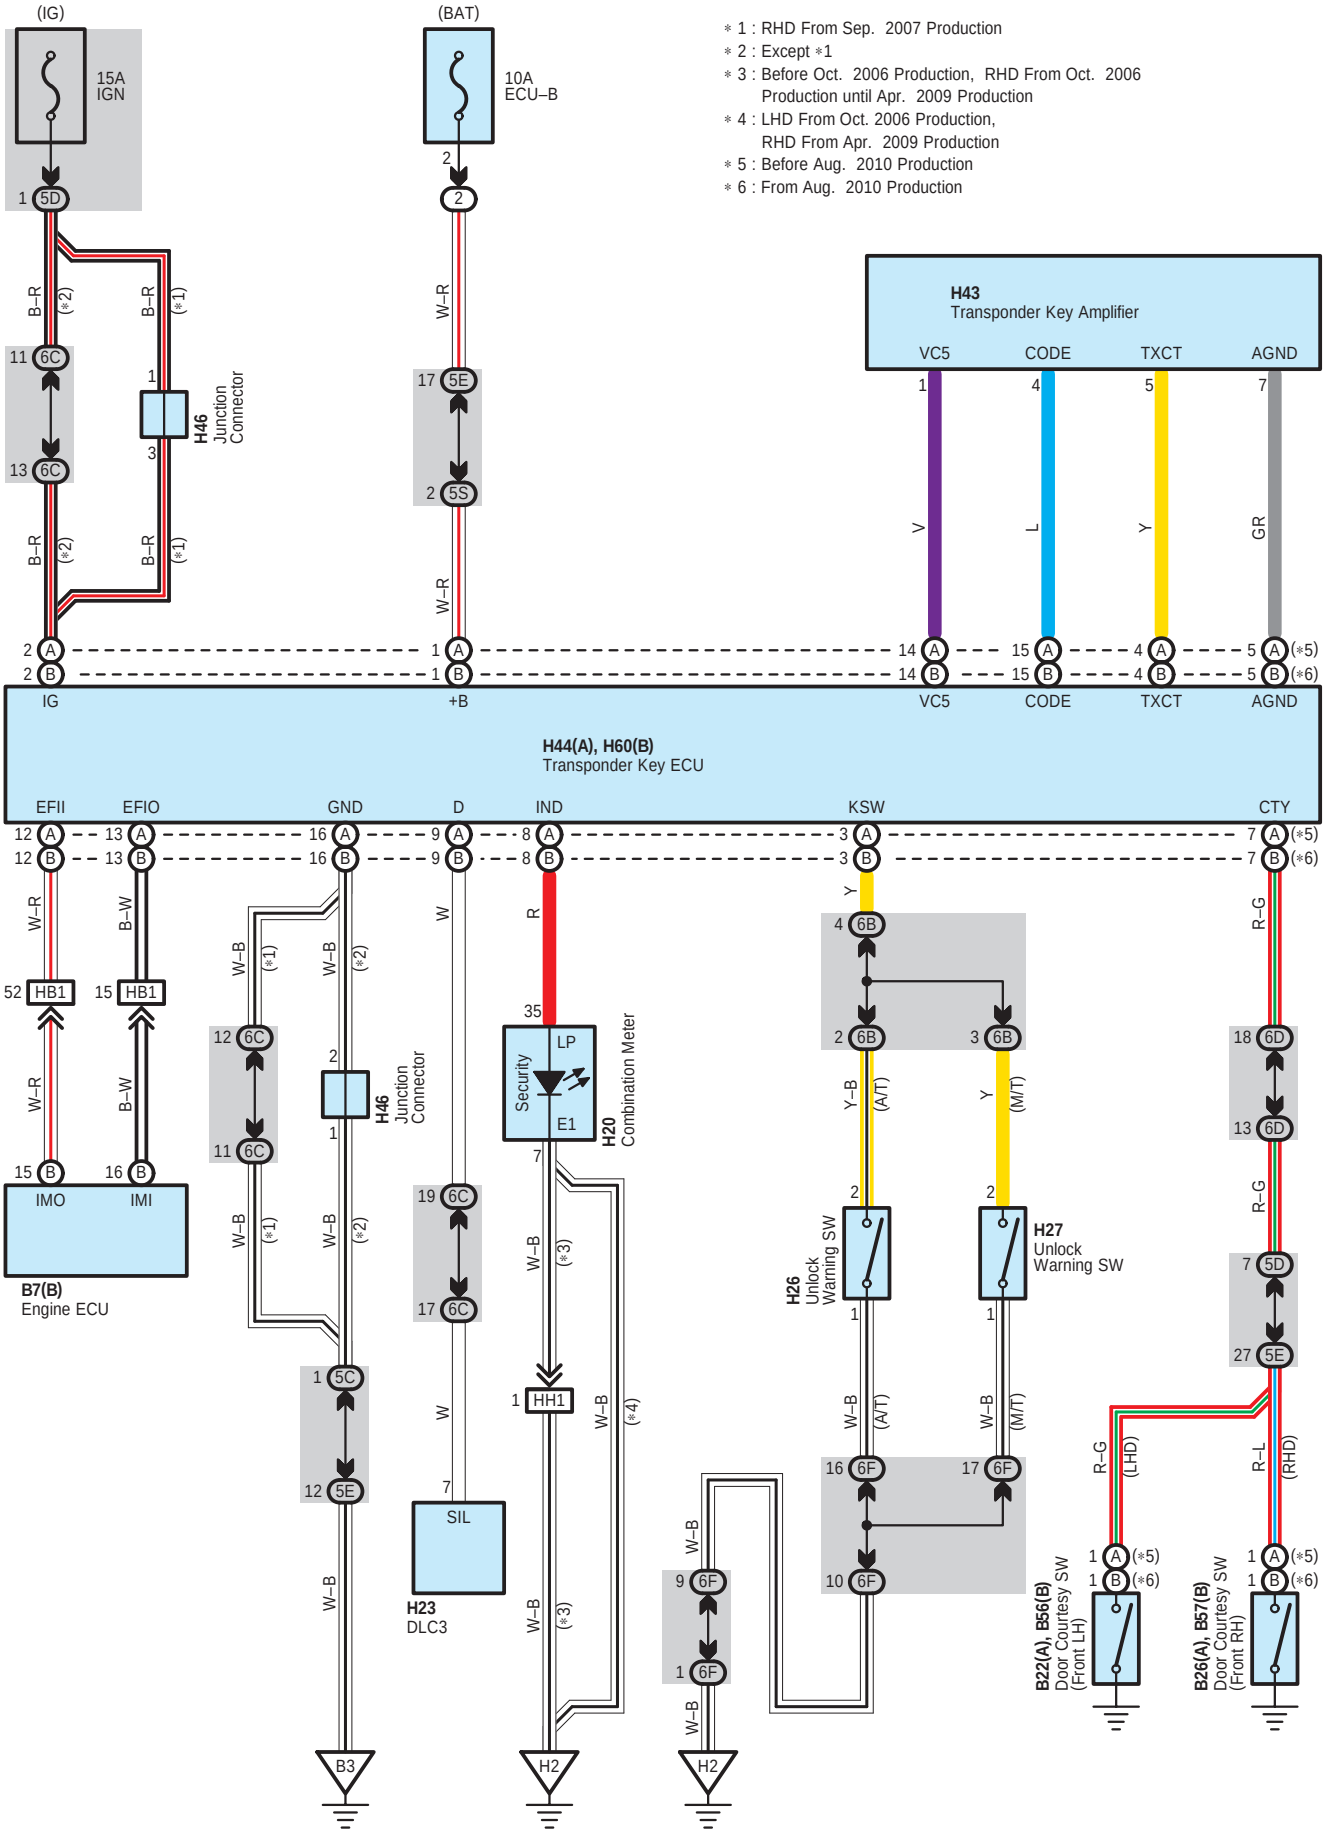
(IG)
15A
IGN
(BAT)
10A
ECU–B
∗1 : RHD From Sep. 2007 Production
∗2 : Except ∗1
∗3 : Before Oct. 2006 Production, RHD From Oct. 2006 Production until Apr. 2009 Production
∗4 : LHD From Oct. 2006 Production, RHD From Apr. 2009 Production
∗5 : Before Aug. 2010 Production
∗6 : From Aug. 2010 Production
H43
Transponder Key Amplifier
VC5
CODE
TXCT
AGND
H46
Junction Connector
IG
+B
VC5
CODE
TXCT
AGND
H44(A), H60(B)
Transponder Key ECU
EFII
EFIO
GND
D
IND
KSW
CTY
B7(B)
Engine ECU
IMO
IMI
H20
Combination Meter
Security
LP
E1
H26
Unlock Warning SW
H27
Unlock Warning SW
H23
DLC3
SIL
B22(A), B56(B)
Door Courtesy SW (Front LH)
B26(A), B57(B)
Door Courtesy SW (Front RH)
B3
H2
H2

B 7
White

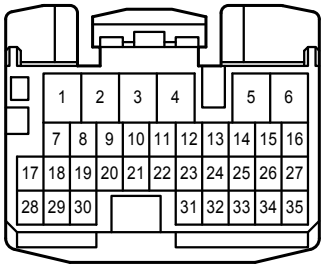

B 22
Black

B 26
Black

B 56
Black

B 57
Black

H 20
White

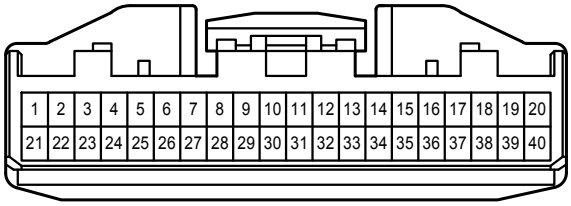

H 23
White

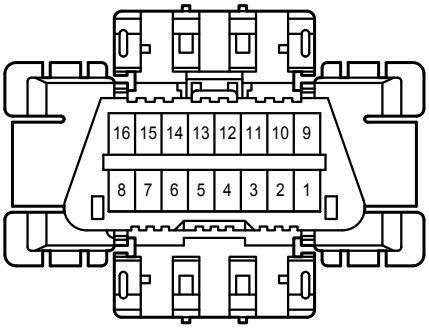

H 26
White



H 27
White



H 43
Black

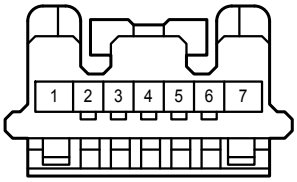

H 44
White

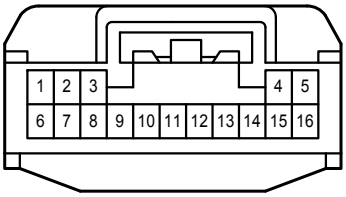

H 46
Black



H 60
Black

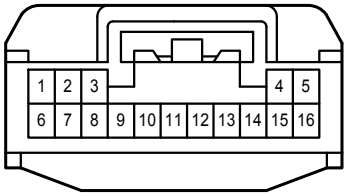

5C
White

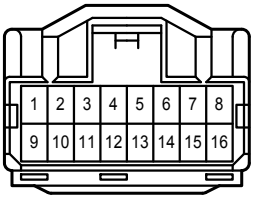

5D
White

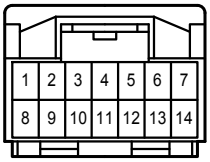

5E
White

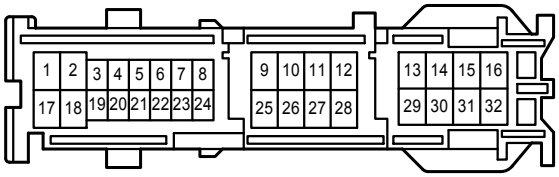

5S
White

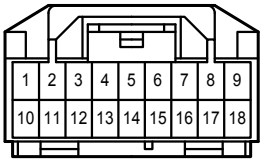

6B
Black

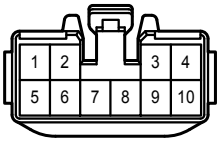

6C
Gray

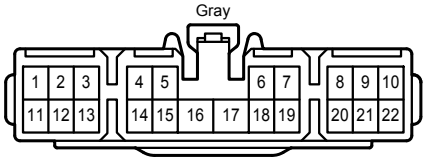

6D
Black

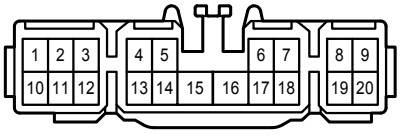

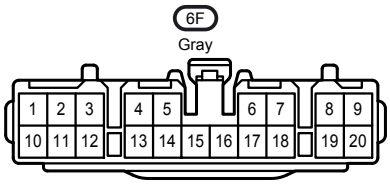
6F
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20

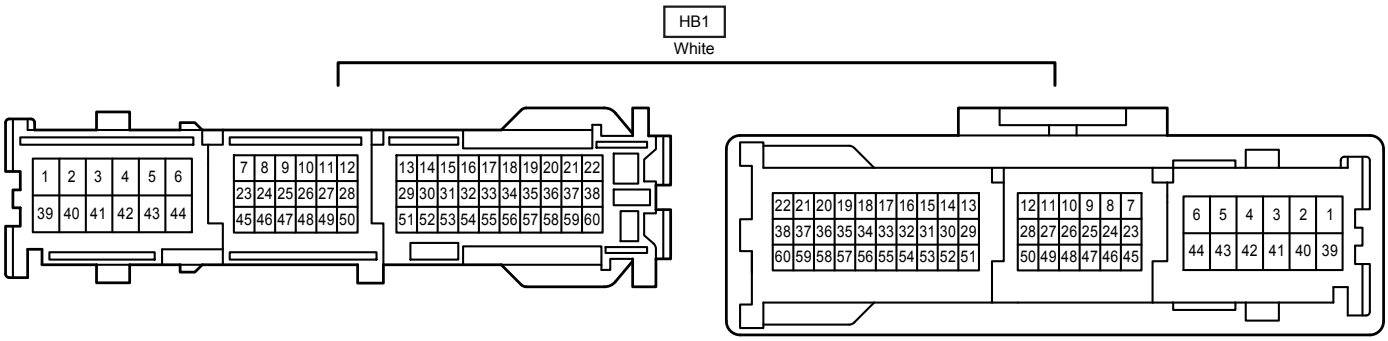
HB1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39

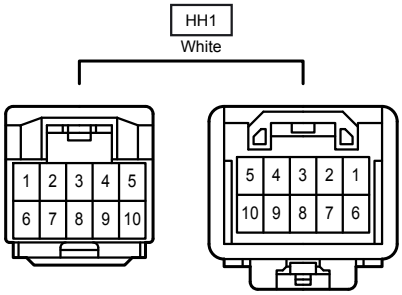
HH1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6