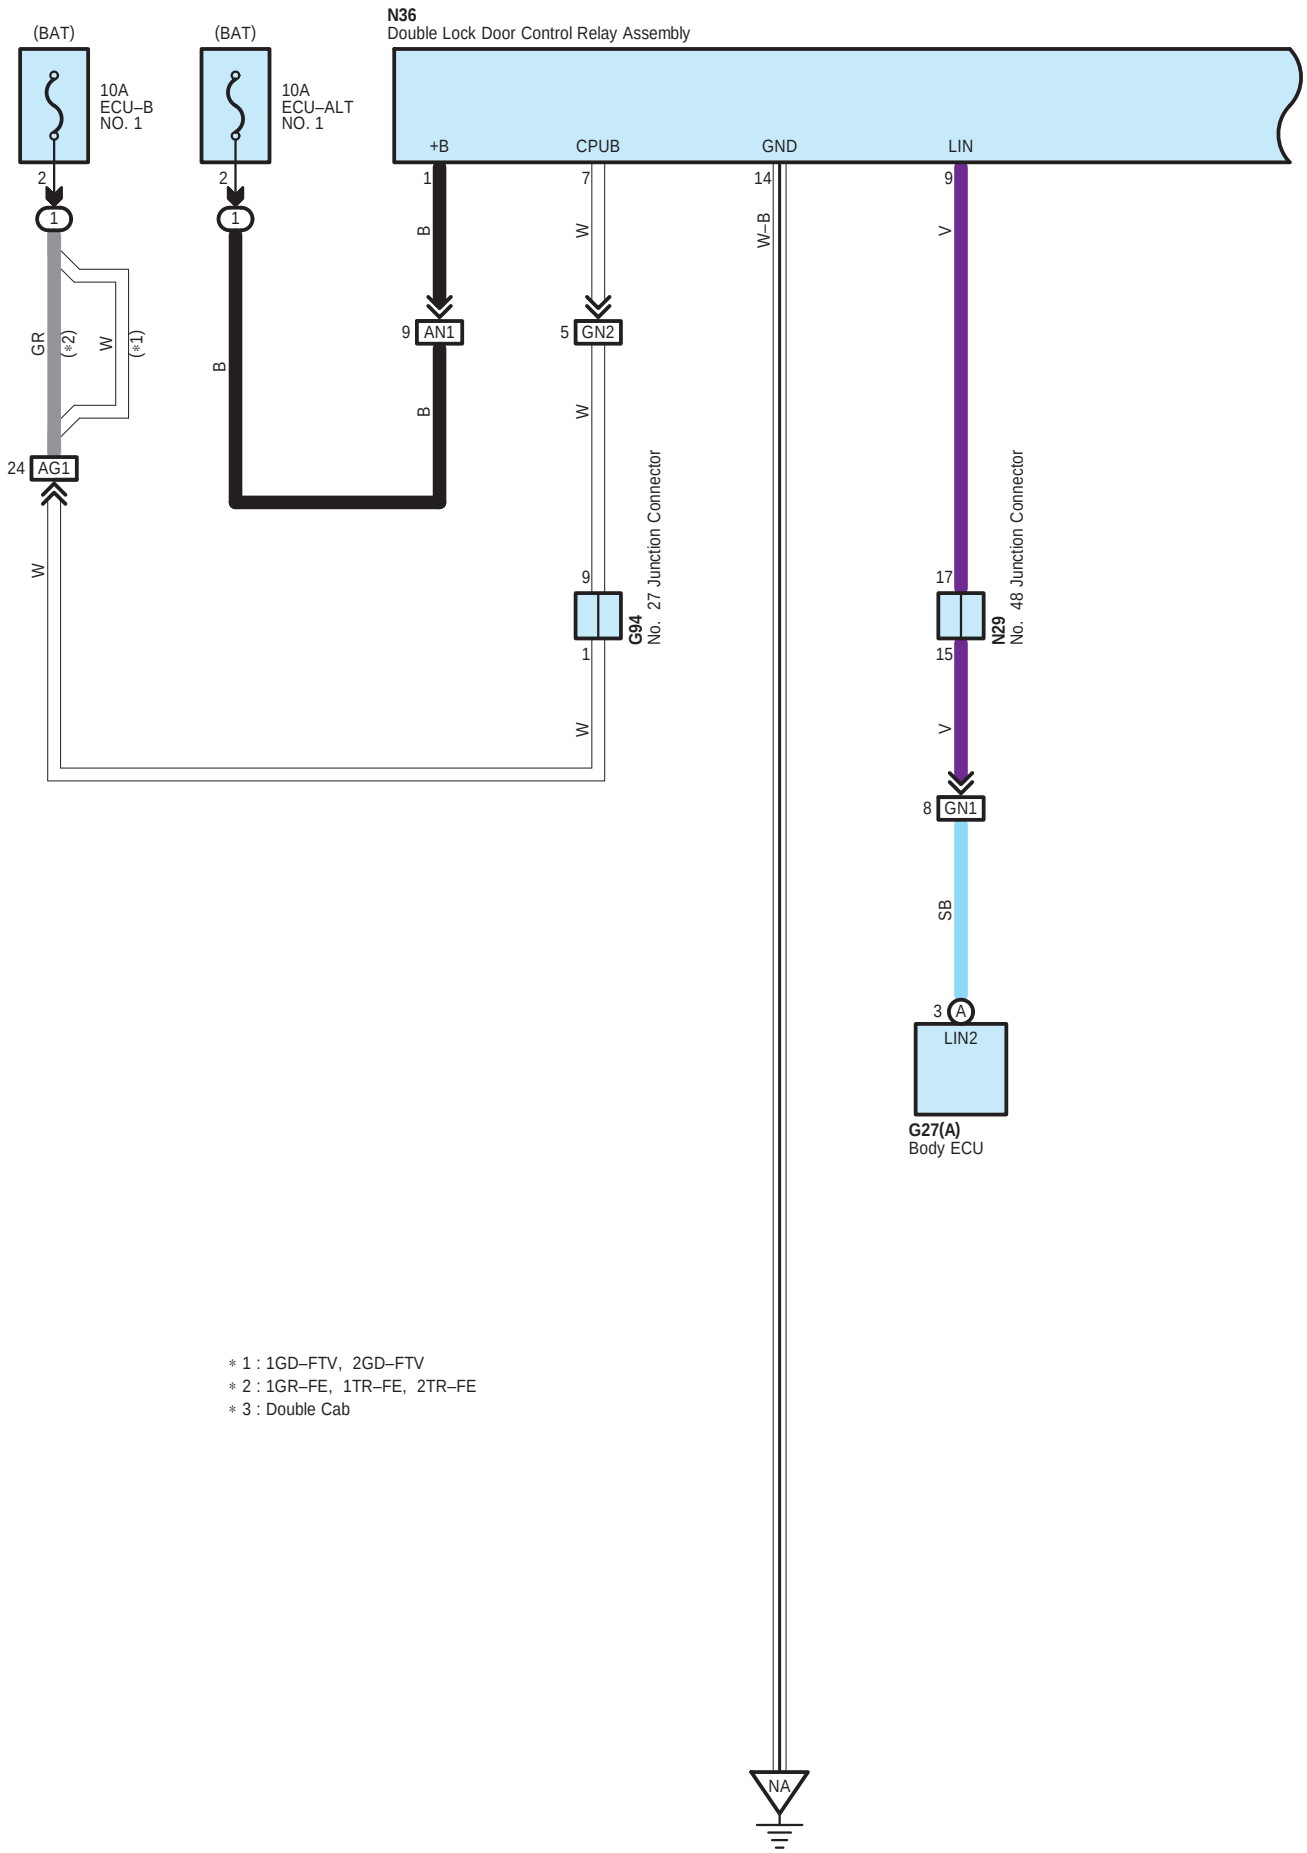

* 1 : 1GD–FTV, 2GD–FTV
* 2 : 1GR–FE, 1TR–FE, 2TR–FE
* 3 : Double Cab

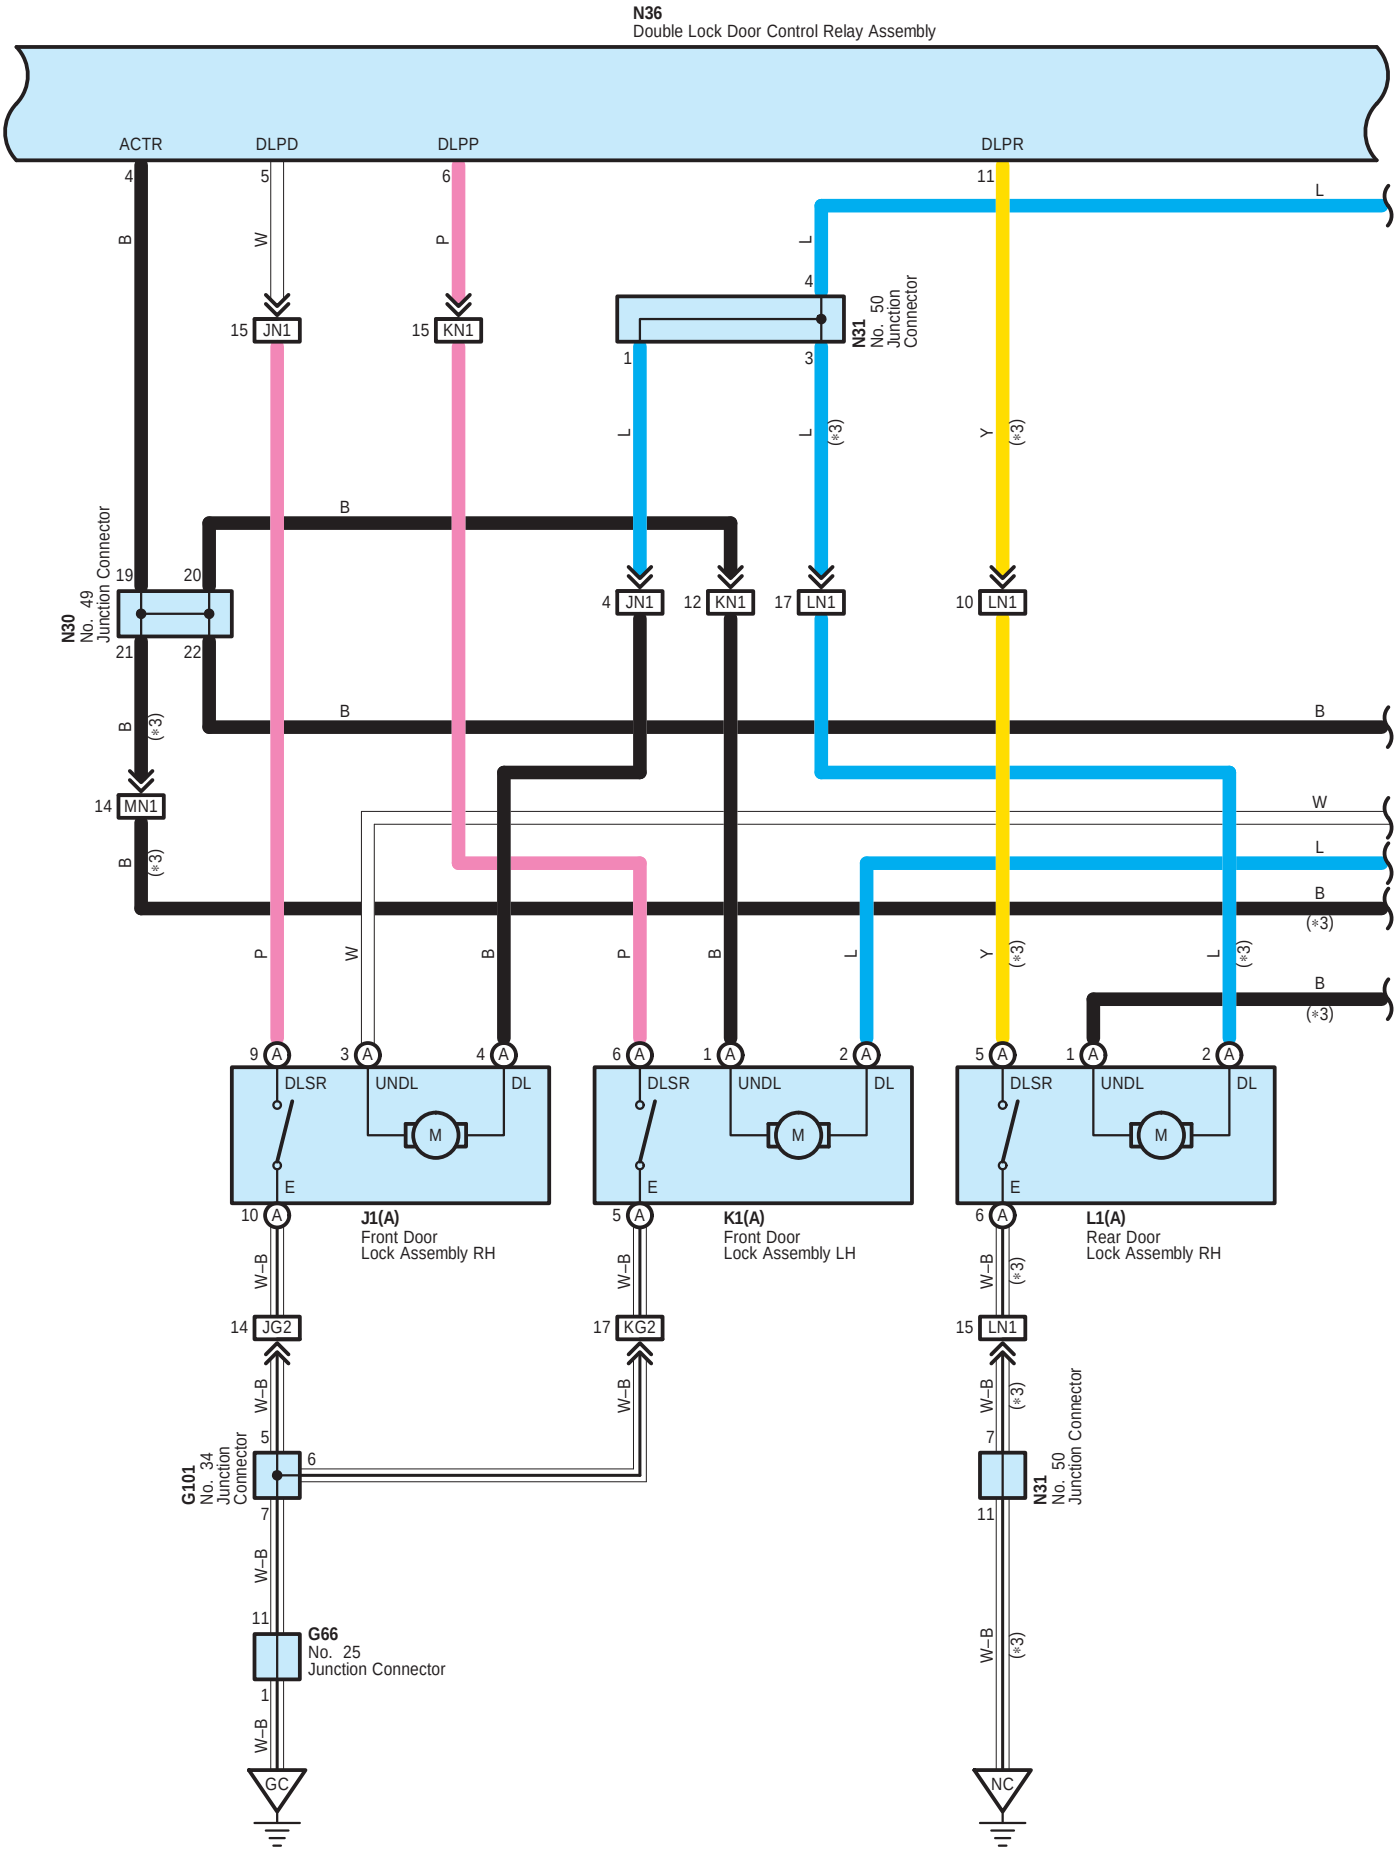
N36
Double Lock Door Control Relay Assembly
ACTR
DLPD
DLPP
DLPR
N30
No. 49
Junction Connector
N31
No. 50
Junction Connector
JN1
KN1
LN1
MN1
JG2
KG2
G101
No. 34
Junction Connector
G66
No. 25
Junction Connector
J1(A)
Front Door
Lock Assembly RH
K1(A)
Front Door
Lock Assembly LH
L1(A)
Rear Door
Lock Assembly RH
DLSR
UNDL
DL
M
E
GC
NC
(*3)

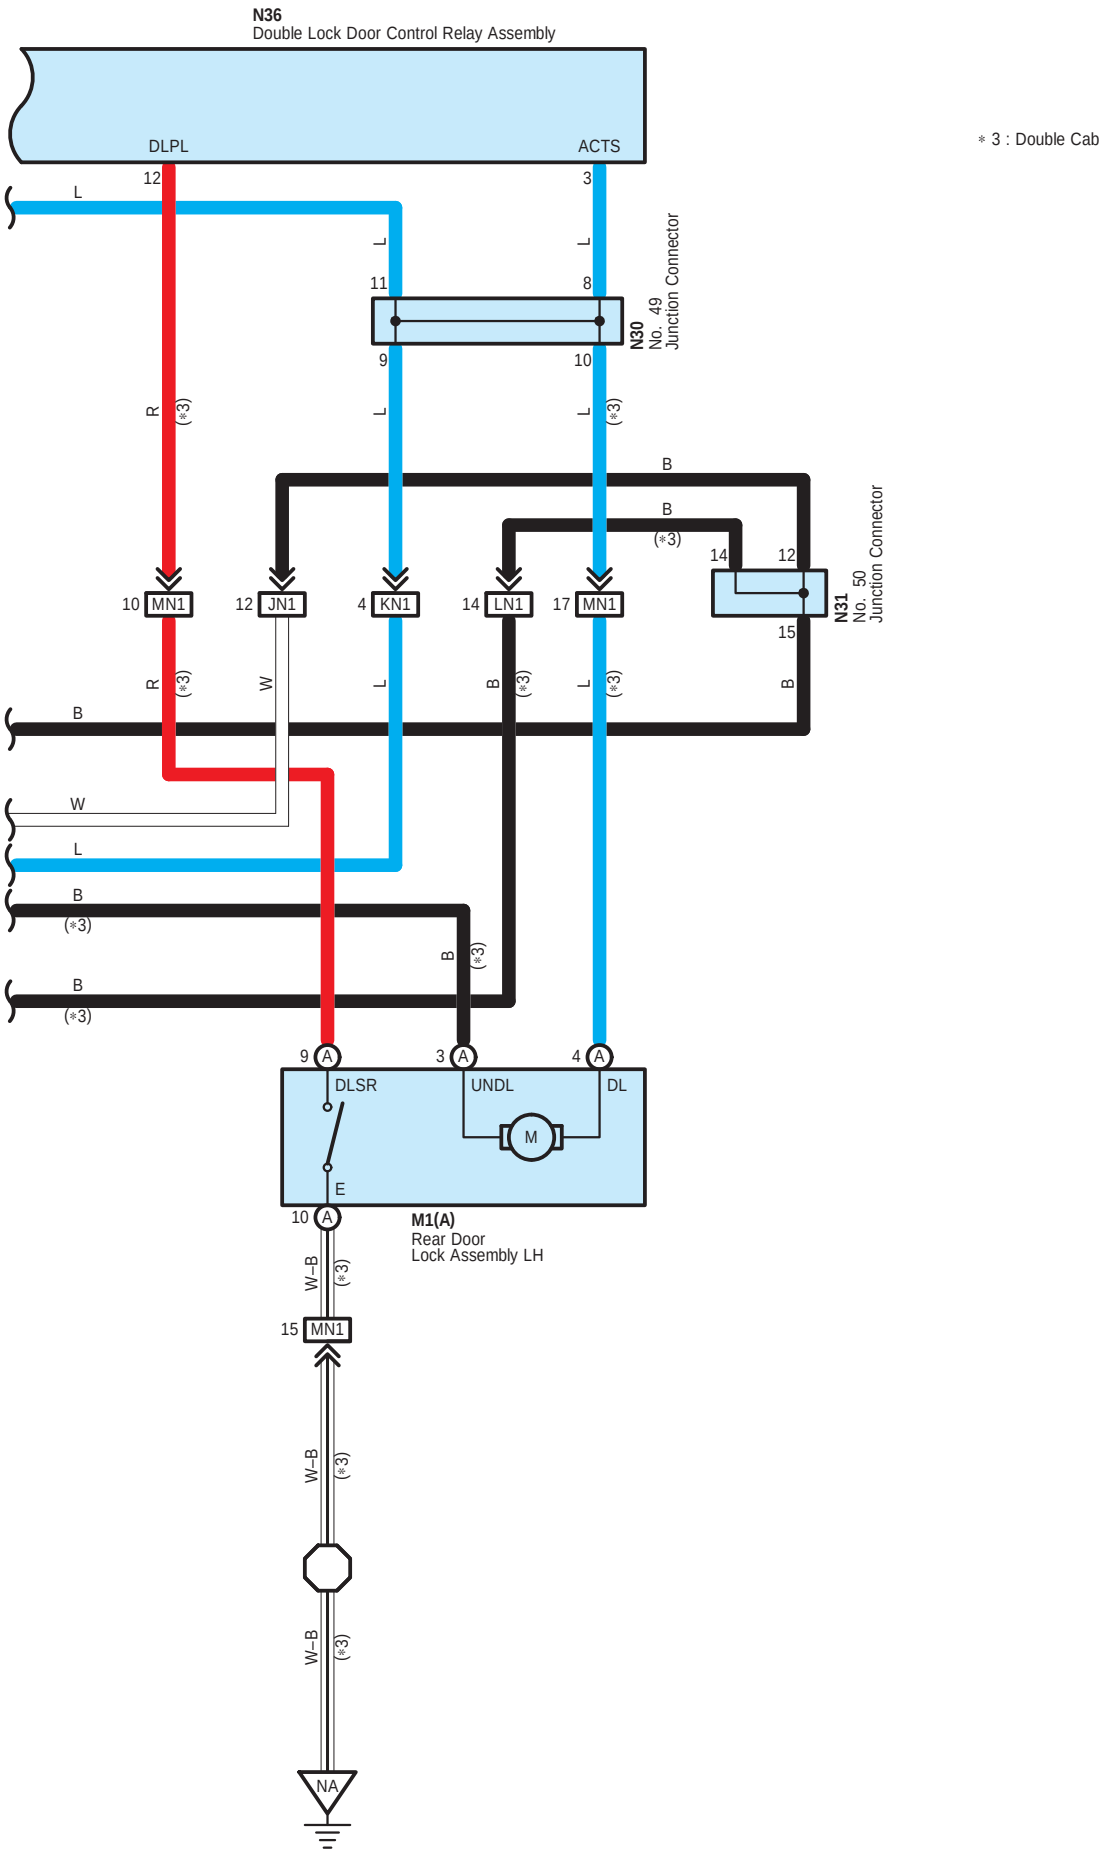
N36
Double Lock Door Control Relay Assembly
DLPL
ACTS
12
3
L
L
L
11
8
N30
No. 49
Junction Connector
9
10
R
(*3)
L
L
(*3)
B
B
(*3)
14
12
N31
No. 50
Junction Connector
15
10 MN1
12 JN1
4 KN1
14 LN1
17 MN1
R
(*3)
W
L
B
(*3)
L
(*3)
B
B
W
L
B
(*3)
B
(*3)
B
(*3)
9 A
3 A
4 A
DLSR
UNDL
DL
M
E
10 A
M1(A)
Rear Door
Lock Assembly LH
W–B
(*3)
15 MN1
W–B
(*3)
W–B
(*3)
NA

∗ 3 : Double Cab

G27
White

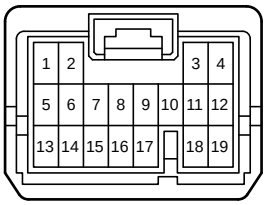

90980-12A45

G66
Black

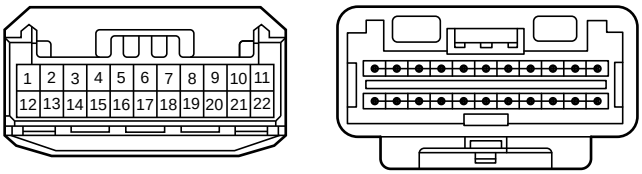

90980-12B54

G94
Black

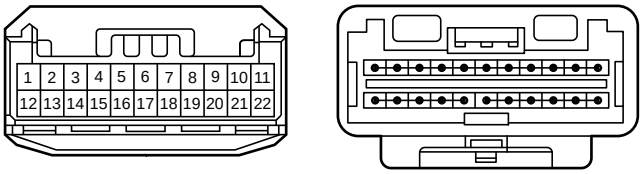

90980-12B54

G101
Black

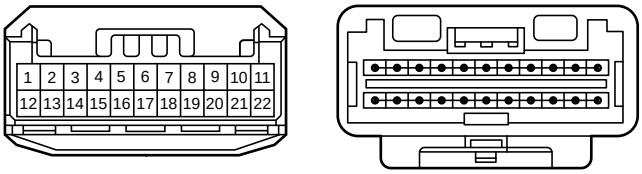

90980-12B54

J1
White

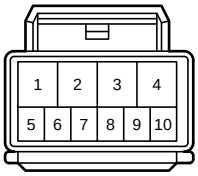

90980-12226

K1
White

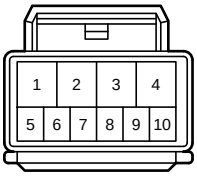

90980-12226

L1
White

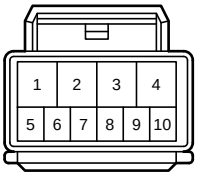

90980-12226

M1
White

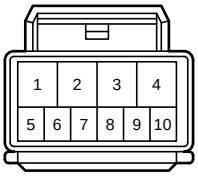

90980-12226

N29
Black

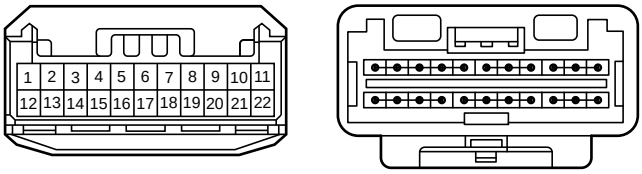

90980-12B54

N30
Black

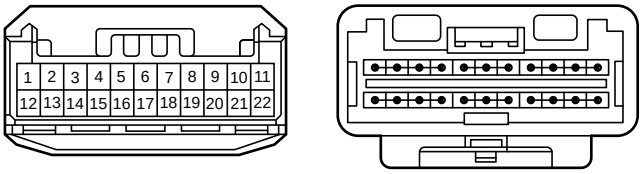

90980-12B54

N31
Black

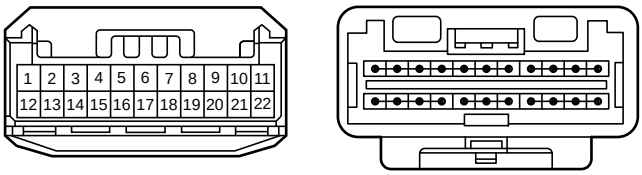

90980-12B54

N36
White



90980-10807

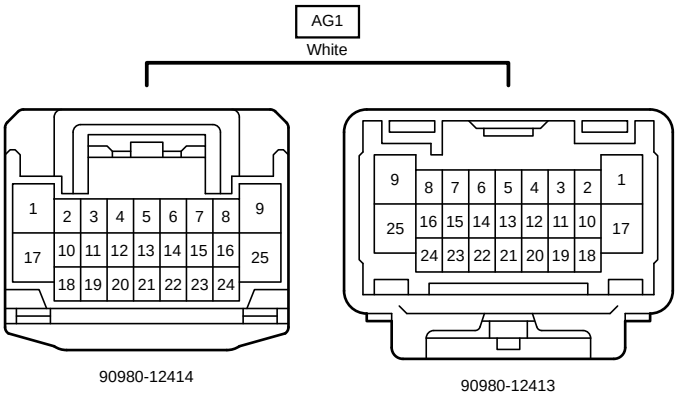
AG1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18
90980-12414
90980-12413

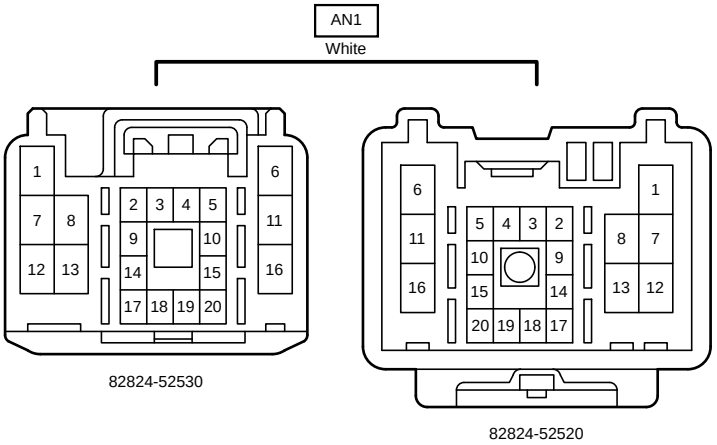
AN1
White
1 6
7 8 2 3 4 5 11
9 10
12 13 14 15 16
17 18 19 20
6 1
11 5 4 3 2 8 7
10 9
16 15 14 13 12
20 19 18 17
82824-52530
82824-52520

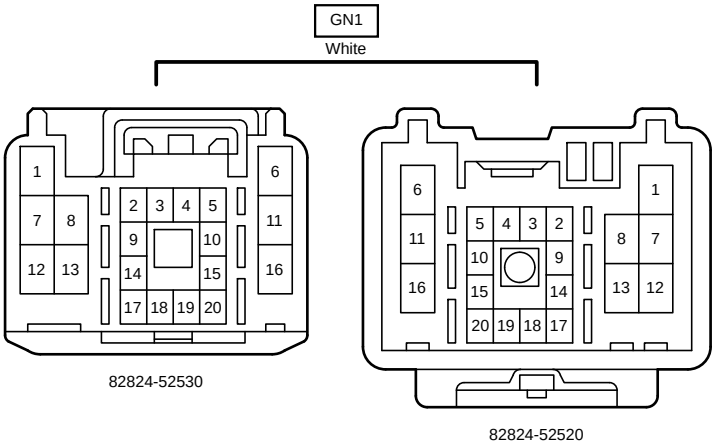
GN1
White
1 6
7 8 2 3 4 5 11
9 10
12 13 14 15 16
17 18 19 20
6 1
11 5 4 3 2 8 7
10 9
16 15 14 13 12
20 19 18 17
82824-52530
82824-52520

GN2
White

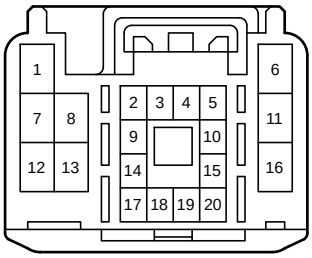

82824-52530

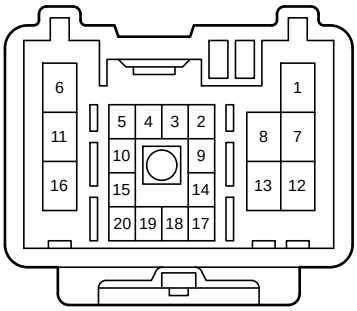

82824-52520

JG2
White

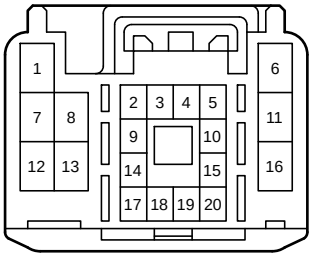

82824-52530

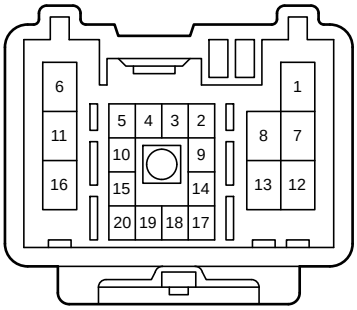

82824-52520

JN1
White

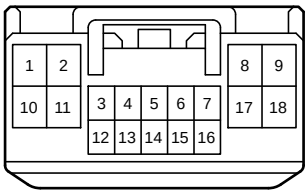

90980-12A21

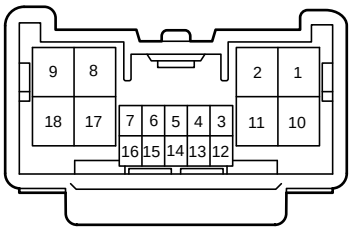

90980-12B07

KG2
White

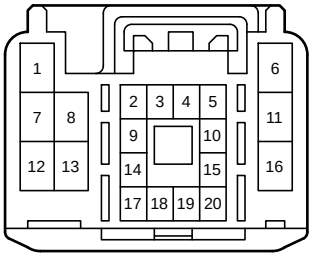

82824-52530

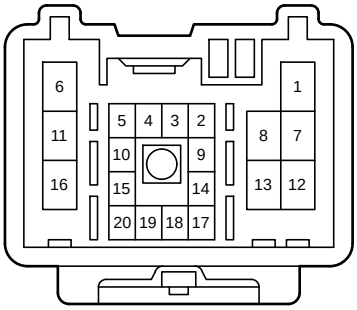

82824-52520

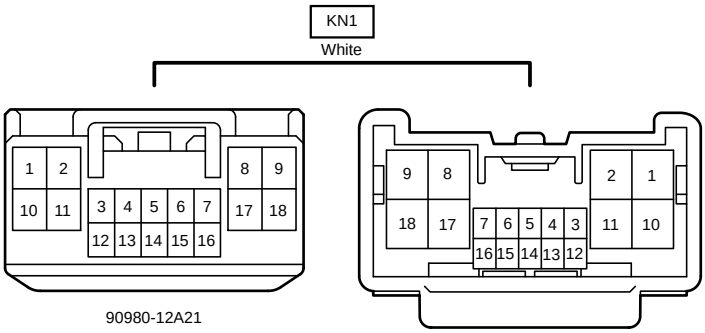

90980-12A21

90980-12B07

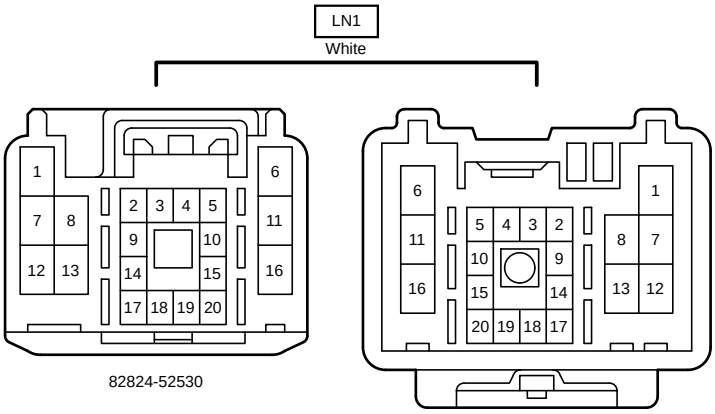

82824-52530

82824-52520

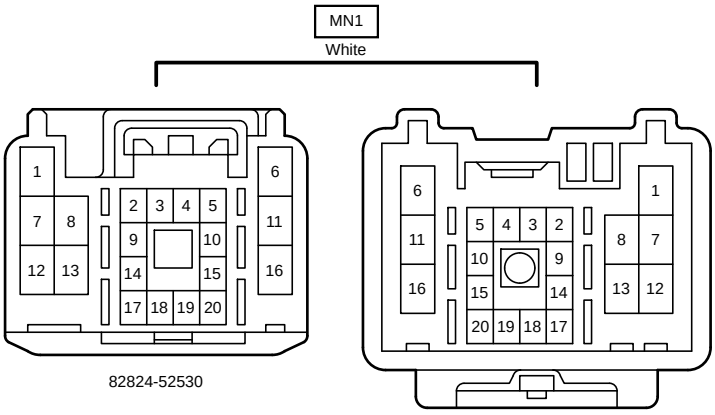

82824-52530

82824-52520