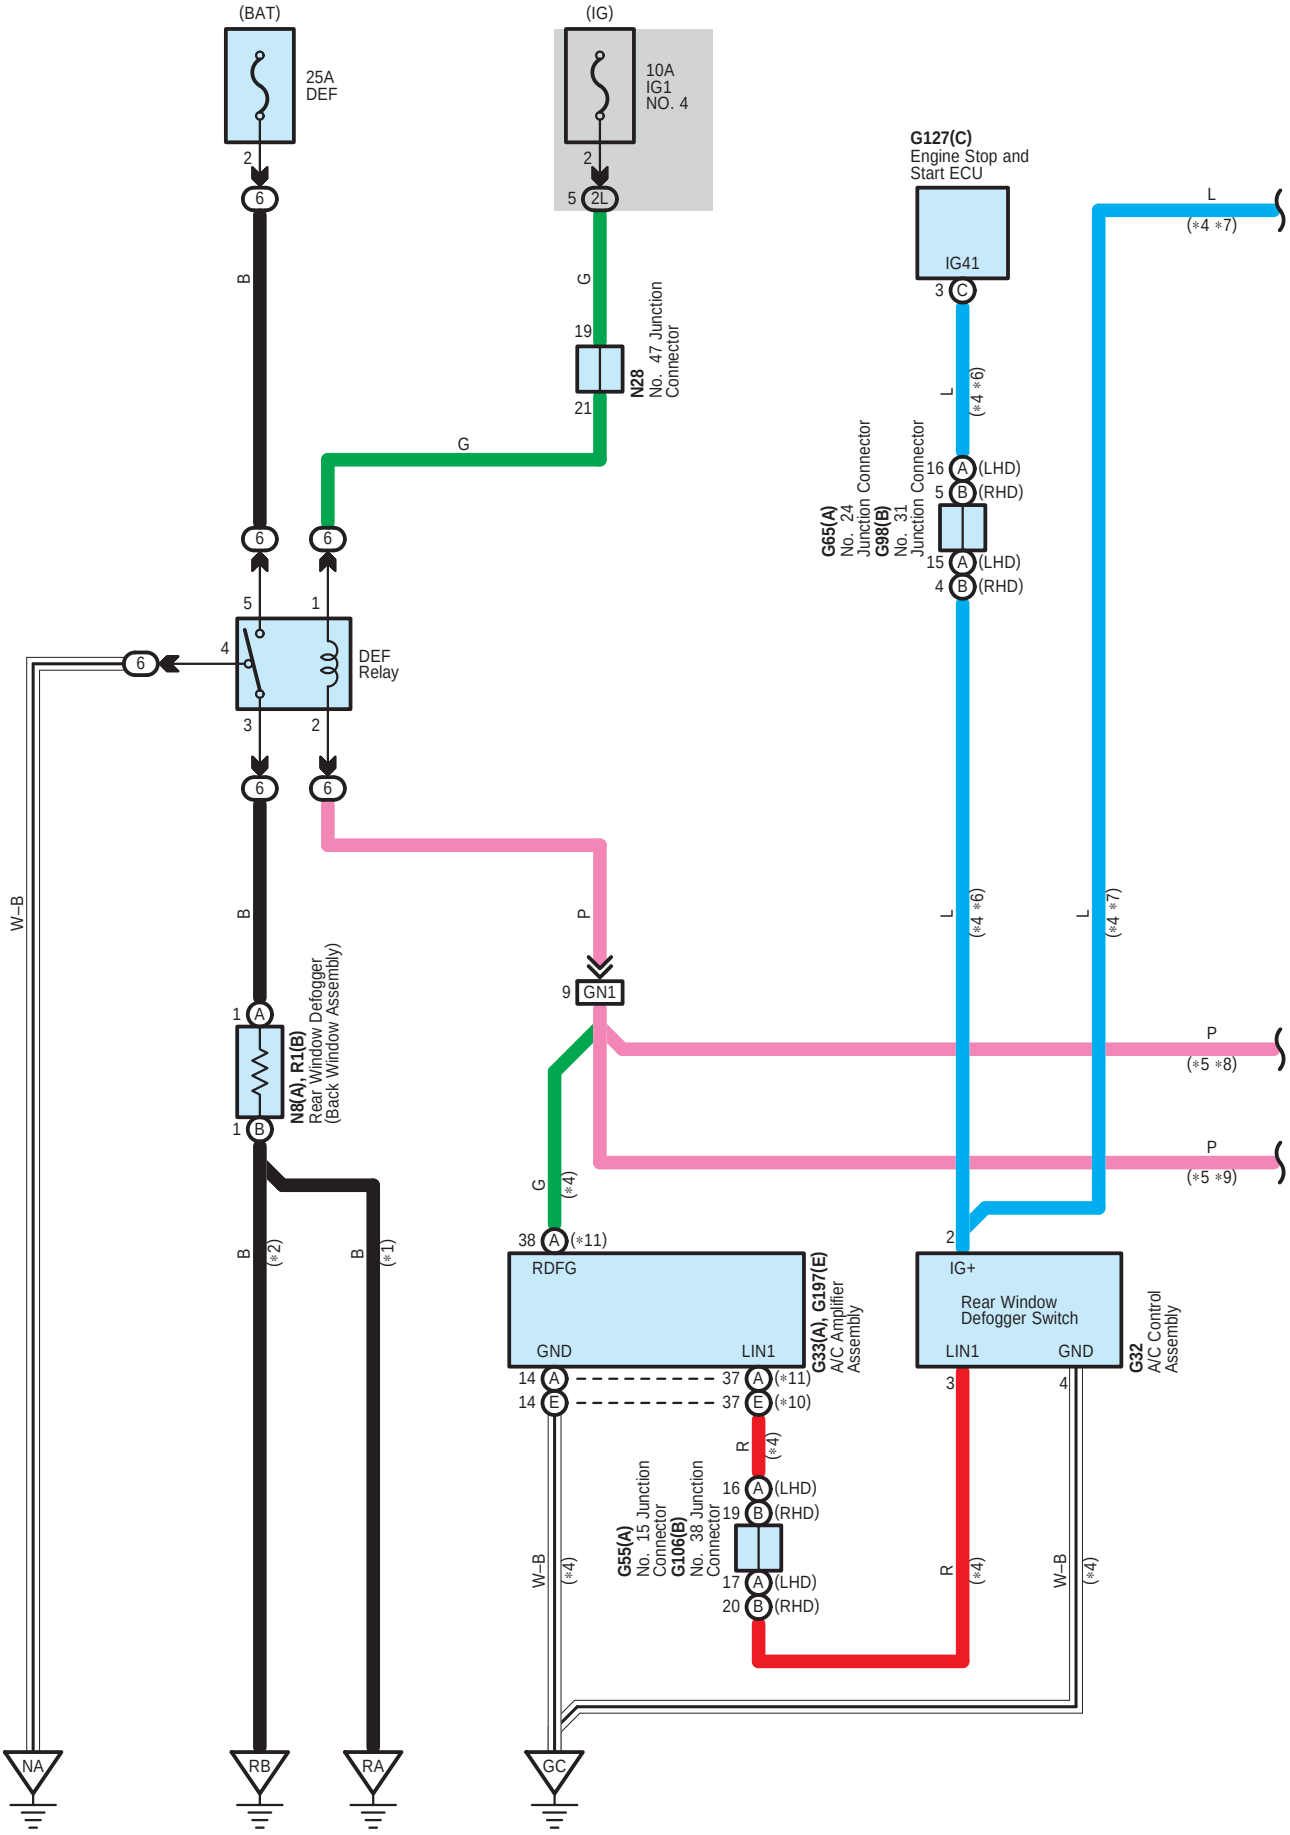
(BAT)
25A
DEF
(IG)
10A
IG1
NO. 4
2L
N28
No. 47 Junction
Connector
G127(C)
Engine Stop and
Start ECU
IG41
G65(A)
No. 24
Junction Connector
G98(B)
No. 31
Junction Connector
(LHD)
(RHD)
DEF
Relay
N8(A), R1(B)
Rear Window Defogger
(Back Window Assembly)
GN1
RDFG
GND
LIN1
G33(A), G197(E)
A/C Amplifier
Assembly
IG+
Rear Window
Defogger Switch
G32
A/C Control
Assembly
G55(A)
No. 15 Junction
Connector
G106(B)
No. 38 Junction
Connector
NA
RB
RA
GC

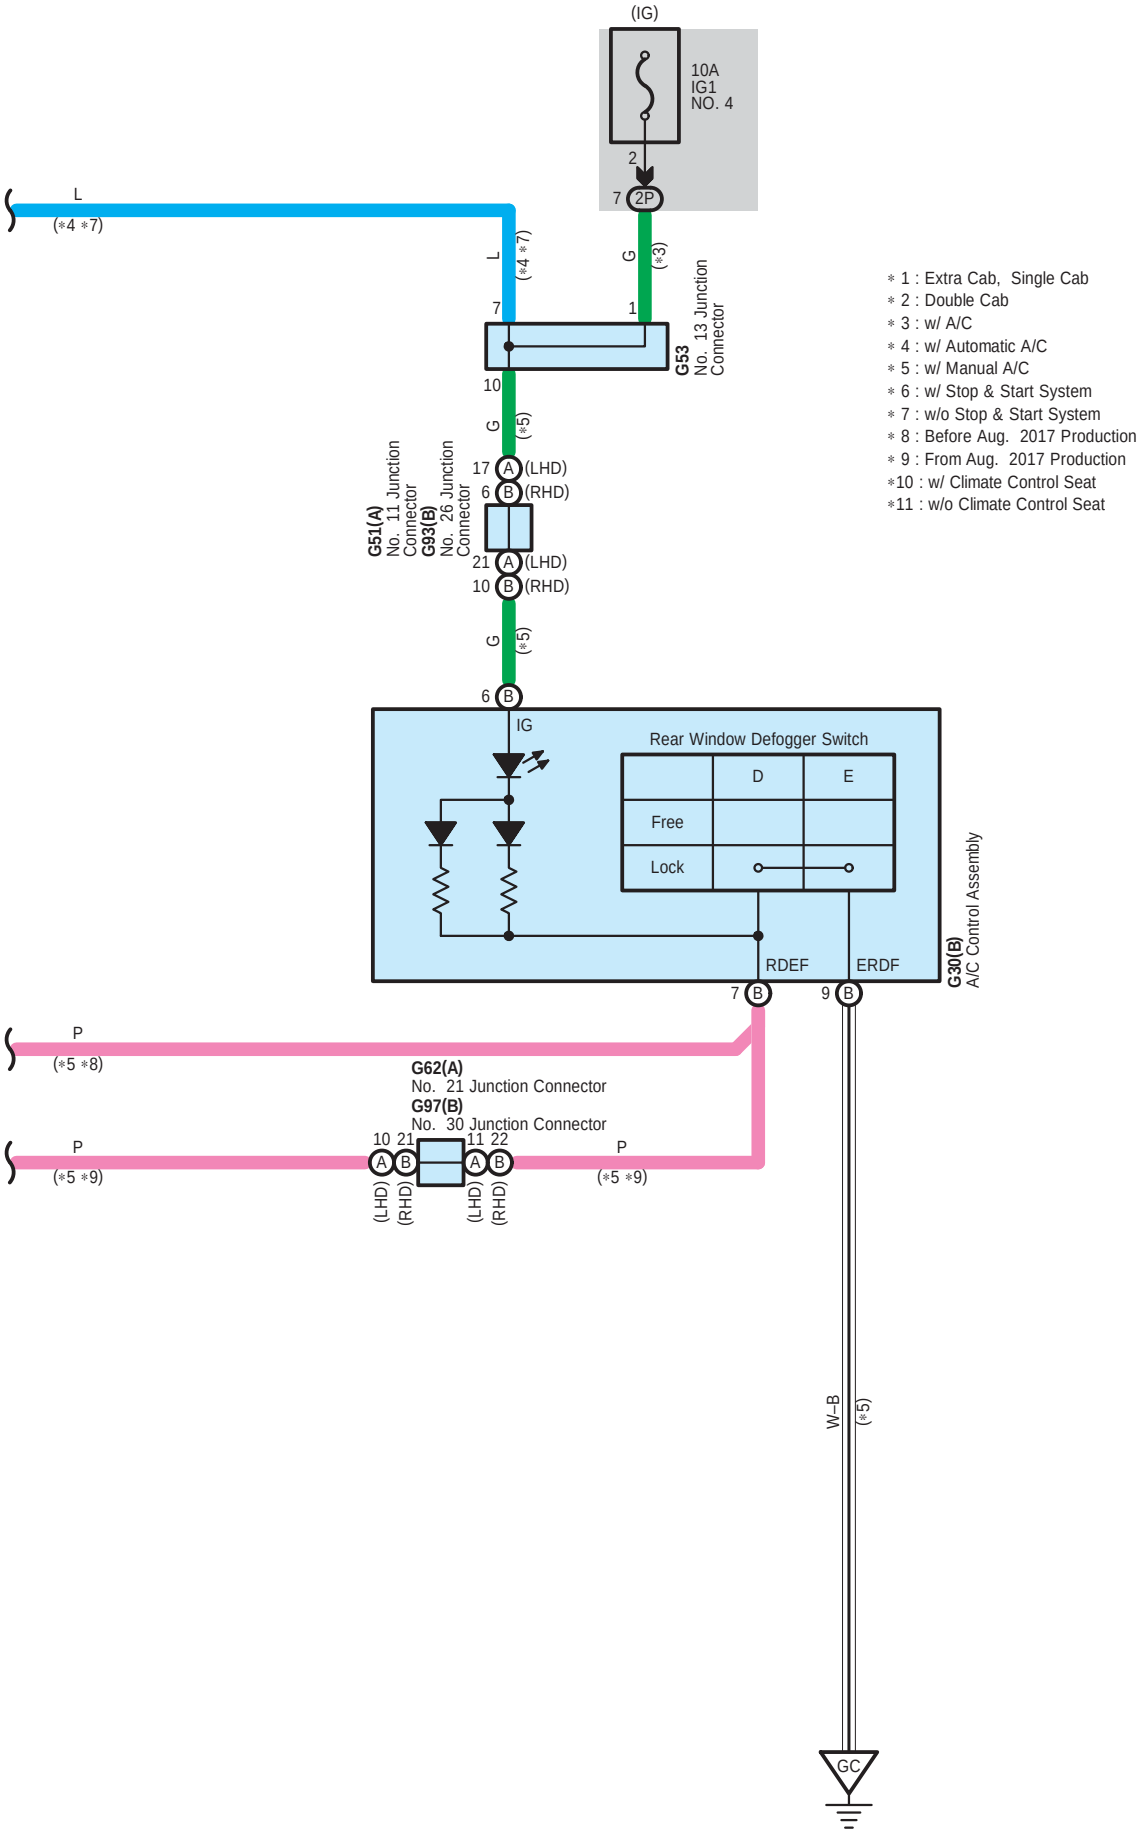
(IG)
10A
IG1
NO. 4
2
7 2P
L
(*4 *7)
L
(*4 *7)
G
(*3)
7
1
G53
No. 13 Junction
Connector
10
G
(*5)
G51(A)
No. 11 Junction
Connector
G93(B)
No. 26 Junction
Connector
17 A (LHD)
6 B (RHD)
21 A (LHD)
10 B (RHD)
G
(*5)
6 B
IG
Rear Window Defogger Switch
D
E
Free
Lock
RDEF
ERDF
7 B
9 B
G30(B)
A/C Control Assembly
P
(*5 *8)
G62(A)
No. 21 Junction Connector
G97(B)
No. 30 Junction Connector
P
(*5 *9)
10 21
11 22
A B
A B
(LHD)
(RHD)
(LHD)
(RHD)
P
(*5 *9)
W–B
(*5)
GC
* 1 : Extra Cab, Single Cab
* 2 : Double Cab
* 3 : w/ A/C
* 4 : w/ Automatic A/C
* 5 : w/ Manual A/C
* 6 : w/ Stop & Start System
* 7 : w/o Stop & Start System
* 8 : Before Aug. 2017 Production
* 9 : From Aug. 2017 Production
*10 : w/ Climate Control Seat
*11 : w/o Climate Control Seat

G30
Black

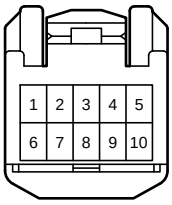

90980-12361

G32
White

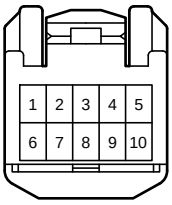

90980-12361

G33
White

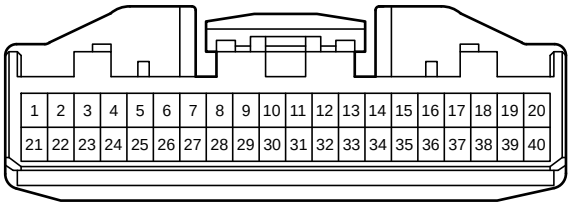

90980-12557

G51
Black

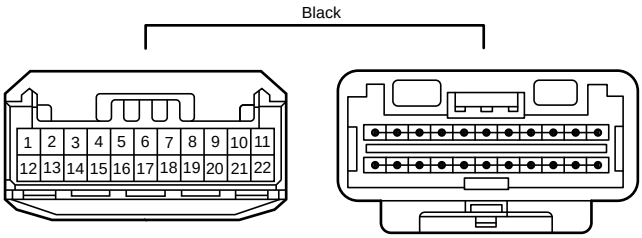

90980-12B54

G53
Black

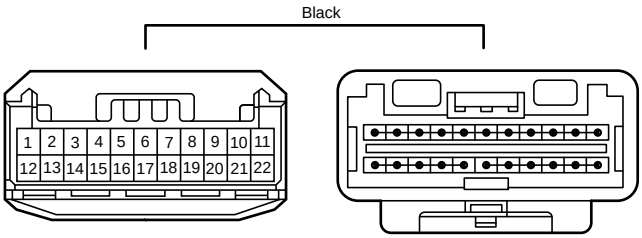

90980-12B54

G55
Black

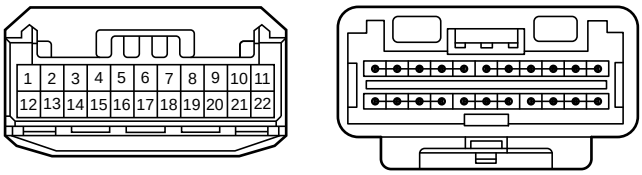

90980-12B54

G62
Black

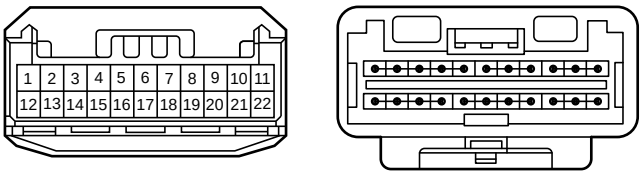

90980-12B54

G65
Black

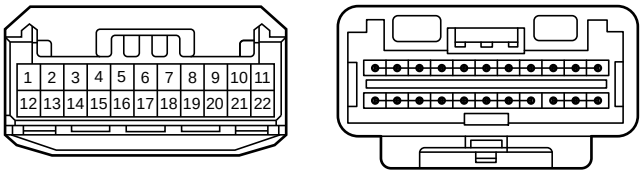

90980-12B54

G93
Black

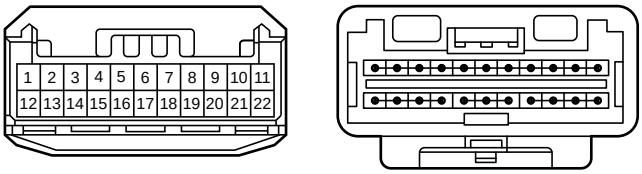

90980-12B54

G97
Black

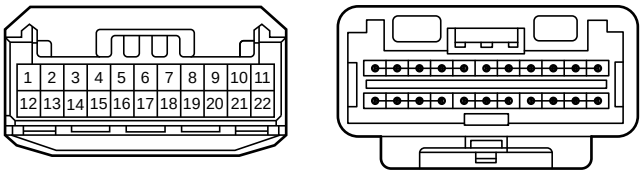

90980-12B54

G98
Black

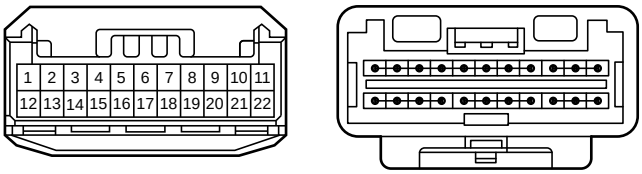

90980-12B54

G106
Black

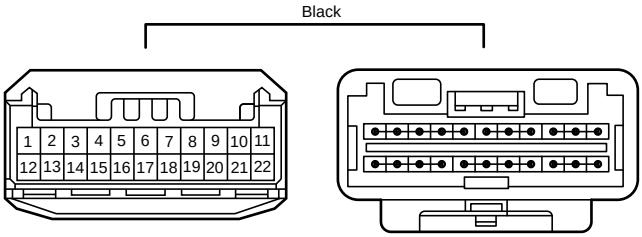

90980-12B54

G127
Black

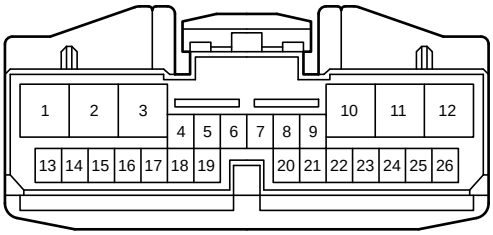

82824-12510

G197
White

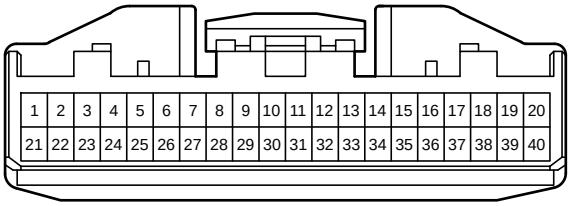

90980-12557

N8
Black

90980-10359

N28
Black

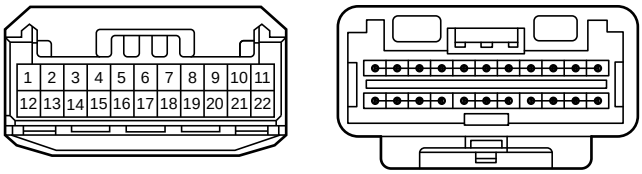

90980-12B54

R1
Black

90980-10359

2L
White

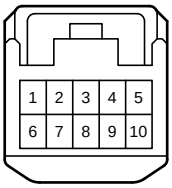

90980-12368

2P
White

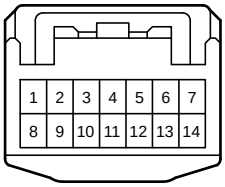

90980-12370

GN1
White

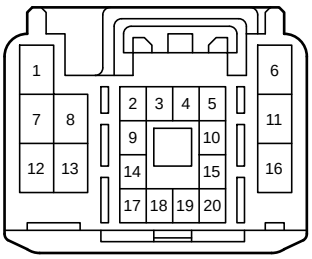

82824-52530

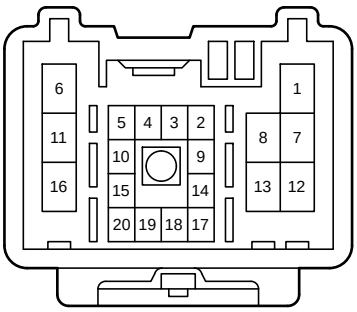

82824-52520