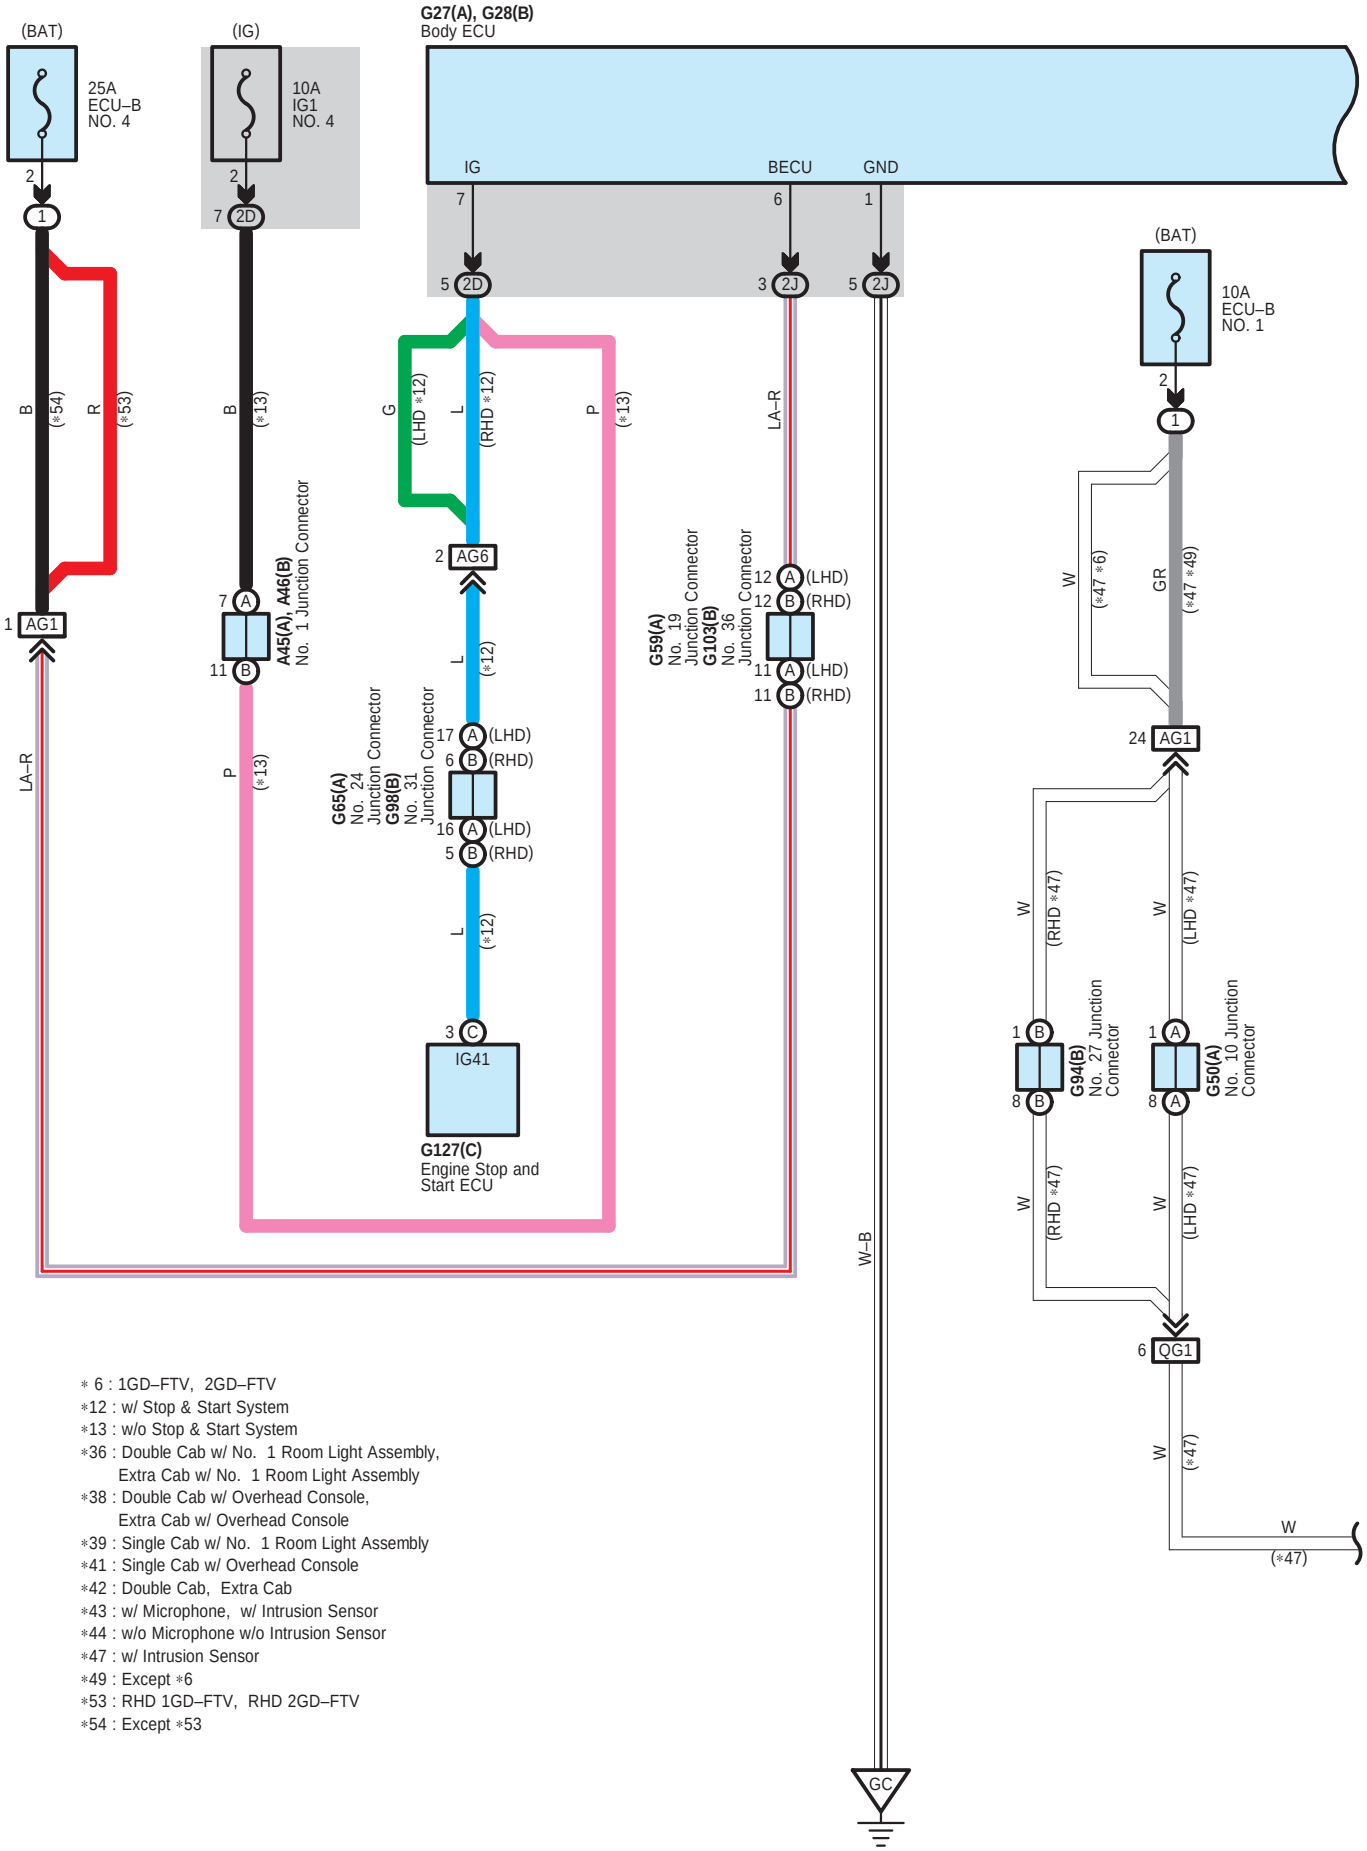

∗ 6 : 1GD–FTV, 2GD–FTV
∗12 : w/ Stop & Start System
∗13 : w/o Stop & Start System
∗36 : Double Cab w/ No. 1 Room Light Assembly,
Extra Cab w/ No. 1 Room Light Assembly
∗38 : Double Cab w/ Overhead Console,
Extra Cab w/ Overhead Console
∗39 : Single Cab w/ No. 1 Room Light Assembly
∗41 : Single Cab w/ Overhead Console
∗42 : Double Cab, Extra Cab
∗43 : w/ Microphone, w/ Intrusion Sensor
∗44 : w/o Microphone w/o Intrusion Sensor
∗47 : w/ Intrusion Sensor
∗49 : Except ∗6
∗53 : RHD 1GD–FTV, RHD 2GD–FTV
∗54 : Except ∗53

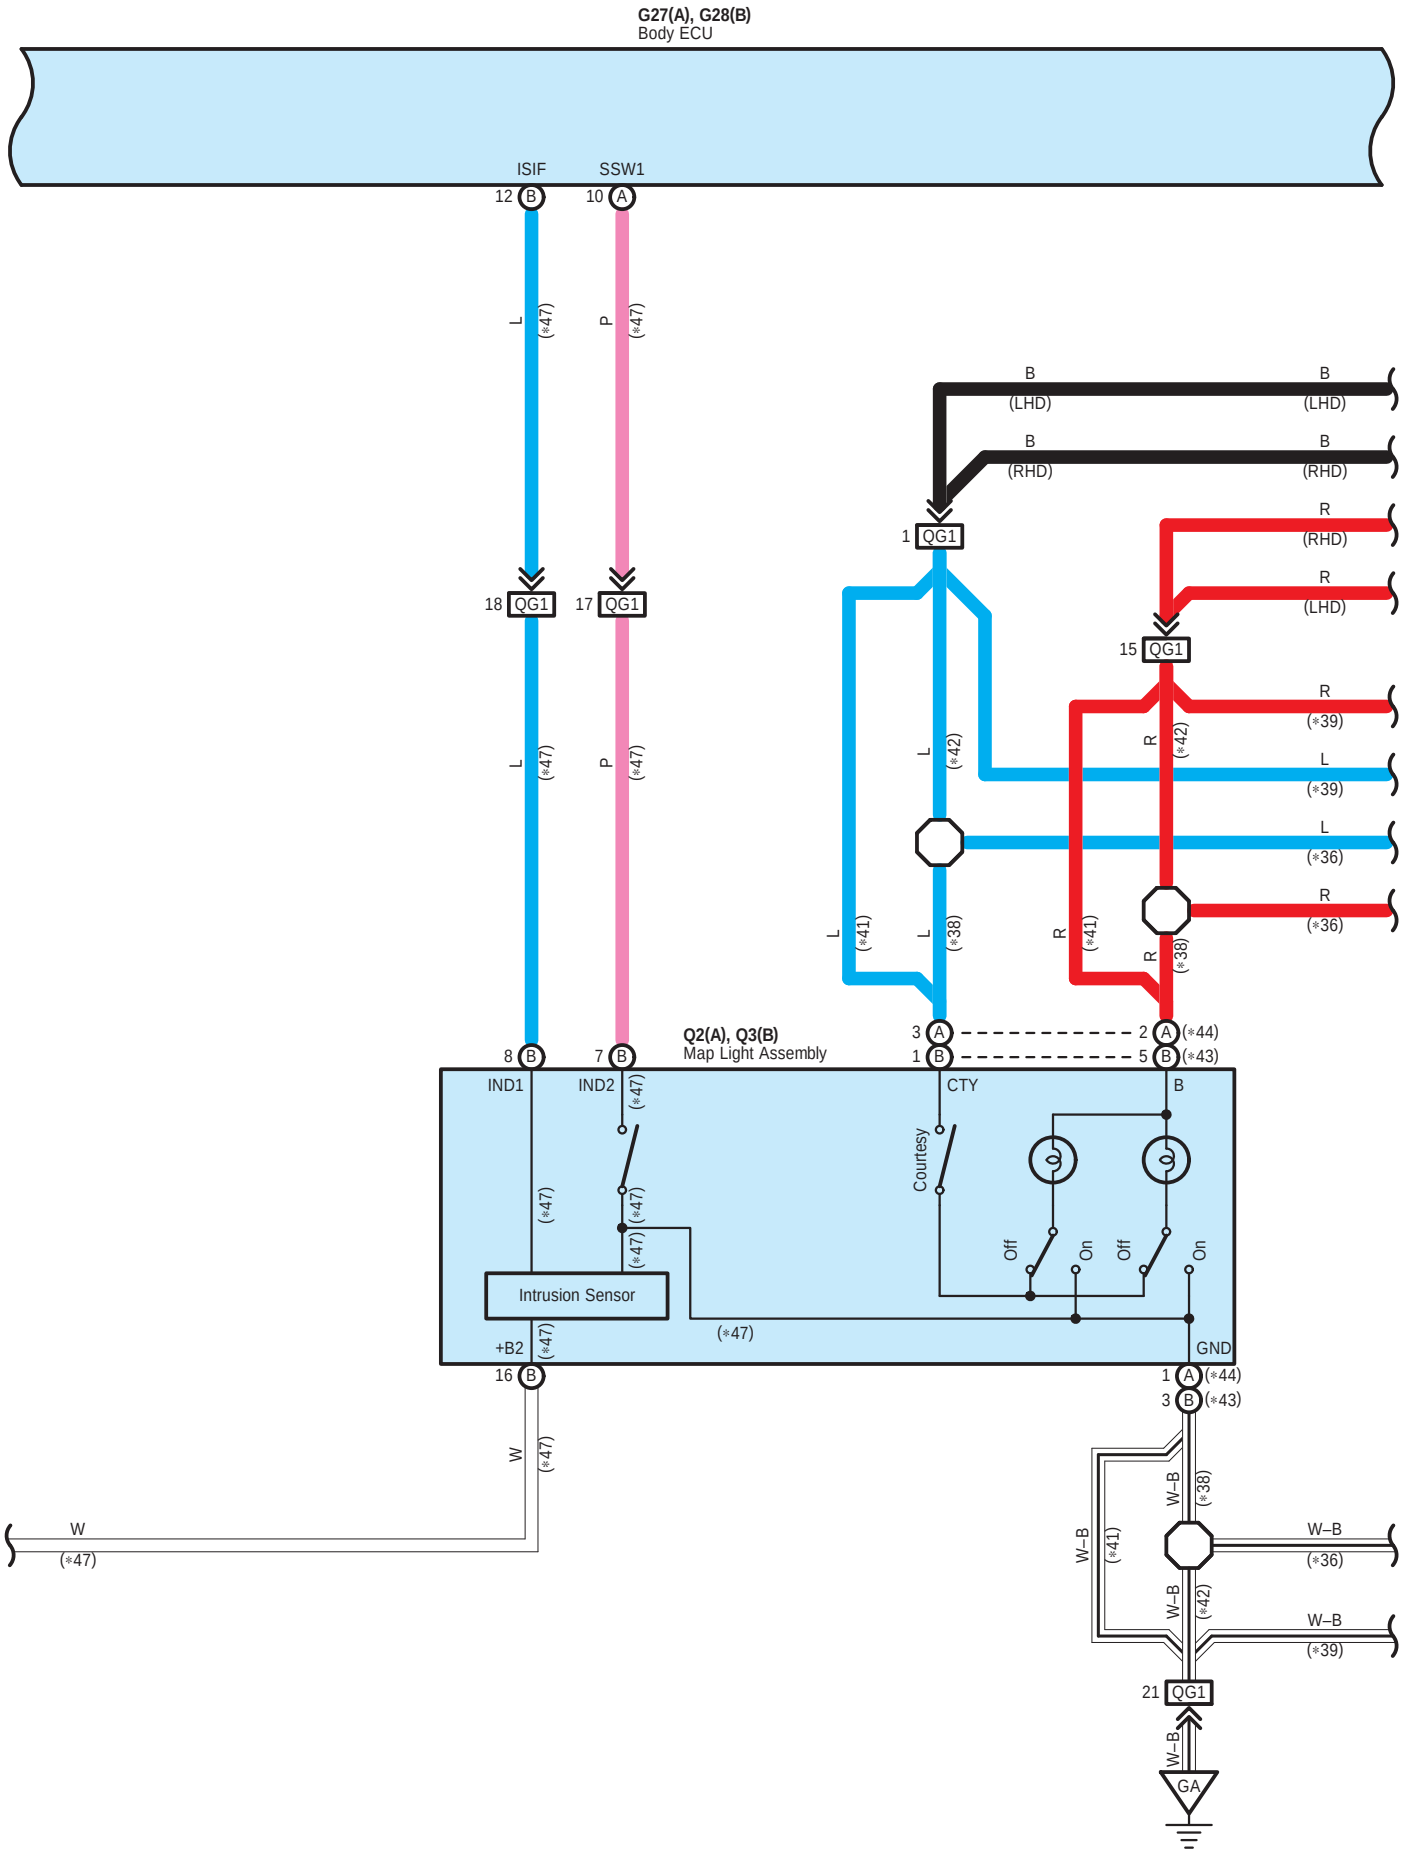
G27(A), G28(B)
Body ECU
ISIF
SSW1
12 B
10 A
L
(*47)
P
(*47)
B
(LHD)
B
(RHD)
1 QG1
R
(RHD)
R
(LHD)
18 QG1
17 QG1
15 QG1
R
(*39)
L
(*39)
L
(*36)
R
(*36)
L
(*42)
R
(*42)
L
(*41)
L
(*38)
R
(*41)
R
(*38)
Q2(A), Q3(B)
Map Light Assembly
3 A
1 B
2 A (*44)
5 B (*43)
8 B
7 B
IND1
IND2
CTY
B
Courtesy
Off
On
Off
On
Intrusion Sensor
(*47)
+B2
GND
16 B
1 A (*44)
3 B (*43)
W
(*47)
W–B
(*38)
W–B
(*41)
W–B
(*36)
W–B
(*42)
W–B
(*39)
21 QG1
W–B
GA

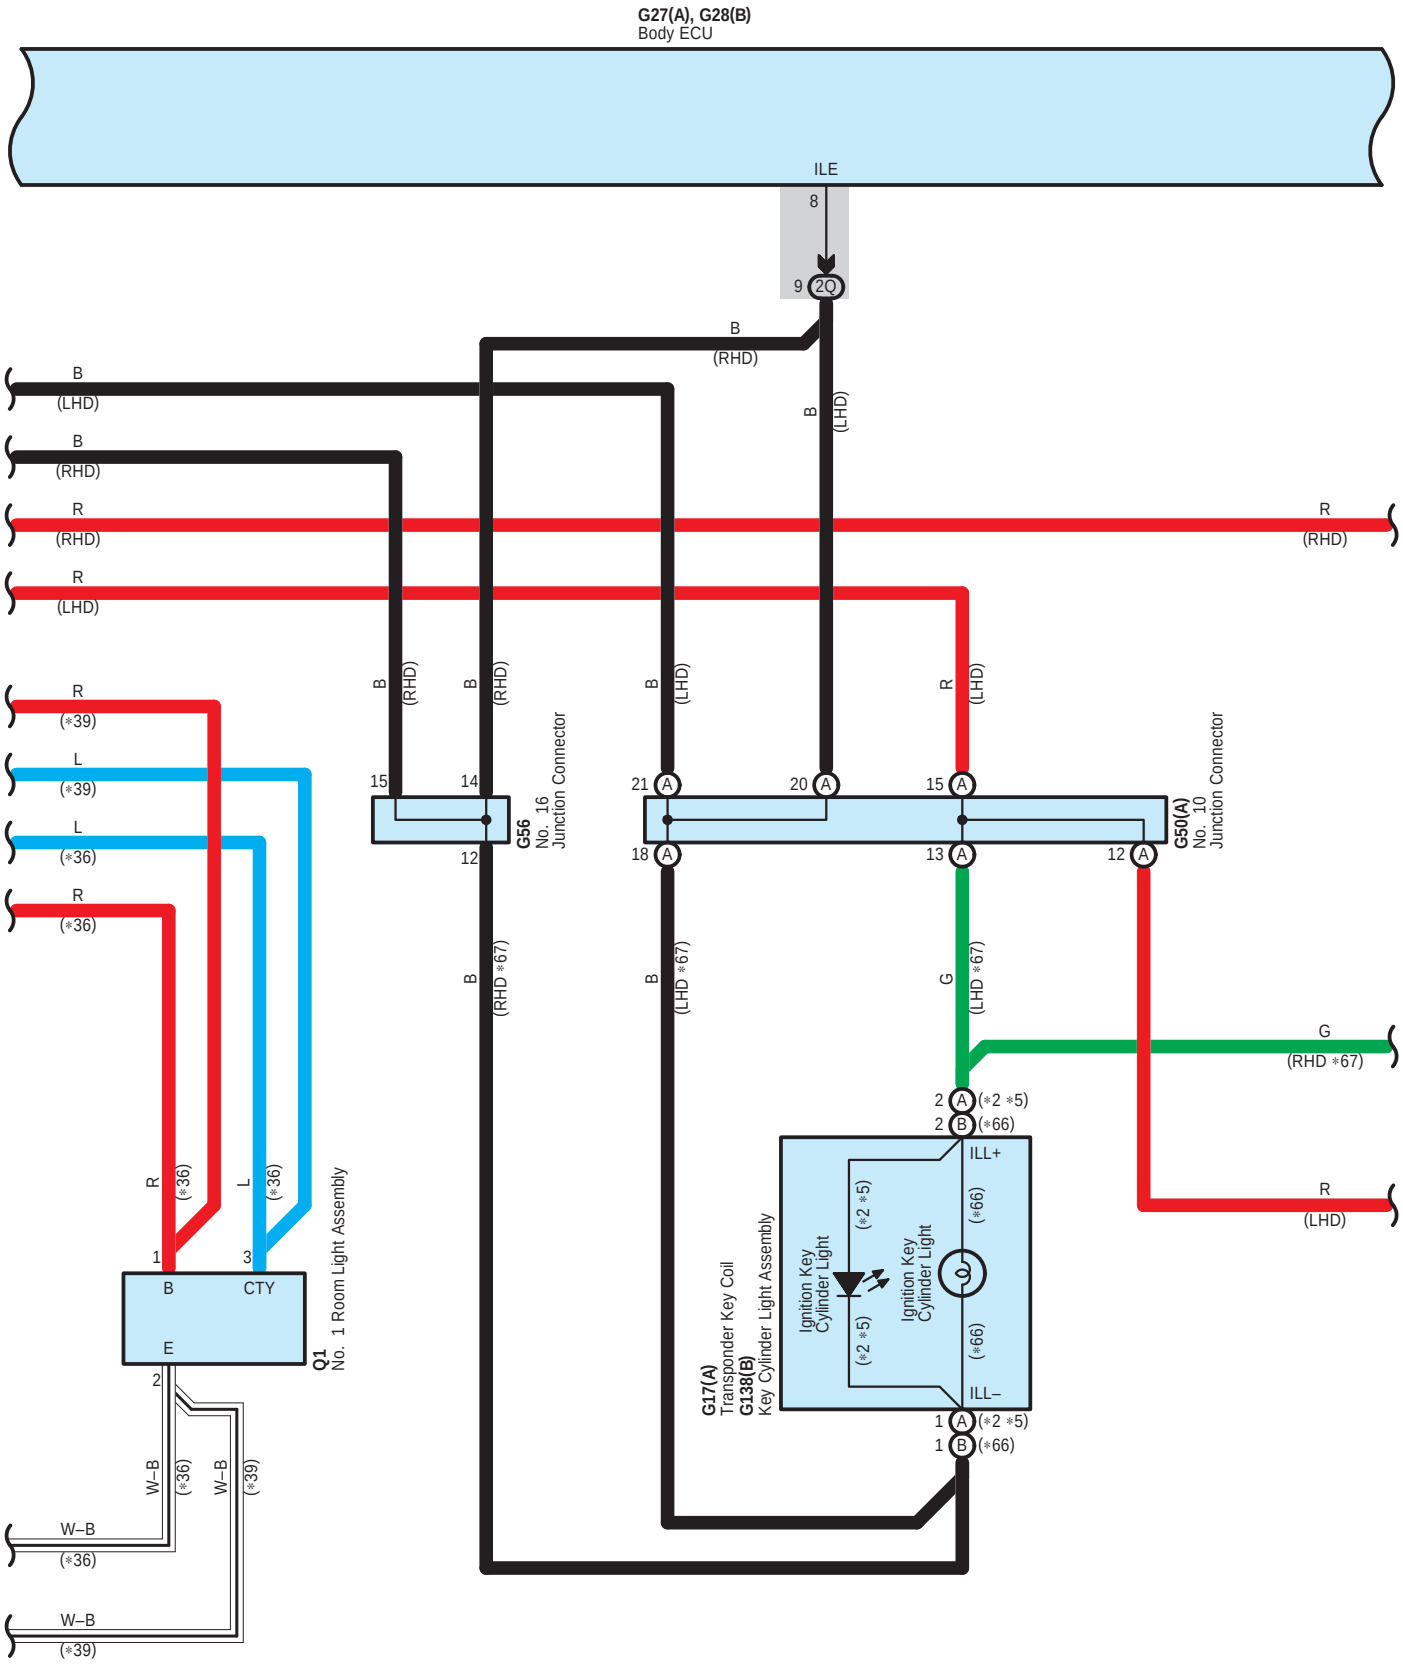
G27(A), G28(B)
Body ECU
ILE
8
9 2Q
B (RHD)
B (LHD)
B (LHD)
B (RHD)
R (RHD)
R (LHD)
R (RHD)
R (LHD)
R (*39)
L (*39)
L (*36)
R (*36)
B (RHD)
B (RHD)
B (LHD)
R (LHD)
15
14
12
G56
No. 16
Junction Connector
21 A
20 A
15 A
18 A
13 A
12 A
G50(A)
No. 10
Junction Connector
B (RHD *67)
B (LHD *67)
G (LHD *67)
G (RHD *67)
R (LHD)
2 A (*2 *5)
2 B (*66)
ILL+
ILL–
1 A (*2 *5)
1 B (*66)
(*2 *5)
(*66)
Ignition Key Cylinder Light
Ignition Key Cylinder Light
G17(A)
Transponder Key Coil
G138(B)
Key Cylinder Light Assembly
R (*36)
L (*36)
1
3
B
CTY
E
2
Q1
No. 1 Room Light Assembly
W–B (*36)
W–B (*39)
W–B (*36)
W–B (*39)

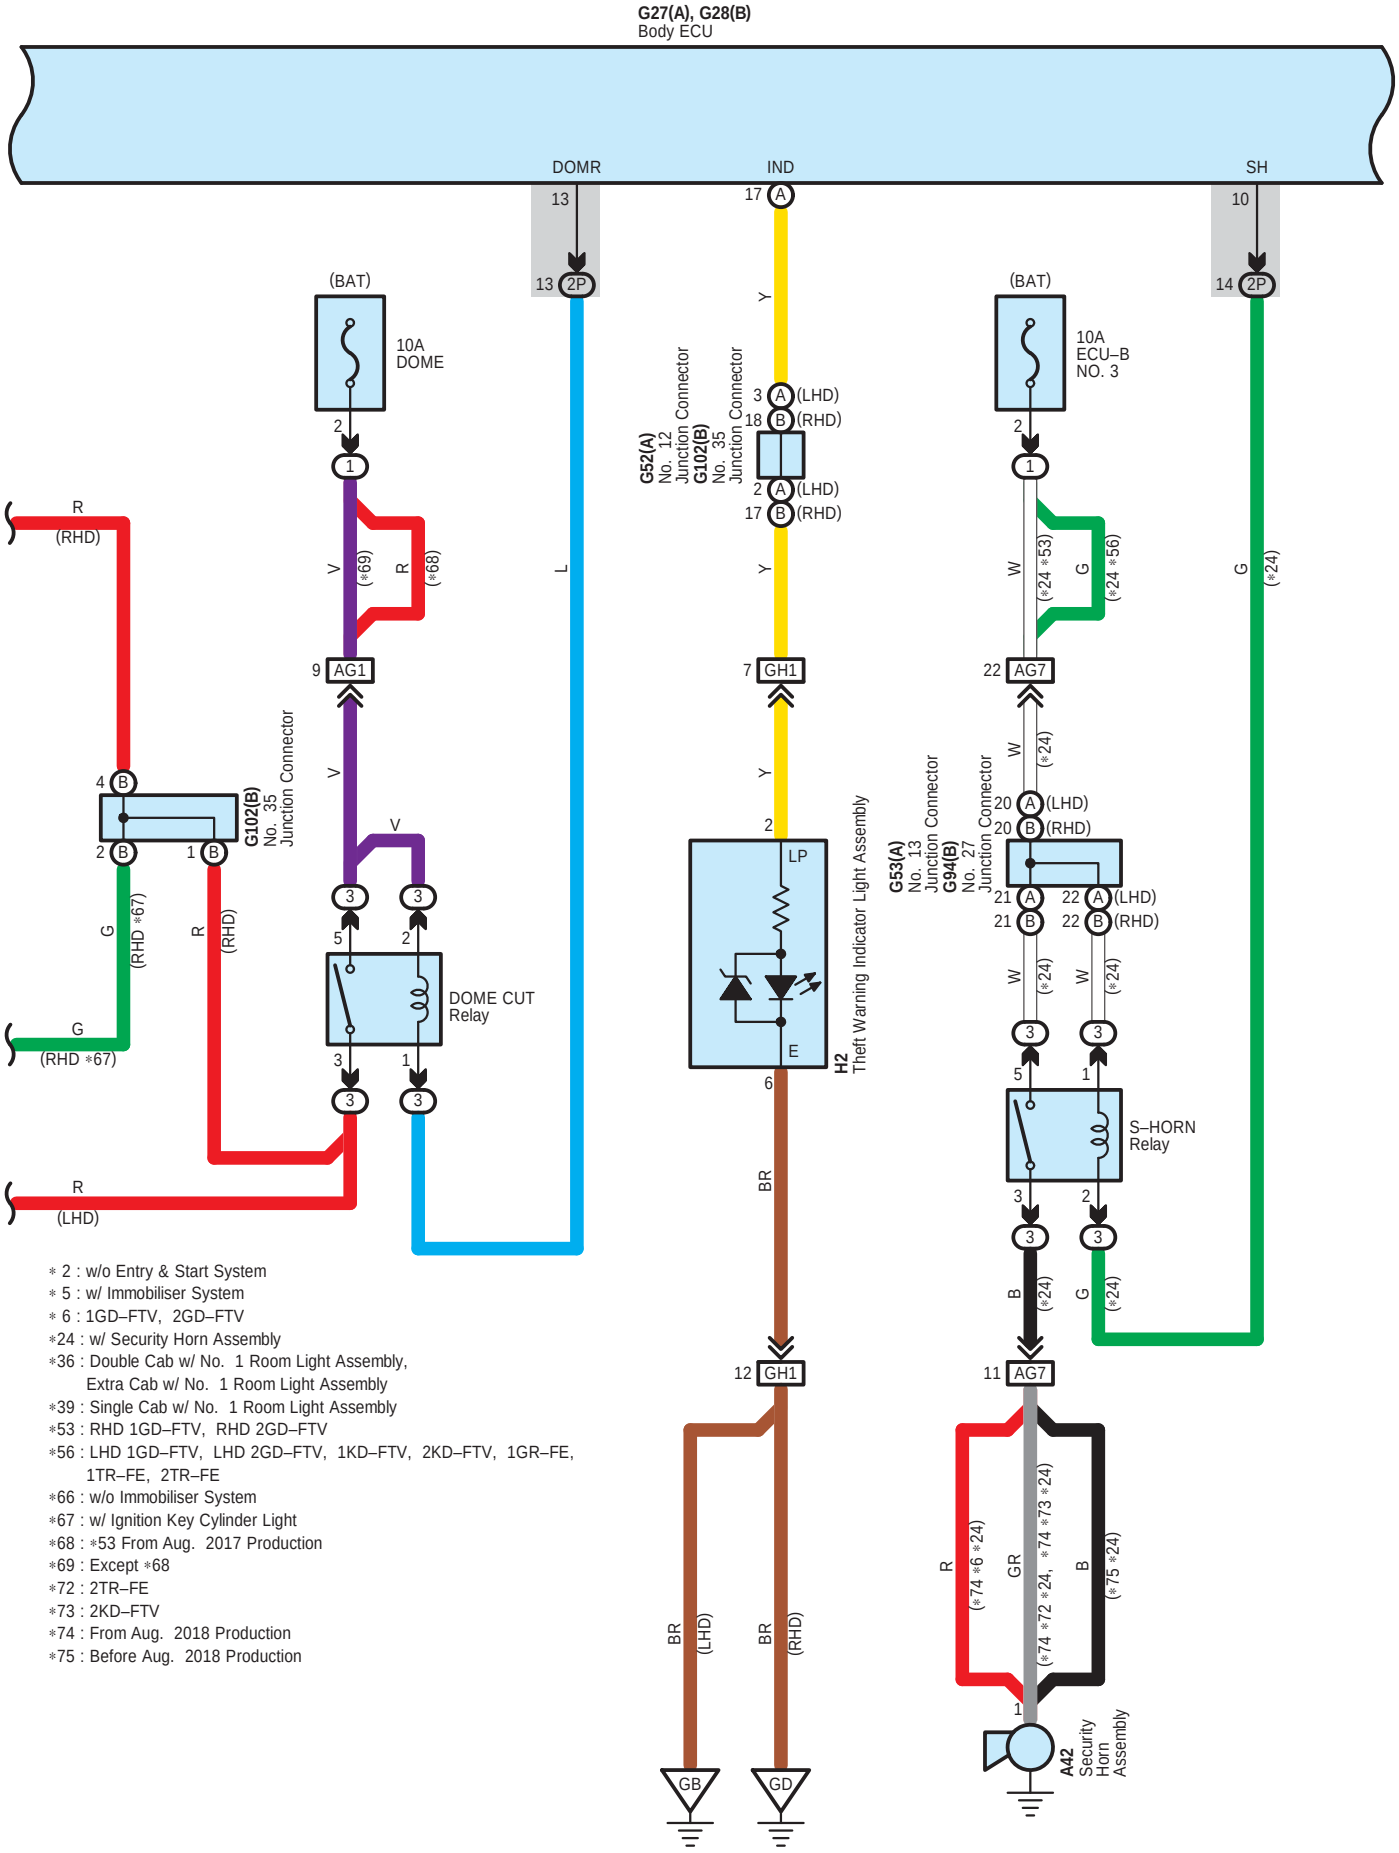

* 2 : w/o Entry & Start System
* 5 : w/ Immobiliser System
* 6 : 1GD–FTV, 2GD–FTV
*24 : w/ Security Horn Assembly
*36 : Double Cab w/ No. 1 Room Light Assembly,
Extra Cab w/ No. 1 Room Light Assembly
*39 : Single Cab w/ No. 1 Room Light Assembly
*53 : RHD 1GD–FTV, RHD 2GD–FTV
*56 : LHD 1GD–FTV, LHD 2GD–FTV, 1KD–FTV, 2KD–FTV, 1GR–FE,
1TR–FE, 2TR–FE
*66 : w/o Immobiliser System
*67 : w/ Ignition Key Cylinder Light
*68 : *53 From Aug. 2017 Production
*69 : Except *68
*72 : 2TR–FE
*73 : 2KD–FTV
*74 : From Aug. 2018 Production
*75 : Before Aug. 2018 Production

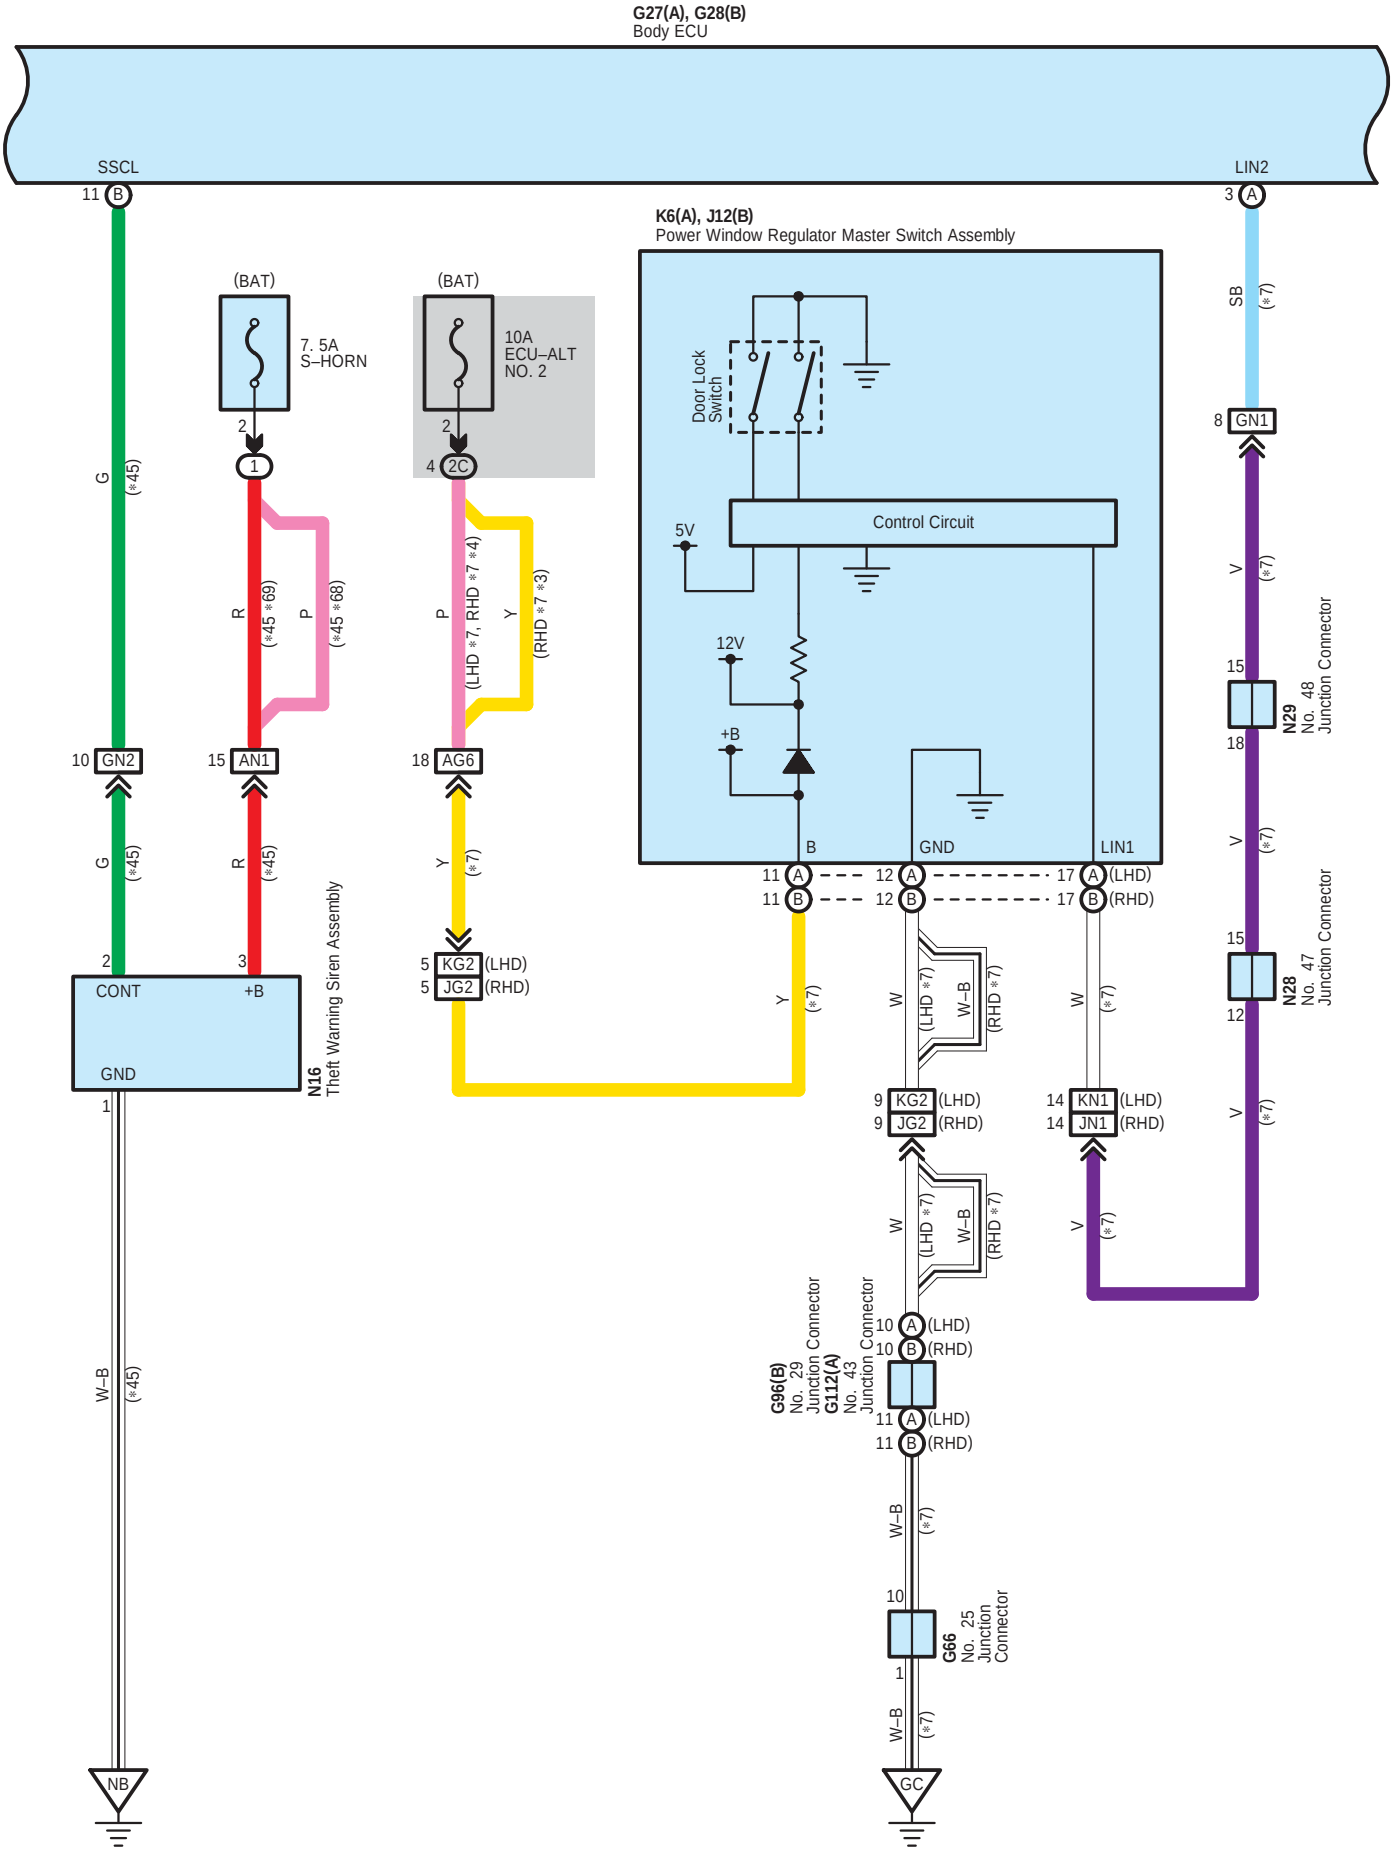
G27(A), G28(B)
Body ECU
SSCL
LIN2
K6(A), J12(B)
Power Window Regulator Master Switch Assembly
(BAT)
7. 5A
S–HORN
(BAT)
10A
ECU–ALT
NO. 2
Door Lock
Switch
Control Circuit
5V
12V
+B
B
GND
LIN1
CONT
+B
GND
N16
Theft Warning Siren Assembly
N29
No. 48
Junction Connector
N28
No. 47
Junction Connector
G96(B)
No. 29
Junction Connector
G112(A)
No. 43
Junction Connector
G66
No. 25
Junction
Connector
NB
GC

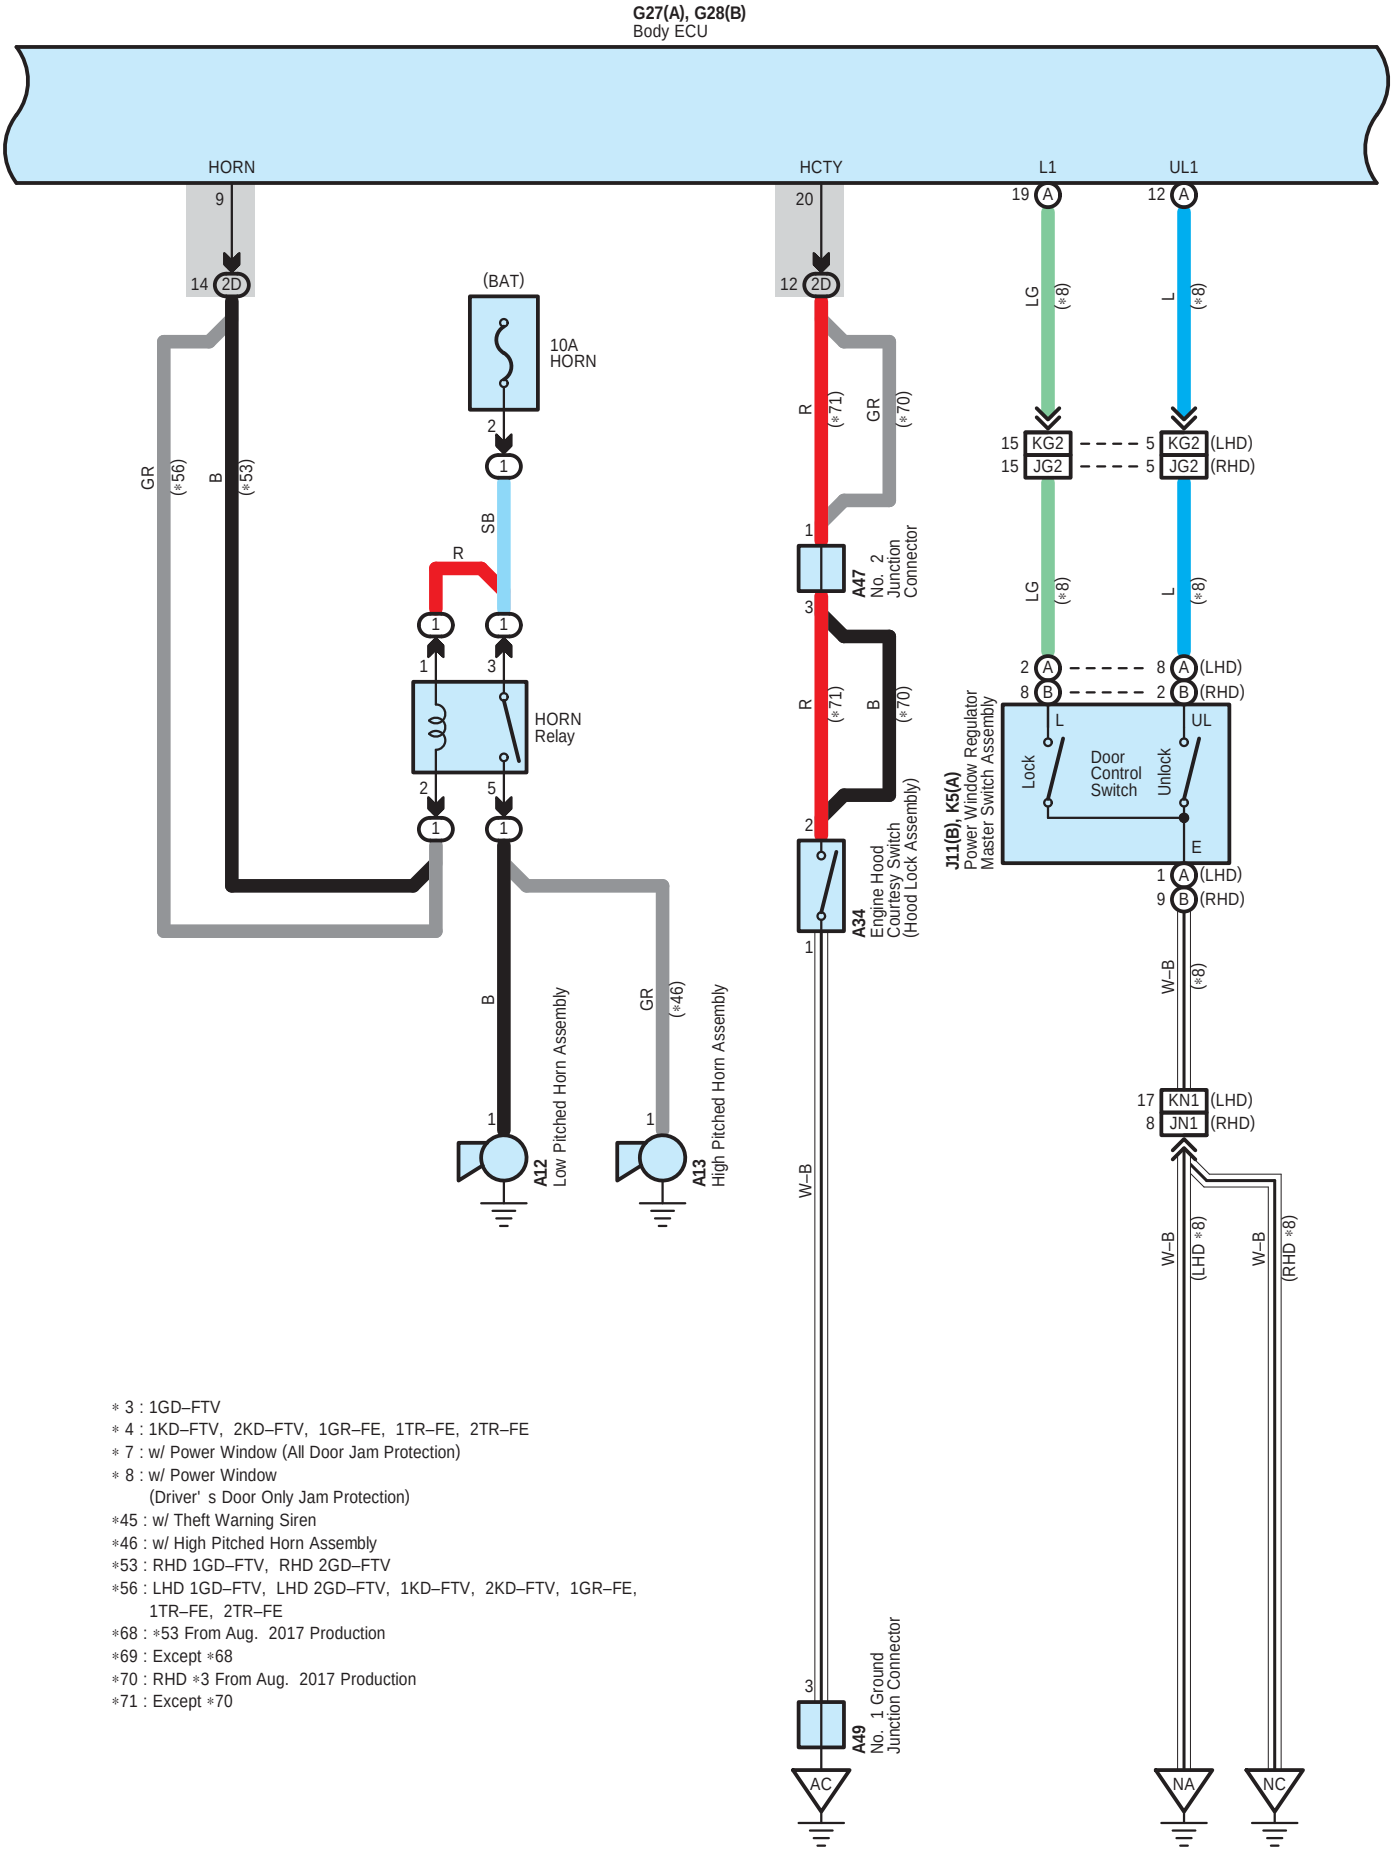

* 3 : 1GD–FTV
* 4 : 1KD–FTV, 2KD–FTV, 1GR–FE, 1TR–FE, 2TR–FE
* 7 : w/ Power Window (All Door Jam Protection)
* 8 : w/ Power Window
(Driver' s Door Only Jam Protection)
*45 : w/ Theft Warning Siren
*46 : w/ High Pitched Horn Assembly
*53 : RHD 1GD–FTV, RHD 2GD–FTV
*56 : LHD 1GD–FTV, LHD 2GD–FTV, 1KD–FTV, 2KD–FTV, 1GR–FE, 1TR–FE, 2TR–FE
*68 : *53 From Aug. 2017 Production
*69 : Except *68
*70 : RHD *3 From Aug. 2017 Production
*71 : Except *70

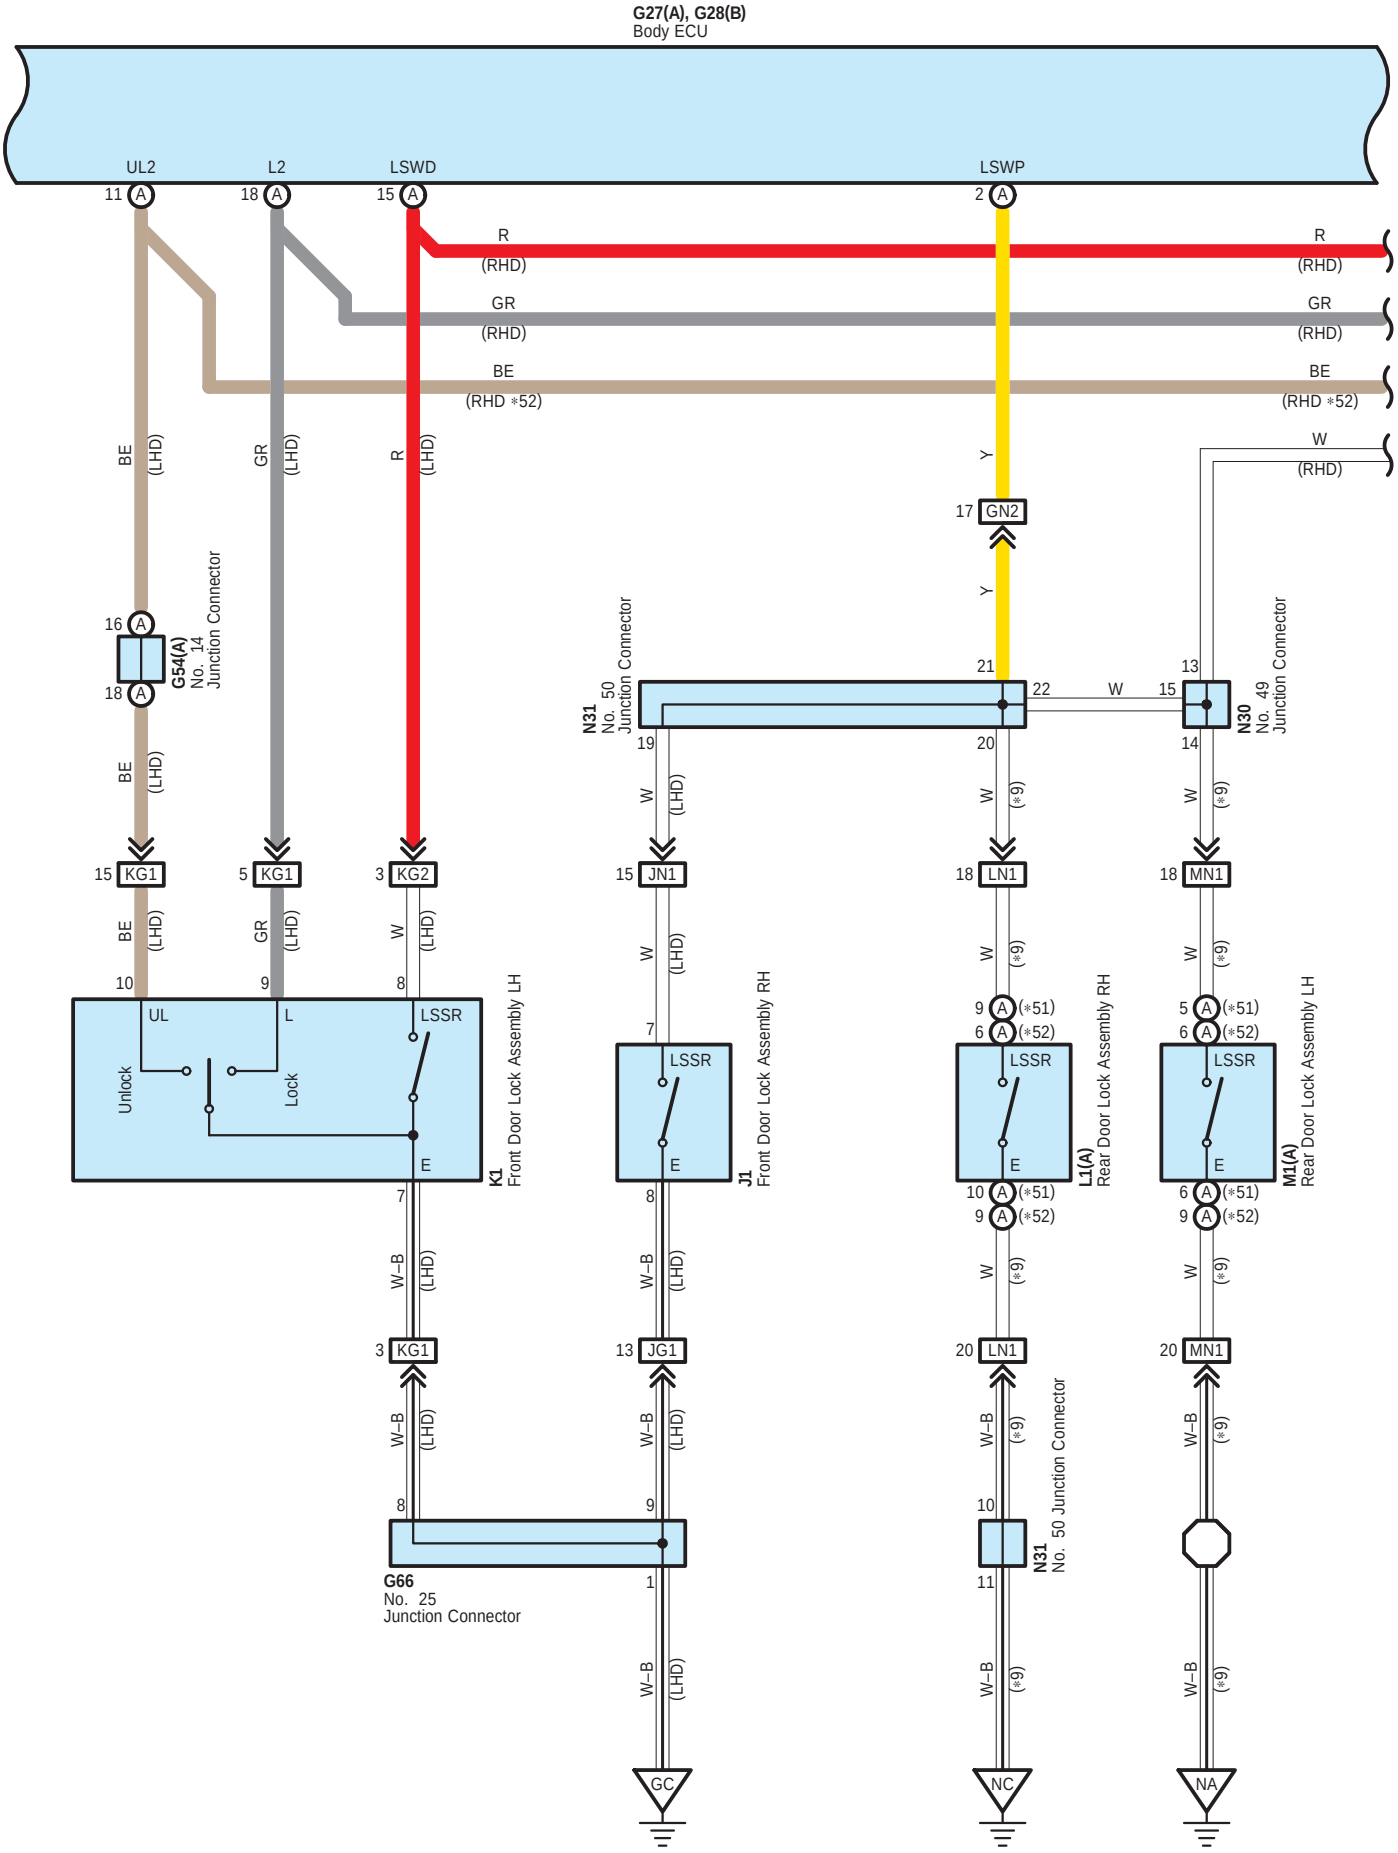
G27(A), G28(B)
Body ECU
UL2
L2
LSWD
LSWP
R (RHD)
GR (RHD)
BE (RHD *52)
W (RHD)
BE (LHD)
GR (LHD)
R (LHD)
Y
GN2
G54(A)
No. 14
Junction Connector
N31
No. 50
Junction Connector
N30
No. 49
Junction Connector
KG1
KG2
JN1
LN1
MN1
UL
L
LSSR
Unlock
Lock
E
K1
Front Door Lock Assembly LH
J1
Front Door Lock Assembly RH
L1(A)
Rear Door Lock Assembly RH
M1(A)
Rear Door Lock Assembly LH
W–B (LHD)
JG1
G66
No. 25
Junction Connector
N31
No. 50 Junction Connector
GC
NC
NA

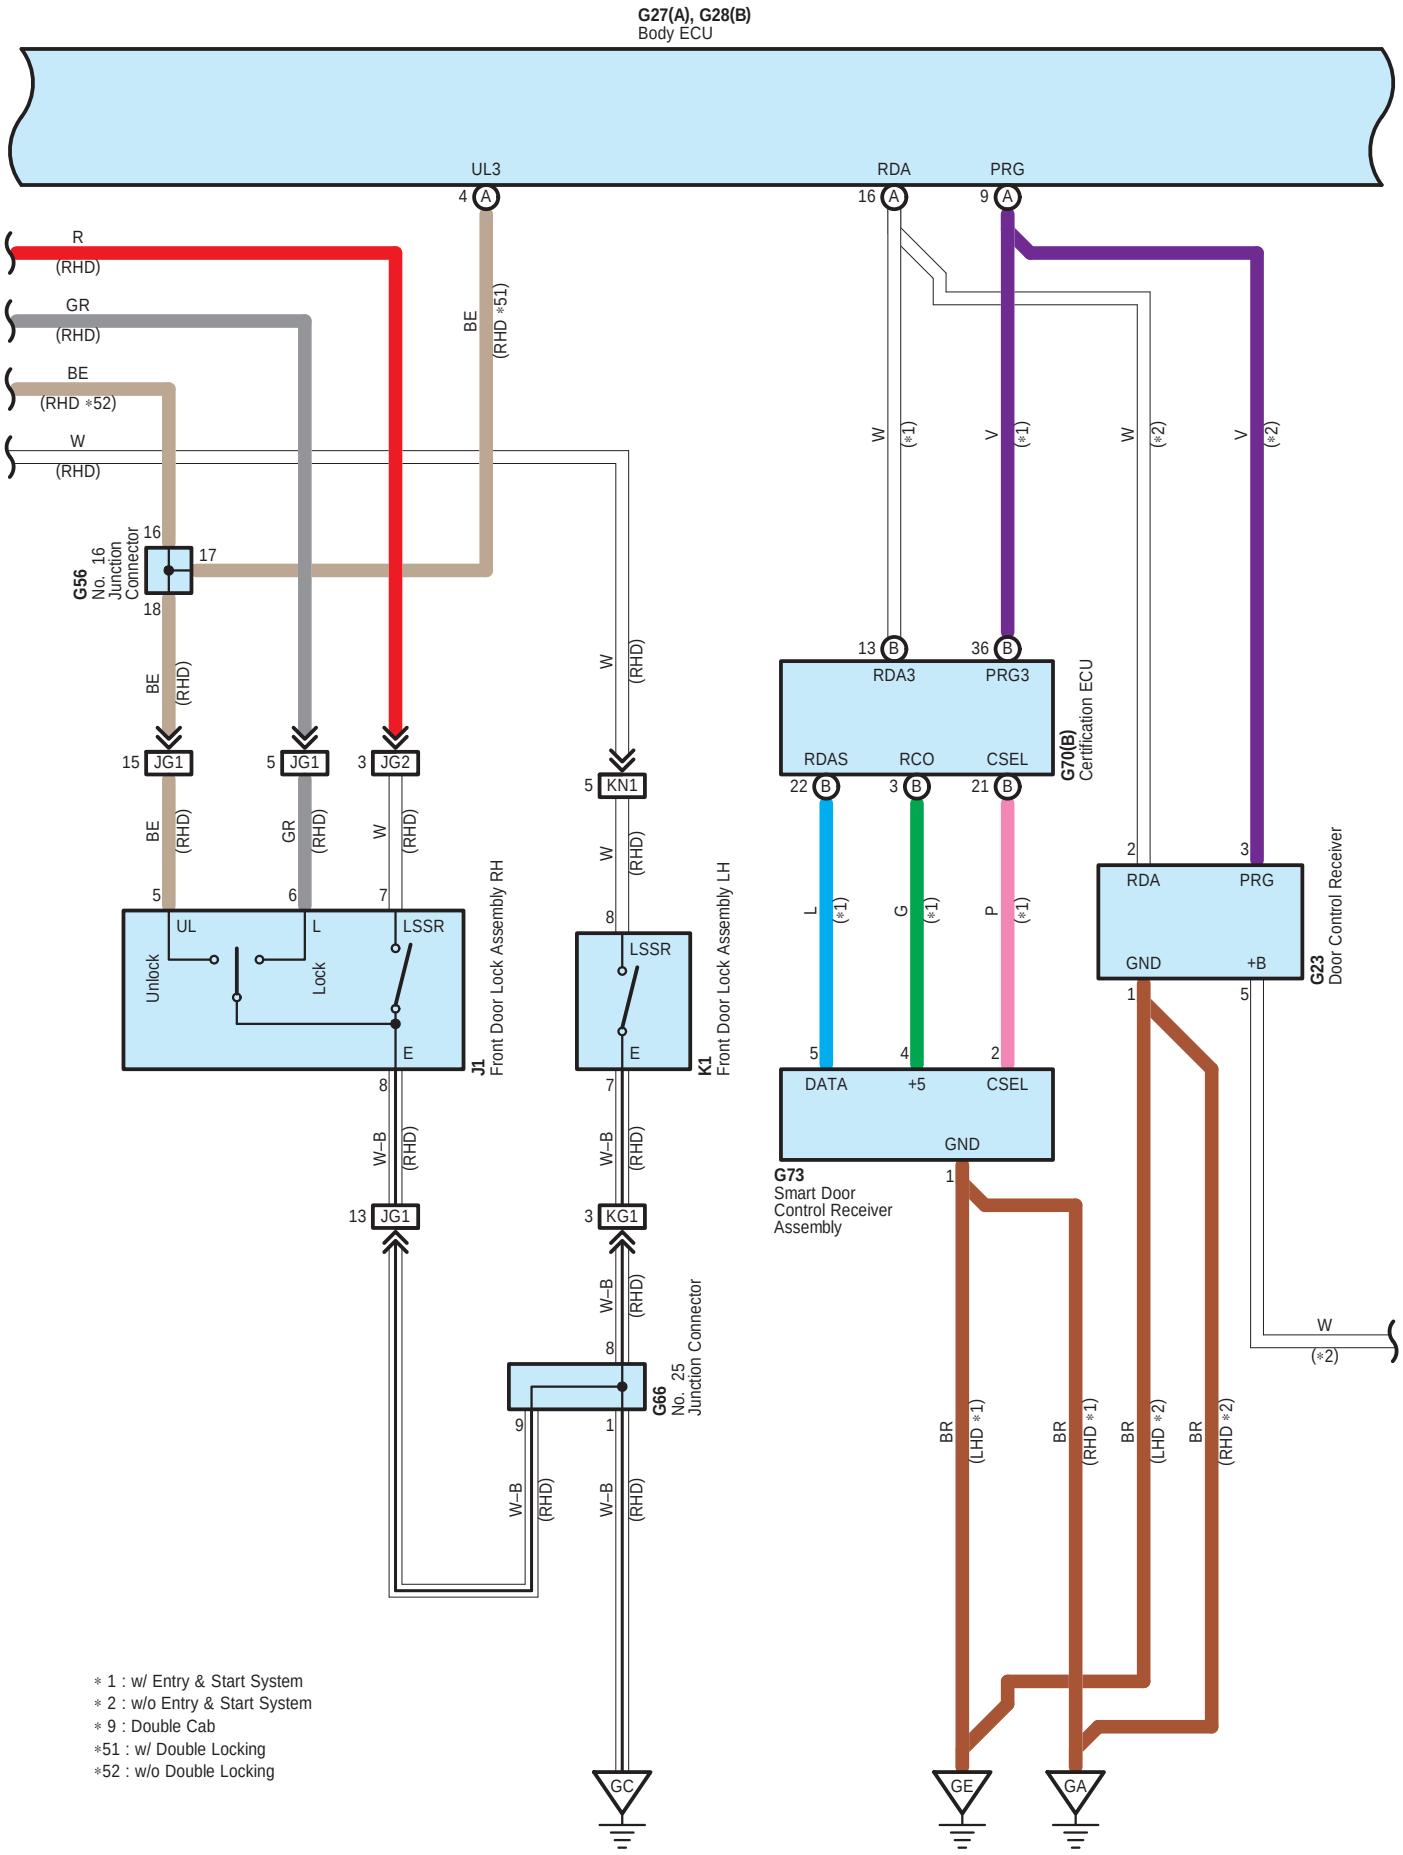
G27(A), G28(B)
Body ECU
UL3
RDA
PRG
R
(RHD)
GR
(RHD)
BE
(RHD *52)
W
(RHD)
BE
(RHD *51)
G56
No. 16
Junction
Connector
JG1
JG2
KN1
J1
Front Door Lock Assembly RH
K1
Front Door Lock Assembly LH
UL
L
LSSR
Unlock
Lock
E
W–B
KG1
G66
No. 25
Junction Connector
RDA3
PRG3
RDAS
RCO
CSEL
G70(B)
Certification ECU
DATA
+5
GND
G73
Smart Door
Control Receiver
Assembly
RDA
PRG
+B
G23
Door Control Receiver
BR
(LHD *1)
(RHD *1)
(LHD *2)
(RHD *2)
(*1)
(*2)
GC
GE
GA
* 1 : w/ Entry & Start System
* 2 : w/o Entry & Start System
* 9 : Double Cab
*51 : w/ Double Locking
*52 : w/o Double Locking

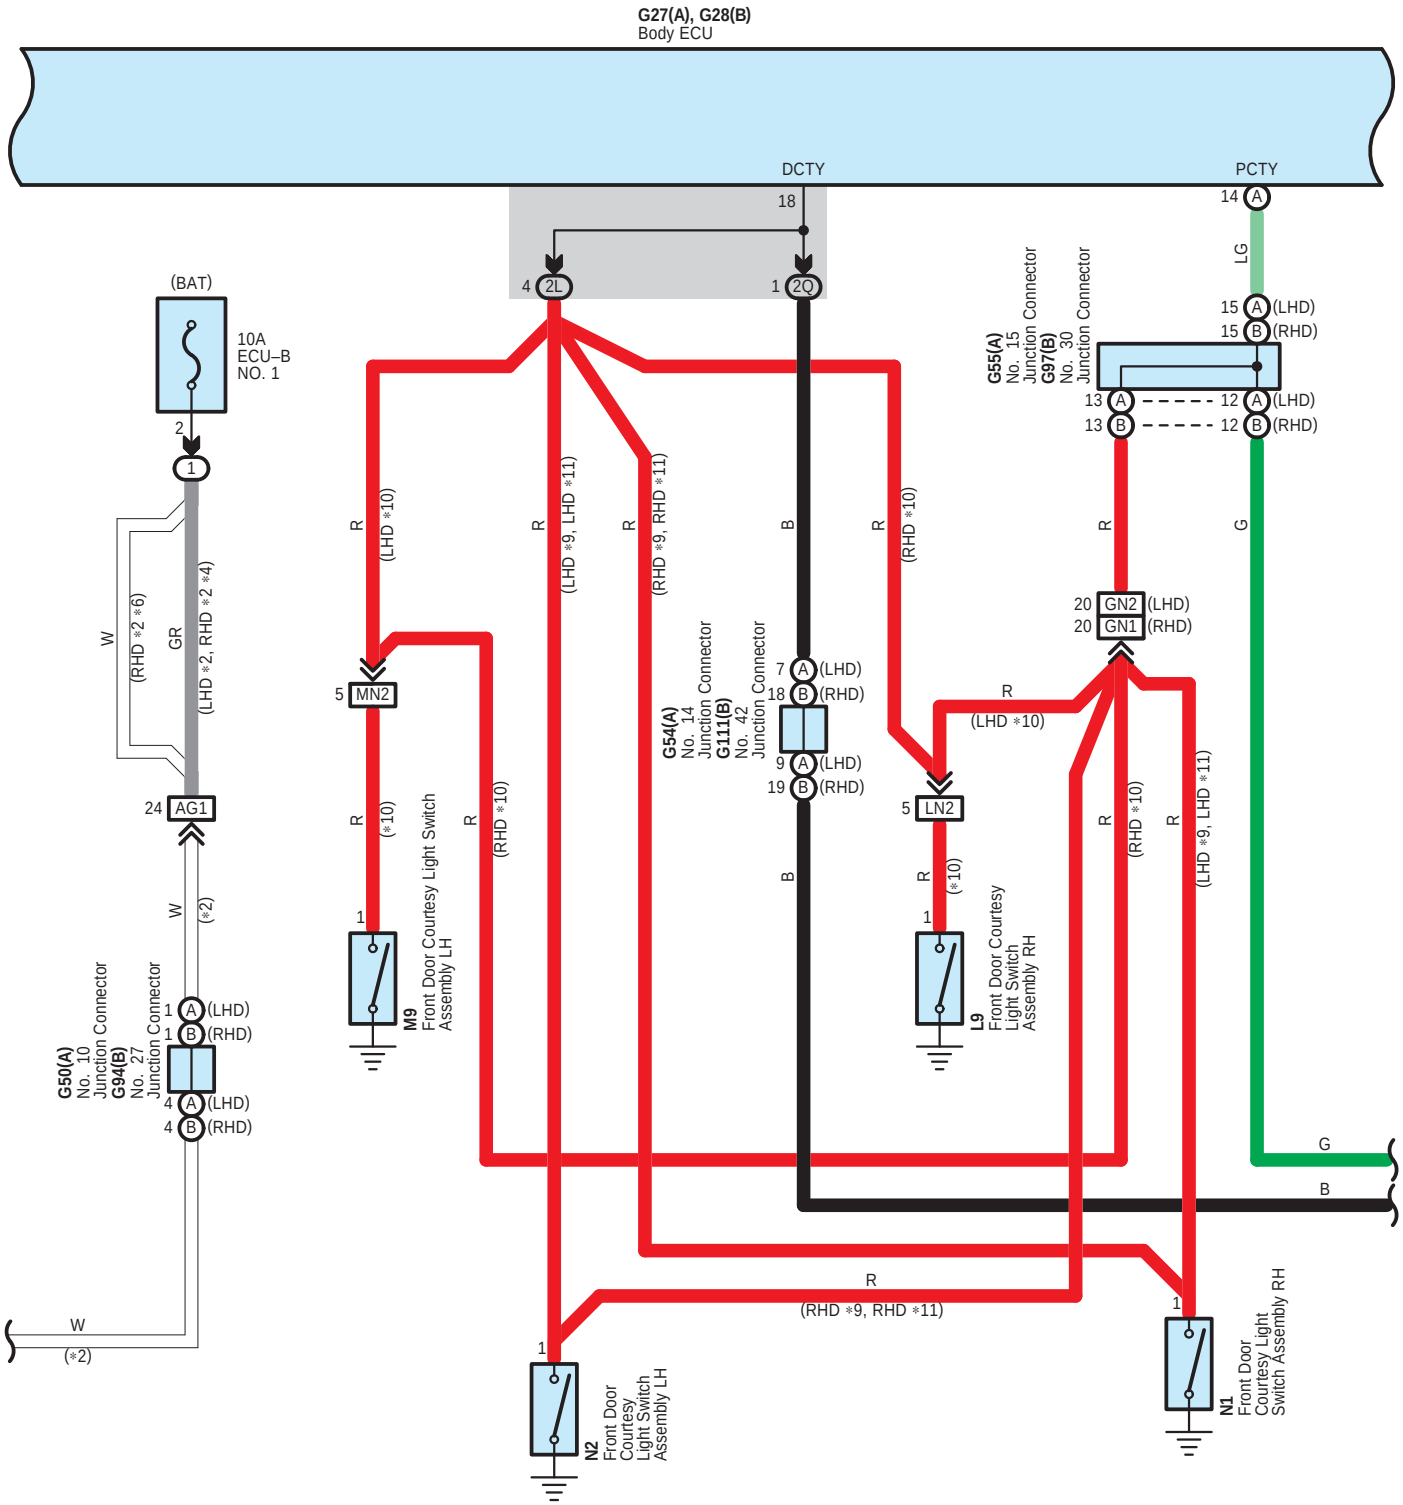

* 2 : w/o Entry & Start System
* 4 : 1KD–FTV, 2KD–FTV, 1GR–FE, 1TR–FE, 2TR–FE
* 6 : 1GD–FTV, 2GD–FTV
* 9 : Double Cab
*10 : Extra Cab
*11 : Single Cab

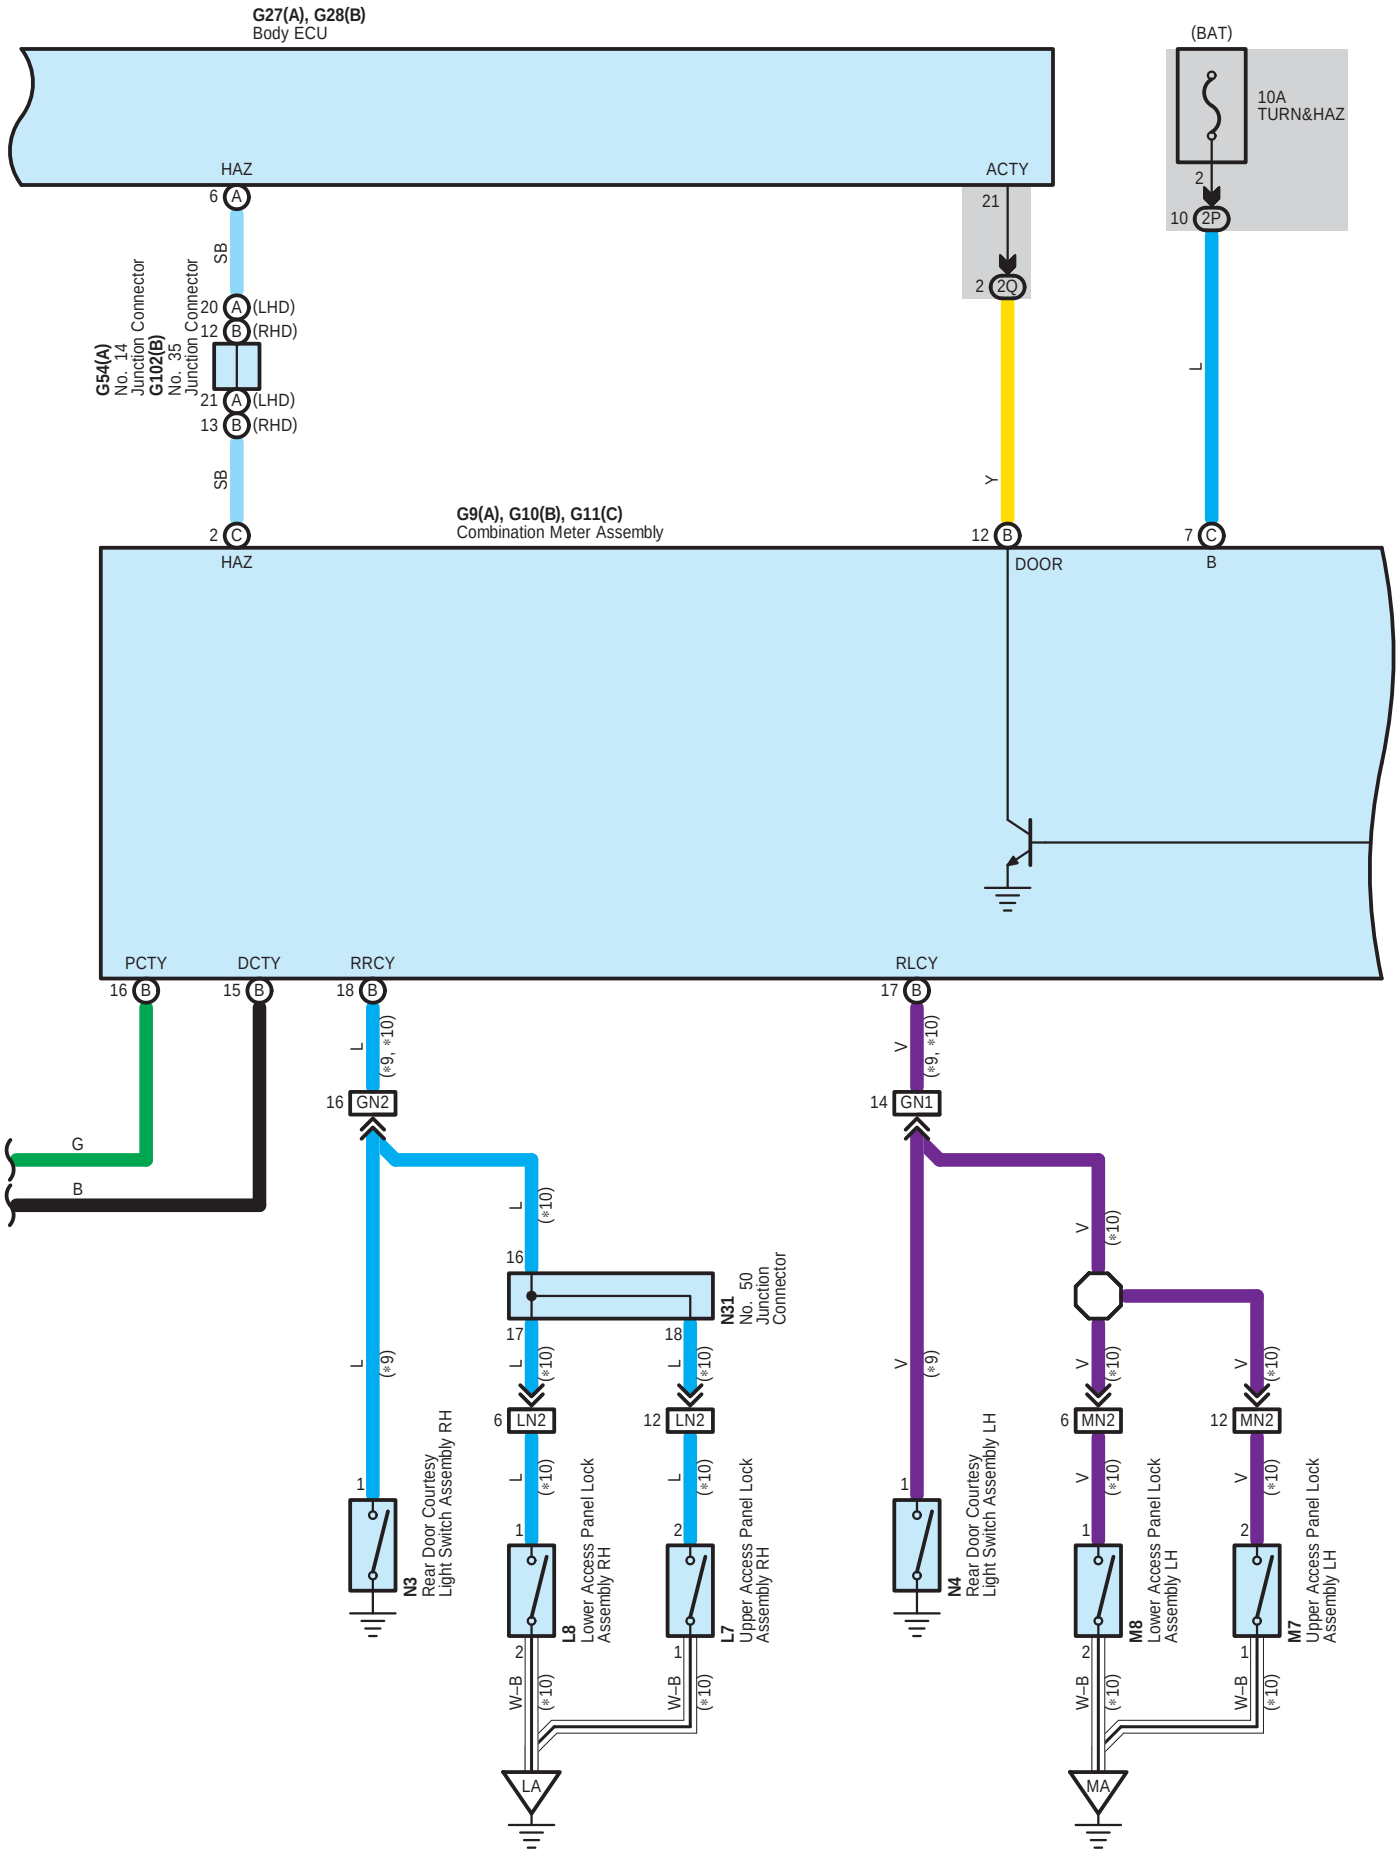
G27(A), G28(B)
Body ECU
HAZ
ACTY
(BAT)
10A
TURN&HAZ
G54(A)
No. 14
Junction Connector
G102(B)
No. 35
Junction Connector
(LHD)
(RHD)
G9(A), G10(B), G11(C)
Combination Meter Assembly
DOOR
PCTY
DCTY
RRCY
RLCY
GN2
GN1
N31
No. 50
Junction
Connector
LN2
MN2
N3
Rear Door Courtesy
Light Switch Assembly RH
L8
Lower Access Panel Lock
Assembly RH
L7
Upper Access Panel Lock
Assembly RH
N4
Rear Door Courtesy
Light Switch Assembly LH
M8
Lower Access Panel Lock
Assembly LH
M7
Upper Access Panel Lock
Assembly LH
LA
MA

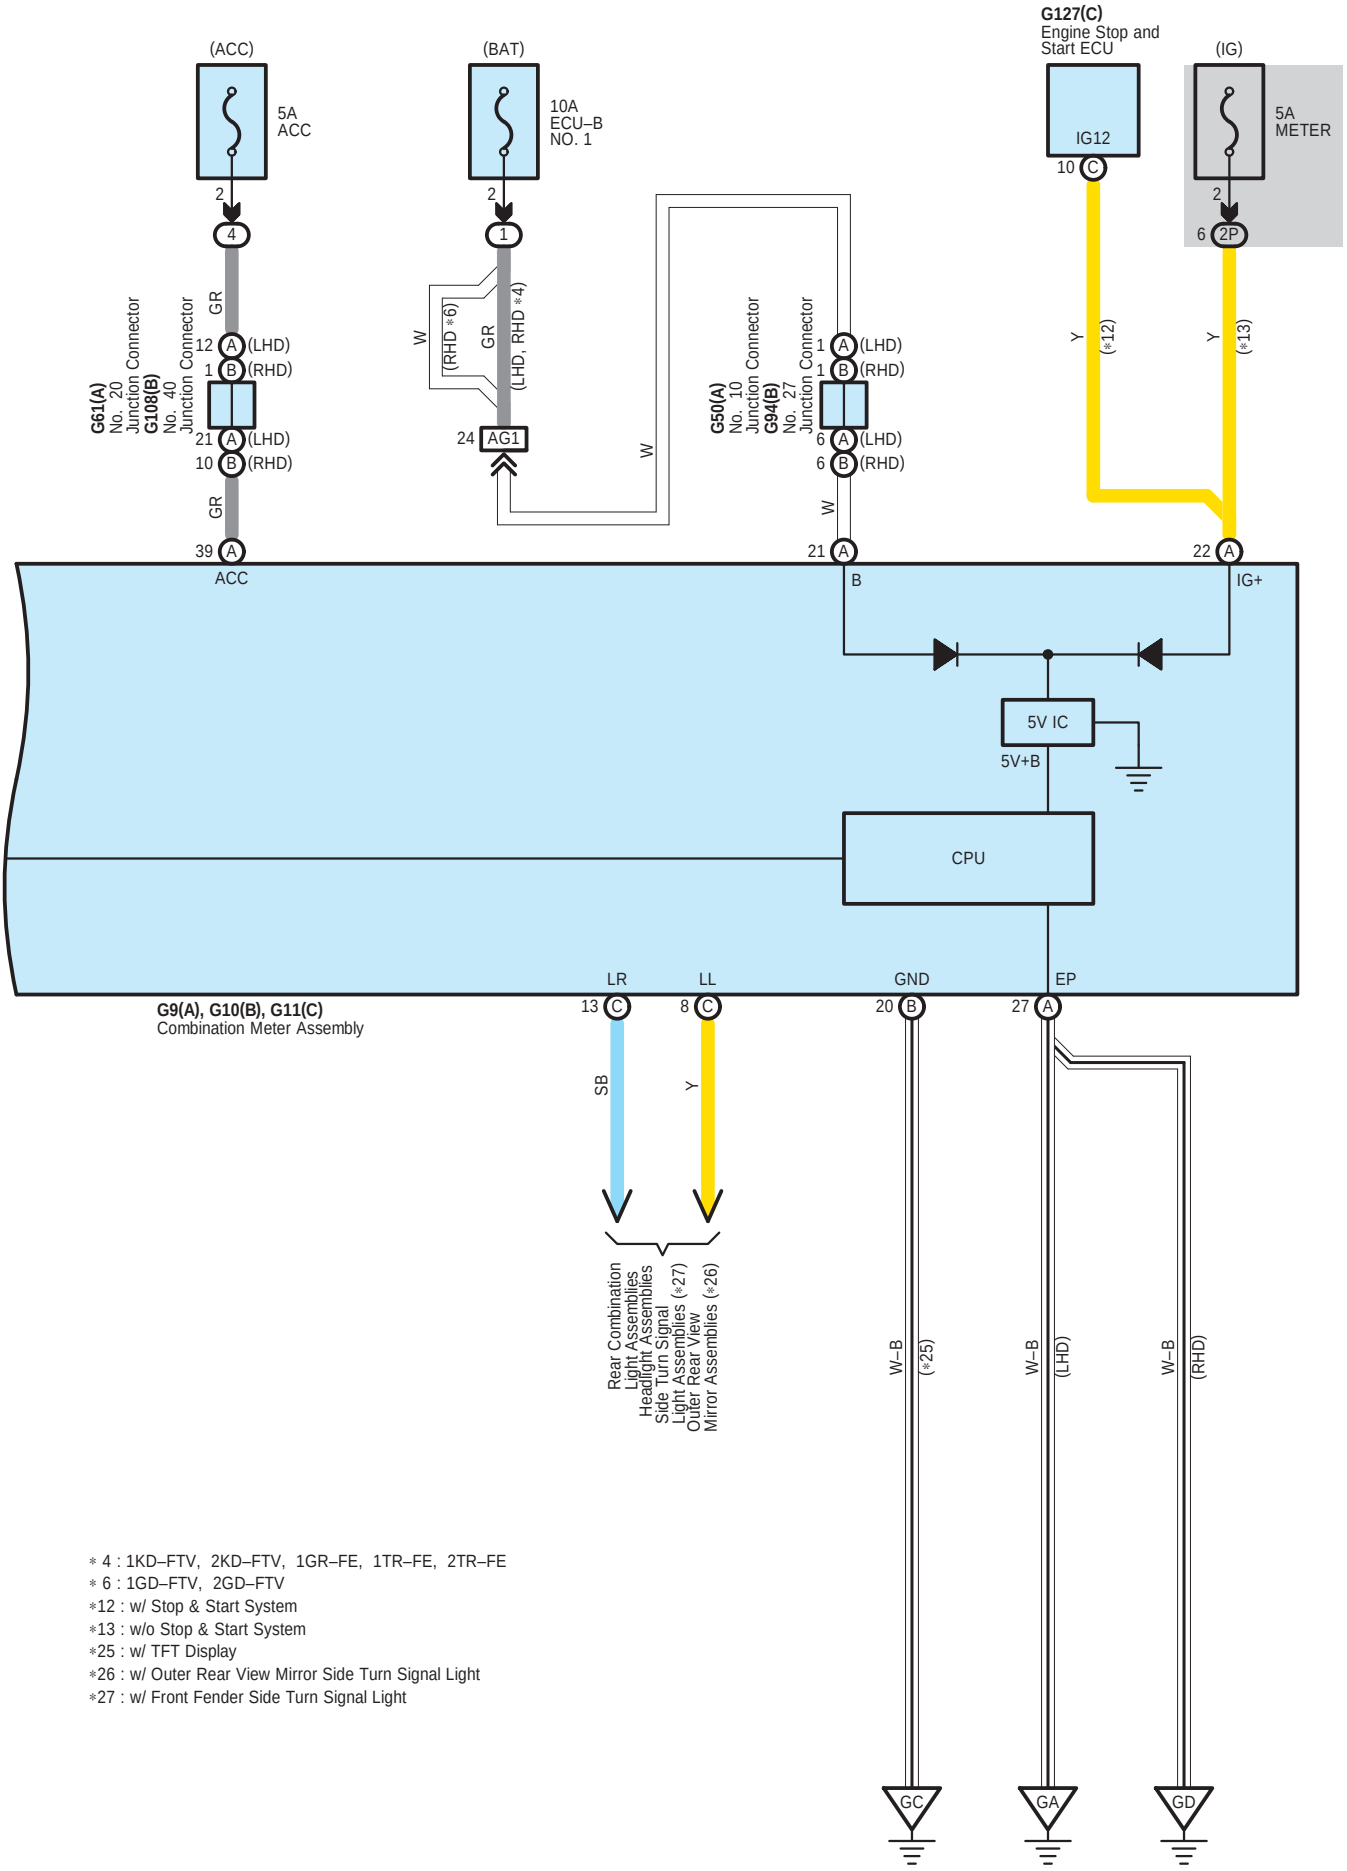

* 4 : 1KD–FTV, 2KD–FTV, 1GR–FE, 1TR–FE, 2TR–FE
* 6 : 1GD–FTV, 2GD–FTV
*12 : w/ Stop & Start System
*13 : w/o Stop & Start System
*25 : w/ TFT Display
*26 : w/ Outer Rear View Mirror Side Turn Signal Light
*27 : w/ Front Fender Side Turn Signal Light

A12
Black

90980-10619

A13
Black

90980-10619

A34
Black

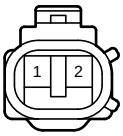

90980-11003

A42
Black

90980-10619

A45
White

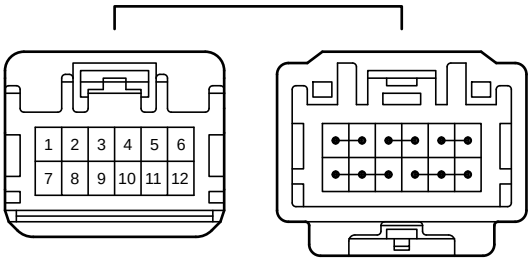

90980-12737

A46
White

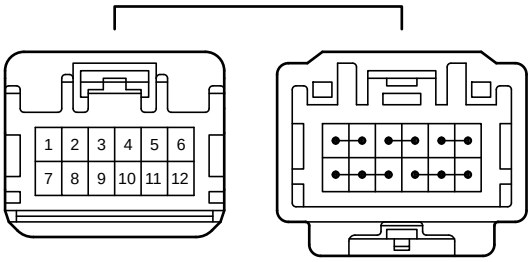

90980-12737

A47
White

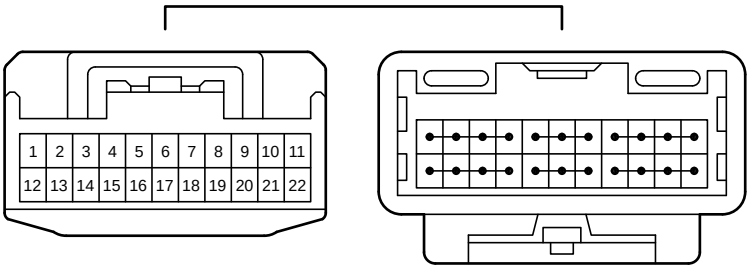

90980-12372

A49
Black

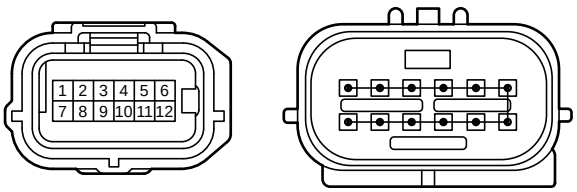

90980-12356

G9
White

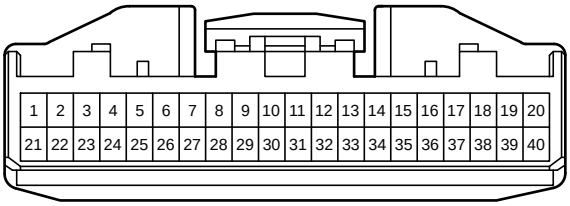

90980-12557

G10
White

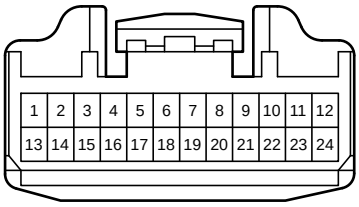

90980-12554

G11
White

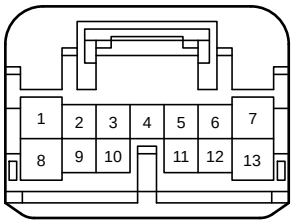

90980-12767

G17
Black

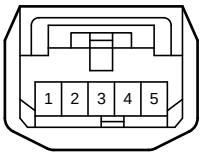

90980-12954

G23
White

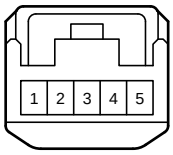

90980-12366

G27
White

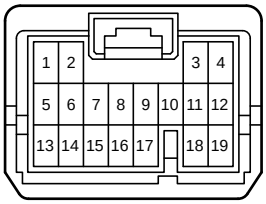

90980-12A45

G28
White

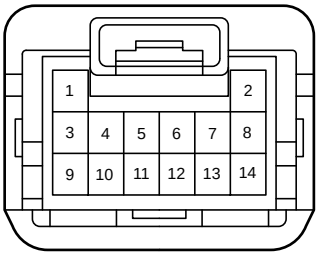

90980-12A46

G50
Black

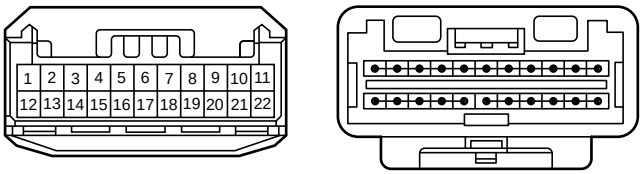

90980-12B54

G52
Black

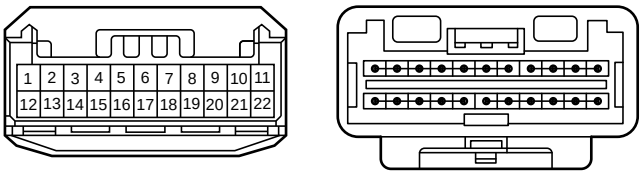

90980-12B54

G53
Black

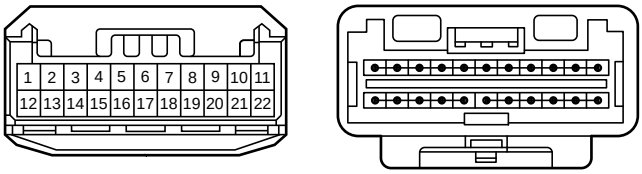

90980-12B54

G54
Black

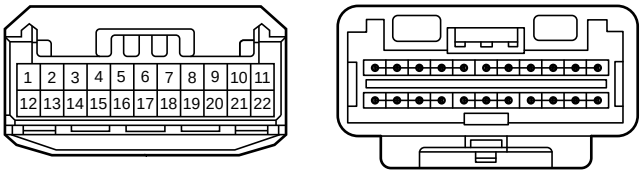

90980-12B54

G55
Black

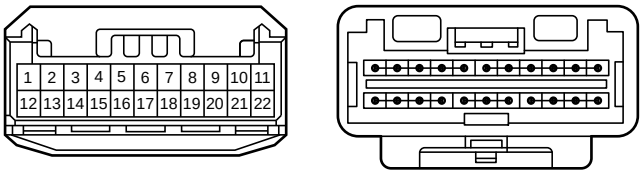

90980-12B54

G56
Black

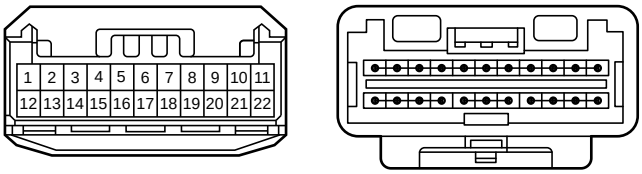

90980-12B54

G59
White

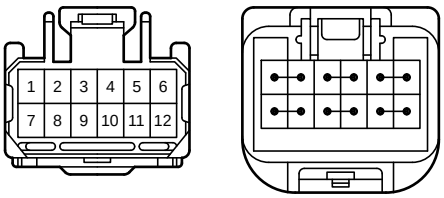

90980-11661

G61
Black

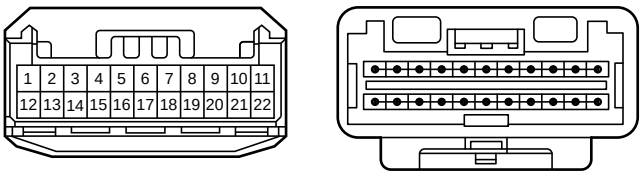

90980-12B54

G65
Black

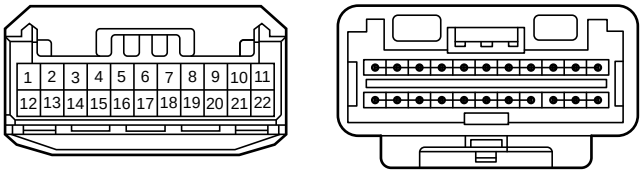

90980-12B54

G66
Black

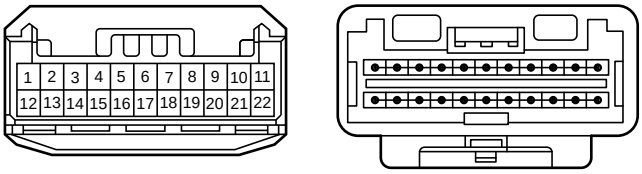

90980-12B54

G70
White

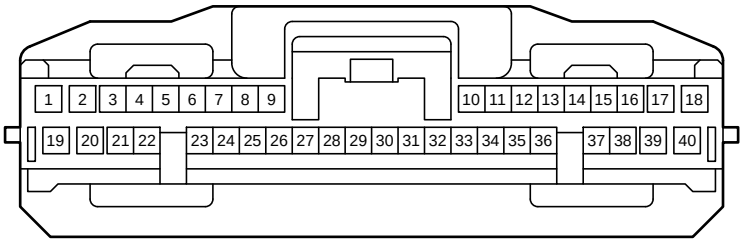

90980-12708

G73
Black

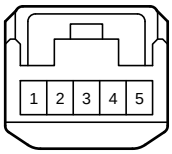

90980-12366

G94
Black

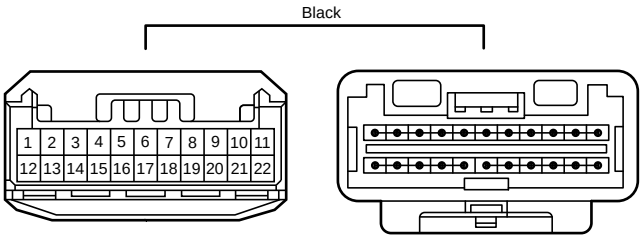

90980-12B54

G96
Black

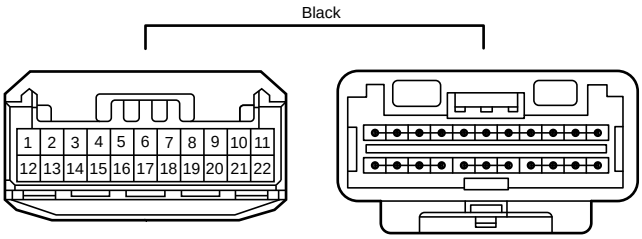

90980-12B54

G97
Black

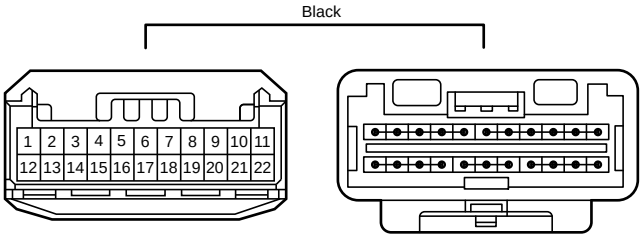

90980-12B54

G98
Black

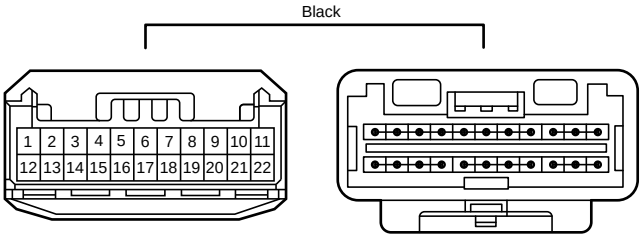

90980-12B54

G102
Black

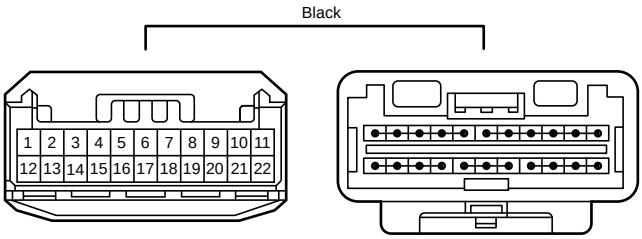

90980-12B54

G103
White

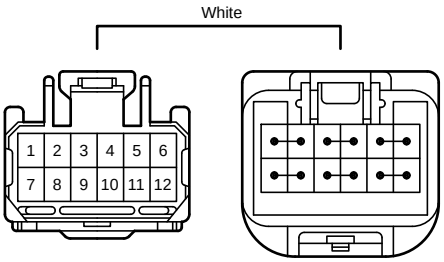

90980-11661

G108
Black

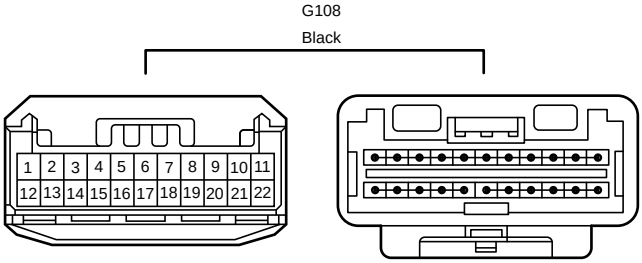

90980-12B54

G111
Black

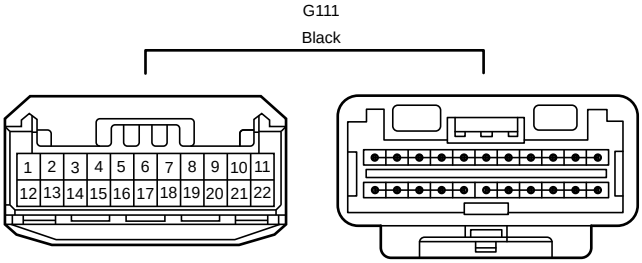

90980-12B54

G112
Black

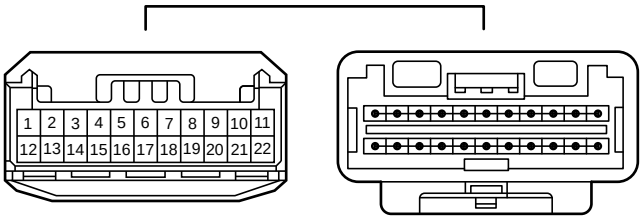

90980-12B54

G127
Black

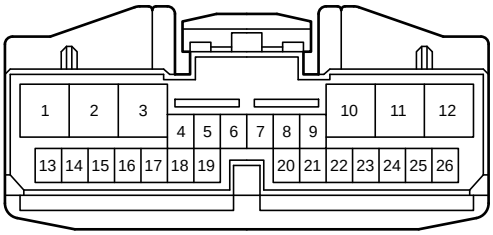

82824-12510

G138
Black

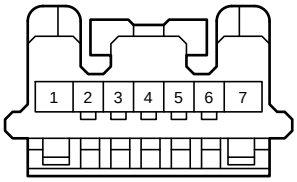

90980-12092

H2
Black

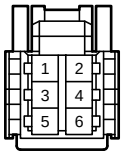

90980-12056

J1
White

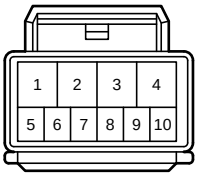

90980-12226

J11
White

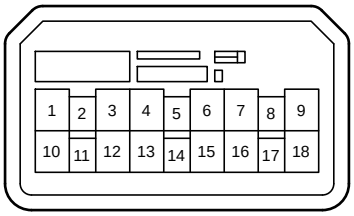

90980-12122

J12
White

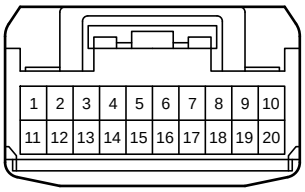

90980-12460

K1
White

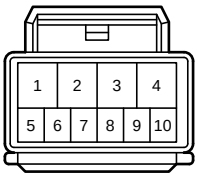

90980-12226

K5
White

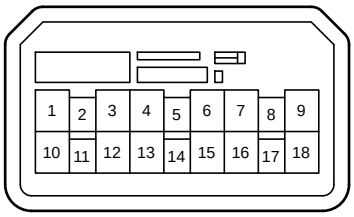

90980-12122

K6
White

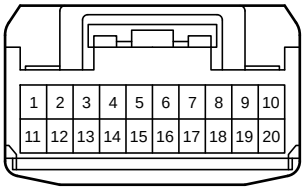

90980-12460

L1
White

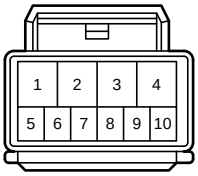

90980-12226

L7
White

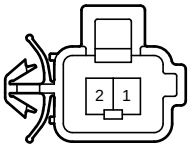

90980-11299

L8
White



90980-11918

L9
Black

90980-10871

M1
White

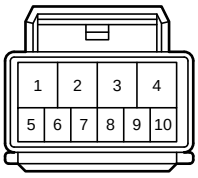

90980-12226

M7
White

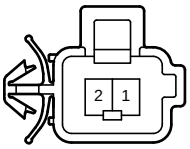

90980-11299

M8
White



90980-11918

M9
Black

90980-10871

N1
Black

90980-10871

N2
Black

90980-10871

N3
Black

90980-10871

N4
Black

90980-10871

N16
Black

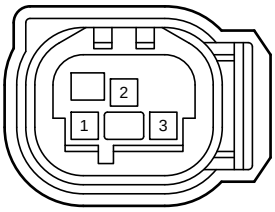

90080-98237

N28
Black

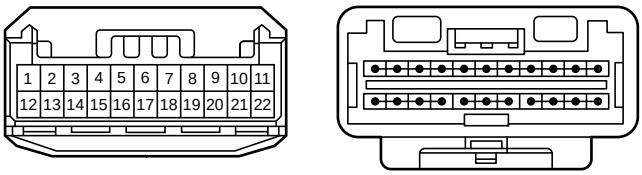

90980-12B54

N29
Black

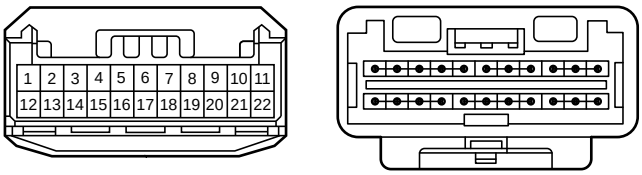

90980-12B54

N30
Black

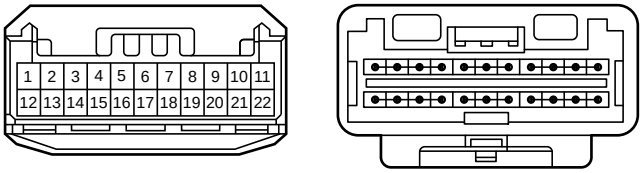

90980-12B54

N31
Black

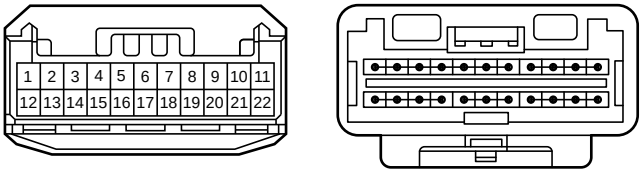

90980-12B54

Q1
Gray

Q2
White

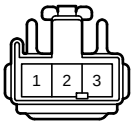

90980-10908

Q3
White

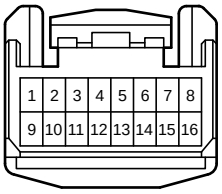

90980-12553

2C
White

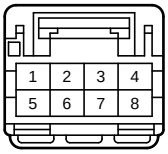

90980-12A54

2D
White

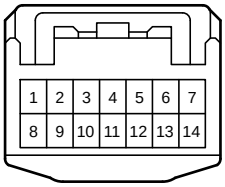

90980-12370

2J
White

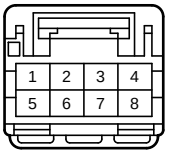

90980-12A54

2L
White

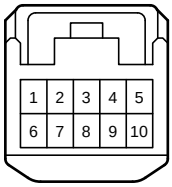

90980-12368

2P
White

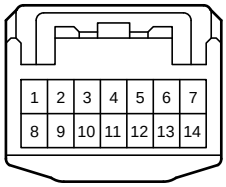

90980-12370

2Q
White

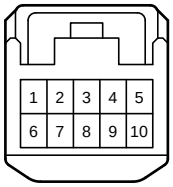

90980-12368

AG1
White

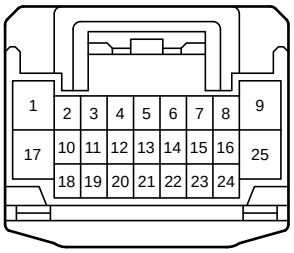

90980-12414

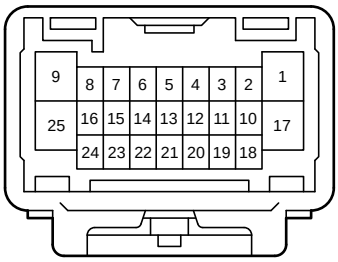

90980-12413

AG6
White

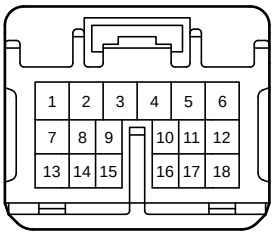

90980-12745

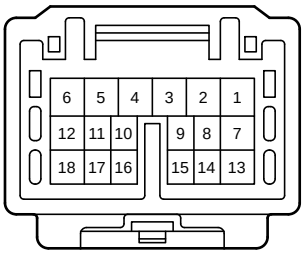

90980-12744

AG7
White

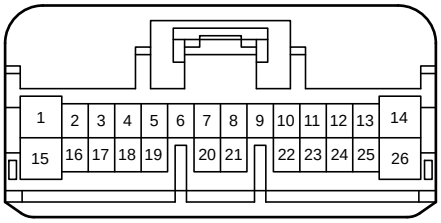

90980-12771

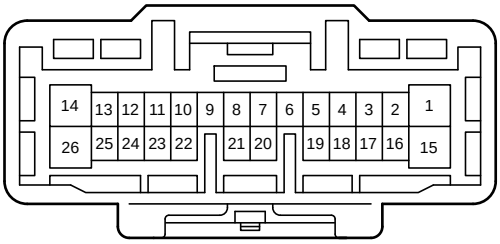

90980-12770

AN1
White

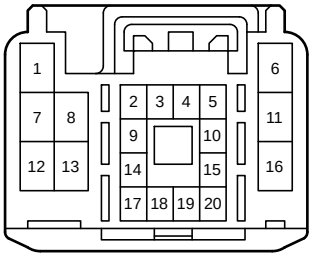

82824-52530

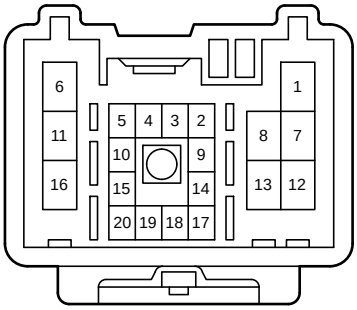

82824-52520

GH1
White

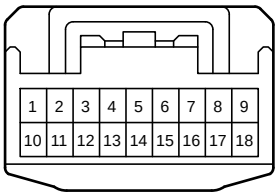

90980-12412

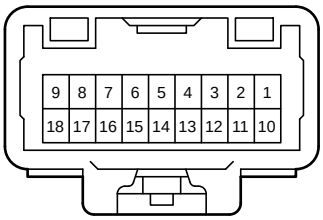

90980-12411

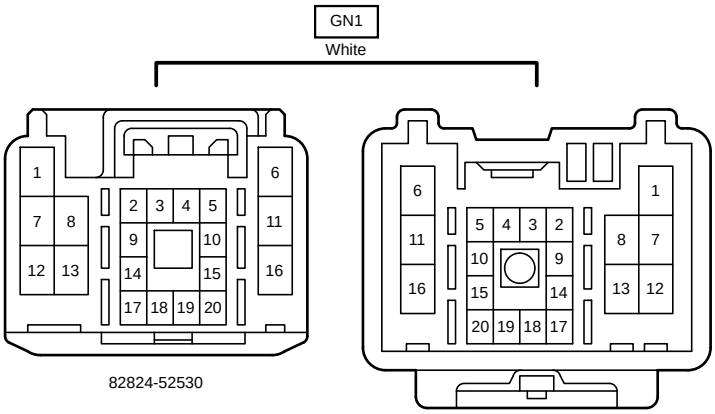
GN1
White
82824-52530
82824-52520

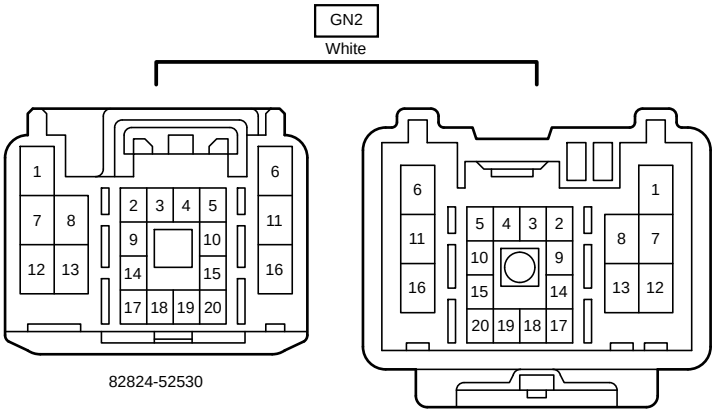
GN2
White
82824-52530
82824-52520

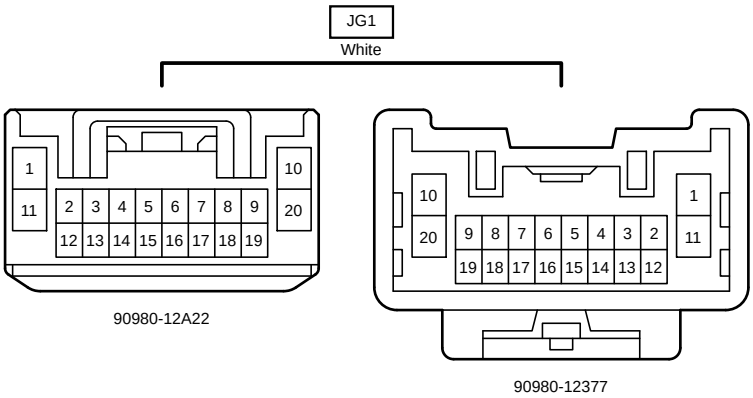
JG1
White
90980-12A22
90980-12377

JG2
White

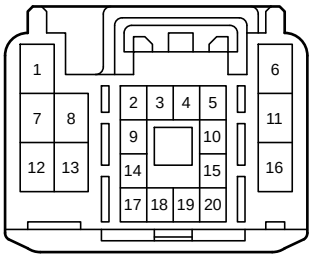

82824-52530

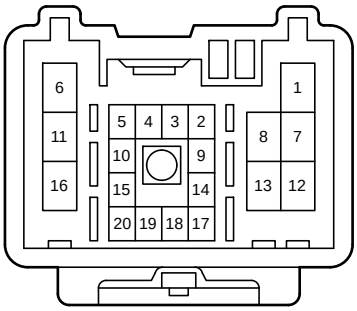

82824-52520

JN1
White

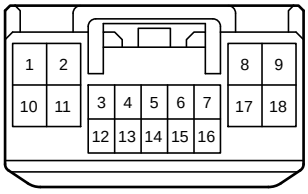

90980-12A21

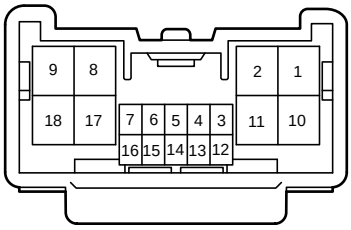

90980-12B07

KG1
White

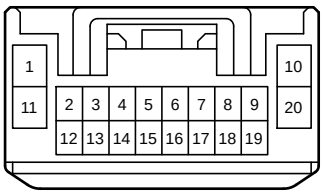

90980-12A22

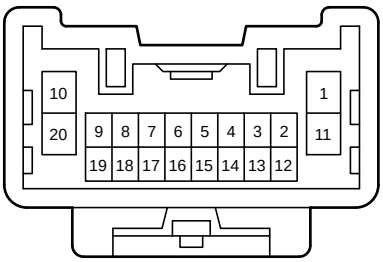

90980-12377

KG2
White

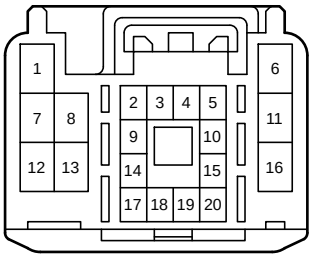

82824-52530

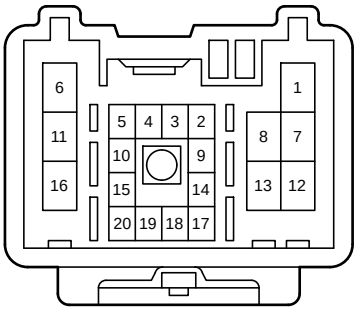

82824-52520

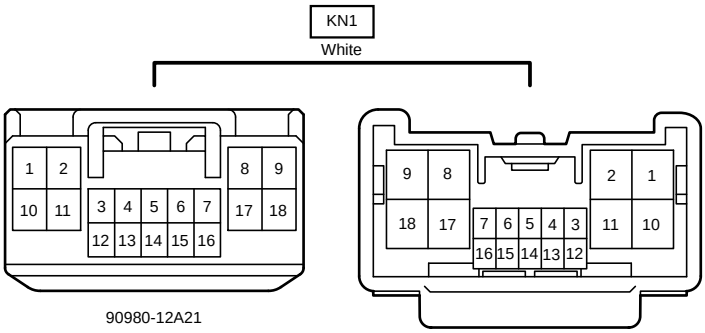

90980-12A21

90980-12B07

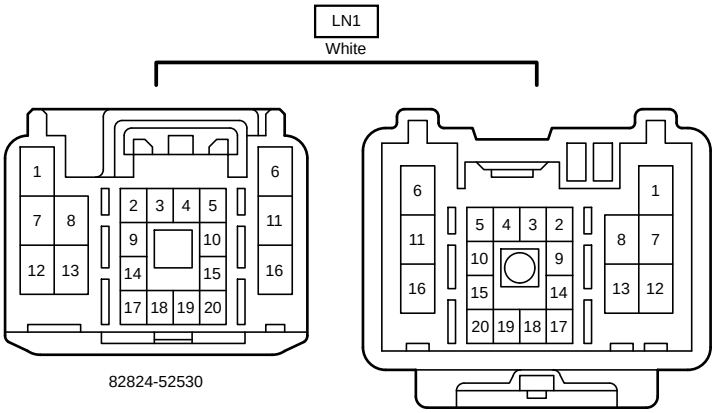

82824-52530

82824-52520

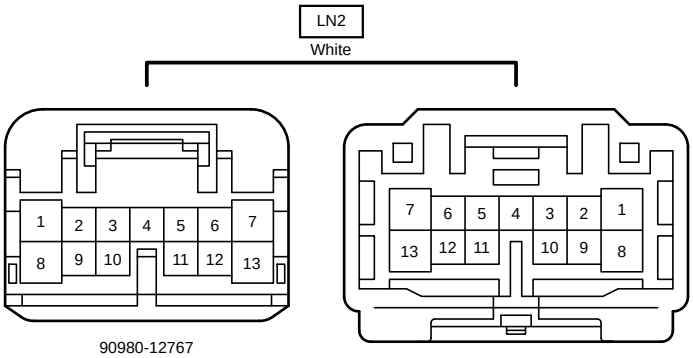

90980-12767

90980-12766

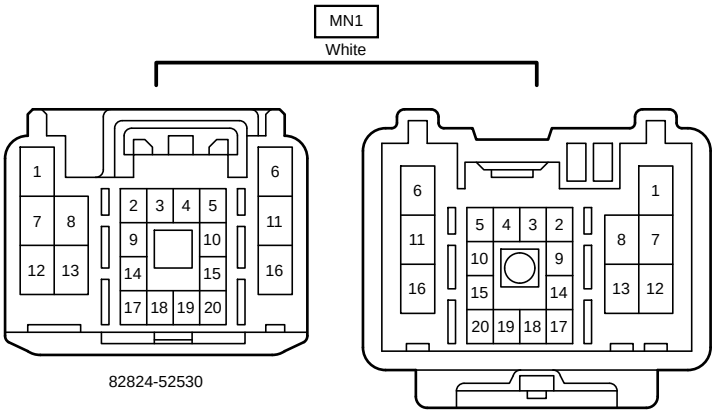

82824-52530

82824-52520

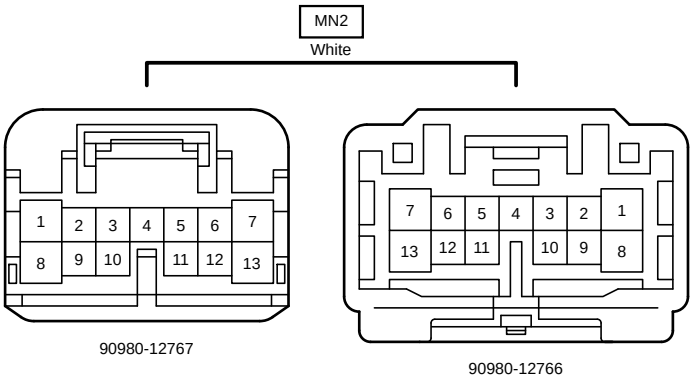
MN2
White
1 2 3 4 5 6 7
8 9 10 11 12 13
7 6 5 4 3 2 1
13 12 11 10 9 8
90980-12767
90980-12766

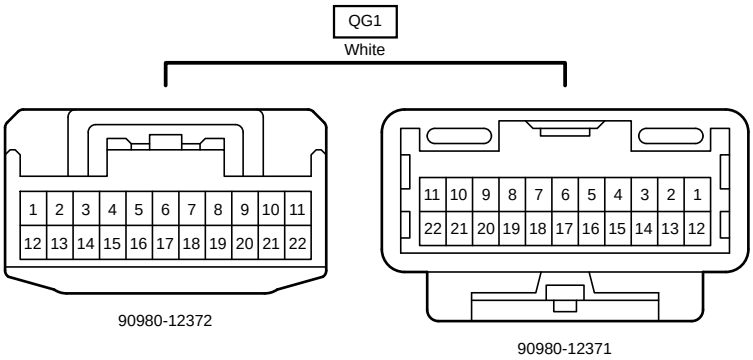
QG1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12
90980-12372
90980-12371