POWER STEERING GEAR (Rigid Front Suspension)

SR0QD–01

COMPONENTS

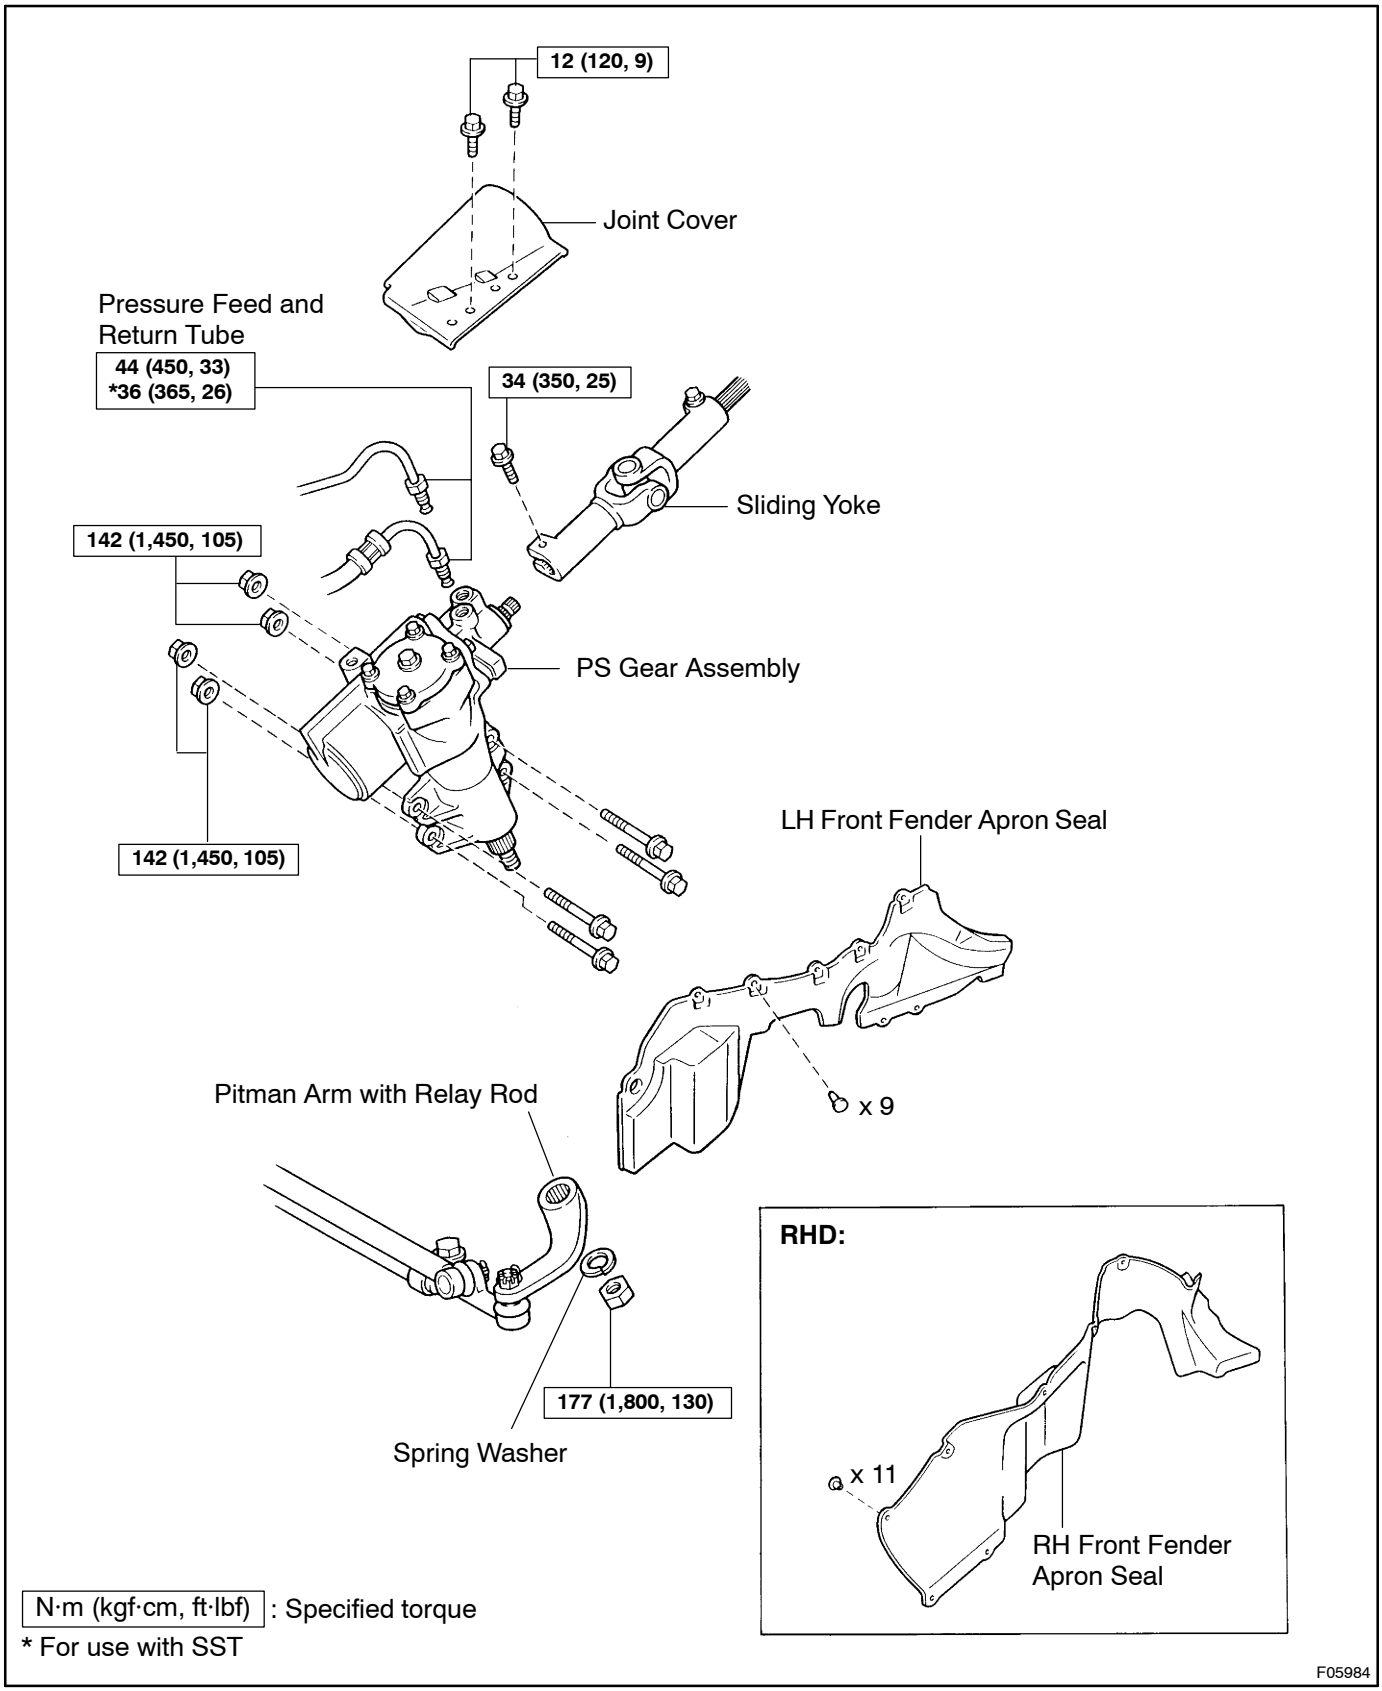

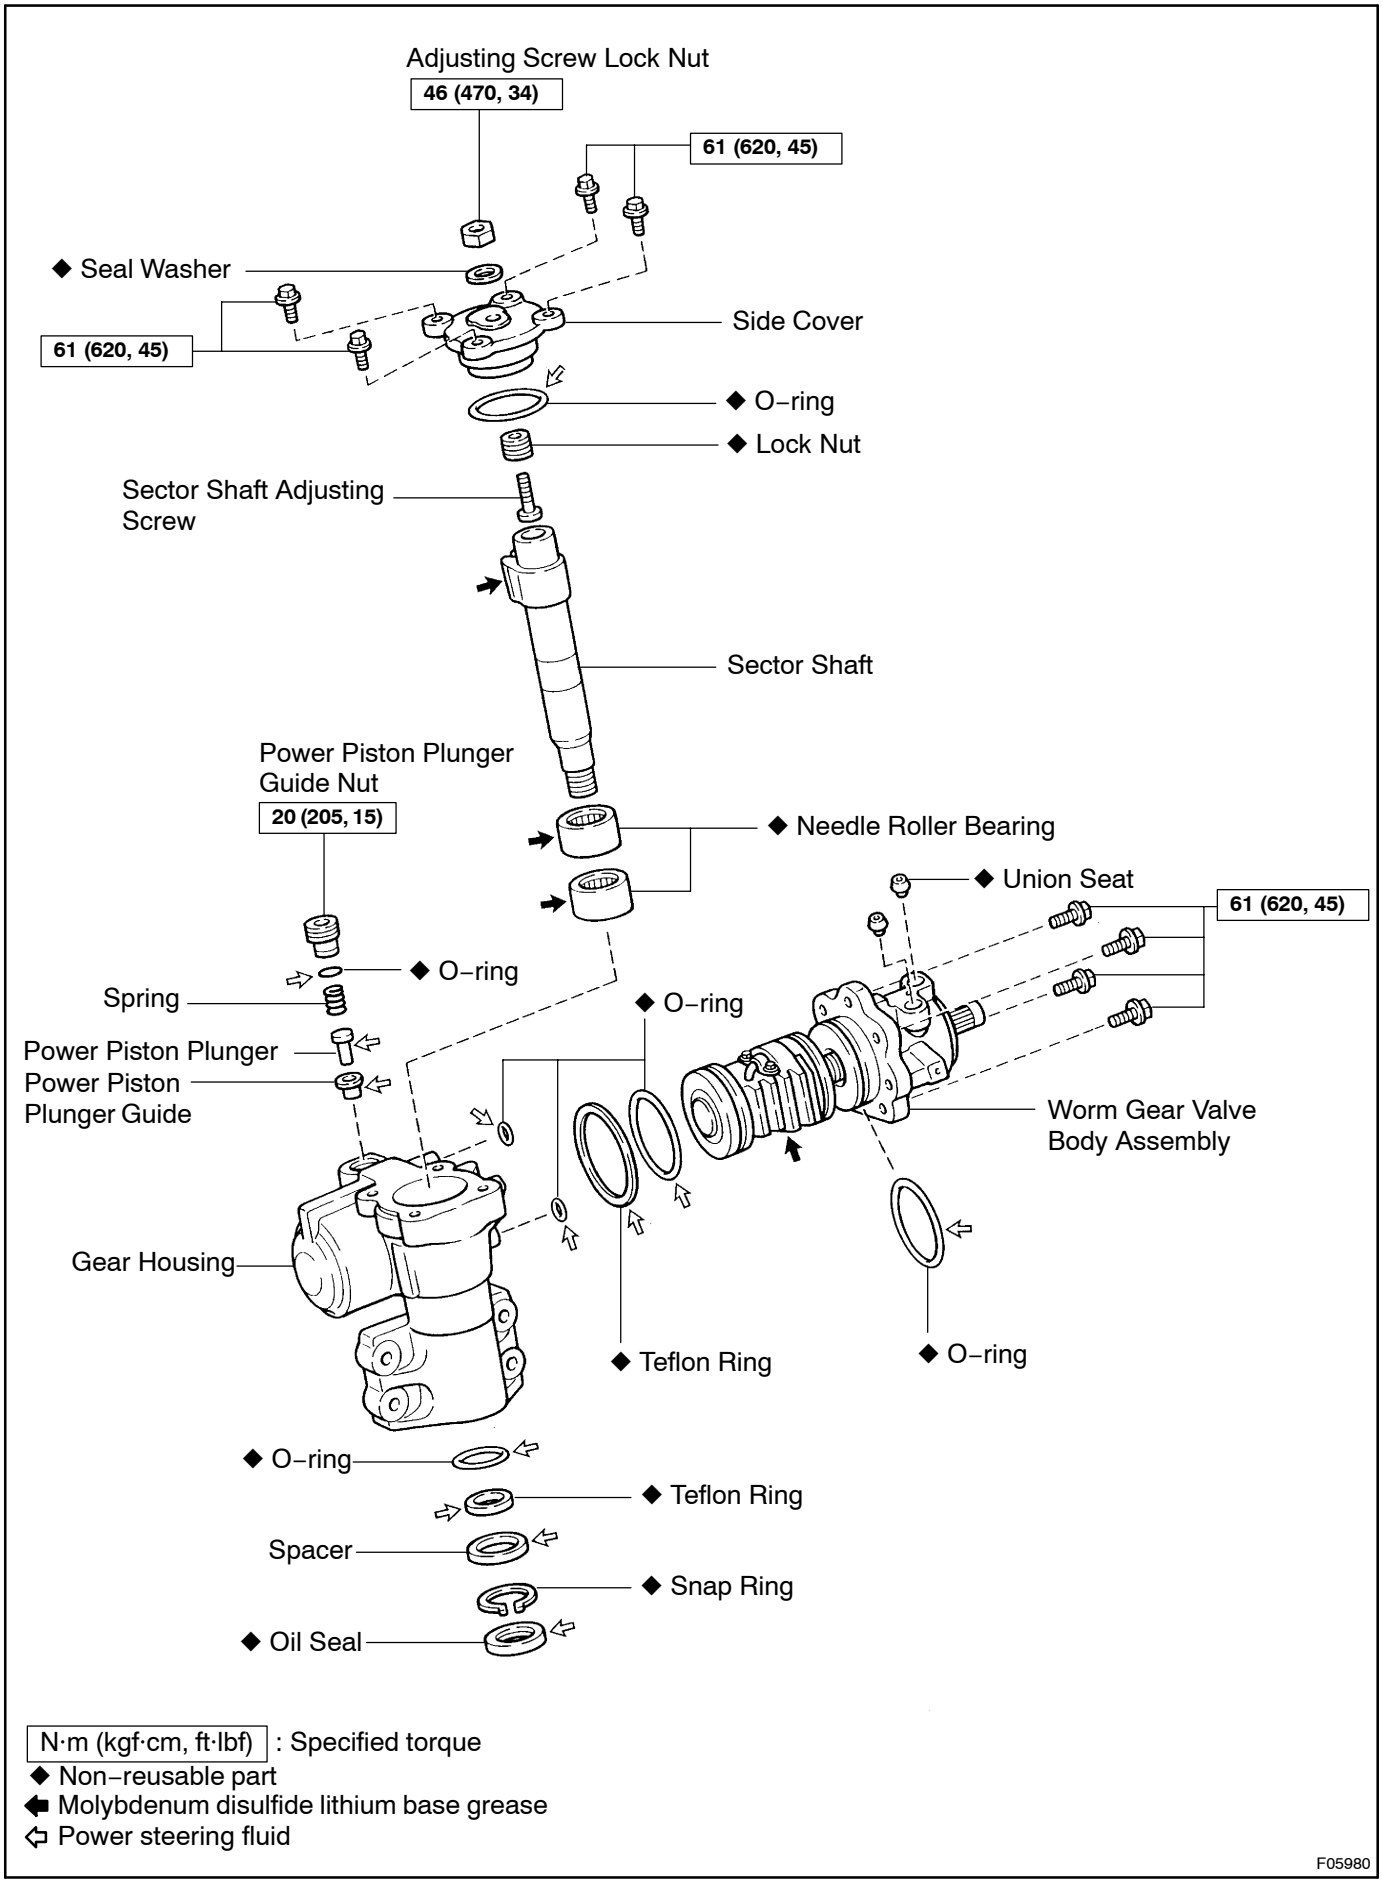
Adjusting Screw Lock Nut
46 (470, 34)
61 (620, 45)
◆ Seal Washer
Side Cover
61 (620, 45)
◆ O–ring
◆ Lock Nut
Sector Shaft Adjusting Screw
Sector Shaft
Power Piston Plunger Guide Nut
20 (205, 15)
◆ Needle Roller Bearing
◆ Union Seat
61 (620, 45)
◆ O–ring
Spring
◆ O–ring
Power Piston Plunger
Power Piston Plunger Guide
Worm Gear Valve Body Assembly
Gear Housing
◆ Teflon Ring
◆ O–ring
◆ O–ring
◆ Teflon Ring
Spacer
◆ Snap Ring
◆ Oil Seal
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Molybdenum disulfide lithium base grease
Power steering fluid
F05980