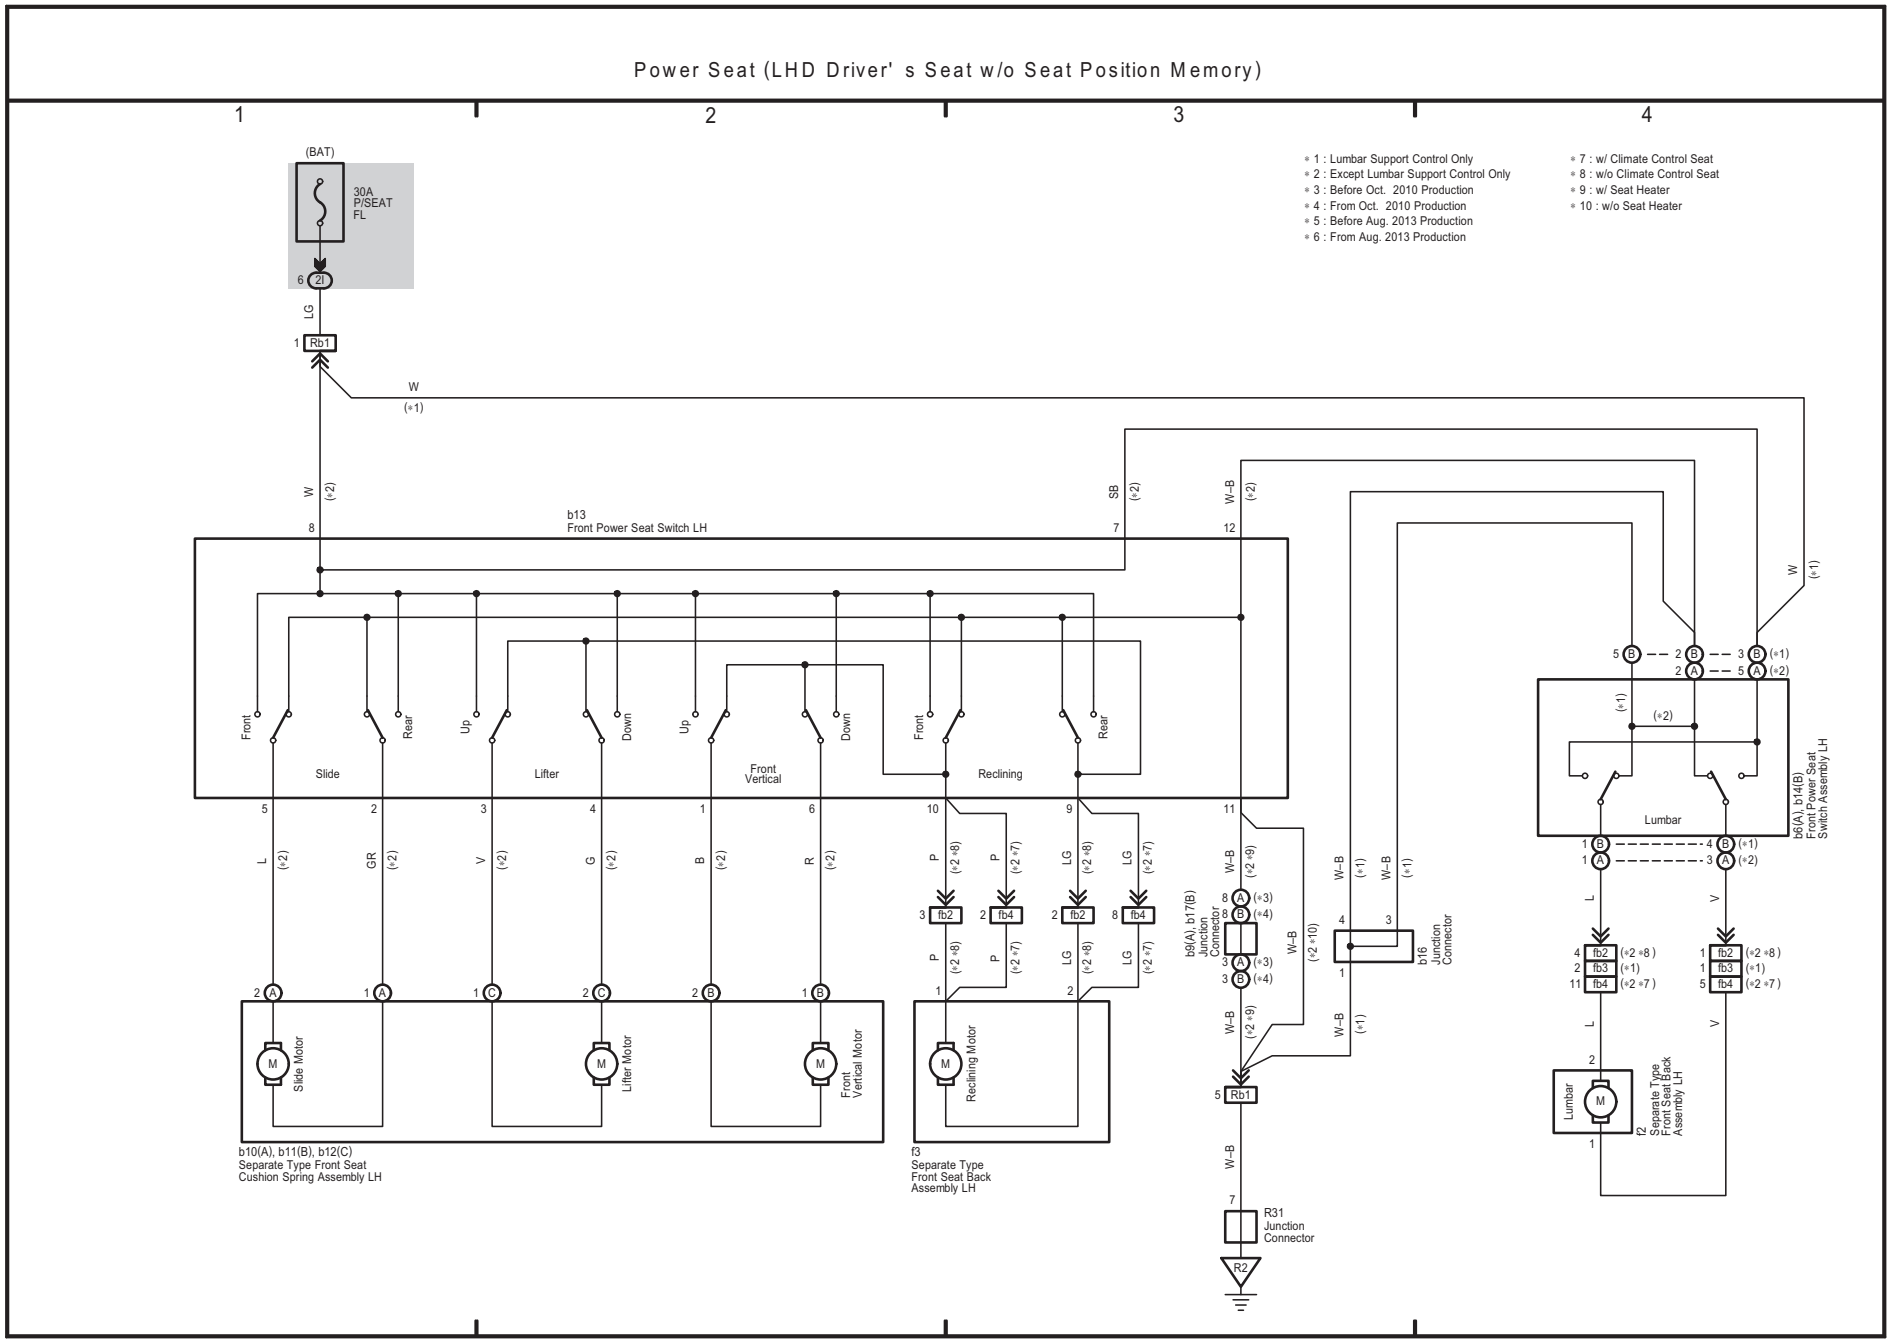
Power Seat (LHD Driver' s Seat w/o Seat Position Memory)
1
2
3
4
(BAT)
30A
P/SEAT
FL
2I
Rb1
LG
W
(*1)
W
(*2)
SB
(*2)
W-B
(*2)
b13
Front Power Seat Switch LH
Front
Rear
Up
Down
Up
Down
Front
Rear
Slide
Lifter
Front Vertical
Reclining
L
(*2)
GR
(*2)
V
(*2)
G
(*2)
B
(*2)
R
(*2)
P
(*2 *8)
P
(*2 *7)
LG
(*2 *8)
LG
(*2 *7)
fb2
fb4
Slide Motor
Lifter Motor
Front Vertical Motor
Reclining Motor
b10(A), b11(B), b12(C)
Separate Type Front Seat
Cushion Spring Assembly LH
f3
Separate Type
Front Seat Back
Assembly LH
W-B
(*2 *9)
W-B
(*2 *10)
b9(A), b17(B)
Junction
Connector
b16
Junction
Connector
Rb1
R31
Junction
Connector
R2
W-B
(*1)
W
(*1)
Lumbar
b6(A), b14(B)
Front Power Seat
Switch Assembly LH
fb2
fb3
fb4
(*2 *8)
(*1)
(*2 *7)
Lumbar
f2
Separate Type
Front Seat Back
Assembly LH
* 1 : Lumbar Support Control Only
* 2 : Except Lumbar Support Control Only
* 3 : Before Oct. 2010 Production
* 4 : From Oct. 2010 Production
* 5 : Before Aug. 2013 Production
* 6 : From Aug. 2013 Production
* 7 : w/ Climate Control Seat
* 8 : w/o Climate Control Seat
* 9 : w/ Seat Heater
* 10 : w/o Seat Heater