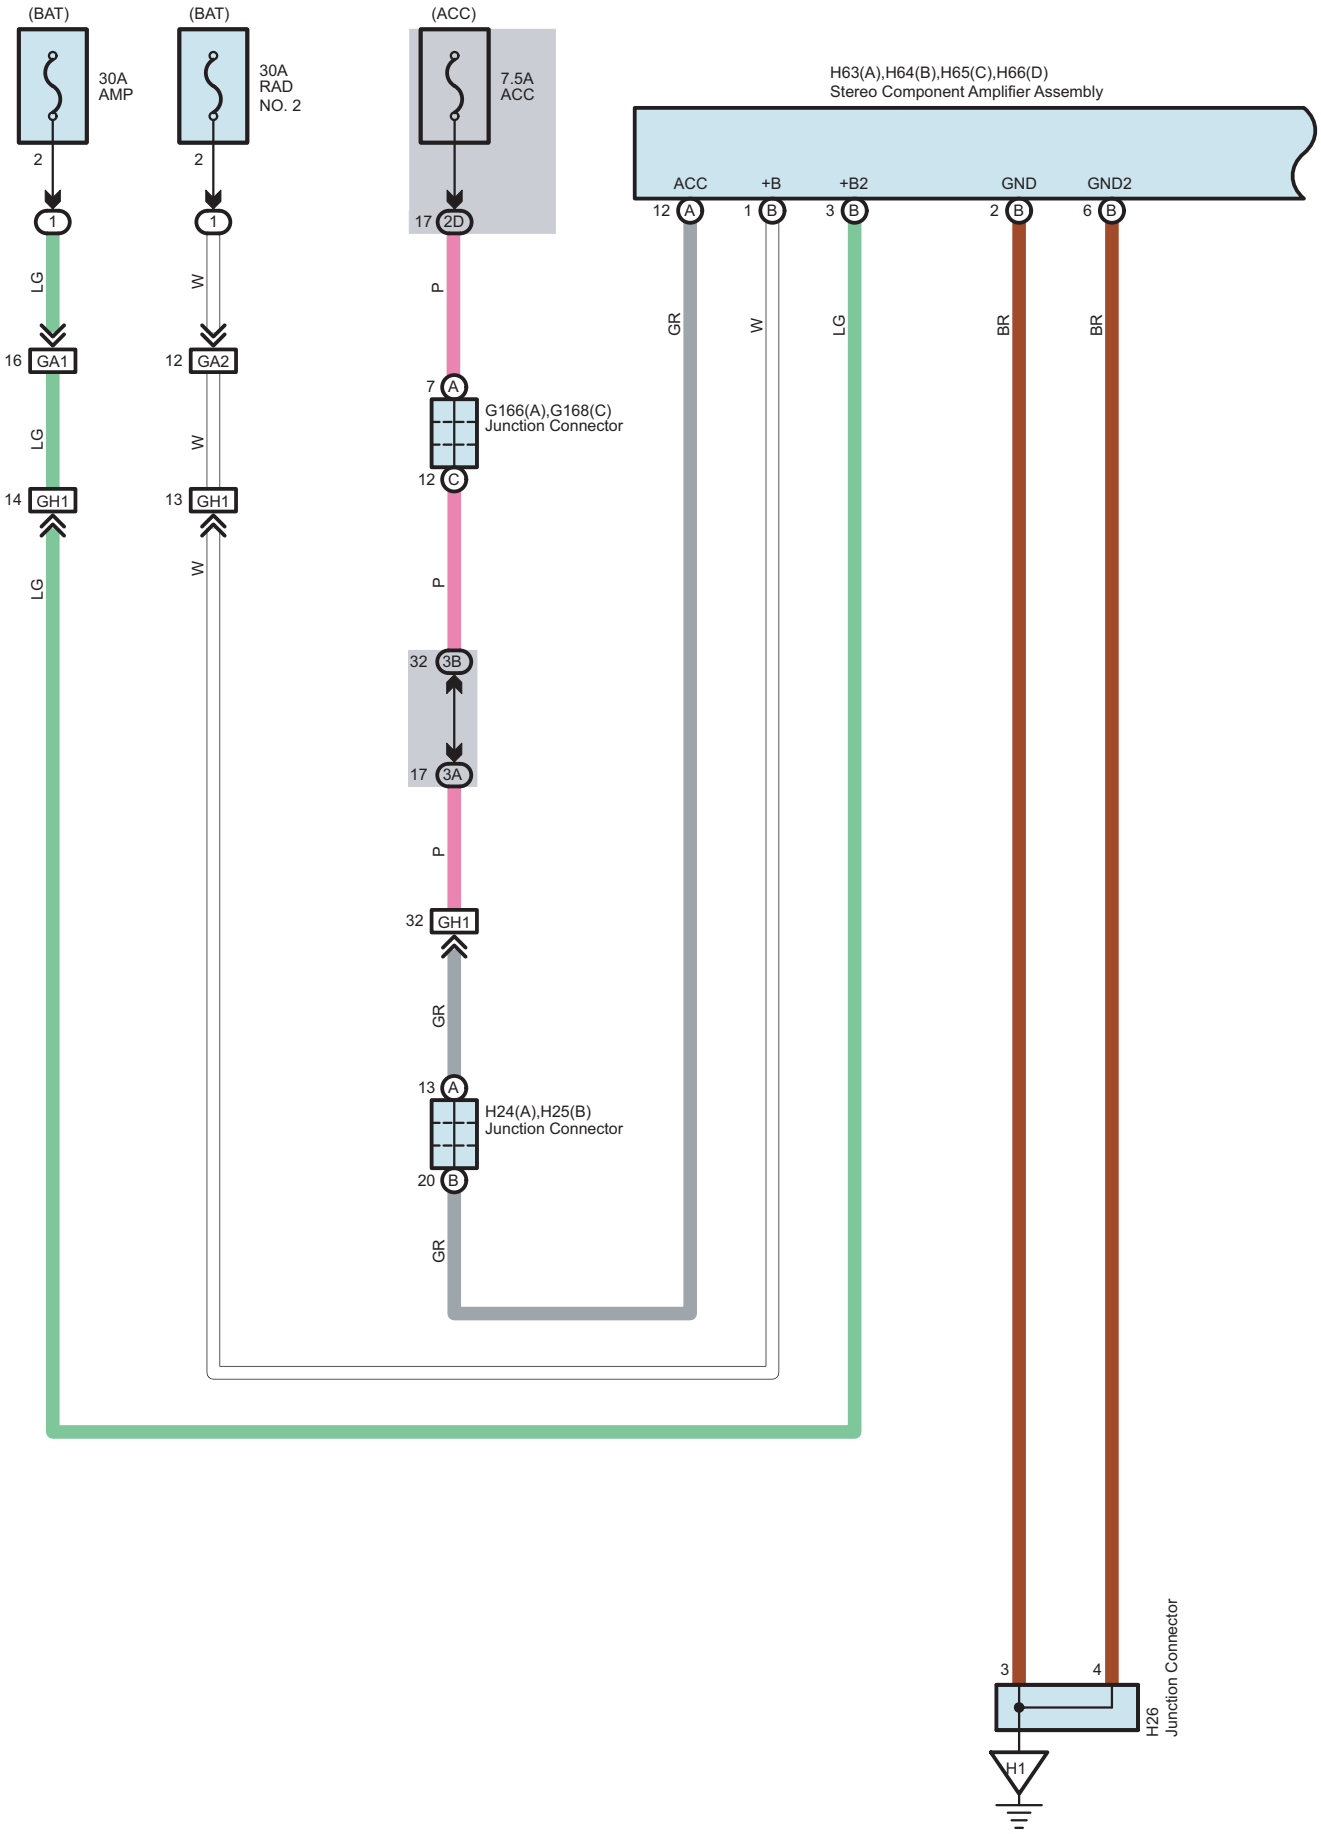
(BAT)
30A
AMP
(BAT)
30A
RAD
NO. 2
(ACC)
7.5A
ACC
H63(A),H64(B),H65(C),H66(D)
Stereo Component Amplifier Assembly
ACC
+B
+B2
GND
GND2
GA1
GA2
GH1
G166(A),G168(C)
Junction Connector
H24(A),H25(B)
Junction Connector
H26
Junction Connector
H1
LG
W
P
GR
BR

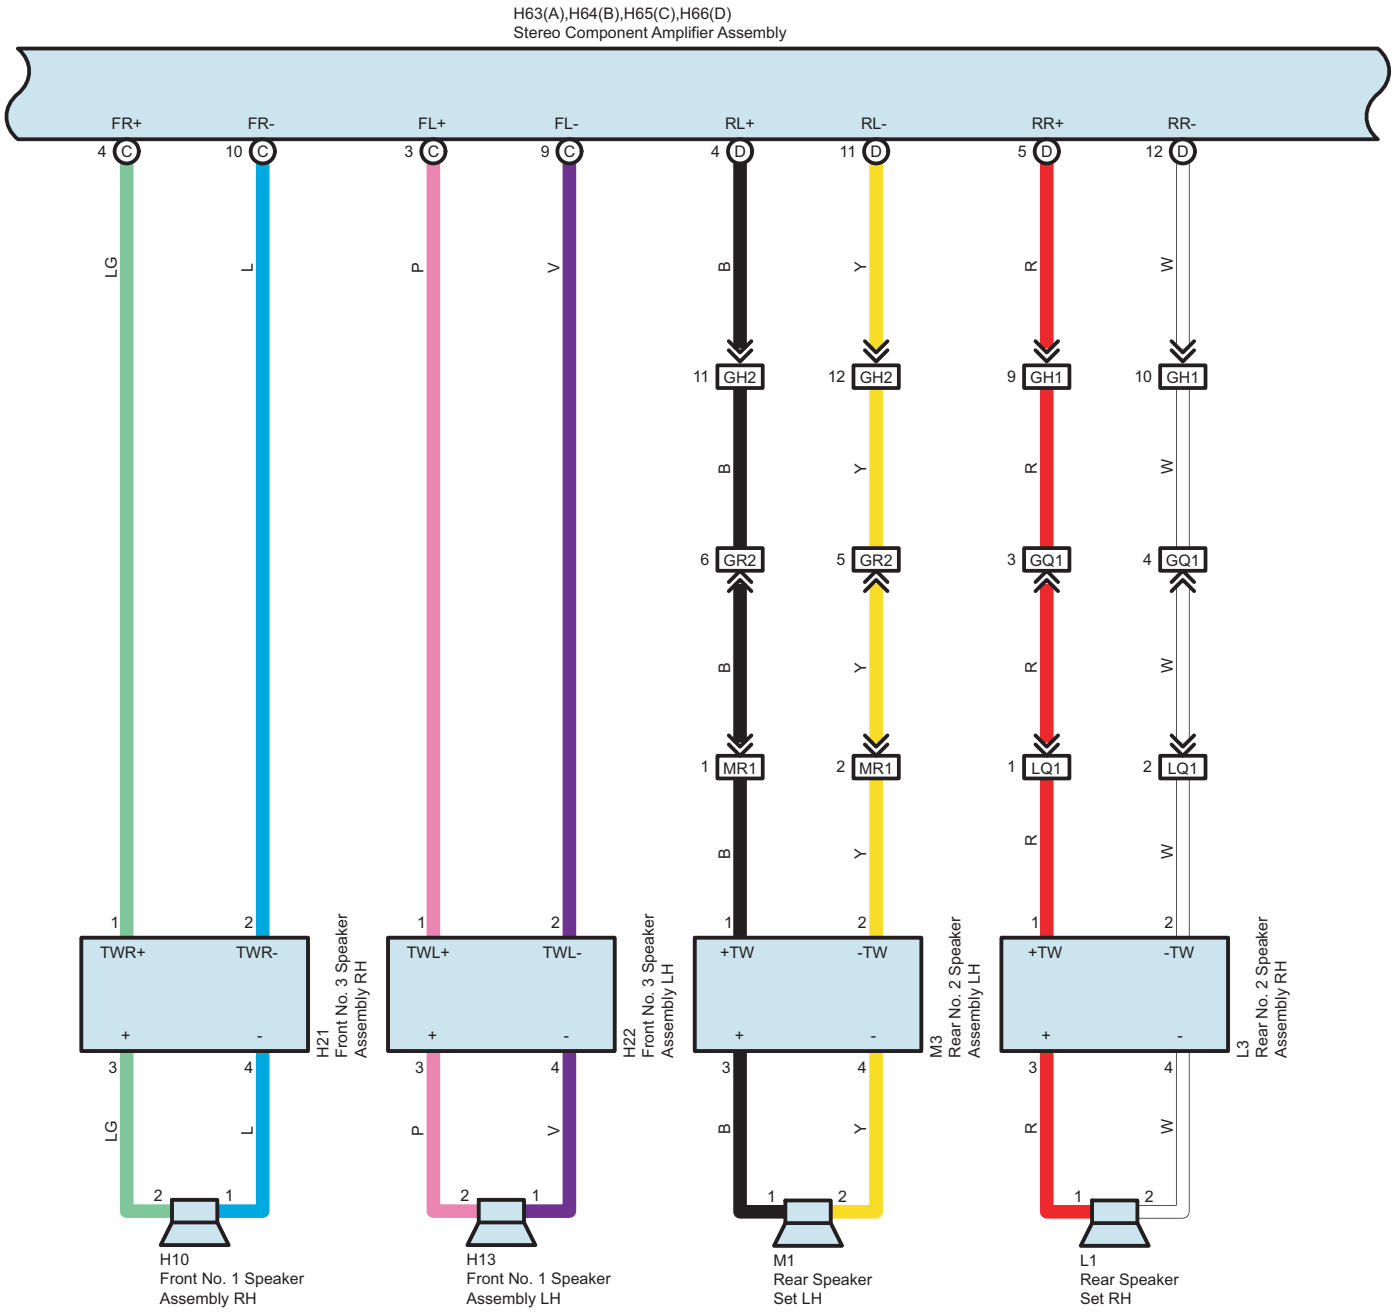
H63(A),H64(B),H65(C),H66(D)
Stereo Component Amplifier Assembly
FR+
FR-
FL+
FL-
RL+
RL-
RR+
RR-
GH2
GR2
MR1
GH1
GQ1
LQ1
TWR+
TWR-
TWL+
TWL-
+TW
-TW
H21
Front No. 3 Speaker
Assembly RH
H22
Front No. 3 Speaker
Assembly LH
M3
Rear No. 2 Speaker
Assembly LH
L3
Rear No. 2 Speaker
Assembly RH
H10
Front No. 1 Speaker
Assembly RH
H13
Front No. 1 Speaker
Assembly LH
M1
Rear Speaker
Set LH
L1
Rear Speaker
Set RH

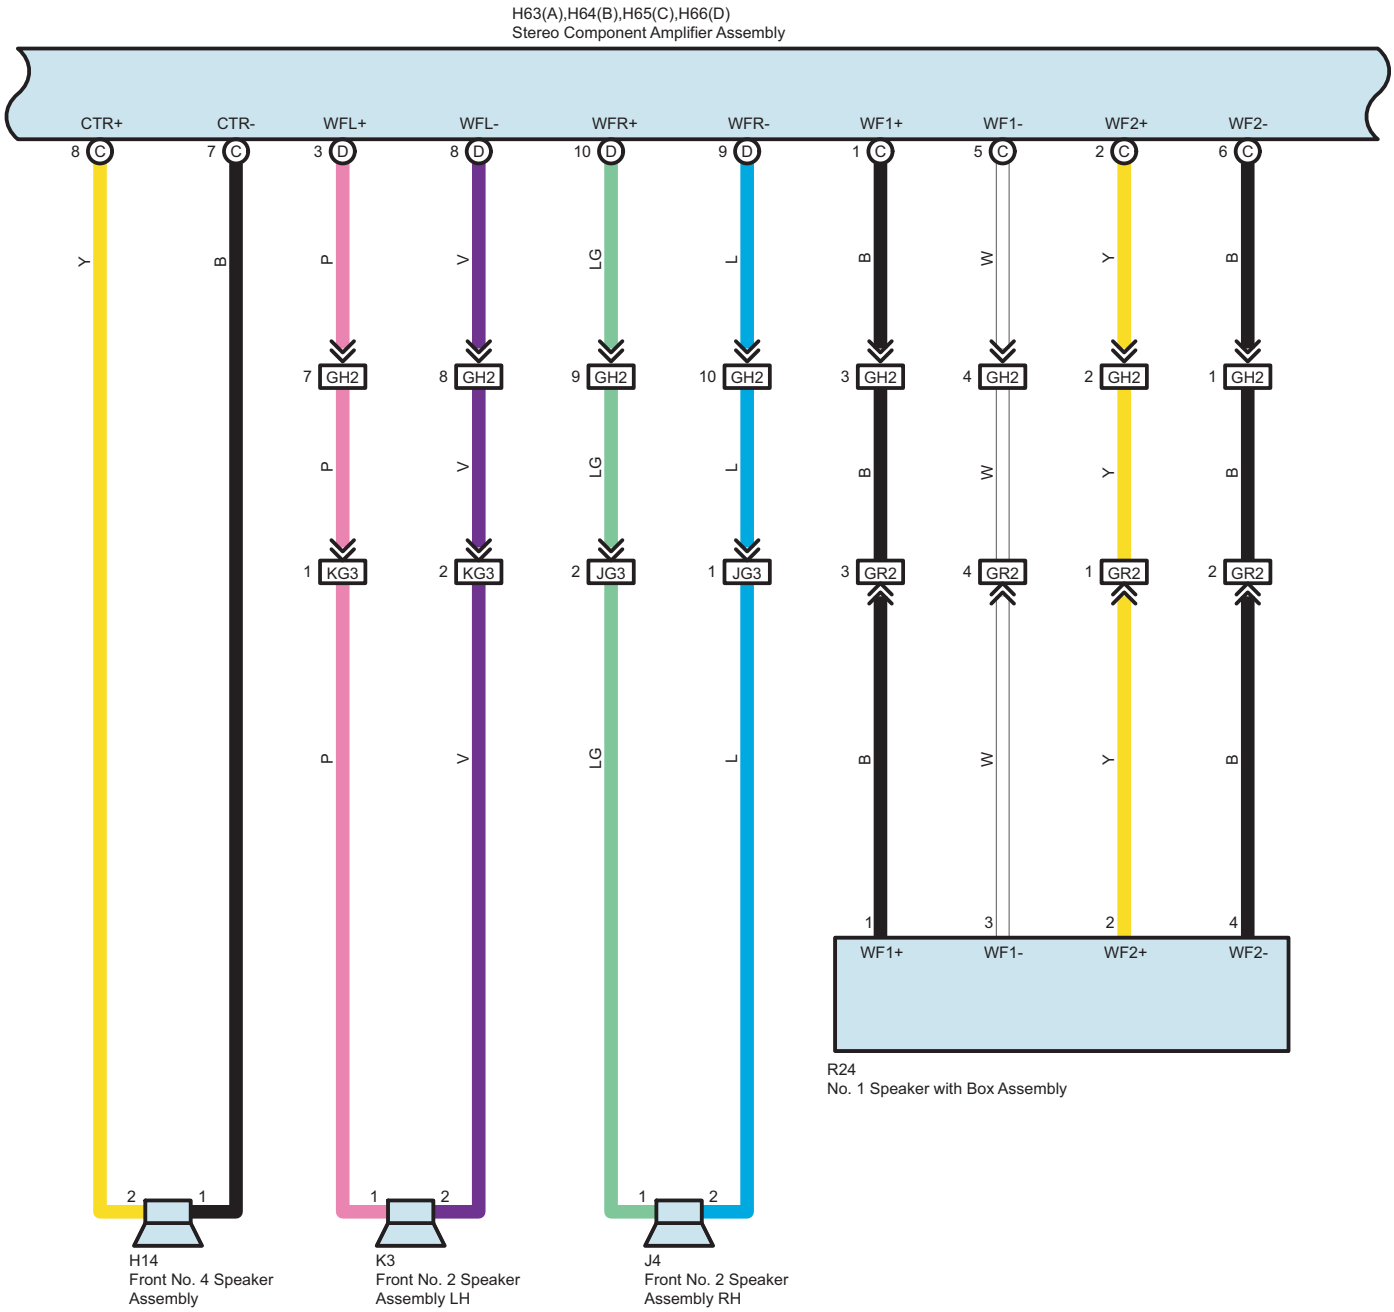
H63(A),H64(B),H65(C),H66(D)
Stereo Component Amplifier Assembly
CTR+
CTR-
WFL+
WFL-
WFR+
WFR-
WF1+
WF1-
WF2+
WF2-
GH2
KG3
JG3
GR2
R24
No. 1 Speaker with Box Assembly
H14
Front No. 4 Speaker Assembly
K3
Front No. 2 Speaker Assembly LH
J4
Front No. 2 Speaker Assembly RH

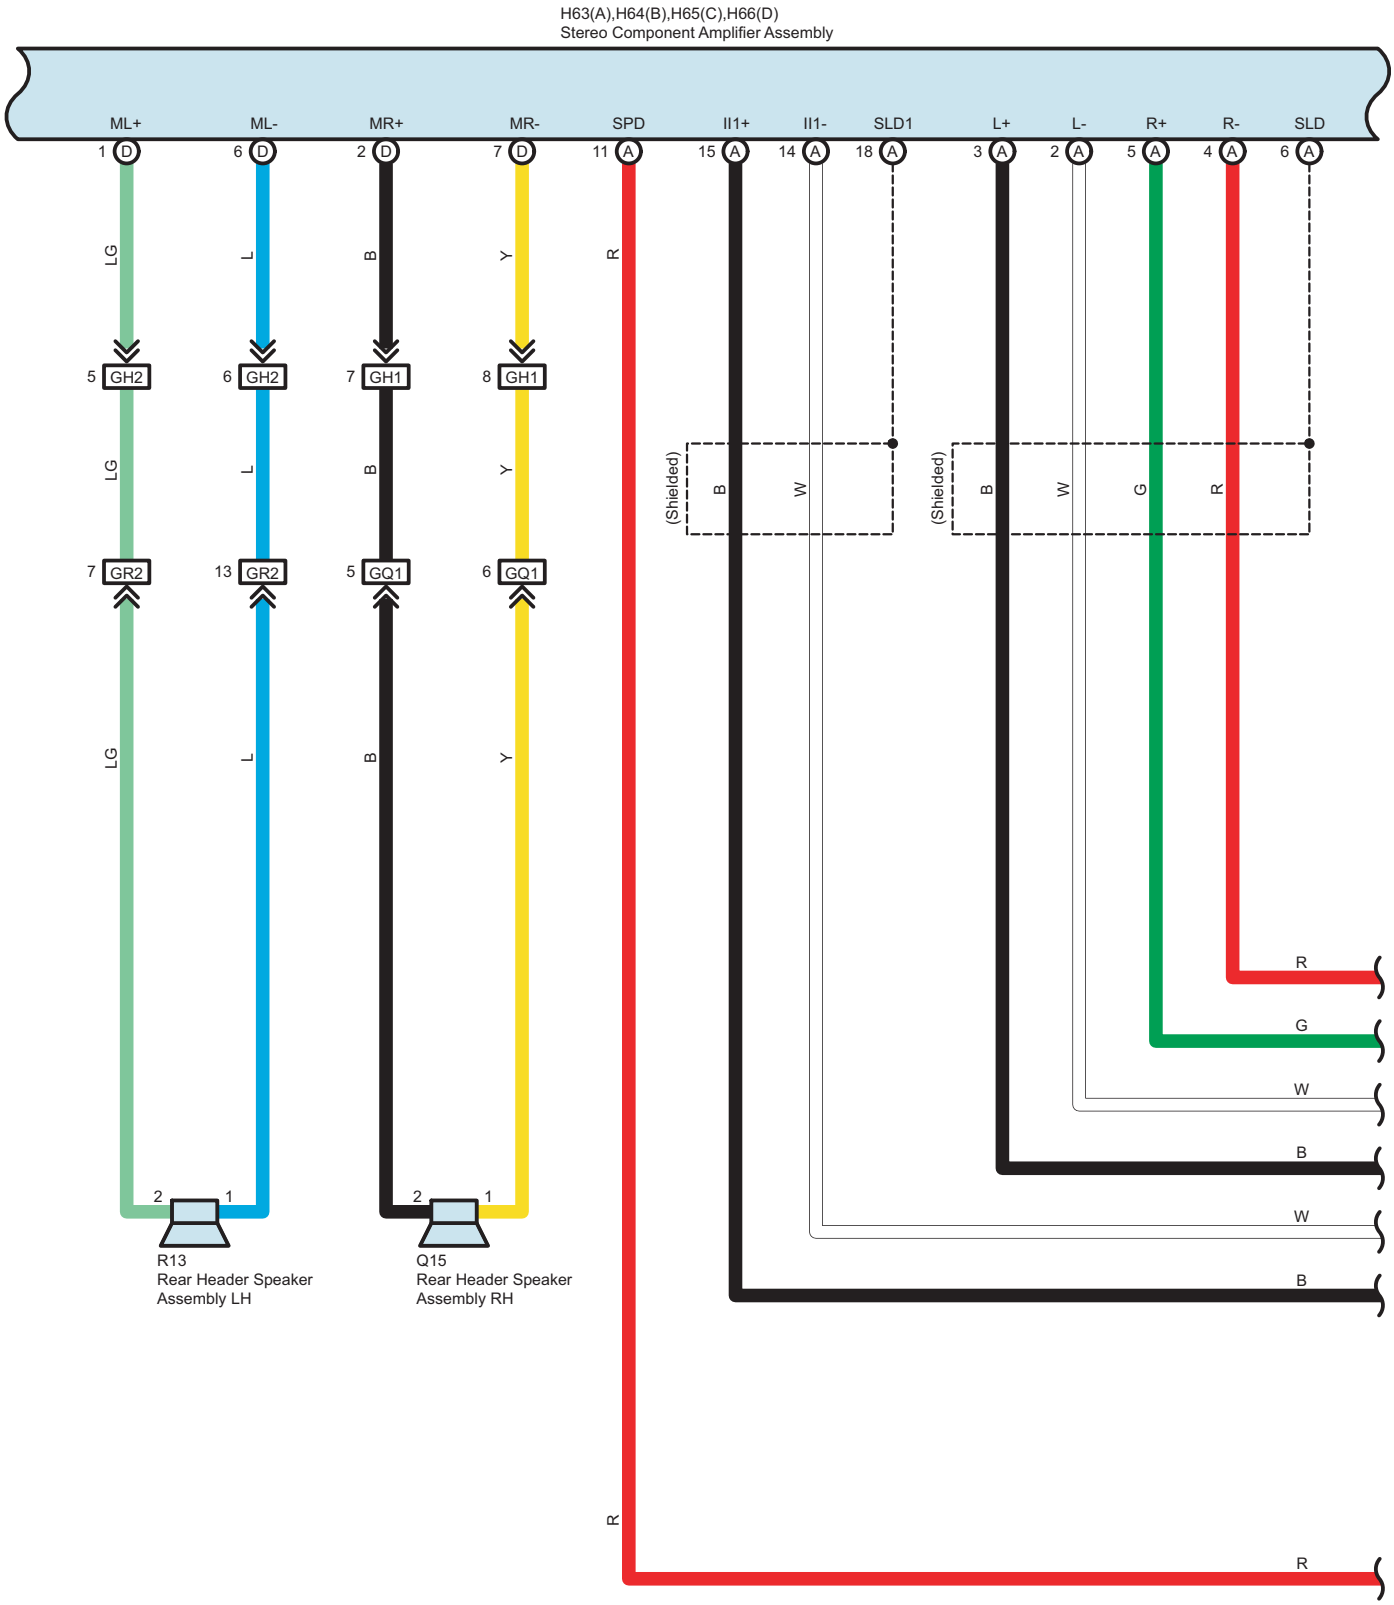
H63(A),H64(B),H65(C),H66(D)
Stereo Component Amplifier Assembly
ML+
ML-
MR+
MR-
SPD
II1+
II1-
SLD1
L+
L-
R+
R-
SLD
GH2
GH1
GR2
GQ1
(Shielded)
R13
Rear Header Speaker
Assembly LH
Q15
Rear Header Speaker
Assembly RH

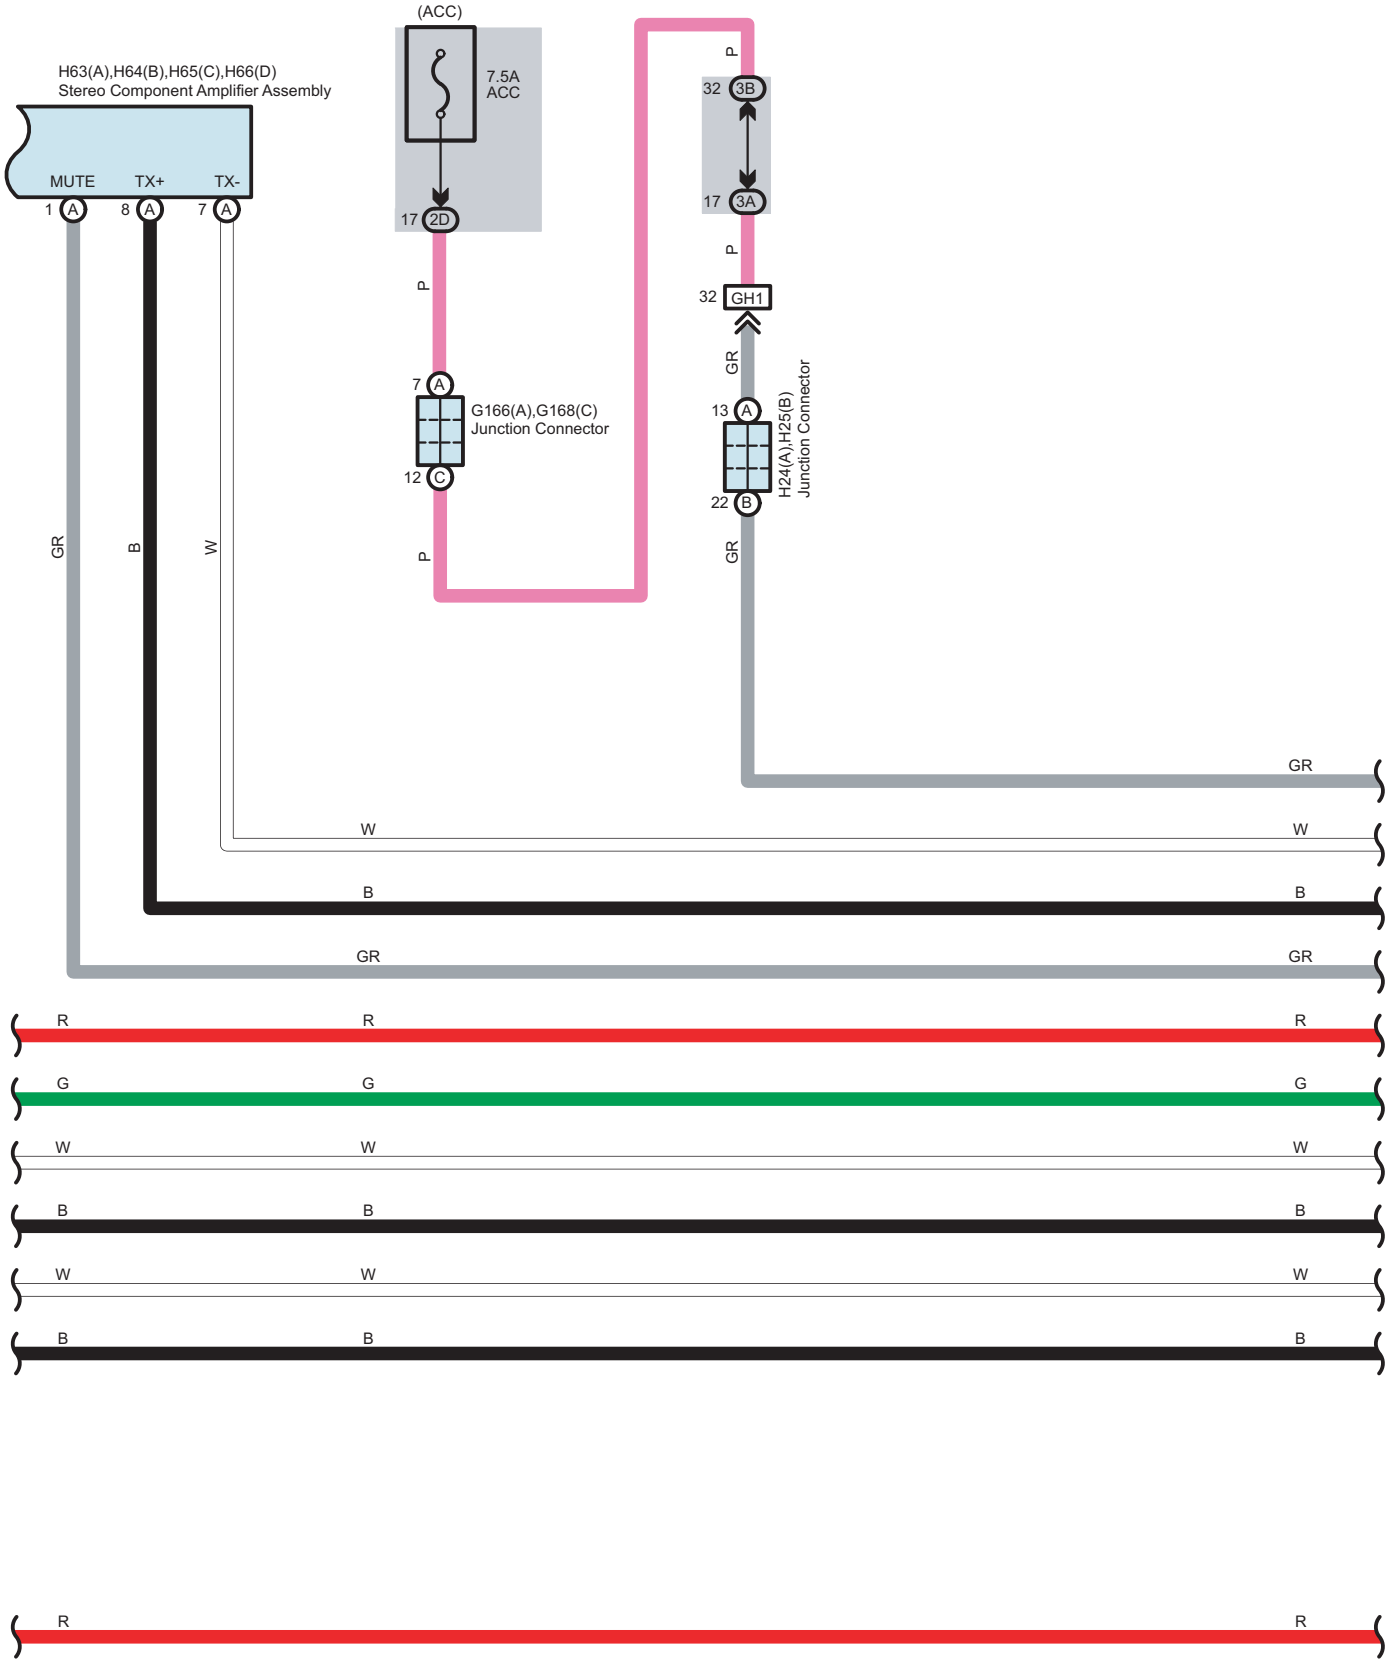
(ACC)
7.5A
ACC
17 2D
H63(A),H64(B),H65(C),H66(D)
Stereo Component Amplifier Assembly
MUTE
TX+
TX-
1 A
8 A
7 A
P
32 3B
17 3A
P
32 GH1
GR
7 A
G166(A),G168(C)
Junction Connector
12 C
13 A
22 B
H24(A),H25(B)
Junction Connector
P
GR
GR
W
W
B
B
GR
GR
R
R
R
G
G
G
W
W
W
B
B
B
W
W
W
B
B
B
R
R

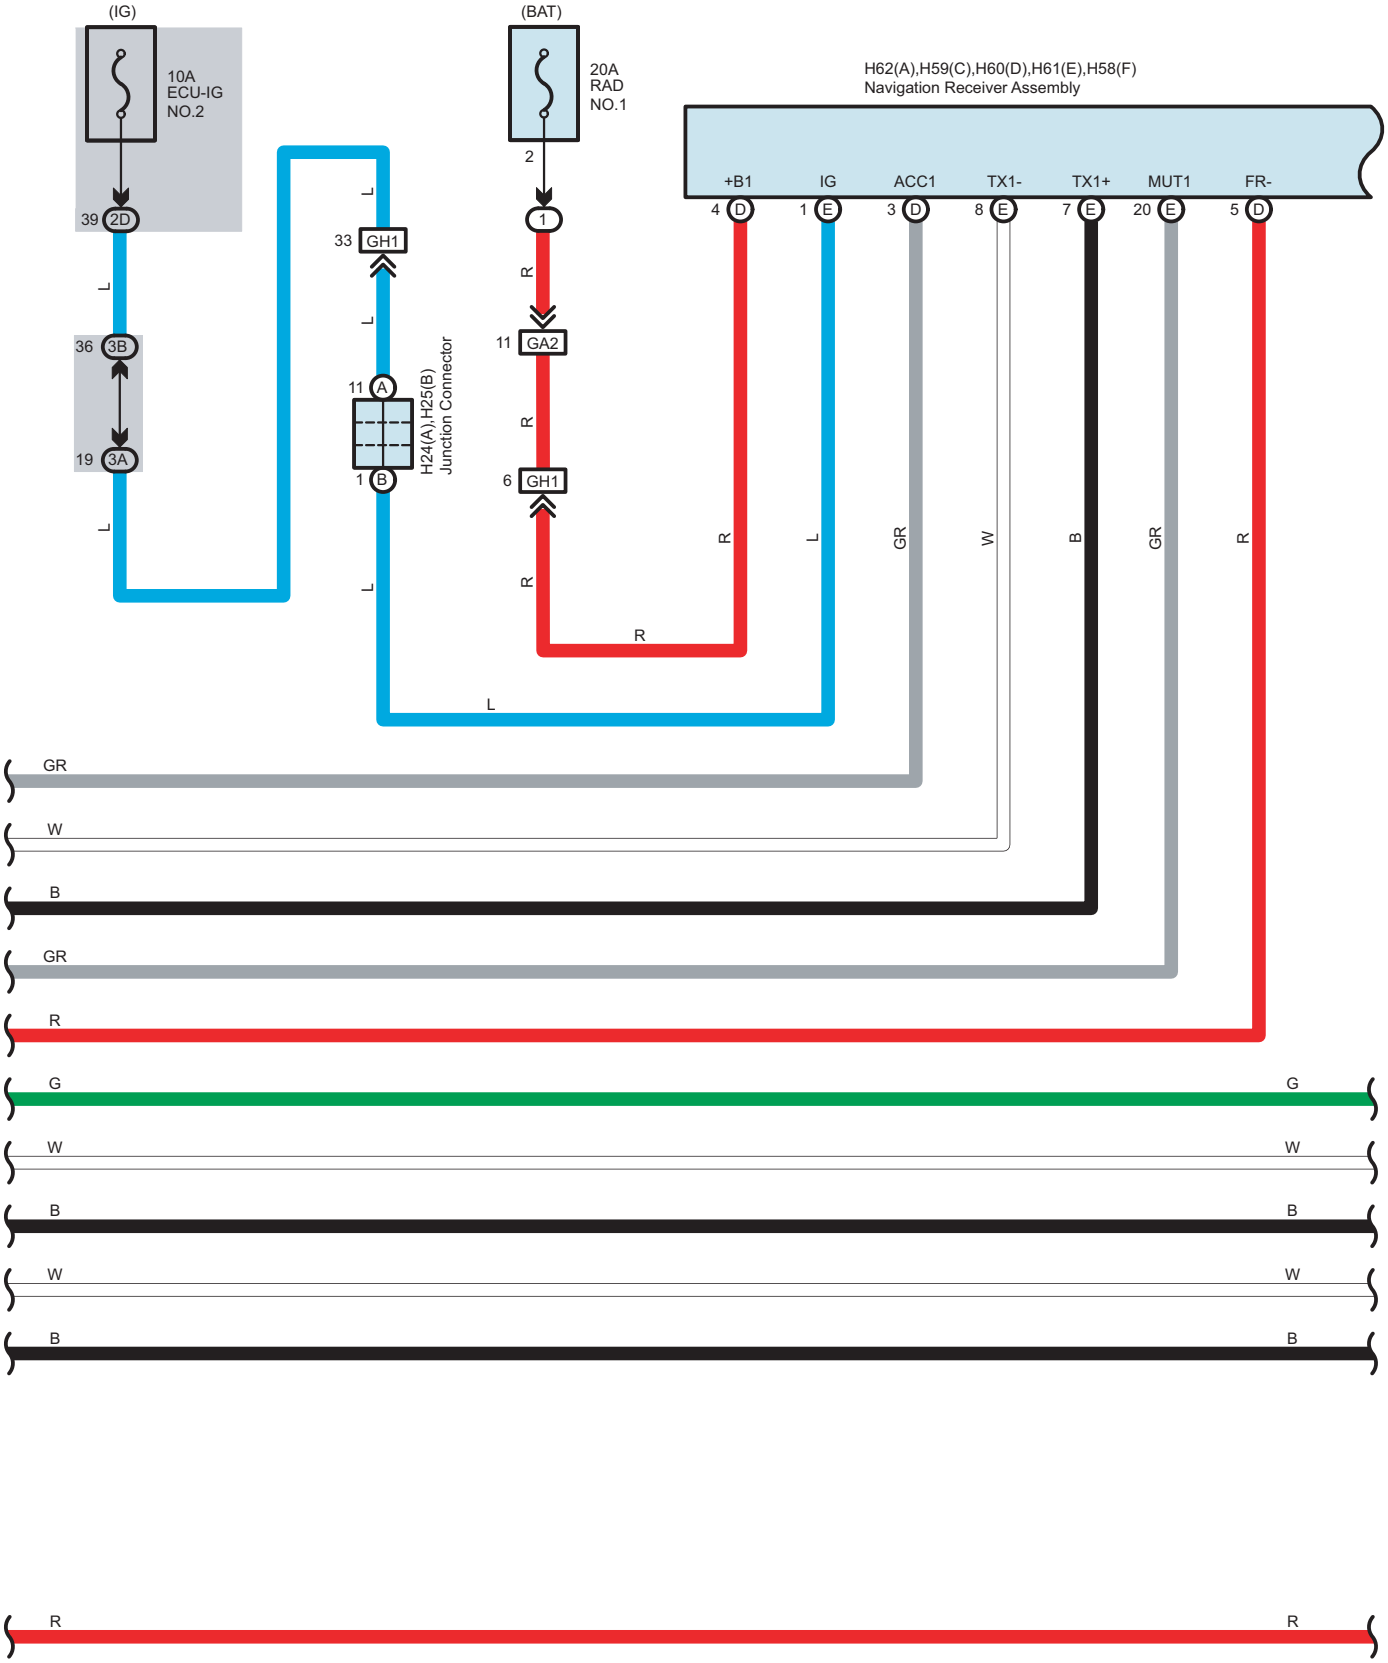
(IG)
10A
ECU-IG
NO.2
39 2D
36 3B
19 3A
33 GH1
11 A
1 B
H24(A),H25(B)
Junction Connector
(BAT)
20A
RAD
NO.1
2
1
11 GA2
6 GH1
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
+B1
IG
ACC1
TX1-
TX1+
MUT1
FR-
4 D
1 E
3 D
8 E
7 E
20 E
5 D
L
R
GR
W
B
G

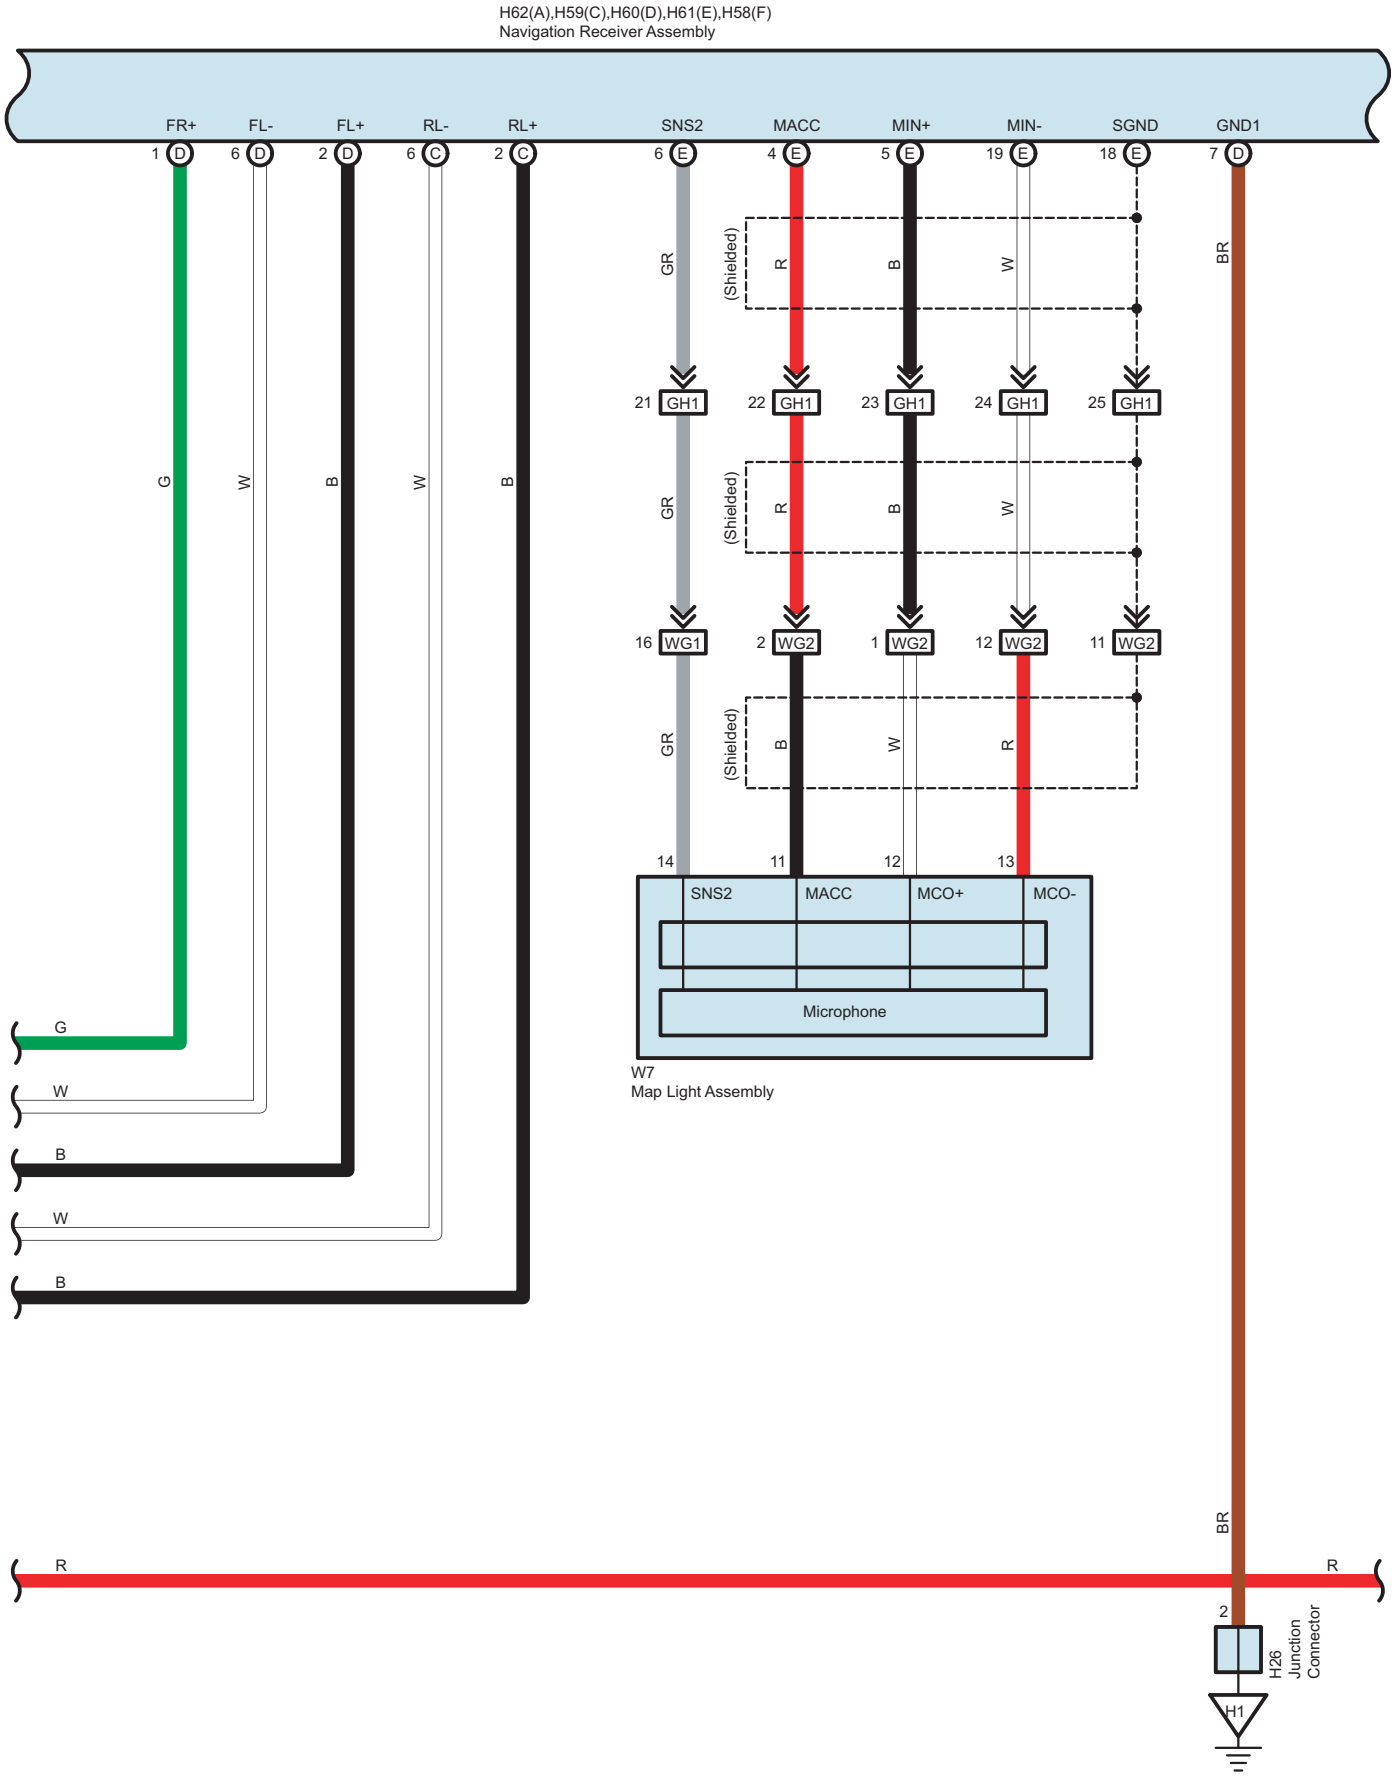
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
FR+
FL-
FL+
RL-
RL+
SNS2
MACC
MIN+
MIN-
SGND
GND1
1 D
6 D
2 D
6 C
2 C
6 E
4 E
5 E
19 E
18 E
7 D
GR
(Shielded)
R
B
W
BR
21 GH1
22 GH1
23 GH1
24 GH1
25 GH1
G
W
B
W
B
16 WG1
2 WG2
1 WG2
12 WG2
11 WG2
14
11
12
13
SNS2
MACC
MCO+
MCO-
Microphone
W7
Map Light Assembly
G
W
B
W
B
R
R
2
H26
Junction
Connector
H1

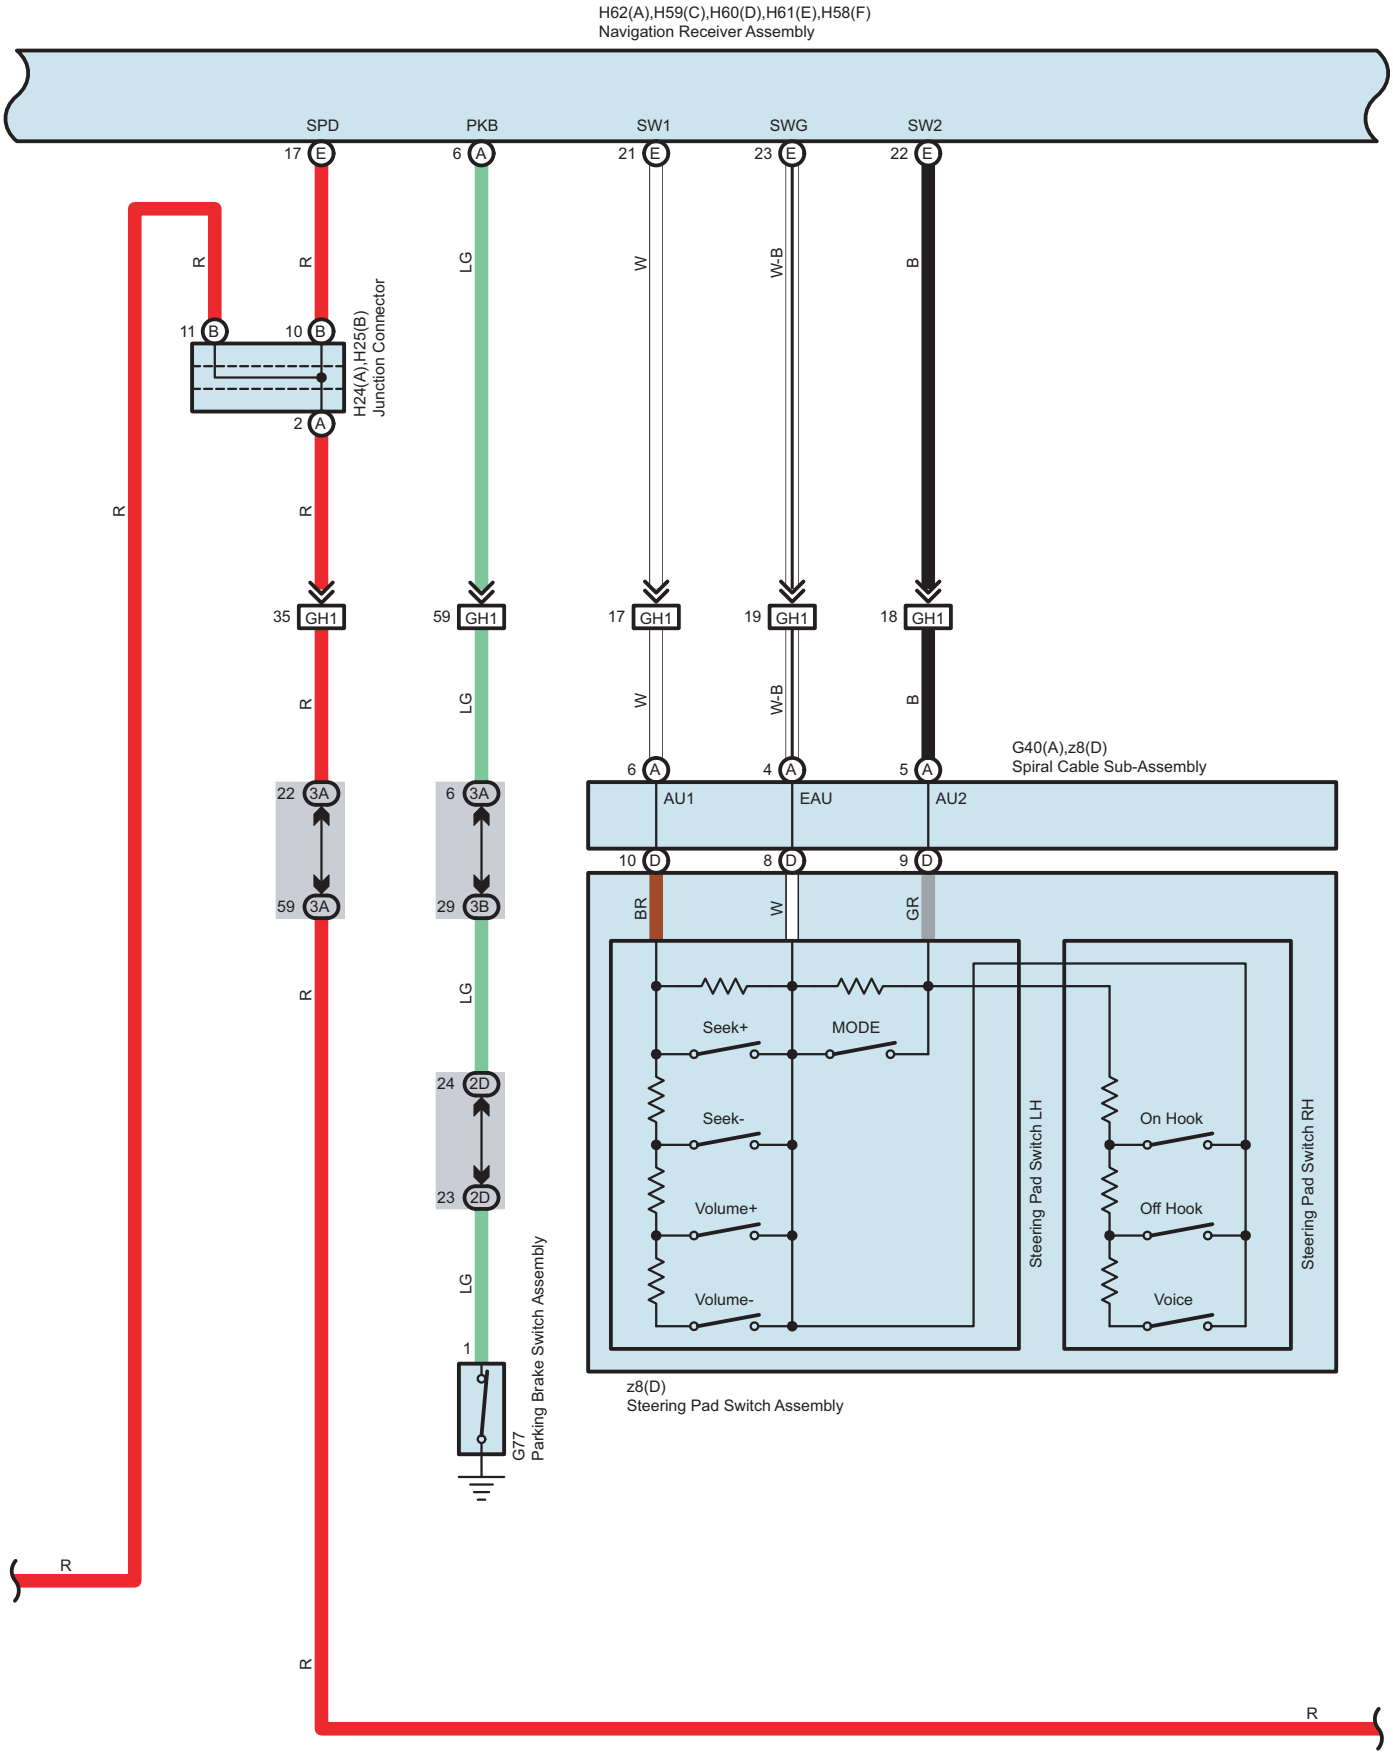
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
SPD
PKB
SW1
SWG
SW2
17 E
6 A
21 E
23 E
22 E
R
R
LG
W
W-B
B
11 B
10 B
2 A
H24(A),H25(B)
Junction Connector
R
R
35 GH1
59 GH1
17 GH1
19 GH1
18 GH1
R
LG
W
W-B
B
6 A
4 A
5 A
G40(A),z8(D)
Spiral Cable Sub-Assembly
AU1
EAU
AU2
22 3A
59 3A
6 3A
29 3B
10 D
8 D
9 D
BR
W
GR
R
LG
Seek+
MODE
24 2D
23 2D
Seek-
Volume+
Volume-
Steering Pad Switch LH
On Hook
Off Hook
Voice
Steering Pad Switch RH
LG
1
G77
Parking Brake Switch Assembly
z8(D)
Steering Pad Switch Assembly
R
R
R

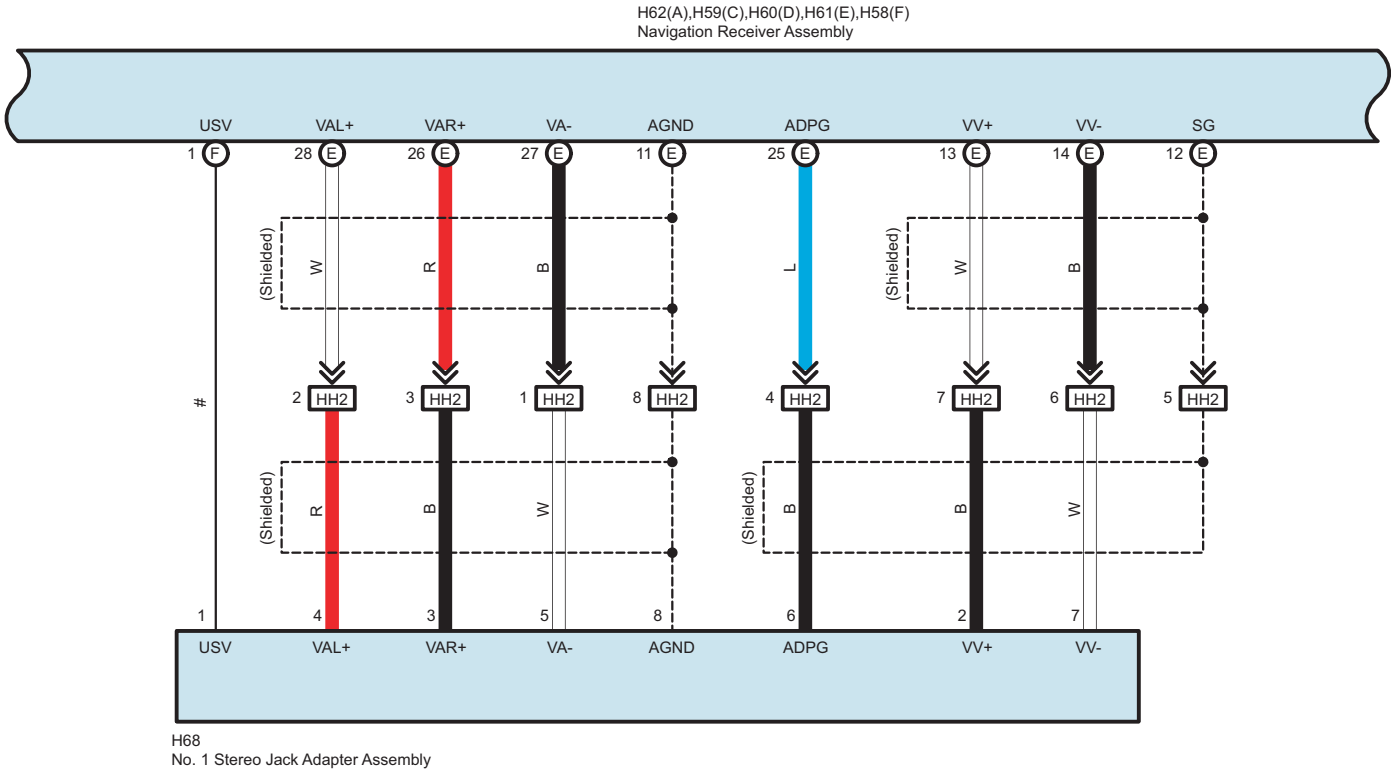
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
USV
VAL+
VAR+
VA-
AGND
ADPG
VV+
VV-
SG
1 F
28 E
26 E
27 E
11 E
25 E
13 E
14 E
12 E
(Shielded)
W
R
B
L
(Shielded)
W
B
#
2 HH2
3 HH2
1 HH2
8 HH2
4 HH2
7 HH2
6 HH2
5 HH2
(Shielded)
R
B
W
(Shielded)
B
B
W
1
4
3
5
8
6
2
7
USV
VAL+
VAR+
VA-
AGND
ADPG
VV+
VV-
H68
No. 1 Stereo Jack Adapter Assembly

R
R

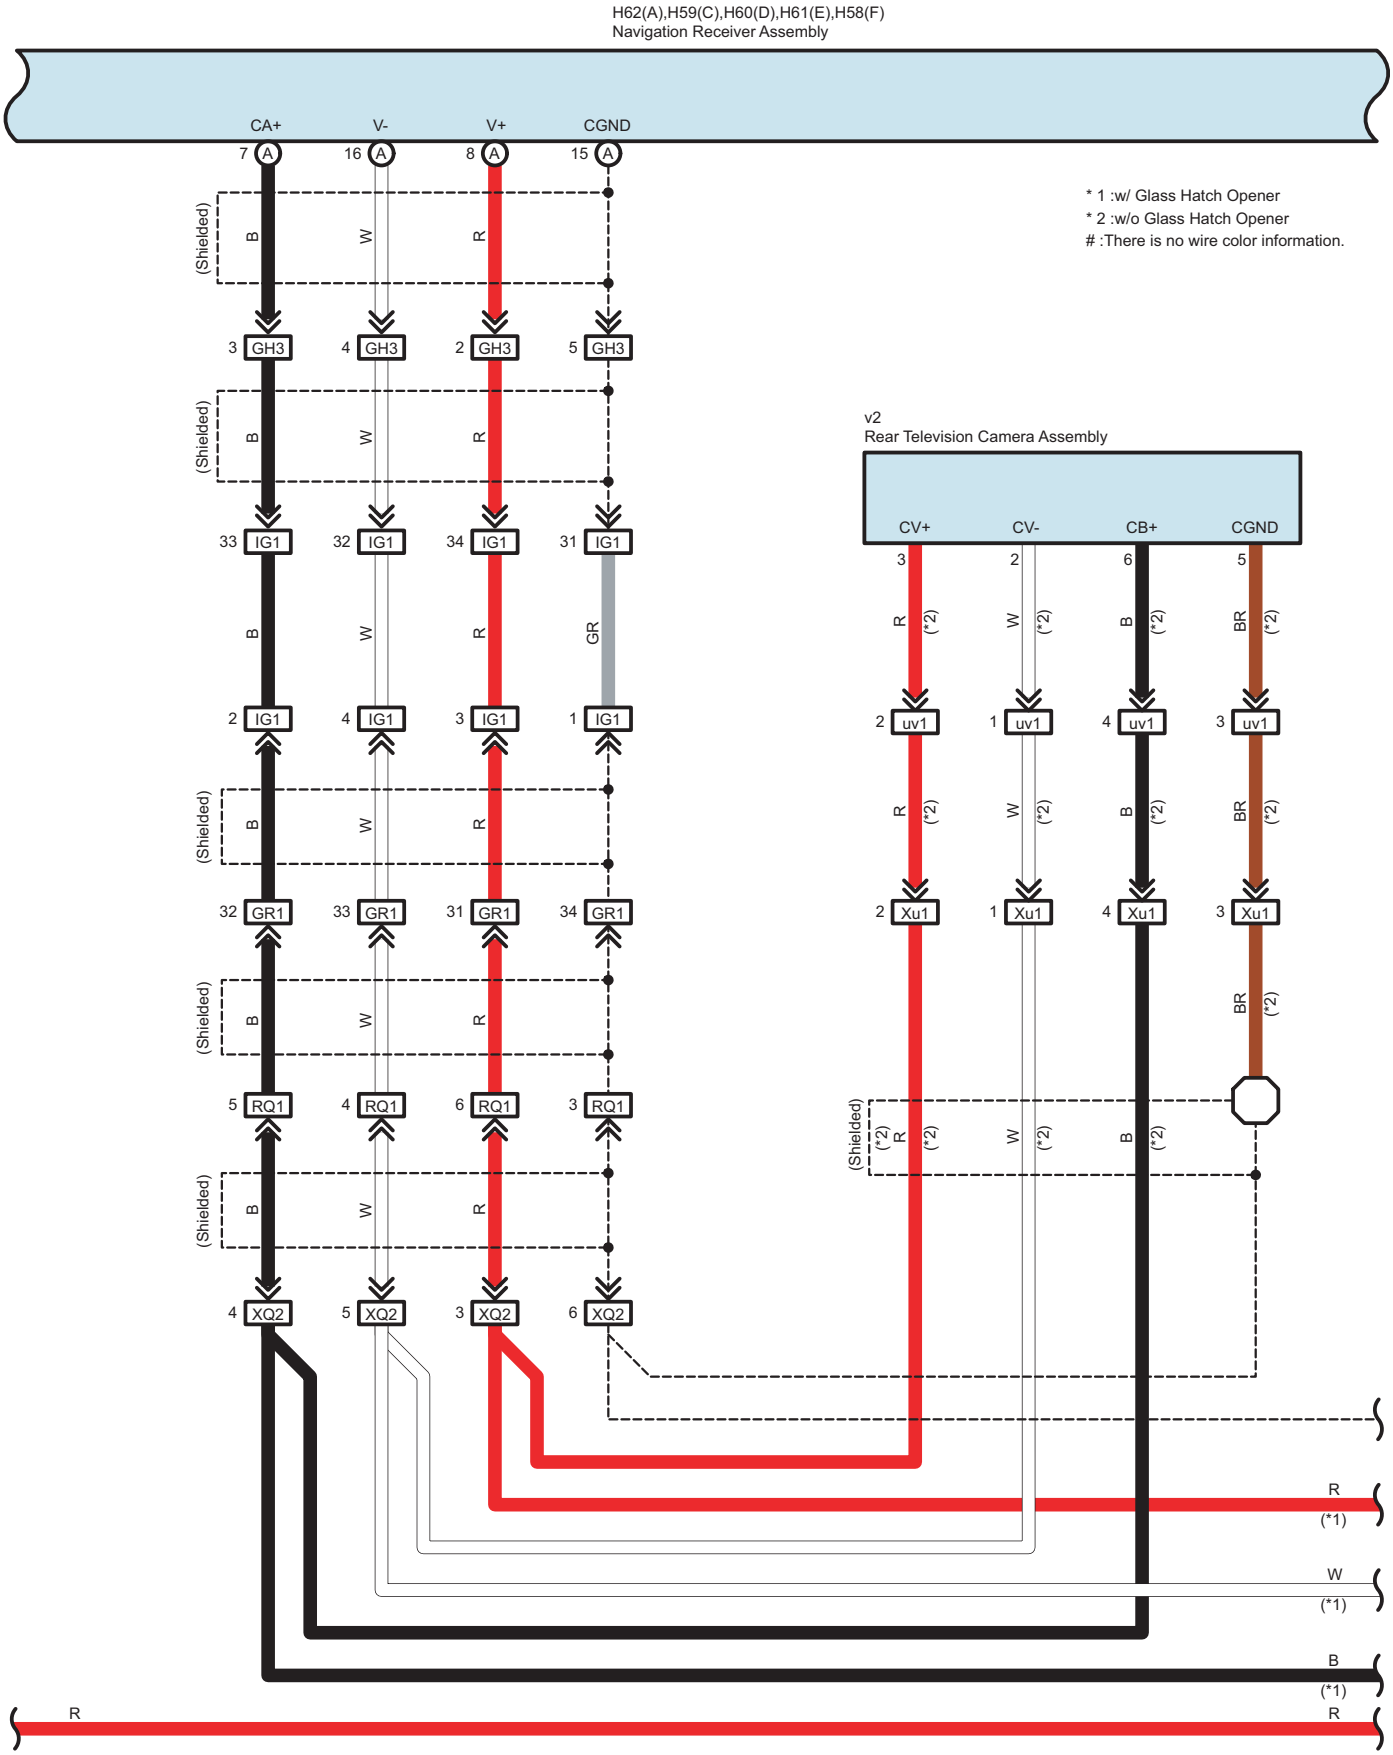
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
CA+
V-
V+
CGND
* 1 :w/ Glass Hatch Opener
* 2 :w/o Glass Hatch Opener
# :There is no wire color information.
v2
Rear Television Camera Assembly
CV+
CV-
CB+
CGND
(Shielded)
GH3
IG1
GR1
RQ1
XQ2
uv1
Xu1
(*1)
(*2)

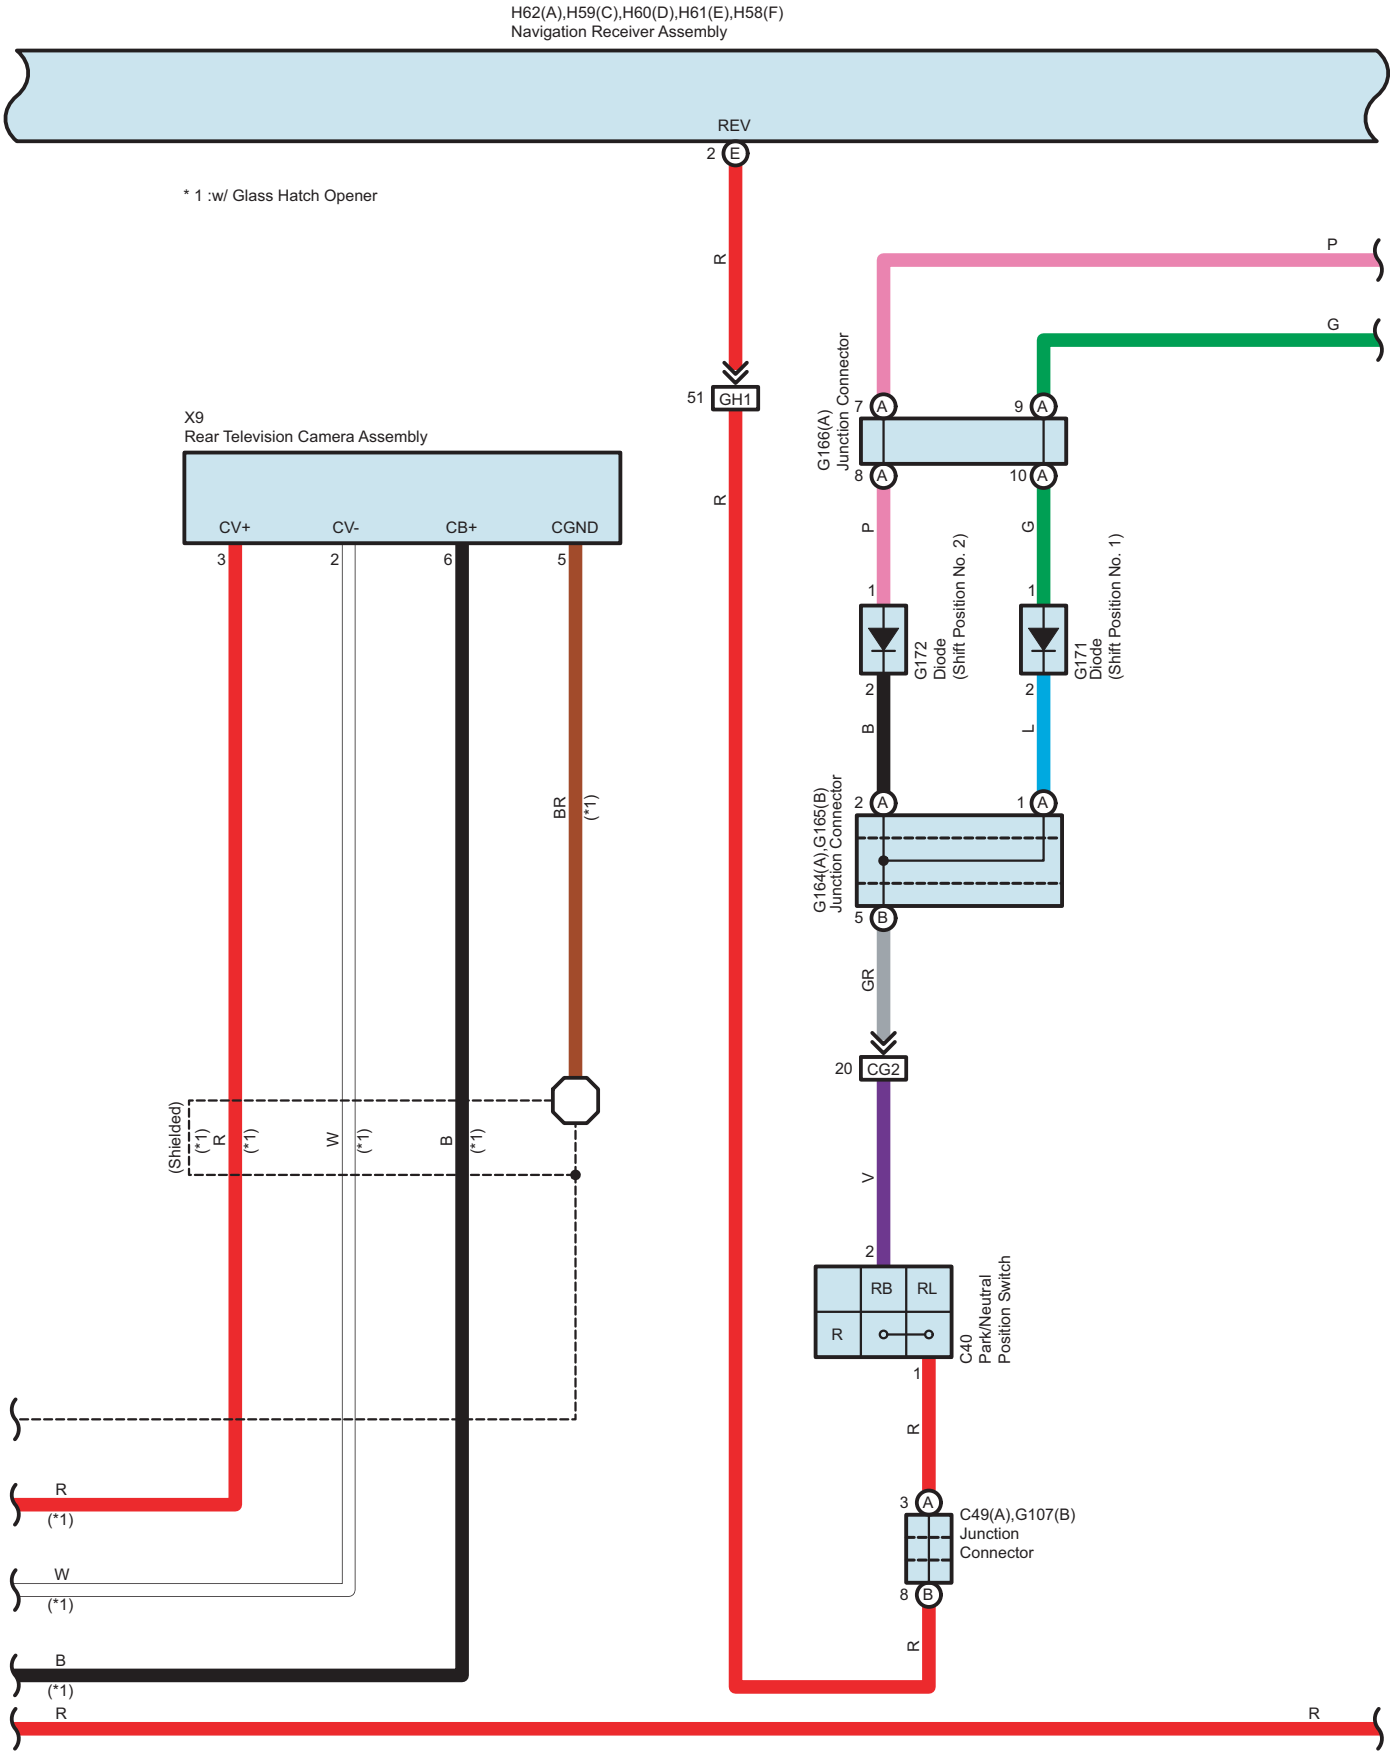
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
REV
2 E
* 1 :w/ Glass Hatch Opener
R
51 GH1
R
X9
Rear Television Camera Assembly
CV+
CV-
CB+
CGND
3
2
6
5
BR
(*1)
(Shielded)
(*1)
R
(*1)
W
(*1)
B
(*1)
R
(*1)
W
(*1)
B
(*1)
R
R
P
G
G166(A)
Junction Connector
7 A
9 A
8 A
10 A
P
G
1
1
G172
Diode
(Shift Position No. 2)
G171
Diode
(Shift Position No. 1)
2
2
B
L
G164(A),G165(B)
Junction Connector
2 A
1 A
5 B
GR
20 CG2
V
2
RB
RL
R
C40
Park/Neutral
Position Switch
1
R
3 A
C49(A),G107(B)
Junction
Connector
8 B
R

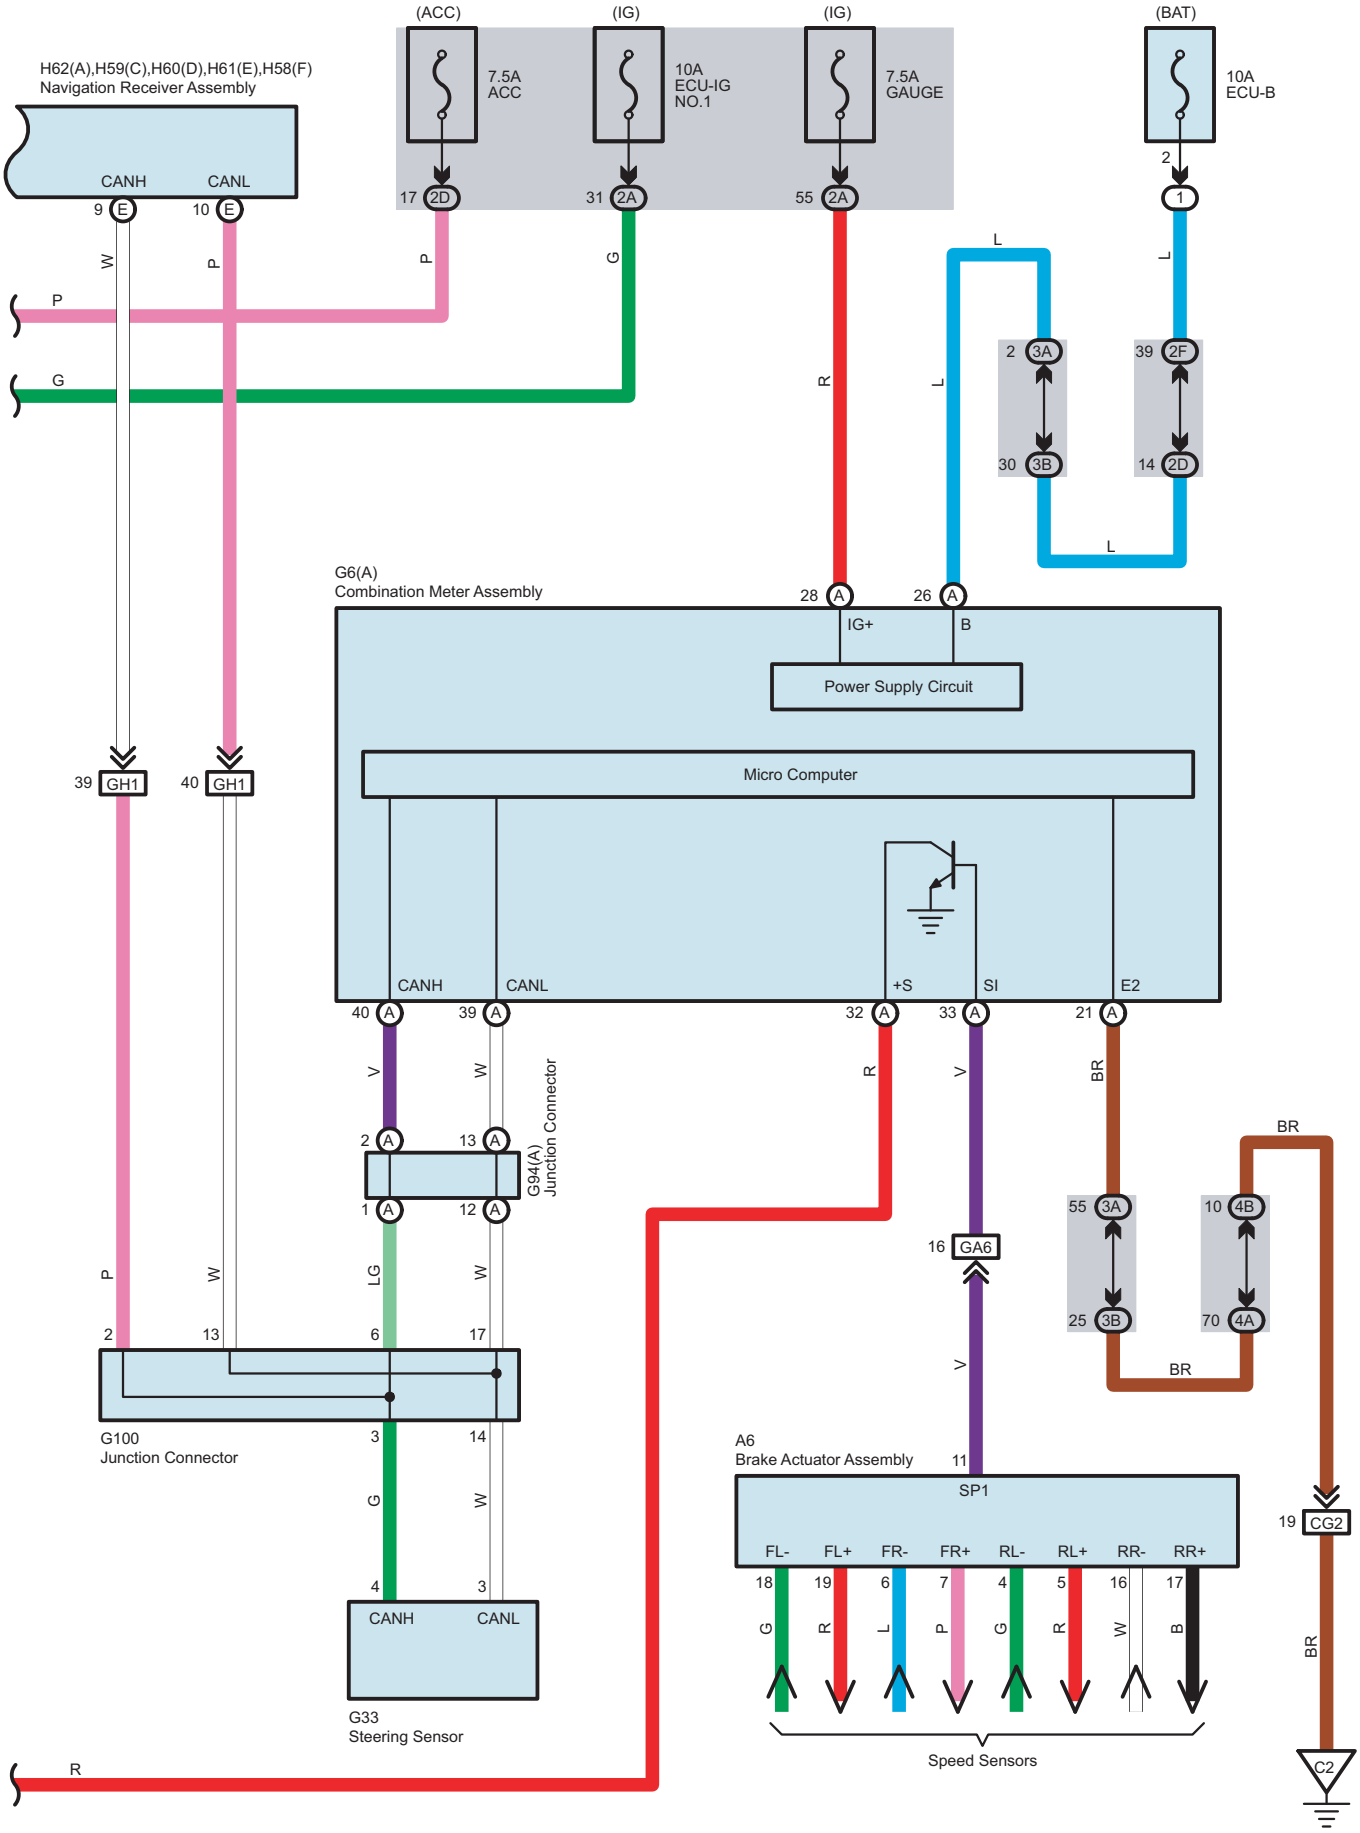
(ACC)
(IG)
(IG)
(BAT)
7.5A
ACC
10A
ECU-IG
NO.1
7.5A
GAUGE
10A
ECU-B
H62(A),H59(C),H60(D),H61(E),H58(F)
Navigation Receiver Assembly
CANH
CANL
G6(A)
Combination Meter Assembly
IG+
B
Power Supply Circuit
Micro Computer
CANH
CANL
+S
SI
E2
G94(A)
Junction Connector
G100
Junction Connector
G33
Steering Sensor
A6
Brake Actuator Assembly
SP1
FL-
FL+
FR-
FR+
RL-
RL+
RR-
RR+
Speed Sensors
GH1
GA6
CG2
C2

A6
Black

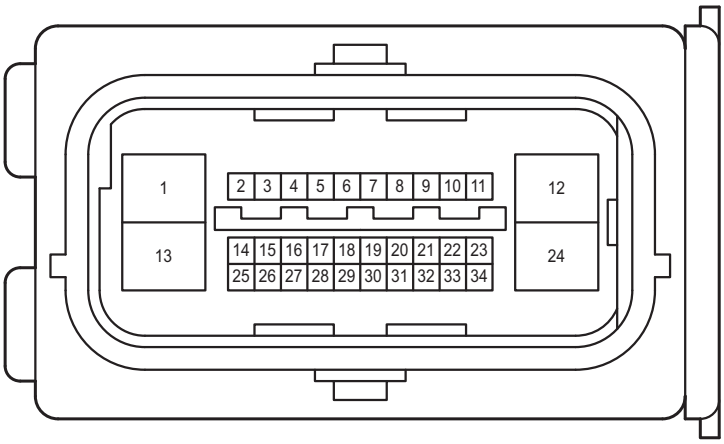

C40
Gray

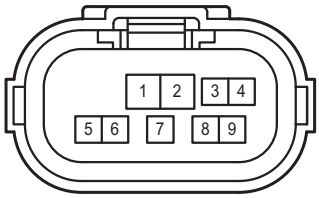

C49
Blue

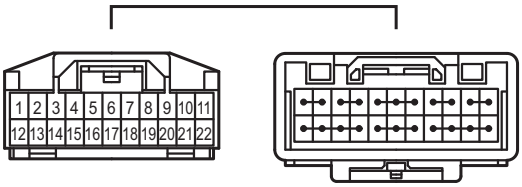

G6
Black

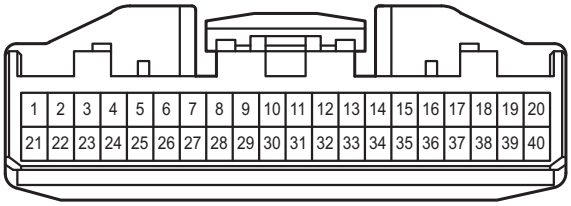

G33
White

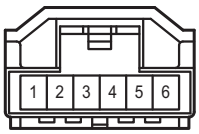

G40
Black

G77
White

G94
White

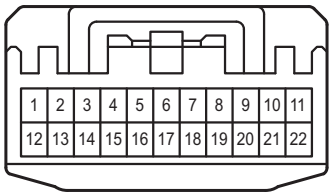

G100
Gray

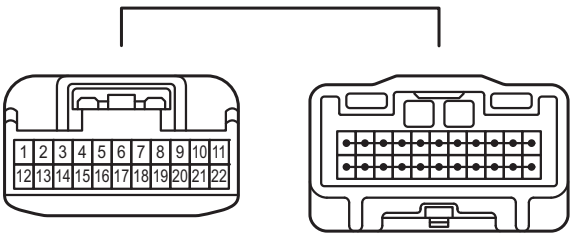

G107
Blue

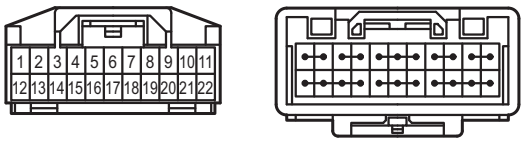

G164
Black

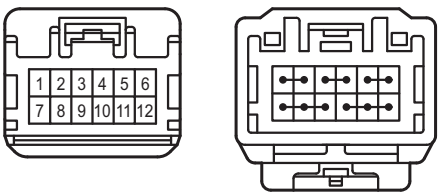

G165
Black

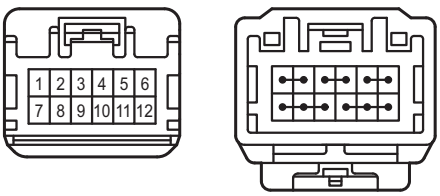

G166
Blue

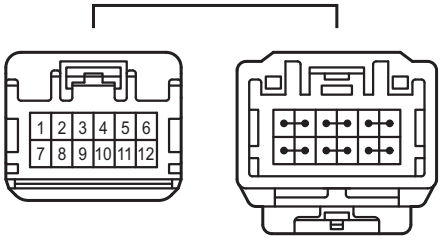

G168
Blue

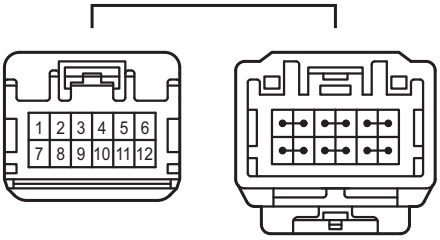

G171
Gray

G172
Gray

H10
White

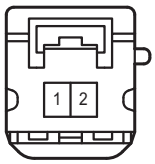

H13
White

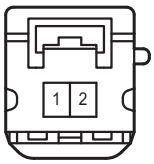

H14
White

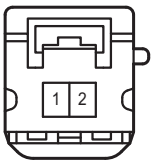

H21
White

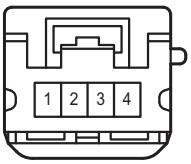

H22
White

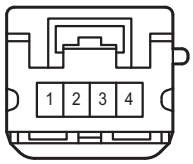

H24
White

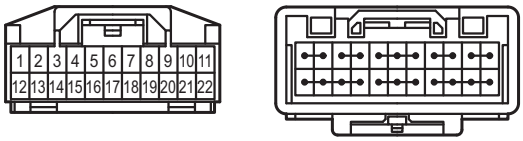

H25
White

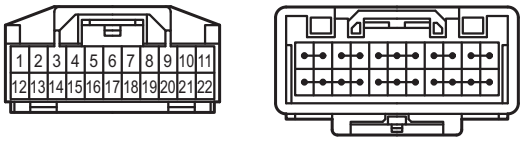

H26
White

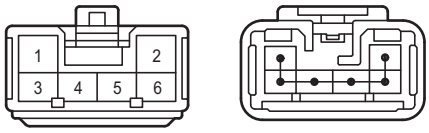

H58
Gray

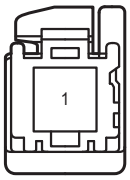

H59
White

H60
White

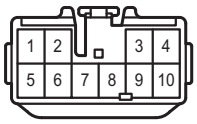

H61
White

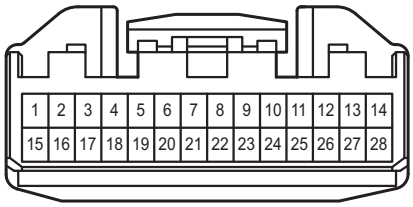

H62
White

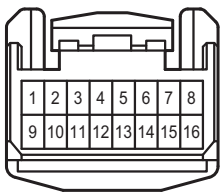

H63
White

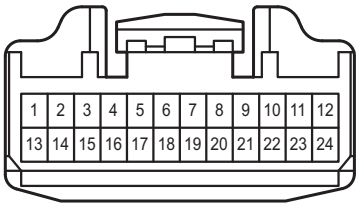

H64
White

H65
White

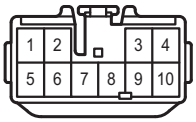

H66
White



H68
Black

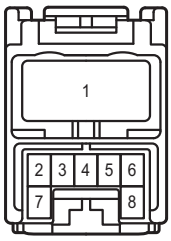

J4
White

K3
White

L1
White

L3
White

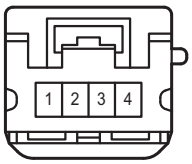

M1
White

M3
White

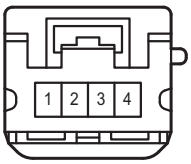

Q15
White

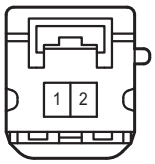

R13
White

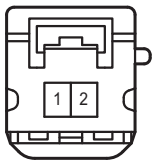

R24
White

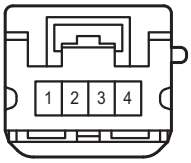

W7
White

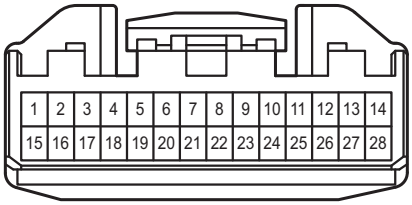

X9
Gray

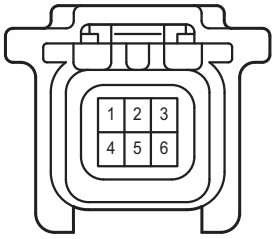

v2
Gray

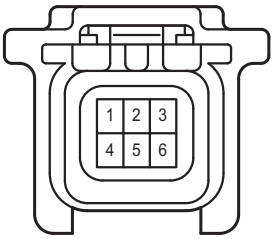

z8
White

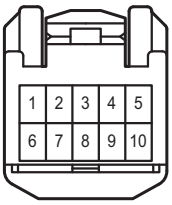

2A
White

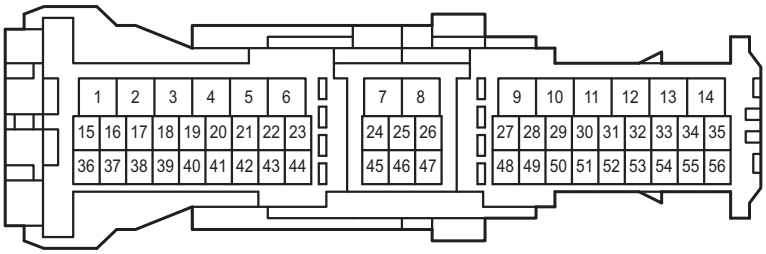

2D
White

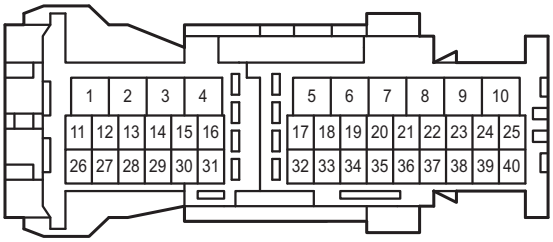

2F
White

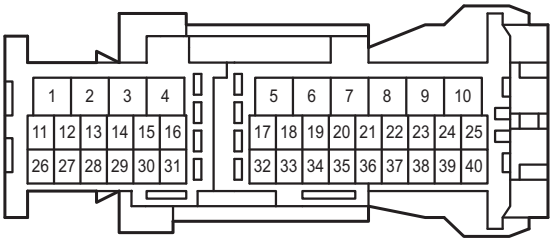

3A
White

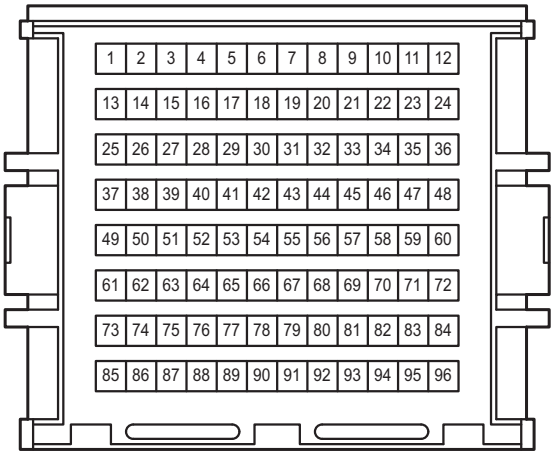

3B
White

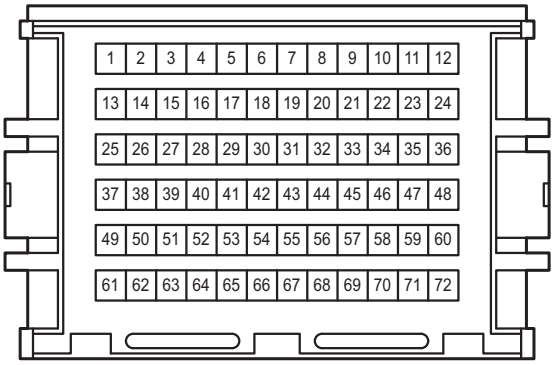

4A
White

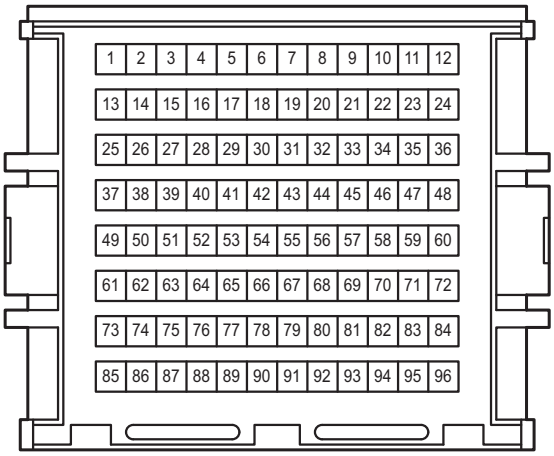

4B
White

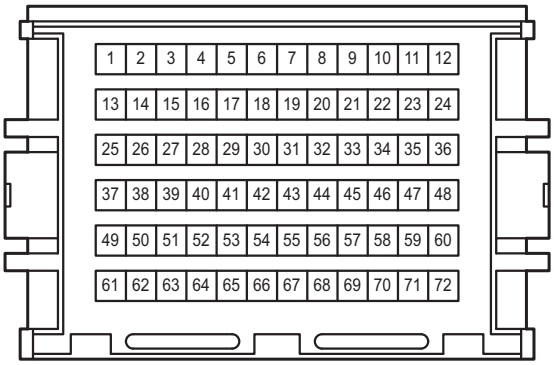

CG2
White

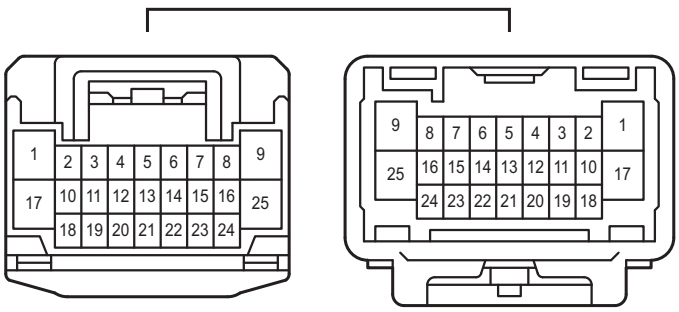

GA1

White

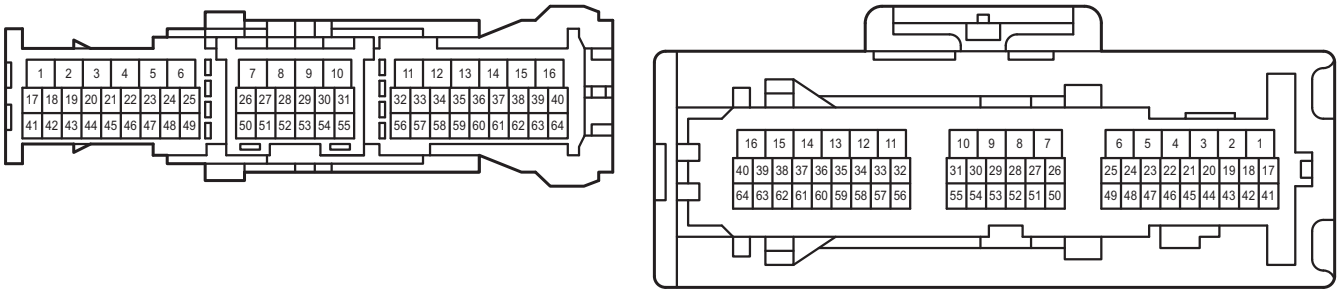

GA2

White

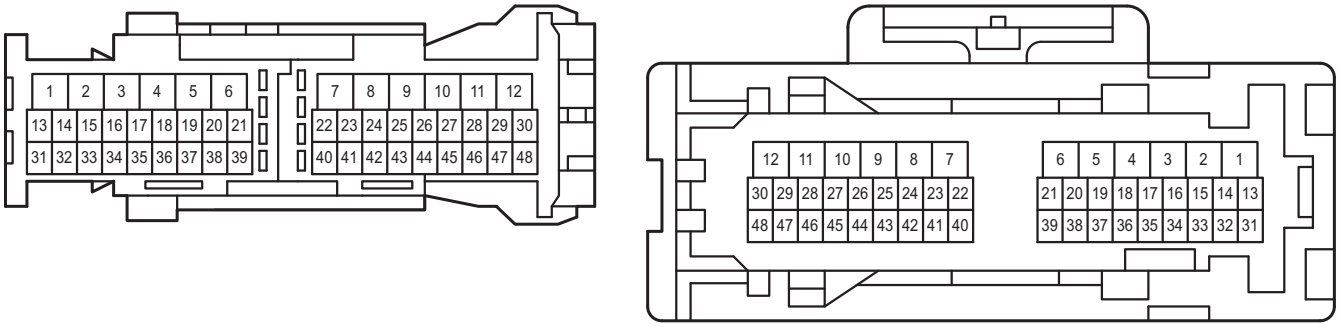

GA6

White

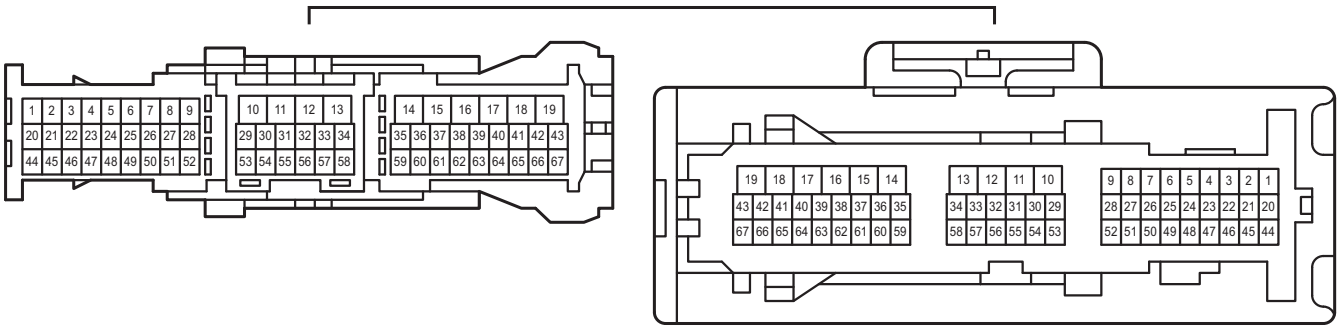

GH1

White

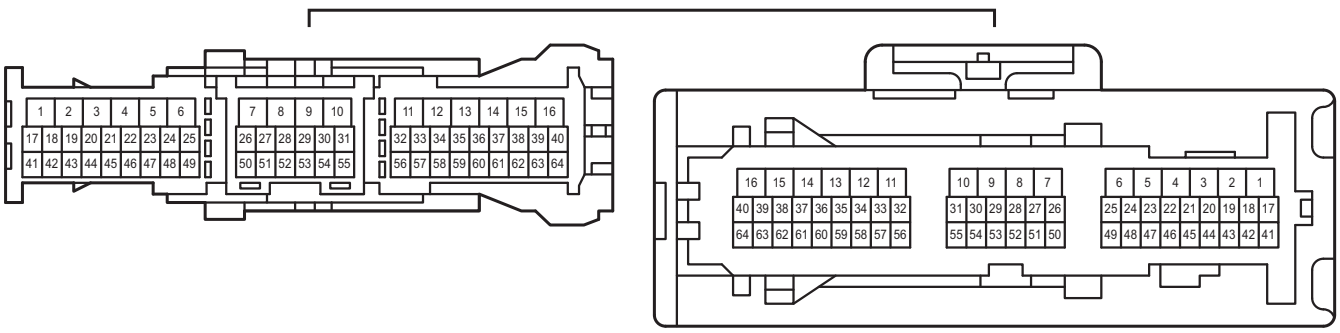

GH2
White

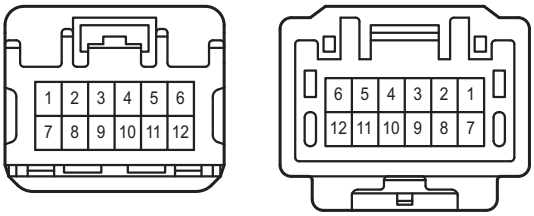

GH3
Gray

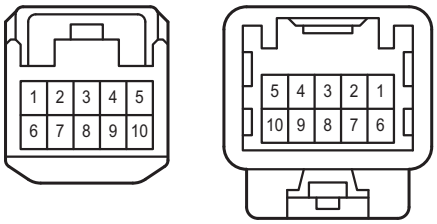

GQ1
White

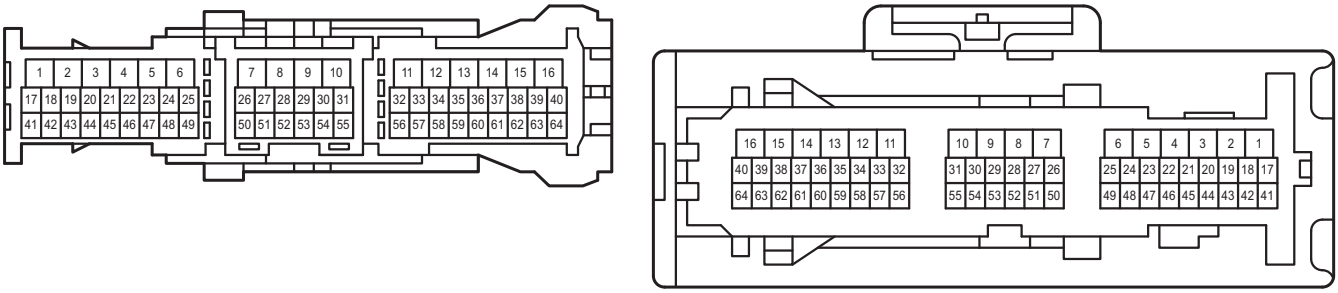

GR1
White

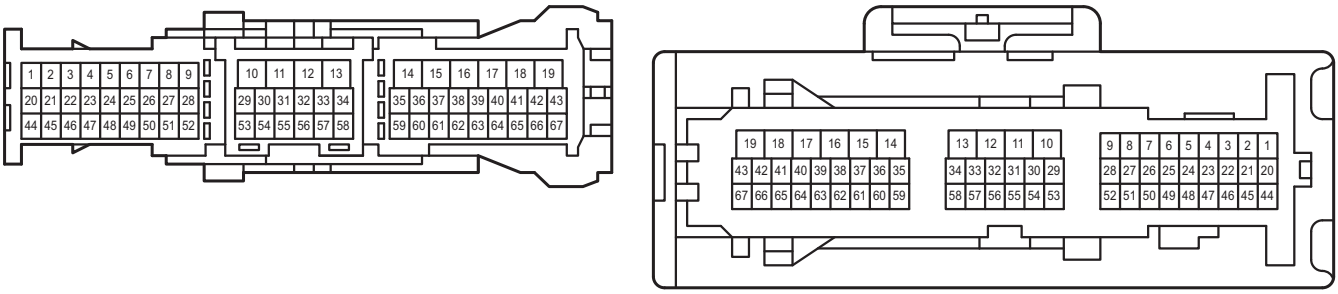

GR2
Gray

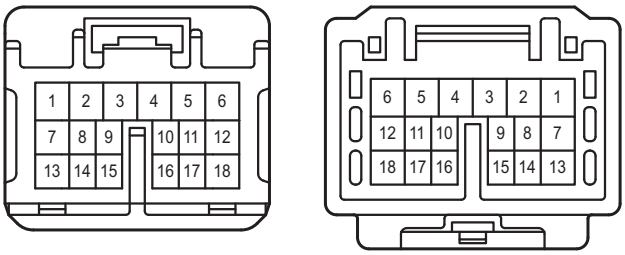

HH2
White

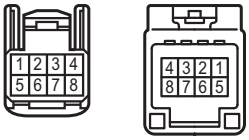

IG1
White

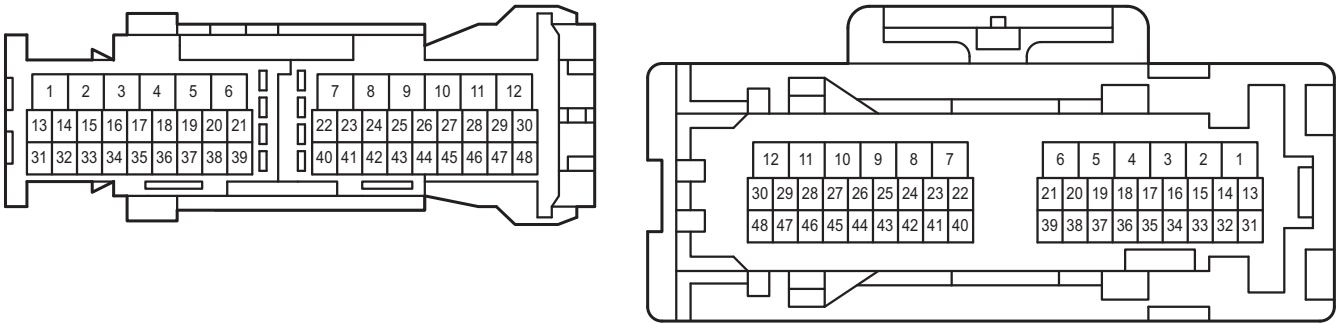

JG3
Black

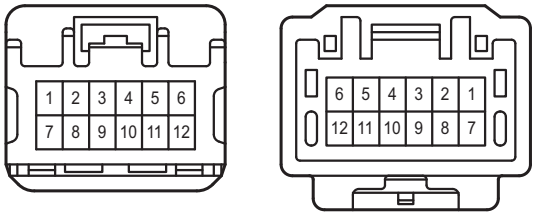

KG3
Black

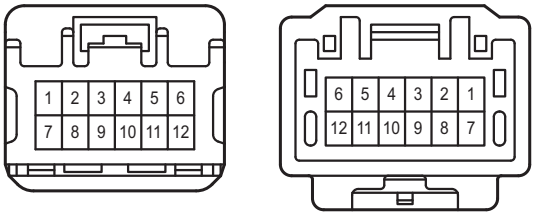

LQ1
White

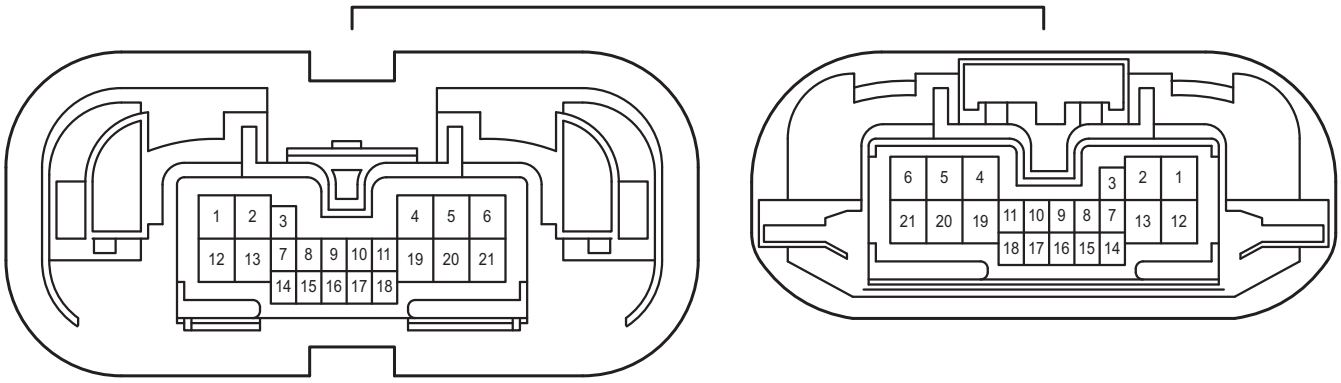

MR1
White

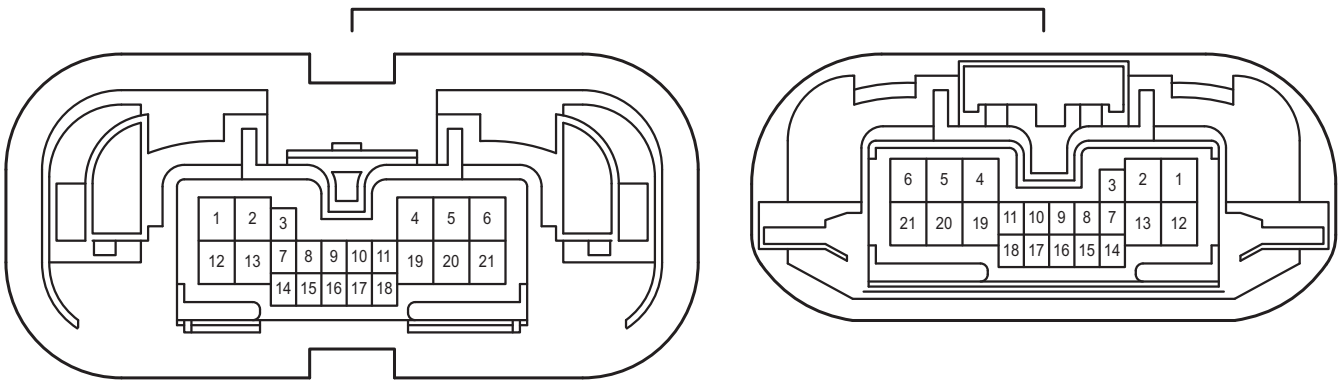

RQ1
White

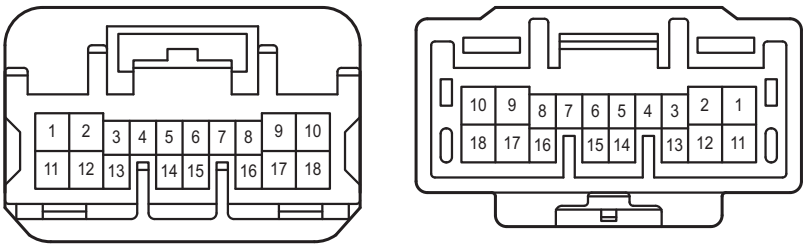

WG1
White

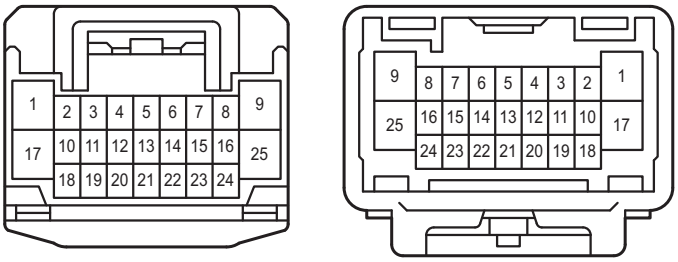

WG2
White

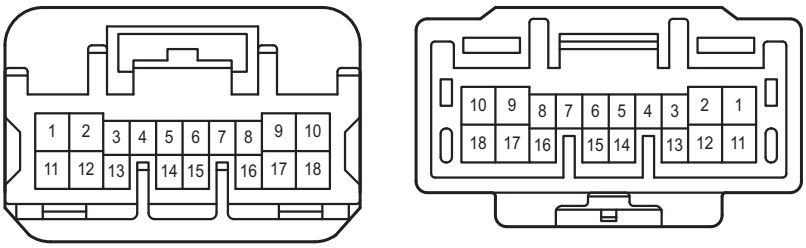

XQ2
White

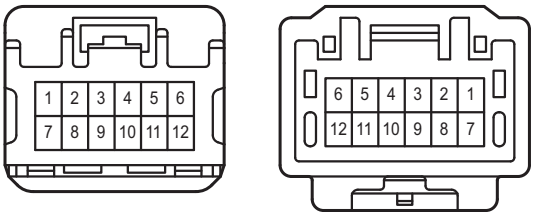

Xu1
Black

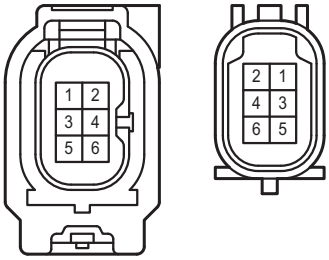
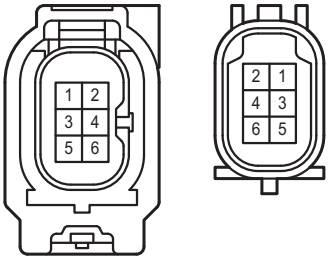
uv1
Black