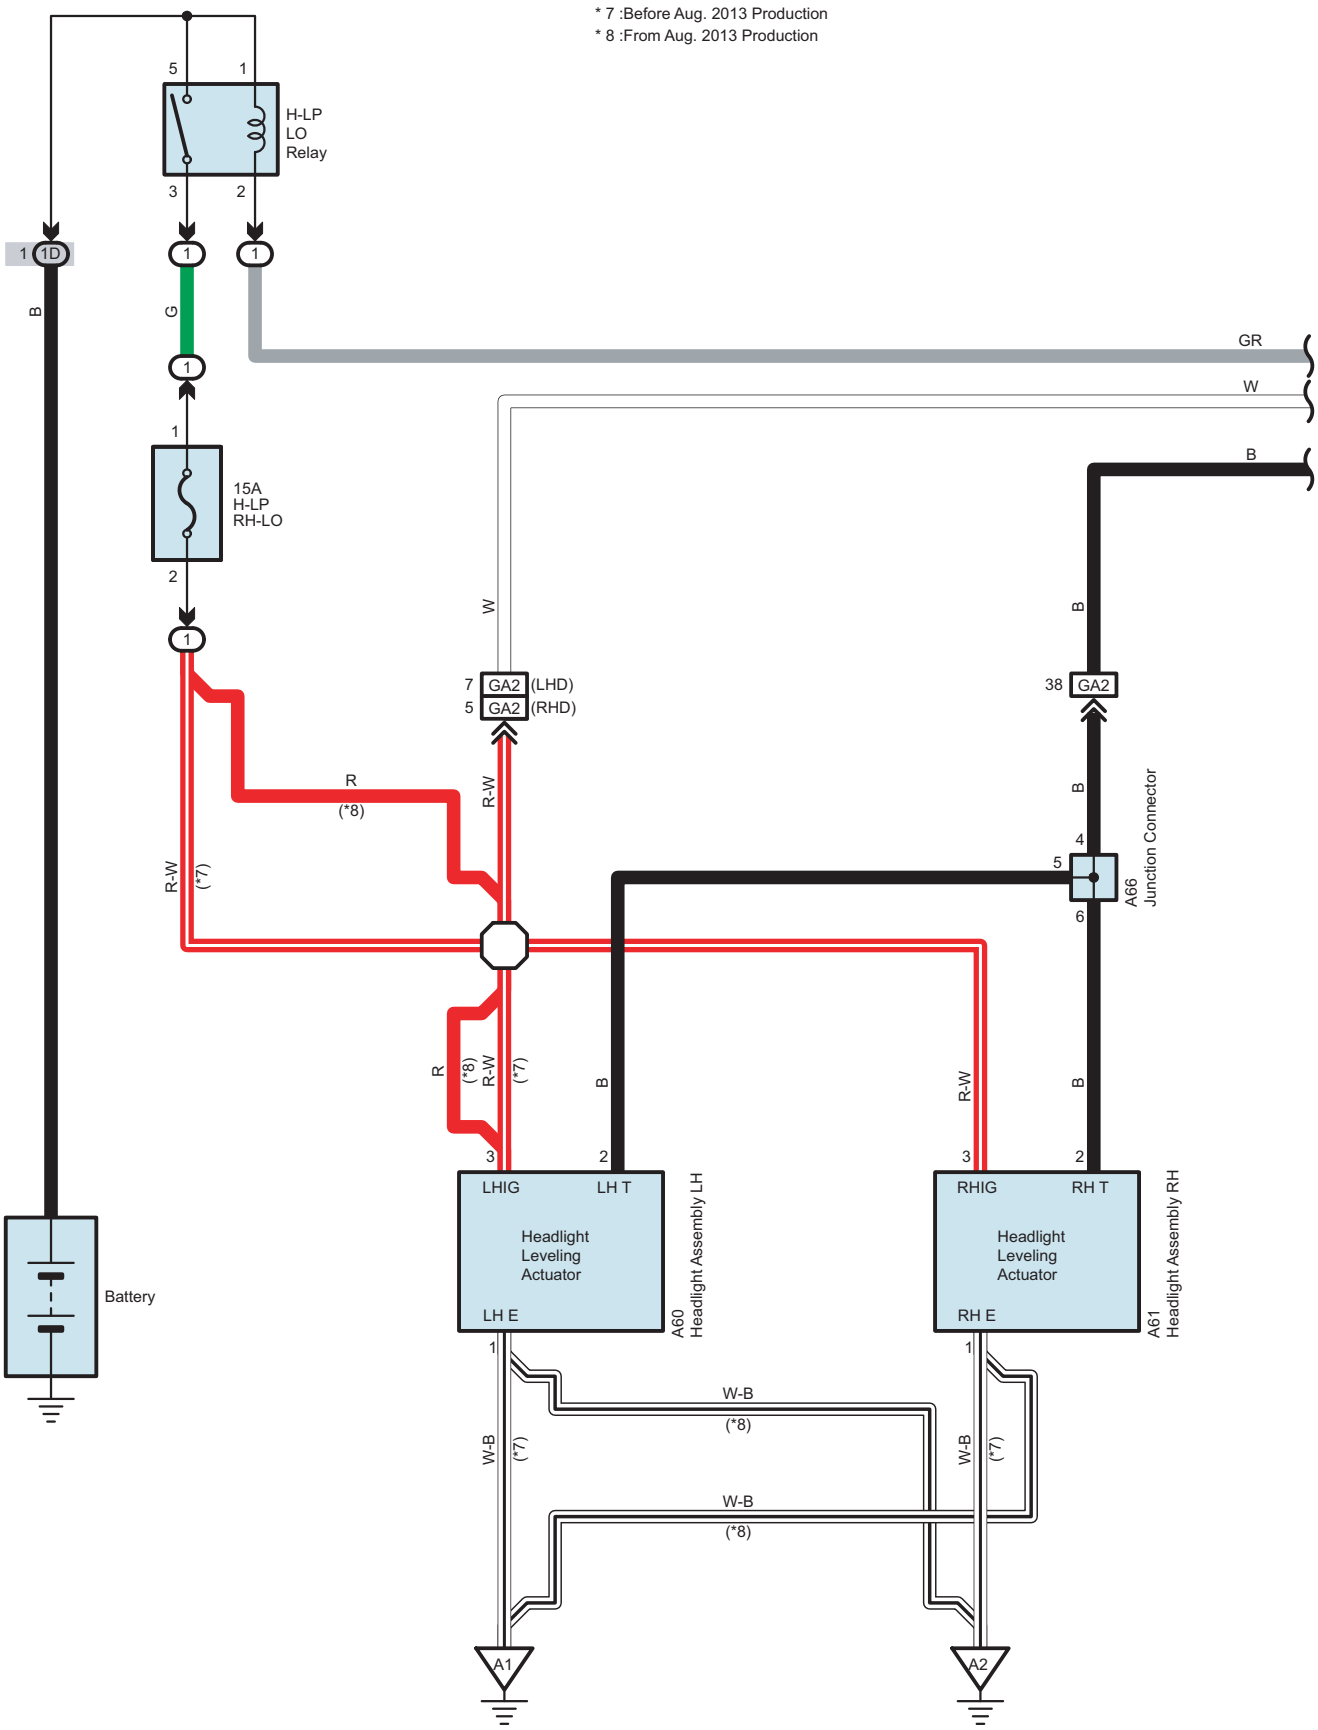
* 7 :Before Aug. 2013 Production
* 8 :From Aug. 2013 Production
H-LP
LO
Relay
5
1
3
2
1
1D
B
G
GR
W
B
15A
H-LP
RH-LO
R
(*8)
R-W
(*7)
7
GA2
(LHD)
5
GA2
(RHD)
38
GA2
4
5
6
A66
Junction Connector
LHIG
LH T
Headlight
Leveling
Actuator
LH E
A60
Headlight Assembly LH
RHIG
RH T
RH E
A61
Headlight Assembly RH
Battery
W-B
(*8)
(*7)
A1
A2

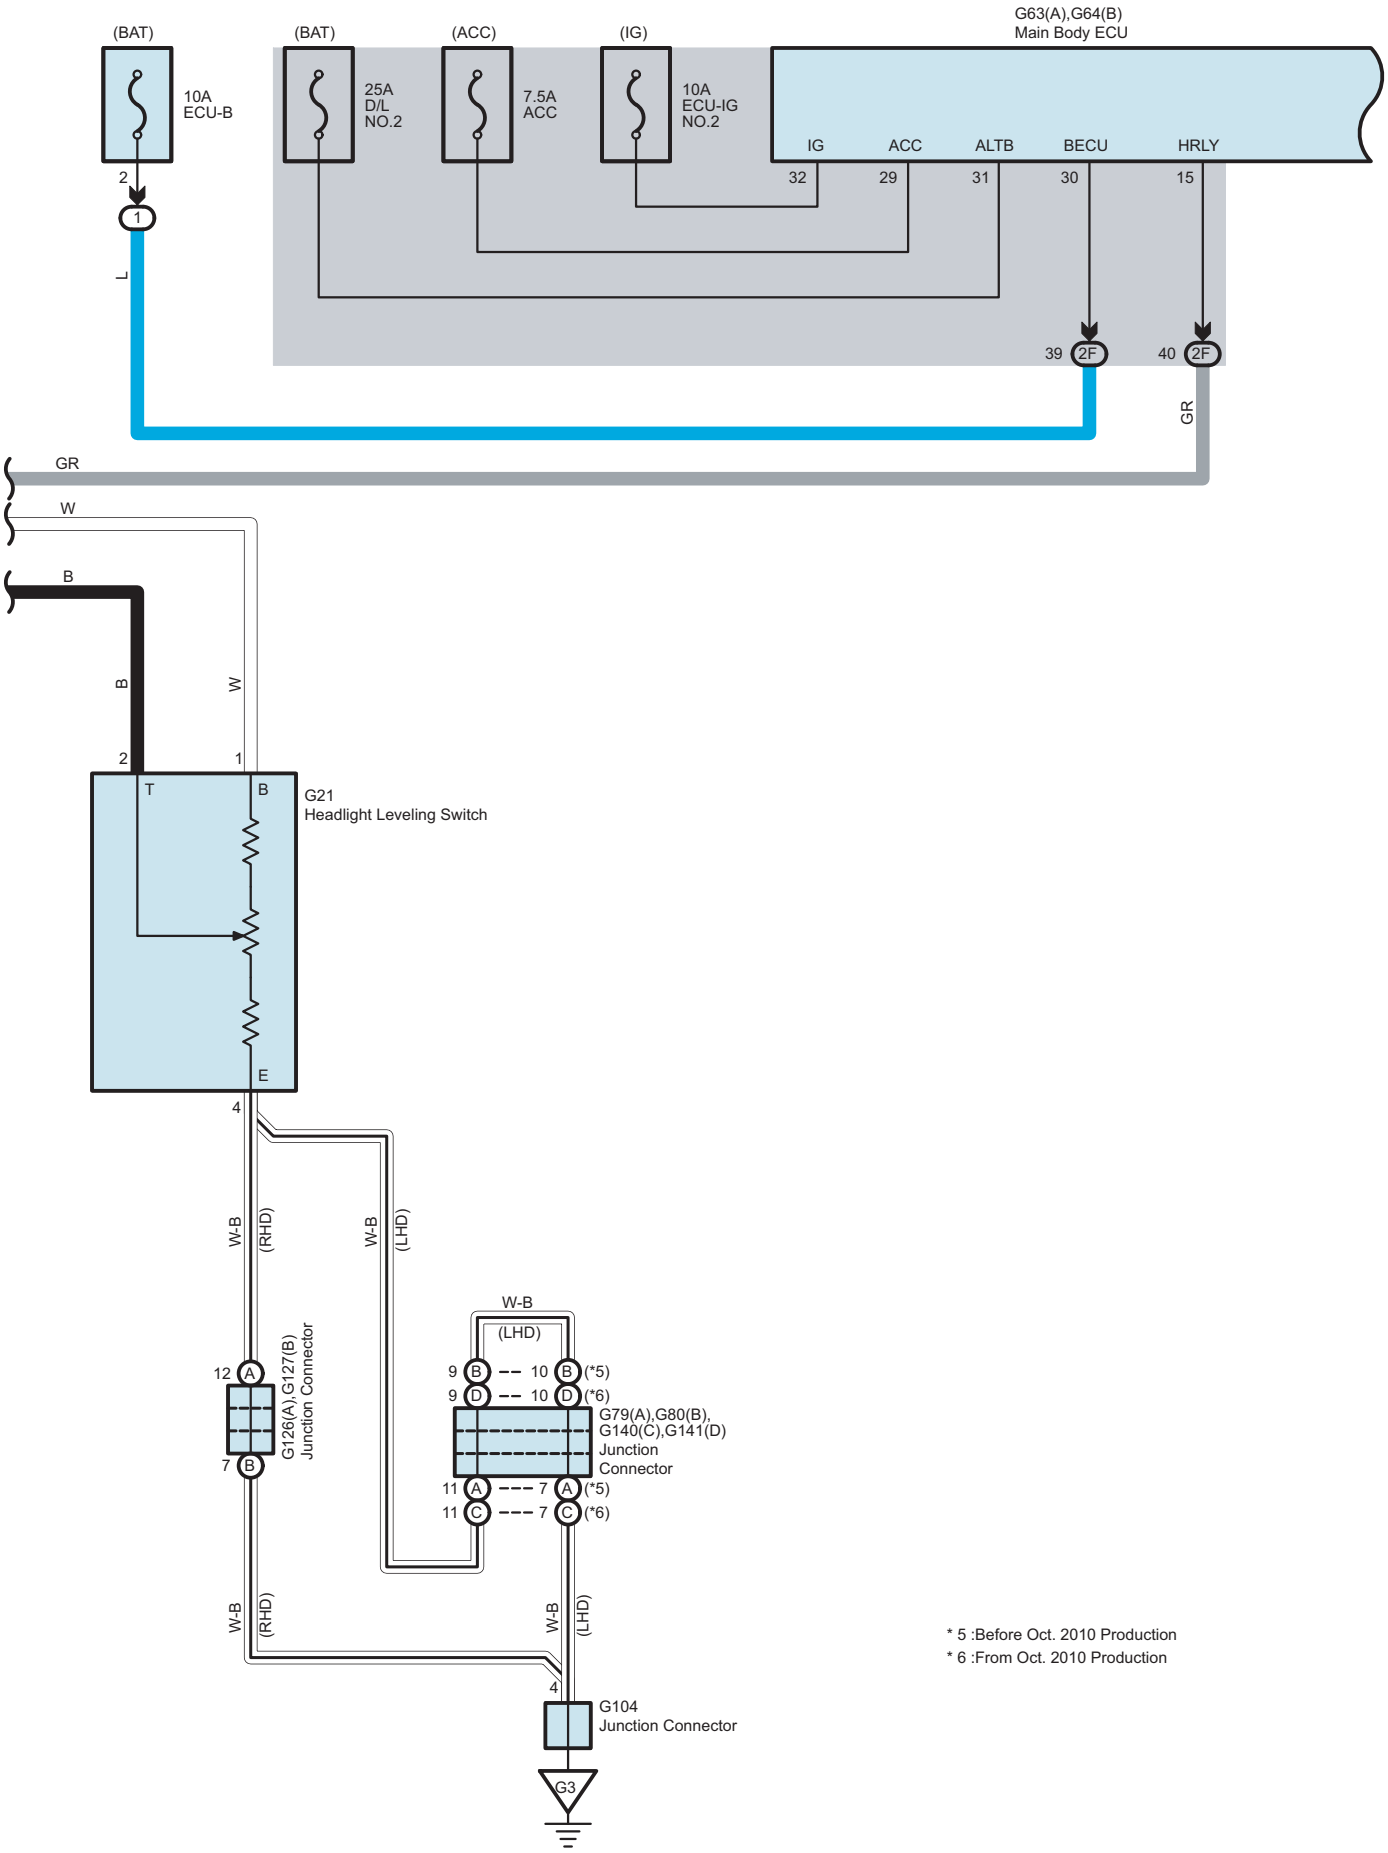
(BAT)
10A
ECU-B
(BAT)
25A
D/L
NO.2
(ACC)
7.5A
ACC
(IG)
10A
ECU-IG
NO.2
G63(A),G64(B)
Main Body ECU
IG
ACC
ALTB
BECU
HRLY
32
29
31
30
15
2
1
L
39
2F
40
2F
GR
GR
W
B
B
W
2
1
T
B
G21
Headlight Leveling Switch
E
4
W-B
(RHD)
W-B
(LHD)
W-B
(LHD)
12
A
7
B
G126(A),G127(B)
Junction Connector
9
B
10
B
(*5)
9
D
10
D
(*6)
G79(A),G80(B),
G140(C),G141(D)
Junction
Connector
11
A
7
A
(*5)
11
C
7
C
(*6)
W-B
(RHD)
W-B
(LHD)
4
G104
Junction Connector
G3
* 5 :Before Oct. 2010 Production
* 6 :From Oct. 2010 Production

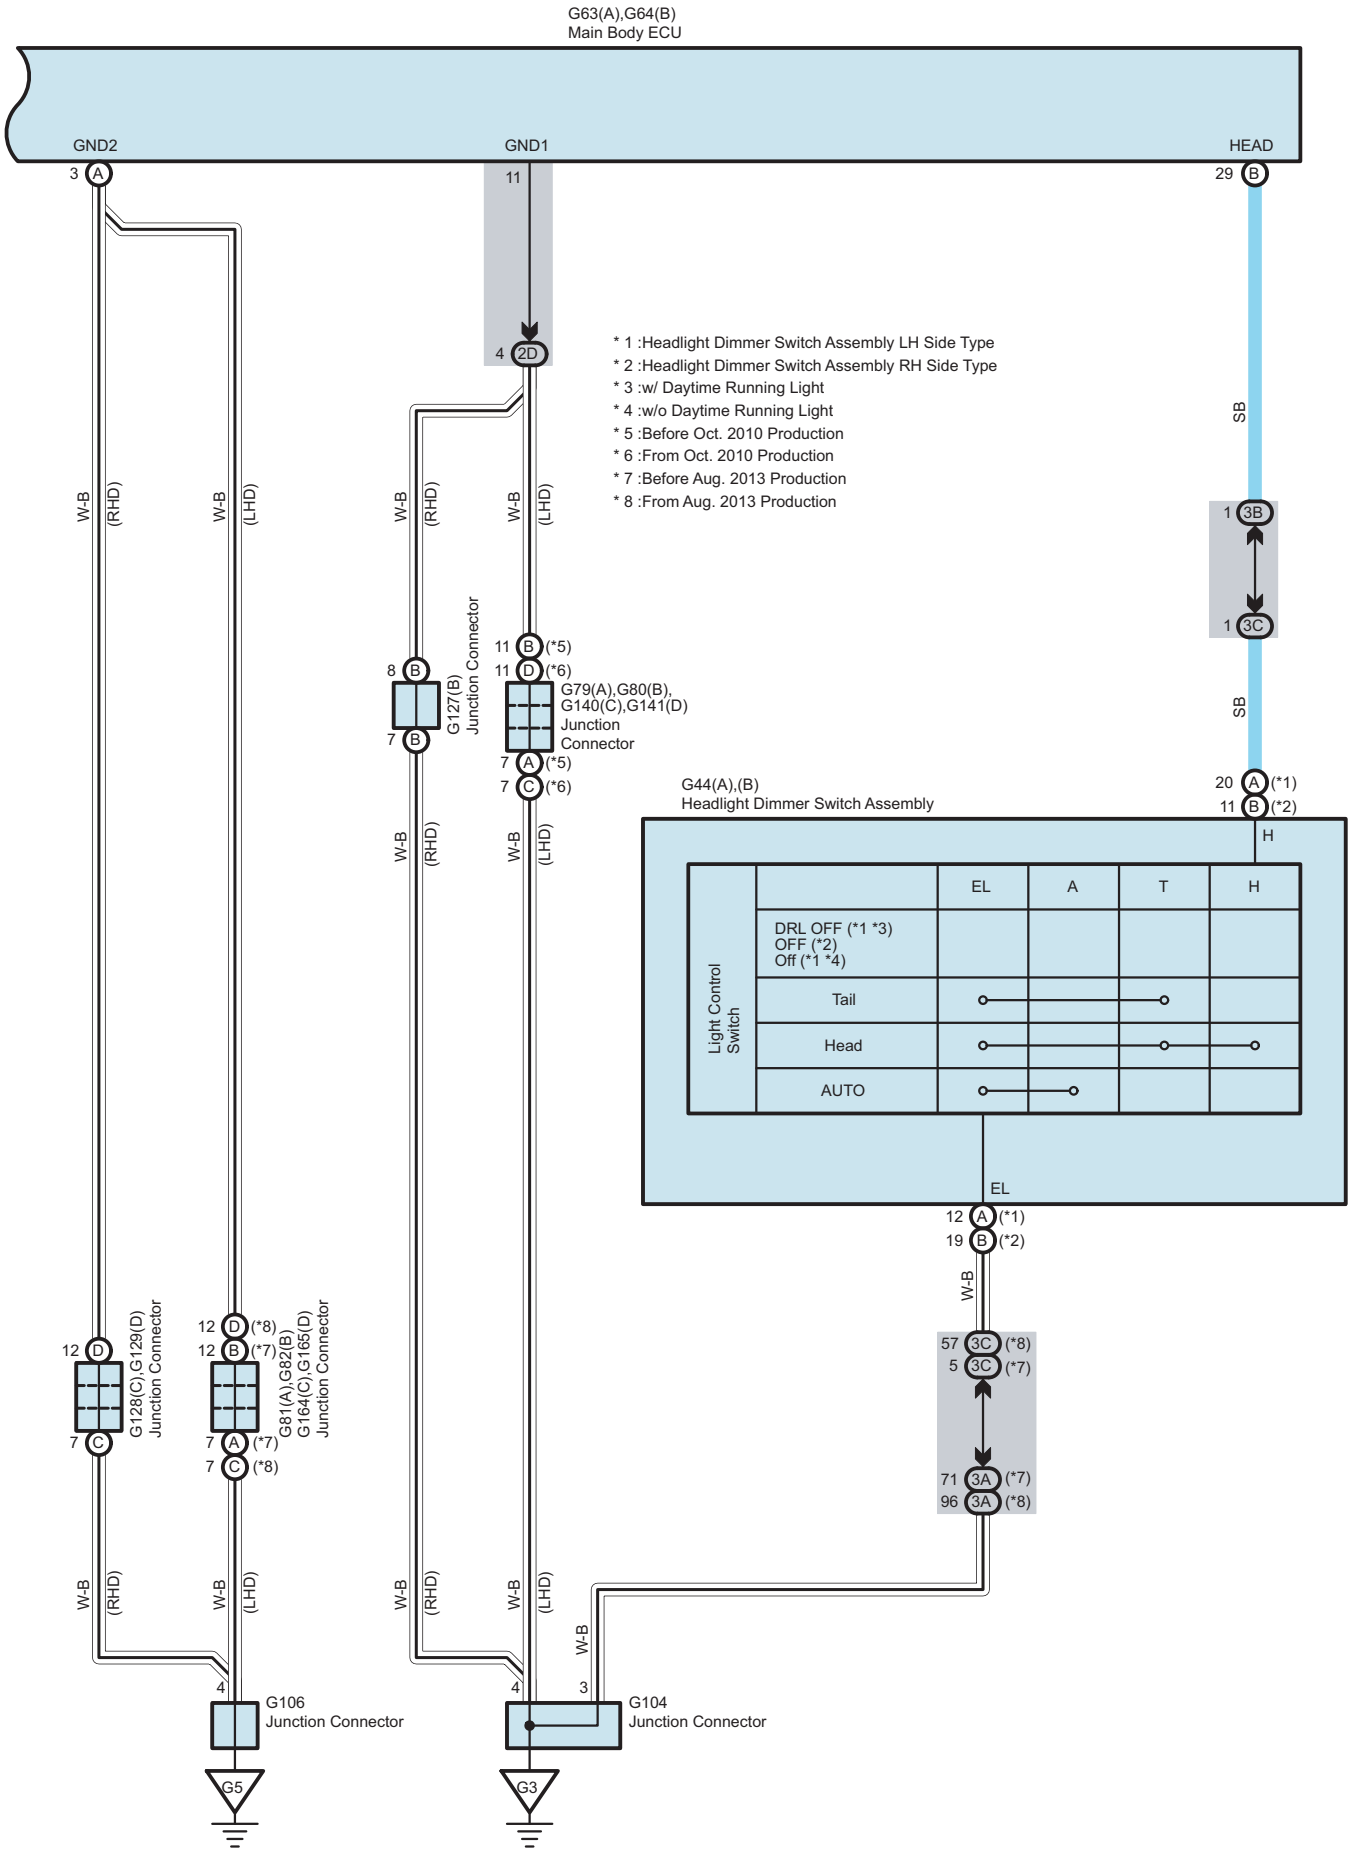
G63(A),G64(B)
Main Body ECU
GND2
GND1
HEAD
* 1 :Headlight Dimmer Switch Assembly LH Side Type
* 2 :Headlight Dimmer Switch Assembly RH Side Type
* 3 :w/ Daytime Running Light
* 4 :w/o Daytime Running Light
* 5 :Before Oct. 2010 Production
* 6 :From Oct. 2010 Production
* 7 :Before Aug. 2013 Production
* 8 :From Aug. 2013 Production
G127(B)
Junction Connector
G79(A),G80(B),
G140(C),G141(D)
Junction
Connector
G44(A),(B)
Headlight Dimmer Switch Assembly
Light Control
Switch
EL
A
T
H
DRL OFF (*1 *3)
OFF (*2)
Off (*1 *4)
Tail
Head
AUTO
G128(C),G129(D)
Junction Connector
G81(A),G82(B)
G164(C),G165(D)
Junction Connector
G106
Junction Connector
G104
Junction Connector
G5
G3
W-B
(RHD)
(LHD)
SB

A60
Black

A61
Black

A66
White

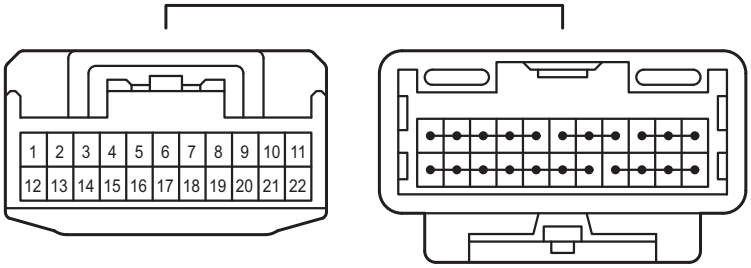

G21
Black



G44
White

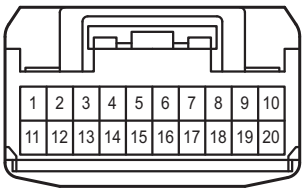

G63
White

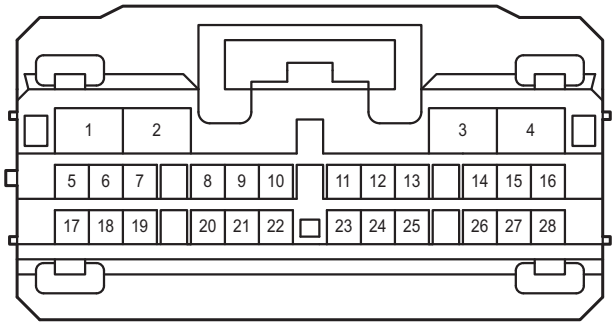

G64
White

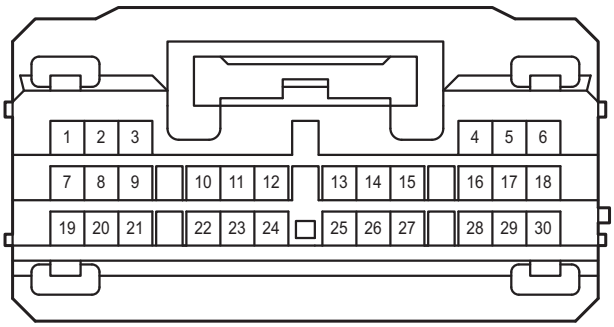

G79
White

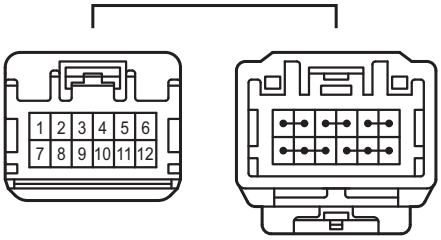

G80
White

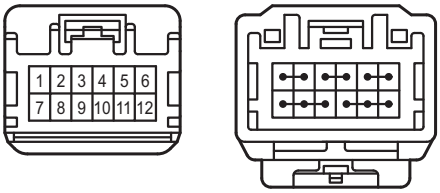

G81
White

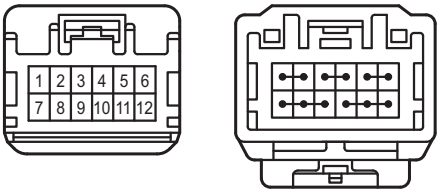

G82
White

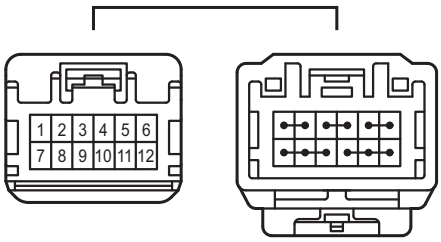

G104
White

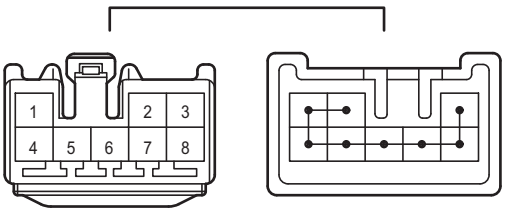

G106
White

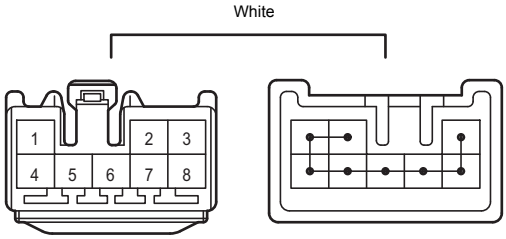

G126
Black

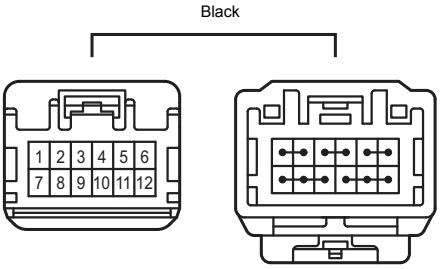

G127
Black

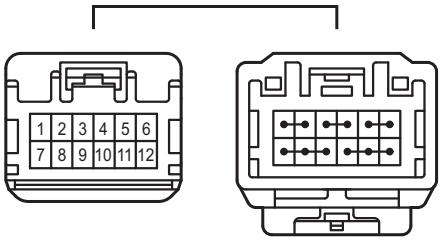

G128
Black

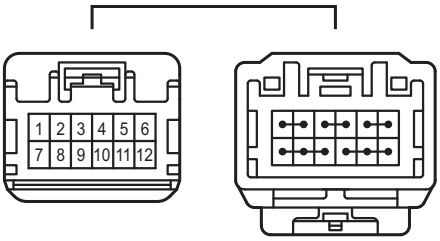

G129
Black

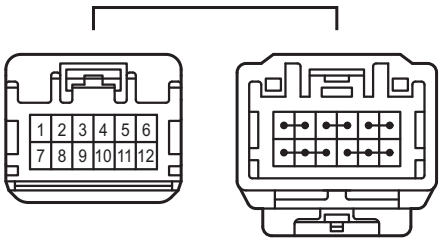

G140
Black

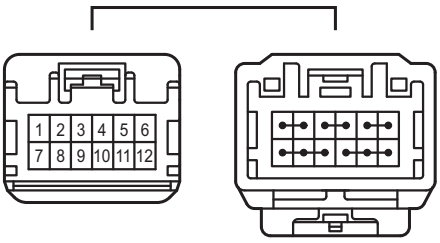

G141
Black

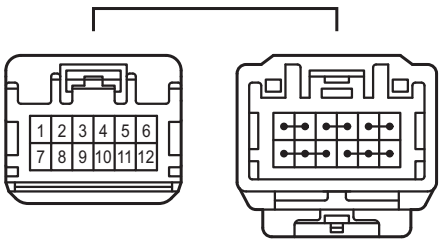

G164
Black

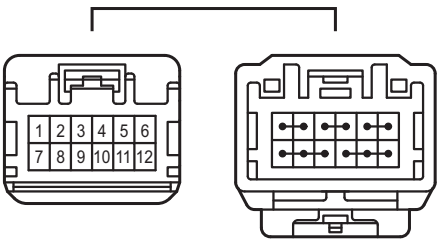

G165
Black

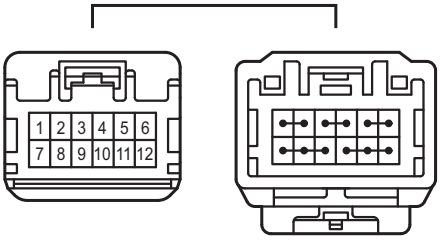

1D

2D
White

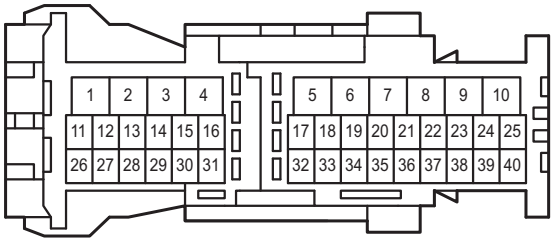

2F
White

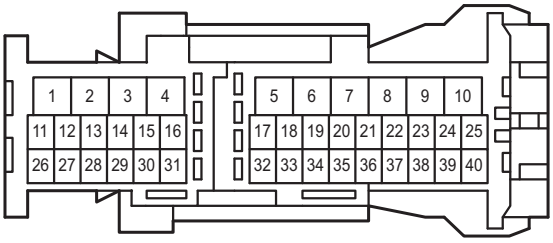

3A
White

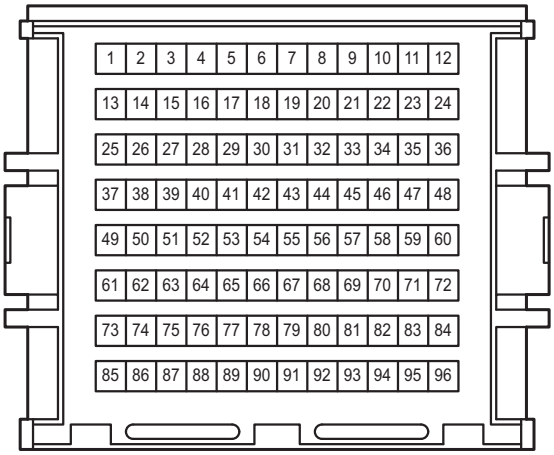

3B
White

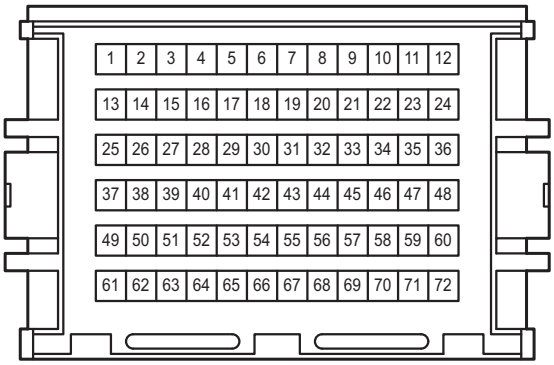

3C
White

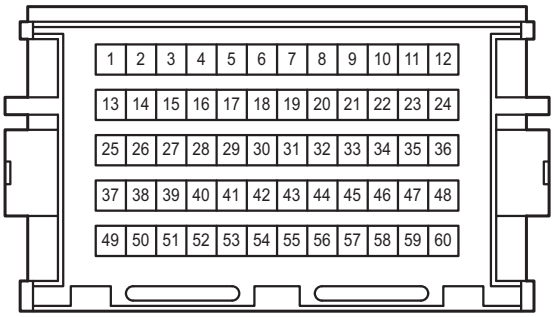
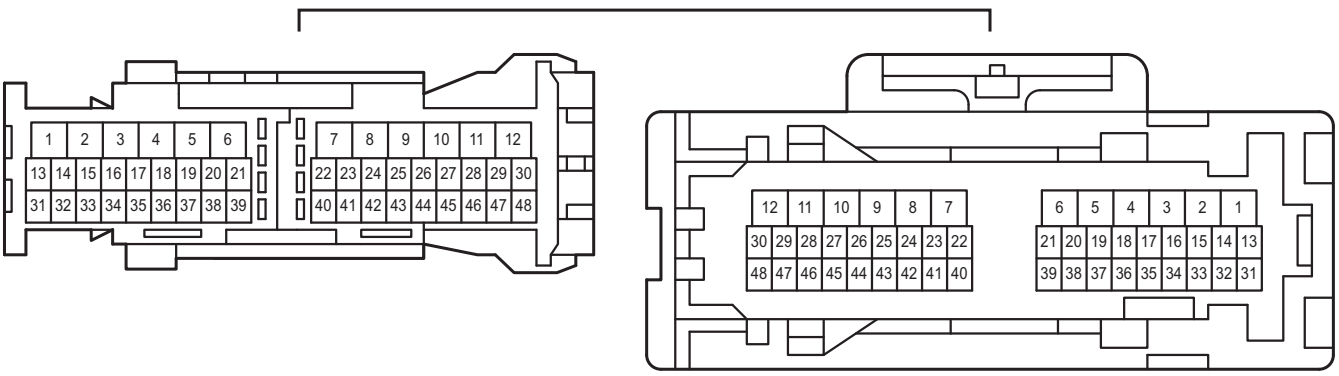
GA2
White