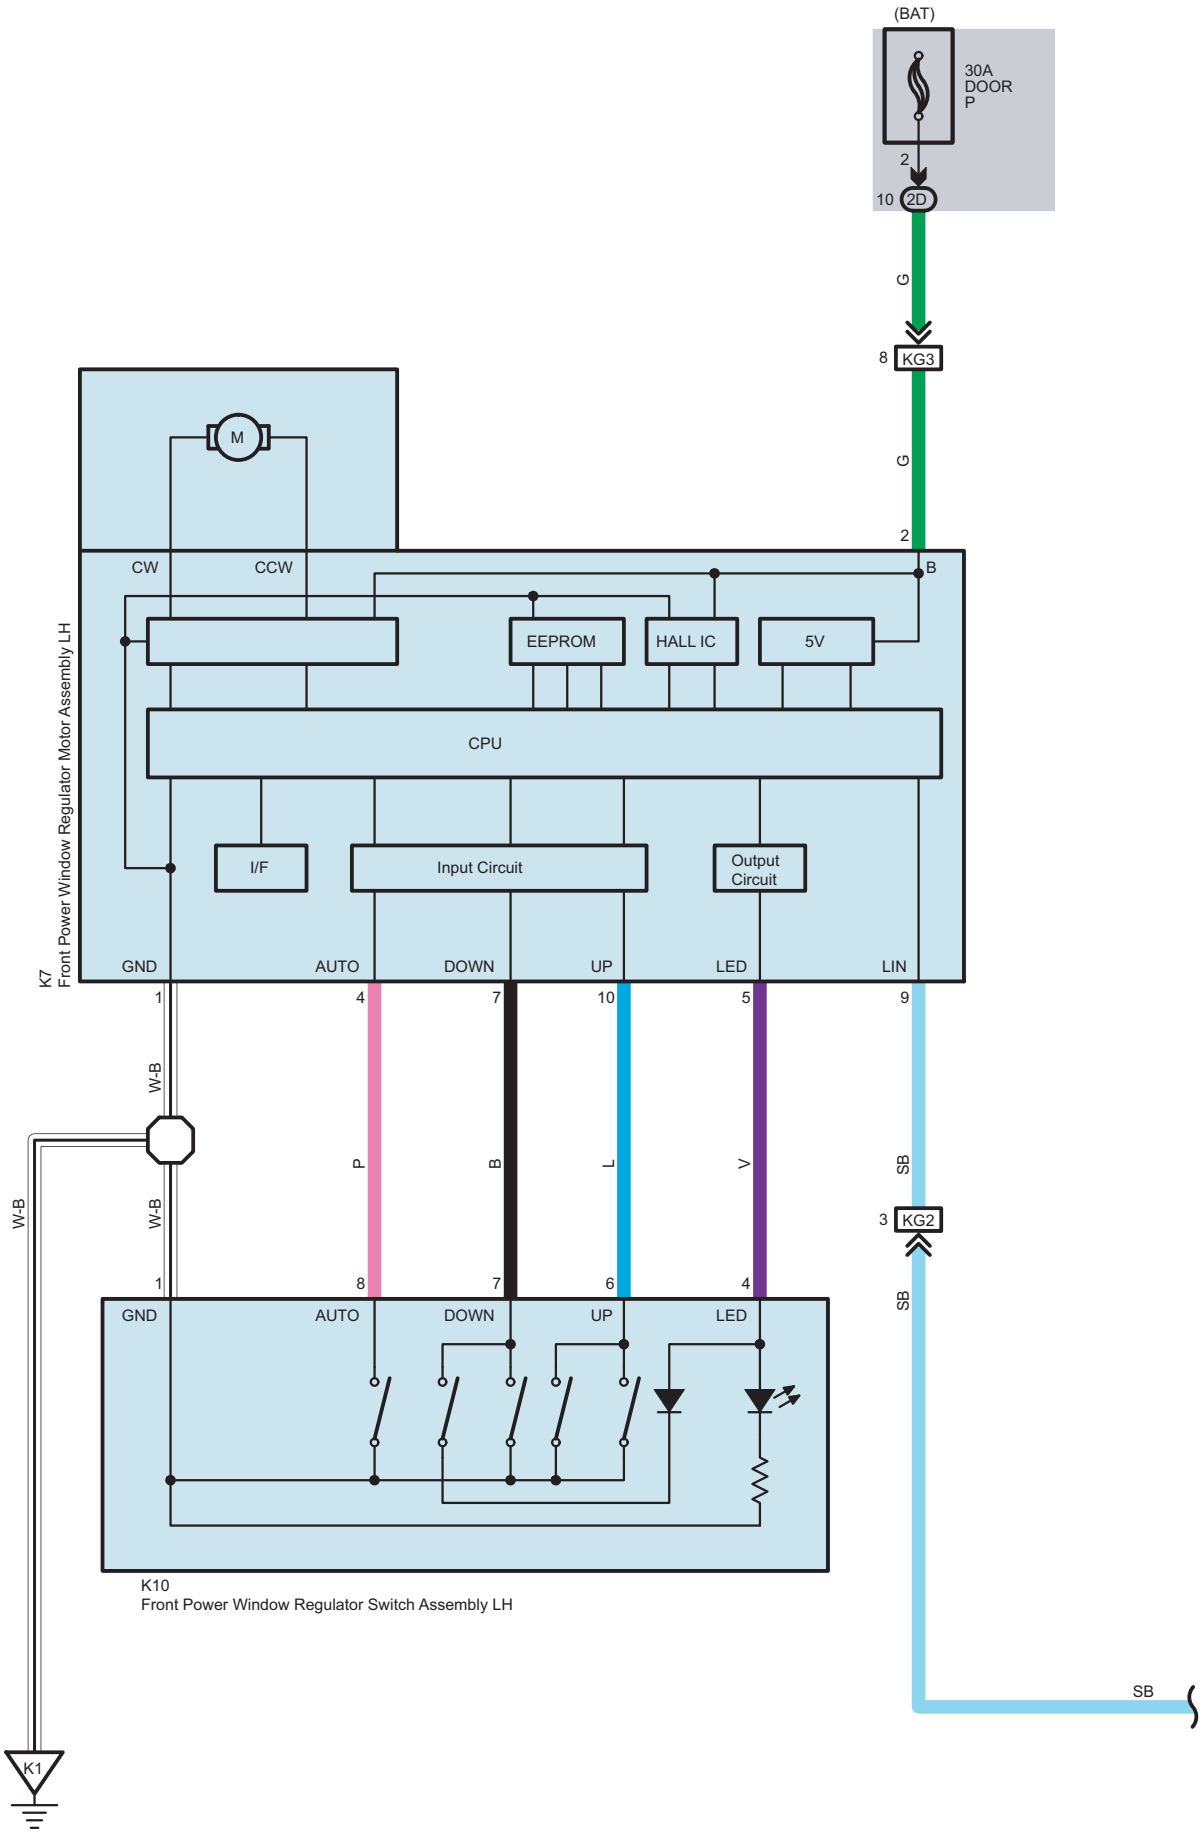
(BAT)
30A
DOOR
P
2
10
2D
G
8
KG3
G
2
M
CW
CCW
B
EEPROM
HALL IC
5V
CPU
I/F
Input Circuit
Output
Circuit
K7
Front Power Window Regulator Motor Assembly LH
GND
AUTO
DOWN
UP
LED
LIN
1
4
7
10
5
9
W-B
P
B
L
V
SB
3
KG2
W-B
W-B
1
8
7
6
4
GND
AUTO
DOWN
UP
LED
SB
K10
Front Power Window Regulator Switch Assembly LH
SB
K1

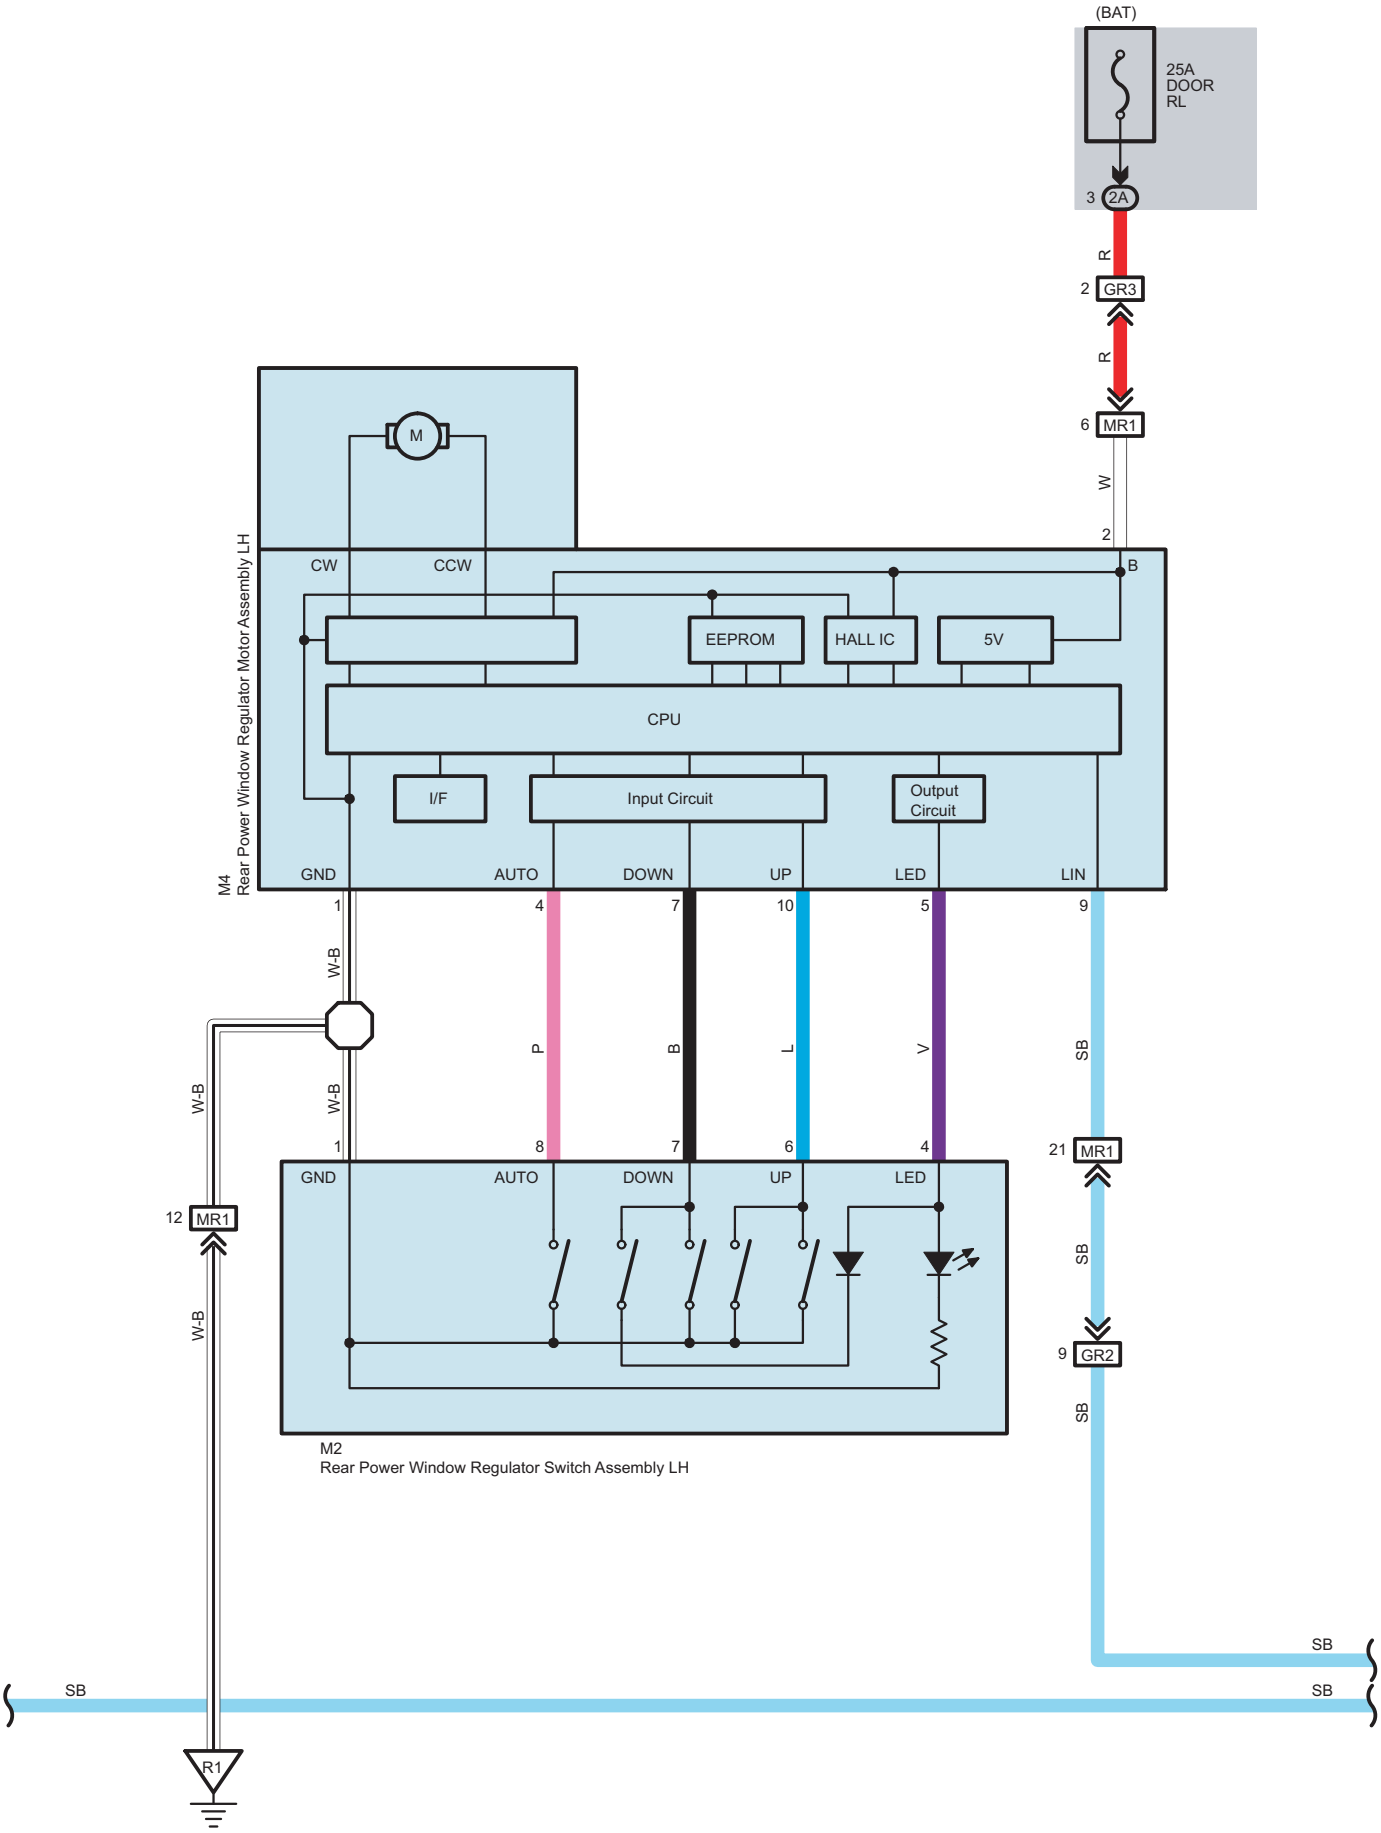
(BAT)
25A
DOOR
RL
3
2A
R
2
GR3
R
6
MR1
W
2
B
M
CW
CCW
EEPROM
HALL IC
5V
CPU
I/F
Input Circuit
Output
Circuit
M4
Rear Power Window Regulator Motor Assembly LH
GND
AUTO
DOWN
UP
LED
LIN
1
4
7
10
5
9
W-B
P
B
L
V
SB
W-B
W-B
1
8
7
6
4
21
MR1
GND
AUTO
DOWN
UP
LED
12
MR1
SB
W-B
9
GR2
SB
M2
Rear Power Window Regulator Switch Assembly LH
SB
SB
SB
R1

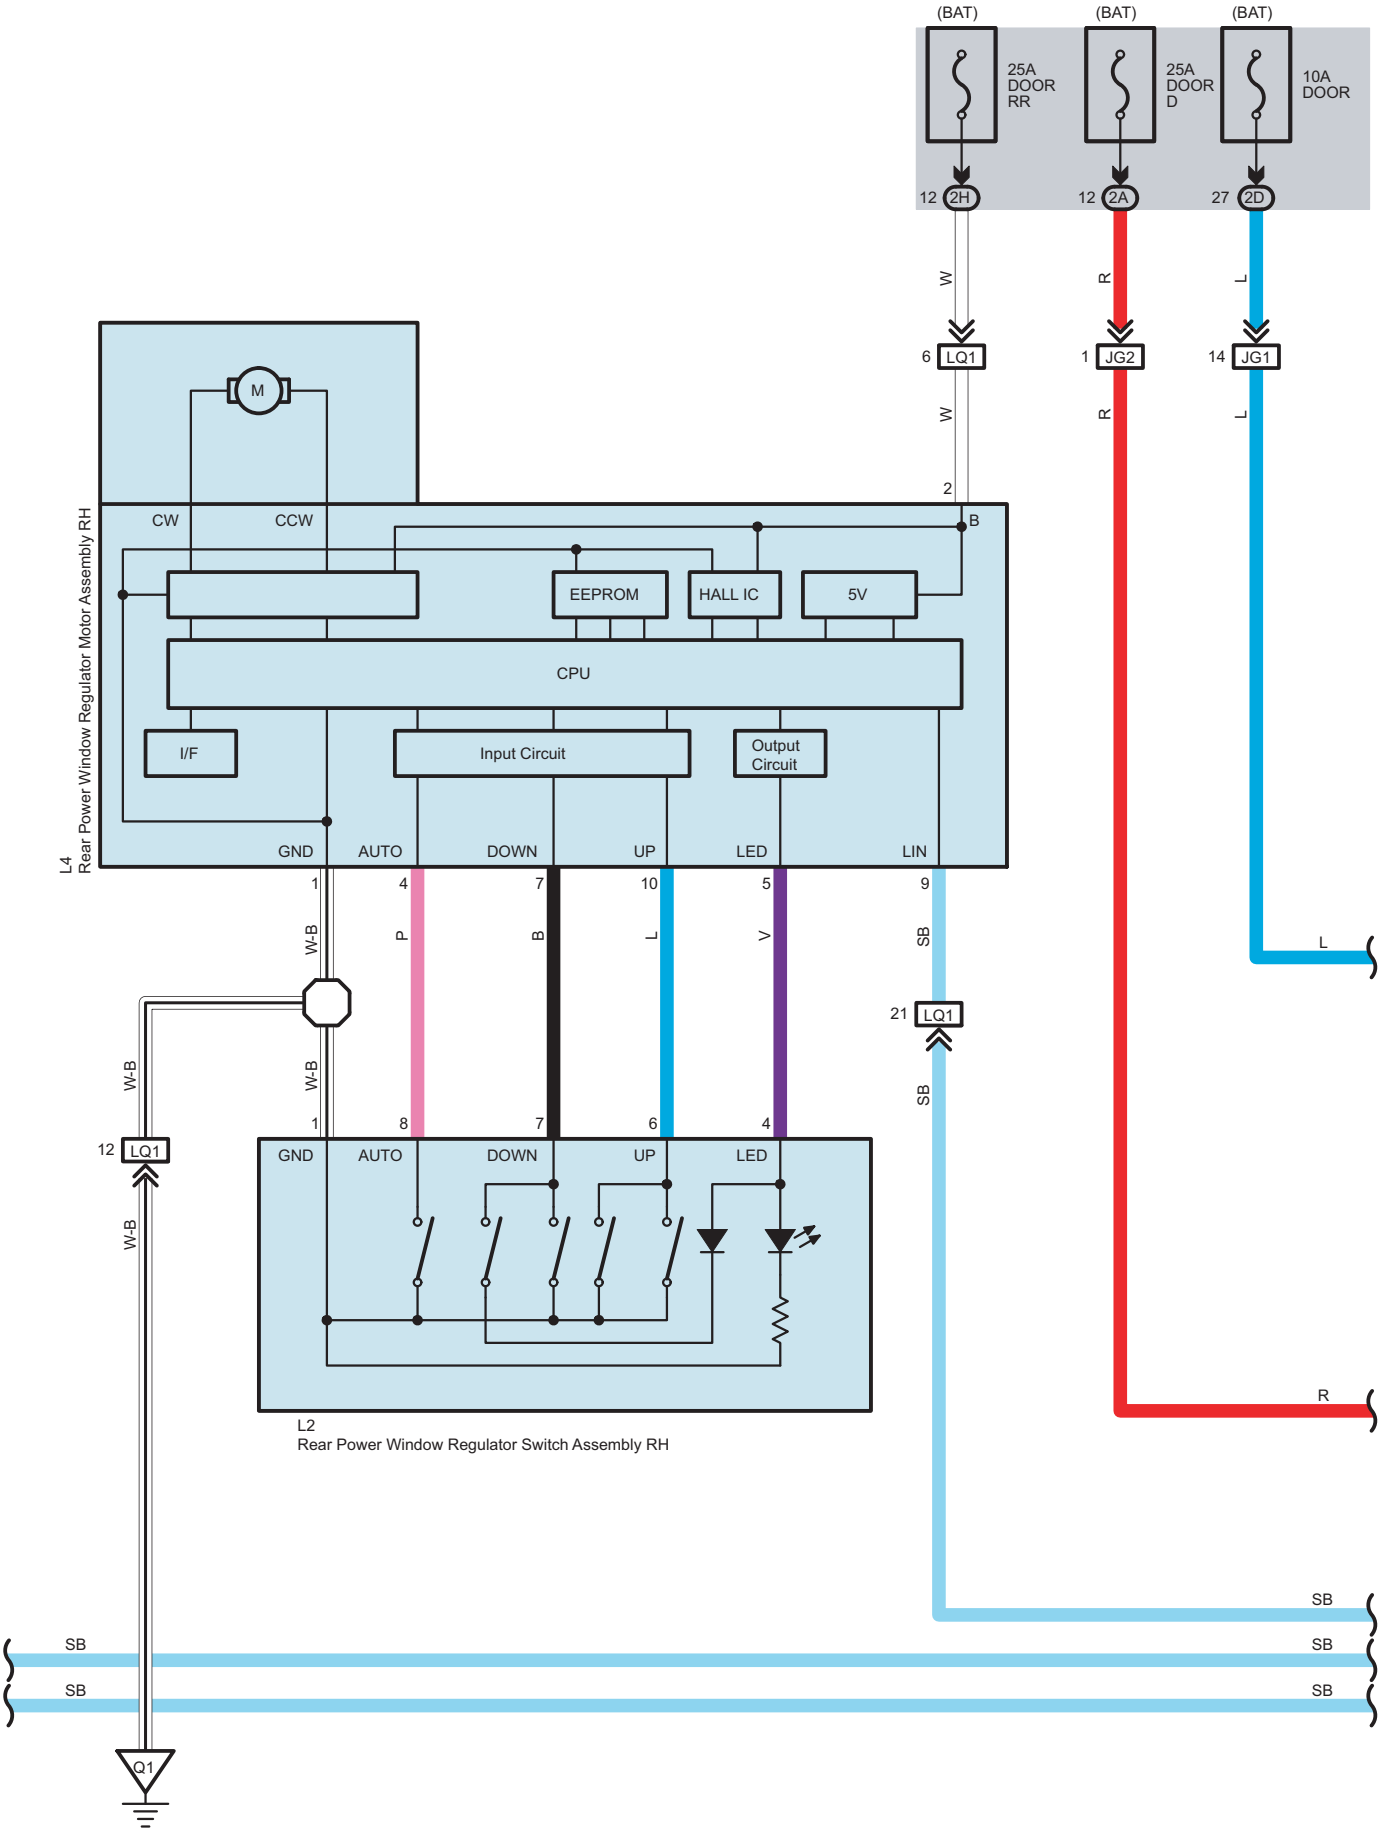
(BAT)
(BAT)
(BAT)
25A DOOR RR
25A DOOR D
10A DOOR
12 2H
12 2A
27 2D
W
R
L
6 LQ1
1 JG2
14 JG1
W
R
L
2
B
M
CW
CCW
EEPROM
HALL IC
5V
CPU
I/F
Input Circuit
Output Circuit
L4
Rear Power Window Regulator Motor Assembly RH
GND
AUTO
DOWN
UP
LED
LIN
1
4
7
10
5
9
W-B
P
B
L
V
SB
L
21 LQ1
SB
W-B
W-B
1
8
7
6
4
12 LQ1
GND
AUTO
DOWN
UP
LED
W-B
L2
Rear Power Window Regulator Switch Assembly RH
R
SB
SB
SB
SB
SB
Q1

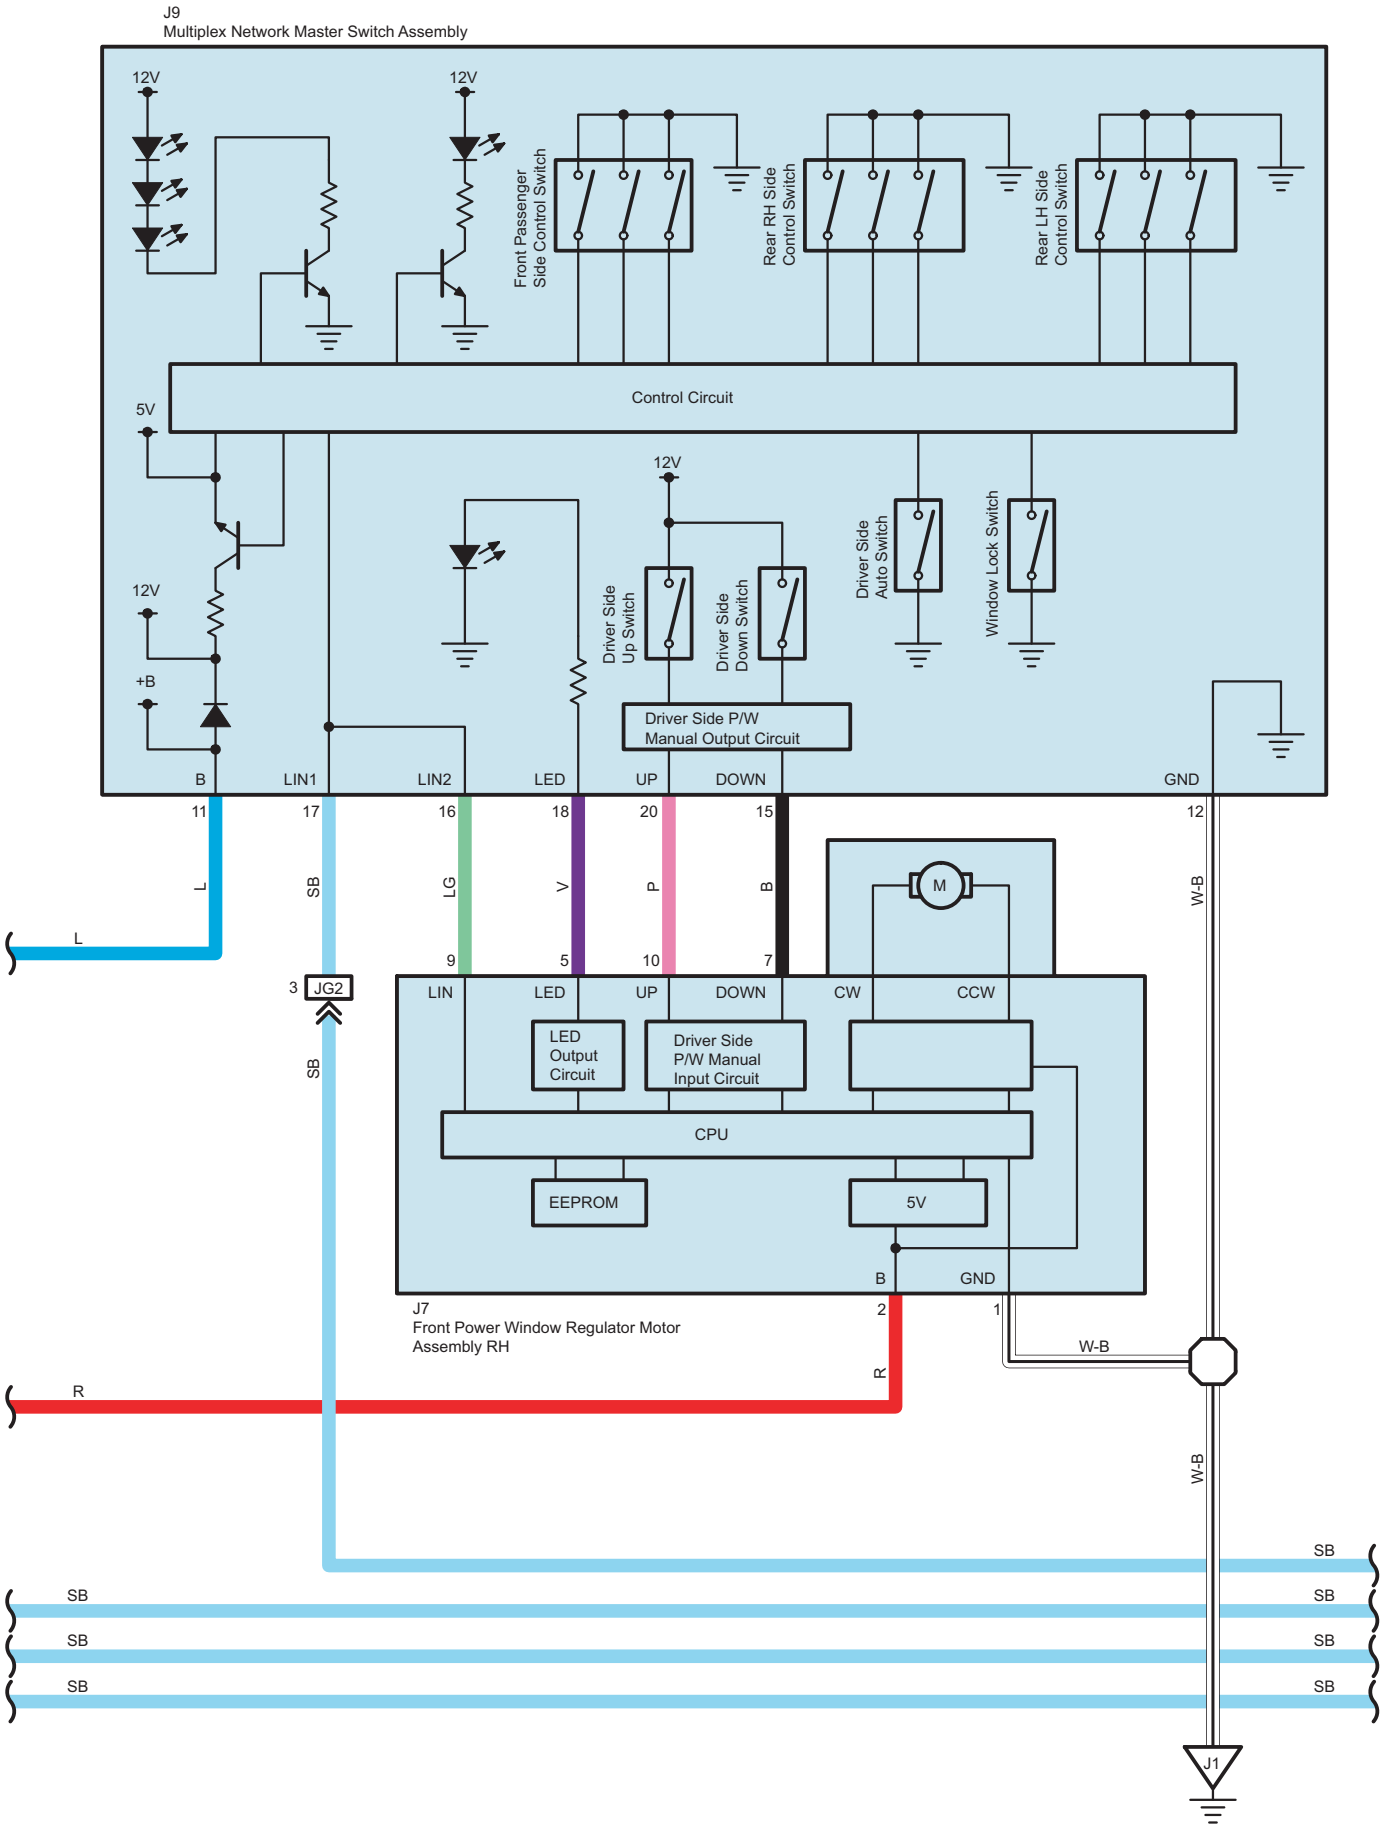
J9
Multiplex Network Master Switch Assembly
12V
12V
Front Passenger Side Control Switch
Rear RH Side Control Switch
Rear LH Side Control Switch
Control Circuit
5V
12V
12V
+B
Driver Side Up Switch
Driver Side Down Switch
Driver Side Auto Switch
Window Lock Switch
Driver Side P/W Manual Output Circuit
B
LIN1
LIN2
LED
UP
DOWN
GND
11
17
16
18
20
15
12
L
SB
LG
V
P
B
W-B
L
M
9
5
10
7
3
JG2
LIN
LED
UP
DOWN
CW
CCW
SB
LED Output Circuit
Driver Side P/W Manual Input Circuit
CPU
EEPROM
5V
B
GND
J7
Front Power Window Regulator Motor Assembly RH
2
1
W-B
R
R
W-B
SB
SB
SB
SB
SB
SB
SB
SB
J1

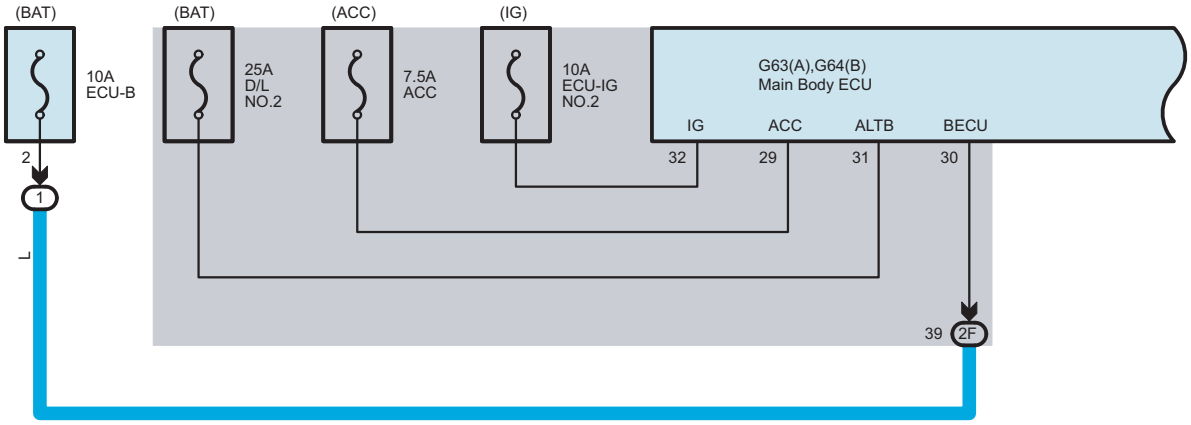

* 3 :Before Oct. 2010 Production
* 4 :From Oct. 2010 Production

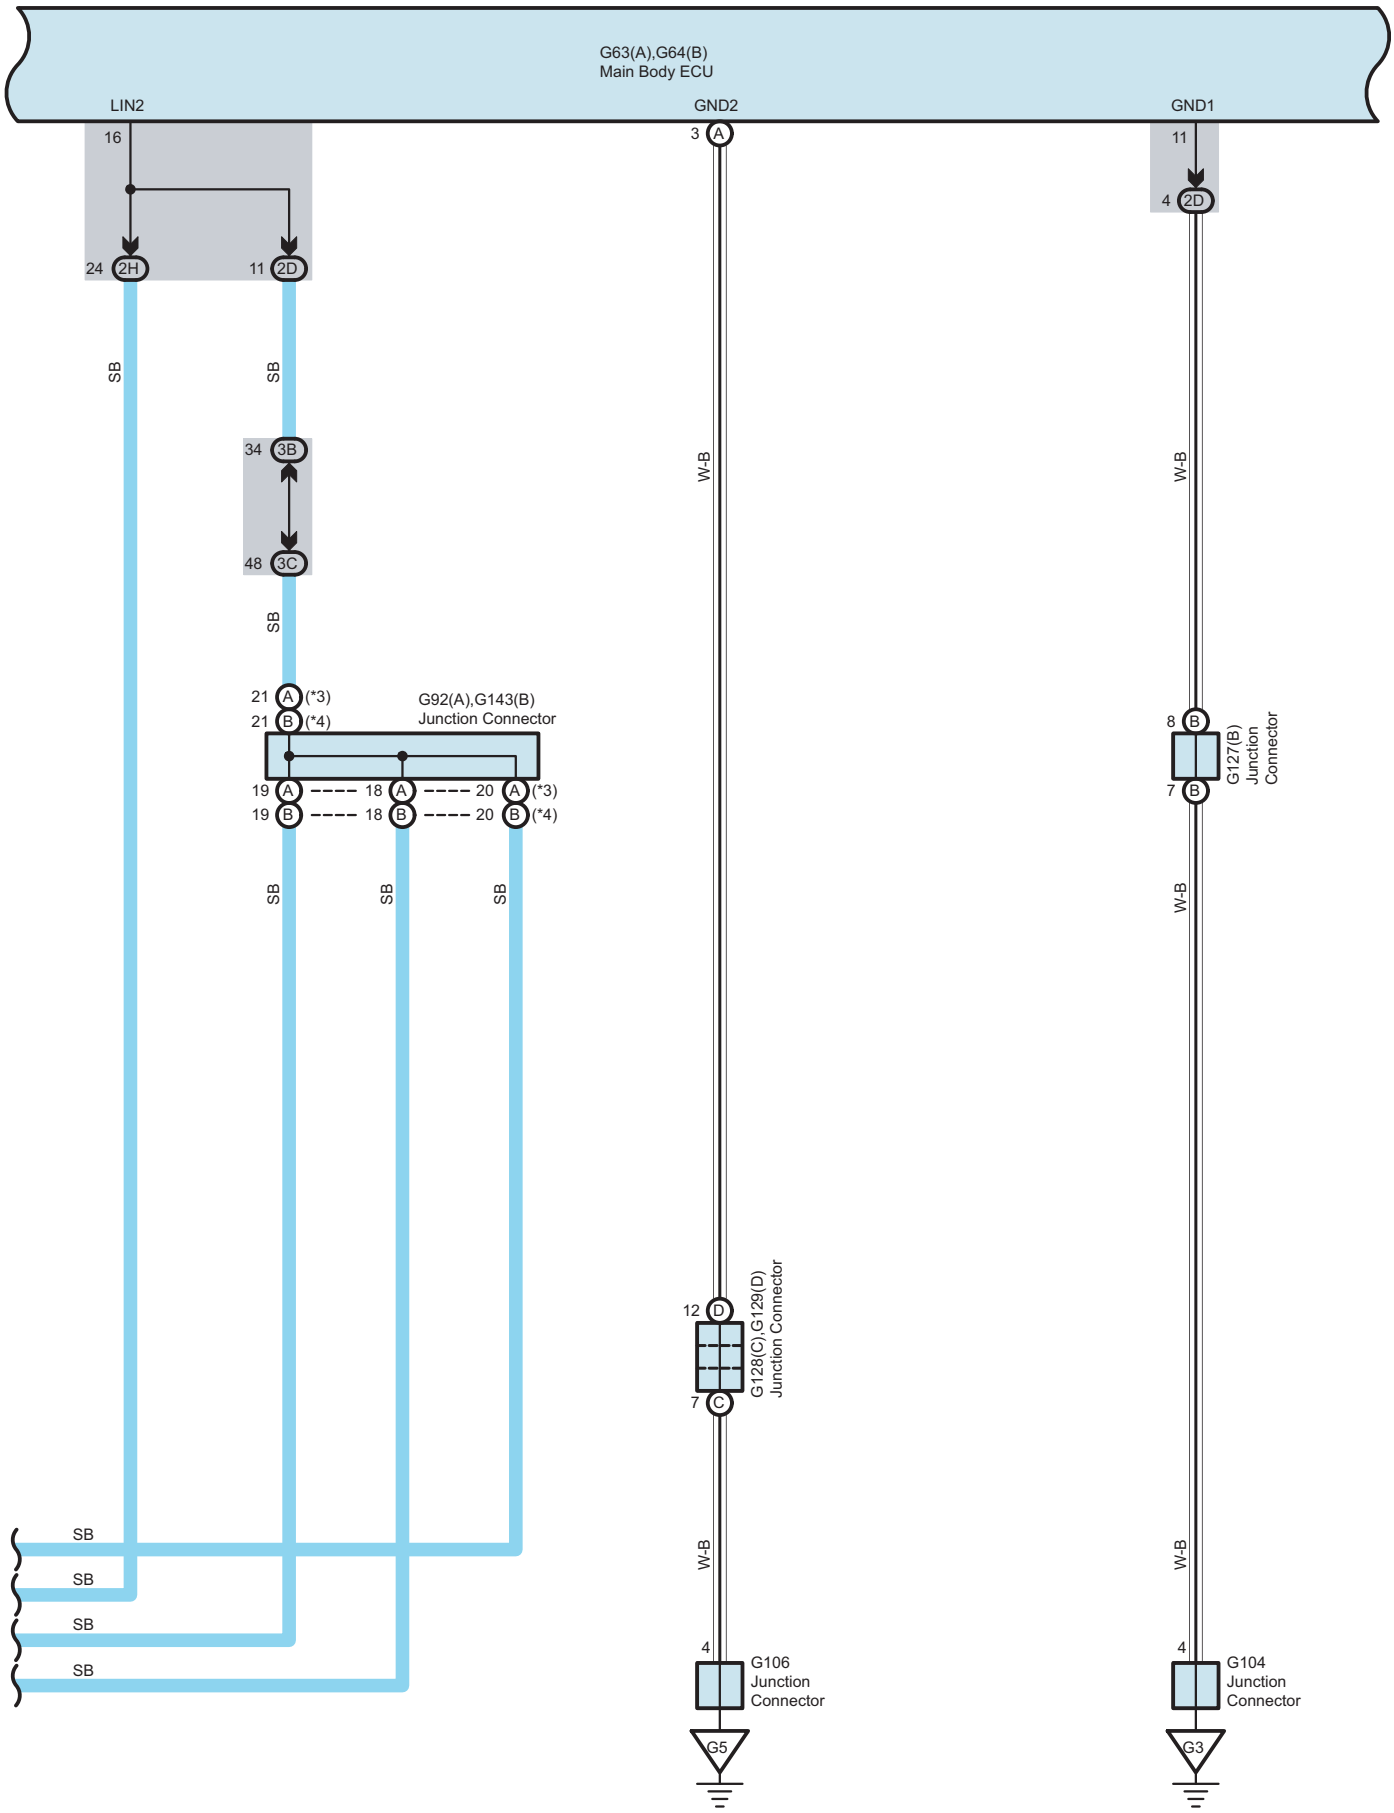
G63(A),G64(B)
Main Body ECU
LIN2
GND2
GND1
16
24 2H
11 2D
3 A
11
4 2D
SB
SB
34 3B
48 3C
SB
W-B
W-B
21 A (*3)
21 B (*4)
G92(A),G143(B)
Junction Connector
19 A
18 A
20 A (*3)
19 B
18 B
20 B (*4)
SB
SB
SB
8 B
7 B
G127(B)
Junction
Connector
W-B
12 D
7 C
G128(C),G129(D)
Junction Connector
SB
SB
SB
SB
W-B
W-B
4
G106
Junction
Connector
G5
4
G104
Junction
Connector
G3

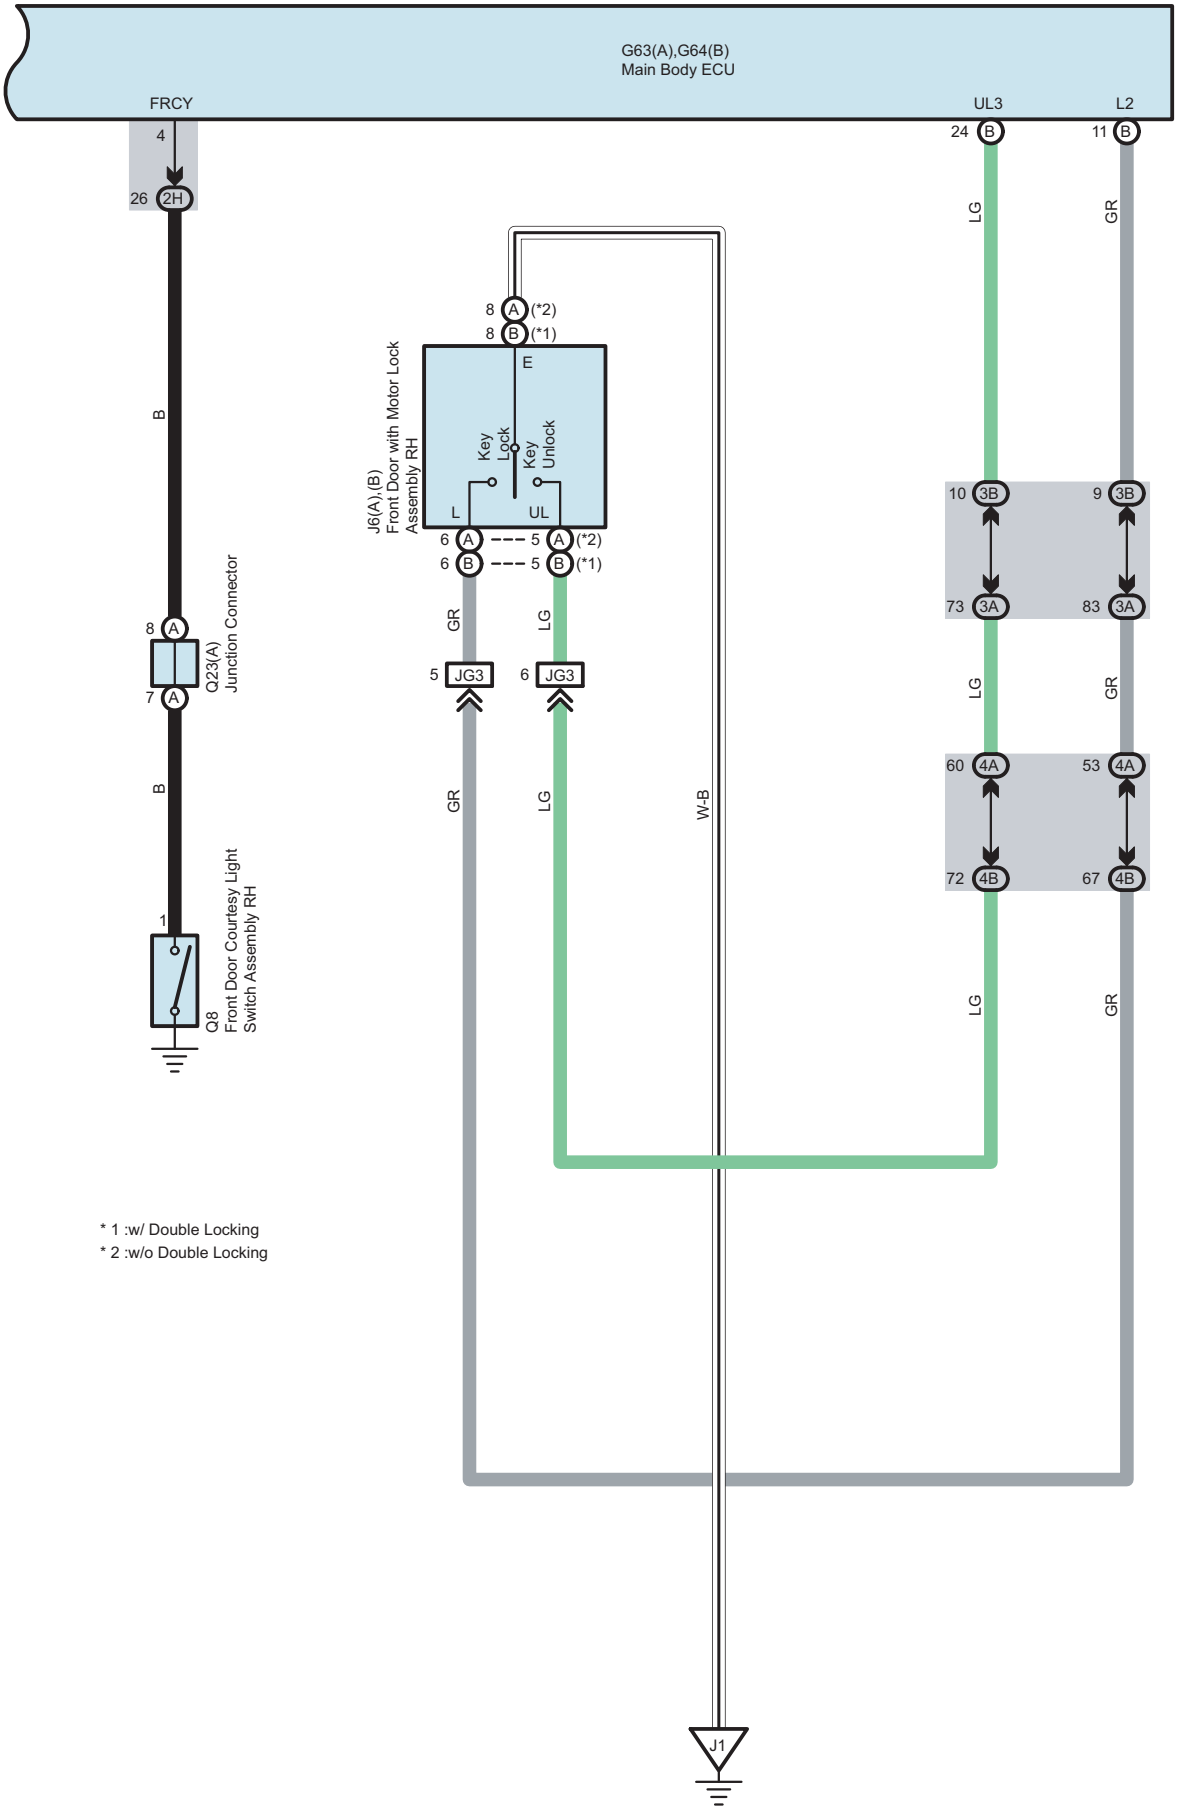
G63(A),G64(B)
Main Body ECU
FRCY
UL3
L2
4
26 2H
24 B
11 B
LG
GR
B
8 A (*2)
8 B (*1)
E
J6(A),(B)
Front Door with Motor Lock
Assembly RH
Key
Lock
Key
Unlock
L
UL
6 A --- 5 A (*2)
6 B --- 5 B (*1)
10 3B
9 3B
73 3A
83 3A
8 A
7 A
Q23(A)
Junction Connector
5 JG3
6 JG3
60 4A
53 4A
72 4B
67 4B
W-B
1
Q8
Front Door Courtesy Light
Switch Assembly RH
J1
* 1 :w/ Double Locking
* 2 :w/o Double Locking

G63
White

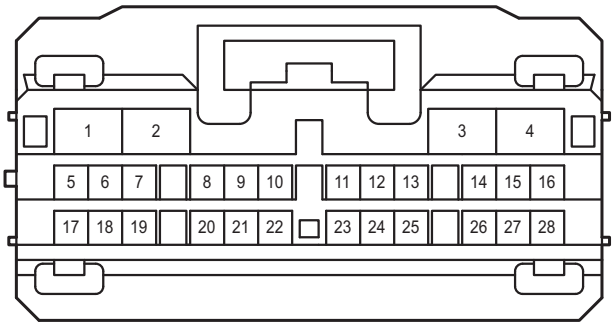

G64
White

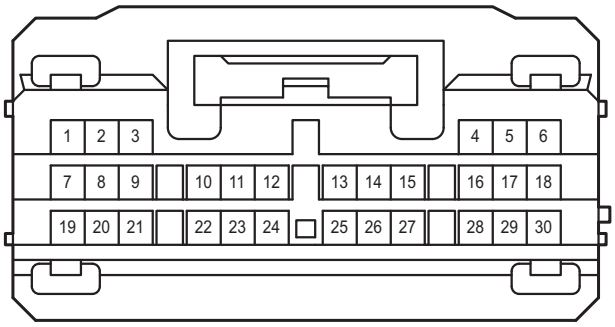

G92
White

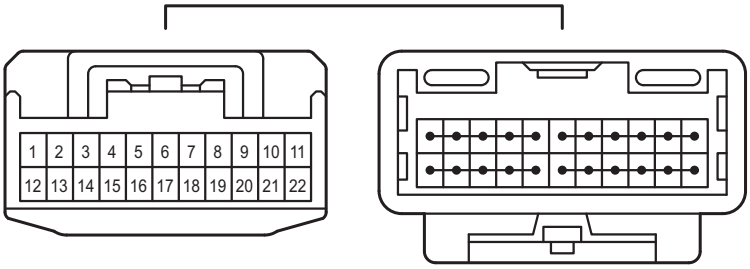

G104
White

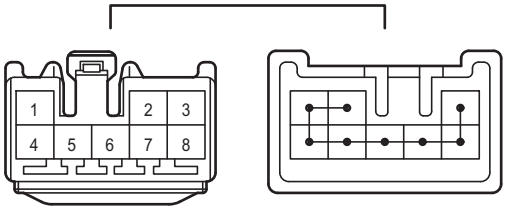

G106
White

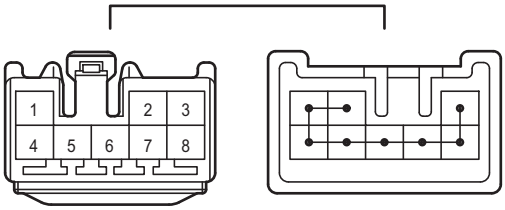

G127
Black

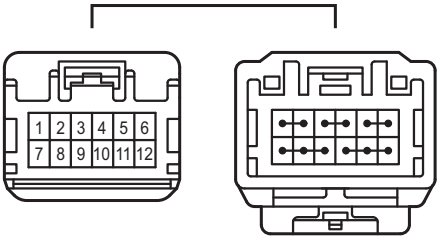

G128
Black

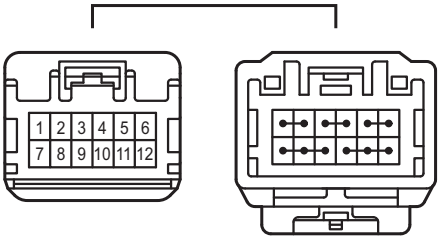

G129
Black

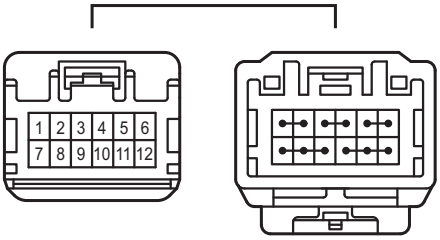

G143
Black

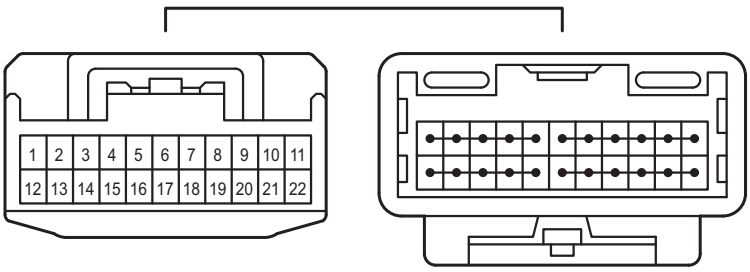

J6
White

J7
White

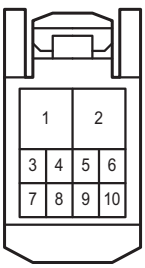

J9
White

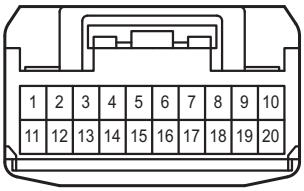

K7
White

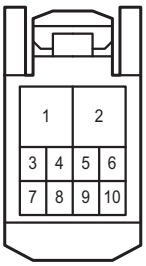

K10
White

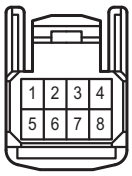

L2
White

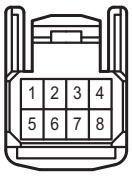

L4
White

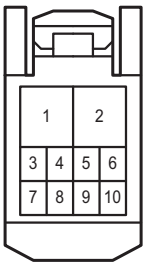

M2
White

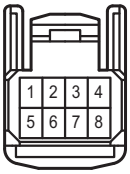

M4
White

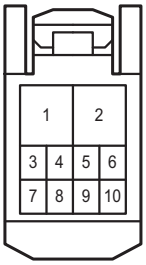

Q8
Black

Q23
White

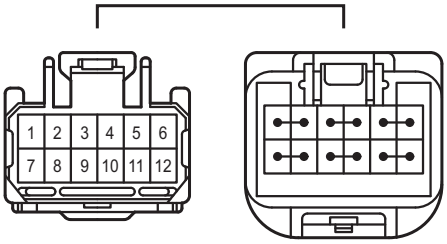

2A
White

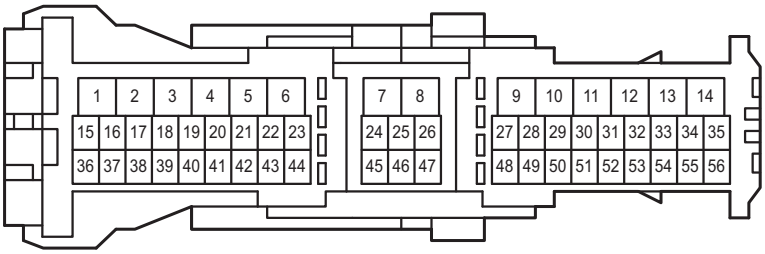

2D
White

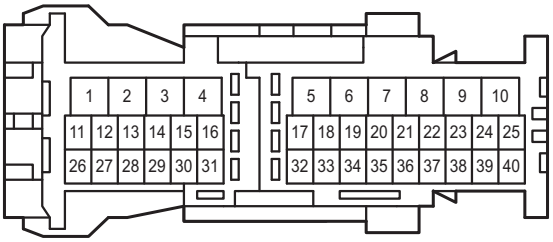

2F
White

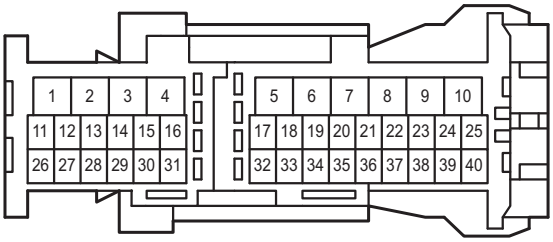

2H
White

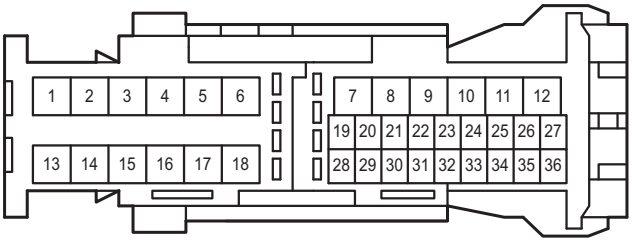

3A
White

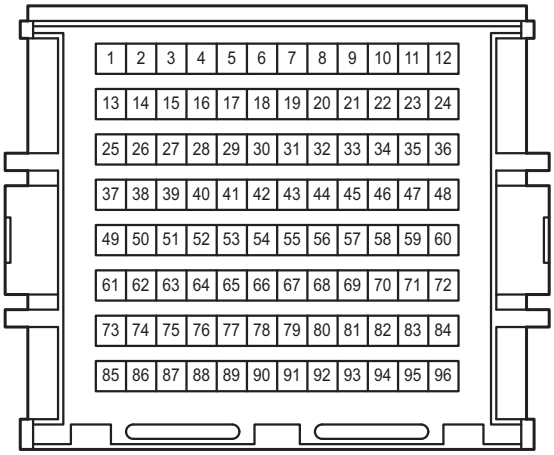

3B
White

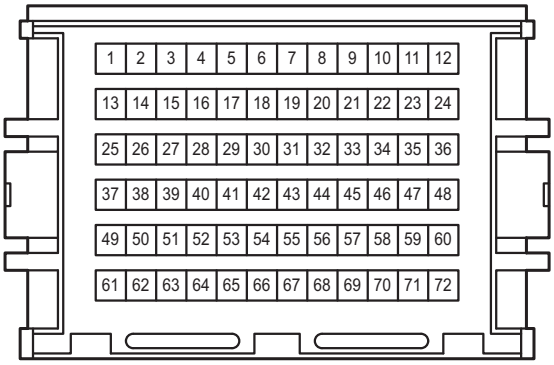

3C
White

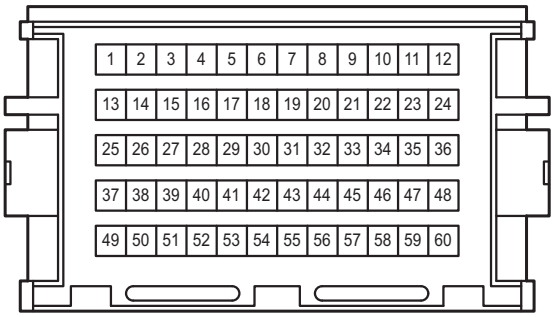

4A
White

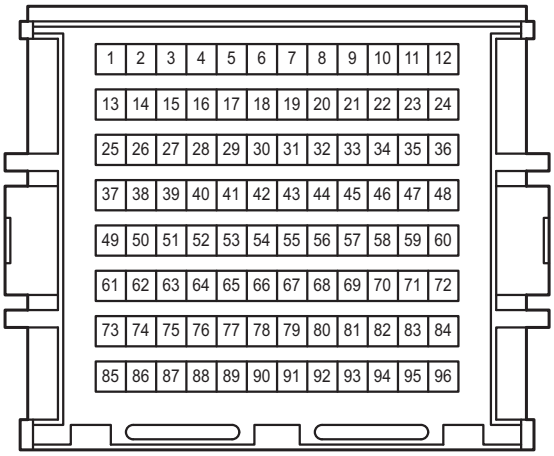

4B
White

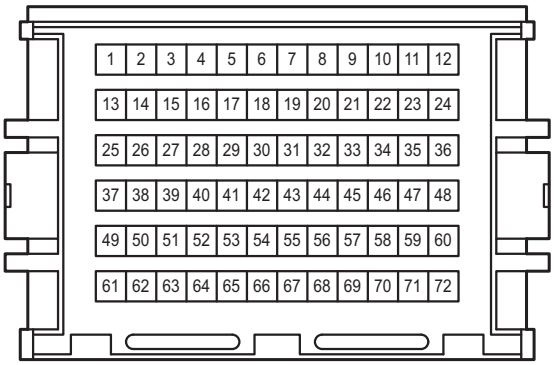

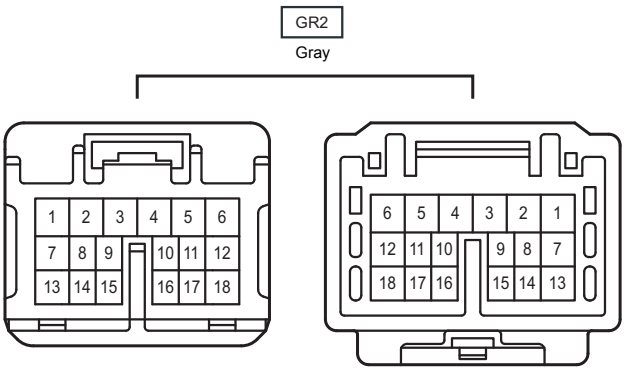
GR2
Gray
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

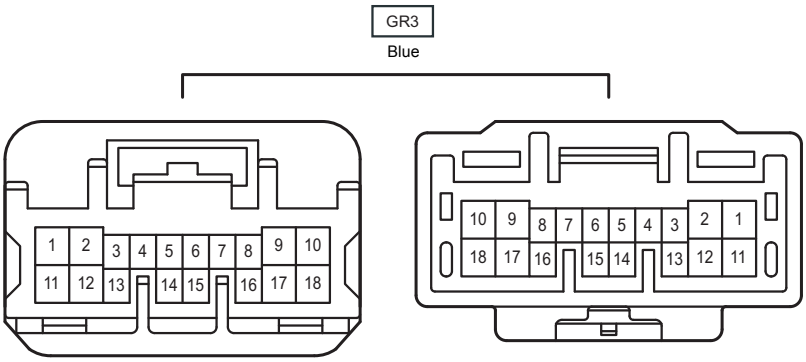
GR3
Blue
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

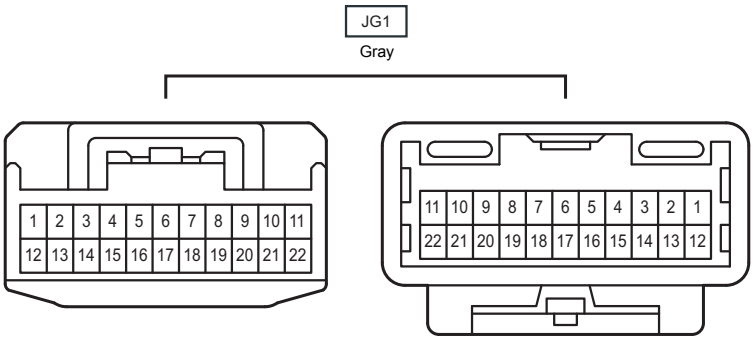
JG1
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

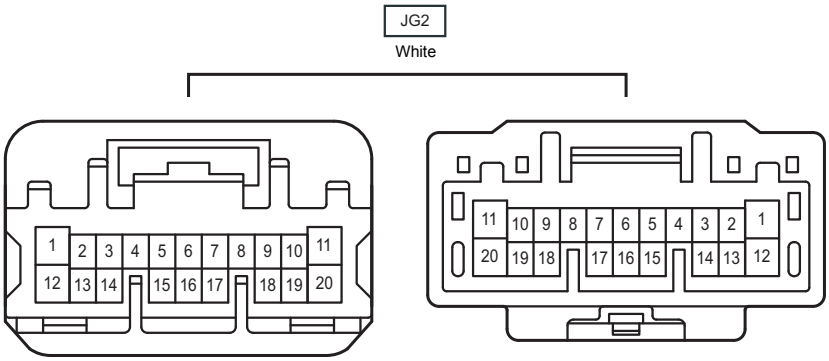
JG2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

JG3
Black

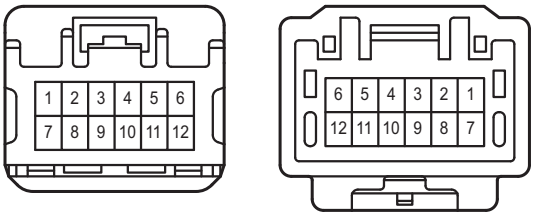

KG2
White

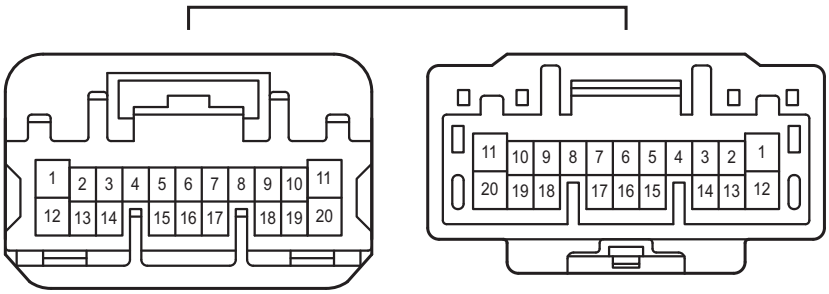

KG3
Black

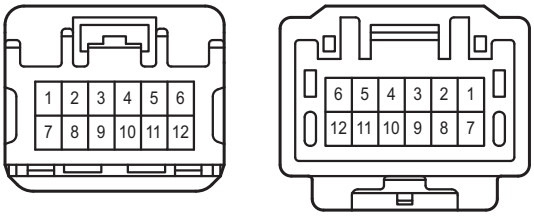

LQ1
White

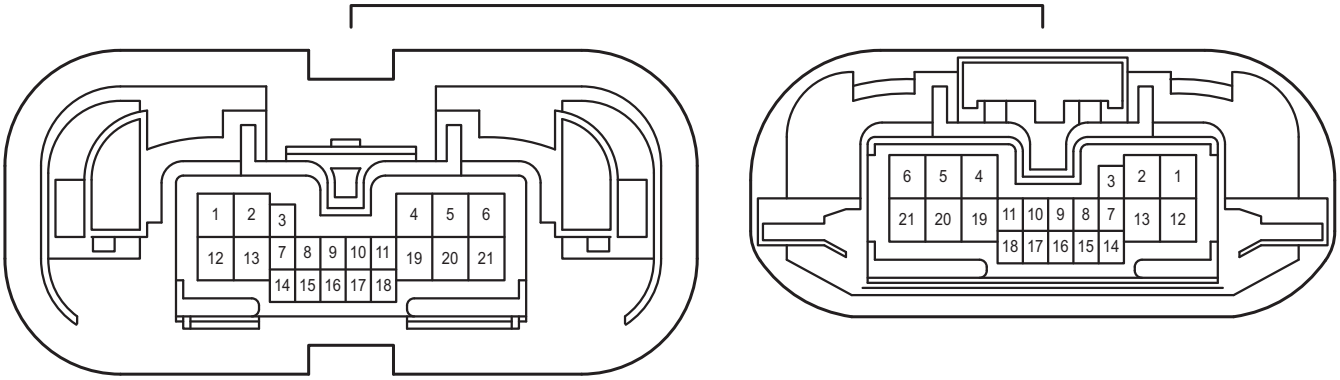

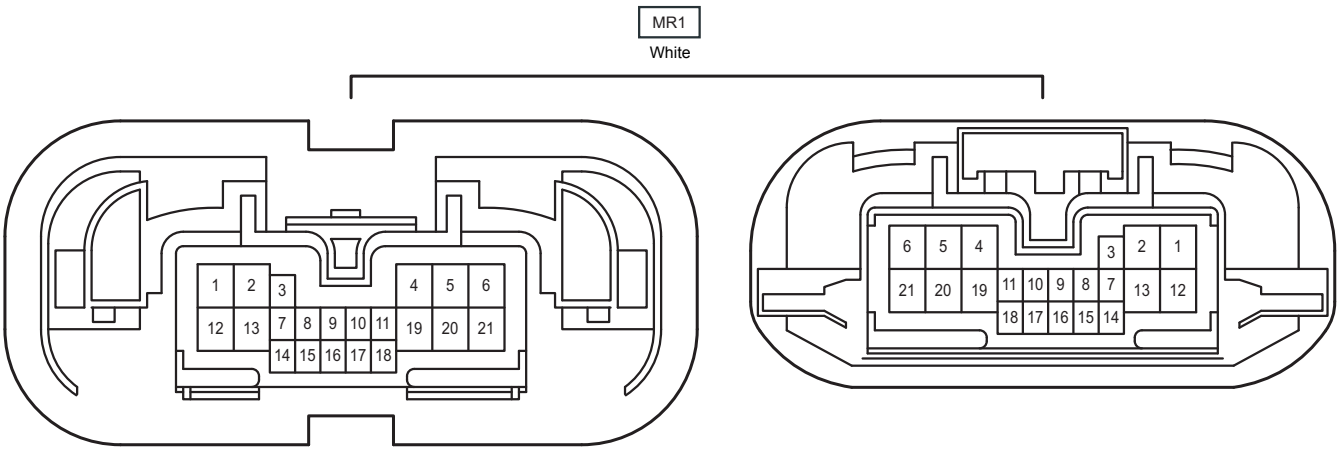
MR1
White
1
2
3
4
5
6
12
13
7
8
9
10
11
19
20
21
14
15
16
17
18
6
5
4
3
2
1
21
20
19
11
10
9
8
7
13
12
18
17
16
15
14