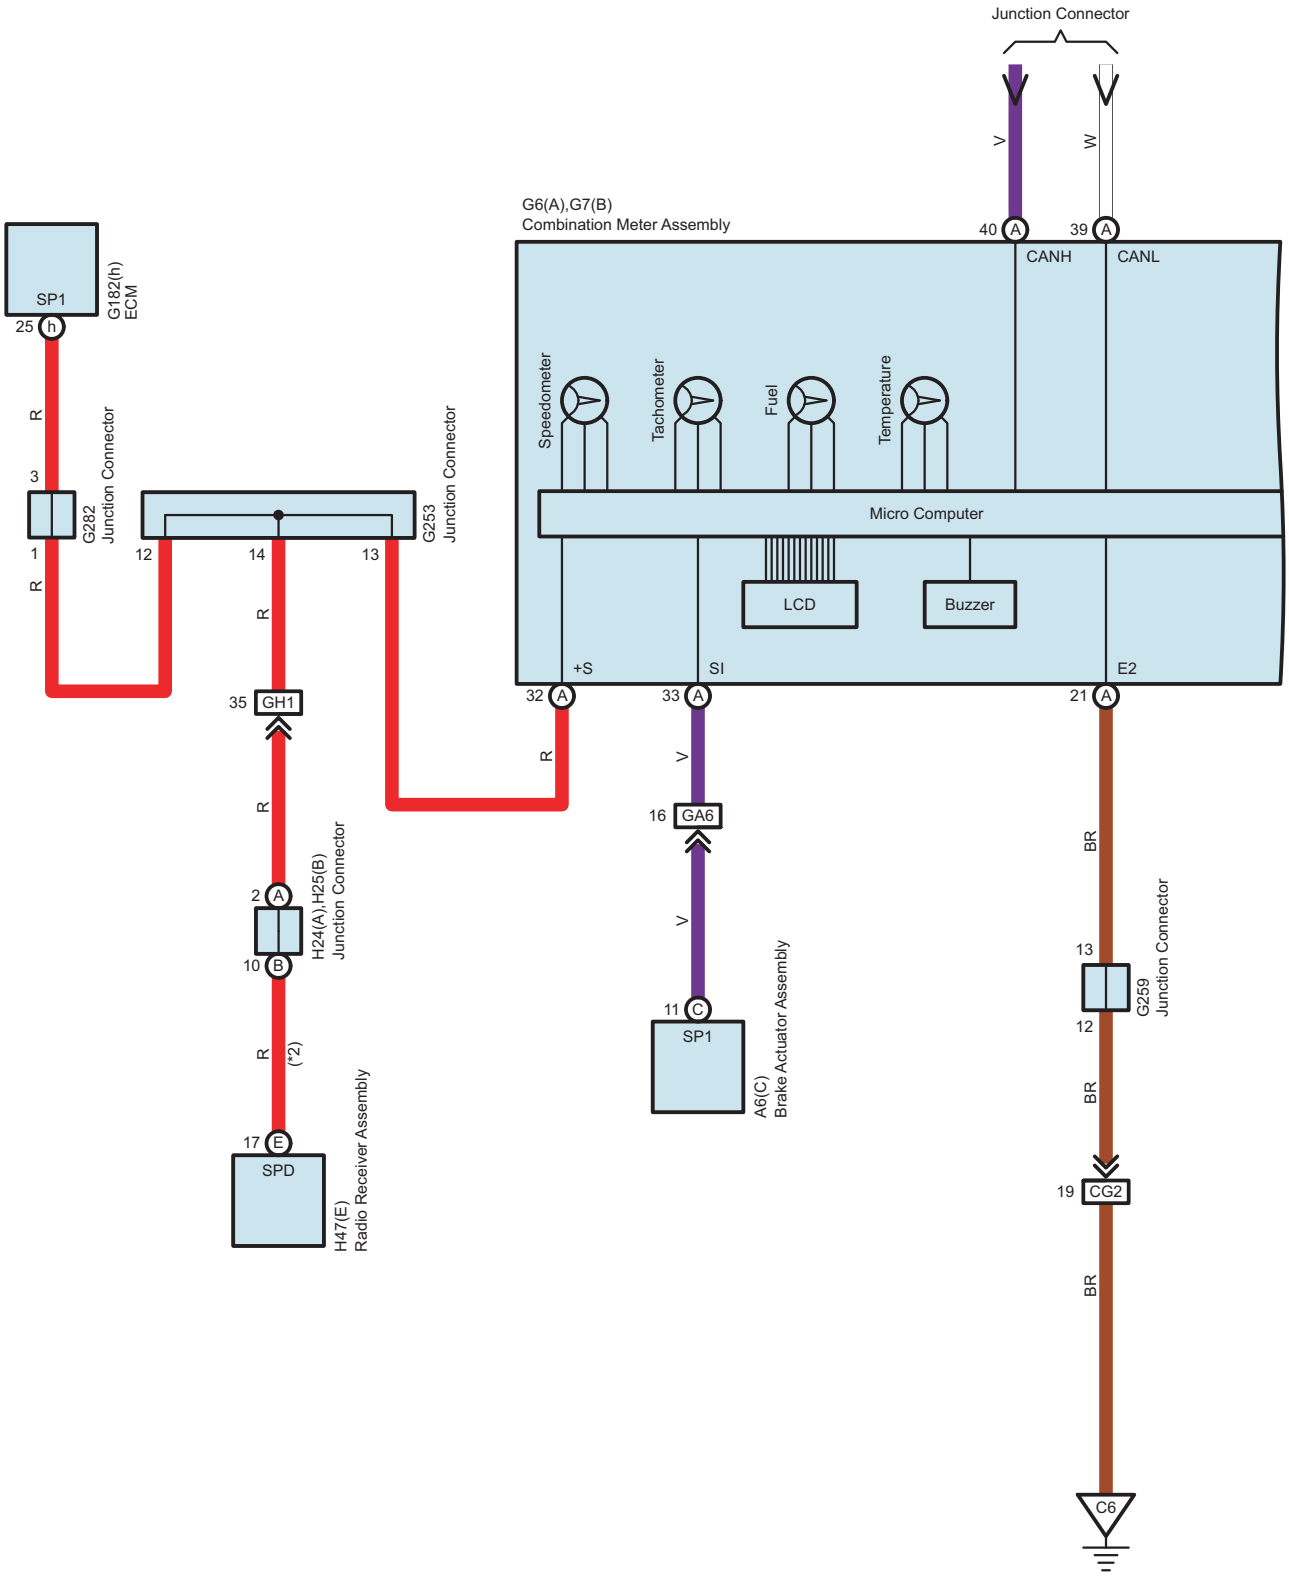
Junction Connector
V
W
G6(A),G7(B)
Combination Meter Assembly
40 A
39 A
CANH
CANL
SP1
25 h
G182(h)
ECM
R
3
G282
Junction Connector
1
R
12
14
13
G253
Junction Connector
Speedometer
Tachometer
Fuel
Temperature
Micro Computer
LCD
Buzzer
+S
SI
E2
32 A
33 A
21 A
R
35 GH1
R
2 A
10 B
H24(A),H25(B)
Junction Connector
R
(*2)
17 E
SPD
H47(E)
Radio Receiver Assembly
V
16 GA6
V
11 C
SP1
A6(C)
Brake Actuator Assembly
BR
13
12
G259
Junction Connector
BR
19 CG2
BR
C6

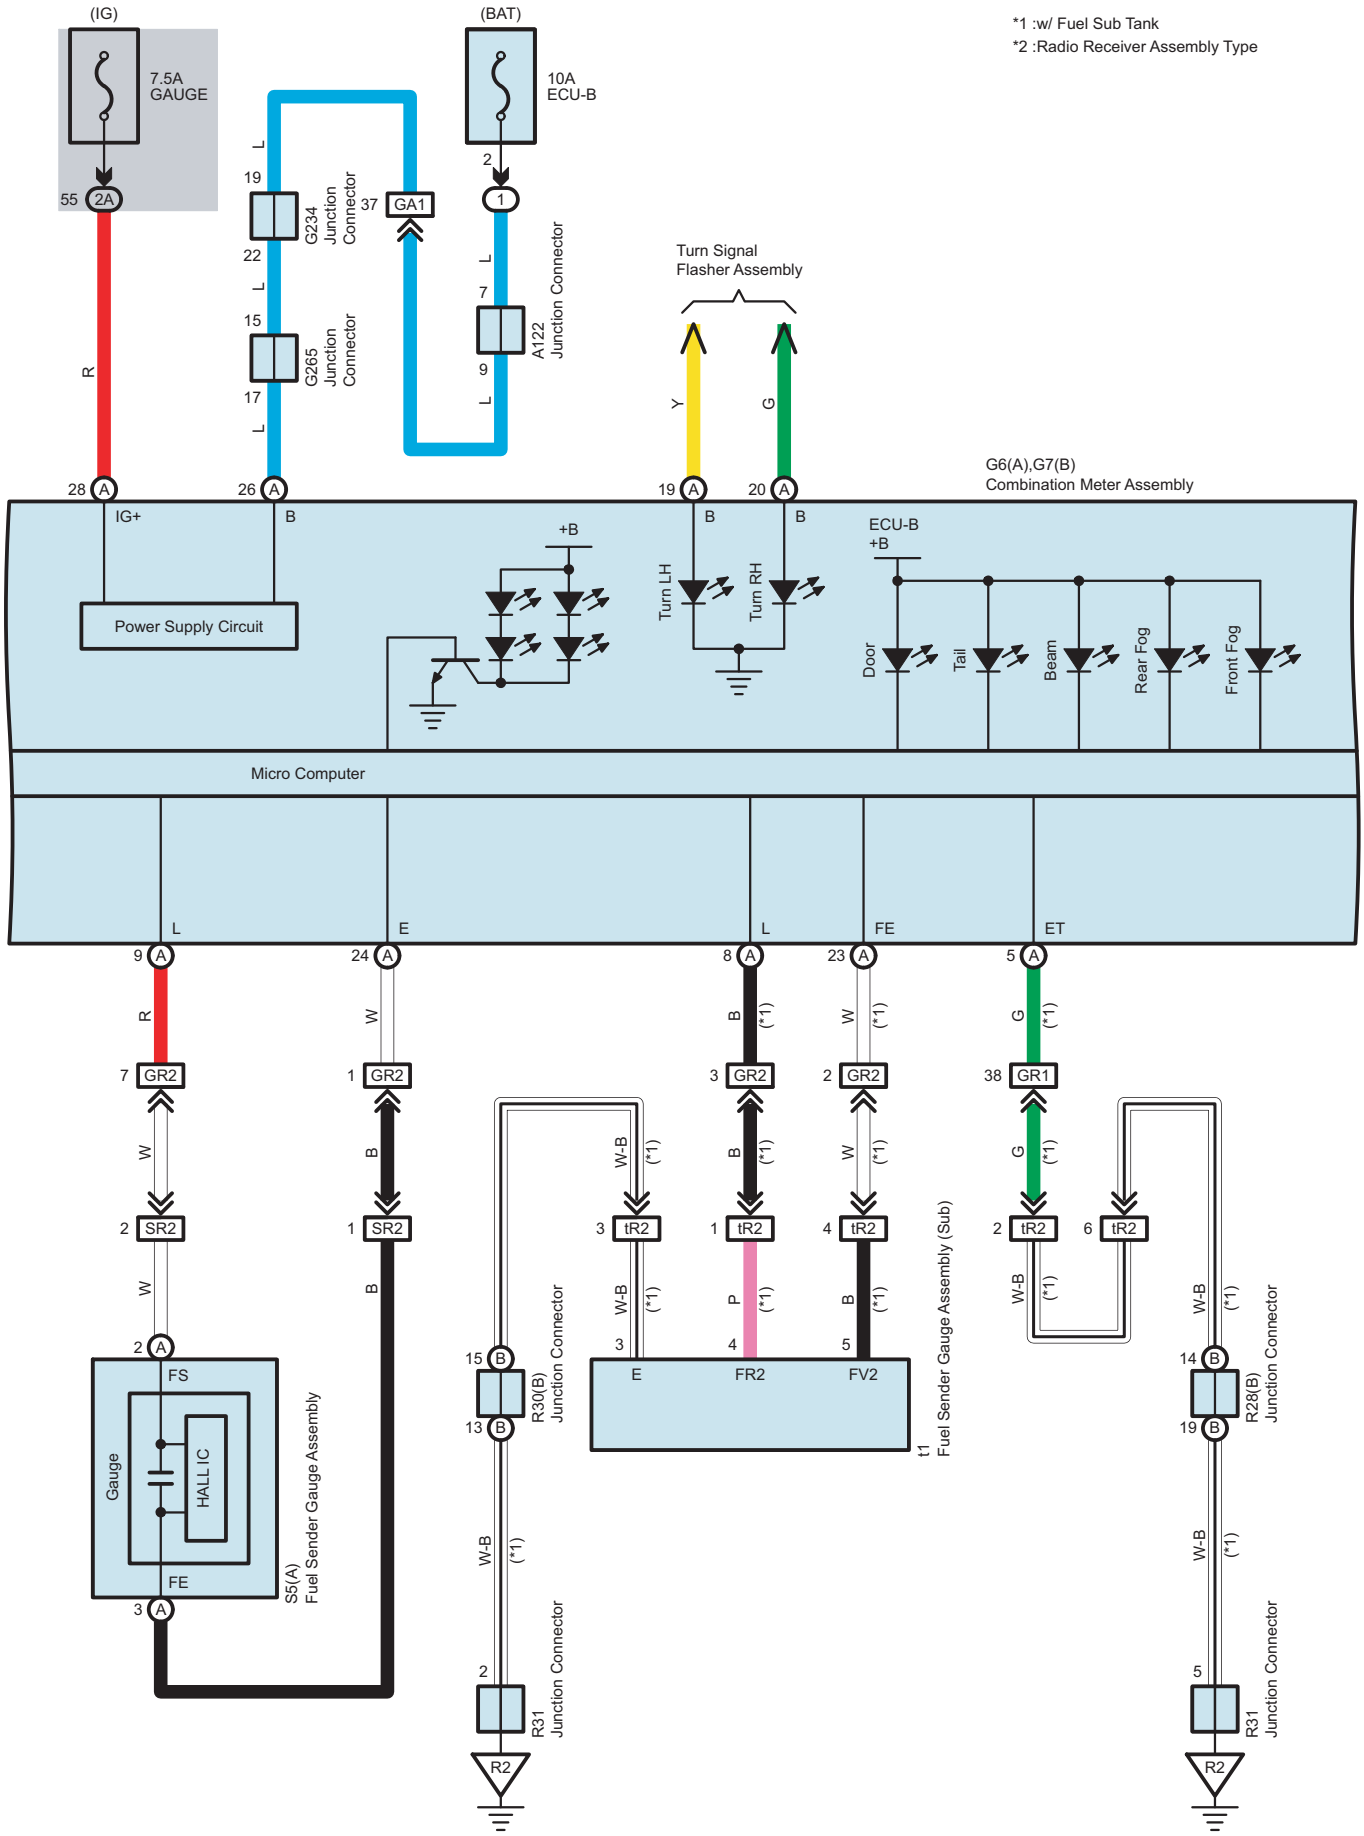
(IG)
7.5A
GAUGE
55 2A
(BAT)
10A
ECU-B
2
1
19
22
G234
Junction
Connector
37 GA1
15
17
G265
Junction
Connector
7
9
A122
Junction Connector
R
L
Turn Signal
Flasher Assembly
Y
G
*1 :w/ Fuel Sub Tank
*2 :Radio Receiver Assembly Type
G6(A),G7(B)
Combination Meter Assembly
28 A
26 A
19 A
20 A
IG+
B
+B
Power Supply Circuit
Turn LH
Turn RH
ECU-B
+B
Door
Tail
Beam
Rear Fog
Front Fog
Micro Computer
L
E
L
FE
ET
9 A
24 A
8 A
23 A
5 A
7 GR2
1 GR2
3 GR2
2 GR2
38 GR1
2 SR2
1 SR2
3 tR2
1 tR2
4 tR2
2 tR2
6 tR2
W-B
(*1)
2 A
FS
Gauge
HALL IC
FE
3 A
S5(A)
Fuel Sender Gauge Assembly
15 B
13 B
R30(B)
Junction Connector
E
FR2
FV2
t1
Fuel Sender Gauge Assembly (Sub)
14 B
19 B
R28(B)
Junction Connector
2
R31
Junction Connector
R2
5
R31
Junction Connector
R2

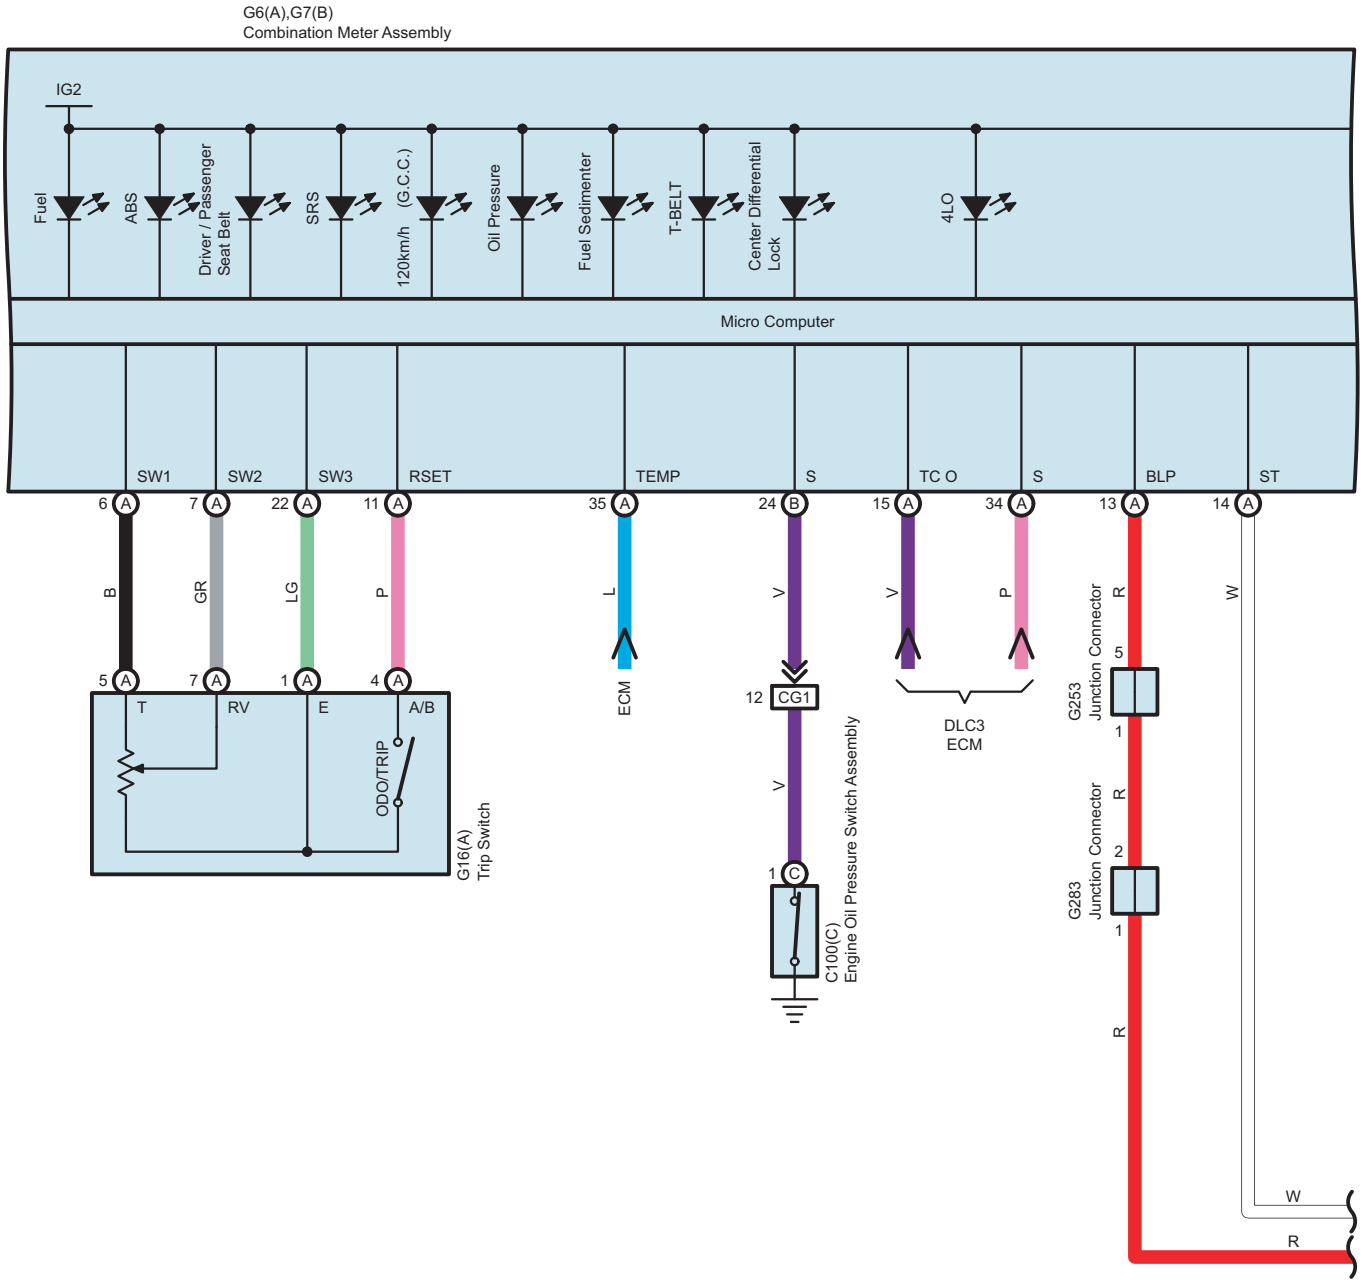
G6(A),G7(B)
Combination Meter Assembly
IG2
Fuel
ABS
Driver / Passenger Seat Belt
SRS
120km/h (G.C.C.)
Oil Pressure
Fuel Sedimenter
T-BELT
Center Differential Lock
4LO
Micro Computer
SW1
SW2
SW3
RSET
TEMP
S
TC O
S
BLP
ST
6 A
7 A
22 A
11 A
35 A
24 B
15 A
34 A
13 A
14 A
B
GR
LG
P
L
V
V
P
R
W
5 A
7 A
1 A
4 A
T
RV
E
A/B
ODO/TRIP
G16(A)
Trip Switch
ECM
12 CG1
V
1 C
C100(C)
Engine Oil Pressure Switch Assembly
DLC3
ECM
G253
Junction Connector
5
1
G283
Junction Connector
2
1
R
W
R

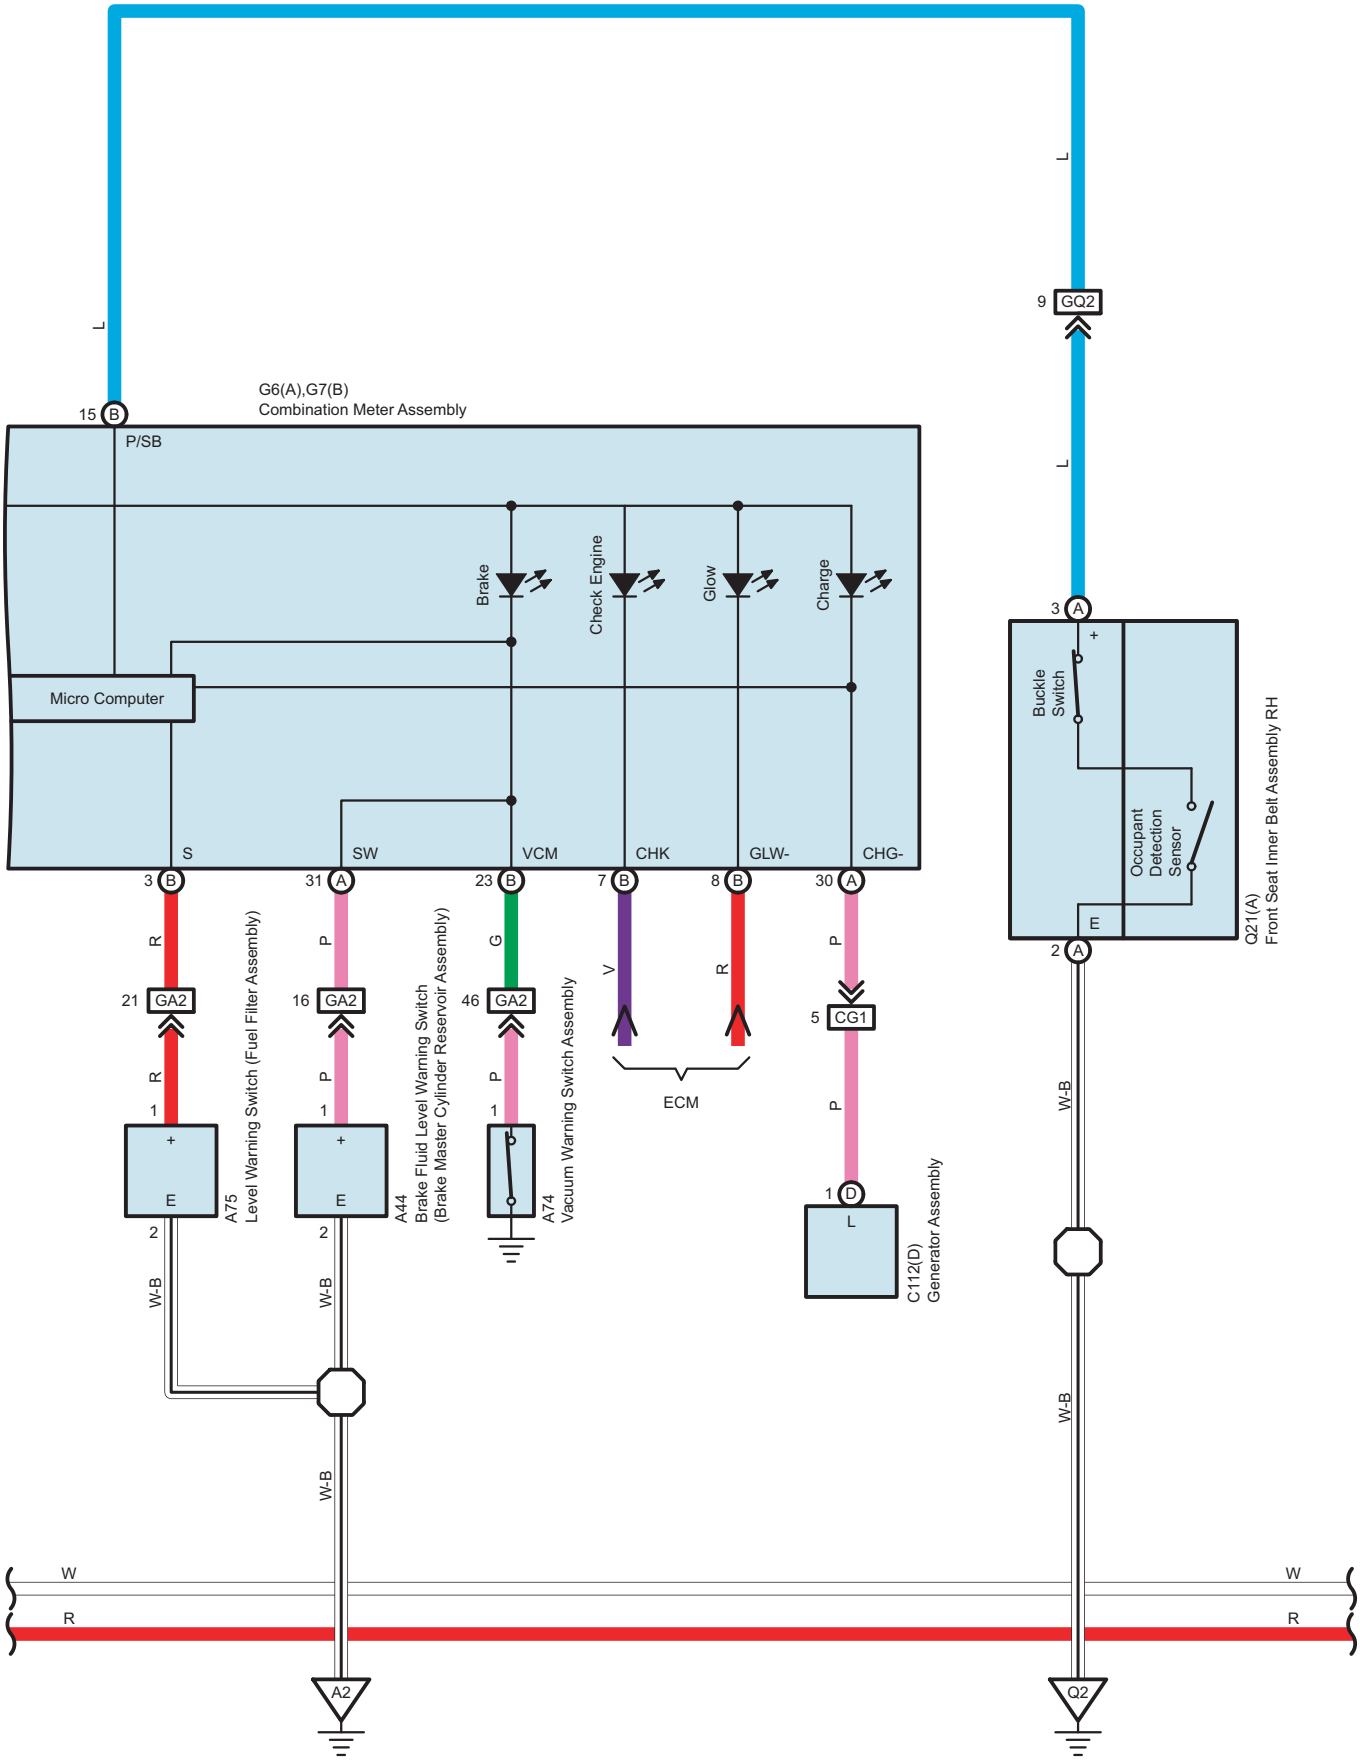
G6(A),G7(B)
Combination Meter Assembly
15 B
P/SB
Micro Computer
Brake
Check Engine
Glow
Charge
S
SW
VCM
CHK
GLW-
CHG-
3 B
31 A
23 B
7 B
8 B
30 A
R
P
G
V
R
P
21 GA2
16 GA2
46 GA2
5 CG1
1
2
A75
Level Warning Switch (Fuel Filter Assembly)
A44
Brake Fluid Level Warning Switch
(Brake Master Cylinder Reservoir Assembly)
A74
Vacuum Warning Switch Assembly
ECM
1 D
L
C112(D)
Generator Assembly
W-B
L
9 GQ2
3 A
Buckle Switch
Occupant Detection Sensor
E
2 A
Q21(A)
Front Seat Inner Belt Assembly RH
W
R
A2
Q2

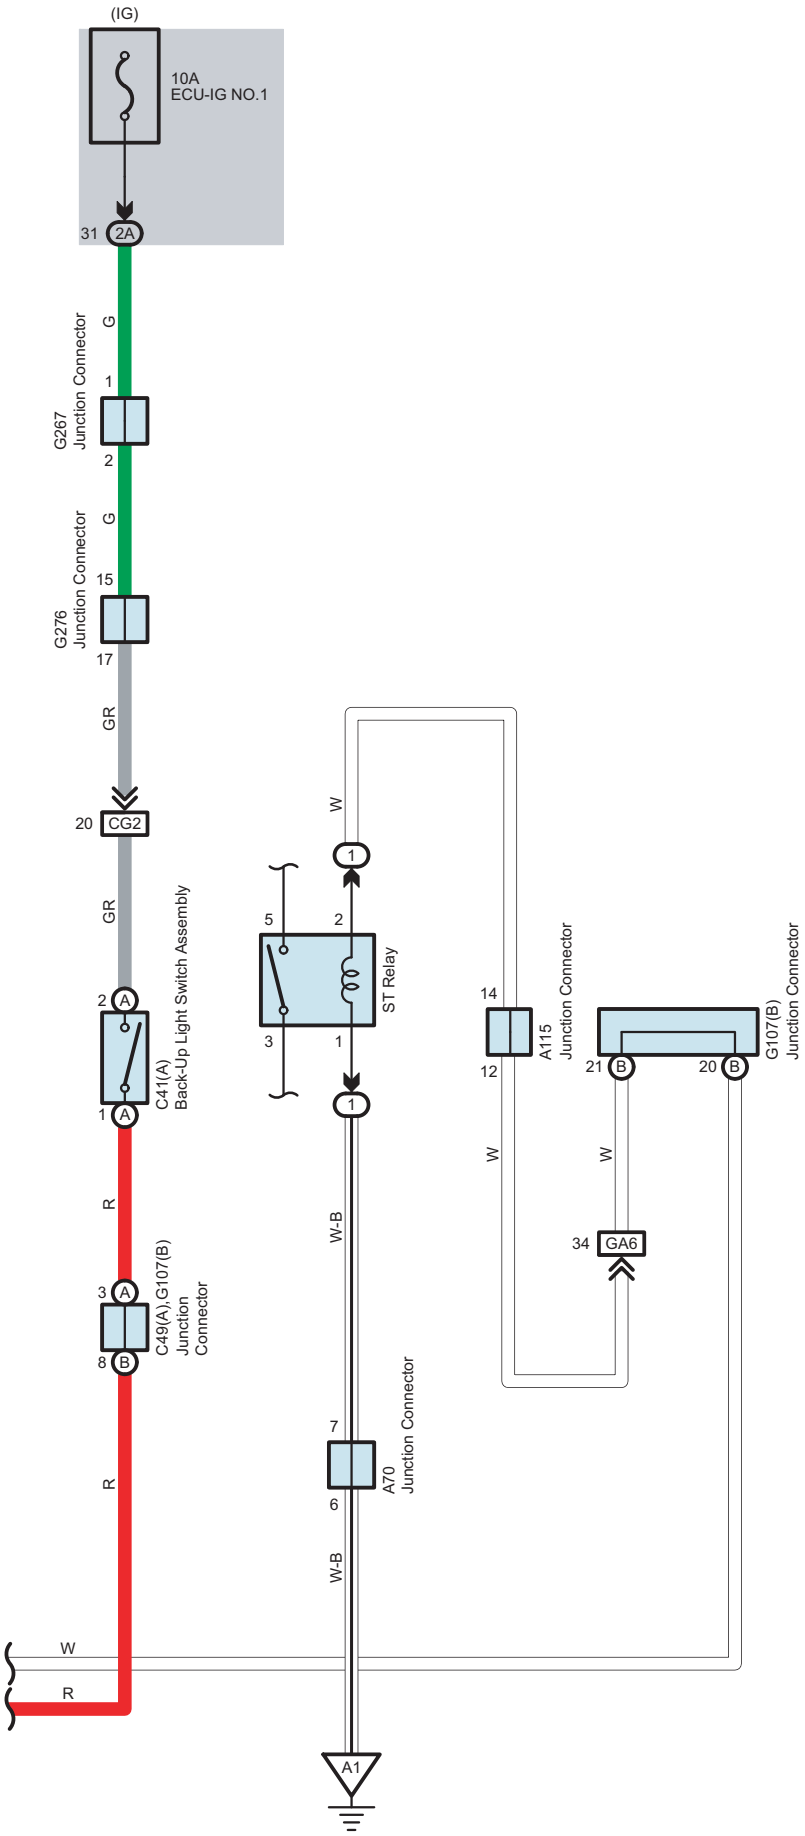
(IG)
10A
ECU-IG NO.1
31
2A
G
G267
Junction Connector
1
2
G
G276
Junction Connector
15
17
GR
20
CG2
GR
2
A
1
A
C41(A)
Back-Up Light Switch Assembly
R
3
A
8
B
C49(A),G107(B)
Junction
Connector
R
W
R
W
5
2
3
1
ST Relay
1
1
W-B
7
6
A70
Junction Connector
W-B
A1
14
12
A115
Junction Connector
W
21
B
20
B
G107(B)
Junction Connector
W
34
GA6

A6
Black

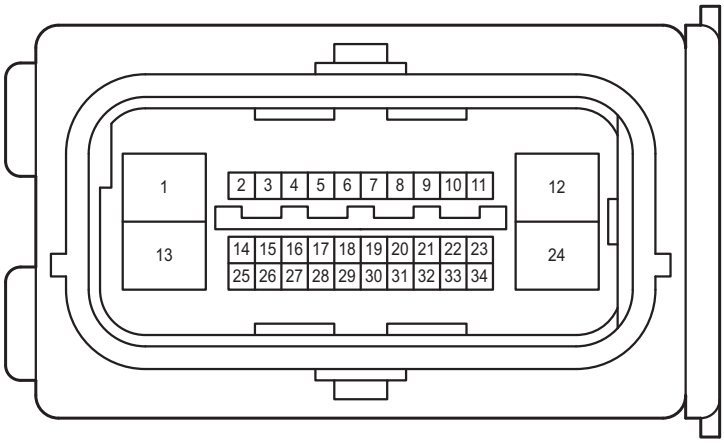

90980-12686

A44
Gray

90980-11207

A70
White

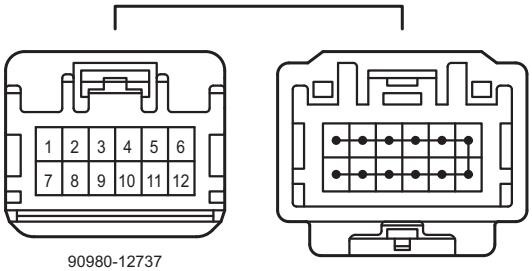

90980-12737

A74
Gray

90980-11252

A75
Gray

90980-11003

A115
Gray

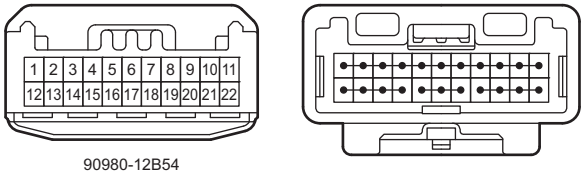

90980-12B54

A122
Black

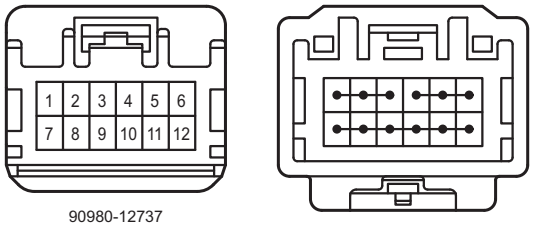

90980-12737

C41
Gray

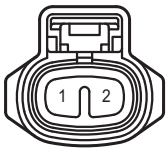

90980-11250

C49
Blue

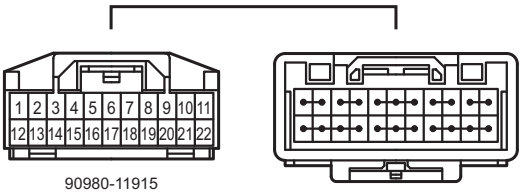

90980-11915

C100
Black

90980-10703

C112
Black

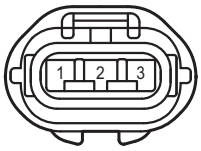

90980-11349

G6
Black

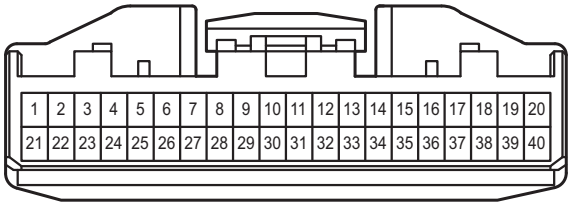

90980-12557

G7
Black

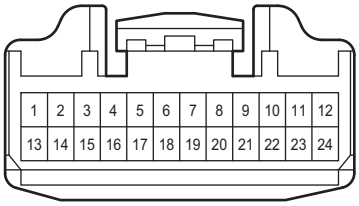

90980-12554

G16
White

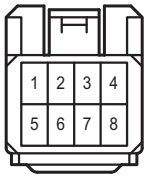

90980-12113

G107
Blue

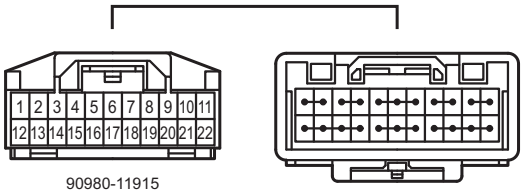

90980-11915

G182
White

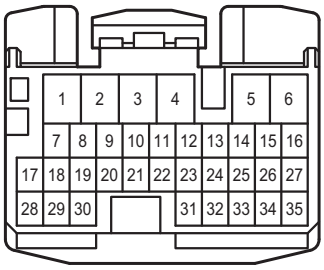

90980-12529

G234
Blue

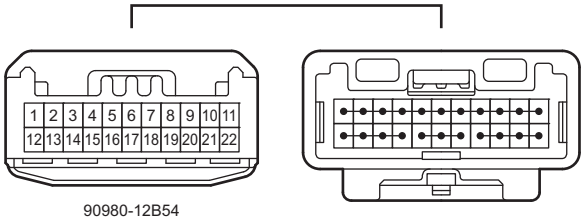

90980-12B54

G253
White

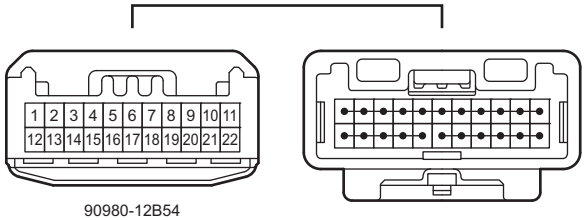

90980-12B54

G259
Blue

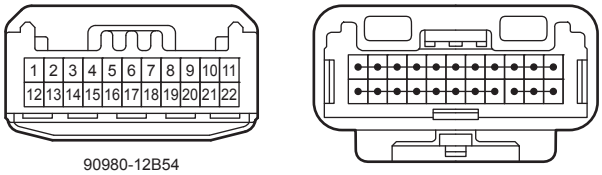

90980-12B54

G265
White

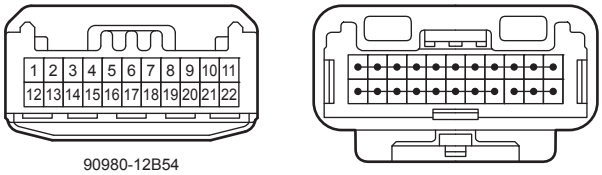

90980-12B54

G267
Blue

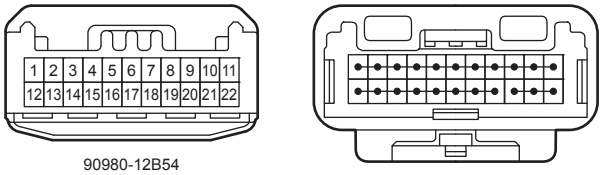

90980-12B54

G276
White

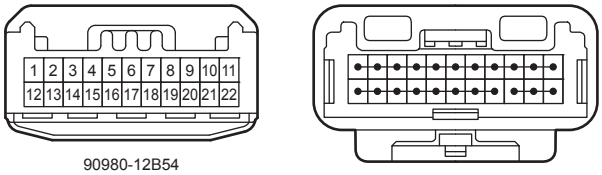

90980-12B54

G282
Gray

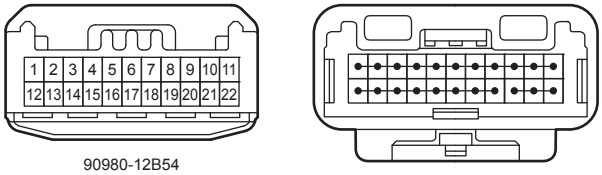

90980-12B54

G283
Blue

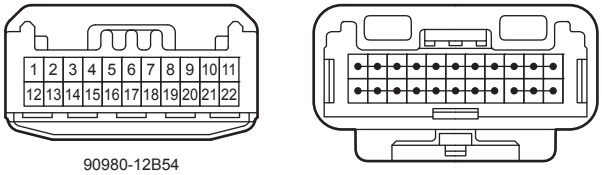

90980-12B54

H24
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

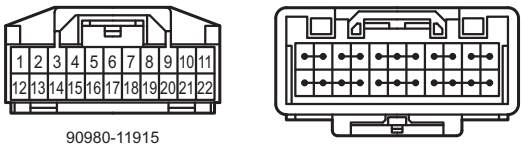

90980-11915

H25
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

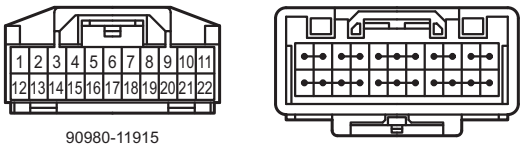

90980-11915

H47
White

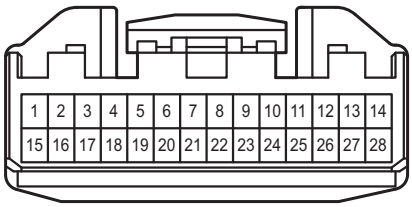

90980-12555

Q21
White

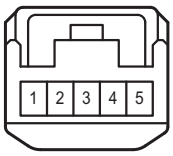

90980-12366

R28
White

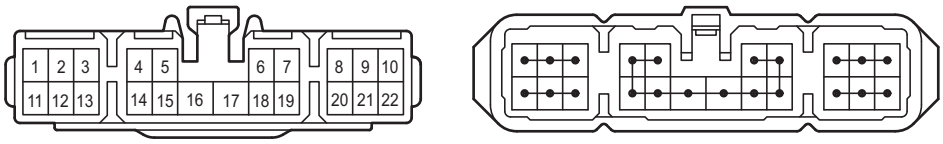

90980-10875

R30
Blue

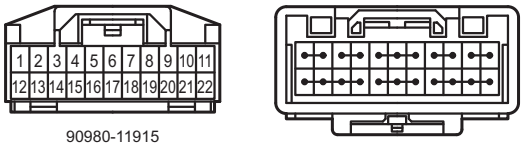

90980-11915

R31
White

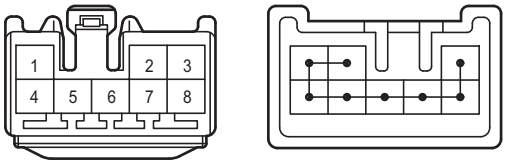

90980-11686

S5
White

90980-11077

t1
Gray

90980-11598

2A
White

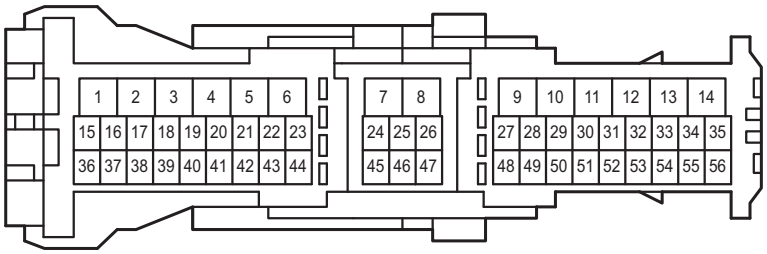

90980-12822

CG1
White

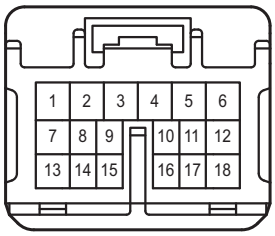

90980-12745

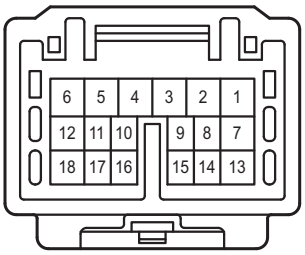

90980-12744

CG2
White

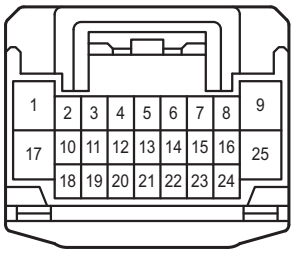

90980-12414

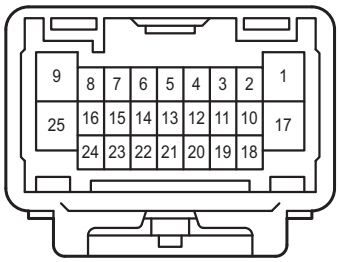

90980-12413

GA1
White

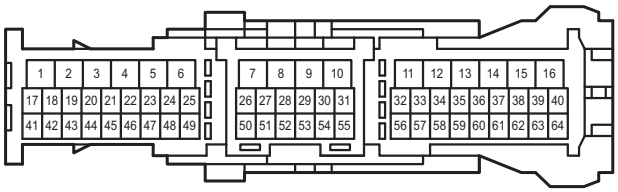

90980-12774

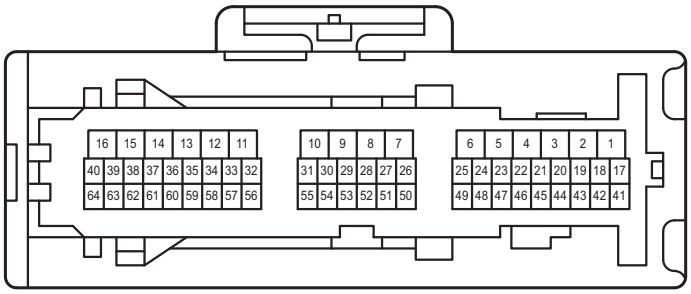

90980-12798

GA2
White

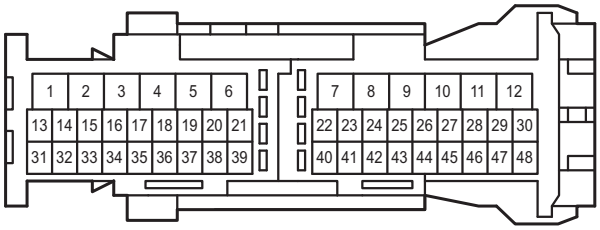

90980-12779

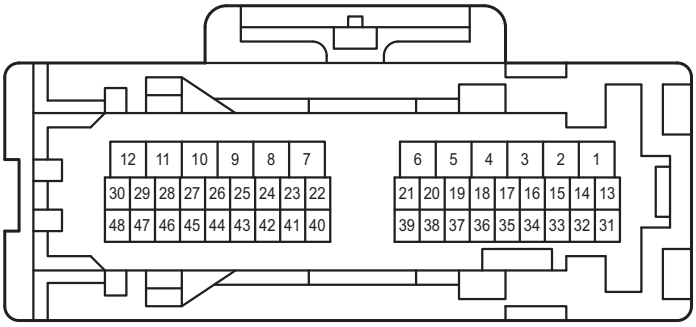

90980-12799

GA6
White

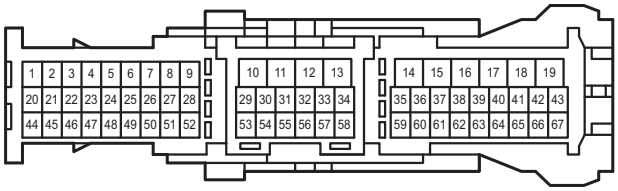

90980-12783

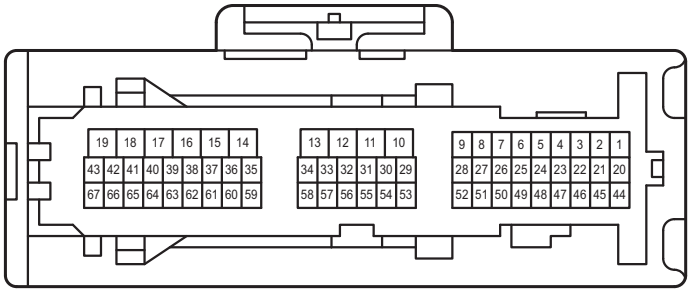

90980-12800

GH1
White

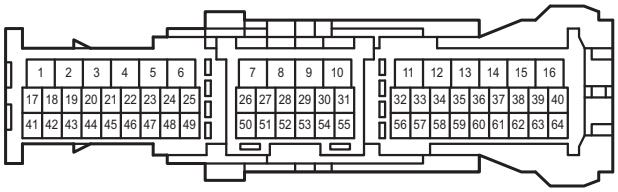

90980-12774

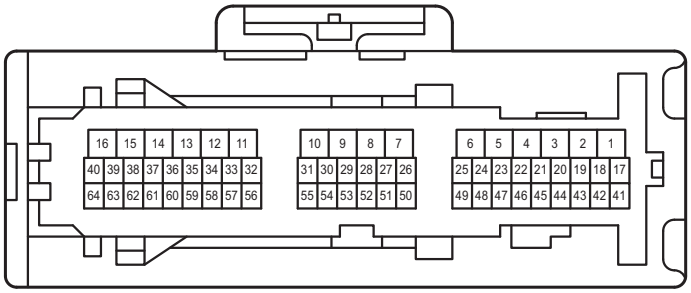

90980-12798

GQ2
White

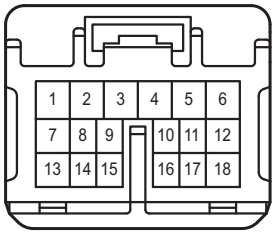

90980-12745

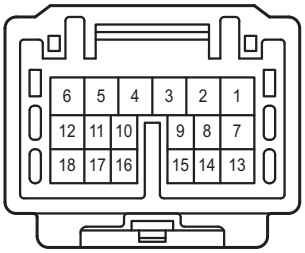

90980-12744

GR1
White

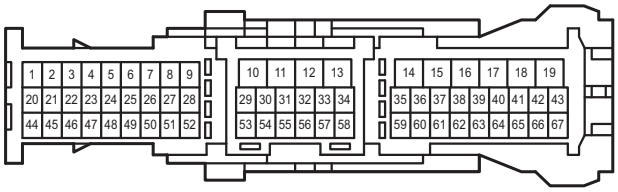

90980-12783

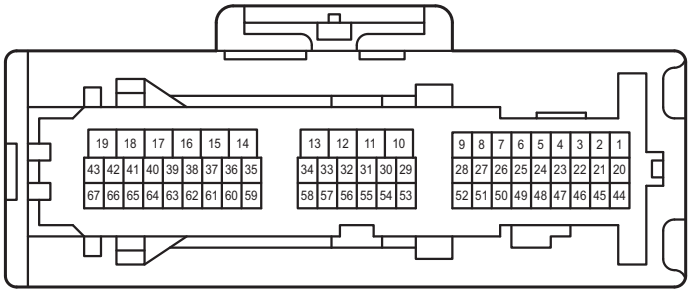

90980-12800

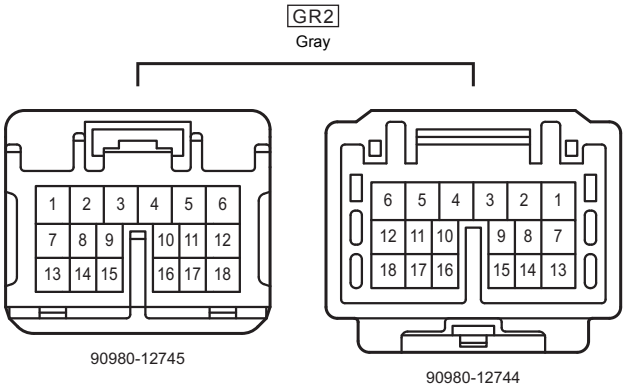
GR2
Gray
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13
90980-12745
90980-12744

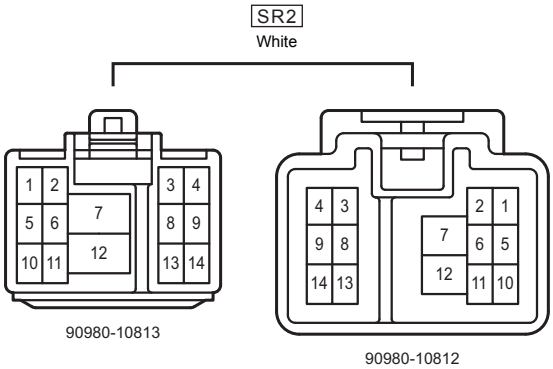
SR2
White
1 2 3 4
5 6 7 8 9
10 11 12 13 14
4 3 2 1
9 8 7 6 5
14 13 12 11 10
90980-10813
90980-10812

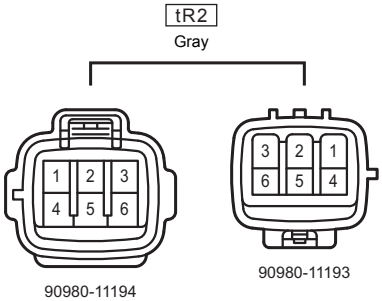
tR2
Gray
1 2 3
4 5 6
3 2 1
6 5 4
90980-11194
90980-11193