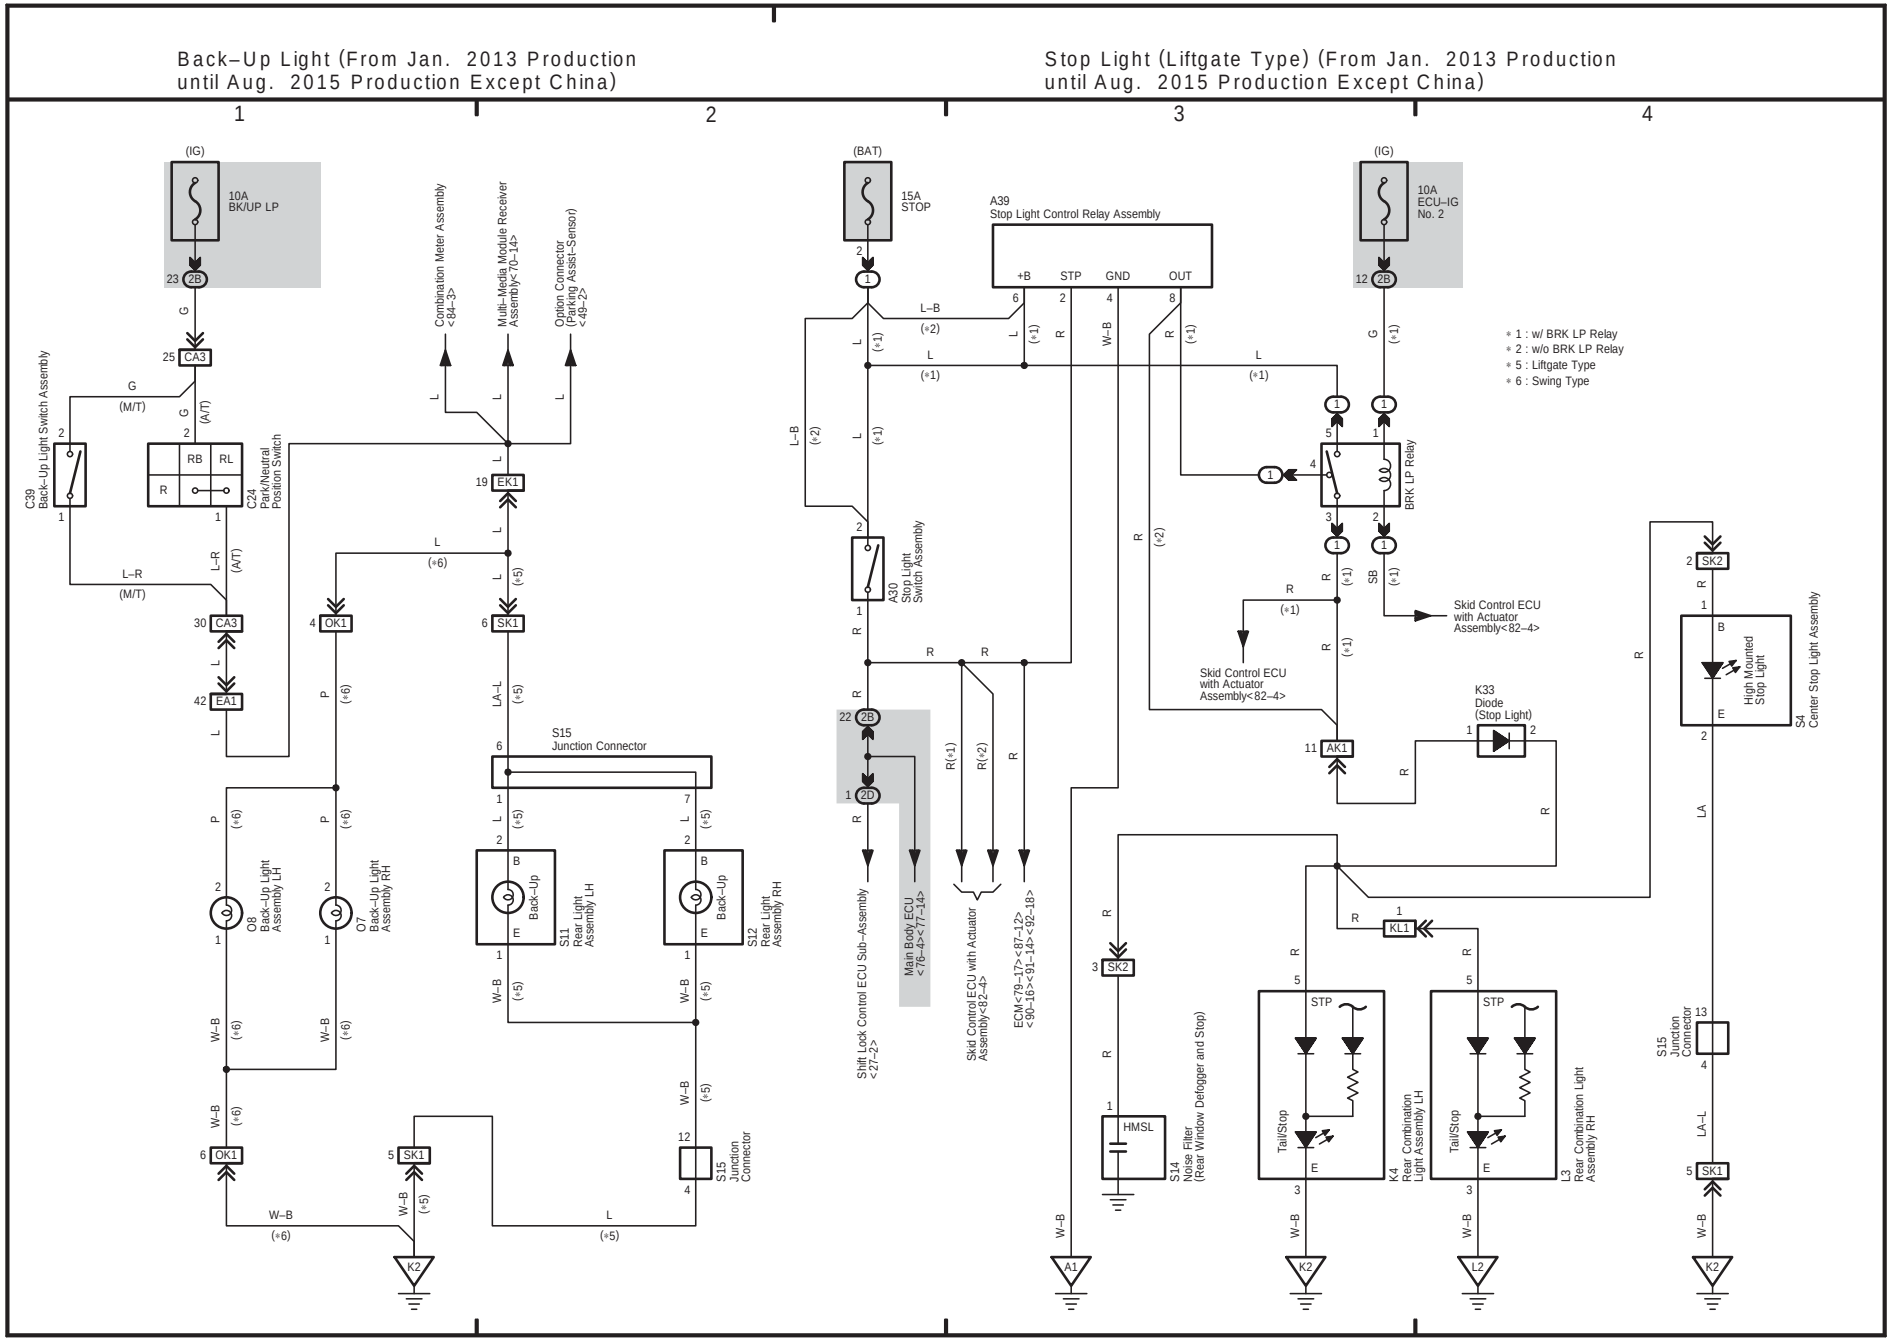
Back–Up Light (From Jan. 2013 Production until Aug. 2015 Production Except China)
Stop Light (Liftgate Type) (From Jan. 2013 Production until Aug. 2015 Production Except China)
1
2
3
4
(IG)
10A BK/UP LP
23 2B
25 CA3
C39 Back–Up Light Switch Assembly
C24 Park/Neutral Position Switch
RB
RL
R
G (M/T)
G (A/T)
L–R (M/T)
L–R (A/T)
30 CA3
42 EA1
Combination Meter Assembly <84–3>
Multi–Media Module Receiver Assembly<70–14>
Option Connector (Parking Assist–Sensor) <49–2>
19 EK1
4 OK1
6 SK1
LA–L
S15 Junction Connector
O8 Back–Up Light Assembly LH
O7 Back–Up Light Assembly RH
S11 Rear Light Assembly LH
S12 Rear Light Assembly RH
Back–Up
6 OK1
5 SK1
K2
12 S15 Junction Connector
(BAT)
15A STOP
A39 Stop Light Control Relay Assembly
+B
STP
GND
OUT
L–B (*2)
L (*1)
W–B
R (*1)
R (*2)
A30 Stop Light Switch Assembly
22 2B
1 2D
Shift Lock Control ECU Sub–Assembly <27–2>
Main Body ECU <76–4><77–14>
Skid Control ECU with Actuator Assembly<82–4>
ECM<79–17><87–12> <90–16><91–14><92–18>
10A ECU–IG No. 2
12 2B
BRK LP Relay
SB
Skid Control ECU with Actuator Assembly<82–4>
K33 Diode (Stop Light)
11 AK1
KL1
3 SK2
HMSL
S14 Noise Filter (Rear Window Defogger and Stop)
A1
STP
Tail/Stop
K4 Rear Combination Light Assembly LH
L3 Rear Combination Light Assembly RH
L2
High Mounted Stop Light
S4 Center Stop Light Assembly
S15 Junction Connector
LA
LA–L
* 1 : w/ BRK LP Relay
* 2 : w/o BRK LP Relay
* 5 : Liftgate Type
* 6 : Swing Type