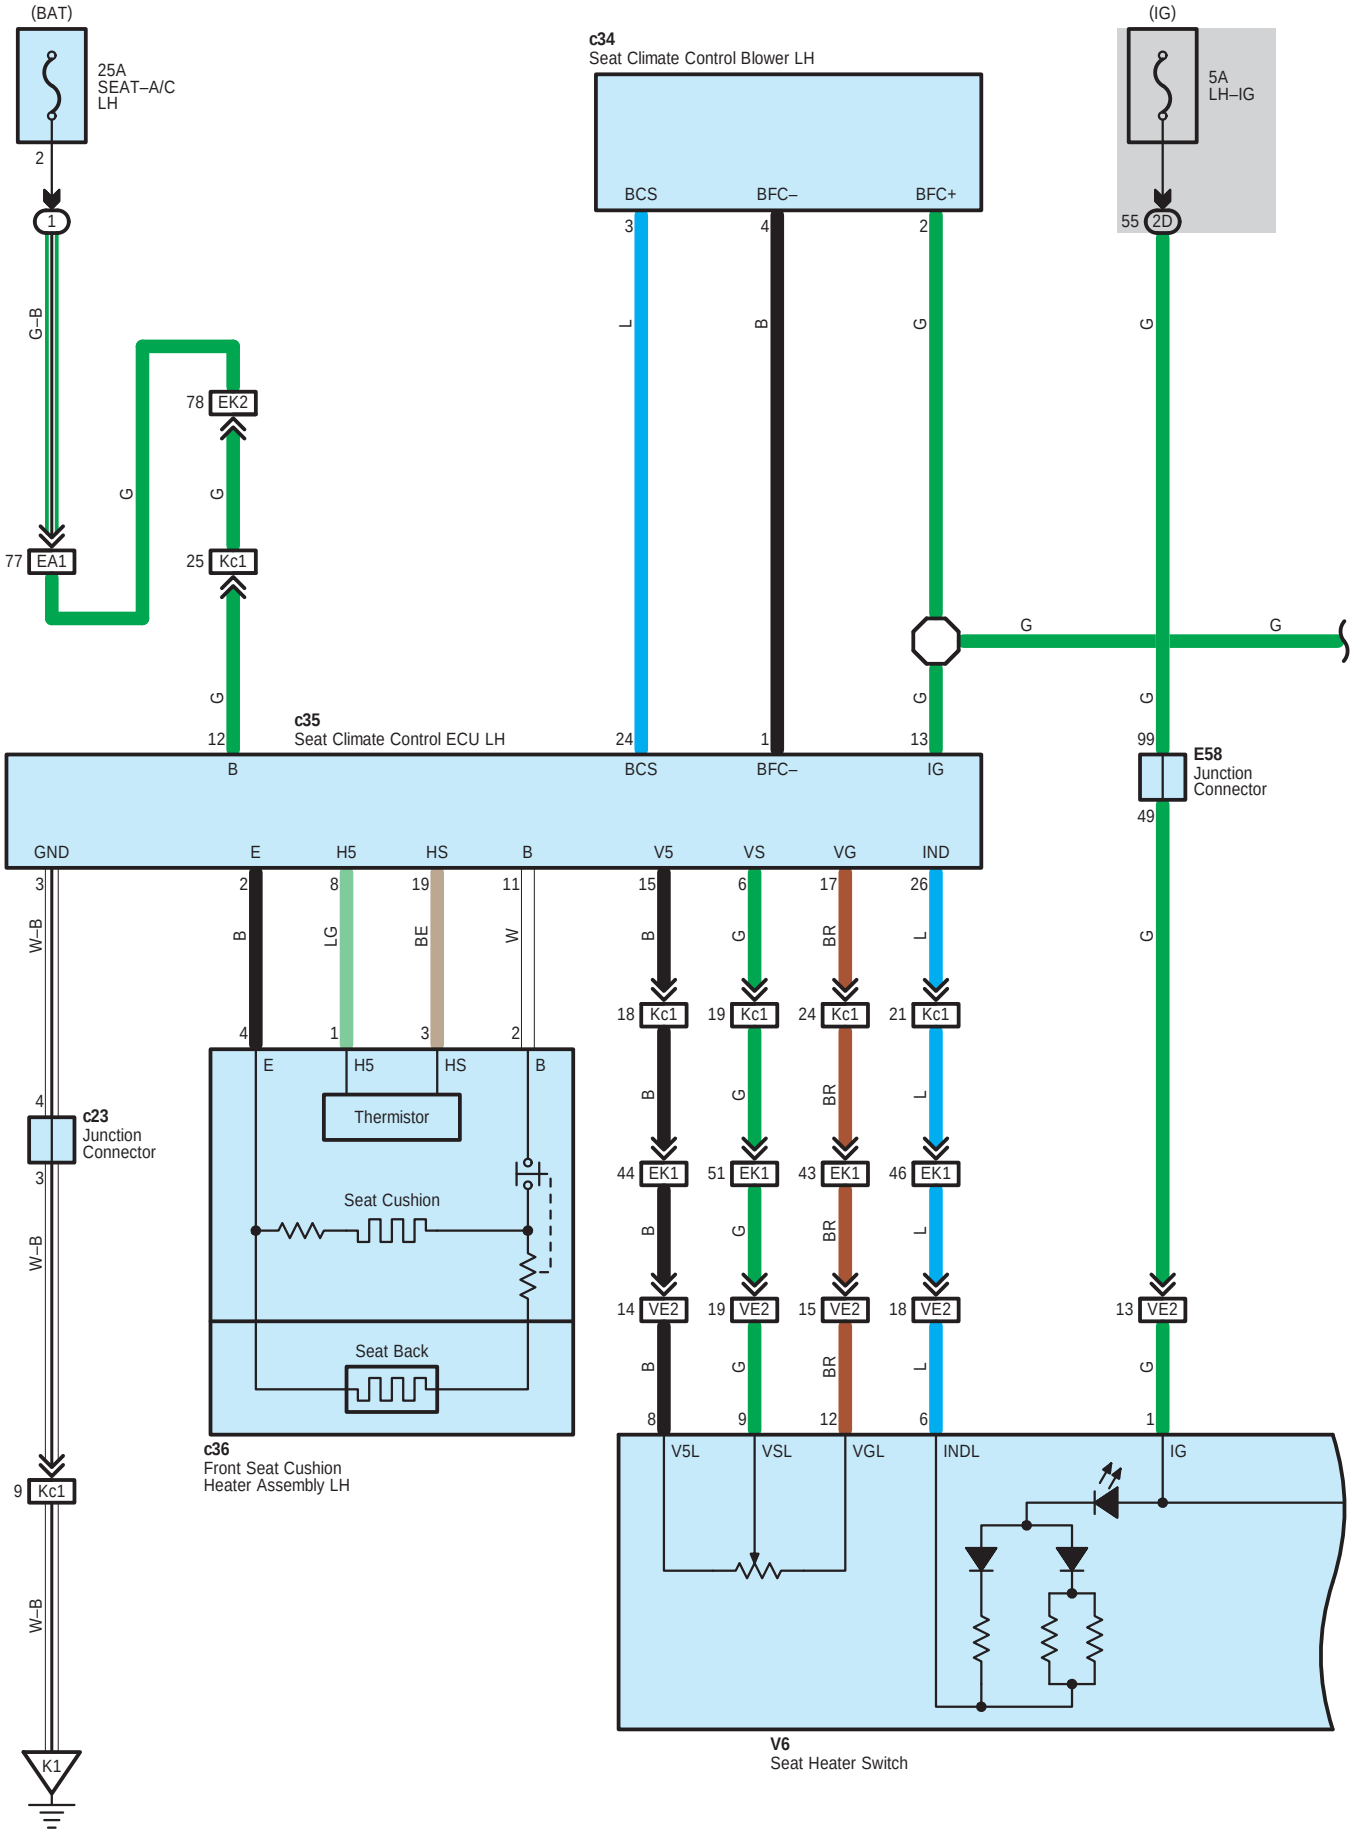
(BAT)
25A
SEAT–A/C
LH
2
1
G–B
78 EK2
G
G
77 EA1
25 Kc1
G
12
B
c34
Seat Climate Control Blower LH
BCS
BFC–
BFC+
3
4
2
L
B
G
(IG)
5A
LH–IG
55 2D
G
G
G
G
G
c35
Seat Climate Control ECU LH
24
BCS
1
BFC–
13
IG
99
E58
Junction
Connector
49
GND
E
H5
HS
B
V5
VS
VG
IND
3
2
8
19
11
15
6
17
26
W–B
B
LG
BE
W
B
G
BR
L
G
18 Kc1
19 Kc1
24 Kc1
21 Kc1
4
1
3
2
E
H5
HS
B
Thermistor
Seat Cushion
Seat Back
c23
Junction
Connector
4
3
W–B
B
G
BR
L
44 EK1
51 EK1
43 EK1
46 EK1
B
G
BR
L
14 VE2
19 VE2
15 VE2
18 VE2
13 VE2
B
G
BR
L
G
8
9
12
6
1
V5L
VSL
VGL
INDL
IG
9 Kc1
W–B
K1
c36
Front Seat Cushion
Heater Assembly LH
V6
Seat Heater Switch

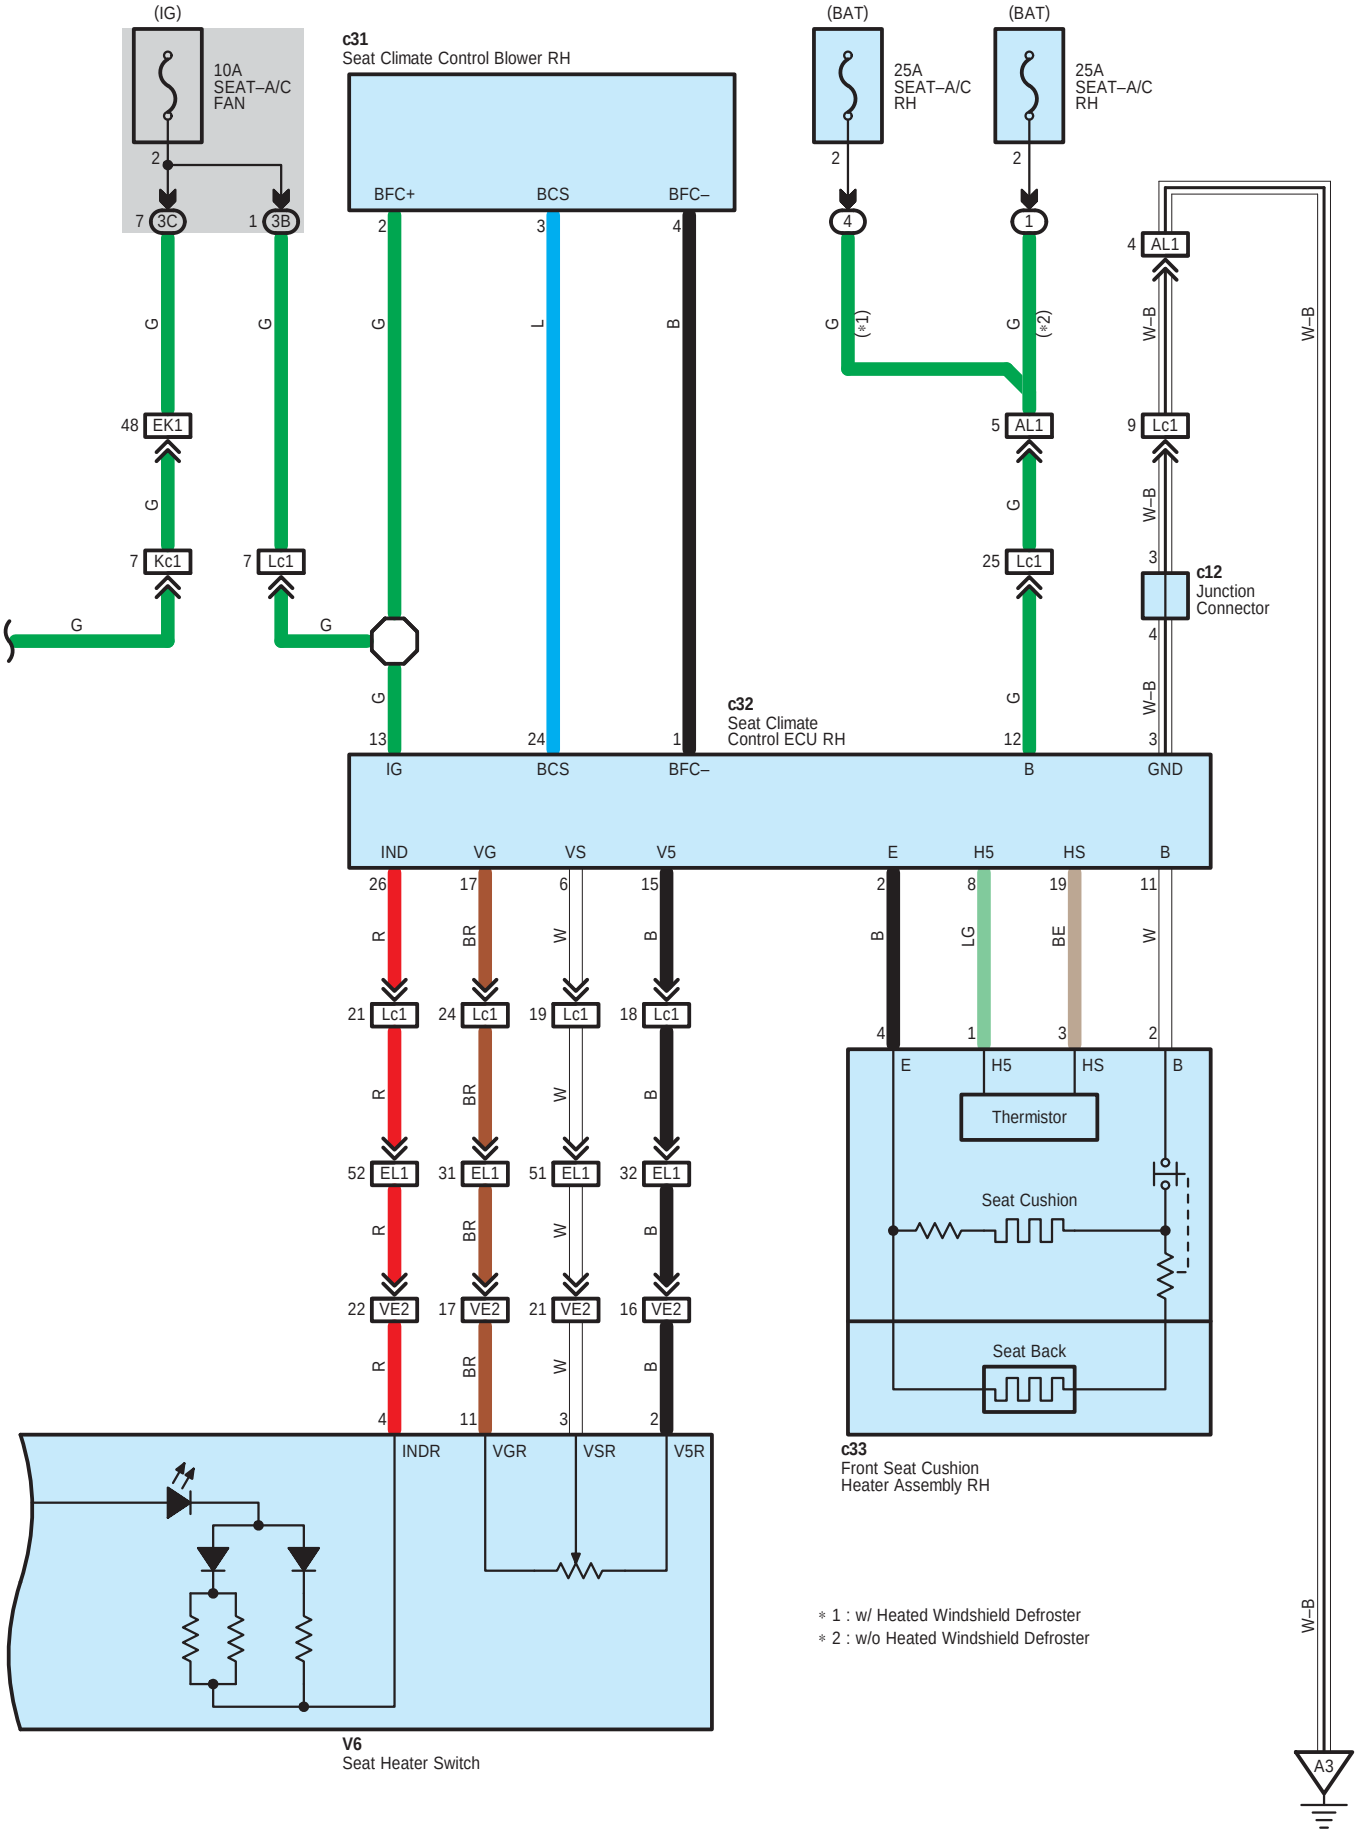
(IG)
10A
SEAT–A/C
FAN
c31
Seat Climate Control Blower RH
BFC+
BCS
BFC–
(BAT)
25A
SEAT–A/C
RH
(BAT)
25A
SEAT–A/C
RH
3C
3B
EK1
Kc1
Lc1
AL1
Lc1
AL1
Lc1
c12
Junction
Connector
c32
Seat Climate
Control ECU RH
IG
BCS
BFC–
B
GND
IND
VG
VS
V5
E
H5
HS
B
Lc1
EL1
VE2
Thermistor
Seat Cushion
Seat Back
c33
Front Seat Cushion
Heater Assembly RH
INDR
VGR
VSR
V5R
V6
Seat Heater Switch
A3
* 1 : w/ Heated Windshield Defroster
* 2 : w/o Heated Windshield Defroster

E 58

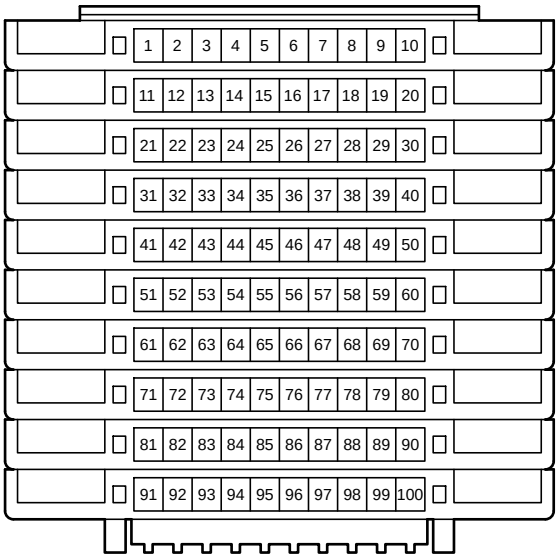

V 6

White

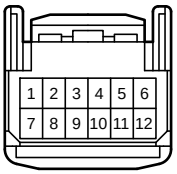

c 12

White



c 23

White



c 31

White

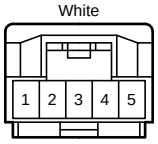

c 32

White

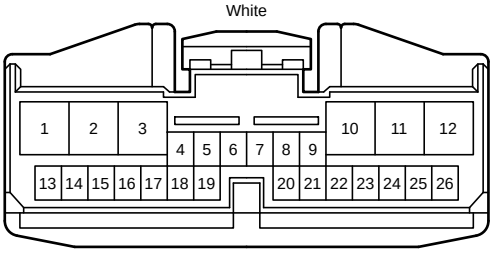

c 33

White



c 34

White

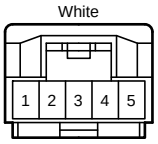

c 35

White

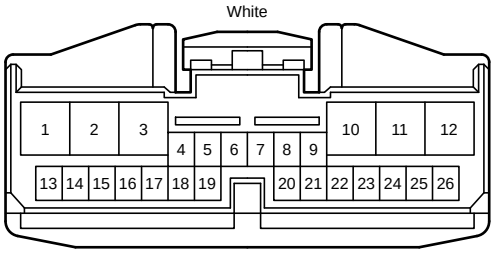

c 36

White



2D

White

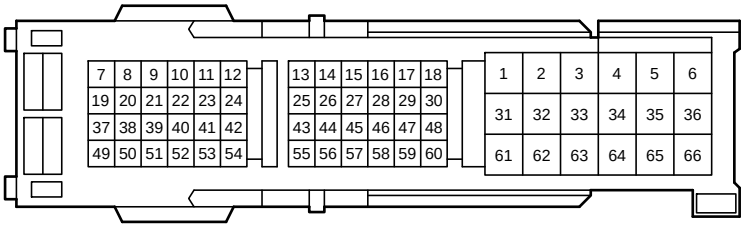

3B

Gray



Climate Control Seat <Driver's Seat and Front Passenger's Seat, Before Aug. 2015 Production>

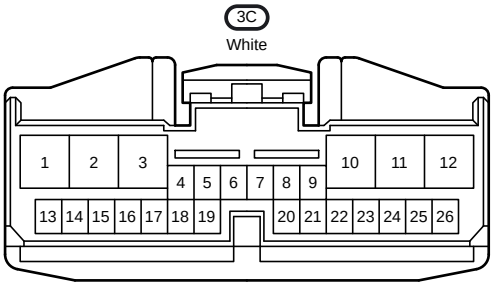

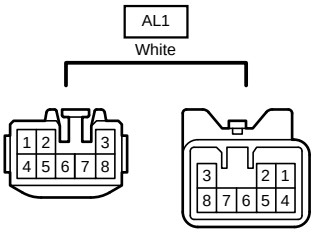

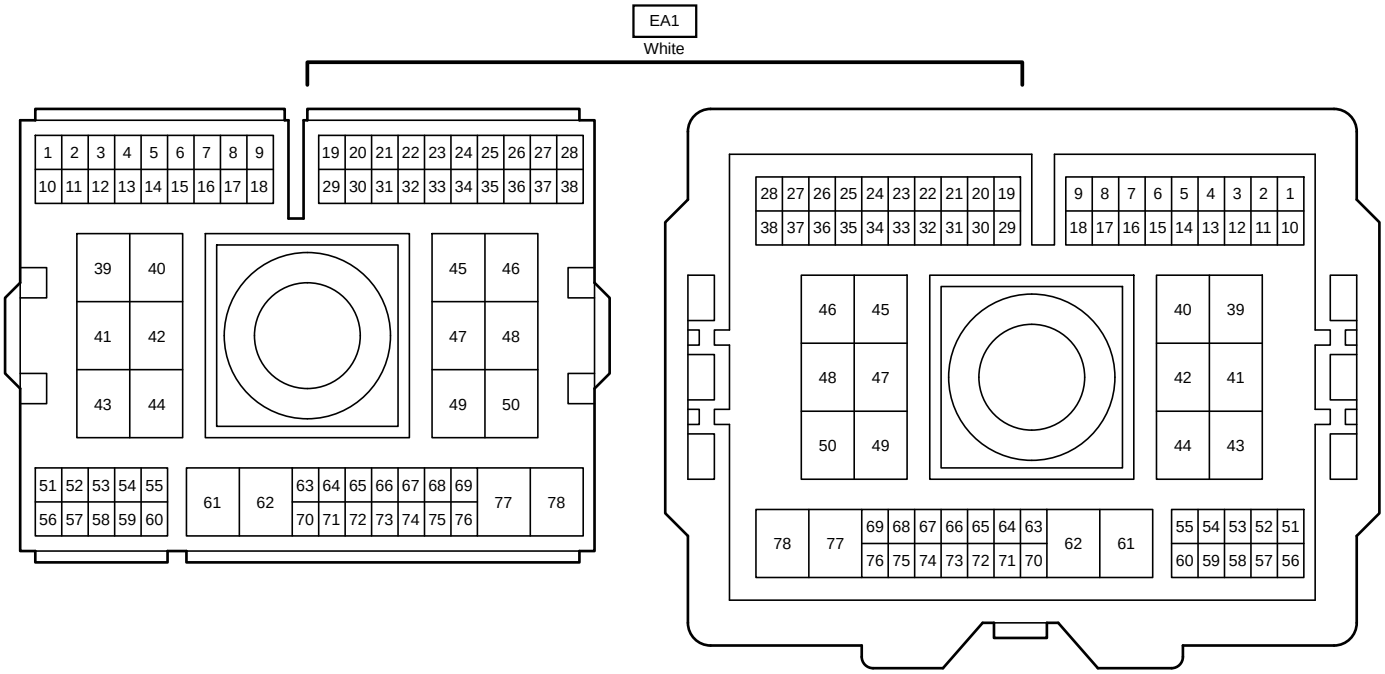

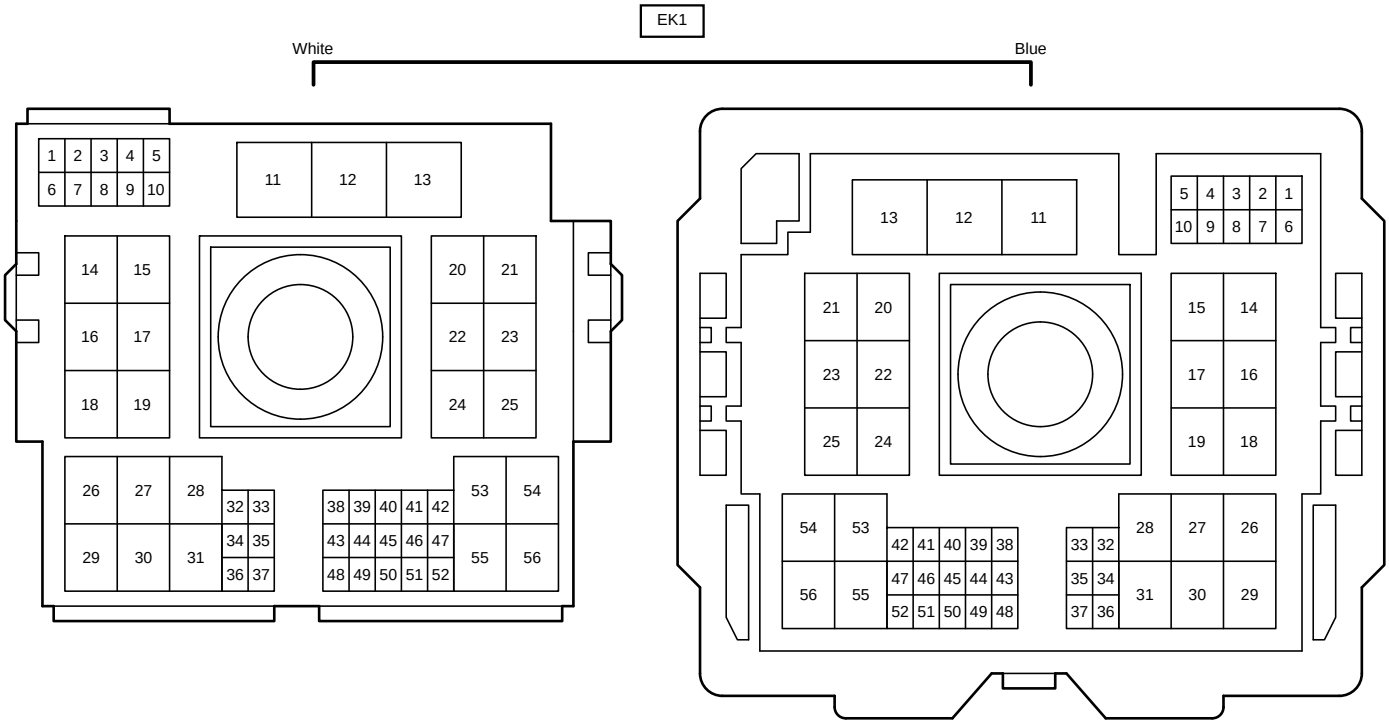

Climate Control Seat <Driver's Seat and Front Passenger's Seat, Before Aug. 2015 Production>

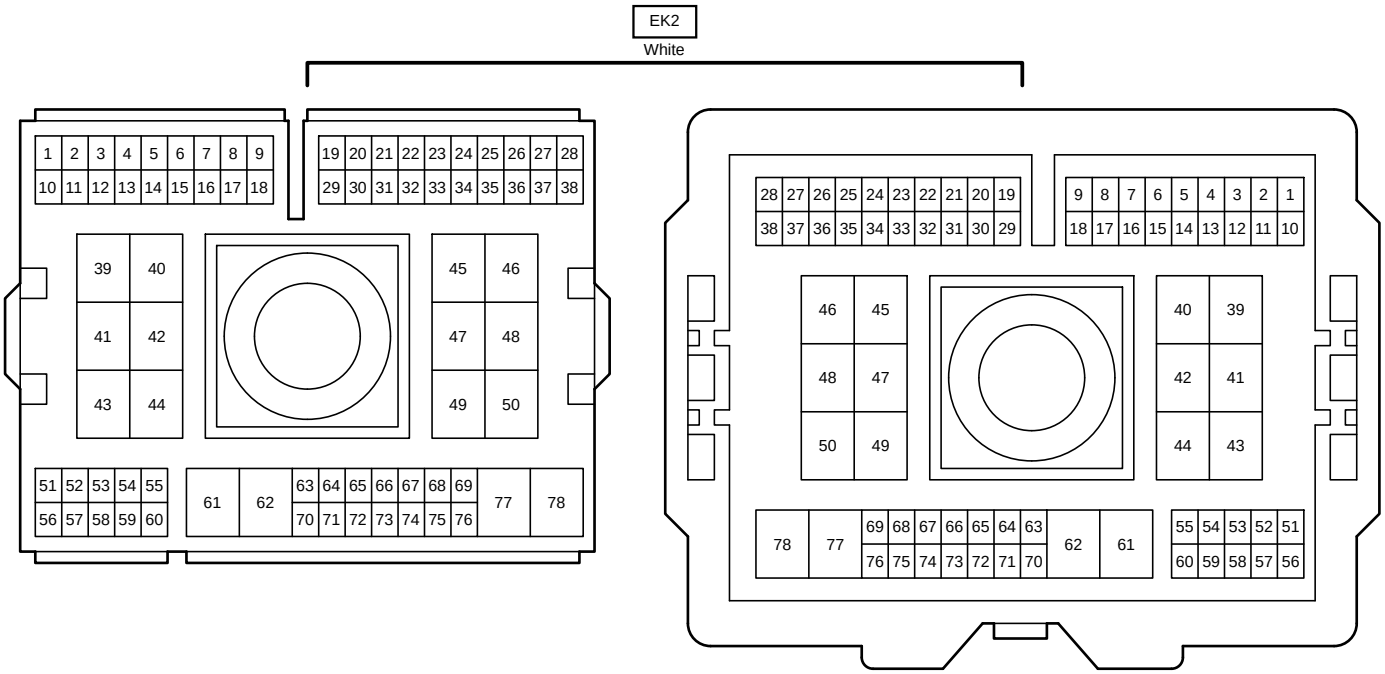

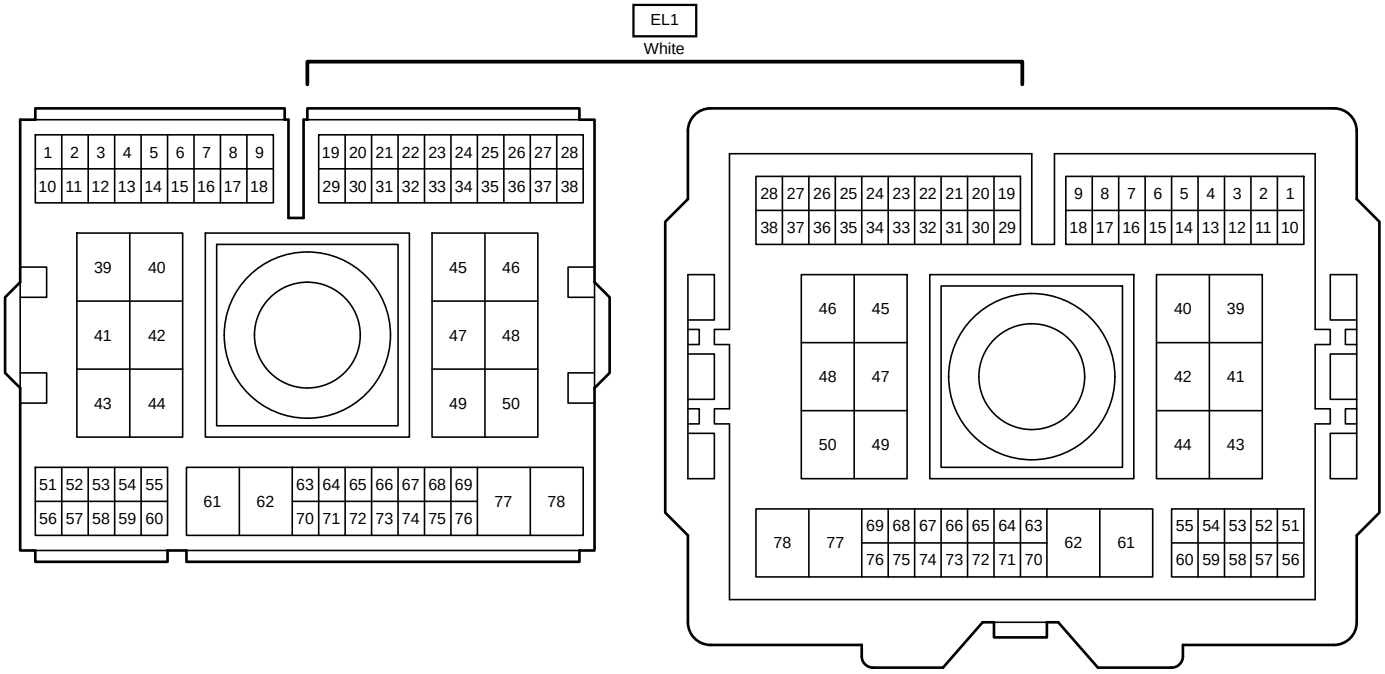

Kc1
White

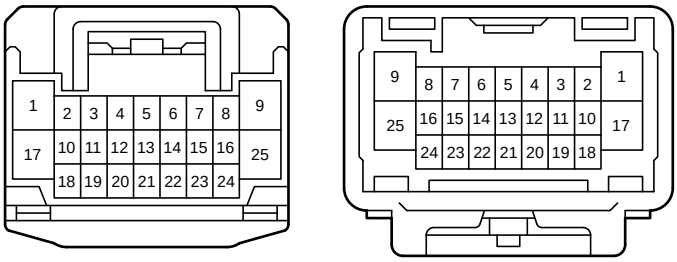

Lc1
White

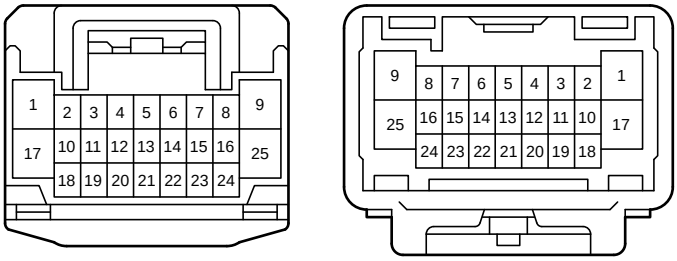
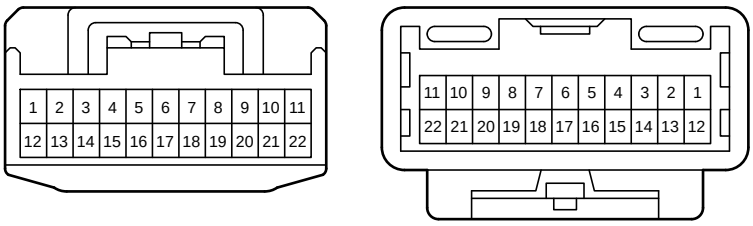
VE2
White