Power Outlet <Before Aug. 2015 Production>

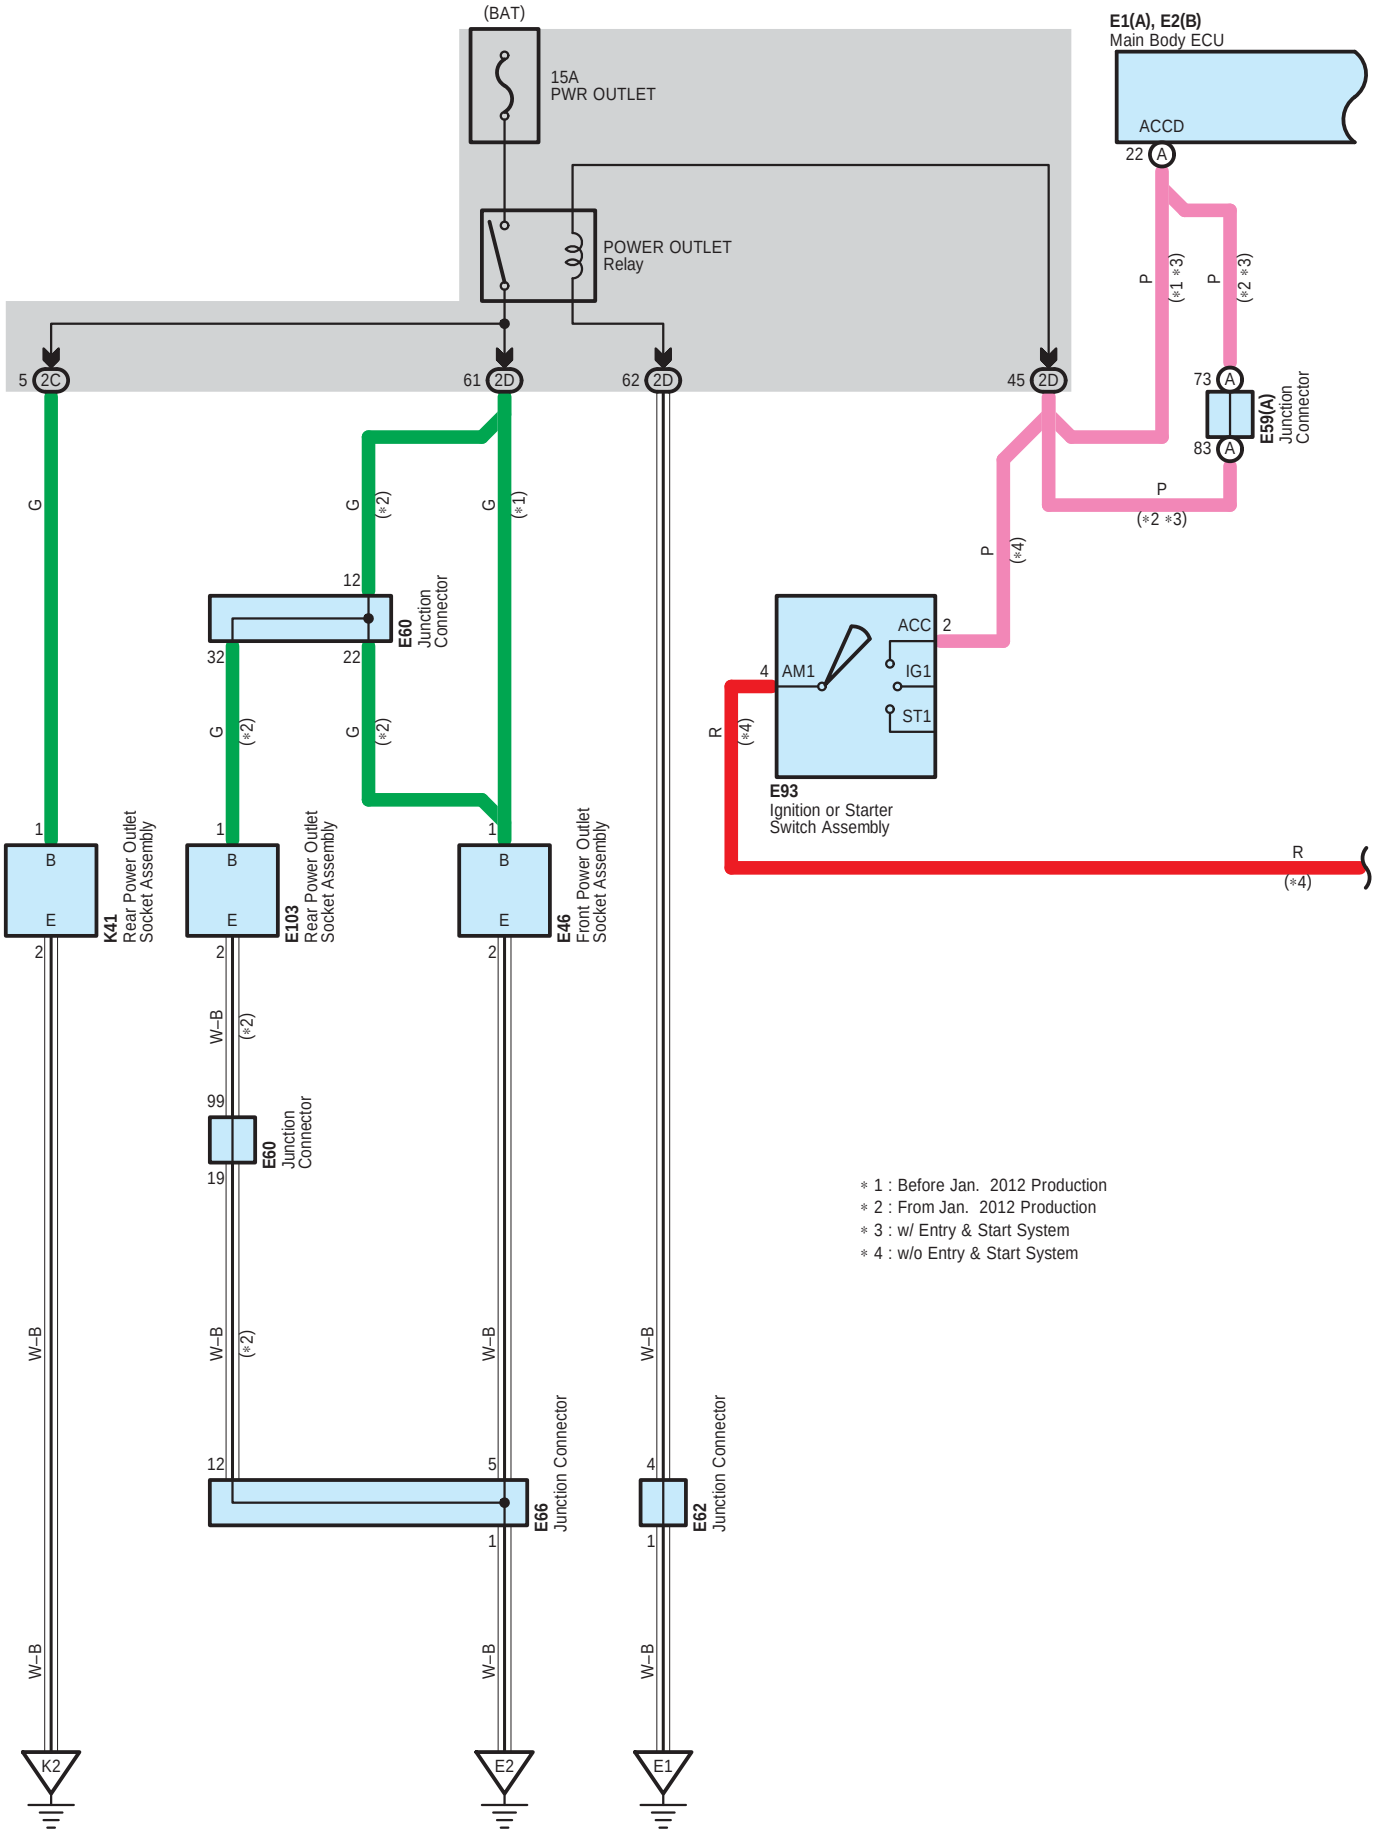

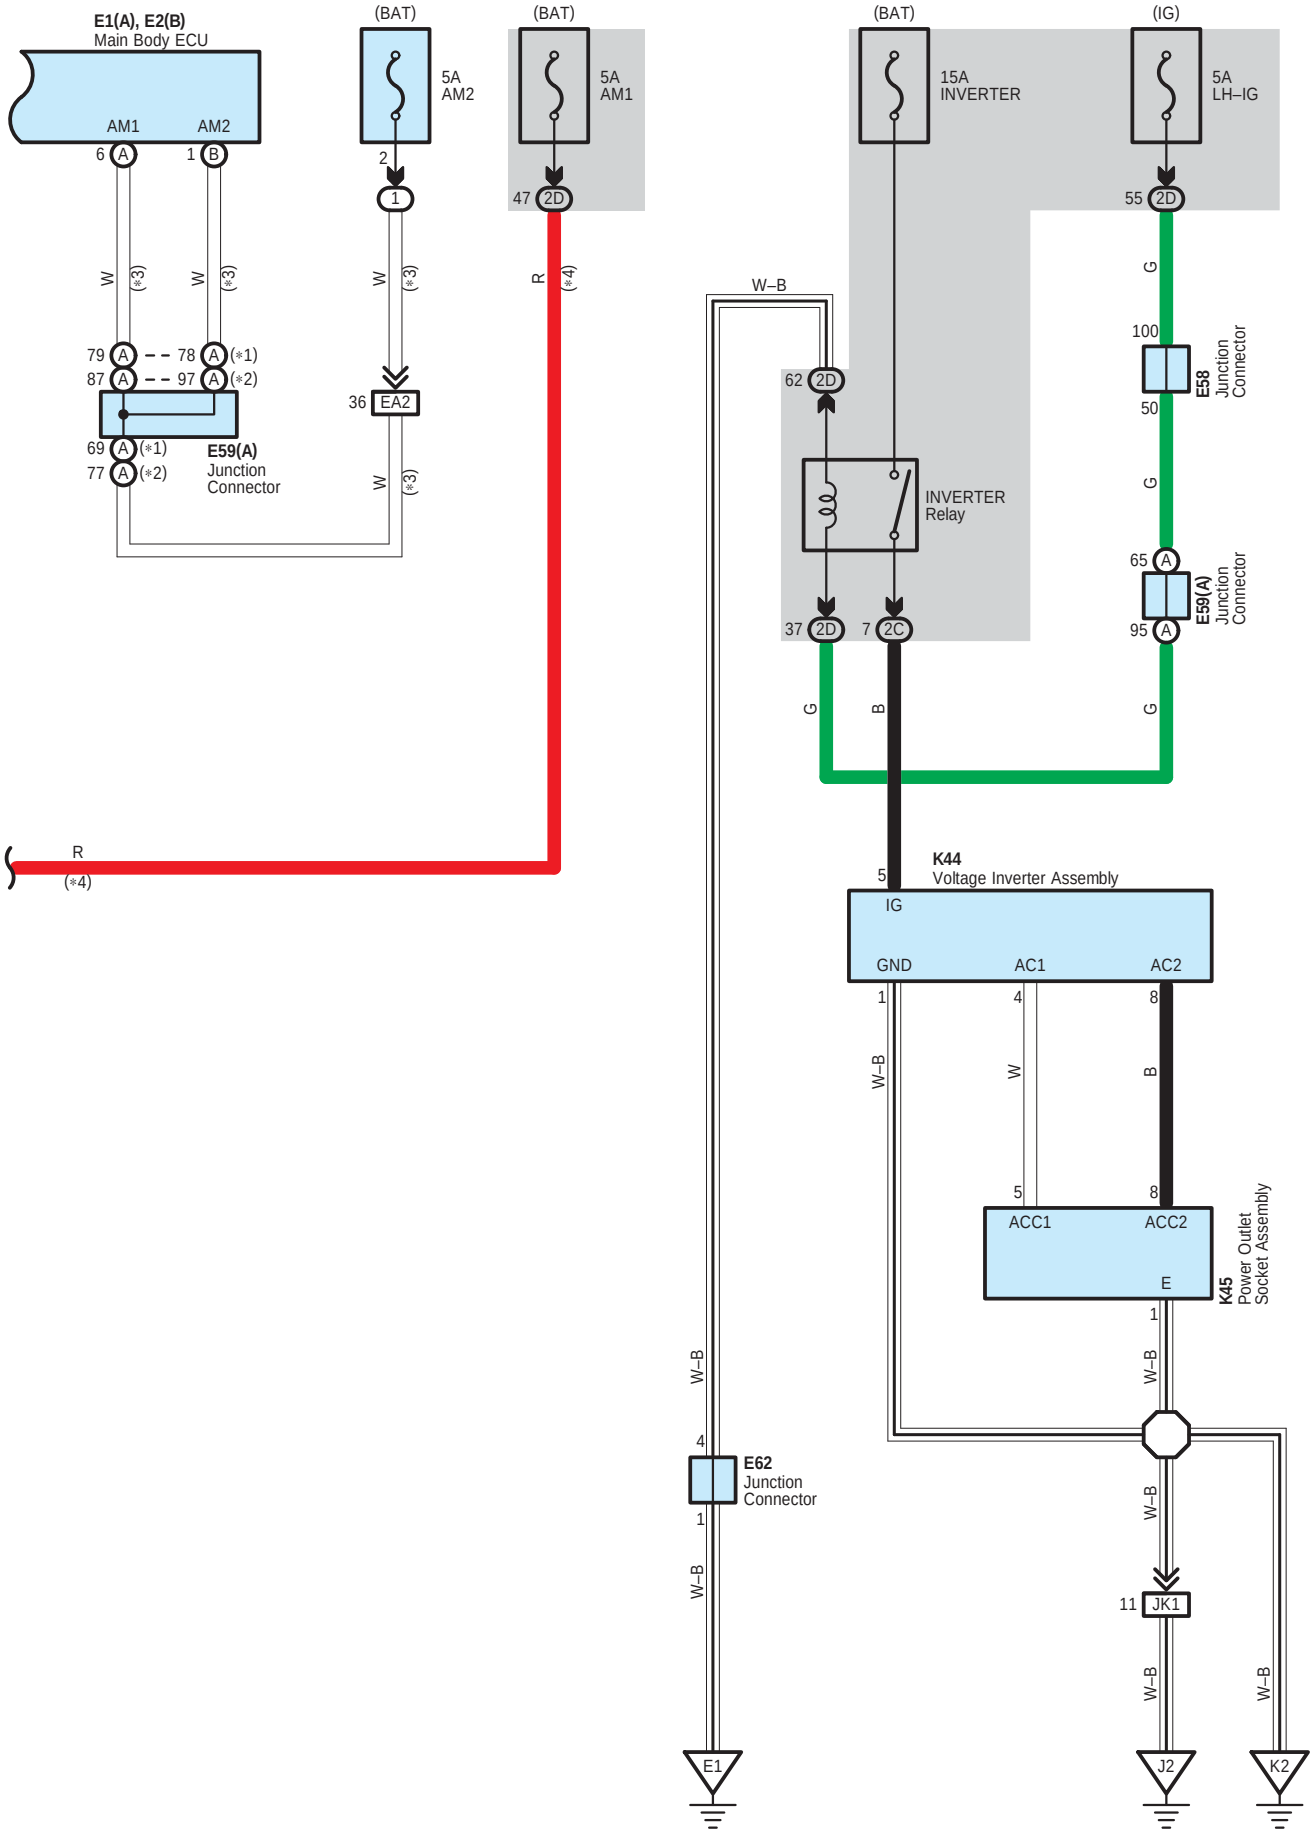
E1(A), E2(B)
Main Body ECU
AM1
AM2
6 A
1 B
(BAT)
5A
AM2
2
1
(BAT)
5A
AM1
47 2D
W
(*3)
R
(*4)
79 A
78 A (*1)
87 A
97 A (*2)
69 A (*1)
77 A (*2)
E59(A)
Junction
Connector
36 EA2
R
(*4)
(BAT)
15A
INVERTER
(IG)
5A
LH–IG
55 2D
G
100
E58
Junction
Connector
50
W–B
62 2D
INVERTER
Relay
65 A
E59(A)
Junction
Connector
95 A
37 2D
7 2C
G
B
G
K44
Voltage Inverter Assembly
5
IG
GND
AC1
AC2
1
4
8
W–B
W
B
5
8
ACC1
ACC2
E
K45
Power Outlet
Socket Assembly
1
W–B
W–B
4
E62
Junction
Connector
1
W–B
W–B
11 JK1
W–B
W–B
E1
J2
K2

E 1

White

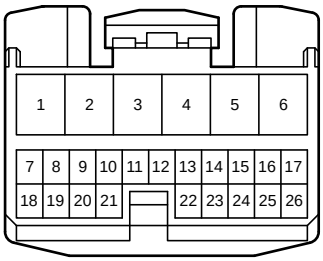

E 2

White

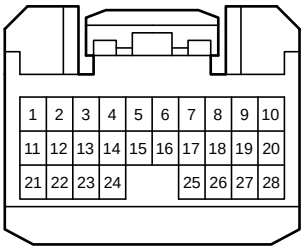

E 46

White



E 58

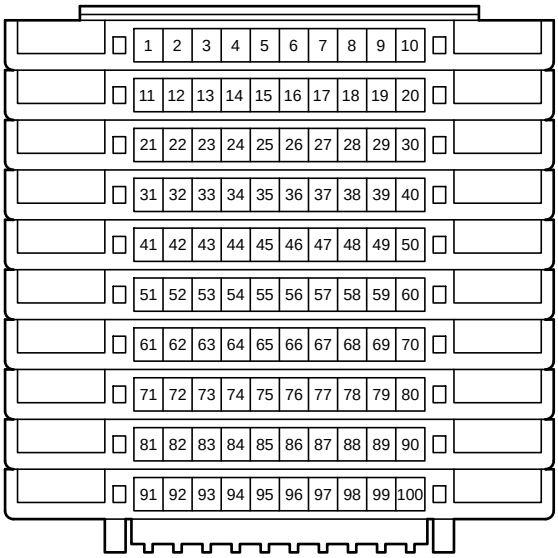

E 59

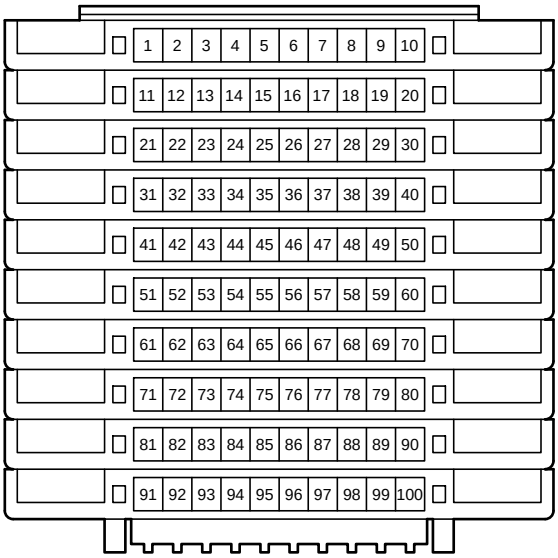

E 60

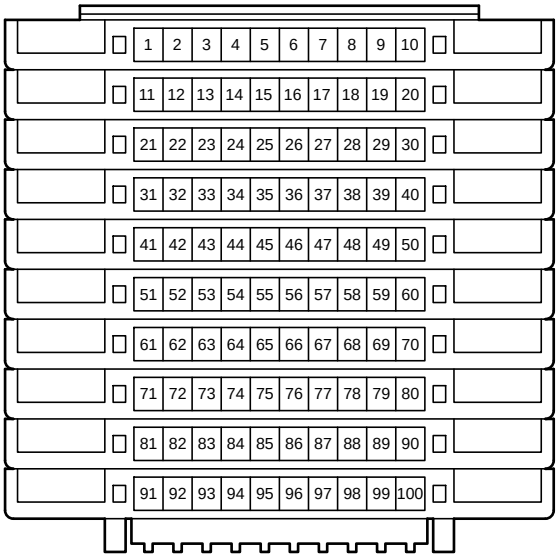

E 62

White

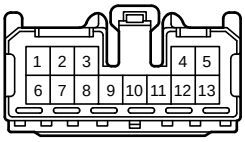

E 66

White

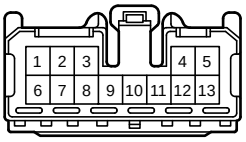

E 93
White

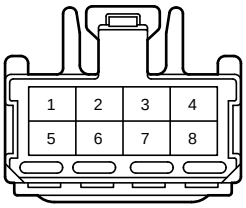

E103
White

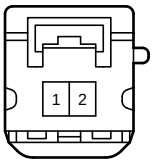

K 41
White



K 44
White

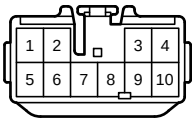

K 45
Black

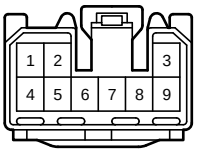

2C
White

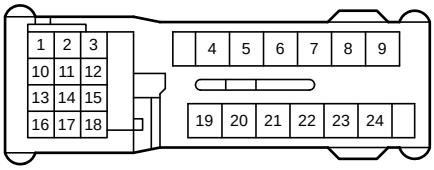

2D
White

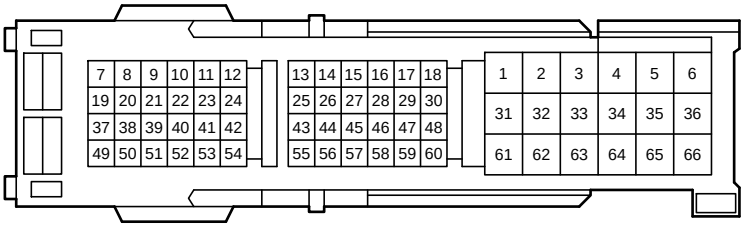

EA2

White

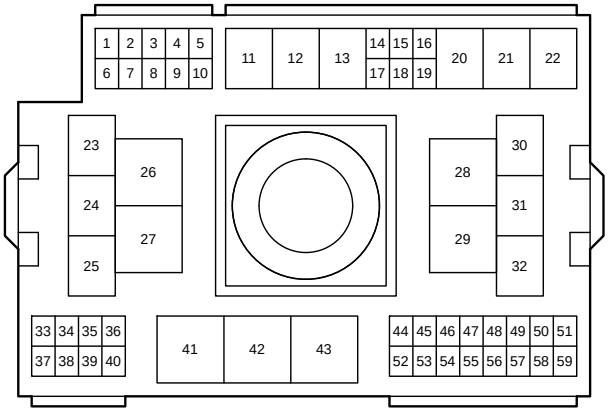

Gray

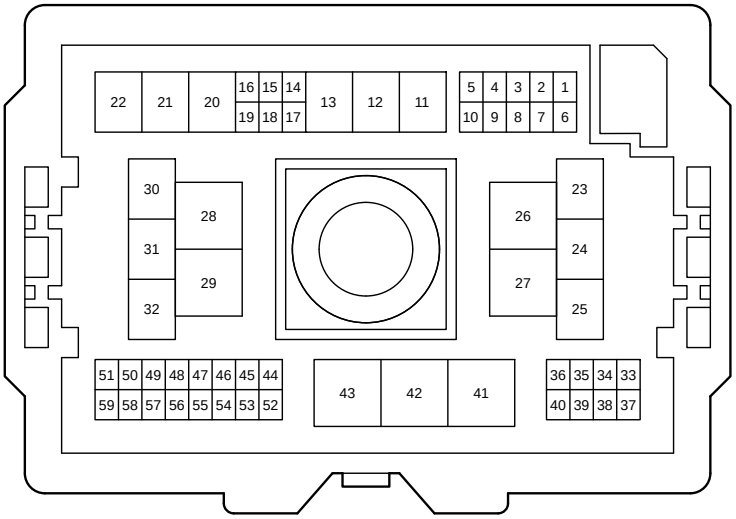

JK1
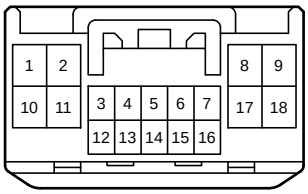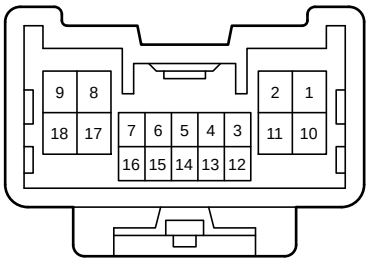
White