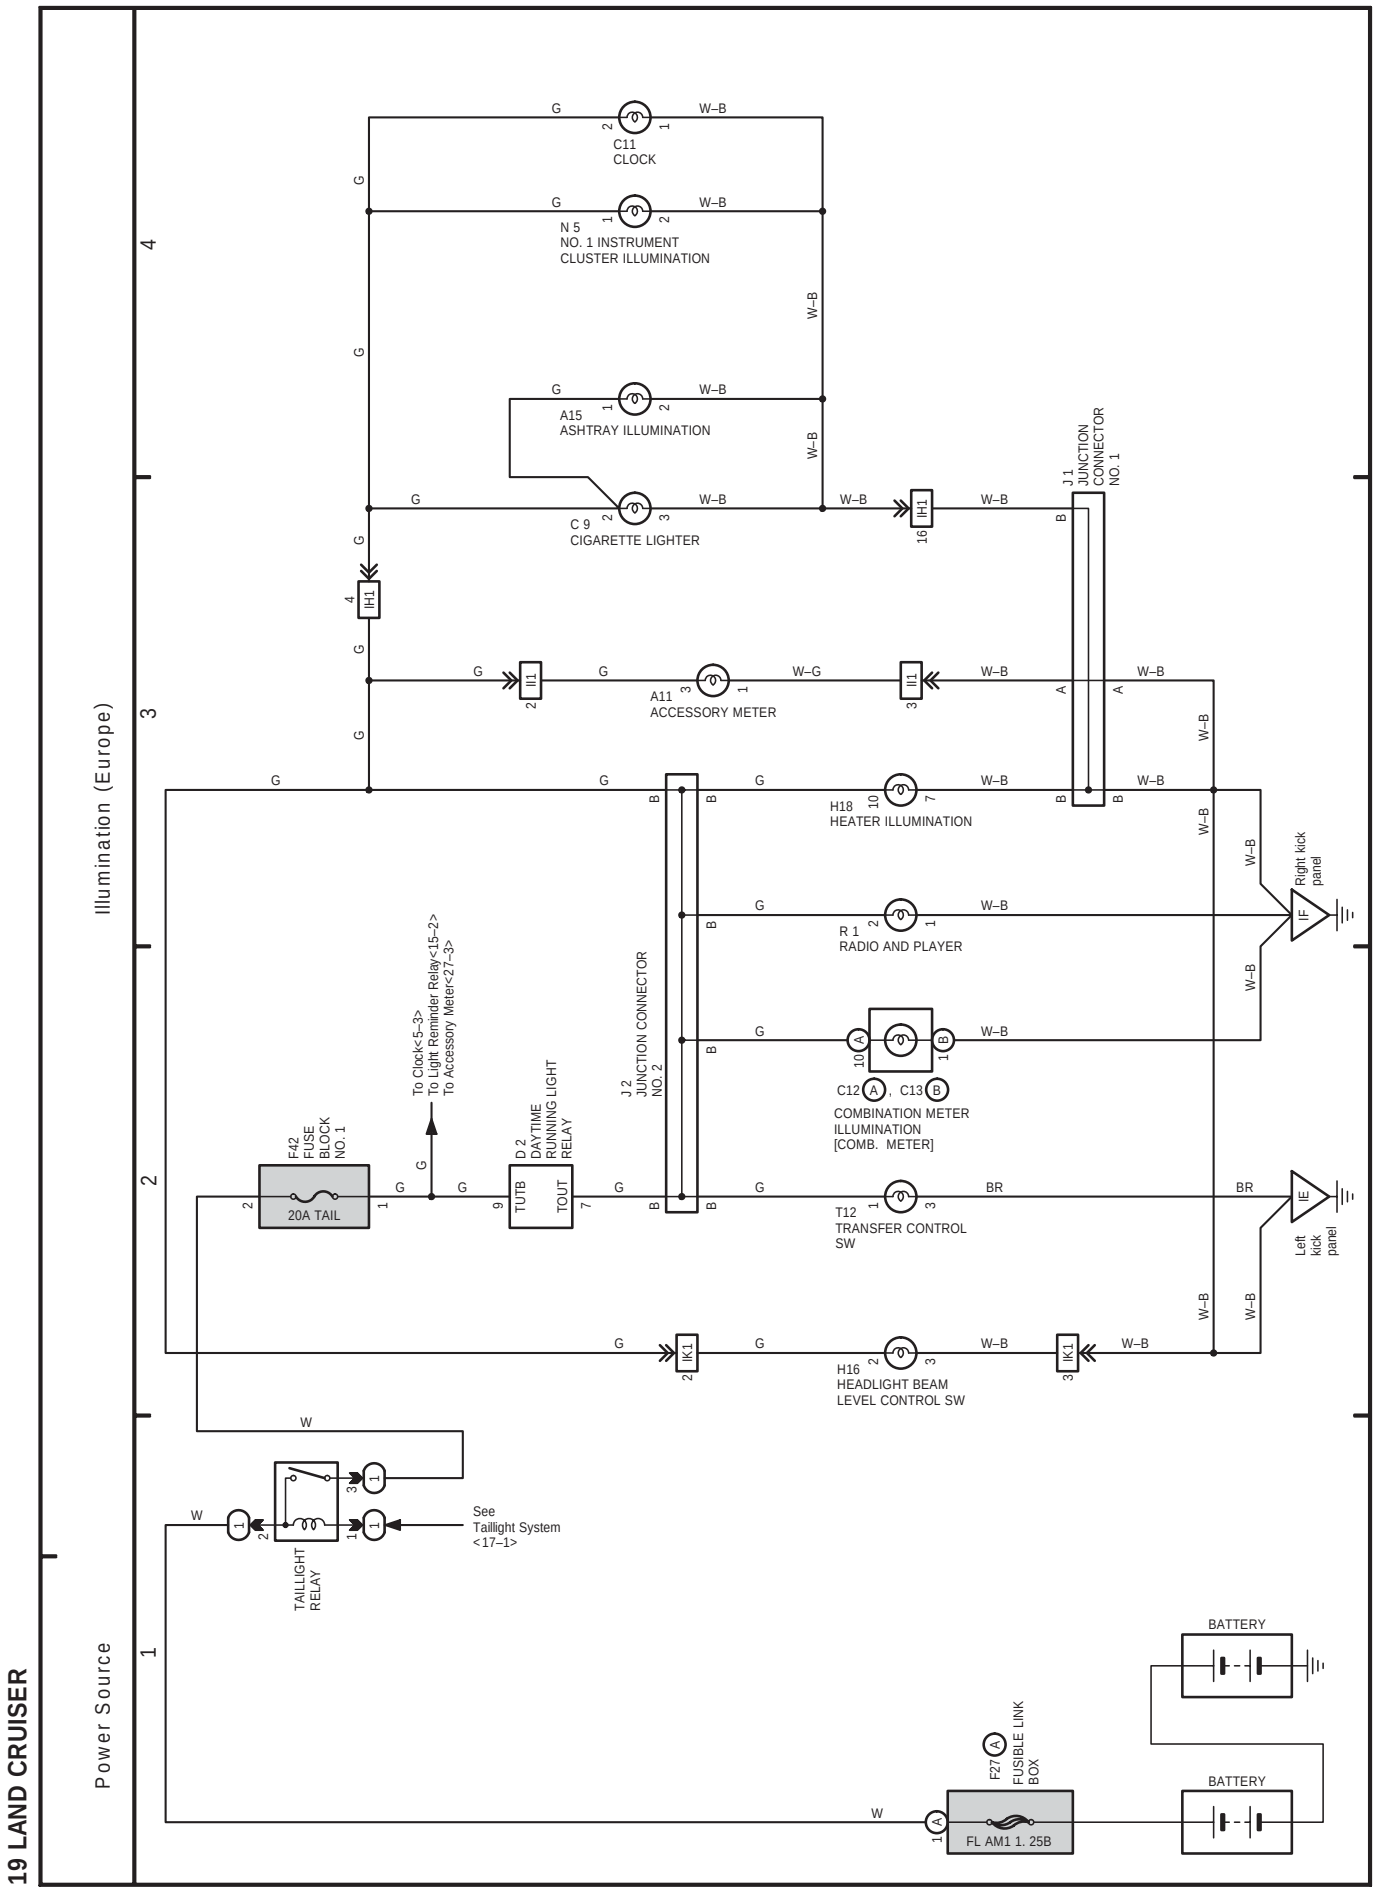
19 LAND CRUISER
Power Source
Illumination (Europe)
C11
CLOCK
N 5
NO. 1 INSTRUMENT
CLUSTER ILLUMINATION
A15
ASHTRAY ILLUMINATION
C 9
CIGARETTE LIGHTER
J 1
JUNCTION
CONNECTOR
NO. 1
A11
ACCESSORY METER
H18
HEATER ILLUMINATION
R 1
RADIO AND PLAYER
Right kick
panel
J 2
JUNCTION CONNECTOR
NO. 2
C12 , C13
COMBINATION METER
ILLUMINATION
[COMB. METER]
F42
FUSE
BLOCK
NO. 1
20A TAIL
To Clock<5–3>
To Light Reminder Relay<15–2>
To Accessory Meter<27–3>
D 2
DAYTIME
RUNNING LIGHT
RELAY
TUTB
TOUT
T12
TRANSFER CONTROL
SW
Left
kick
panel
H16
HEADLIGHT BEAM
LEVEL CONTROL SW
See
Taillight System
<17–1>
TAILLIGHT
RELAY
F27
FUSIBLE LINK
BOX
FL AM1 1. 25B
BATTERY
BATTERY